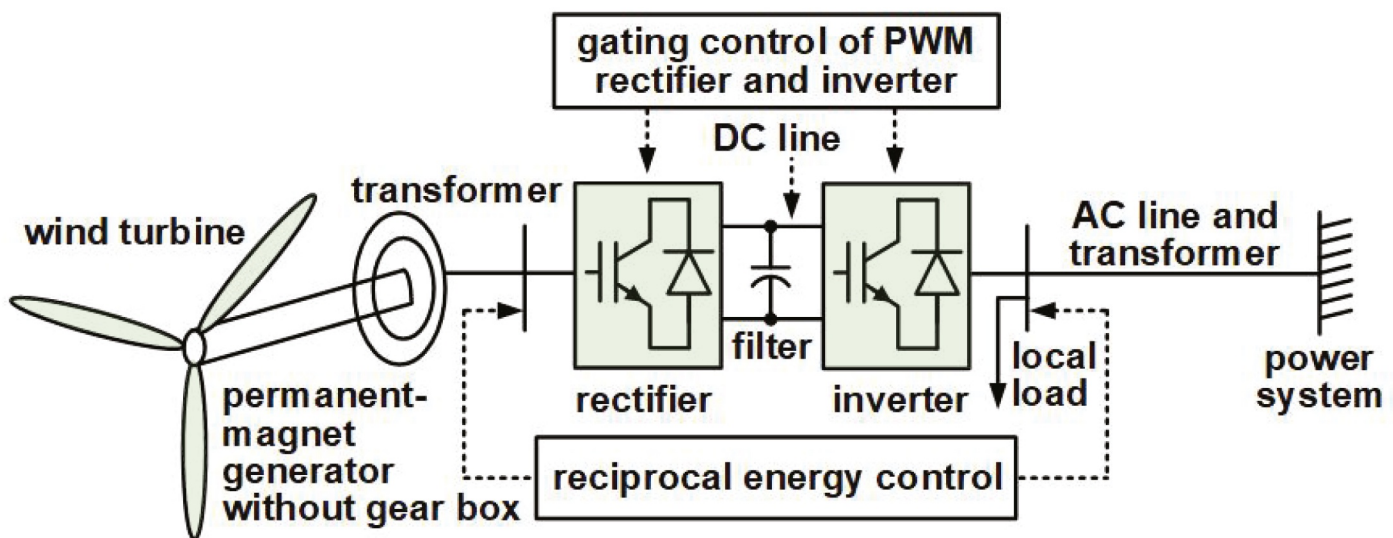


Third Edition

Power Quality in Power Systems, Electrical Machines, and Power-Electronic Drives



Ewald F. Fuchs
Mohammad A. S. Masoum



POWER QUALITY IN POWER SYSTEMS,
ELECTRICAL MACHINES, AND
POWER-ELECTRONIC DRIVES

THIRD EDITION

This page intentionally left blank

POWER QUALITY IN POWER SYSTEMS, ELECTRICAL MACHINES, AND POWER-ELECTRONIC DRIVES

THIRD EDITION

EWALD F. FUCHS

Department of Electrical, Computer, and Energy Engineering, University of Colorado, Boulder, CO, United States

MOHAMMAD A.S. MASOUM

Engineering Department, Utah Valley University (UVU), Orem, UT, United States



ACADEMIC PRESS

An imprint of Elsevier

Academic Press is an imprint of Elsevier

125 London Wall, London EC2Y 5AS, United Kingdom
525 B Street, Suite 1650, San Diego, CA 92101, United States
50 Hampshire Street, 5th Floor, Cambridge, MA 02139, United States
The Boulevard, Langford Lane, Kidlington, Oxford OX5 1GB, United Kingdom

Copyright © 2023 Elsevier Inc. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or any information storage and retrieval system, without permission in writing from the publisher. Details on how to seek permission, further information about the Publisher's permissions policies and our arrangements with organizations such as the Copyright Clearance Center and the Copyright Licensing Agency, can be found at our website: www.elsevier.com/permissions.

This book and the individual contributions contained in it are protected under copyright by the Publisher (other than as may be noted herein).

Notices

Knowledge and best practice in this field are constantly changing. As new research and experience broaden our understanding, changes in research methods, professional practices, or medical treatment may become necessary.

Practitioners and researchers must always rely on their own experience and knowledge in evaluating and using any information, methods, compounds, or experiments described herein. In using such information or methods they should be mindful of their own safety and the safety of others, including parties for whom they have a professional responsibility.

To the fullest extent of the law, neither the Publisher nor the authors, contributors, or editors, assume any liability for any injury and/or damage to persons or property as a matter of products liability, negligence or otherwise, or from any use or operation of any methods, products, instructions, or ideas contained in the material herein.

ISBN 978-0-12-817856-0

For information on all Academic Press publications visit our website
at <https://www.elsevier.com/books-and-journals>

Publisher: Charlotte Cockle
Acquisitions Editor: Graham Nisbet
Editorial Project Manager: Barbara L. Makinster
Production Project Manager: Manju Paramasivam
Cover Designer: Vicky Pearson Esser

Typeset by STRAIVE, India



Contents

Preface ix

Acknowledgments xiii

The climate dilemma xv

Summary overview of chapters xvii

1. Introduction to power quality 1

- 1.1 Definition of power quality 2
- 1.2 Causes of disturbances in power systems 2
- 1.3 Classification of power quality issues 4
- 1.4 Formulations and measures used for power quality 17
- 1.5 Effects of poor power quality on power system devices 52
- 1.6 Standards and guidelines referring to power quality 53
- 1.7 Harmonic modeling philosophies 61
- 1.8 Power quality improvement techniques 63
- 1.9 Summary 83
- 1.10 Problems 84
- References 94
- Additional bibliography 96

2. Harmonic models of transformers 99

- 2.1 Sinusoidal (linear) modeling of transformers 100
- 2.2 Harmonic losses in transformers 101
- 2.3 Derating of single-phase transformers 109
- 2.4 Nonlinear harmonic models of transformers 120
- 2.5 Ferroresonance of power transformers 135
- 2.6 Effects of solar-geomagnetic disturbances on power systems and transformers 152
- 2.7 Grounding 157
- 2.8 Measurement of derating of three-phase transformers 170
- 2.9 Summary 184
- 2.10 Problems 185
- References 193
- Additional Bibliography 196

3. Modeling and analysis of induction machines 197

- 3.1 Complete sinusoidal equivalent circuit of a three-phase induction machine 199
- 3.2 Magnetic fields of three-phase machines for the calculation of inductive machine parameters 206
- 3.3 Steady-state stability of a three-phase induction machine 210
- 3.4 Spatial (space) harmonics of a three-phase induction machine 215
- 3.5 Time harmonics of a three-phase induction machine 218
- 3.6 Fundamental and harmonic torques of an induction machine 221
- 3.7 Measurement results for three- and single-phase induction machines 227
- 3.8 Inter- and subharmonic torques of three-phase induction machines 244
- 3.9 Interaction of space and time harmonics of three-phase induction machines 252
- 3.10 Conclusions concerning induction machine harmonics 255
- 3.11 Voltage-stress winding failures of AC motors fed by variable-frequency, voltage- and current-source PWM inverters 255
- 3.12 Nonlinear harmonic models of three-phase induction machines 279
- 3.13 Static and dynamic rotor eccentricity of three-phase induction machines 282
- 3.14 Operation of three-phase machines within a single-phase power system 283
- 3.15 Classification of three-phase induction machines 283
- 3.16 Summary 285
- 3.17 Problems 285
- References 293
- Additional bibliography 297

4. Modeling and analysis of synchronous machines 299	6.2 Application of capacitors to reactive power compensation 581
4.1 Sinusoidal state-space modeling of a synchronous machine in the time domain 301	6.3 Application of capacitors to harmonic filtering 582
4.2 Steady-state, transient, and subtransient operation 307	6.4 Power quality problems associated with capacitors 585
4.3 Harmonic modeling of a synchronous machine 371	6.5 Frequency and capacitance scanning 605
4.4 Discretization errors of numerical solutions 396	6.6 Harmonic constraints for capacitors 608
4.5 Operating point-dependent reactances under saturated magnetic field conditions 399	6.7 Equivalent circuits of capacitors 613
4.6 Summary 402	6.8 Summary 616
4.7 Problems 403	6.9 Problems 617
References 416	References 622
Additional bibliography 419	
5. Performance of power-electronic drives with respect to speed and torque 421	7. Lifetime reduction of transformers and induction machines 625
5.1 Closed-form and numerical-solution techniques for variable-speed, variable-torque drives, and review of circuit approximations suitable for numerical solutions 421	7.1 Rationale for relying on the worst-case conditions 626
5.2 Three-phase distribution system supplying energy to lithium-ion batteries via rectifiers 427	7.2 Elevated temperature rise due to voltage harmonics 627
5.3 Three-phase permanent-magnet generator supplying energy to lead-acid battery via rectifier 479	7.3 Weighted-harmonic factors 628
5.4 Speed and torque control of drives consisting of three-phase induction machine connected to current-controlled, voltage-source inverter 487	7.4 Exponents of weighted-harmonic factors 641
5.5 Speed and torque control of brushless-DC machine or permanent-magnet machine fed/supplied by inverter for either motor or generator operation 525	7.5 Additional losses or temperature rises versus weighted-harmonic factors 643
5.6 Control of speed and torque for three-phase synchronous motor/machine fed/supplied by either lithium-ion battery or fuel cell via inverter for either motor or generator operation 547	7.6 Arrhenius plots 645
5.7 Performance issues with batteries, fuel cells, and combustion engines 562	7.7 Reaction rate equation 646
5.8 Summary 562	7.8 Decrease of lifetime due to an additional temperature rise 647
References 563	7.9 Reduction of lifetime of components with activation energy $E = 1.1$ eV due to harmonics of the terminal voltage within residential or commercial utility systems 649
6. Interaction of harmonics with capacitors 567	7.10 Possible limits for harmonic voltages 650
6.1 Application of capacitors to power-factor correction 568	7.11 Probabilistic and time-varying nature of harmonics 657
	7.12 The cost of harmonics 657
	7.13 Temperature as a function of time 658
	7.14 Various operating modes of rotating machines 660
	7.15 Summary 691
	7.16 Problems 693
	References 699
	8. Power system modeling under nonsinusoidal operating conditions 703
	8.1 Overview of a modern power system 703
	8.2 Power system matrices 707
	8.3 Fundamental power flow 722
	8.4 Newton-based harmonic power flow 748

- 8.5 Classification of harmonic power flow techniques 782
- 8.6 Summary 794
- 8.7 Problems 794
- References 802

9. Impact of poor power quality on reliability, relaying, and security 805

- 9.1 Reliability indices 805
- 9.2 Degradation of reliability and security due to poor power quality 809
- 9.3 Tools for detecting poor power quality 840
- 9.4 Tools for improving reliability and security 858
- 9.5 Load shedding and load management 873
- 9.6 Energy-storage methods 873
- 9.7 Matching the operation of intermittent renewable power plants with energy storage 874
- 9.8 Summary 875
- 9.9 Problems 876
- References 905
- Additional bibliography 912

10. The roles of filters in power systems and unified power quality conditioners 915

- 10.1 Types of nonlinear loads 916
- 10.2 Classification of filters employed in power systems 918
- 10.3 Passive filters as used in power systems 920
- 10.4 Active filters 942
- 10.5 Hybrid power filters 945
- 10.6 Block diagram of active filters 950
- 10.7 Control of filters 952
- 10.8 Compensation devices at fundamental and harmonic frequencies 972
- 10.9 Unified power quality conditioner (UPQC) 978
- 10.10 The UPQC control system 983
- 10.11 UPQC control using the Park (dqo) transformation 985
- 10.12 UPQC control based on the instantaneous real and imaginary power theory 988
- 10.13 Performance of the UPQC 1001
- 10.14 Summary 1012
- References 1014

11. Optimal placement and sizing of shunt capacitor banks in the presence of harmonics 1017

- 11.1 Reactive power compensation 1018
- 11.2 Common types of distribution shunt capacitor banks 1021
- 11.3 Classification of capacitor allocation techniques for sinusoidal operating conditions 1025
- 11.4 Optimal placement and sizing of shunt capacitor banks in the presence of harmonics 1047
- 11.5 Summary 1083
- References 1083

12. Power quality solutions for renewable energy systems 1087

- 12.1 Energy conservation and efficiency 1087
- 12.2 Photovoltaic and thermal solar (power) systems 1098
- 12.3 Horizontal and vertical-axes wind power (WP) plants 1113
- 12.4 Complementary control of renewable plants with energy storage plants 1145
- 12.5 AC transmission lines vs DC lines 1175
- 12.6 Fast-charging stations for electric cars 1175
- 12.7 Off-shore renewable plants 1175
- 12.8 Metering 1176
- 12.9 Other renewable energy plants 1176
- 12.10 Production of automotive fuel from wind, water, and CO₂ 1177
- 12.11 Water efficiency 1177
- 12.12 Village with 2600 inhabitants achieves energy independence 1178
- 12.13 Reduction of lifetime as a function of temperature 1178
- 12.14 Paralleling of two power systems 1181
- 12.15 The TEXAS synchrophasor network 1182
- 12.16 Summary 1182
- 12.17 Problems 1183
- References 1202

Glossary of symbols, abbreviations, and acronyms 1209

Appendices 1225

Index 1245

This page intentionally left blank

Preface

This book is intended for graduate students and professionals working in the fields of power systems, renewable energy, such as wind and photovoltaics, and storage devices, such as batteries and fuel cells, including the design of electric power-electronic drives. The main objective of this book is to design components that meet acceptable power quality standards.

1. Past and future electric energy systems

Edison's Pearl Street direct-current (DC) power station in Manhattan, NYC, opened in 1882 [1], was the first central power plant in the United States, providing electric power only to clients in the immediate vicinity, due to its low voltage and very high current, which had to be transmitted in buried DC very-large-cross-section cables to limit ohmic losses. The voltage was controlled within the fenced-in power station. This power station was able to function due to the invention of the mechanical commutator, on which DC machines are based, converting the AC current/voltage of the rotor to direct current/voltage at the terminals of the DC generator employing carbon brushes.

On the other hand, Tesla favored—with his invention of the two-phase rotating field [2]—an alternating current (AC) central fenced-in power station with voltage and frequency control. Electricity conduction is based on endowed electrons capable of useful work, as explained by Franck [3] in his

Nobel Prize acceptance speech. Power generation at this time was mainly based on coal-fired and hydropower plants. Power quality played a subordinate role because only a few mercury rectifiers and inverters were employed within the central and distribution power system environment.

The invention of the semiconductor p-n junction [4], along with the development of rectifiers [5] and inverters [6], led Hingorani [7] to believe that all endowed electrons pass at least once through power-electronic components within the power system. The development of light-emitting-diode (LED) lights [8] and variable-speed drives, such as brushless DC machines (inverter-fed AC machines) [9], confirm Hingorani's prediction. Thus, modern power systems with a high penetration of power-electronic components came about, relying mostly on wind, photovoltaic, solar thermal, and nuclear power plants, as discussed in the next section. This, in turn, created an increased need to investigate power quality due to source- and load-generated harmonics and transients—while on the other hand, an efficiency increase is achieved.

2. Renewable hybrid energy system developments

Fig. 1 shows a future smart interconnected power and load system where control and dispatch centers combine the advantages of DC transmission [1]—no stability problems—with those of AC transmission [2],

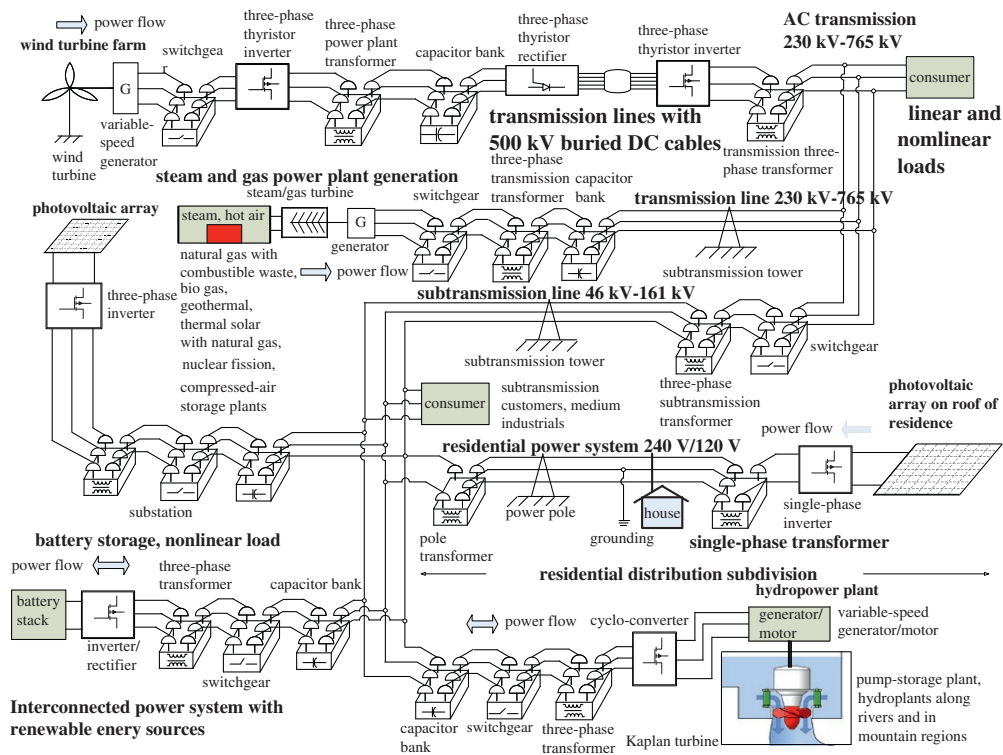


FIG. 1 Basic elements of a future, smart, renewable hybrid electric power system.

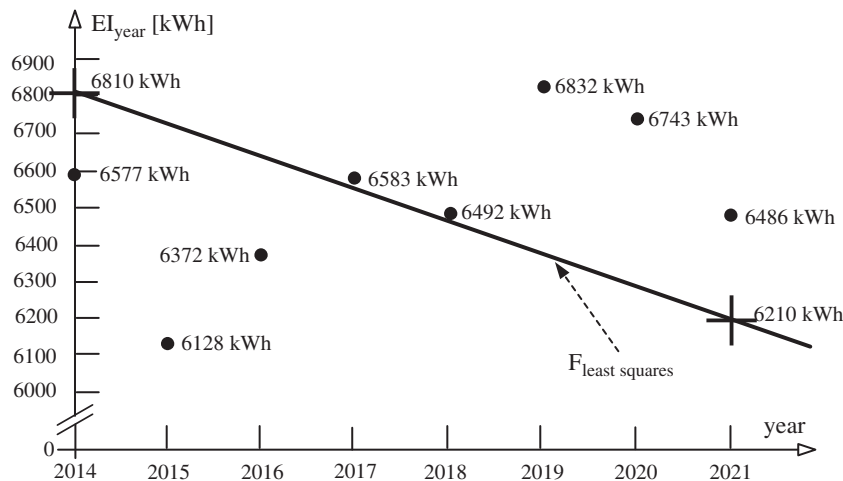


FIG. 2 Measured decrease of the PV module output power generation EI_{year} [kWh] for 8 years from 2014 to 2021.

where high voltages with low currents permit very efficient energy transmission. The combination of DC and AC components leads to a renewable electric hybrid power and distribution system.

While in a central power station—either DC or AC—the manufacturing of electric power [9] occurs within a fenced-in area, in future or smart and hybrid power systems the manufacturing occurs within the entire system due to photovoltaic DC generation on individual houses, wind AC generation on farmlands or oceans, and temporary DC energy storage in batteries, such as automobile batteries or within family houses, etc. The development of the Texas Synchrophasor Network [10] permits control of distant renewable energy power plants if “Dunkelflaute” [11] occurs locally. Aging properties during the lifetime of any device [12] lead to decreased generation of electric equipment; see Fig. 2 for the photovoltaic DC system resulting in $\approx 1\%$ energy output decrease per year. The disadvantage of rectifiers and inverters leads—without filtering—to the generation of integer and noninteger voltage and current harmonics, resulting in power quality problems: premature aging, mechanical and electric maloperations, and impact on under- and over-frequency operation [13].

The strategy of combining locally operated smart power systems [14] with large-scale hybrid power systems, as shown in Fig. 1, may lead to further development of future power systems. The development of many small-scale renewable power sources requires increased water consumption [15,16] within manufacturing facilities for cooling and production of power plants, e.g., biogas and nuclear, semiconductors, batteries, and other small-scale power equipment. Per capita water consumption in Germany is 120L per day, and virtual water consumption also occurs: as examples, one

cup of coffee requires $\approx 130\text{L}$ for growing coffee trees and the harvesting of coffee beans in countries with warm climates; and the production of 1kg of beef requires $\approx 15,400\text{L}$ for the growing of cattle feed, cleaning stables, and operating slaughtering houses. This is to say that in addition to providing sufficient renewable electric power, the provision of clean water will pose a tremendous challenge for mankind.

Key features

- Provides theoretical and practical insight into power quality problems related to power systems, electric machines, and power-electronic drives.
- Contains 148 practical application (example) problems with solutions.
- Includes 140 practical application problems posed at the end of chapters whose solutions are presented in the Instructor Manual, which is available from the publisher upon request.
- Comprises 1024 references—mostly journal and conference papers as well as national and international standards and guidelines.

References

- [1] R.V. Jenkins, K.A. Nier, A record for invention: Thomas Edison and his papers, *IEEE Trans. Educ.* 27 (4) (1984).
- [2] Nikola Tesla 1857–1943, *Proc. IRE* 31 (5) (1943) 194, <https://doi.org/10.1109/JRPROC.1943.230030>.
- [3] J. Franck, Transformation of Kinetic Energy of Free Electrons Into Excitation Energy of Atoms by Impacts, Nobel Price Lecture, 1925, pp. 79–108. <https://www.nobelprize.org/prizes/physics/1925/franck/biographical>. (Accessed 11 May 2020).
- [4] The Editors of Encyclopedia Britannica. Conductors, Insulators, and Semiconductors, <https://www.britannica.com/technology/semiconductor-diode>.
- [5] Edison Tech Center. Mercury Arc Rectifiers, <https://edisontechcenter.org/MercArcRectifiers.html>.

- [6] H. Rissik, Mercury-Arc Current Converters, 1941. Pitman.
- [7] N.G. Hingorani, Future role of power electronics in power systems, in: Proceedings of International Symposium on Power Semiconductor Devices and IC's: ISPSD '95, Yokohama, Japan, 1995, pp. 13–15, <https://doi.org/10.1109/ISPSD.1995.515001>.
- [8] <https://www.energy.gov/energysaver/save-electricity-and-fuel/lighting-choices-save-you-money/how-energy-efficient-light>.
- [9] E.F. Fuchs, H.A. Fuchs, Introduction to Energy, Renewable Energy and Electrical Engineering: Essentials for Engineering Science (STEM) Professionals and Students, Hardcover, John Wiley & Sons, New York, NY, 2021.
- [10] https://web.ecs.baylor.edu/faculty/grady/_2017_Texas_Synchrophasor_Network_Reports_for_2017_Updated_171027.pdf.
- [11] <https://www.welt.de/wirtschaft/article191195983/Energiewende-Das-droht-uns-in-der-kalten-Dunkelflaute.html>.
- [12] R.R. Dixon, Thermal aging predictions from an Arrhenius plot with only one data point, IEEE Trans. Electr. Insul. E1-15 (4) (1980) 331.
- [13] J.F. Fuller, E.F. Fuchs, D.J. Roesler, Influence of harmonics on power system distribution protection, IEEE Trans. Power Deliv. TPWRD-3 (2) (1988) 546–554 (PES/IEEE Prize Paper Award 1989).
- [14] <https://www.springer.com/de/book/9783319304250>.
- [15] *water footprint*, [org/Vereinigung Deutscher Gewaesserschutz e.v. und kfW](http://www.org/Vereinigung_Deutscher_Gewaesserschutz_e.v._und_kfW).
- [16] menschen im blickpunkt, Das Magazin des Muenchener Roten Kreuzes, Maerz, 2022, <https://www.brk-muenchen.de/aktuell/menschen-im-blickpunkt/>.

Acknowledgments

The authors wish to express their appreciation to their wives Wendy and Roshanak for their help in shaping and proofreading the manuscript. In particular, the encouragement and support of Dipl.-Ing. Dietrich J. Roesler, formerly with the US Department of Energy, Washington, DC, who was one of the first professionals to initiate the research on photovoltaic power plants [1] as part of the DOE mission, is greatly appreciated. Lastly, the work on numerical field calculation [2] initiated by the late Professor Edward A. Erdelyi is reflected in a part of this book.

Ewald F. Fuchs

Department of Electrical, Computer, and Energy Engineering,
University of Colorado, Boulder, CO, United States

Mohammad A.S. Masoum

Department of Engineering, Utah Valley University, Orem, UT,
United States

References

- [1] R.C. Dugan, W.T. Jewell, D.J. Roesler, Harmonics and reactive power from line-commutated inverters in proposed photovoltaic subdivision, ID: 6637722; DOE Report Contract Number W-7405-ENG-2, 1983.
- [2] F.C. Trutt, E.A. Erdelyi, R.F. Jackson, The non-linear potential equation and its numerical solution for highly saturated electrical machines, IEEE Trans. Aerospace 1 (2) (1963) 430–440.

This page intentionally left blank

The climate dilemma

This book explains and discusses suitable components for limiting global temperature increase to 1.5°C by 2050 on a worldwide basis, although some countries (e.g., in Europe) have the ambition to reach this goal by 2035. The tools instrumental for reaching this temperature limit are renewable energy generated by wind-power and photovoltaic plants, as well as hydro and geothermal power, and energy-storage devices such as fuel cells, batteries, and stored hydrogen, which can be changed through methanation [1], for example, to fuel airplanes. The methanation reactions of CO_x were first discovered by Sabatier and Senderens in 1902. The colorless, pungent gas ammonia composed of nitrogen and hydrogen (NH_3) was first prepared by English physical scientist Joseph Priestley in 1774, and its exact composition was determined by French chemist Claude-Louis Berthollet in 1785. Ammonia [2] is a flexible fuel for ships, has an energy density by volume almost 30% higher than that of liquid hydrogen, and is easier to distribute and store.

Nuclear power plants will contribute substantially to the goal of limiting climate change, although the storage of spent nuclear waste is contentious and problematic. It is interesting to note that nuclear fuel is manufactured through enrichment process, and it does not occur in nature except in the form of uranium, which cannot be used in nuclear plants. The use of oil, natural gas, and coal must be minimized by relying on heat pumps for heating and cooling. Both CO_2 generation

and—even worse—methane, escaping permafrost due to global warming as well as drilling/fracking process and use [3], speed up climate change. Exacerbating climate change is the maldistribution of water and temperatures experienced on a worldwide basis [4].

In short, the technological tools are available to limit climate change and adapt to its consequences; however, technology cannot prevent climate change if humankind does not change its habits and **psychological** attitudes. Unfortunately, climate change is related to social dilemmas in which people must choose between their short-term own self-interest and the longer-term interest of the entire population [5]. To mitigate climate change, one can point to two important psychological changes required:

- (1) People need to recognize their individual impact on the climate.
- (2) There is conflict between self-interest and collective human interests, which creates the dilemma between short-term and longer-term human interest.

How should people change their lifestyles? One important health aspect is self-propulsion (e.g., walking, bicycling). Change purchasing habits by relying mostly on locally grown food and manufactured goods. Avoid pollution of land and oceans by not using plastic containers and packaging. Reduce use of chemicals during daily life, which will improve ground- and wastewater quality. Prevent the destruction of natural habitats (e.g., rain forest) and enhance

survival of wildlife (e.g., bees, insects) by providing sufficient food supplies, enabling them to pollinate crops for human and animal consumption.

A recent book [6] details the consequences (e.g., increased temperature, floods, extreme dryness, lack of rain, tornadoes, high winds), best emission scenarios for CO₂, the present state of conventional and renewable energy sources, and excessive electricity consumption which can neither be supplied by electric power plants, renewable plants or electric energy storage plants in any form as those fed by biogas or hydrogen. Although great progress has been made with the invention of the pn junction [7] as used in computers and LED lighting, it must be pointed out that a single cell phone requiring transmission towers consumes as much power as one standard-sized refrigerator. This is to say, technology cannot solve the climate change dilemma if the psychological attitude of the human race does not change accordingly.

References

- [1] S. Rönsch, J. Schneider, S. Matthischke, M. Schlüter, M. Götz, J. Lefebvre, P. Prabhakaran, S. Bajohr, Review on methanation – from fundamentals to current projects, *Fuel* 166 (2016) 276–296, <https://doi.org/10.1016/j.fuel.2015.10.111>.
- [2] J. Priestley, *Experiments and Observations on Different Kinds of Air*, vol. 1, second ed., 1775, pp. 163–177. Part 2, § 1: Observations on Alkaline Air. London, England.
- [3] Methane Releases From Arctic Shelf May Be Much Larger and Faster Than Anticipated (Press release). National Science Foundation (NSF). March 10, 2010. Archived from the original on August 1, 2018. Retrieved 6 April 2018.
- [4] <https://www.nature.com/articles/s41893-021-00846-9..>
- [5] J. Arnold, et al., *Work Psychology: Understanding Human Behaviour in the Workplace*, Pearson Education, 2005.
- [6] E.F. Fuchs, H.A. Fuchs, *Introduction to Energy, Renewable Energy and Electrical Engineering, Essentials for Engineering Science (STEM) Professionals and Students*, Wiley, 2021.
- [7] A.S. Sedra, K.C. Smith, *Microelectronic Circuits*, fourth ed., Oxford University Press, New York/Oxford, 1998.

Summary overview of chapters

This textbook leads the way for power and energy development by introducing students and professionals to the design of renewable, reliable, and efficient components and their operation within modern interconnected power and distribution systems. It accommodates the paralleling/synchronization of smart AC and DC local distribution systems resulting in a hybrid system: Such an approach increases the power quality, reliability, and efficacy and efficiency of the electric energy system. Extensive deployment of power-electronic components such as rectifiers and inverters within the power and distribution system increases efficiency of generation, transmission, and use—although with increase in harmonics power quality may decrease if power-electronic devices and filters are not judiciously applied. The combination of AC and DC systems including DC transmission lines leads to a smart and hybrid power supply system.

[Chapter 1](#) defines power quality and reviews causes of disturbances within a hybrid power system. It addresses steady-state and transient power quality phenomena and measures for power quality formulation. It discusses IEEE and international IEC standards and guidelines referring to power quality and its improvement techniques and tools such as specialty transformers, harmonic filters, surge suppressors, APLCS, and UPQCs. [Chapters 2–4](#) introduce fundamental and harmonic models of transformers, induction machines, and

synchronous machines, respectively. [Chapter 5](#) presents power-electronic circuits such as rectifiers and inverters that are extensively applied to electric drives including nonideal lithium-ion battery and polymer electrolyte membrane (PEM) fuel cell: Electric automobiles can be used as storage for electric energy and can assist in voltage control within distribution systems by providing or consuming active and reactive powers. The charging of electric lithium-ion batteries is best if three-phase systems are available. Single-phase systems at low 120/240 V require a 100 kWh battery long charging time. [Chapter 6](#) details the behavior of capacitors under the influence of harmonics and defines their harmonic constraints. In [Chapter 7](#), Arrhenius plots are the basis for determining the lifetime of transformers and induction machines exposed to harmonics. In [Chapter 8](#), the Newton-Raphson technique is used for the modeling and analysis of fundamental and harmonic operations of interconnected power systems. In [Chapter 9](#), the impact of poor power quality on reliability, relaying, and security presents an important challenge to the operation of power and distribution systems: Passive and active filters can improve poor power quality phenomena as addressed in [Chapter 10](#). In [Chapter 11](#), the optimal energy-efficient, secure power systems operation can be achieved by proper sizing of capacitor allocation to permit sinusoidal operation. The use of unified power quality conditioner (UPQC) can assist in this

effort. Analytical methods, numerical programming, heuristic and artificial intelligence (AI) such as genetic algorithms, simulated annealing, artificial neural networks, fuzzy set theory, graph search algorithm, particle swarm algorithm, and tabu search are powerful approaches for the optimal energy-efficient operation of smart power and distribution systems. [Chapter 12](#) reviews and applies energy conservation and efficiency based on ground-water heat pumps, photovoltaic and thermal solar plants, fuel cells as well as wind power (WP) plants including storage plants based on hydro, batteries, fuel cells, and compressed air. Assisting in this

effort are pulse-width-modulated (PWM) rectifiers and current-controlled, voltage-source inverters. This chapter concludes with recommendations for hydrogen generation through electrolysis and methanation of hydrogen for airplanes, buses, trains, ships, and automobiles.

Appendices 1, 2, 3, and 4 provide sampling techniques, Fourier analysis program, transformer banks including rectifier and inverter data used for experiments within the book, powers including nameplate data of single- and three-phase transformers as used in obtaining measurements, and measurement error formulas, respectively.

Introduction to power quality

The subject of power quality is very broad by nature. It covers all aspects of power system engineering, from transmission and distribution level analyses to end-user problems. Therefore, electric power quality has become the concern of utilities, end users, architects, and civil engineers as well as manufacturers. These professionals must work together in developing solutions to power quality problems:

- Electric utility managers and designers must build and operate systems that take into account the interaction between customer facilities and power system. Electric utilities must understand the sensitivity of the end-use equipment to the quality of voltage.
- Customers must learn to respect the rights of their neighbors and control the quality of their nonlinear loads. Studies show that the best and the most efficient solution to power quality problems is to control them at their source. Customers can perform this by careful selection and control of their nonlinear loads and by taking appropriate actions to control and mitigate single-time disturbances and harmonics before connecting their loads to the power system.
- Architects and civil engineers must design buildings to minimize the susceptibility and vulnerability of electrical components to power quality problems.
- Manufacturers and equipment engineers must design devices that are compatible with the power system. This might mean a lower level of harmonic generation or less sensitivity to voltage distortions.
- Engineers must be able to devise ride-through capabilities of distributed generators (e.g., wind and solar generating plants).

This chapter introduces the subject of electric power quality. After a brief definition of power quality and its causes, detailed classification of the subject is presented. The formulations and measures used for power quality are explained, and the impacts of poor power quality on power system and end-use devices such as appliances are mentioned. A section is presented addressing the most important IEEE [1] and IEC [2] standards referring to power quality. The remainder of this chapter introduces issues that will be covered in the following chapters, including modeling and mitigation techniques for power quality phenomena in electric machines and power systems. This chapter contains nine application examples and ends with a summary.

1.1 Definition of power quality

Electric power quality has become an important part of power systems and electric machines. The subject has attracted the attention of many universities and industries, and a number of books have been published in this exciting and relatively new field [3–12].

Despite important papers, articles, and books published in the area of electric power quality, its definition has not been universally agreed upon. However, nearly everybody accepts that it is a very important aspect of power systems and electric machinery with direct impacts on efficiency, security, and reliability. Various sources use the term “power quality” with different meaning. It is used synonymously with “supply reliability,” “service quality,” “voltage quality,” “current quality,” “quality of supply,” and “quality of consumption.”

Judging by the different definitions, power quality is generally meant to express the quality of voltage and/or the quality of current and can be defined as: the measure, analysis, and improvement of the bus voltage to maintain a sinusoidal waveform at rated voltage and frequency. This definition includes all momentary and steady-state phenomena.

1.2 Causes of disturbances in power systems

Although a significant literature on power quality is now available, most engineers, facility managers, and consumers remain unclear as to what constitutes a power quality problem. Furthermore, due to the power system impedance, any current (or voltage) harmonic will result in the generation and propagation of voltage (or current) harmonics and affects the entire power system. Fig. 1.1 illustrates the impact of current harmonics generated by a nonlinear load on a typical power system with linear loads.

What are the origins of the power quality problem? Some references [9] divide the distortion sources into three categories: small and predictable (e.g., residential consumers generating harmonics), large and random (e.g., arc furnaces producing voltage fluctuations and flicker), and large and predictable (e.g., static converters of smelters and high-voltage DC transmission causing characteristic and uncharacteristic harmonics as well as harmonic instability). However, the likely answers to the question are these: unpredictable events, the electric utility, the customer, and the manufacturer.

1.2.1 Unpredictable events

Both electric utilities and end users agree that more than 60% of power quality problems are generated by natural and unpredictable events [6]. Some of these include faults, lightning surge propagation, resonance, ferroresonance, and geomagnetically induced currents (GICs) due to solar flares [13]. These events are considered to be utility-related problems.

1.2.2 The electric utility

There are three main sources of poor power quality related to utilities:

- *The point of supply generation.* Although synchronous machines generate nearly perfect sinusoidal voltages (harmonic content less than 3%), there are power quality problems

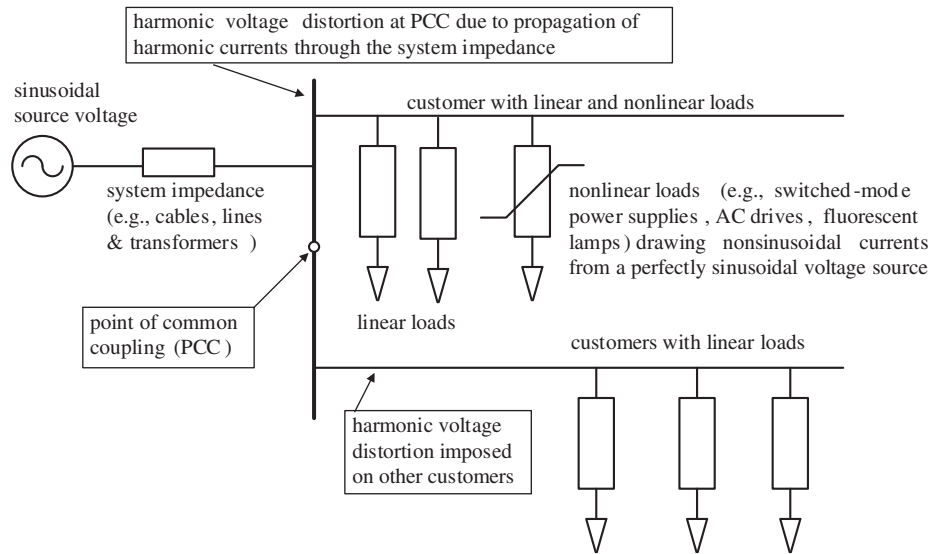


FIG. 1.1 Propagation of harmonics (generated by a nonlinear load) in power systems.

originating at generating plants which are mainly due to maintenance activity, planning, capacity and expansion constraints, scheduling, events leading to forced outages, and load transferring from one substation to another.

- *The transmission system.* Relatively few power quality problems originate in the transmission system. Typical power quality problems originating in the transmission system are galloping (under high-wind conditions resulting in supply interruptions and/or random voltage variations), lightning (resulting in a spike or transient overvoltage), insulator flashover, voltage dips (due to faults), interruptions (due to planned outages by utility), transient overvoltages (generated by capacitor and/or inductor switching, and lightning), transformer energizing (resulting in inrush currents that are rich in harmonic components), improper operation of voltage regulation devices (which can lead to long-duration voltage variations), slow voltage variations (due to a long-term variation of the load caused by the continuous switching of devices and load), flexible AC transmission system (FACTS) devices [14] and high-voltage DC (HVDC) systems [15], corona [16], power line carrier signals [17], broadband power line (BPL) communications [18], and electromagnetic fields (EMFs) [19].
- *The distribution system.* Typical power quality problems originating in the distribution system are voltage dips, spikes, and interruptions, transient overvoltages, transformer energizing, improper operation of voltage regulation devices, slow voltage variations, power line carrier signals, BPL, and EMFs.

1.2.3 The customer

Customer loads generate a considerable portion of power quality problems in today's power systems. Some end-user-related problems are harmonics (generated by nonlinear

loads such as power electronic devices and equipment, renewable energy sources, FACTS devices, adjustable-speed drives, uninterruptible power supplies (UPS), fax machines, laser printers, computers, fluorescent lights, and light-emitting diode (LED) lights), poor power factor (due to highly inductive loads such as induction motors and air-conditioning units), flicker (generated by arc furnaces [20]), transients (mostly generated inside a facility due to device switching, electrostatic discharge, and arcing), improper grounding (causing most reported customer problems), frequency variations (when secondary and backup power sources, such as diesel engine and turbine generators, are used), misapplication of technology, wiring regulations, and other relevant standards.

1.2.4 Manufacturing regulations

There are two main sources of poor power quality related to manufacturing regulations:

- *Standards.* The lack of standards for testing, certification, sale, purchase, installation, and use of electronic equipment and appliances is a major cause of power quality problems.
- *Equipment sensitivity.* The proliferation of “sensitive” electronic equipment and appliances is one of the main reasons for the increase of power quality problems. The design characteristics of these devices, including computer-based equipment, have increased the incompatibility of a wide variety of these devices with the electrical environment [21].

Power quality therefore must necessarily be tackled from three fronts, namely:

- The utility must design, maintain, and operate the power system while minimizing power quality problems.
- The end user must employ proper wiring, system grounding practices, and state-of-the-art electronic devices.
- The manufacturer must design electronic devices that keep electrical environmental disturbances to a minimum and that are immune to anomalies of the power supply line.

1.3 Classification of power quality issues

To solve power quality problems it is necessary to understand and classify this relatively complicated subject. This section is based on the power quality classification and information from Refs. [6, 9].

There are different classifications for power quality issues, each using a specific property to categorize the problem. Some of them classify the events as “steady-state” and “non-steady-state” phenomena. In some regulations (e.g., ANSI C84.1 [22]), the most important factor is the duration of the event. Other guidelines (e.g., IEEE-519) use the wave shape (duration and magnitude) of each event to classify power quality problems. Other standards (e.g., IEC) use the frequency range of the event for the classification.

For example, IEC 61000-2-5 uses the frequency range and divides the problems into three main categories: low frequency (<9 kHz), high frequency (>9 kHz), and electrostatic

TABLE 1.1 Main phenomena causing electromagnetic and power quality disturbances [6,9].

<i>Conducted low-frequency phenomena</i>
Harmonics, interharmonics
Signaling voltage
Voltage fluctuations
Voltage dips
Voltage imbalance
Power frequency variations
Induced low-frequency voltages
DC components in AC networks
<i>Radiated low-frequency phenomena</i>
Magnetic fields
Electric fields
<i>Conducted high-frequency phenomena</i>
Induced continuous wave (CW) voltages or currents
Unidirectional transients
Oscillatory transients
<i>Radiated high-frequency phenomena</i>
Magnetic fields
Electric fields
Electromagnetic field
Steady-state waves
Transients
<i>Electrostatic discharge phenomena (ESD)</i>
Nuclear electromagnetic pulse (NEMP)

discharge phenomena. In addition, each frequency range is divided into “radiated” and “conducted” disturbances. Table 1.1 shows the principal phenomena causing electromagnetic disturbances according to IEC classifications [9]. All these phenomena are considered to be power quality issues; however, the two conducted categories are more frequently addressed by the industry.

The magnitude and duration of events can be used to classify power quality events, as shown in Fig. 1.2. In the magnitude–duration plot, there are nine different parts [11]. Various

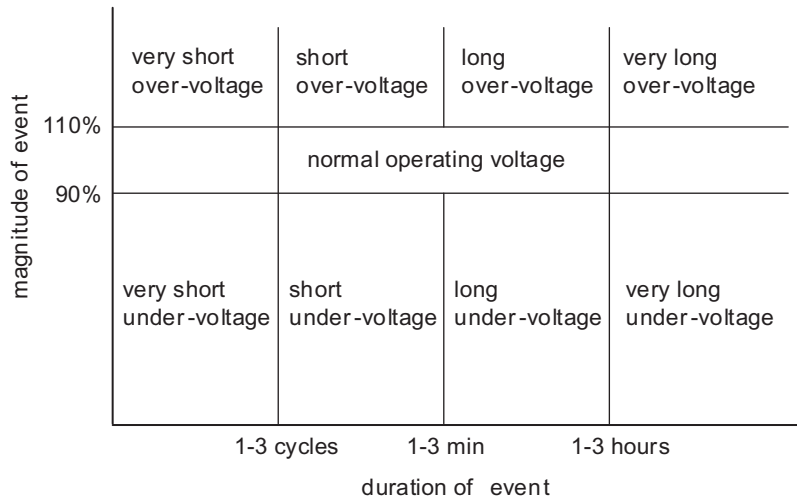


FIG. 1.2 Magnitude-duration plot for classification of power quality events [11].

standards give different names to events in these parts. The voltage magnitude is split into three regions:

- interruption: voltage magnitude is zero,
- undervoltage: voltage magnitude is below its nominal value, and
- overvoltage: voltage magnitude is above its nominal value.

The duration of these events is split into four regions: very short, short, long, and very long. The borders in this plot are somewhat arbitrary and the user can set them according to the standard that is used.

IEEE standards use several additional terms (as compared with IEC terminology) to classify power quality events. Table 1.2 provides information about categories and characteristics of electromagnetic phenomena defined by IEEE-1159 [23]. These categories are briefly introduced in the remaining parts of this section.

1.3.1 Transients

Power system transients are undesirable, fast- and short-duration events that produce distortions. Their characteristics and waveforms depend on the mechanism of generation and the network parameters (e.g., resistance, inductance, and capacitance) at the point of interest. “Surge” is often considered synonymous with transient.

Transients can be classified with their many characteristic components such as amplitude, duration, rise time, frequency of ringing polarity, energy delivery capability, amplitude spectral density, and frequency of occurrence. Transients are usually classified into two categories: impulsive and oscillatory (Table 1.2).

An impulsive transient is a sudden frequency change in the steady-state condition of voltage, current, or both that is unidirectional in polarity (Fig. 1.3). The most common cause of

TABLE 1.2 Categories and characteristics of electromagnetic phenomena in power systems as defined by IEEE-1159 [6,9].

Categories		Typical spectral content	Typical duration	Typical voltage magnitude
1. Transient	1.1. Impulsive	5 ns rise	<50 ns	
	• nanosecond	1 μ s rise	50 ns–1 ms	
	• microsecond	0.1 ms rise	>1 ms	
	• millisecond			
	1.2. Oscillatory			
	• low frequency	<5 kHz	0.3–50 ms	0–4 pu
	• medium frequency	5–500 kHz	20 μ s	0–8 pu
	• high frequency	0.5–5 MHz	5 μ s	0–4 pu
2. Short-duration variation	2.1. Instantaneous		0.5–30 cycles	<0.1 pu
	• interruption		0.5–30 cycles	0.1–0.9 pu
	• sag		0.5–30 cycles	1.1–1.8 pu
	• swell			
	2.2. Momentary		30 cycles–2 s	<0.1 pu
	• interruption		30 cycles–3 s	0.1–0.9 pu
	• sag		30 cycles–3 s	1.1–1.4 pu
	• swell			
	2.3. Temporary			
	• interruption		2 s–2 min	<0.1 pu
3. Long-duration variation	3.1. Sustained interruption		>1 min	0.0 pu
	3.2. Undervoltage		>1 min	0.8–0.9 pu
	3.3. Overvoltage		>1 min	1.1–1.2 pu
4. Voltage imbalance			steady state	0.5%–2%
5. Waveform distortion	5.1. DC offset		steady state	0%–0.1%
	5.2. Harmonics	0–100th	steady state	0%–20%
	5.3. Interharmonics	0–6 kHz	steady state	0%–2%
	5.4. Notching		steady state	
	5.5. Noise	Broadband	steady state	0%–1%
6. Voltage fluctuation		<25 Hz	intermittent	0.1%–7%
7. Power frequency variations			<10 s	

impulsive transients is a lightning current surge. Impulsive transients can excite the natural frequency of the system.

An oscillatory transient is a sudden frequency change in the steady-state condition of voltage, current, or both that includes both positive and negative polarity values. Oscillatory transients occur for different reasons in power systems such as appliance switching, capacitor bank switching (Fig. 1.4), fast-acting overcurrent protective devices, and ferroresonance (Fig. 1.5).

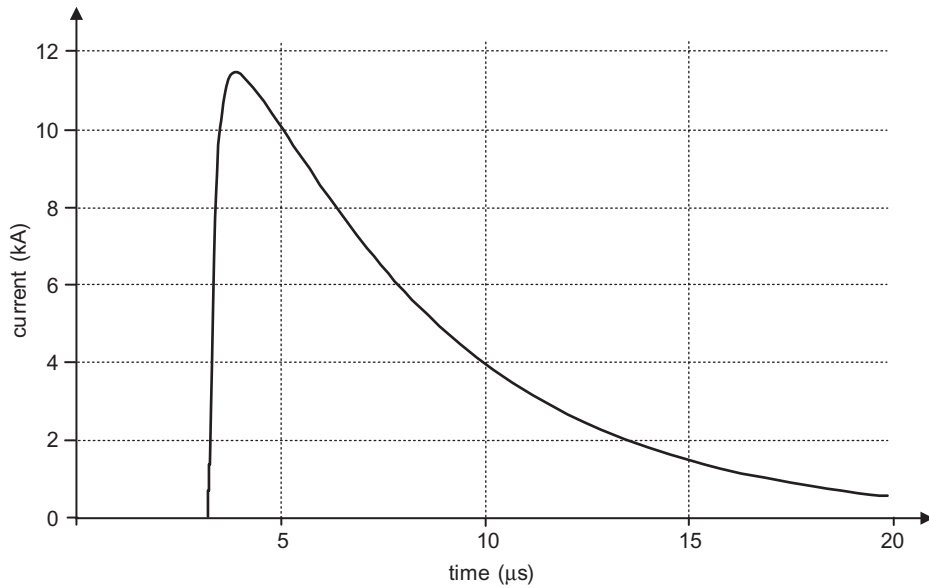


FIG. 1.3 Impulsive transient current caused by lightning strike, result of PSpice simulation.

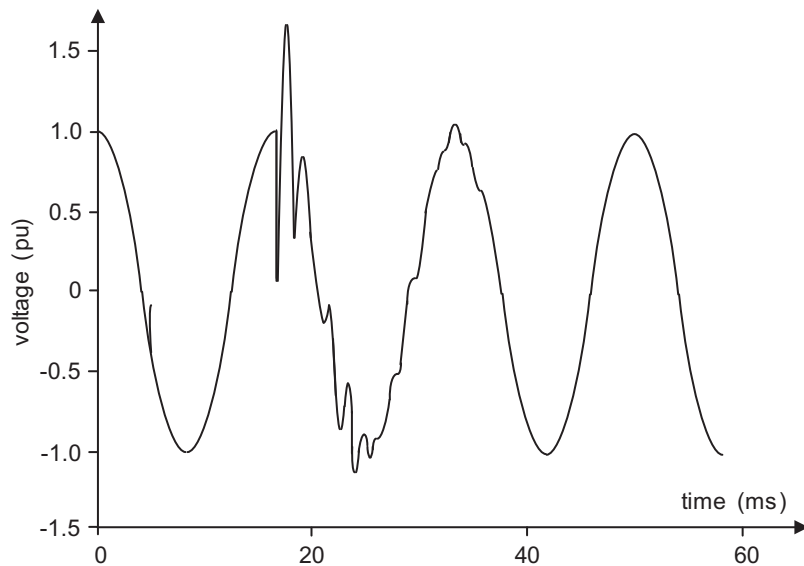


FIG. 1.4 Low-frequency oscillatory transient caused by capacitor bank energization.

1.3.2 Short-duration voltage variations

This category encompasses the IEC category of “voltage dips” and “short interruptions.” According to the IEEE-1159 classification, there are three different types of short-duration events (Table 1.2): instantaneous, momentary, and temporary. Each category is divided into

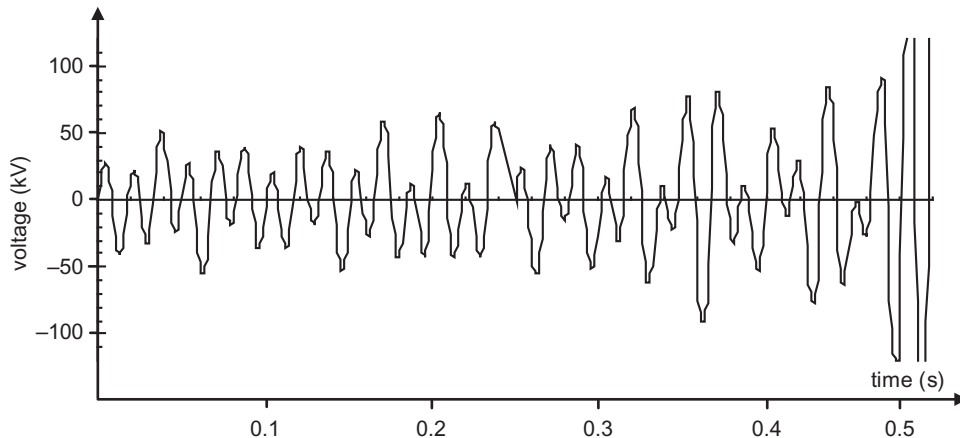


FIG. 1.5 Low-frequency oscillatory transient caused by ferroresonance of a transformer at no load, result of Mathematica simulation.

interruption, sag, and swell. Principal cases of short-duration voltage variations are fault conditions, large load energization, and loose connections.

Interruption. Interruption occurs when the supply voltage (or load current) decreases to less than 0.1 pu for less than 1 min, as shown in Fig. 1.6. Some causes of interruption are equipment failures, control malfunction, and blown fuse or breaker opening.

The difference between long (or sustained) interruption and interruption is that in the former the supply is restored manually, but during the latter the supply is restored automatically. Interruption is usually measured by its duration. For example, according to the European standard EN-50160 [24]:

- a short interruption is up to 3 min and
- a long interruption is longer than 3 min.

However, based on the standard IEEE-1250 [25]:

- An instantaneous interruption is between 0.5 and 30 cycles.
- A momentary interruption is between 30 cycles and 2 s.

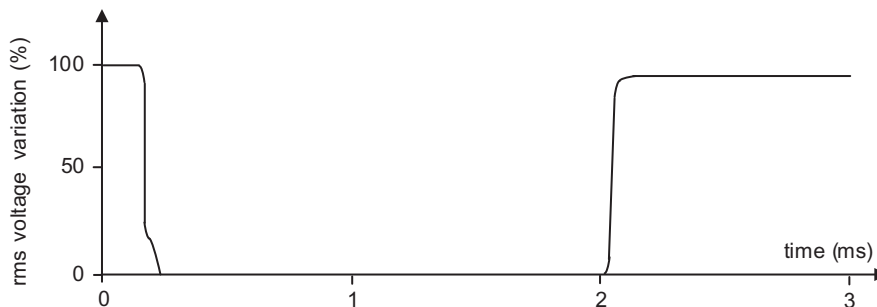


FIG. 1.6 Momentary interruptions due to a fault.

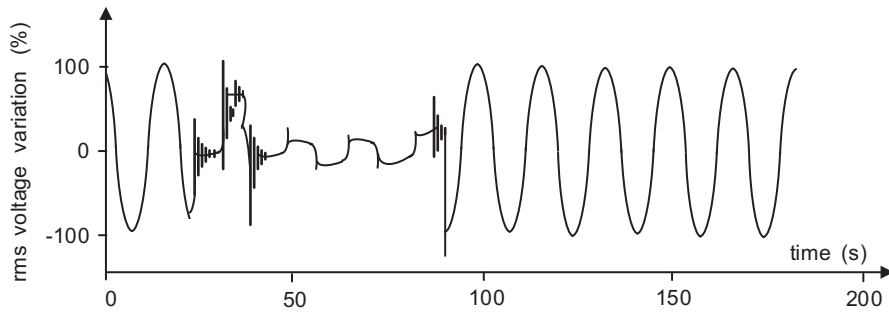


FIG. 1.7 Voltage sag caused by a single line-to-ground (SLG) fault.

- A temporary interruption is between 2s and 2 min.
- A sustained interruption is longer than 2 min.

Sags (Dips). Sags are short-duration reductions in the rms voltage between 0.1 and 0.9 pu, as shown in Fig. 1.7. There is no clear definition for the duration of sag, but it is usually between 0.5 cycles and 1 min. Voltage sags are usually caused by:

- energization of heavy loads (e.g., arc furnace),
- starting of large induction motors,
- single line-to-ground faults, and
- load transferring from one power source to another.

Each of these cases may cause a sag with a special (magnitude and duration) characteristic. For example, if a device is sensitive to voltage sag of 25%, it will be affected by induction motor starting [11]. Sags are main reasons for malfunctions of electrical low-voltage devices. Uninterruptible power supply (UPS) or power conditioners are mostly used to prevent voltage sags.

Swells. The increase of voltage magnitude between 1.1 and 1.8 pu is called swell, as shown in Fig. 1.8. The most accepted duration of a swell is from 0.5 cycles to 1 min [7]. Swells are not as common as sags and their main causes are:

- switching off of a large load,
- energizing a capacitor bank, or
- voltage increase of the unfaulted phases during a single line-to-ground fault [10].

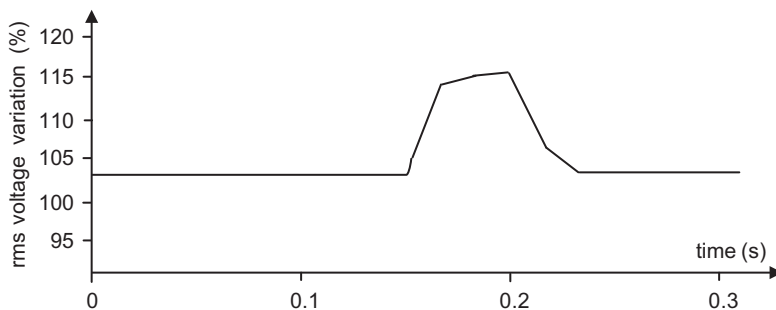


FIG. 1.8 Instantaneous voltage swell caused by a single line-to-ground fault.

In some textbooks the term “momentary overvoltage” is used as a synonym for the term swell. As in the case of sags, UPS or power conditioners are typical solutions to limit the effect of swell [10].

1.3.3 Long-duration voltage variations

According to standards (e.g., IEEE-1159, ANSI-C84.1), the deviation of the rms value of voltage from the nominal value for longer than 1 min is called long-duration voltage variation. The main causes of long-duration voltage variations are load variations and system switching operations. IEEE-1159 divides these events into three categories (Table 1.2): sustained interruption, undervoltage, and overvoltage.

Sustained interruption. Sustained (or long) interruption is the most severe and the oldest power quality event at which voltage drops to zero and does not return automatically. According to the IEC definition, the duration of sustained interruption is more than 3 min; but based on the IEEE definition the duration is more than 1 min. The number and duration of long interruptions are very important characteristics in measuring the ability of a power system to deliver service to customers. The most important causes of sustained interruptions are:

- fault occurrence in a part of power systems with no redundancy or with the redundant part out of operation,
- an incorrect intervention of a protective relay leading to a component outage, or
- scheduled (or planned) interruption in a low-voltage network with no redundancy.

Undervoltage. The undervoltage condition occurs when the rms voltage decreases to 0.8–0.9 pu for more than 1 min.

Overvoltage. Overvoltage is defined as an increase in the rms voltage to 1.1–1.2 pu for more than 1 min. There are three types of overvoltages:

- overvoltages generated by an insulation fault, ferroresonance, faults with the alternator regulator, tap changer transformer, or overcompensation;
- lightning overvoltages; and
- switching overvoltages produced by rapid modifications in the network structure such as opening of protective devices or the switching on of capacitive circuits.

1.3.4 Voltage imbalance

When voltages of a three-phase system are not identical in magnitude and/or the phase differences between them are not exactly 120 degrees, voltage imbalance occurs [10]. There are two ways to calculate the degree of imbalance:

- divide the maximum deviation from the average of three-phase voltages by the average of three-phase voltages or
- compute the ratio of the negative- (or zero-) sequence component to the positive-sequence component [7].

The main causes of voltage imbalance in power systems are:

- unbalanced single-phase loading in a three-phase system,
- overhead transmission lines that are not transposed,
- blown fuses in one phase of a three-phase capacitor bank, and
- severe voltage imbalance (e.g., >5%), which can result from single phasing conditions.

1.3.5 Waveform distortion

A steady-state deviation from a sine wave of power frequency is called waveform distortion [7]. There are five primary types of waveform distortions: DC offset, harmonics, interharmonics, notching, and electric noise. A Fourier series is usually used to analyze the nonsinusoidal waveform.

DC offset. The presence of a DC current and/or voltage component in an AC system is called DC offset [7]. Main causes of DC offset in power systems are:

- employment of rectifiers and other electronic switching devices and
- geomagnetic disturbances [6,7,13] causing GICs.

The main detrimental effects of DC offset in alternating networks are:

- half-cycle saturation of transformer core [26–28],
- generation of even harmonics [26] in addition to odd harmonics [29,30],
- additional heating in appliances leading to a decrease of the lifetime of transformers [31–36], rotating machines, and electromagnetic devices, and
- electrolytic erosion of grounding electrodes and other connectors.

Fig. 1.9A shows strong half-cycle saturation in a transformer due to DC magnetization and the influence of the tank, and Fig. 1.9B exhibits less half-cycle saturation due to DC magnetization and the absence of any tank. One concludes that to suppress DC currents due to rectifiers and geomagnetically induced currents, three-limb transformers with a relatively large air gap between core and tank should be used.

Harmonics. Harmonics are sinusoidal voltages or currents with frequencies that are integer multiples of the power system (fundamental) frequency (usually, $f = 50$ or 60 Hz). For example, the frequency of the h th harmonic is (hf). Periodic nonsinusoidal waveforms can be subjected to Fourier series and can be decomposed into the sum of fundamental component and harmonics. Main sources of harmonics in power systems are:

- industrial nonlinear loads (Fig. 1.10) such as power electronic equipment, for example, drives (Fig. 1.10A), rectifiers (Fig. 1.10B and C), inverters, or loads generating electric arcs, for example, arc furnaces, welding machines, and lighting and
- residential loads with switch-mode power supplies such as television sets, computers (Fig. 1.11), and fluorescent and energy-saving lamps.

Some detrimental effects of harmonics are:

- maloperation of control devices,
- additional losses in capacitors, transformers, and rotating machines,

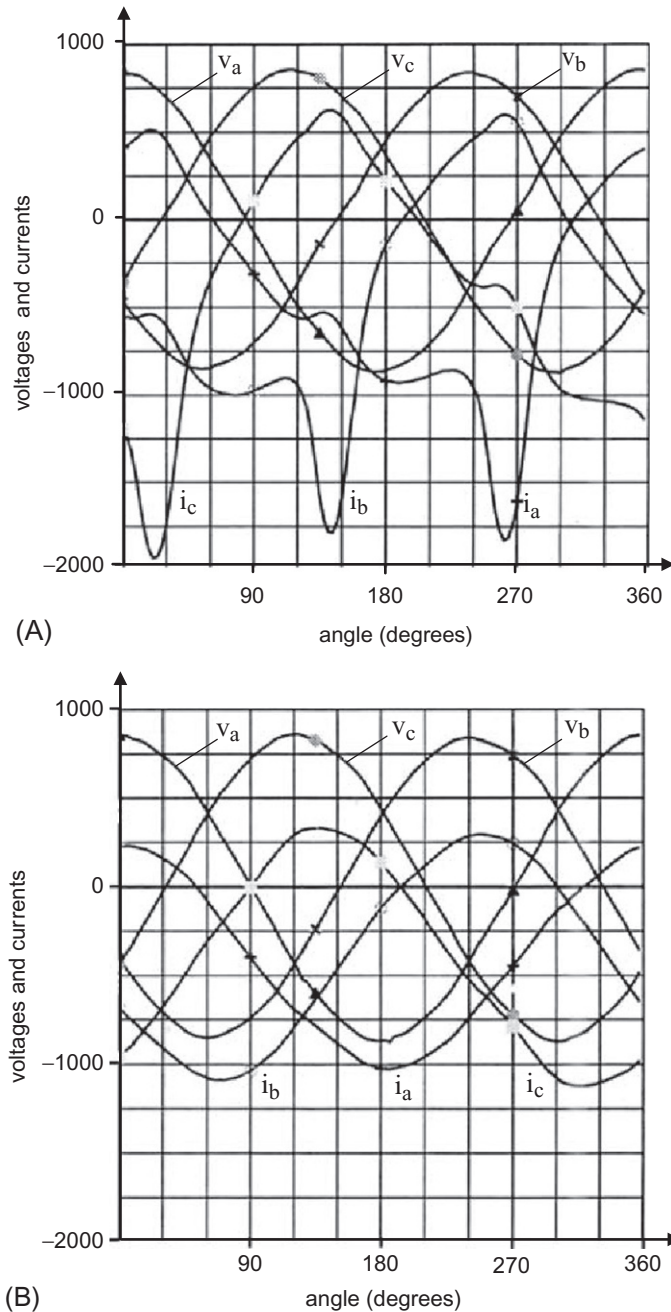


FIG. 1.9 Measured voltages and currents at balanced DC bias current $I_{DC} = -2A$ for a 2.3kVA three-limb transformer (A) at full load with tank (note the strong half-cycle saturation) and (B) at full load without tank (note the reduced half-cycle saturation) [27]. Dividing the ordinate values by 2.36 and 203 the voltages in volts and the currents in amperes are obtained, respectively.

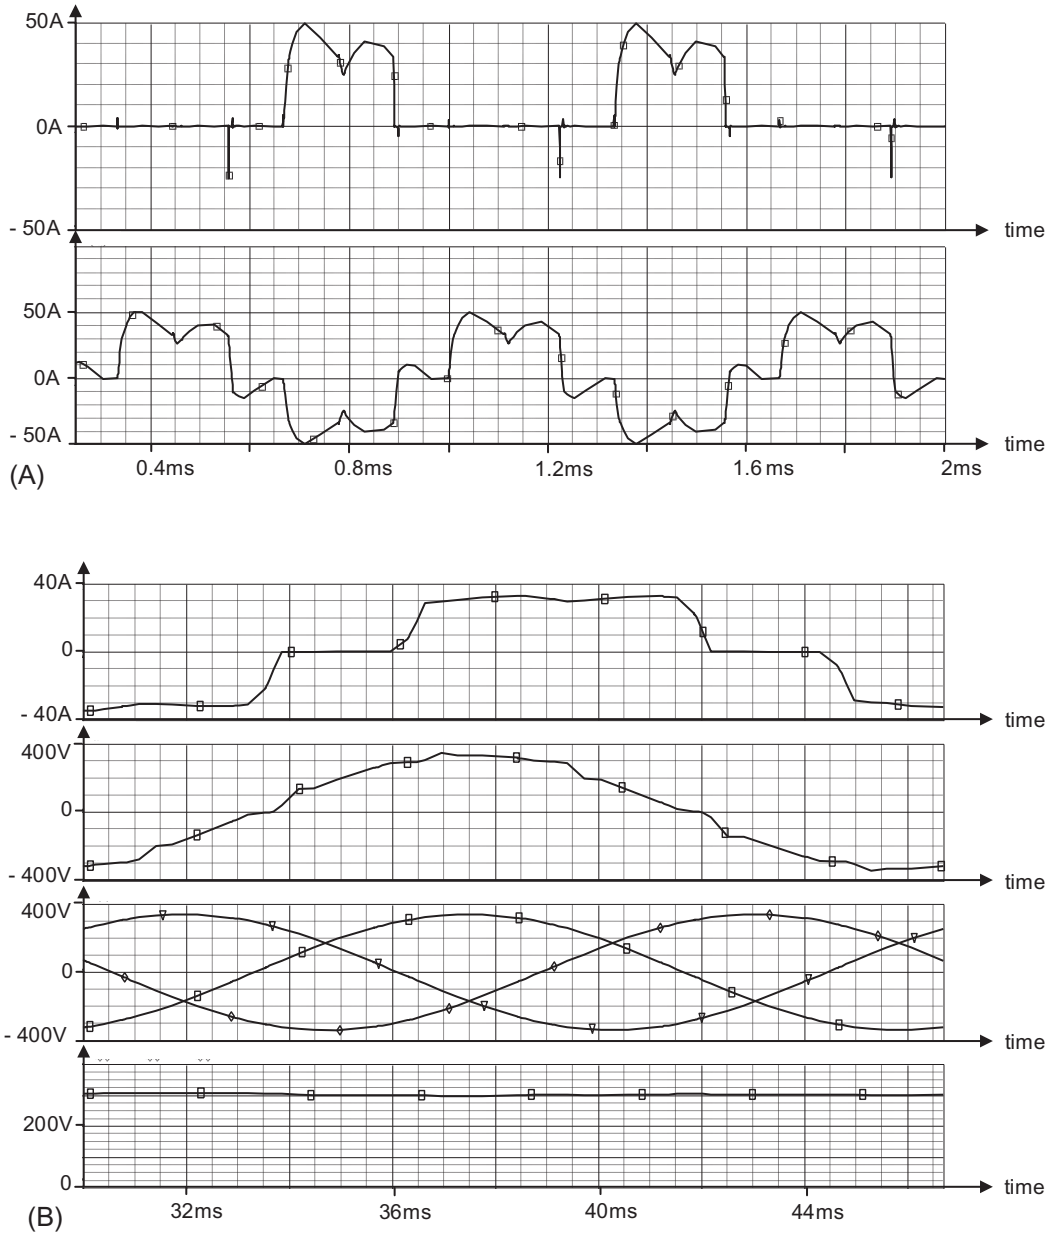


FIG. 1.10 (A) Computed electronic switch (*upper graph*) and motor (*lower graph*) currents of an adjustable-speed brushless DC motor drive for a phase angle of $\Theta = 0$ degree [29]. (B) Voltage notching caused by a three-phase rectifier for a firing angle of $\alpha = 50$ degree, result of PSpice simulation. Top: phase current; second from top: line-to-line voltage of rectifier; third from top: line-to-line voltages of infinite bus; bottom: DC output voltage of rectifier.

(Continued)

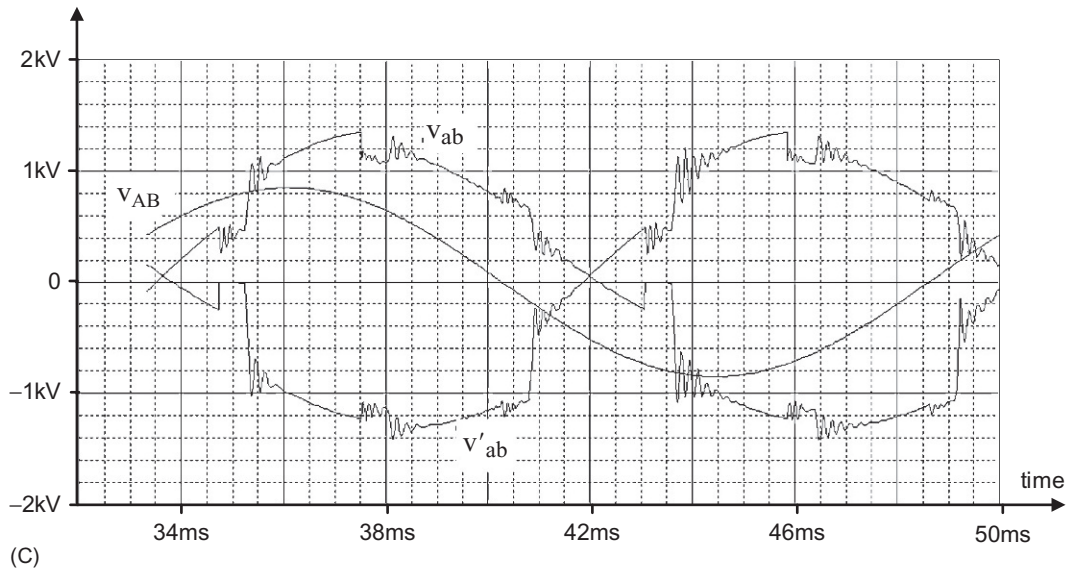


FIG. 1.10, cont'd (C) Voltage notching caused by a three-phase rectifier with interphase reactor for a firing angle of $\alpha = 0$ degree, result of PSpice simulation. Waveshapes with notches: line-to-line voltages of rectifier, v_{ab} and v'_{ab} being the line-to-line voltages of the two voltage systems; sinusoidal waveshape: line-to-line voltage of infinite bus v_{AB} .

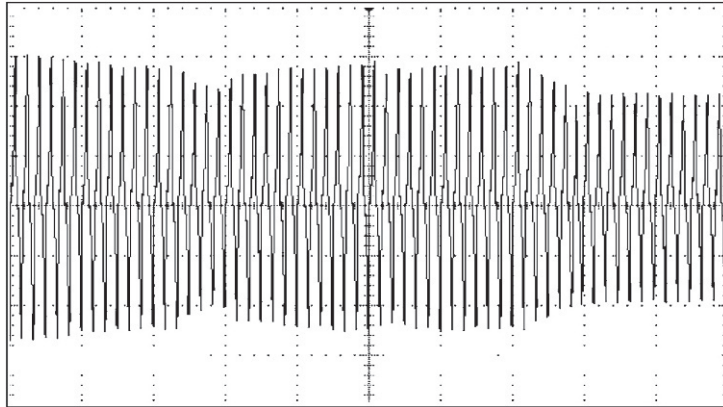


FIG. 1.11 Measured current wave shape of state-of-the-art personal computer (PC) (many periods) [45].

- additional noise from motors and other apparatus,
- telephone interference, and
- causing parallel and series resonance frequencies (due to the power factor correction capacitor and cable capacitance), resulting in voltage amplification even at a remote location from the distorting load.

Recommended solutions to reduce and control harmonics are applications of high-pulse rectification, passive, active, and hybrid filters, and custom power devices such as active-power line conditioners (APLCs) and unified power quality conditioners (UPQCs).

Interharmonics. Interharmonics are discussed in [Section 1.4.1](#). Their frequencies are not integer multiples of the fundamental frequency.

Notching. A periodic voltage disturbance caused by line-commutated thyristor circuits is called notching. The notching appears in the line voltage waveform during normal operation of power electronic devices when the current commutates from one phase to another. During this notching period, there exists a momentary short-circuit between the two commutating phases, reducing the line voltage; the voltage reduction is limited only by the system impedance.

Notching is repetitive and can be characterized by its frequency spectrum ([Fig. 1.10B and C](#)). The frequency of this spectrum is quite high. Usually it is not possible to measure it with equipment normally used for harmonic analysis. Notches can impose extra stress on the insulation of transformers, generators, and sensitive measuring equipment.

Notching can be characterized by the following properties:

- *Notch depth:* average depth of the line voltage notch from the sinusoidal waveform at the fundamental frequency;
- *Notch width:* the duration of the commutation process;
- *Notch area:* the product of notch depth and width; and
- *Notch position:* where the notch occurs on the sinusoidal waveform.

Some standards (e.g., IEEE-519) set limits for notch depth and duration (with respect to the system impedance and load current) in terms of the notch depth, the total harmonic distortion THD_v of supply voltage, and the notch area for different supply systems.

Electric noise. Electric noise is defined as unwanted electrical signals with broadband spectral content lower than 200 kHz [\[37\]](#) superimposed on the power system voltage or current in phase conductors, or found on neutral conductors or signal lines. Electric noise may result from faulty connections in transmission or distribution systems, arc furnaces, electrical furnaces, power electronic devices, control circuits, welding equipment, loads with solid-state rectifiers, improper grounding, turning off capacitor banks, adjustable-speed drives, corona, and broadband power line (BPL) communication circuits. The problem can be mitigated by using filters, line conditioners, and dedicated lines or transformers. Electric noise impacts electronic devices such as microcomputers and programmable controllers.

1.3.6 Voltage fluctuation and flicker

Voltage fluctuations are systemic variations of the voltage envelope or random voltage changes, the magnitude of which does not normally exceed specified voltage ranges (e.g., 0.9–1.1 pu as defined by ANSI C84.1-1982) [\[22,38\]](#). Voltage fluctuations are divided into two categories:

- step-voltage changes, regular or irregular in time and
- cyclic or random voltage changes produced by variations in the load impedances.

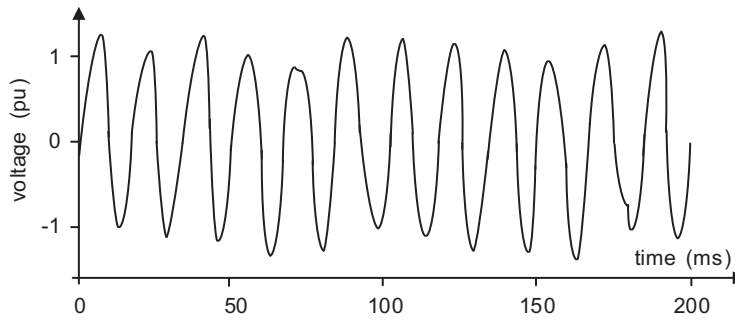


FIG. 1.12 Voltage flicker caused by arc furnace operation.

Voltage fluctuations degrade the performance of the equipment and cause instability of the internal voltages and currents of electronic equipment. However, voltage fluctuations less than 10% do not affect electronic equipment. The main causes of voltage fluctuation are pulsed-power output, resistance welders, start-up of drives, arc furnaces, drives with rapidly changing loads, and rolling mills.

Flicker. Flicker (Fig. 1.12) has been described as “continuous and rapid variations in the load current magnitude which causes voltage variations.” The term flicker is derived from the impact of the voltage fluctuation on lamps such that they are perceived to flicker by the human eye. This may be caused by an arc furnace, one of the most common causes of the voltage fluctuations in utility transmission and distribution systems.

1.3.7 Power–frequency variations

The deviation of the power system fundamental frequency from its specified nominal value (e.g., 50 or 60 Hz) is defined as power frequency variation [39]. If the balance between generation and demand (load) is not maintained, the frequency of the power system will deviate because of changes in the rotational speed of electromechanical generators. The amount of deviation and its duration of the frequency depend on the load characteristics and response of the generation control system to load changes. Faults of the power transmission system can also cause frequency variations outside of the accepted range for normal steady-state operation of the power system.

1.4 Formulations and measures used for power quality

This section briefly introduces some of the most commonly used formulations and measures of electric power quality as used in this book and as defined in standard documents. Main sources for power quality terminologies are IEEE Std 100 [40], IEC Std 61000-1-1, and CENELEC Std EN 50160 [24,41]. Appendix C of Ref. [11] presents a fine survey of power quality definitions.

1.4.1 Harmonics

Nonsinusoidal current and voltage waveforms (Figs. 1.13–1.20) occur in today's power systems due to equipment with nonlinear characteristics such as transformers, rotating electric machines, FACTS devices, power electronics components (e.g., rectifiers, triacs, thyristors, and diodes with capacitor smoothing, which are used extensively in PCs, audio, and video equipment), switch-mode power supplies, compact fluorescent lamps, induction furnaces, adjustable AC and DC drives, arc furnaces, welding tools, renewable energy sources, and HVDC networks. The main effects of harmonics are maloperation of control devices, telephone interferences, additional line losses (at fundamental and harmonic frequencies), and decreased lifetime and increased losses in utility equipment (e.g., transformers, rotating machines, and capacitor banks) and customer devices.

The periodic nonsinusoidal waveforms can be formulated in terms of Fourier series. Each term in the Fourier series is called the harmonic component of the distorted waveform. The frequency of harmonics are integer multiples of the fundamental frequency. Therefore, nonsinusoidal voltage and current waveforms can be defined as

$$v(t) = V_{DC} + \sum_{h=1}^n V_{\text{rms}}^{(h)} \cos(h\omega_o t + \alpha_h) = V_{DC} + v^{(1)}(t) + v^{(2)}(t) + v^{(3)}(t) + v^{(4)}(t) + \dots, \quad (1.1a)$$

$$i(t) = I_{DC} + \sum_{h=1}^n I_{\text{rms}}^{(h)} \cos(h\omega_o t + \beta_h) = I_{DC} + i^{(1)}(t) + i^{(2)}(t) + i^{(3)}(t) + i^{(4)}(t) + \dots, \quad (1.1b)$$

where ω_o is the fundamental frequency, h is the harmonic order, and $V_{\text{rms}}^{(h)}$, $I_{\text{rms}}^{(h)}$, α_h , and β_h are the rms amplitude values and phase shifts of voltage and current for the h th harmonic.

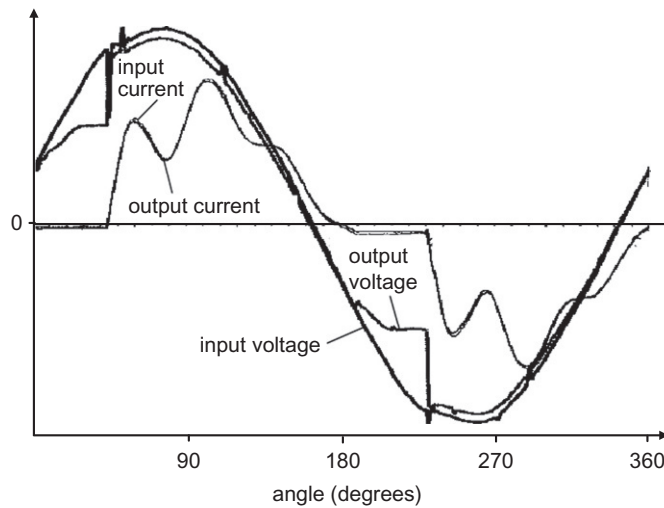


FIG. 1.13 Measured wave shapes of single-phase induction motor fed by thyristor/triac controller at rated operation [42].

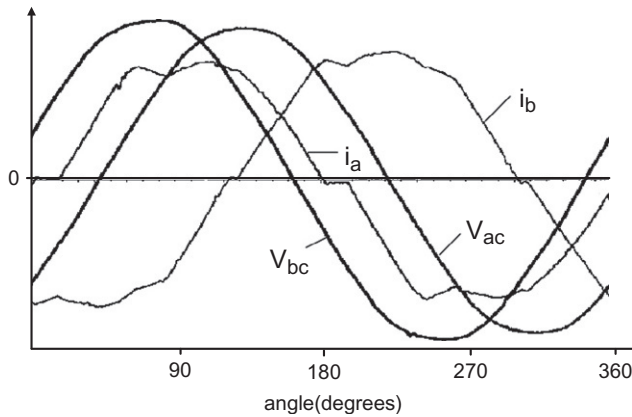


FIG. 1.14 Measured wave shapes of three-phase induction motor fed by thyristor/triac controller at rated operation [42].

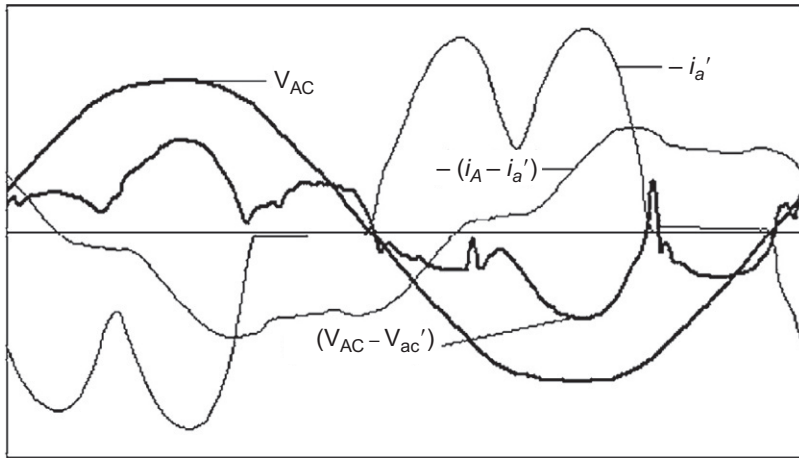


FIG. 1.15 Measured wave shapes of 4.5kVA three-phase transformer feeding full-wave rectifier [43].

Even and odd harmonics of a nonsinusoidal function correspond to even (e.g., 2, 4, 6, 8, ...) and odd (e.g., 3, 5, 7, 9, ...) components of its Fourier series. Harmonics of order 1 and 0 are assigned to the fundamental frequency and the DC component of the waveform, respectively. When both positive and negative half-cycles of the waveform have identical shapes, the wave shape has half-wave symmetry and the Fourier series contains only odd harmonics. This is the usual case with voltages and currents of power systems. The presence of even harmonics is often a clue that there is something wrong (e.g., imperfect gating of electronic switches [42]), either with the load equipment or with the transducer used to make the measurement. There are notable exceptions to this such as half-wave rectifiers, arc furnaces (with random arcs), and the presence of GICs in power systems [27].

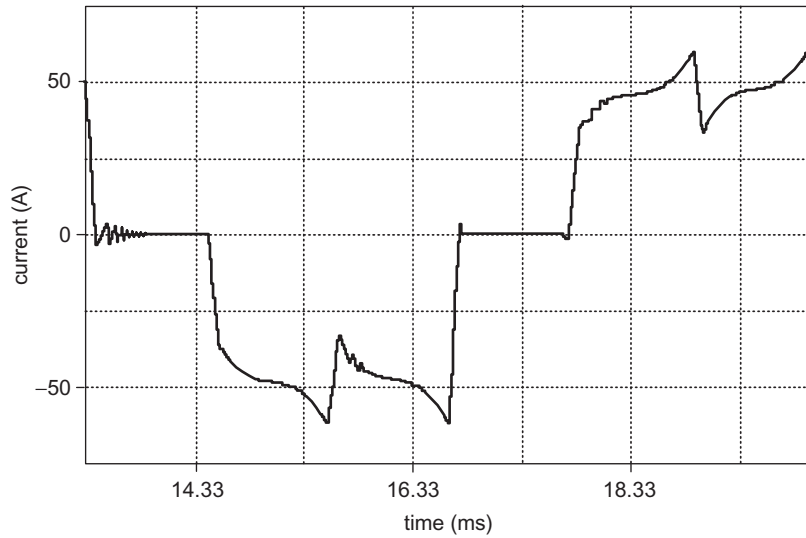


FIG. 1.16 Calculated current of brushless DC motor in full-on mode at rated operation [29].

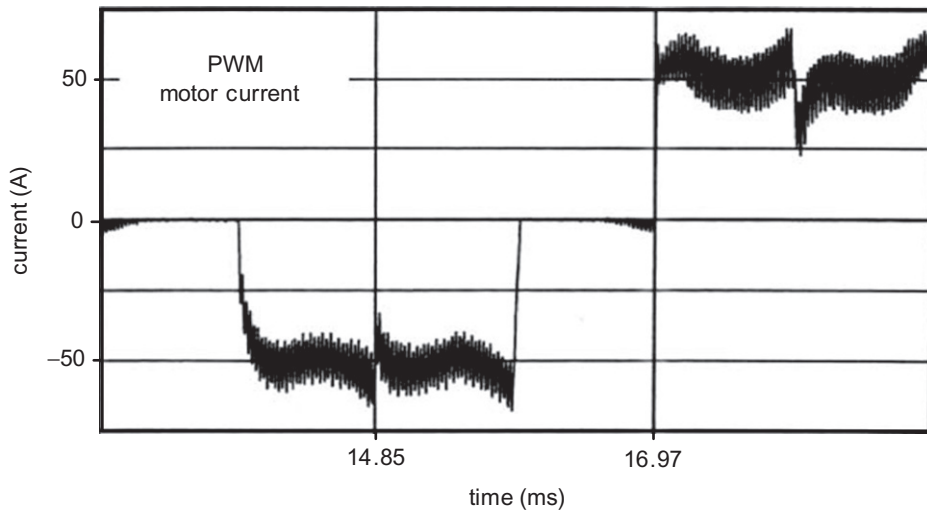


FIG. 1.17 Calculated current of brushless DC motor in PWM mode at rated operation [29].

1.4.1.1 Triplen harmonics

Triplen harmonics (Fig. 1.21) are the odd multiples of the third harmonic ($h = 3, 9, 15, 21, \dots$). These harmonic orders become an important issue for grounded-wye systems with current flowing in the neutral line of a wye configuration. Two typical problems are overloading of the neutral conductor and telephone interference.

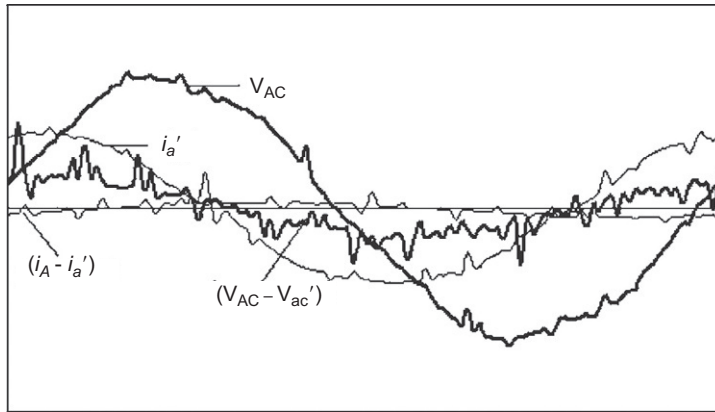


FIG. 1.18 Measured wave shapes of 15kVA three-phase transformer feeding resonant rectifier [43].

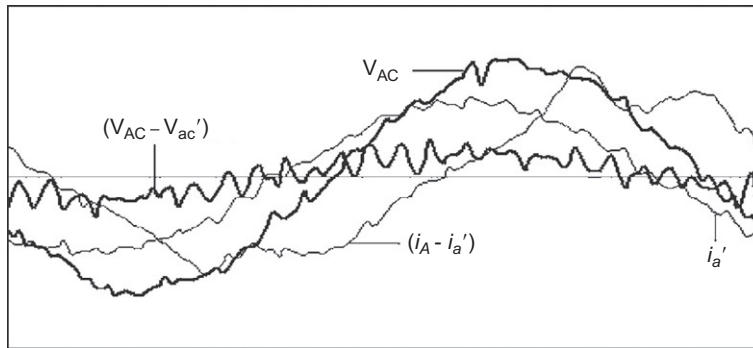


FIG. 1.19 Measured wave shapes of 15kVA three-phase transformer fed by PWM inverter [43].

For a system of perfectly balanced three-phase nonsinusoidal loads, fundamental current components in the neutral are zero. The third harmonic neutral currents are three times the third-harmonic phase currents because they coincide in phase or time.

Transformer winding connections have a significant impact on the flow of triplen harmonic currents caused by three-phase nonlinear loads. For the grounded wye-delta transformer, the triplen harmonic currents enter the wye side and since they are in phase, they add in the neutral. The delta winding provides ampere-turn balance so that they can flow in the delta, but they remain trapped in the delta and are absent in the line currents of the delta side of the transformer. This type of transformer connection is the most commonly employed in utility distribution substations with the delta winding connected to the transmission feeder. Using grounded-wye windings on both sides of the transformer allows balanced triplen harmonics to flow unimpeded from the low-voltage system to the high-voltage system. They will be present in equal proportion on both sides of a transformer.

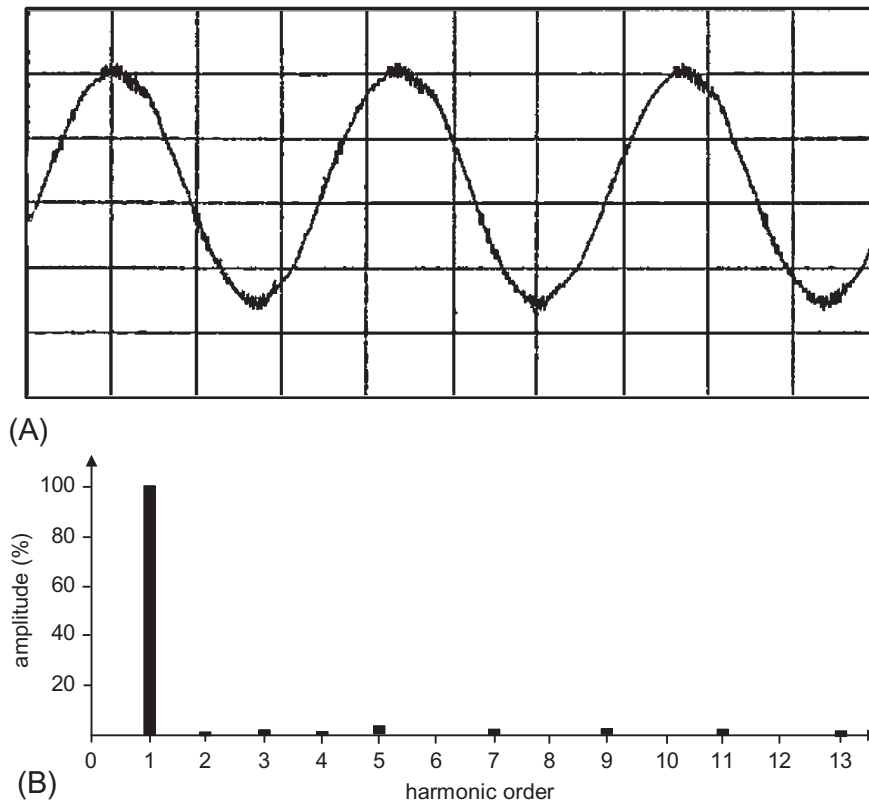


FIG. 1.20 (A) Measured current and (B) measured current spectrum of 20kW/25kVA wind-power plant supplying power via inverter into the 240V three-phase distribution system at rated load [44].

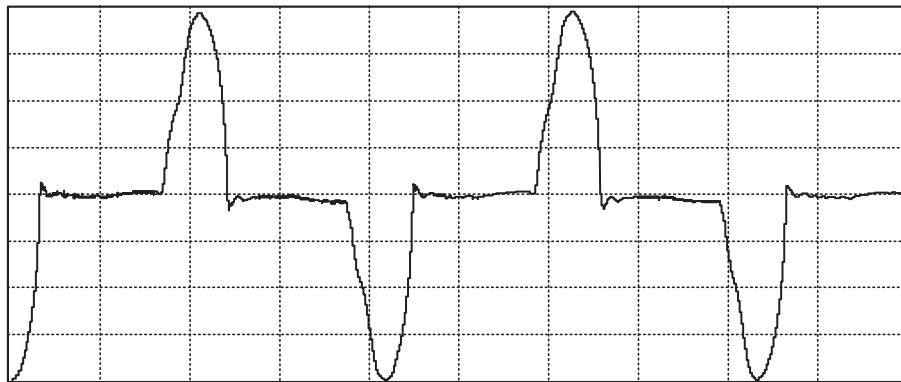


FIG. 1.21 Input current to personal computer with dominant third harmonic [45].

1.4.1.2 Subharmonics

Subharmonics have frequencies below the fundamental frequency. There are rarely subharmonics in power systems. However, due to the fast control of electronic power supplies of computers, inter- and subharmonics are generated in the input current (Fig. 1.11) [45]. Resonance between the harmonic currents or voltages with the power system (series) capacitance and inductance may cause subharmonics, called subsynchronous resonance [46]. They may be generated when a system is highly inductive (such as an arc furnace during start-up) or when the power system contains large capacitor banks for power factor correction or filtering.

1.4.1.3 Interharmonics

The frequency of interharmonics are not integer multiples of the fundamental frequency. Interharmonics appear as discrete frequencies or as a band spectrum. Main sources of interharmonic waveforms are static frequency converters, cycloconverters, induction motors, arcing devices, and computers. Interharmonics cause flicker, low-frequency torques [32], additional temperature rise in induction machines [33,34], and malfunctioning of protective (under-frequency) relays [35]. Interharmonics have been included in a number of guidelines such as the IEC 61000-4-7 [36] and the IEEE-519. However, many important related issues, such as the range of frequencies, should be addressed in revised guidelines.

1.4.1.4 Characteristic and uncharacteristic harmonics

The harmonics of orders $12k+1$ (positive sequence) and $12k-1$ (negative sequence) are called characteristic and uncharacteristic harmonics, respectively. The amplitudes of these harmonics are inversely proportional to the harmonic order. Filters are used to reduce characteristic harmonics of large power converters. When the AC system is weak [47] and the operation is not perfectly symmetrical, uncharacteristic harmonics appear. It is not economical to reduce uncharacteristic harmonics with filters; therefore, even a small injection of these harmonic currents can, via parallel resonant conditions, produce very large voltage distortion levels.

1.4.1.5 Positive-, negative-, and zero-sequence harmonics [48]

Assuming a positive-phase (abc) sequence balanced three-phase power system, the expressions for the fundamental currents are

$$\begin{aligned} i_a(t) &= I_a^{(1)} \cos(\omega_o t), \\ i_b(t) &= I_b^{(1)} \cos(\omega_o t - 120^\circ), \\ i_c(t) &= I_c^{(1)} \cos(\omega_o t - 240^\circ). \end{aligned} \quad (1.2)$$

The negative displacement angles indicate that the fundamental phasors rotate clockwise in the space-time plane.

For the third harmonic (zero-sequence) currents,

$$\begin{aligned} i_a^{(3)}(t) &= I_a^{(3)} \cos(3\omega_o t), \\ i_b^{(3)}(t) &= I_b^{(3)} \cos 3(\omega_o t - 120^\circ) = I_b^{(3)} \cos(3\omega_o t - 360^\circ) = I_b^{(3)} \cos(3\omega_o t), \\ i_c^{(3)}(t) &= I_c^{(3)} \cos 3(\omega_o t - 240^\circ) = I_c^{(3)} \cos(3\omega_o t - 720^\circ) = I_c^{(3)} \cos(3\omega_o t). \end{aligned} \quad (1.3)$$

These equations show that the third harmonic phasors are in phase and have zero displacement angles between them. The third harmonic currents are known as zero-sequence harmonics.

The expressions for the fifth harmonic currents are

$$\begin{aligned} i_a^{(5)}(t) &= I_a^{(5)} \cos(5\omega_o t), \\ i_b^{(5)}(t) &= I_b^{(5)} \cos 5(\omega_o t - 120^\circ) = I_b^{(5)} \cos(5\omega_o t - 600^\circ) \\ &= I_b^{(5)} \cos(5\omega_o t - 240^\circ) = I_b^{(5)} \cos(5\omega_o t + 120^\circ), \\ i_c^{(5)}(t) &= I_c^{(5)} \cos 5(\omega_o t - 240^\circ) = I_c^{(5)} \cos(5\omega_o t - 1200^\circ) \\ &= I_c^{(5)} \cos(5\omega_o t - 120^\circ) = I_c^{(5)} \cos(5\omega_o t + 240^\circ). \end{aligned} \quad (1.4)$$

Note that displacement angles are positive; therefore, the phase sequence of this harmonic is counterclockwise, and opposite to that of the fundamental. The fifth harmonic currents are known as negative-sequence harmonics.

Similar relationships exist for other harmonic orders. [Table 1.3](#) categorizes power system harmonics in terms of their respective frequencies and sources.

TABLE 1.3 Types and sources of power system harmonics.

Type	Frequency	Source
DC	0	Electronic switching devices, half-wave rectifiers, arc furnaces (with random arcs), geomagnetic induced currents (GICs)
Odd harmonics	$h \cdot f_1$ ($h = \text{odd}$)	Nonlinear loads and devices
Even harmonics	$h \cdot f_1$ ($h = \text{even}$)	Half-wave rectifiers, geomagnetic induced currents (GICs)
Triplen harmonics	$3h \cdot f_1$ ($h = 1, 2, 3, 4, \dots$)	Unbalanced three-phase load, electronic switching devices
Positive-sequence harmonics	$h \cdot f_1$ ($h = 1, 4, 7, 10, \dots$)	Operation of power system with nonlinear loads
Negative-sequence harmonics	$h \cdot f_1$ ($h = 2, 5, 8, 11, \dots$)	Operation of power system with nonlinear loads
Zero-sequence harmonics	$h \cdot f_1$ ($h = 3, 6, 9, 12, \dots$) (same as triplen harmonics)	Unbalanced operation of power system

TABLE 1.3 Types and sources of power system harmonics—Cont'd

Type	Frequency	Source
Time harmonics	$h \cdot f_1$ (h =an integer)	Voltage and current source inverters, pulse-width-modulated rectifiers, switch-mode rectifiers and inverters
Spatial harmonics	$h \cdot f_1$ (h =an integer)	Induction machines
Interharmonics	$h \cdot f_1$ (h =not an integer multiple of f_1)	Static frequency converters, cycloconverters, induction machines, arcing devices, computers
Subharmonics	$h \cdot f_1$ ($h < 1$ and not an integer multiple of f_1 , e.g., $h = 15\text{Hz}$, 30Hz)	Fast control of power supplies, subsynchronous resonances, large capacitor banks in highly inductive systems, induction machines
Characteristic harmonics	$(12k+1) \cdot f_1$ (k =integer)	Rectifiers, inverters
Uncharacteristic harmonics	$(12k-1) \cdot f_1$ (k =integer)	Weak and unsymmetrical AC systems

Note that although the harmonic phase-shift angle has the effect of altering the shape of the composite waveform (e.g., adding a third harmonic component with 0 degree phase shift to the fundamental results in a composite waveform with maximum peak-to-peak value whereas a 180 degree phase shift will result in a composite waveform with minimum peak-to-peak value), the phase-sequence order of the harmonics is not affected. Not all voltage and current systems can be decomposed into positive-, negative-, and zero-sequence systems [49].

1.4.1.6 Time and spatial (space) harmonics

Time harmonics are the harmonics in the voltage and current waveforms of electric machines and power systems due to magnetic core saturation, presence of nonlinear loads, and irregular system conditions (e.g., faults and imbalance). Spatial (space) harmonics are referred to the harmonics in the flux linkage of rotating electromagnetic devices such as induction and synchronous machines. The main cause of spatial harmonics is the unsymmetrical physical structure of stator and rotor magnetic circuits (e.g., selection of number of slots and rotor eccentricity). Spatial harmonics of flux linkages will induce time harmonic voltages in the rotor and stator circuits that generate time harmonic currents.

1.4.2 The average value of a nonsinusoidal waveform

The average value of a sinusoidal waveform is defined as

$$I_{\text{avg}} = \frac{1}{T} \int_0^T i(t) dt. \quad (1.5)$$

For the nonsinusoidal current of Eq. (1.1b),

$$I_{\text{avg}} = \frac{1}{T} \int_0^T i(t) dt = \frac{1}{T} \int_0^T \left[I_{DC} + i^{(1)}(t) + i^{(2)}(t) + i^{(3)}(t) + i^{(4)}(t) + \dots \right] dt. \quad (1.6)$$

Since all harmonics are sinusoids, the average value of a nonsinusoidal function is equal to its DC value:

$$I_{\text{avg}} = I_{DC}. \quad (1.7)$$

1.4.3 The rms value of a nonsinusoidal waveform

The rms value of a sinusoidal waveform is defined as

$$I_{\text{rms}} = \sqrt{\frac{1}{T} \int_0^T i^2(t) dt} = \sqrt{\frac{1}{2\pi} \int_0^T I_{\text{max}}^2 \cos^2(\omega t) dt} = \sqrt{\frac{1}{2} I_{\text{max}}^2} = \frac{I_{\text{max}}}{\sqrt{2}}. \quad (1.8)$$

For the nonsinusoidal current of Eq. (1.1b),

$$\begin{aligned} I_{\text{rms}} &= \sqrt{\frac{1}{T} \int_0^T i^2(t) dt} = \left\{ \frac{1}{T} \int_0^T \left[I_{\text{max}}^{(1)} \cos(\omega t + \beta_1) + I_{\text{max}}^{(2)} \cos(2\omega t + \beta_2) + I_{\text{max}}^{(3)} \cos(3\omega t + \beta_3) + \dots \right]^2 dt \right\}^{1/2} \\ &= \left\{ \frac{1}{T} \int_0^T \left[\left(I_{\text{max}}^{(1)} \right)^2 \cos^2(\omega t + \beta_1) + \left(I_{\text{max}}^{(2)} \right)^2 \cos^2(2\omega t + \beta_2) + \left(I_{\text{max}}^{(3)} \right)^2 \cos^2(3\omega t + \beta_3) + \dots \right. \right. \\ &\quad \left. \left. + 2I_{\text{max}}^{(1)} I_{\text{max}}^{(2)} \cos(\omega t + \beta_1) \cos(2\omega t + \beta_2) + \dots \right] dt \right\}^{1/2}. \end{aligned} \quad (1.9)$$

This equation contains two parts:

- The first part is the sum of the squares of harmonics:

$$\sum_{p=1}^H \left(I_{\text{max}}^{(p)} \right)^2 \cos^2(p\omega t + \beta_p). \quad (1.10)$$

- The second part is the sum of the products of harmonics:

$$\sum_{p=1}^H \sum_{q=1}^H I_{\text{max}}^{(p)} I_{\text{max}}^{(q)} \cos(p\omega t + \beta_p) \cos(q\omega t + \beta_q), \quad p \neq q. \quad (1.11)$$

After some simplifications it can be shown that the average of the second part is zero, and the first part becomes

$$\begin{aligned} I_{\text{rms}} &= \int_0^{2\pi} \left[\sum_{p=1}^H \left(I_{\text{max}}^{(p)} \right)^2 \cos^2(p\omega t + \beta_p) \right] d(p\omega t) \\ &= \int_0^{2\pi} \left[\left(I_{\text{max}}^{(1)} \right)^2 \cos^2(\omega t + \beta_1) \right] d(\omega t) + \int_0^{2\pi} \left[\left(I_{\text{max}}^{(2)} \right)^2 \cos^2(2\omega t + \beta_2) \right] d(2\omega t) + \dots \end{aligned} \quad (1.12)$$

Therefore, the rms value of a nonsinusoidal waveform is

$$I_{\text{rms}} = \left[\left(I_{\text{rms}}^{(1)} \right)^2 + \left(I_{\text{rms}}^{(2)} \right)^2 + \left(I_{\text{rms}}^{(3)} \right)^2 + \cdots + \left(I_{\text{rms}}^{(H)} \right)^2 \right]^{1/2}. \quad (1.13)$$

If the nonsinusoidal waveform contains DC values, then

$$I_{\text{rms}} = \left[I_{\text{DC}}^2 + \left(I_{\text{rms}}^{(1)} \right)^2 + \left(I_{\text{rms}}^{(2)} \right)^2 + \left(I_{\text{rms}}^{(3)} \right)^2 + \cdots + \left(I_{\text{rms}}^{(H)} \right)^2 \right]^{1/2}. \quad (1.14)$$

1.4.4 Form factor (FF)

The form factor (FF) is a measure of the shape of the waveform and is defined as

$$FF = \frac{I_{\text{rms}}}{I_{\text{avg}}}. \quad (1.15)$$

Since the average value of a sinusoid is zero, its average over one half-cycle is used in the above equation. As the harmonic content of the waveform increases, its FF will also increase.

1.4.5 Ripple factor (RF)

Ripple factor (RF) is a measure of the ripple content of the waveform and is defined as

$$RF = \frac{I_{\text{AC}}}{I_{\text{DC}}}, \quad (1.16)$$

where $I_{\text{AC}} = \sqrt{(I_{\text{rms}})^2 - (I_{\text{DC}})^2}$. It is easy to show that

$$RF = \frac{\sqrt{(I_{\text{rms}})^2 - (I_{\text{DC}})^2}}{I_{\text{DC}}} = \sqrt{\frac{(I_{\text{rms}})^2}{(I_{\text{DC}})^2} - 1} = \sqrt{FF^2 - 1}. \quad (1.17)$$

1.4.6 Harmonic factor (HF_h)

The harmonic factor (HF_h) of the *h*th harmonic, which is a measure of the individual harmonic contribution, is defined as

$$HF_h = \frac{I_{\text{rms}}^{(h)}}{I_{\text{rms}}^{(1)}}. \quad (1.18)$$

Some references [8] call HF_h the individual harmonic distortion (IHD).

1.4.7 Lowest order harmonic (LOH)

The lowest order harmonic (LOH) is that harmonic component whose frequency is closest to that of the fundamental and its amplitude is greater than or equal to 3% of the fundamental component.

1.4.8 Total harmonic distortion (THD)

The most common harmonic index used to indicate the harmonic content of a distorted waveform with a single number is the total harmonic distortion (THD). It is a measure of the effective value of the harmonic components of a distorted waveform, which is defined as the rms of the harmonics expressed in percentage of the fundamental (e.g., current) component:

$$THD_i = \frac{\sqrt{\sum_{h=2}^{\infty} (I^{(h)})^2}}{I^{(1)}}. \quad (1.19)$$

A commonly cited value of 5% is often used as a dividing line between a high and low distortion level. The ANSI standard recommends truncation of THD series at 5 kHz, but most practical commercially available instruments are limited to about 1.6 kHz (due to the limited bandwidth of potential and current transformers and the word length of the digital hardware [5]).

Main advantages of THD are:

- It is commonly used for a quick measure of distortion and it can be easily calculated.

Some disadvantages of THD are:

- It does not provide amplitude information and the detailed information of the spectrum is lost.

THD_i is related to the rms value of the current waveform as follows [6]:

$$I_{\text{rms}} = \sqrt{\sum_{h=2}^{\infty} (I^{(h)})^2} = I^{(1)} \sqrt{1 + THD_i^2}. \quad (1.20)$$

THD can be weighted to indicate the amplitude stress on various system devices. The weighted distortion factor adapted to inductance is an approximate measure for the additional thermal stress of inductances of coils and induction motors [9] (table 2.4):

THD adapted to inductance is

$$THD_{\text{ind}} = \frac{\sqrt{\sum_{h=2}^{50} \left(\frac{V^{(h)}}{h^\alpha} \right)^2}}{V^{(1)}}, \quad (1.21)$$

where $\alpha = 1, \dots, 2$. On the other hand, the weighted THD adapted to capacitors is an approximate measure for the additional thermal stress of capacitors directly connected to the system without series inductance [9] (table 2.4):

THD adapted to capacitor is

$$THD_{\text{cap}} = \frac{\sqrt{\sum_{h=2}^{50} h \cdot (V^{(h)})^2}}{V^{(1)}}. \quad (1.22)$$

Because voltage distortions are maintained small, the voltage THD_v nearly always assumes values which are not a threat to the power system. This is not the case for current; a small current may have a high THD_i but may not be a significant threat to the system.

1.4.9 Total interharmonic distortion (TIHD)

This factor is equivalent to the (e.g., current) THD_i , but is defined for interharmonics as [9].

$$TIHD = \frac{\sqrt{\sum_{k=2}^n \left(I^{(k)}\right)^2}}{I^{(1)}}, \quad (1.23)$$

where k is the total number of interharmonics and n is the total number of frequency bins present including subharmonics (e.g., interharmonic frequencies that are less than the fundamental frequency).

1.4.10 Total subharmonic distortion (TSHD)

This factor is equivalent to the (e.g., current) THD_i , but defined for subharmonics [9]:

$$TSHD = \frac{\sqrt{\sum_{s=2}^S \left(I^{(s)}\right)^2}}{I^{(1)}}, \quad (1.24)$$

where S is the total number of frequency bins present below the fundamental frequency.

1.4.11 Total demand distortion (TDD)

Due to the mentioned disadvantages of THD, some standards (e.g., IEEE-519) have defined the total demand distortion factor. This term is similar to THD except that the distortion is expressed as a percentage of some rated or maximum value (e.g., load current magnitude), rather than as a percentage of the fundamental current:

$$TDD = \frac{\sqrt{\sum_{h=2}^{50} \left(I^{(h)}\right)^2}}{I_{\text{rated}}}. \quad (1.25)$$

1.4.12 Telephone influence factor (TIF)

The telephone influence factor (TIF), which was jointly proposed by Bell Telephone Systems (BTS) and the Edison Electric Institute (EEI) and is widely used in the United States and Canada, determines the influence of power systems harmonics on telecommunication

systems. It is a variation of THD in which the root of the sum of the squares is weighted using factors (weights) that reflect the response of the human ear [5]:

$$TIF = \frac{\sqrt{\sum_{i=1}^{\infty} (w_i V^{(i)})^2}}{\sqrt{\sum_{i=1}^{\infty} (V^{(i)})^2}}, \quad (1.26)$$

where w_i are the TIF weighting factors obtained by physiological and audio tests, as listed in Table 1.4. They also incorporate the way current in a power circuit induces voltage in an adjacent communication system.

TABLE 1.4 Telephone influence (w_i) and C-message (c_i) weighting factors [5].

Harmonic order ($h, f_1 = 60\text{Hz}$)	TIF weights (w_i)	C weights (c_i)
1	0.5	0.0017
2	10.0	0.0167
3	30.0	0.0333
4	105	0.0875
5	225	0.1500
6	400	0.222
7	650	0.310
8	950	0.396
9	1320	0.489
10	1790	0.597
11	2260	0.685
12	2760	0.767
13	3360	0.862
14	3830	0.912
15	4350	0.967
16	4690	0.977
17	5100	1.000
18	5400	1.000
19	5630	0.988
20	5860	0.977
21	6050	0.960
22	6230	0.944

TABLE 1.4 Telephone influence (w_i) and C-message (c_i) weighting factors [5]—
Cont'd

Harmonic order ($h, f_1 = 60\text{ Hz}$)	TIF weights (w_i)	C weights (c_i)
23	6370	0.923
24	6650	0.924
25	6680	0.891
26	6790	0.871
27	6970	0.860
28	7060	0.840
29	7320	0.841
30	7570	0.841
31	7820	0.841
32	8070	0.841
33	8330	0.841
34	8580	0.841
35	8830	0.841
36	9080	0.841
37	9330	0.841
38	9590	0.841
39	9840	0.841
40	10,090	0.841
41	10,340	0.841
42	10,480	0.832
43	10,600	0.822
44	10,610	0.804
45	10,480	0.776
46	10,350	0.750
47	10,210	0.724
48	9960	0.692
49	9820	0.668
50	9670	0.645
55	8090	0.490
60	6460	0.359
65	4400	0.226
70	3000	0.143
75	1830	0.0812

1.4.13 C-message weights

The C-message weighted index is very similar to the TIF except that the weights c_i are used in place of w_i [5]:

$$C = \frac{\sqrt{\sum_{i=1}^{\infty} (c_i I^{(i)})^2}}{\sqrt{\sum_{i=1}^{\infty} (I^{(i)})^2}} = \frac{\sqrt{\sum_{i=1}^{\infty} (c_i I^{(i)})^2}}{I_{\text{rms}}}, \quad (1.27)$$

where c_i are the C-message weighting factors (Table 1.4) that are related to the TIF weights by $w_i = 5(i)(f_0)c_i$. The C-message could also be applied to the bus voltage.

1.4.14 $V \cdot T$ and $I \cdot T$ products

The THD index does not provide information about the amplitude of voltage (or current); therefore, BTS or the EEI use $I \cdot T$ and $V \cdot T$ products. The $I \cdot T$ and $V \cdot T$ products are alternative indices to the THD incorporating voltage or current amplitudes:

$$V \cdot T = \sqrt{\sum_{i=1}^{\infty} (w_i V^{(i)})^2}, \quad (1.28)$$

$$I \cdot T = \sqrt{\sum_{i=1}^{\infty} (w_i I^{(i)})^2}, \quad (1.29)$$

where the weights w_i are listed in Table 1.4.

1.4.15 Telephone form factor (TFF)

Two weighting systems widely used by industry for interference on telecommunication system are [9]

- the sophomoric weighting system proposed by the International Consultation Commission on Telephone and Telegraph System (CCITT) used in Europe and
- the C-message weighting system proposed jointly by Bell Telephone Systems (BTS) and the Edison Electric Institute (EEI), used in the United States and Canada.

These concepts acknowledge that the harmonic effect is not uniform over the audio-frequency range and use measured weighting factors to account for this nonuniformity. They take into account the type of telephone equipment and the sensitivity of the human ear to provide a reasonable indication of the interference from each harmonic.

The BTS and EEI systems describe the level of harmonic interference in terms of the telephone influence factor (Eq. 1.26) or the C-message (Eq. 1.27), whereas the CCITT system uses the telephone form factor (TFF):

$$TFF = \frac{1}{V^{(1)}} \sqrt{\sum_{h=1}^{\infty} K_h P_h (V^{(h)})^2}, \quad (1.30)$$

where $K_h = h/800$ is a coupling factor and P_h is the harmonic weight [9] (fig. 2.5) divided by 1000.

1.4.16 Distortion index (DIN)

The distortion index (DIN) is commonly used in standards and specifications outside North America. It is also used in Canada and is defined as [5]

$$DIN = \frac{\sqrt{\sum_{i=2}^{\infty} (V^{(i)})^2}}{\sqrt{\sum_{i=1}^{\infty} (V^{(i)})^2}} = \frac{THD}{\sqrt{THD^2 + 1}}, \quad (1.31)$$

For low levels of harmonics, a Taylor series expansion can be applied to show

$$DIN \approx THD \left(1 - \frac{1}{2} THD \right). \quad (1.32)$$

1.4.17 Distortion power (D)

Harmonic distortion complicates the computation of power and power factors because voltage and current equations (and their products) contain harmonic components. Under sinusoidal conditions, there are four standard quantities associated with power:

- fundamental apparent power (S_1) is the product of the rms fundamental voltage and current;
- fundamental active power (P_1) is the average rate of delivery of energy;
- fundamental reactive power (Q_1) is the portion of the apparent power that is oscillatory; and
- power factor at fundamental frequency (or displacement factor) $\cos \theta_1 = P_1/S_1$.

The relationship between these quantities is defined by the power triangle:

$$(S_1)^2 = (P_1)^2 + (Q_1)^2. \quad (1.33)$$

If voltage and current waveforms are nonsinusoidal (Eq. 1.1), the above equation does not hold because S contains cross terms in the products of the Fourier series that correspond to voltages and currents of different frequencies, whereas P and Q correspond to voltages and currents of the same frequency. It has been suggested to account for these cross terms as follows [5,50,51]:

$$S^2 = P^2 + Q^2 + D^2, \quad (1.34)$$

where apparent power

$$S = V_{\text{rms}} I_{\text{rms}} = \sqrt{\sum_{h=0,1,2,3,\dots}^H (V_{\text{rms}}^{(h)})^2} \sqrt{\sum_{h=0,1,2,3,\dots}^H (I_{\text{rms}}^{(h)})^2}. \quad (1.35)$$

Total real power

$$P = \sum_{h=0,1,2,3,\dots}^H V_{\text{rms}}^{(h)} I_{\text{rms}}^{(h)} \cos(\theta_h), \text{ where } \theta_h = \alpha_h - \beta_h. \quad (1.36)$$

Total reactive power

$$Q = \sum_{h=0,1,2,3,\dots}^H V_{\text{rms}}^{(h)} I_{\text{rms}}^{(h)} \sin(\theta_h). \quad (1.37)$$

Distortion power

$$D = \sum_{m=0}^{H-1} \sum_{n=m+1}^H \left[\left(V_{\text{rms}}^{(m)} \right)^2 \left(I_{\text{rms}}^{(n)} \right)^2 + \left(V_{\text{rms}}^{(n)} \right)^2 \left(I_{\text{rms}}^{(m)} \right)^2 - 2 V_{\text{rms}}^{(m)} I_{\text{rms}}^{(n)} \cos(\theta_m - \theta_n) \right]. \quad (1.38)$$

Also, the fundamental power factor (displacement factor) in the case of sinusoidal voltage and nonsinusoidal currents is defined as [8]

$$\cos \theta_1 = \frac{P_1}{\sqrt{(P_1)^2 + (Q_1)^2}}, \quad (1.39)$$

and the harmonic displacement factor is defined as [8]

$$\lambda = \frac{P_1}{\sqrt{(P_1)^2 + (Q_1)^2 + (D)^2}}. \quad (1.40)$$

The power and displacement factor quantities are shown in addition to the power quantities in Fig. 1.22. A detailed comparison of various definitions of the distortion power D is given in Ref. [51].

1.4.18 Application Example 1.1: Calculation of input/output currents and voltages of a three-phase thyristor rectifier

The circuit of Fig. E1.1.1 represents a phase-controlled, three-phase thyristor rectifier. The balanced input line-to-line voltages are $v_{ab} = \sqrt{2}240 \sin \omega t$, $v_{bc} = \sqrt{2}240 \sin(\omega t - 120^\circ)$, and $v_{ca} = \sqrt{2}240 \sin(\omega t - 240^\circ)$, where $\omega = 2\pi f$ and $f = 60\text{Hz}$. Each of the six thyristors can be modeled by a self-commutated electronic switch and a diode in series, as is illustrated in Figs. E1.1.1 and E1.1.2. Use the following PSpice models for the MOSFET and the diode:

- Model for self-commutated electronic switch (MOSFET):

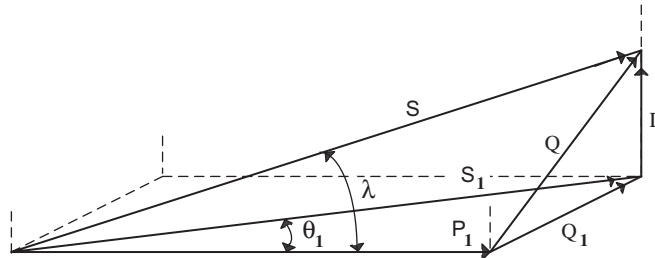


FIG. 1.22 Phasor diagram of different parameters of electric power under nonsinusoidal conditions.

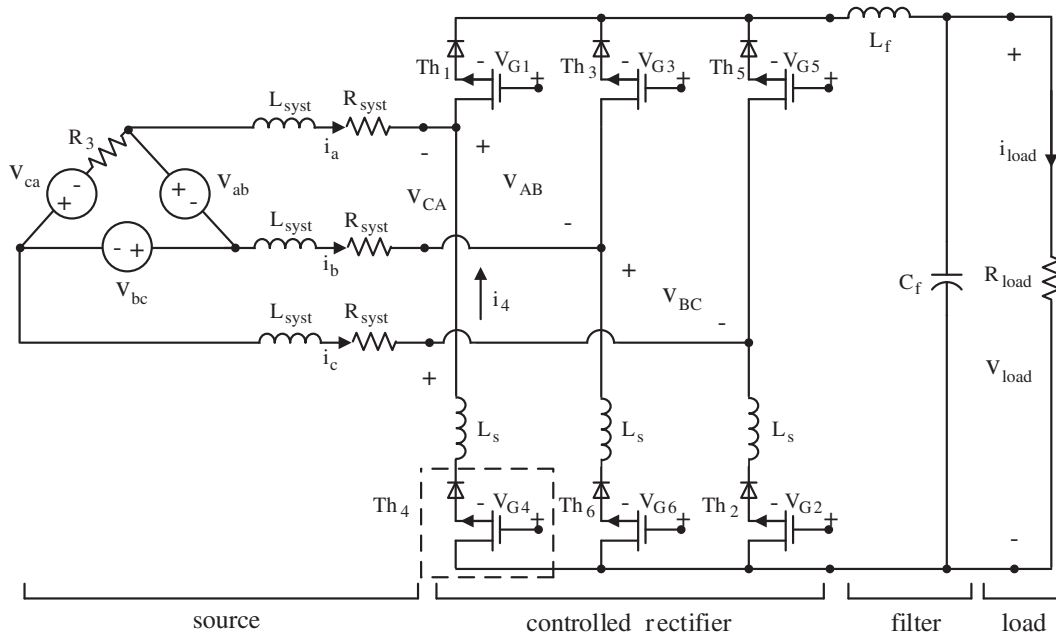


FIG. E1.1.1 Controlled three-phase, full-wave thyristor rectifier.

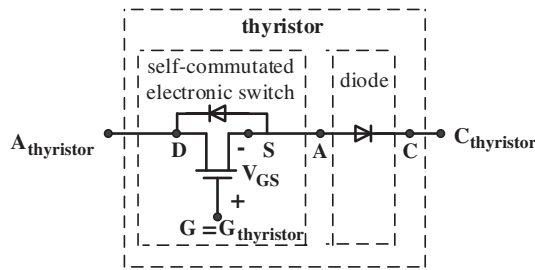


FIG. E1.1.2 Model for thyristor consisting of self-commutated switch and diode.

```
.modelSMMNMOS(Level = 3 Gamma = 0
+Delta = 0 Eta = 0 Theta = 0 Kappa = 0 Vmax = 0
+XJ = 0 TOX = 100 N UO = 600 PHI = 0.6 RS = 42.69m KP = 20.87u L = 2u
+W = 2.9 VTO = 3.487 RD = 0.19 CBD = 200n PB = 0.8 MJ = 0.5 CGSO = 3.5n
+CGDO = 100p RG = 1.2 IS = 10f)
```

- Model for diode:

```
.model D1N4001 D(IS = 10-12)
```

The parameters of the circuit are as follows:

- System resistance and inductance $L_{\text{syst}} = 300 \mu\text{H}$, $R_{\text{syst}} = 0.05 \Omega$;
- Load resistance $R_{\text{load}} = 10 \Omega$;
- Filter capacitance and inductance $C_f = 500 \mu\text{F}$, $L_f = 5 \text{mH}$; and
- Snubber inductance $L_s = 5 \text{nH}$.

Note that R_3 must be nonzero because PSpice cannot accept three voltage sources connected within a loop.

Perform a PSpice analysis plotting input line-to-line voltages v_{ab} , v_{bc} , v_{ca} , V_{AB} , V_{BC} , V_{CA} , input currents i_a , i_b , i_c , and the rectified output voltage v_{load} and output current i_{load} for $\alpha = 0$ degree during the time interval $0 \leq t \leq 60 \text{ms}$. Print the input program. Repeat the computation for $\alpha = 50$ and 150 degrees.

Solution to Application Example 1.1 *Calculation of input/output currents and voltages of a three-phase thyristor rectifier*

The PSpice program codes are provided in Table E1.1.1. Plots of input current i_a (top), line-to-line voltage v_{AB} (second from top), line-to-line voltages v_{ab} , v_{bc} , v_{ca} , and output voltage v_{load} for a firing angle of $\alpha = 50$ degree are shown in Fig. E1.1.3.

TABLE E1.1.1 PSpice program codes for Application Example 1.1.

```
*thyristor rectifier
Va 1 2 SIN(0V 339.41V 60Hz 0 0)
Vb 2 3 SIN(0V 339.41V 60Hz 5.556m 0)
Vc 3 3a SIN(0V 339.41V 60Hz 11.111m 0)
R3 3a 1 0.01
Rarb 14 0 0.01
*5deg. delay=0.231ms
*50deg. delay=2.31ms
*150deg. delay=6.94ms
*Vfet1 sp1 A1 pulse(0 15 0.231m 1u 1u 9m 16.667ms)
*Vfet2 sp2 A2 pulse(0 15 3.01m 1u 1u 9m 16.667ms)
*Vfet3 sp3 A3 pulse(0 15 5.79m 1u 1u 9m 16.667ms)
*Vfet4 sp4 A4 pulse(0 15 8.56m 1u 1u 9m 16.667ms)
*Vfet5 sp5 A5 pulse(0 15 11.32m 1u 1u 9m 16.667ms)
*Vfet6 sp6 A6 pulse(0 15 14.12m 1u 1u 9m 16.667ms)
Vfet1 sp1 A1 pulse(0 15 2.31m 1u 1u 9m 16.667ms)
Vfet2 sp2 A2 pulse(0 15 5.089m 1u 1u 9m 16.667ms)
Vfet3 sp3 A3 pulse(0 15 7.869m 1u 1u 9m 16.667ms)
Vfet4 sp4 A4 pulse(0 15 10.639m 1u 1u 9m 16.667ms)
Vfet5 sp5 A5 pulse(0 15 13.399m 1u 1u 9m 16.667ms)
Vfet6 sp6 A6 pulse(0 15 16.199m 1u 1u 9m 16.667ms)
```

TABLE E1.1.1 PSpice program codes for Application Example 11.—Cont'd

```

*Vfet1 sp1 A1 pulse(0 15 6.94m 1u 1u 9m 16.667ms)
*Vfet2 sp2 A2 pulse(0 15 9.72m 1u 1u 9m 16.667ms)
*Vfet3 sp3 A3 pulse(0 15 12.50m 1u 1u 9m 16.667ms)
*Vfet4 sp4 A4 pulse(0 15 15.27m 1u 1u 9m 16.667ms)
*Vfet5 sp5 A5 pulse(0 15 18.04m 1u 1u 9m 16.667ms)
*Vfet6 sp6 A6 pulse(0 15 20.83m 1u 1u 9m 16.667ms)
RAB 7 8 10Meg
M1 7 sp1 A1 A1 SMM
M2 14 sp2 A2 A2 SMM
M3 8 sp3 A3 A3 SMM
M4 14 sp4 A4 A4 SMM
M5 9 sp5 A5 A5 SMM
M6 14 sp6 A6 A6 SMM
La 1 4300uH
Ra 4 7 0.05
Lb 2 5300uH
Rb 5 8 0.05
Lc 3 6300uH
Rc 6 9 0.05
d1 A1 13 D1N4001
d2 A2 12 D1N4001
L2 12 9 5nH
d3 A3 13 D1N4001
d4 A4 10
D1N4001
L4 10 7 5nH
d5 A5 13 D1N4001
d6 A6 11 D1N4001
L6 11 8 5nH
Lf 13 15 5mH
Cf 15 14500u
R1 15 14 10
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69M kp=20.87u
+l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+cgdo=100p rg=1.2 is=10f)
.tran 0.01u 60m 30m uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m gmin=1m
.four 60 I(ra) V(RAB)
.probe
.end

```

Calculation of input/output currents and voltages of a three-phase thyristor rectifier: solution (see also Fig. E1.1.3).

Note: All comment lines must be preceded with an asterisk (*) while continuation calculation statements must be preceded with a plus sign (+).

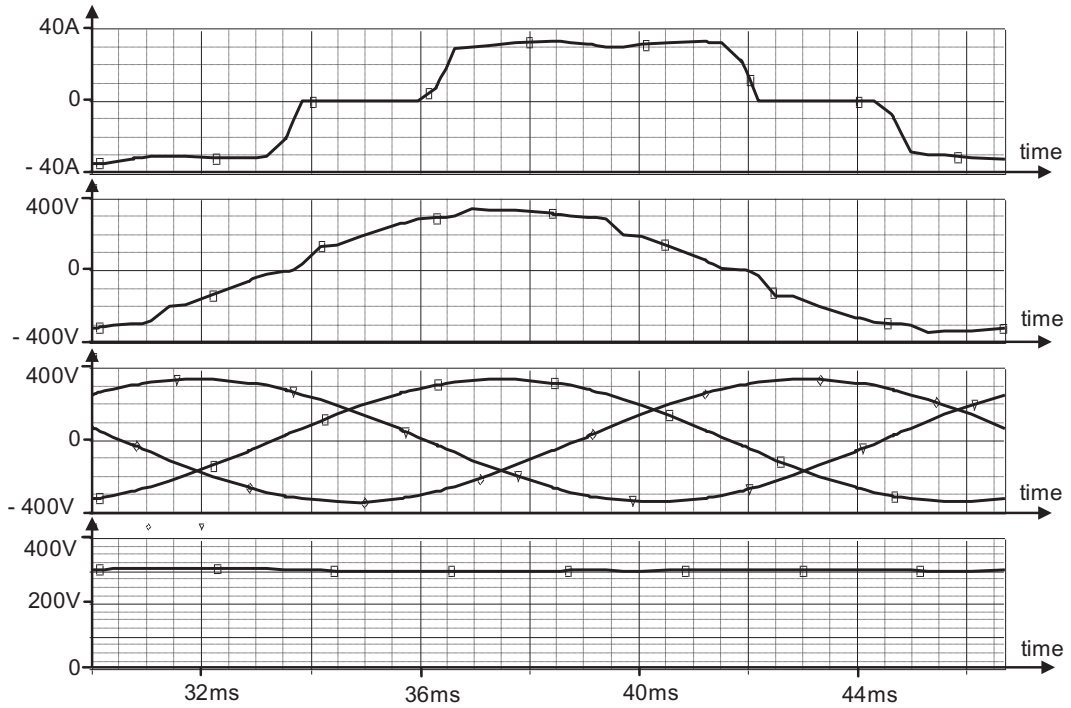


FIG. E1.1.3 Plots of input current i_a (top), line-to-line voltage v_{AB} (second from top), line-to-line voltages v_{ab} , v_{bc} , v_{ca} , and output voltage v_{load} for a firing angle of $\alpha = 50$ degree.

1.4.19 Application Example 1.2: Calculation of input/output currents and voltages of a three-phase rectifier with one self-commutated electronic switch

An inexpensive and popular rectifier is illustrated in Fig. E1.2.1. It consists of four diodes and one self-commutated electronic switch operated at, for example, $f_{\text{switch}} = 600\text{Hz}$. The balanced input line-to-line voltages are $v_{ab} = \sqrt{2} \cdot 240 \sin \omega t$, $v_{bc} = \sqrt{2} \cdot 240 \sin(\omega t - 120^\circ)$, and $v_{ca} = \sqrt{2} \cdot 240 \sin(\omega t - 240^\circ)$, where $\omega = 2\pi f$ and $f = 60\text{Hz}$. Perform a PSpice analysis. Use the following PSpice models for the MOSFET and the diodes:

- Model for self-commutated electronic switch (MOSFET):

```
.MODEL SMMNMOS(LEVEL = 3 GAMMA = 0 DELTA = 0 ETA = 0 THETA = 0
+ KAPPA = 0 VMAX = 0 XJ = 0 TOX = 100n UO = 600 PHI = 0.6 RS = 42.69 M
+ KP = 20.87 u
+ L = 2 u W = 2.9 VTO = 3.487 RD = 0.19 CBD = 200n PB = 40.8 MJ = 0.5 CGSO = 3.5 n
+ CGDO = 100p RG = 1.2 IS = 10f)
```

- Model for diode:

```
.MODEL D1N4001 D(IS = 10-12)
```

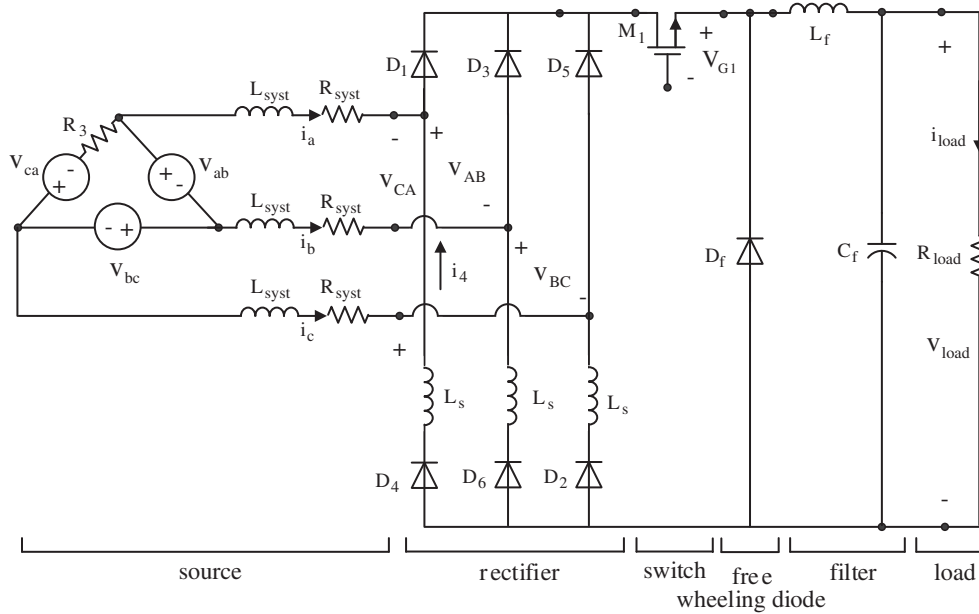


FIG. E1.2.1 Three-phase, full-wave rectifier with one self-commutated switch.

The parameters of the circuit are as follows:

- System resistance and inductance $L_{\text{syst}} = 10 \text{ mH}$, $R_{\text{syst}} = 0.05 \Omega$;
- Load resistance $R_{\text{load}} = 10 \Omega$;
- Filter capacitance and inductance $C_f = 500 \mu\text{F}$, $L_f = 5 \text{ mH}$; and
- Snubber inductance $L_s = 5 \text{ nH}$.

Note that R_3 must be nonzero because PSpice cannot accept three voltage sources connected within a loop. The freewheeling diode is required to reduce the voltage stress on the self-commutated switch.

Print the PSpice input program. Perform a PSpice analysis plotting input line-to-line voltages v_{ab} , v_{bc} , v_{ca} , v_{AB} , v_{BC} , v_{CA} , input currents i_a , i_b , i_c , and the rectified output voltage v_{load} and output current i_{load} for a duty ratio of $\delta = 50\%$ during the time interval $0 \leq t \leq 60 \text{ ms}$ (Fig. E1.2.1).

Solution to Application Example 1.2 *Calculation of input/output currents and voltages of a three-phase rectifier with one self-commutated electronic switch*

The PSpice program codes are provided in Table E1.2.1. Plots of input line current i_a (top), line-to-line voltage v_{AB} with (extreme) commutating notches (second from top), line-to-line voltages v_{ab} , v_{bc} , and v_{ca} are shown in Fig. E1.2.2.

TABLE E1.2.1 PSpice program codes for Application Example 1.2.

```

*rectifier with one self-commutated switch
Va 1 2 SIN(0V 339.41V 60Hz 0 0)
Vb 2 3 SIN(0V 339.41V 60Hz 5.56m 0)
Vc 3 3a SIN(0V 339.41V 60Hz 11.11m 0)
R3 3a 1 0.1
Rarb 14 0 0.1
RAB 7 8 10Meg
Vfet sp. 15 pulse(0 15 0 1u 1u 833u 1.67m)
M1 13 sp. 15 15 SMM
La 1 4 10mH
Ra 4 7 0.05
Lb 2 5 10mH
Rb 5 8 0.05
Lc 3 6 10mH
Rc 6 9 0.05
d1 7 13 D1N4001
d2 14 12 D1N4001
L2 12 9 5nH
d3 8 13 D1N4001
d4 14 10 D1N4001
L4 10 7 5nH
d5 9 13 D1N4001
d6 14 11 D1N4001
L6 11 8 5nH
Df 14 15 D1N4001
Lf 15 16 5mH
Cf 16 14500u
R1 16 14 10
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69M kp=20.87u
+l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+cgdo=100p rg=1.2 is=10f)
.tran .010u 60m 30m uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m gmin=1m
.four 60 I(ra) V(RAB)
.probe
.end

```

Calculation of input/output currents and voltages of a three-phase rectifier with one self-commutated electronic switch: solution (see also Fig. E1.2.2).

Note: All comment lines must be preceded with an asterisk (*) while continuation calculation statements must be preceded with a plus sign (+).

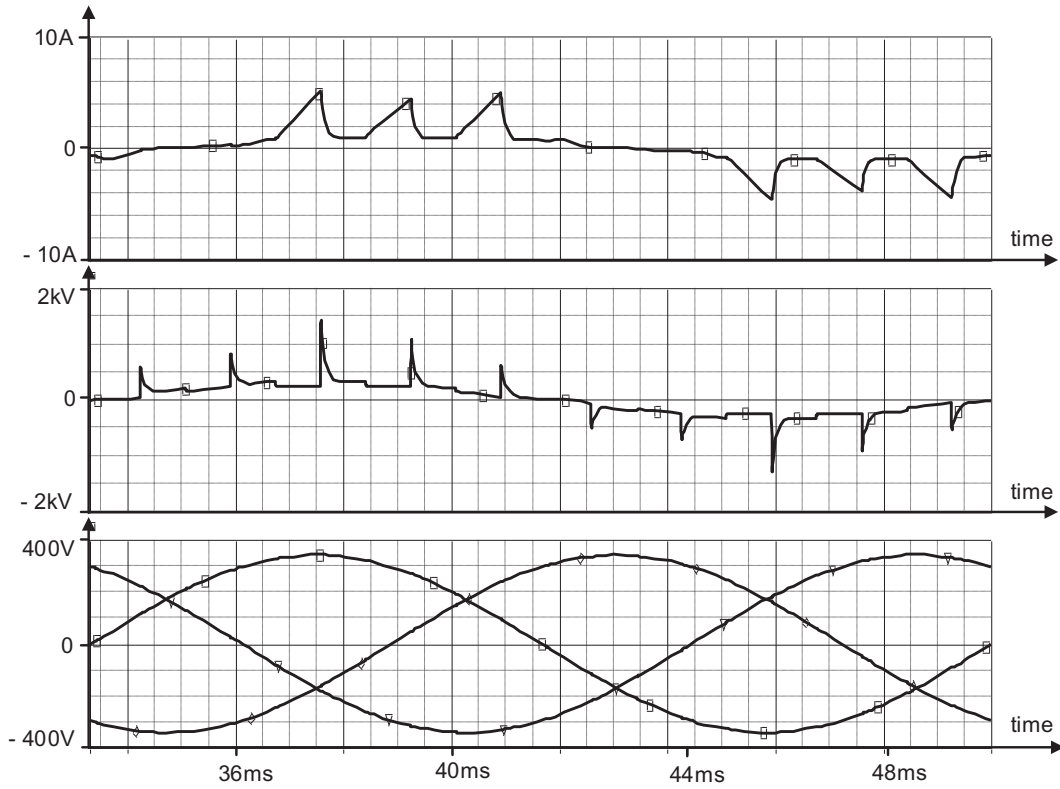


FIG. E1.2.2 Input line current i_a (top), line-to-line voltage v_{AB} with (extreme) commutating notches (second from top), line-to-line voltages v_{ab} , v_{bc} , v_{ca} .

1.4.20 Application Example 1.3: Calculation of input currents of a brushless DC motor in full-on mode (three-phase permanent-magnet motor fed by a six-step inverter)

In the drive circuit of Fig. E1.3.1 the DC input voltage is $V_{DC} = 300$ V. The inverter is a six-pulse or six-step or full-on inverter consisting of six self-commutated (e.g., MOSFET) switches. The electric machine is a three-phase permanent-magnet motor represented by induced voltages (e_A , e_B , e_C), resistances, and leakage inductances (leakage inductance of one stator phase with respect to the fictitious current excitation of one permanent magnet) for all three phases. The induced voltage of the stator winding (phase A) of the permanent-magnet motor is

$$e_A = 160 \sin (\omega t + \theta) \text{ [V]},$$

where $\omega = 2\pi f_1$ and $f_1 = 1500$ Hz. Correspondingly,

$$e_B = 160 \sin (\omega t + 240^\circ + \theta) \text{ [V]},$$

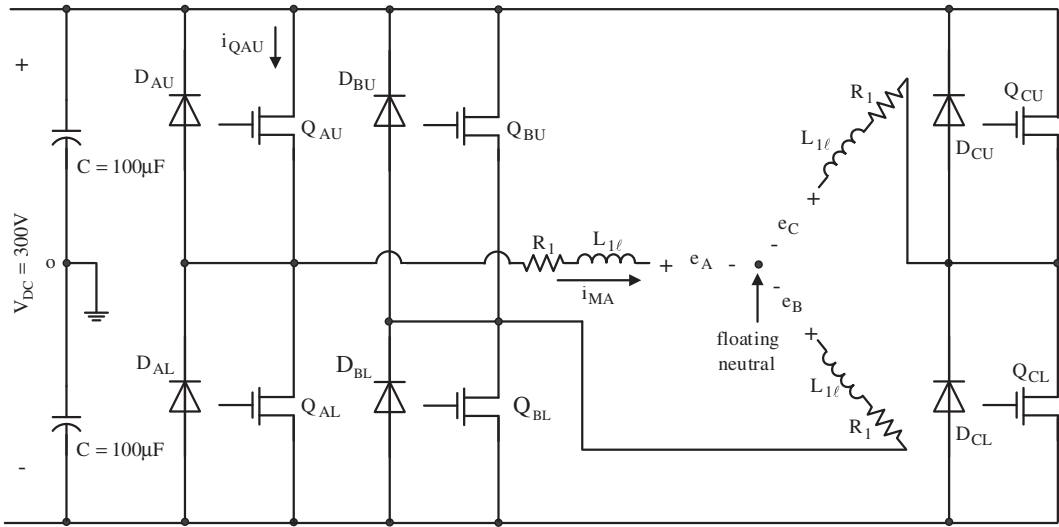


FIG. E1.3.1 Circuit of brushless DC motor consisting of DC source, inverter, and permanent-magnet machine.

$$e_C = 160 \sin (\omega t + 120^\circ + \theta) \text{ [V]}.$$

The resistance R_1 and the leakage inductance $L_{1\ell}$ of one of the phases are 0.5Ω and $50\mu\text{H}$, respectively.

The magnitude of the gating voltages of the six MOSFETs is $V_{G\max} = 15\text{ V}$. The gating signals with their phase sequence are shown in Fig. E1.3.2. Note that the phase sequence of the induced voltages (e_A, e_B, e_C) and that of the gating signals (see Fig. E1.3.2) must be the same. If these phase sequences are not the same, then no periodic solution for the machine currents (i_{MA}, i_{MB}, i_{MC}) can be obtained.

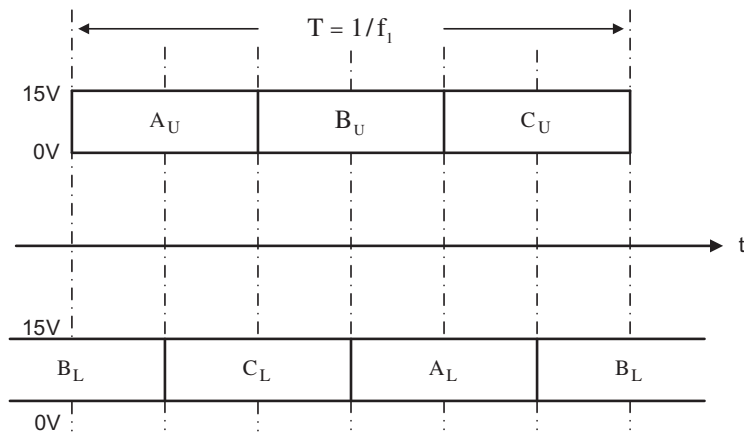


FIG. E1.3.2 Sequence of gating signals for brushless DC motor in six-step (six-pulse) operation.

The models of the enhancement metal-oxide semiconductor field-effect transistors and those of the (external) freewheeling diodes are as follows:

- Model for self-commutated electronic switch (MOSFET):

```
.MODEL SMMNMOS(LEVEL = 3 GAMMA = 0 DELTA = 0 ETA = 0 THETA = 0
+ KAPPA = 0 VMAX = 0 XJ = 0 TOX = 100n UO = 600 PHI = 0.6 RS = 42.69 M
+ KP = 20.87 u
+ L = 2 u W = 2.9 VTO = 3.487 RD = 0.19 CBD = 200n PB = 0.8 MJ = 0.5 CGSO
+ = 3.5n CGDO = 100p RG = 1.2 IS = 10f)
```

- Model for diode:

```
.MODEL D1N4001 D(IS = 10-12)
```

- Using PSpice, compute and plot the current of MOSFET Q_{AU} (e.g., i_{QAU}) and the motor current of phase A (e.g., i_{MA}) for the phase angles of the induced voltages $\theta = 0, +30, +60, -30$, and -60 degrees. Note that the gating signal frequency of the MOSFETs corresponds to the frequency f_1 , that is, full-on mode operation exists. For switching sequence, see Fig. E1.3.2.
- Repeat part a for $\theta = +30^\circ$ with reversed phase sequence.

Note the following:

- The step size for the numerical solution should be in the neighborhood of $\Delta t = 0.05 \mu s$.
- To eliminate computational transients due to inconsistent initial conditions compute at least three periods of all quantities and plot the last (third) period of i_{QAU} and i_{MA} for all five cases, where θ assumes the values given above.

Solution to Application Example 1.3 *Calculation of input currents of a brushless DC motor in full-on mode (three-phase permanent-magnet motor fed by a six-step inverter)*

- The PSpice program codes are provided in Table E1.3.1. Plots of MOSFET and motor currents for phase angles of $\theta = 0, 30, 60$, and -60 degrees are shown in Fig. E1.3.3.
- The reversed-phase sequence will result in nonperiodic waveshapes, and thus this solution is not meaningful.

TABLE E1.3.1 PSpice program codes for Application Example 1.3.

```
*brushless DC motor drive
Va 1a st SIN(0160V 1500Hz 0 0 60)
Vb 3a st SIN(0160V 1500Hz 0 0180)
Vc 5a st SIN(0160V 1500Hz 0 0300)
Vdc1 7 ODC 150V
Vdc2 8 ODC -150
```

Continued

TABLE E1.3.1 PSpice program codes for Application Example 13—Cont'd

```

Rshunt st 0 10Meg
*5deg. delay=0.231ms
*50deg. delay=2.31ms
*150deg. delay=6.94ms
Vfet1 sp1 2 pulse(0 15 0 1u 1u 222.22us 666.66us)
Vfet2 sp2 6 pulse(0 15 222.22us 1u 1u 222.22us 666.66us)
Vfet3 sp3 4 pulse(0 15 444.44us 1u 1u 222.22us 666.66us)
Vfet4 sp4 8 pulse(0 15 333.33us 1u 1u 222.22us 666.66us)
Vfet5 sp5 8 pulse(0 15 555.51us 1u 1u 222.22us 666.66us)
Vfet6 sp6 8 pulse(0 15 111.11us 1u 1u 222.22us 666.66us)
Mau 7 sp1 2 2 SMM
Mbu 7 sp2 6 6 SMM
Mc1 7 sp3 4 4 SMM
Ma1 2 sp4 8 8 SMM
Mb1 6 sp5 8 8 SMM
Mc1 4 sp6 8 8 SMM
L1 1a 1 50u
R1 1 2 0.5
L3 3a 3 50u
R3 3 4 0.5
L5 5a 5 50u
R5 5 6 0.5
C1 7 0 100u
C2 0 8 100u
Dau 2 7 D1N4001
Dbu 6 7 D1N4001
Da1 8 2 D1N4001
Db1 8 6 D1N4001
Dcu 4 7 D1N4001
Dc1 8 4 D1N4001
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69m
kp=20.87u
+l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+cgdo=100p rg=1.2 is=10f)
.tran 0.05u 2m uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m
.four 1500 I(L1)
.probe
.end

```

Calculation of input currents of a brushless DC motor in full-on mode (three-phase permanent-magnet motor fed by a six-step inverter): solution (see also Fig. E1.3.3).

Note: All comment lines must be preceded with an asterisk (*) while continuation calculation statements must be preceded with a plus sign (+).



FIG. E1.3.3 (A) MOSFET (upper graph) and motor (lower graph) current for phase angle $\theta = 0$ degree. (B) MOSFET (upper graph) and motor (lower graph) current for phase angle $\theta = 30$ degree.

(Continued)

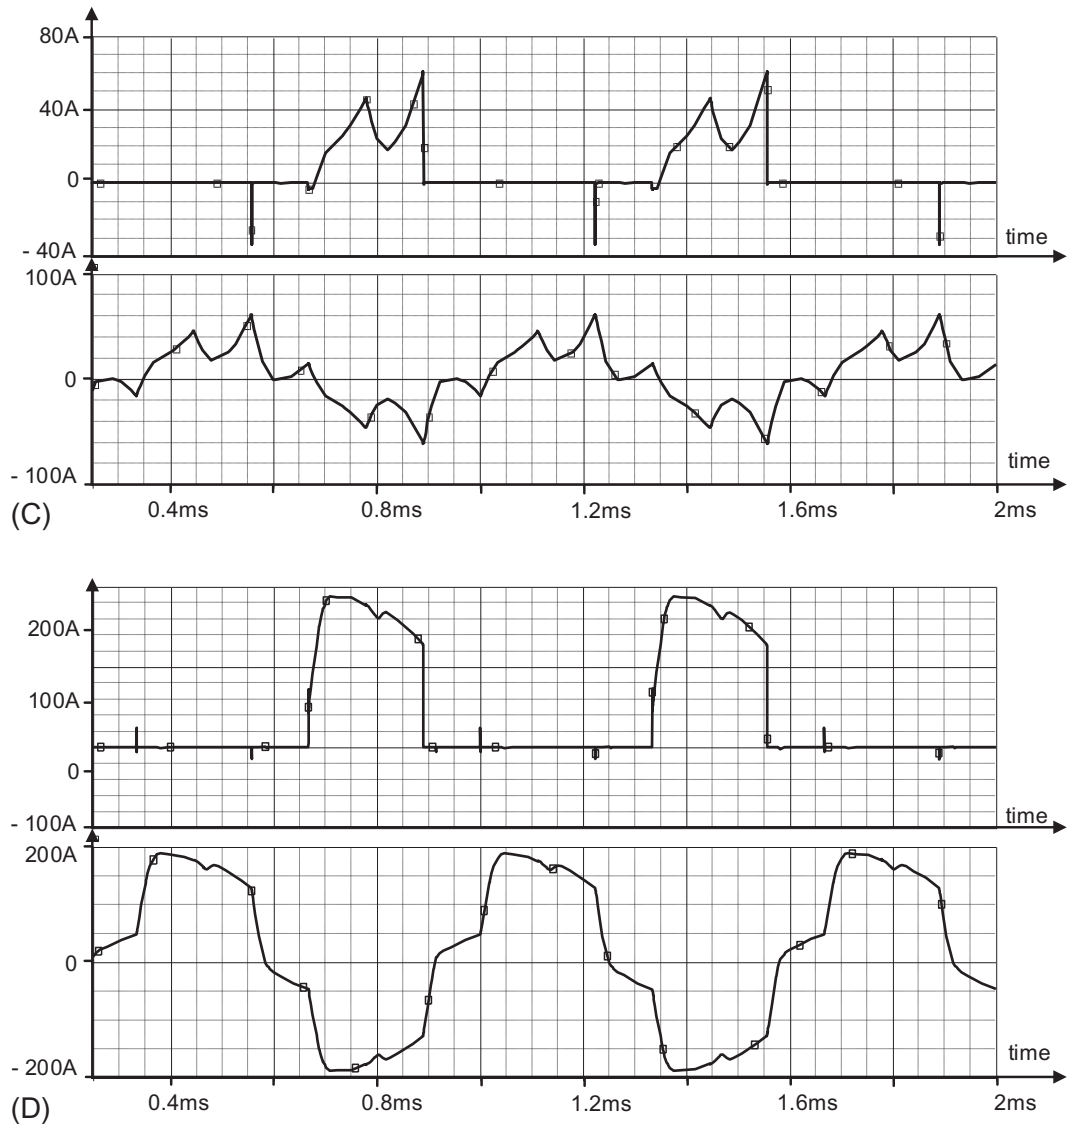


FIG. E1.3.3, cont'd, (C) MOSFET (upper graph) and motor (lower graph) current for phase angle $\theta = 60^\circ$. (D) MOSFET (upper graph) and motor (lower graph) current for phase angle $\theta = -60^\circ$.

1.4.21 Application Example 1.4: Calculation of the efficiency of a polymer electrolyte membrane (PEM) fuel cell used as energy source for a variable-speed drive

- Calculate the power efficiency of a PEM fuel cell.
- Find the specific power density of this PEM fuel cell expressed in W/kg-force.
- How does this specific power density compare with that of a lead-acid battery [52]?

Hints:

- The nominal energy density of hydrogen is 28 kWh/kg-force, which is significantly larger than that of gasoline (12.3 kWh/kg-force). This makes hydrogen a desirable fuel for automobiles.
- The weight density of hydrogen is $\gamma = 0.0899$ g-force/liter.
- The oxygen atom has 8 electrons, 8 protons, and 8 neutrons.

A PEM fuel cell as specified by [53] has the following parameters:

Performance	Output power: $P_{\text{rat}} = 1200 \text{ W}^{\text{a}}$ Output current: $I_{\text{rat}} = 46 \text{ A}^{\text{a}}$ DC voltage range: $V_{\text{rat}} = 22\text{--}50 \text{ V}$ Operating lifetime: $T_{\text{life}} = 1500 \text{ h}^{\text{b}}$
Fuel	Composition: $C = 99.99\%$ dry gaseous hydrogen Supply pressure: $p = 10\text{--}250 \text{ PSIG}$ Consumption: $V = 18.5 \text{ SLP}^{\text{c}}$
Operating environment	Ambient temperature: $t_{\text{amb}} = 3\text{--}30^\circ\text{C}$ Relative humidity: $RH = 0\%\text{--}95\%$ Location: Indoors and outdoors ^d
Physical	Length · width · height: (56)(25)(33) cm Weight: $W = 13 \text{ kg-force}$
Emissions	Liquid water: $\text{H}_2\text{O} = 0.87 \text{ L}$ maximum per hour

^a Beginning of life, sea level, rated temperature range.

^b CO within the air (which provides the oxygen) destroys the proton exchange membrane.

^c At rated power output, SLP = standard liters per minute (standard flow).


^d Unit must be protected from inclement weather, sand, and dust.

Solution to Application Example 1.4 Calculation of the efficiency of a polymer electrolyte membrane (PEM) fuel cell used as energy source for a variable-speed drive

a) The power efficiency is defined by

$$\eta_{\text{power}} = (\text{rated electrical output power}) / (\text{hydrogen input power}) = P_{\text{out}} / P_{\text{in}}.$$

Method #1. The PEM fuel cell generates 0.87 L or 0.87 kg-force of water per hour by converting hydrogen and oxygen according to the relation



The atomic weights are

$$1\text{H} \triangleq 1.0080,$$

$$1\text{O} \triangleq 16.0000,$$

$$1\text{H}_2\text{O} \triangleq 18.0160.$$

The required weight of hydrogen to generate 0.87L of water per hour is $\frac{2}{18.0160} \cdot 0.87 \text{ kg-force} = 0.09658 \text{ kg-force}$. The energy input per hour in form of hydrogen is $(0.09658 \text{ kg-force}) \cdot (28 \text{ kWh/kg-force}) = 2704.26 \text{ Wh}$.

Output (electrical) power of PEM fuel cell $P_{\text{out}} = 1200 \text{ W}$.

Input (hydrogen) power (or energy per hour) of PEM fuel cell $P_{\text{in}} = 2704.26 \text{ W}$.

Power (energy per hour) efficiency $\eta_{\text{power}} = P_{\text{out}}/P_{\text{in}} = 0.4437 \text{ pu} \approx 44.4\%$.

Method #2. Hydrogen input power of PEM fuel cell is

$P_{\text{in}} = (\text{weight density of hydrogen}) \cdot (\text{hydrogen consumption during 1 h}) \cdot (\text{energy density of hydrogen})$.

With $(\text{hydrogen consumption during 1 h}) = 18.5 \text{ SLPM} \cdot 60 \text{ min/h} = (18.5)(60) \text{ L/h} = 1110 \text{ L/h}$, one obtains the input power in form of hydrogen:

$$P_{\text{in}} = (0.0899 \cdot 10^{-3} \text{ kg-force/L}) (1110 \text{ L/h}) (28 \cdot 10^3 \text{ W/kg-force}) = 2794 \text{ W}.$$

Power (energy per hour) efficiency

$$\eta_{\text{power}} = P_{\text{out}}/P_{\text{in}} = 0.4295 \text{ pu} \approx 43\%.$$

Conclusion. Both methods generate about the same efficiency for a PEM fuel cell.

b) The specific power density of this PEM fuel cell expressed in W/kg-force is defined as

$$\frac{P_{\text{out}}}{\text{weight}} = 1200 \text{ W} / 13 \text{ kg-force} = 92.3 \text{ W/kg-force}.$$

c) The specific power density of a PEM fuel cell is 92.3 W/kg-force as compared with that of a lead-acid battery of about 150 W/kg-force [52].

1.4.22 Application Example 1.5: Calculation of the currents of a wind-power plant PWM inverter feeding power into the power system

The circuit diagram of PWM inverter feeding power into the 240 V_{L-L} three-phase utility system is shown in Fig. E1.5.1 consisting of DC source, inverter, filter, and power system. The associated control circuit is given by a block diagram in Fig. E1.5.2.

Use the PSpice program (*windpower.cir*) listed in Table E1.5.1.

- Use “reverse” engineering and identify the nodes of Figs. E1.5.1 and E1.5.2, as used in the PSpice program. It may be advisable that you draw your own detailed circuit.
- Study the PSpice program *windpower.cir*. In particular, it is important that you understand the *poly* statements and the *subcircuit* for the comparator. You may ignore the statements for the filter between switch and inverter (see Fig. E1.5.1) if the node number exceeds the maximum number of 64 (note the student version of the PSpice program is limited to a maximum of 64 nodes).

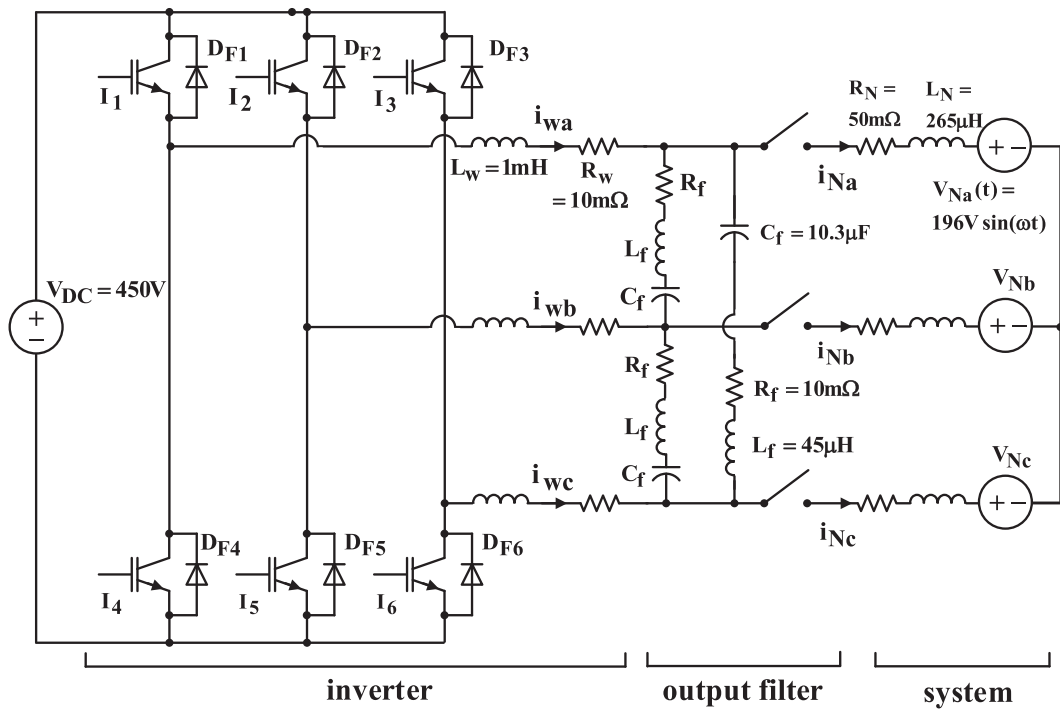


FIG. E1.5.1 Current-controlled, voltage-source PWM inverter feeding into utility system.

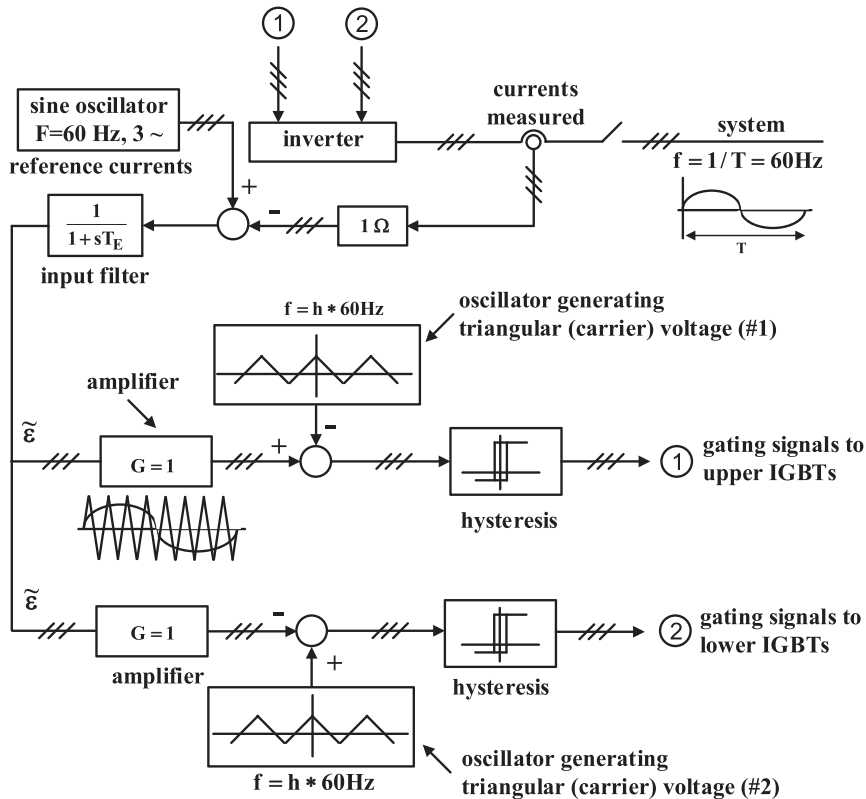


FIG. E1.5.2 Block diagram of control circuit for current-controlled, voltage-source PWM inverter.

TABLE E1.5.1 PSpice program codes for Application Example 1.5.

```

*windpower.cir; Is=40Arms, VDC=450V, phi=30
VDCsupply 2 0450
***switches
msw1 2 11 10 10 Mosfet
dsw1 10 2 diode
msw2 2 21 20 20 Mosfet
dsw2 20 2 diode
msw3 2 31 30 30 Mosfet
dsw3 30 2 diode
msw4 10 41 0 0 Mosfet
dsw4 0 10 diode
msw5 20 51 0 0 Mosfet
dsw5 0 20 diode
msw6 30 61 0 0 Mosfet
dsw6 0 30 diode
*** inductors
L_W1 10 15 1m
L_W2 20 25 1m
L_W3 30 35 1m
*** resistors or voltage sources for measuring current
R_W1 15 16 10m
R_W2 25 26 10m
R_W3 35 36 10m
***voltages serve as reference currents
vref1 12 0 sin (0 56.6 60 0 0 0)
vref2 22 0 sin (0 56.6 60 0 0 -120)
vref3 32 0 sin (0 56.6 60 0 0 -240)
*** voltages derived from load currents (measured with
shunts)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*** error signals derived from the difference between vref
and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtriangular 5 0 pulse (-10 10 0
+86.5u 86.5u 0.6u 173.6u)
*** gating signals for upper switches (mosfets) as a result
of comparison
+ between triangular voltage and error signals
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*** gating of lower switches

```

TABLE E1.5.1 PSpice program codes for Application Example 15—Cont'd

```
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*** filter must be removed because of node
+limit of 64 for PSpice, not required for Spice
*lfil 16 15b 45u
*lfi2 26 25b 45u
*lfi3 36 35b 45u
*rfil 15b 15c 0.01
*rfi2 25b 25c 0.01
*rfi3 35b 35c 0.01
*cfil 15c 26 10.3u
*cfi2 25c 36 10.3u
*cfi3 35c 16 10.3u
*** representation of utility system
RM1 16 18 50m
LM1 18 19265u
Vout1 19,123 sin(0 196 60 0 0 -30)
RM2 26 28 50m
LM2 28 29265u
Vout2 29,123 sin(0 196 60 0 0 -150)
RM3 36 38 50m
LM3 38 39 265u
Vout3 39,123 sin(0 196 60 0 0 -270)
**** comparator: v1-v2, vgs
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiod2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8100k
e4 9 10 8 2 1
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*** models
.model Mosfet nmos(level=3 gamma=0 kappa=0 tox=100n
rs=42.69m
+kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5
cgso=3.5n
+cgdo=100p rg=1.2 is=10f)
.model diode d(is=1p)
***options
.options abstol=0.01m chgtol=0.01m reltol=50m vntol=1m
itl5=0 itl4=200
***analysis request
.tran 5u 35m 16.67m 5u
***prepare for plotting
.probe
***final statement
.end
```

Calculation of the currents of a wind-power plant PWM inverter feeding power into the power system.

Note: All comment lines must be preceded with an asterisk (*) while continuation calculation statements must be preceded with a plus sign (+).

- c) Run this program with inverter inductance values of $L_w = 1 \text{ mH}$ for a DC voltage of $V_{DC} = 450 \text{ V}$.
- d) Plot the current supplied by the inverter to the power system $I(L_W1)$, the reference current $v_{\text{ref1}} = V(12) - V(0)$, and the phase power system's voltage $V_{\text{out1}} = V(19) - V(123)$.

Solution to Application Example 1.5 *Calculation of the currents of a wind-power plant PWM inverter feeding power into the power system*

The solution is presented in Fig. E1.5.3.

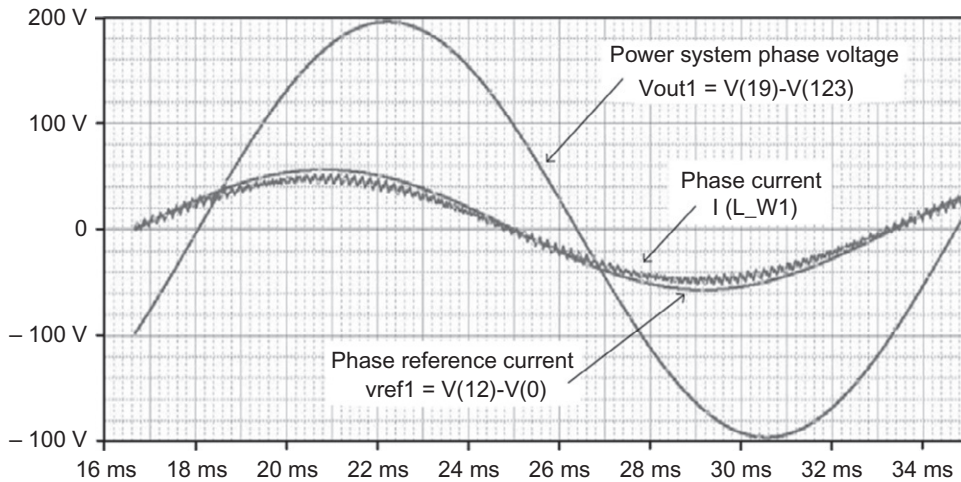


FIG. E1.5.3 Phase reference current $v_{\text{ref1}} = V(12) - V(0)$ and phase current $I(L_W1)$, and power system's phase voltage $V_{\text{out1}} = V(19) - V(123)$. The displacement power factor is about 30 degree leading, that is the phase current leads the phase voltage by 30 degree.

1.5 Effects of poor power quality on power system devices

Poor electric power quality has many harmful effects on power system devices and end users. What makes this phenomenon so insidious is that its effects are often not known until failure occurs. Therefore, insight into how disturbances are generated and interact within a power system and how they affect components is important for preventing failures. Even if failures do not occur, poor power quality and harmonics increase losses and decrease the life-time of power system components and end-use devices. Some of the main detrimental effects of poor power quality include the following:

- Harmonics add to the rms and peak value of the waveform. This means equipment could receive a damagingly high peak voltage and may be susceptible to failure. High voltage may also force power system components to operate in the saturation regions of their characteristics, producing additional harmonics and disturbances. The waveform

distortion and its effects are very dependent on the harmonic-phase angles. The rms value can be the same but depending on the harmonic-phase angles, the peak value of a certain dependent quantity can be large [54].

- There are adverse effects from heating, noise, and reduced life on capacitors, surge suppressors, rotating machines, cables and transformers, fuses, and customers' equipment (ranging from small clocks to large industrial loads).
- Utility companies are particularly concerned that distribution transformers may need to be derated to avoid premature failure due to overheating (caused by harmonics).
- Additional losses of transmission lines, cables, generators, AC motors, and transformers may occur due to harmonics (e.g., inter- and subharmonics) [55].
- Failure of power system components and customer loads may occur due to unpredicted disturbances such as voltage and/or current magnifications due to parallel resonance and ferroresonance.
- Malfunction of controllers and protective devices such as fuses and relays is possible [35].
- Interharmonics may occur which can perturb ripple control signals and can cause flicker at subharmonic levels.
- Harmonic instability [9] may be caused by large and unpredicted harmonic sources such as arc furnaces.
- Harmonic, subharmonic, and interharmonic torques may arise [32].

The effects of poor power quality on power systems and their components as well on end-use devices will be discussed in detail in subsequent chapters.

1.6 Standards and guidelines referring to power quality

Many documents for control of power quality have been generated by different organizations and institutes. These documents come in three levels of applicability and validity: guidelines, recommendations, and standards [5]:

- ***Power quality guidelines*** are illustrations and exemplary procedures that contain typical parameters and representative solutions to commonly encountered power quality problems.
- ***Power quality recommended practices*** recognize that there are many solutions to power quality problems and recommend certain solutions over others. Any operating limits that are indicated by recommendations are not required but should be targets for designs.
- ***Power quality standards*** are formal agreements between industry, users, and the government as to the proper procedure to generate, test, measure, manufacture, and consume electric power. In all jurisdictions, violation of standards could be used as evidence in courts of law for litigation purposes.

Usually the first passage of a power quality document is done in the form of the guidelines that are often based on an early document from an industry or government group. Guides are prepared and edited by different working groups. A recommended practice is usually an upgrade of guidelines, and a standard is usually an upgrade of a recommended practice.

The main reasons for setting guidelines, recommendations, and standards in power systems with nonsinusoidal voltages or currents are to keep disturbances to user equipment within permissible limits, to provide uniform terminology and test procedures for power quality problems, and to provide a common basis on which a wide range of engineering is referenced.

There are many standards and related documents that deal with power quality issues. A frequently updated list of available documents on power quality issues will simplify the search for appropriate information. Table 1.5 includes some of the commonly used guides, recommendations, and standards on electric power quality issues. The mostly adopted documents are these:

TABLE 1.5 Some guides, recommendations, and standards on electric power quality.

Source	Coverage <i>IEEE and ANSI documents</i>
IEEE 4: 1995	Standard techniques for high-voltage testing
IEEE 100: 1992	Standard dictionary of electrical and electronic terms
IEEE 120: 1989	Master test guide for electrical measurements in power circuits
IEEE 141: 1993	Recommended practice for electric power distribution for industrial plants. Effect of voltage disturbances on equipment within an industrial area
IEEE 142: 1993 (The Green Book)	Recommended practice for grounding of industrial and commercial power systems
IEEE 213: 1993	Standard procedure for measuring conducted emissions in the range of 300kHz to 25MHz from television and FM broadcast receivers to power lines
IEEE 241: 1990 (The Gray Book)	Recommended practice for electric power systems in commercial buildings
IEEE 281: 1994	Standard service conditions for power system communication equipment
IEEE 299: 1991	Standard methods of measuring the effectiveness of electromagnetic shielding enclosures
IEEE 367: 1996	Recommended practice for determining the electric power station ground potential rise and induced voltage from a power fault
IEEE 376: 1993	Standard for the measurement of impulse strength and impulse bandwidth
IEEE 430: 1991	Standard procedures for the measurement of radio noise from overhead power lines and substations
IEEE 446: 1987 (The Orange Book)	Recommended practice for emergency and standby systems for industrial and commercial applications (e.g., power acceptability curve [5] (fig. 2.26), CBEMA curve)
IEEE 449: 1990	Standard for ferroresonance voltage regulators
IEEE 465	Test specifications for surge protective devices

TABLE 1.5 Some guides, recommendations, and standards on electric power quality—Cont'd

Source	Coverage <i>IEEE and ANSI documents</i>
IEEE 472	Event recorders
IEEE 473: 1991	Recommended practice for an electromagnetic site survey (10kHz to 10GHz)
IEEE 493: 1997 (The Gold Book)	Recommended practice for the design of reliable industrial and commercial power systems
IEEE 519: 1993	Recommended practice for harmonic control and reactive compensation of static power converters
IEEE 539: 1990	Standard definitions of terms relating to corona and field effects of overhead power lines
IEEE 859: 1987	Standard terms for reporting and analyzing outage occurrences and outage states of electrical transmission facilities
IEEE 944: 1986	Application and testing of uninterruptible power supplies for power generating stations
IEEE 998: 1996	Guides for direct lightning strike shielding of substations
IEEE 1048: 1990	Guides for protective grounding of power lines
IEEE 1057: 1994	Standards for digitizing waveform recorders
IEEE P1100: 1992 (The Emerald Book)	Recommended practice for powering and grounding sensitive electronic equipment in commercial and industrial power systems
IEEE 1159: 1995	Recommended practice on monitoring electric power quality. Categories of power system electromagnetic phenomena
IEEE 1250: 1995	Guides for service to equipment sensitive to momentary voltage disturbances
IEEE 1346: 1998	Recommended practice for evaluating electric power system compatibility with electronics process equipment
IEEE P-1453	Flicker
IEEE/ANSI 18: 1980	Standards for shunt power capacitors
IEEE/ANSI C37	Guides for surge withstand capability (SWC) tests
IEEE/ANSI C50: 1982	Harmonics and noise from synchronous machines
IEEE/ANSI C57.110: 1986	Recommended practice for establishing transformer capability when supplying nonsinusoidal load currents
IEEE/ANSI C57.117: 1986	Guides for reporting failure data for power transformers and shunt reactors on electric utility power systems
IEEE/ANSI C62.45: 1992 (IEEE 587)	Recommended practice on surge voltage in low-voltage AC power circuits, including guides for lightning arresters applications
IEEE/ANSI C62.48: 1995	Guides on interactions between power system disturbances and surge protective devices

Continued

TABLE 1.5 Some guides, recommendations, and standards on electric power quality—Cont'd

Source	Coverage
	<i>IEEE and ANSI documents</i>
ANSI C84.1: 1982	American national standard for electric power systems and equipment voltage ratings (60Hz)
ANSI 70	National electric code
ANSI 368	Telephone influence factor
ANSI 377	Spurious radio frequency emission from mobile communication equipment
	<i>International Electrotechnical Commission (IEC) Documents</i>
IEC 38: 1983	Standard voltages
IEC 816: 1984	Guides on methods of measurement of short-duration transients on low-voltage power and signal lines. Equipment susceptible to transients
IEC 868: 1986	Flicker meter. Functional and design specifications
IEC 868-0: 1991	Flicker meter. Evaluation of flicker severity. Evaluates the severity of voltage fluctuation on the light flicker
IEC 1000-3-2:1994	Electromagnetic compatibility Part 3: Limits Section 2: Limits for harmonic current emissions (equipment absorbed current ≤ 16 A per phase)
IEC 1000-3-6: 1996	Electromagnetic compatibility Part 3: Limits Section 6: Emission limits evaluation for perturbing loads connected to MV and HV networks
IEC 1000-4: 1991	Electromagnetic compatibility Part 4: Sampling and metering techniques
EN 50160: 1994	Voltage characteristics of electricity supplied by public distribution systems
IEC/EN 60868-0	Flicker meter implementation
IEC 61000 standards on EMC	Electromagnetic compatibility (EMC)
	British Standards (BS) and European Norm Documents
BS5406 (based on IEC 555 part 2)	Control harmonic emissions from small domestic equipment
	Other documents
ER G5/3	Basis of standards in some other (mostly commonwealth) countries, but it does not include notching and burst harmonics
G5/4: 2001	Limiting harmonic voltage distortion levels on public networks at the time of connection of new nonlinear loads to ensure compatibility of all connected equipment
UIE-DWG-2-92-D	Produced by the Distribution Working Group (DWG) of Union Internationale Electrothermie (UIE). Includes guides for measurements of voltage dips and short-circuit interruptions occurring in industrial installations
UIE-DWG-3-92-G	UIE guides for quality of electrical supply for industrial installations, including types of disturbances and relevant standards
CBEMA Curves: 1983	Produced by the Computer Business Equipment Manufacturers Association for the design of the power supply for computers and electronic equipment
ITIC Curves (new CBEMA curves)	Information Technology Industry Council (the new name for CBEMA) application

- The North American Standards adopted by many countries of North and South America:
 - a. Institute of Electrical and Electronic Engineering (IEEE).
 - b. American National Standards Institute (ANSI).
 - c. Military Specifications (MIL-Specs) published by the US Department of Defense and Canadian Electric Association (CEA).
- British Standards (BS).
- European (Standards) Norms (EN).
- International Electrotechnical Commission (IEC).
- Computer Business Equipment Manufacturers Association (CBEMA) curves.
- Information Technology Industry Council (ITIC) curves [6] (fig. 2.13) and [9] (fig. 5.9).
- VDE (Verein Deutscher Elektrotechniker) [8] (p. 1) of the German association of individuals and groups concerned with electrotechnics.
- NEMA [9] (p. 20) of the US National Electric Manufacturers Association.

1.6.1 IEC 61000 series of standards for power quality

The IEC 61000 (or EN 61000) series [56], one of the most commonly used references for power quality in Europe, contains six parts, each with standards and technical reports [9]:

- Part 1 (General). Two sections cover application and interpretation aspects of EMC (electromagnetic compatibility).
- Part 2 (Environment). Twelve sections give classification of the electromagnetic environment and compatibility levels for different environments. Some aspects of this document include harmonic compatibility levels of residential LV (low voltage) systems (IEC 61000-2-2), industrial plants (IEC 61000-2-4), and residential MV (medium voltage) systems (IEC 61000-2-12).
- Part 3 (Limits). Eleven sections cover emission limits for harmonics and other disturbances. Some aspects of this document include harmonic current emission limits for equipment connected at LV with low (<16 A per phase) current (IEC 61000-3-2), flicker (IEC 61000-3-3), harmonic current emission limits for equipment connected at LV with high (more than 16 A per phase) current (IEC 61000-3-4), and assessment of emission limits for distorting loads in MV and HV (high voltage) power systems (IEC 61000-3-6).
- Part 4 (Testing and Measurement Techniques). Thirty-one sections describe standard methods for testing equipment of emission and immunity to different disturbances. Some aspects of this document include harmonic and interharmonic measurements and instrumentation (IEC 61000-4-7), dips and interruptions (IEC 61000-4-11), interharmonics (IEC 61000-4-13), and power quality measurement methods (IEC 61000-4-30).
- Part 5 (Installation and Mitigation Guidelines). Seven sections cover earthing (grounding), cabling, mitigation, and degrees of protection against EM (electromagnetic) disturbances.
- Part 6 (Generic Standards). Five sections cover immunity and emission standards for residential, commercial, industrial, and power station environments.

EN 61000-3-2 [2] introduces power quality limits (Table 1.6) for four classes of equipment:

TABLE 1.6 Harmonic limits defined by the EN 61000 Standards for different classes of equipment.

Harmonic order (h)	Class A (A)	Class B (A)	Class C (% of fundamental)	Class D (% of fundamental)
2	1.08	1.62	2	
3	2.30	3.45	$30 \cdot \lambda^a$	3.4
4	0.43	0.65		
5	1.44	2.16	10	1.9
6	0.30	0.45		
7	0.77	1.12	7	1
8	0.23	0.35		
9	0.40	0.60	5	0.5
10	0.18	0.28		
11	0.33	0.50	3	0.35
12	0.15	0.23		
13	0.21	0.32	3	0.296
14–40 (even)	1.84/h	2.76/h		
15–39 (odd)	2.25/h	3.338/h	3	3.85/h

^a λ is the circuit power factor.

- Class A: Balanced three-phase equipment and all other equipment, except those listed in other classes.
- Class B: Portable tools.
- Class C: Lighting equipment, including dimming devices.
- Class D: Equipment with a “special wave shape” and an input power of 75–600 W.

1.6.2 IEEE-519 standard

The United States (ANSI and IEEE) do not have such a comprehensive and complete set of power quality standards as the IEC. However, their standards are more practical and provide theoretical background on the phenomena. This has made them very useful reference documents, even outside of the United States. IEEE-Std 519 [1] is the IEEE recommended practices and requirements for harmonic control in electric power systems. It is one of the well-known documents for power quality limits. IEEE-519 is more comprehensive than IEC 61000-3-2 [2], but it is not a product standard. The first official version of this document was published in 1981. Product testing standards for the United States are now considered within TC77A/WG1 (TF5b) but are also discussed in IEEE. The current direction of the TC-77 working group is toward a global IEC standard for both 50/60 Hz and 115/230 V.

IEEE-519 contains 13 sections, each with standards and technical reports [11]:

- Section 1 (Introduction and Scope). Includes application of the standards.
- Section 2 (Definition and Letter Symbols).

- Section 3 (References). Includes standard references.
- Section 4 (Converter Theory and Harmonic Generation). Includes documents for converters, arc furnaces, static VAr compensators, inverters for dispersed generation, electronic control, transformers, and generators.
- Section 5 (System Response Characteristics). Includes resonance conditions, effect of system loading, and typical characteristics of industrial, distribution, and transmission systems.
- Section 6 (Effect of Harmonics). Detrimental effects of harmonics on motors, generators, transformers, capacitors, electronic equipment, meters, relaying, communication systems, and converters.
- Section 7 (Reactive Power Compensation and Harmonic Control). Discusses converter power factor, reactive power compensation, and control of harmonics.
- Section 8 (Calculation Methods). Includes calculations of harmonic currents, telephone interference, line notching, distortion factor, and power factor.
- Section 9 (Measurements). For line notching, harmonic voltage and current, telephone interface, flicker, power factor improvement, instrumentation, and statistical characteristics of harmonics.
- Section 10 (Recommended Practices for Individual Consumers). Addresses standard impedance, customer voltage distortion limits, customer application of capacitors and filters, effect of multiple sources at a single customer, and line notching calculations.
- Section 11 (Recommended Harmonic Limits on the System). Recommends voltage distortion limits on various voltage levels, TIF limits vs voltage level, and IT products.
- Section 12 (Recommended Methodology for Evaluation of New Harmonic Sources).
- Section 13 (Bibliography). Includes books and general discussions.

IEEE-519 sets limits on the voltage and current harmonics distortion at the point of common coupling (PCC, usually the secondary of the supply transformer). The total harmonic distortion at the PCC is dependent on the percentage of harmonic distortion from each nonlinear device with respect to the total capacity of the transformer and the relative load of the system. There are two criteria that are used in IEEE-519 to evaluate harmonics distortion:

- limitation of the harmonic current that a user can transmit/inject into utility system (THD_i) and
- limitation of the voltage distortion that the utility must furnish the user (THD_v).

The interrelationship of these two criteria shows that the harmonic problem is a system problem and not tied just to the individual load that generates the harmonic current.

Tables 1.7 and 1.8 list the harmonic current and voltage limits based on the size of the user with respect to the size of the power system to which the user is connected [1,57].

The short-circuit current ratio (R_{SC}) is defined as the ratio of the short-circuit current (available at the point of common coupling) to the nominal fundamental load current (Fig. 1.23):

$$R_{SC} = \frac{|\tilde{I}_{SC}|}{\tilde{I}_L}. \quad (1.41)$$

TABLE 1.7 IEEE-519 harmonic current limits [1,57] for nonlinear loads at the point of common coupling (PCC) with other loads at voltages of 2.4–69 kV.

Maximum harmonic current distortion at PCC (% of fundamental)						
I_{sc}/I_L	Harmonic order (odd harmonics) ^a					THD _i
	$h < 11$	$11 \leq h < 17$	$17 \leq h < 23$	$23 \leq h < 35$	$h \geq 35$	
$< 20^b$	4.0	2.0	1.5	0.6	0.3	5.0
20–50	7.0	3.5	2.5	1.0	0.5	8.0
50–100	10.0	4.5	4.0	1.5	0.7	12.0
100–1000	12.0	5.5	5.0	2.0	1.0	15.0
> 1000	15.0	7.0	6.0	2.5	1.4	20.0


^a Even harmonics are limited to 25% of the odd harmonic limits above.

^b All power generation equipment is limited to these values of current distortion, regardless of the actual I_{sc}/I_L .

I_{sc} , maximum short-circuit current at PCC; I_L , maximum load current (fundamental frequency) at PCC; for PCCs from 69 to 138 kV, the limits are 50% of the limits above. A case-by-case evaluation is required for PCCs of 138 kV and above.

TABLE 1.8 IEEE-519 harmonic voltage limits [1,57] for power producers (public utilities or cogenerators).

Harmonic voltage distortion (% at PCC)			
	2.3–69 kV	69–138 kV	> 138 kV
Maximum for individual harmonics	3.0	1.5	1.0
Total harmonic distortion (THD _v)	5.0	2.5	1.5

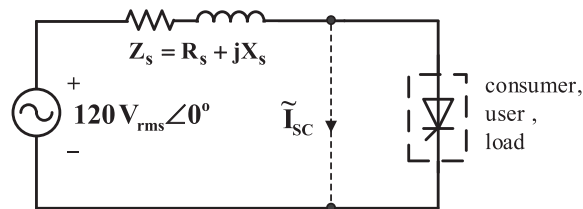**FIG. 1.23** Equivalent circuit of power system and nonlinear load. Z_s is small (or I_{sc} is large) for strong systems, and Z_s is large (or I_{sc} is small) for weak systems.

Thus the size of the permissible nonlinear user load increases with the size of the system; that is, the stronger the system, the larger the percentage of harmonic current the user is allowed to inject into the utility system.

Table 1.8 lists the amount of voltage distortion [1,57] specified by IEEE-519 that is acceptable for a user as provided by a utility. To meet the power quality values of Tables 1.7 and 1.8, cooperation among all users and the utility is needed to ensure that no one user deteriorates the power quality beyond these limits. The values in Table 1.8 are low enough to ensure that equipment will operate correctly.

1.7 Harmonic modeling philosophies

For the simulation and modeling of power systems, the dynamic operation is normally subdivided into well-defined quasi steady-state regions [5]. Differential equations representing system dynamics in each region are transformed into algebraic relations, and the circuit is solved at the fundamental frequency (50 or 60Hz) in terms of voltage and current phasors.

Modern power systems have many nonlinear components and loads that produce voltage and current harmonics. By definition, harmonics result from periodic steady-state conditions, and therefore their simulation should also be formulated in terms of harmonic phasors. Considering the complicated nature of many nonlinear loads (sources) and their couplings with the harmonic power flow, sophisticated modeling techniques are required for accurate simulation. Three techniques are usually used for harmonic analysis of power systems in the presence of nonlinear loads and/or components: time-domain simulation, frequency (harmonic)-domain modeling, and iterative procedures. The more recent approaches may use time-domain, frequency-domain or some combination of time- and frequency-domain techniques to achieve a more accurate solution (e.g., the main structure of many harmonic power flow algorithms are based on a frequency-domain technique, while nonlinear loads are modeled in a time-domain simulation).

1.7.1 Time-domain simulation

Dynamic characteristics of power systems are represented in terms of nonlinear sets of differential equations that are normally solved by numerical integration [5]. There are two commonly used time-domain techniques:

- state-variable approach, which is extensively used for the simulation of electronic circuits (SPICE [58]) and
- nodal analysis, which is commonly used for electromagnetic transient simulation of power system (EMTP [59]).

Two main limitations attached to the time-domain methods for harmonic studies are

- They usually require considerable computing time (even for small systems) for the calculation of harmonic information. This involves solving for the steady-state condition and then applying a fast Fourier transform (FFT).
- There are some difficulties in time-domain modeling of power system components with distributed or frequency-dependent parameters.

The Electromagnetic Transient Program (EMTP) and PSpice are two of the well-known time-domain programs that are widely used for transient and harmonic analyses. Most examples of this book are solved using the PSpice software package.

1.7.2 Harmonic-domain simulation

The most commonly used model in the frequency domain assumes a balanced three-phase system (at fundamental and harmonic frequencies) and uses single-phase analysis, a single

harmonic source, and a direct solution [5]. The injected harmonic currents by nonlinear power sources are modeled as constant-current sources to make a direct solution possible. In the absence of any other nonlinear loads, the effect of a given harmonic source is often assessed with the help of equivalent harmonic impedances. The single-source concept is still used for harmonic filter design. Power systems are usually asymmetric. This justifies the need for multiphase harmonic models and power flow that considerably complicates the simulation procedures.

For more realistic cases, if more than one harmonic source is present in the power system, the single-source concept can still be used, provided that the interaction between them can be ignored. In these cases, the principle of superposition is relied on to compute the total harmonic distortion throughout the network.

1.7.3 Iterative simulation techniques

In many modern networks, due to the increased power ratings of nonlinear elements (e.g., HVDC systems, FACTS devices, renewable energy sources, and industrial and residential nonlinear loads) as compared to the system short-circuit power, application of superposition (as applied by harmonic-domain techniques) is not justified and will provide inaccurate results. In addition, due to the propagation of harmonic voltages and currents, the injected harmonics of each nonlinear load is a function of those of other sources. For such systems, accurate results can be obtained by iteratively solving nonlinear equations describing system steady-state conditions. At each iteration, the harmonic-domain simulation techniques can be applied, with all nonlinear interactions included. Two important aspects of the iterative harmonic-domain simulation techniques are:

- Derivation of system nonlinear equations [5]. The system is partitioned into linear regions and nonlinear devices (described by isolated equations). The system solution then consists predominantly of the solution for given boundary conditions as applied to each nonlinear device. Many techniques have been proposed for device modeling including time-domain simulation, steady-state analysis, analytical time-domain expressions (Refs. [11, 13] of [5]), waveform sampling and FFT (Ref. [14] of [5]), and harmonic phasor analytical expressions (Ref. 15 of [5]).
- Solution of nonlinear equations [5]. Early methods used the fixed point iteration procedure of Gauss–Seidel that frequently diverges. Some techniques replace the nonlinear devices at each iteration by a linear Norton equivalent (which might be updated at the next iteration). More recent methods make use of Newton-type solutions and completely decouple device modeling and system solution. They use a variety of numerical analysis improvement techniques to accelerate the solution procedure.

Detailed analyses of iterative simulation techniques for harmonic power (load) flow are presented in [Chapter 8](#).

1.7.4 Modeling harmonic sources

As mentioned above, an iterative harmonic power flow algorithm is used for the simulation of the power system with nonlinear elements. At each iteration, harmonic sources need to be accurately included and their model must be updated at the next iteration.

For most harmonic power flow studies it is suitable to treat harmonic sources as (variable) harmonic currents. At each iteration of the power flow algorithm, the magnitudes and phase angles of these harmonic currents need to be updated. This is performed based on the harmonic couplings of the nonlinear load. Different techniques have been proposed to compute and update the values of injected harmonic currents, including:

- Thévenin or Norton harmonic equivalent circuits,
- simple decoupled harmonic models for the estimation of nonlinear loads (e.g., $I_h = 1/h$, where h is the harmonic order),
- approximate modeling of nonlinear loads (e.g., using decoupled constant voltage or current harmonic sources) based on measured voltage and current characteristics or published data, and
- iterative nonlinear (time- and/or frequency-based) models for detailed and accurate simulation of harmonic-producing loads.

1.8 Power quality improvement techniques

Nonlinear loads produce harmonic currents that can propagate to other locations in the power system and eventually return back to the source. Therefore, harmonic current propagation produces harmonic voltages throughout the power systems. Many mitigation techniques have been proposed and implemented to maintain the harmonic voltages and currents within recommended levels:

- high power quality equipment design,
- harmonic cancellation,
- dedicated line or transformer,
- optimal placement and sizing of capacitor banks,
- derating of power system devices, and
- harmonic filters (passive, active, hybrid) and custom power devices such as active power line conditioners (APLCs) and unified or universal power quality conditioners (UPQCs).

The practice is that if at PCC harmonic currents are not within the permissible limits, the consumer with the nonlinear load must take some measures to comply with standards. However, if harmonic voltages are above recommended levels—and the harmonic currents injected comply with standards—the utility will have to take appropriate actions to improve the power quality.

Detailed analyses of improvement techniques for power quality are presented in [Chapters 9–11](#).

1.8.1 High power quality equipment design

The use of nonlinear and electronic-based devices is steadily increasing and it is estimated that they will constitute more than 70% of power system loading by year 2010 [10]. Therefore, demand is increasing for the designers and product manufacturers to produce devices that generate lower current distortion, and for end users to select and purchase high power quality

devices. These actions have already been started in many countries, as reflected by improvements in fluorescent lamp ballasts, inclusion of filters with energy saving lamps, improved PWM adjustable-speed drive controls, high power quality battery chargers, switch-mode power supplies, and uninterruptible power sources.

1.8.2 Harmonic cancellation

There are some relatively simple techniques that use transformer connections to employ phase-shifting for the purpose of harmonic cancellation, including [10]:

- delta–delta and delta–wye transformers (or multiple phase-shifting transformers) for supplying harmonic producing loads in parallel (resulting in 12-pulse rectifiers) to eliminate the 5th and 7th harmonic components,
- transformers with delta connections to trap and prevent triplen (zero-sequence) harmonics from entering power systems,
- transformers with zigzag connections for cancellation of certain harmonics and to compensate load imbalances,
- other phase-shifting techniques to cancel higher harmonic orders, if required, and
- canceling effects due to diversity [60–62] have been discovered.

1.8.3 Dedicated line or transformer

Dedicated (isolated) lines or transformers are used to attenuate both low- and high-frequency electrical noise and transients as they attempt to pass from one bus to another. Therefore, disturbances are prevented from reaching sensitive loads and any load-generated noise and transients are kept from reaching the remainder of the power system. However, some common-mode and differential noise can still reach the load. Dedicated transformers with (single or multiple) electrostatic shields are effective in eliminating common-mode noise.

Interharmonics (e.g., caused by induction motor drives) and voltage notching (e.g., due to power electronic switching) are two examples of problems that can be reduced at the terminals of a sensitive load by a dedicated transformer. They can also attenuate capacitor switching and lightning transients coming from the utility system and prevent nuisance tripping of adjustable-speed drives and other equipment. Isolated transformers do not totally eliminate voltage sags or swells. However, due to the inherent large impedance, their presence between PCC and the source of disturbance (e.g., system fault) will lead to relatively shallow sags.

An additional advantage of dedicated transformers is that they allow the user to define a new ground reference that will limit neutral-to-ground voltages at sensitive equipment.

1.8.3.1 Application Example 1.6: Interharmonic reduction by dedicated transformer

Fig. E1.6.1 shows a typical distribution system with linear and nonlinear loads. The nonlinear load (labeled as “distorting nonlinear load”) consists of two squirrel-cage induction motors used as prime movers for chiller-compressors for a building’s air-conditioning system. Note the thyristor symbol represents the induction motors, although there are no

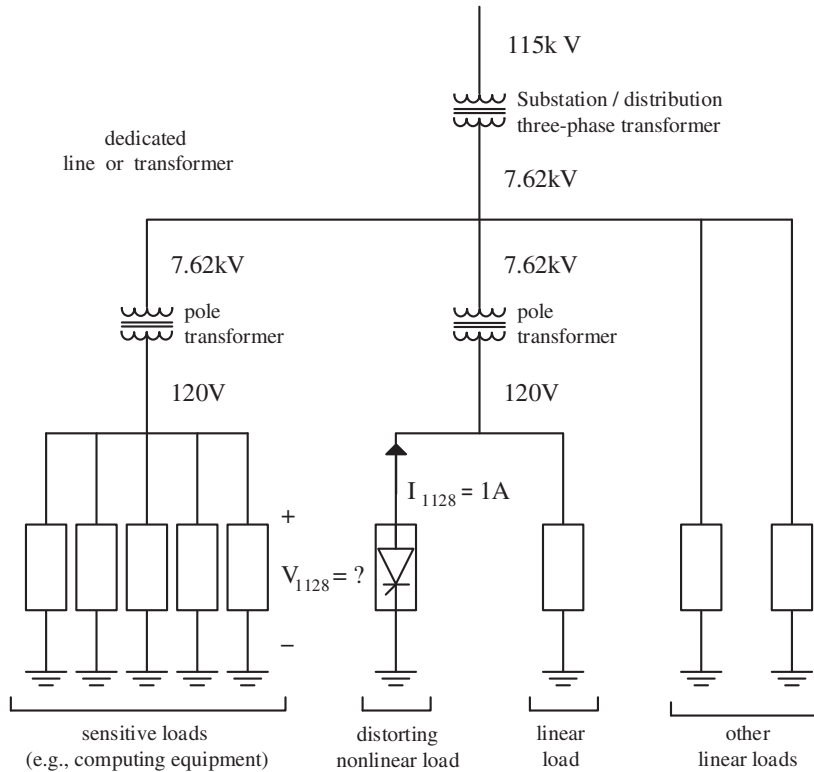


FIG. E1.6.1 Overall (per phase) one-line diagram of the distribution system used in Application Example 1.6.

thyristors present: the thyristor symbol represents here a nonlinearity. This load produces interharmonic currents that generate interharmonic voltage drops across the system's impedances resulting in the interharmonic content of the line-to-line voltage of the induction motors as given by Table E1.6.1. Some of the loads are very sensitive to interharmonics and these must be reduced at the terminals of sensitive loads. These loads are labeled as "sensitive loads."

TABLE E1.6.1 Interharmonics of phase current and line-to-line voltage generated by a three-phase induction motor [34].

Interharmonic f_h (Hz)	Interharmonic amplitude of phase current (%)	Interharmonic amplitude of line-to-line voltage (%)
1128	7	0.40
1607	10	0.40
1730	10	0.55

Three case studies are considered:

- Case #1: Distorting nonlinear load and sensitive loads are fed from the same pole transformer (Fig. E1.6.2).
- Case #2: A dedicated 1:1 isolation transformer is used between the distorting nonlinear load and sensitive loads (Fig. E1.6.3).

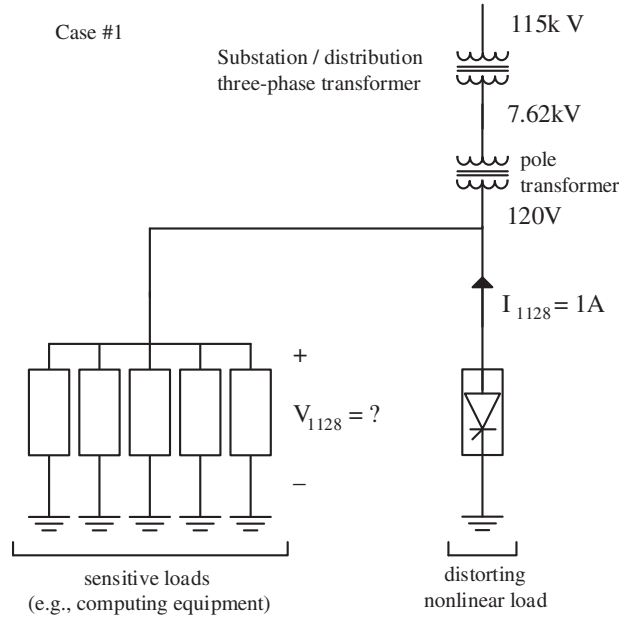


FIG. E1.6.2 Case #1 of Application Example 1.6: distorting nonlinear load and sensitive loads are fed from same pole transformer.

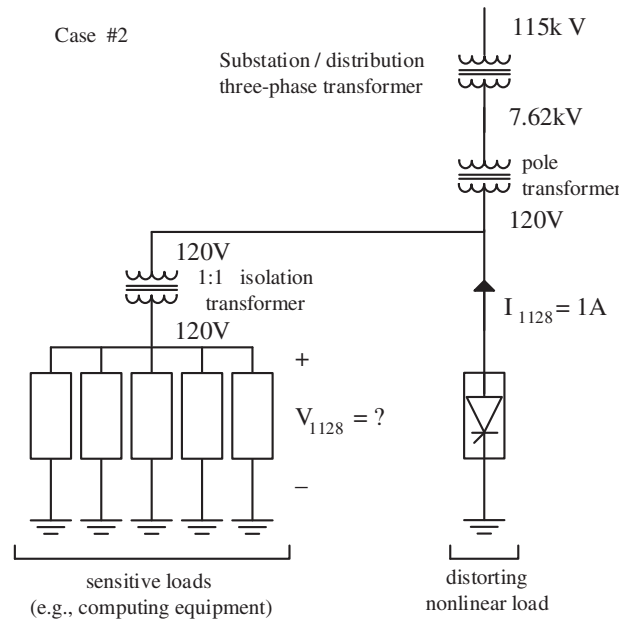


FIG. E1.6.3 Case #2 of Application Example 1.6: use of an isolation transformer with a turns ratio 1: 1 between distorting (nonlinear) load and sensitive loads.

- Case #3: A dedicated 7.62kV to 120V pole transformer is used between the distorting nonlinear load and sensitive loads (Fig. E1.6.4).

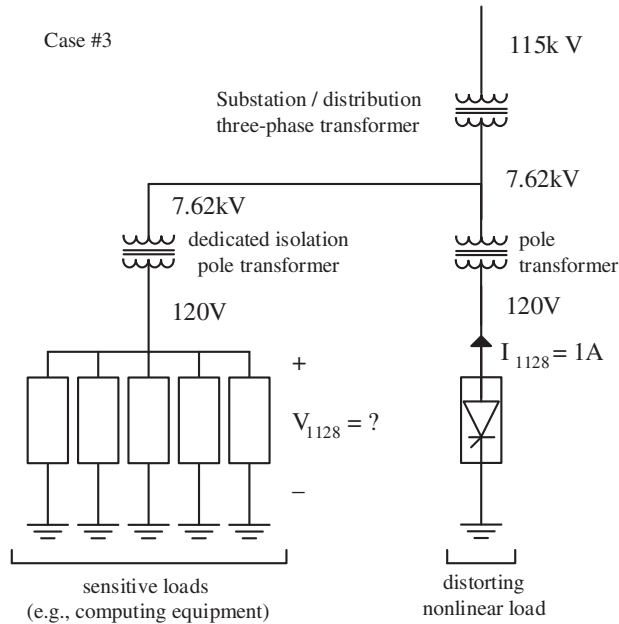


FIG. E1.6.4 Case #3 of Application Example 1.6: use of a dedicated (isolation transformer with turns ratio 7620:120) pole transformer between distorting nonlinear load and sensitive loads.

Solution to Application Example 1.6 *Interharmonic reduction by dedicated transformer*

Computations are shown in Figs. E1.6.5 and E1.6.6 for the above three cases. As illustrated, for $V_{load1} = V_{load2}$ the 1128th interharmonic amplitude is $V_{1128} = \frac{(122.64-120)}{120} (100\%) = 2.2\%$, whereas for V_{load3} this interharmonic is only 0.006%. This demonstrates the effectiveness of a dedicated line or transformer, other than an isolation transformer with a turns ratio 1:1.

1.8.4 Optimal placement and sizing of capacitor banks

It is well known that proper placement and sizing of shunt capacitor banks in distorted networks can result in reactive power compensation, improved voltage regulation, power factor correction, and power/energy loss reduction. The capacitor placement problem consists of determining the optimal numbers, types, locations, and sizes of capacitor banks such that minimum yearly cost due to peak power/energy losses and cost of capacitors is achieved, while the operational constraints are maintained within required limits.

Most of the reported techniques for capacitor placement assume sinusoidal operating conditions. These methods include nonlinear programming, and near global methods (genetic

Analysis of dedicated isolation transformer:

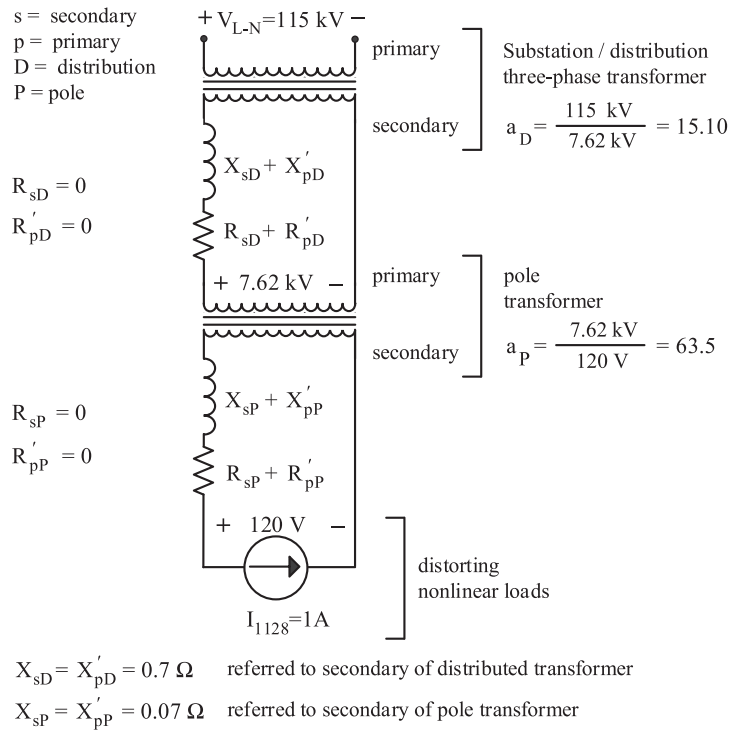


FIG. E1.6.5 Equivalent circuit of distribution and pole transformers.

Analysis of dedicated isolation transformer (continued):

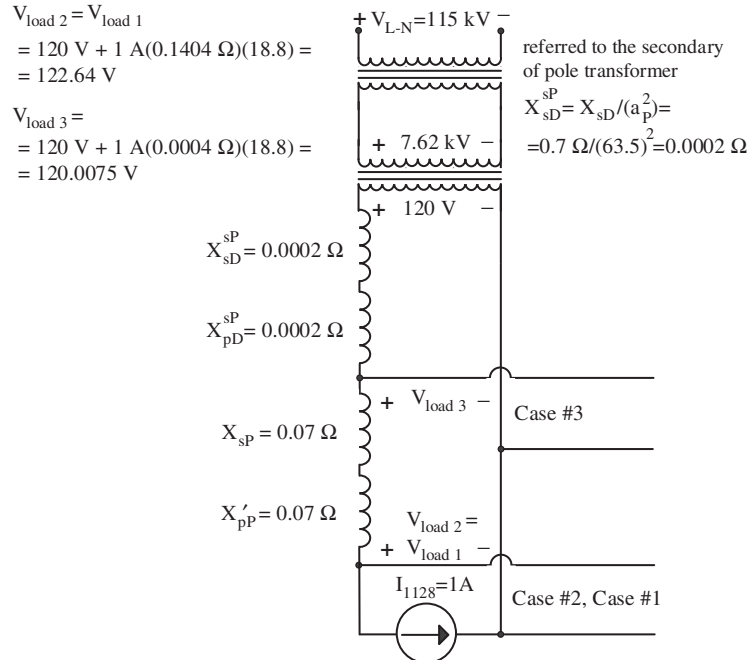


FIG. E1.6.6 Equivalent circuit referring all lumped reactances to the secondary of the pole transformer, where 1128 Hz/60 Hz = 18.8.

algorithms, simulated annealing, tabu search, artificial neural networks, and fuzzy theory). All these approaches ignore the presence of voltage and current harmonics [63,64].

Optimal capacitor bank placement is a well-researched subject. However, limited attention is given to this problem in the presence of voltage and current harmonics. Some publications have taken into account the presence of distorted voltages for solving the capacitor placement problem. These investigations include exhaustive search, local variations, mixed integer and nonlinear programming, heuristic methods for simultaneous capacitor and filter placement, maximum sensitivities selection, fuzzy theory, and genetic algorithms.

According to newly developed investigations based on fuzzy and genetic algorithms [63,64], proper placement and sizing of capacitor banks in power systems with nonlinear loads can result in lower system losses, greater yearly benefits, better voltage profiles, and prevention of harmonic parallel resonances, as well as improved power quality. Simulation results for the standard 18-bus IEEE distorted distribution system show that proper placement and sizing of capacitor banks can limit voltage and current harmonics and decrease their THDs to the recommended levels of IEEE-519, without application of any dedicated high-order passive or active filters. For cases where the construction of new capacitor bank locations is not feasible, it is possible to perform the optimization process without defining any new locations. Therefore, reexamining capacitor bank sizes and locations before taking any major steps for power quality mitigation is highly recommended [65].

Detailed analyses for optimal sizing and placement of capacitor banks in the presence of harmonics and nonlinear loads are presented in Chapter 11.

1.8.5 Derating of power system devices

Power system components must be derated when supplying harmonic loads. Commercial buildings have drawn the most attention in recent years due to the increasing use of nonlinear loads. According to the IEEE dictionary, derating is defined as “the intentional reduction of stress/strength ratio (e.g., real or apparent power) in the application of an item (e.g., cables, transformer, electrical machines), usually for the purpose of reducing the occurrence of stress-related failure (e.g., reduction of lifetime due to increased temperature beyond rated temperature).” As discussed in Section 1.5, harmonic currents and voltages result in harmonic losses of magnetic devices, increasing their temperature rise [65]. This rise beyond the rated value results in a reduction of lifetime, as will be discussed in Chapter 7.

There are several techniques for determining the derating factors (functions) of appliances for nonsinusoidal operating conditions (as discussed in Chapter 2), including:

- from tables in standards and published research (e.g., ANSI/IEEE Std C57.110 [66] for transformer derating),
- from measured (or computed) losses,
- by determining the K -factor, and
- based on the F_{HL} -factor.

1.8.6 Harmonic filters, APLCs, and UPQCs

One means of ensuring that harmonic currents of nonlinear components will not unduly interact with the remaining part of the power system is to place filters near or close to nonlinear loads. The main function of a filter is either to bypass harmonic currents, block them from entering the power system, or compensate them by locally supplying harmonic currents. Due to the lower impedance of the filter in comparison to the impedance of the system, harmonic currents will circulate between the load and the filter and do not affect the entire system; this is called series resonance. If other frequencies are to be controlled (e.g., that of arc furnaces), additional tuned filters are required.

Harmonic filters are broadly classified into passive, active, and hybrid structures. These filters can only compensate for harmonic currents and/or harmonic voltages at the installed bus and do not consider the power quality of other buses. New generations of active filters are active-power line conditioners that are capable of minimizing the power quality problems of the entire system.

Passive filters are made of passive components (inductance, capacitance, and resistance) tuned to the harmonic frequencies that are to be attenuated. The values of inductors and capacitors are selected to provide low impedance paths at the selected frequencies. Passive filters are generally designed to remove one or two harmonics (e.g., the 5th and 7th). They are relatively inexpensive compared with other means for eliminating harmonic distortion, but also suffer from some inherent limitations, including:

- Interactions with the power system.
- Forming parallel resonance circuits with system impedance (at fundamental and/or harmonic frequencies). This may result in a situation that is worse than the condition being corrected. It may also result in system or equipment failure.
- Changing characteristics (e.g., their notch frequency) due to filter parameter variations.
- Unsatisfactory performance under variations of nonlinear load parameters.
- Compensating a limited number of harmonics.
- Not considering the power quality of the entire system.
- Creating parallel resonance. This resonance frequency must not necessarily coincide with any significant system harmonic. Passive filters are commonly tuned slightly lower than the attenuated harmonic to provide a margin of safety in case there are some changes in system parameters (due to temperature variations and/or failures). For this reason filters are added to the system starting with the lowest undesired harmonic. For example, installing a seventh-harmonic filter usually requires that a fifth-harmonic filter also be installed.

Designing passive filters is a relatively simple but tedious matter. For the proper tuning of passive filters, the following steps should be followed:

- Model the power system (including nonlinear loads) to indicate the location of harmonic sources and the orders of the injected harmonics. A harmonic power (load) flow algorithm (Chapter 8) should be used; however, for most applications with a single dominating harmonic source, a simplified equivalent model and hand calculations are adequate.
- Place the hypothetical harmonic filter(s) in the model and reexamine the system. Filter(s) should be properly tuned to dominant harmonic frequencies.

- If unacceptable results (e.g., parallel resonance within system) are obtained, change filter location(s) and modify parameter values until results are satisfactory.

In addition to power quality improvement, harmonic filters can be configured to provide power factor correction. For such cases, the filter is designed to carry resonance harmonic currents, as well as fundamental current.

Active filters rely on active power conditioning to compensate for undesirable harmonic currents. They actually replace the portion of the sine wave that is missing in the nonlinear load current by detecting the distorted current and using power electronic switching devices to inject harmonic currents with complimentary magnitudes, frequencies, and phase shifts into the power system. Their main advantage over passive filters is their fine response to changing loads and harmonic variations. Active filters can be used in very difficult circumstances where passive filters cannot operate successfully because of parallel resonance within the system. They can also take care of more than one harmonic at a time and improve or mitigate other power quality problems such as flicker. They are particularly useful for large, distorting nonlinear loads fed from relatively weak points of the power system where the system impedance is relatively large. Active filters are relatively expensive and not feasible for small facilities.

Power quality improvement using filters, unified power quality conditioners (UPQCs), and optimal placement and sizing of shunt capacitors, are discussed in [Chapters 10 and 11](#), respectively.

1.8.6.1 Application example 1.7: Hand calculation of harmonics produced by 12-pulse converters

[Fig. E1.7.1](#) shows a large industrial plant such as an oil refinery or chemical plant [\[57\]](#) being serviced from a utility with transmission line-to-line voltage of 115kV. The demand on the utility system is 50 MVA and 50% of its load is a 12-pulse static power converter load.

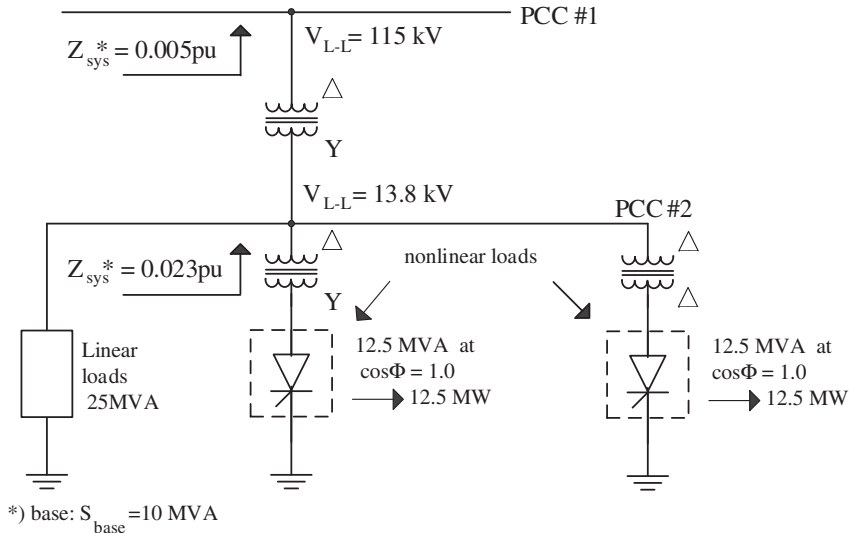


FIG. E1.7.1 One-line diagram of a large industrial plant fed from transmission voltage [\[57\]](#).

TABLE E1.7.1 Harmonic current (I_h) generated by 6-pulse and 12-pulse converters [57] based on $X_c^h = 0.12$ pu = 0.12 pu and $\alpha = 30$ degree.

Harmonic order (h)	I_h for 6-pulse converter (pu)	I_h for 12-pulse converter (pu)
1	1.000	1.000
5	0.192	0.0192
7	0.132	0.0132
11	0.073	0.073
13	0.057	0.057
17	0.035	0.0035
19	0.027	0.0027
23	0.020	0.020
25	0.016	0.016
29	0.014	0.0014
31	0.012	0.0012
35	0.011	0.011
37	0.010	0.010
41	0.009	0.0009
43	0.008	0.0008
47	0.008	0.008
49	0.007	0.007

Table E1.7.1 lists the harmonic currents (I_h) given in pu of the fundamental current based on the commutating reactance $X_c^h = 0.12$ pu and the firing angle $\alpha = 30$ degree of 6-pulse and 12-pulse converters. In an ideal 12-pulse converter, the magnitude of some current harmonics (bold in Table E1.7.1) is zero. However, for actual 12-pulse converters, the magnitudes of these harmonics are normally taken as 10% of the 6-pulse values [57]. Assume $R_{SC|PCC\#1} = 40$ pu, and $R_{SC|PCC\#2} = 8.7$ pu.

Solution to Application Example 1.7 *Hand calculation of harmonics produced by 12-pulse converters*

Calculating current harmonics at PCC #1:

- $S_{ph} = \frac{\tilde{V} \tilde{I}}{3} = \frac{50 \text{ MVA}}{3} = 16.67 \text{ MVA}$
- $V_{ph} = \frac{115 \text{ kV}}{\sqrt{3}} = 66.4 \text{ kV}$
- $I_{ph} = \frac{S_{ph}}{V_{ph}} = \frac{50 \text{ MVA}}{3(66.4 \text{ kV})} = 251 \text{ A}$
- $I_L = I_{ph} = 251 \text{ A}$
- At a short-circuit ratio of $R_{SC} = \frac{I_{SC}}{I_L} = 40$ pu (at PCC #1)

- The system's impedance is Z_{sys} (10 MVA base) = 0.5% = 0.005 pu,
- $I_{\text{SC}}^{\text{PCC\#1}} = R_{\text{SC}} I_L = 40 \cdot 251 \text{ A} = 10040 \text{ A}$.

According to Table 1.7, for PCCs from 69 to 138 kV, the current harmonic limits should be divided by two. Therefore, for $I_{\text{SC}}/I_L = (20\text{--}50)$:

$$I_{h\text{limit}} = \frac{7.0}{2} = 3.5\% \quad \text{for } 5 \leq h < 11;$$

$$I_{h\text{limit}} = \frac{3.5}{2} \cong 1.8\% \quad \text{for } 11 \leq h < 17;$$

$$I_{h\text{limit}} = \frac{2.5}{2} \cong 1.3\% \quad \text{for } 17 \leq h < 23.$$

The actually occurring harmonic currents are for $I_{\text{spc}} = (251/2) \text{ A} = 125.5 \text{ A}$ for 12-pulse converter (SPC means static power converter):

$$I_5^{\text{actual}} = I_{\text{spc}}(0.0192) = 125.5(0.0192) = 2.41 \text{ A}$$

$$I_7^{\text{actual}} = 125.5(0.0132) = 1.65 \text{ A}$$

$$I_{11}^{\text{actual}} = 9.16 \text{ A}$$

$$I_{13}^{\text{actual}} = 7.15 \text{ A}$$

with $I_L = 251 \text{ A}$

$$I_5^{\text{actual}\%} = \frac{I_5^{\text{actual}}}{I_L} 100\%.$$

$$\left. \begin{array}{l} I_5^{\text{actual}\%} = 0.96\% \\ I_7^{\text{actual}\%} = 0.66\% \end{array} \right] \text{ allowed limits are } 3.5\%$$

$$\left. \begin{array}{l} I_{11}^{\text{actual}\%} = 3.65\% \\ I_{13}^{\text{actual}\%} = 2.85\% \end{array} \right] \text{ allowed limits are } 1.8\%.$$

As can be seen, $I_{11}^{\text{actual}\%}$ and $I_{13}^{\text{actual}\%}$ are too large!

Calculating voltage harmonics at PCC #1:

Calculation of short-circuit (apparent) power S_{SC} :

- $I_{\text{SC}} = I_L \cdot R_{\text{SC}} = 251(40) = 10,040 \text{ A}$
- $\frac{I_{\text{SC}}}{I_L} = R_{\text{SC}}$
- $S_{\text{SC}} = 3 \cdot V_{\text{ph}} \cdot I_{\text{SC}} = 3 \left(\frac{115 \text{ kV}}{\sqrt{3}} \right) (10.04 \text{ kA}) = 2000 \text{ MVA}$

Checking:

$$S_{\text{SC}} = \text{MVA}_{\text{SC}} = \frac{S_{\text{base}}[\text{MVA}]}{Z_{\text{syst}}[\text{in per unit at base MVA}]} = \frac{10 \text{ MVA}}{0.005 \text{ pu}} = 2000 \text{ MVA}.$$

Calculation of voltage harmonics (at PCC #1) for the current harmonics:

- $V_h = \frac{I_h}{I_{base}} (h) \cdot Z_{sys} \cdot 100\%$
- $S_{base} = 10 \text{ MVA}$ (all three phases)
- $I_{base} = \frac{S_{base \text{ phase}}}{V_{phase}}$
- $I_{base} = \frac{10 \text{ MVA}/3}{115 \text{ kV}/\sqrt{3}} = 50.2 \text{ A.}$

Harmonic (actually occurring) voltages:

$$V_5 = \frac{2.41}{50.2} (5)(0.005)(100\%)$$

$$V_5 = 0.120\%$$

$$V_7 = \frac{1.65}{50.2} (7)(0.005)(100\%) \left. \vphantom{\frac{1.65}{50.2}} \right] \left. \vphantom{\frac{1.65}{50.2}} \right] \text{ allowed limit is } 1.5\%$$

$$V_7 = 0.115\%$$

$$V_{11} = 1.00\%$$

$$V_{13} = 0.93\%$$

for individual harmonic voltage (Table 1.8).

Also:

- $THD_V^{\text{limit}} \leq 2.5\%$
- $THD_V^{\text{actual}} = \frac{\sqrt{\sum_{h=5,7,\dots}^H V_h^2}}{V_{phase}} (100\%) = 1.64\%$

Calculating current harmonics at PCC #2:

- $S_{ph} = 16.67 \text{ MVA}$
- $V_{ph} = \frac{13.8 \text{ kV}}{\sqrt{3}} = 7.968 \text{ kV}$
- $I_{ph} = \frac{16.67 \text{ MVA}}{7.968 \text{ kV}} = 2092 \text{ A}$
- At a short-circuit ratio of $R_{SC} = \frac{I_{sc}}{I_L} = 8.7 \text{ pu}$ (at PCC #2)
- The system's impedance is Z_{sys} (10 MVA base) = $2.3\% = 0.023 \text{ pu}$,
- $I_{SC}^{PCC\#2} = R_{SC} \cdot I_L = 8.7(2092 \text{ A}) = 18.2 \text{ kA.}$

Calculation of short-circuit current $I_{SC\text{phase}}$:

- $S_{phase} = \frac{50 \text{ MVA}}{3} = 16.67 \text{ MVA}$
- $V_{phase} = \frac{13.8 \text{ kV}}{\sqrt{3}} = 7.97 \text{ kV}$
- $I_{phase} = \frac{50 \text{ MVA}}{3} \cdot \frac{\sqrt{3}}{13.8 \text{ kV}} = 2.092 \text{ kA}$
- $I_{\text{phase_converter}} = \frac{I_{phase}}{2} = 1.046 \text{ kA}$
- $I_{SC\text{phase}} = R_{SC} \cdot I_{phase} = 8.7(2.092) = 18.2 \text{ kA}$
- $R_{SC} = \frac{I_{SC\text{phase}}}{I_{phase}} = \frac{18.2}{2.092} = 8.7 \text{ pu}$
- $Z_{sys} = 2.3\% = 0.023 \text{ pu.}$

Actually occurring harmonic currents at PCC #2 for 12-pulse converter:

$$I_5^{\text{actual}} = 1046(0.0192) = 20.08 \text{ A}$$

$$I_7^{\text{actual}} = 1046(0.0132) = 13.81 \text{ A}$$

$$I_{11}^{\text{actual}} = 1046(0.073) = 76.35 \text{ A}$$

$$I_{13}^{\text{actual}} = 1046(0.057) = 59.62 \text{ A}$$

in percent

$$I_5^{\text{actual}\%} = \frac{I_5^{\text{actual}}}{I_{\text{phase}}} (100\%)$$

$$I_5^{\text{actual}\%} = \frac{20.08}{2092} (100\%) = 0.96\%$$

$$I_7^{\text{actual}\%} = 0.66\%$$

$$\left. \begin{array}{l} I_{11}^{\text{actual}\%} = 3.65\% \\ I_{13}^{\text{actual}\%} = 2.85\% \end{array} \right] \text{above limits (see analysis for PCC\#1).}$$

Calculating voltage harmonics at PCC #2:

$$V_h = \frac{I_h}{I_{\text{base}}} (h) \cdot Z_{\text{syst}} \cdot 100\%,$$

where

$$I_{\text{base}} = \frac{10 \text{ MVA}/3}{13.8 \text{ kV}/\sqrt{3}} = 418.4 \text{ A}$$

$$\left. \begin{array}{l} V_5 = \frac{20.08}{418.4} (5)(0.023) 100\% = 0.552\% \\ V_7 = \frac{13.81}{418.4} (5)(0.023) 100\% = 0.531\% \end{array} \right] \text{below limit of 3\%}$$

$$\left. \begin{array}{l} V_{11} = 4.61\% \\ V_{13} = 4.26\% \end{array} \right] \text{above limit of 3\%}.$$

Note that on the 13.8kV bus, the current and voltage distortions are greater than recommended by IEEE-519 (Table 1.8). A properly sized harmonic filter applied on the 13.8kV bus would reduce the current distortion and the voltage distortion to within the harmonic current limits and the harmonic voltage limits on the 13.8kV bus.

1.8.6.2 Application Example 1.8: Filter design to meet IEEE-519 requirements

Filter design for Application Example 1.7 will be performed to meet the IEEE-519 requirements. The circuit of Fig. E1.7.1 is now augmented with a passive filter, as shown in Fig. E1.8.1.

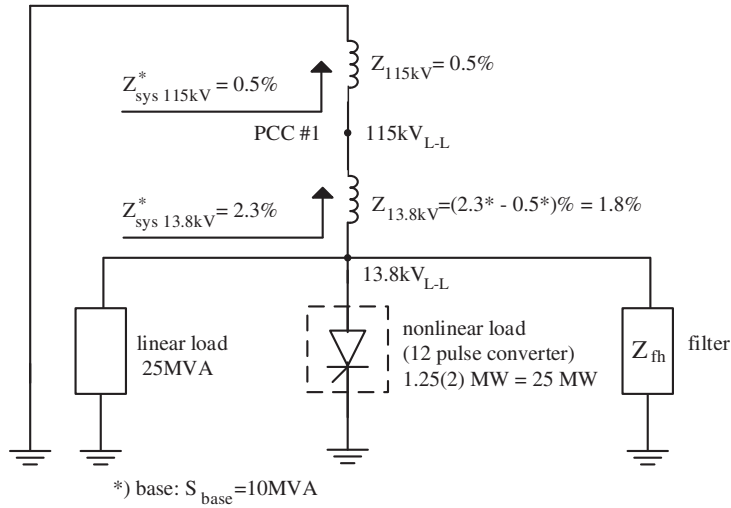


FIG. E1.8.1 One-line diagram of a large industrial plant fed from transmission voltage (Fig. E1.7.1) with a passive filter placed at PCC #2.

Solution to Application Example 1.8 Filter design to meet IEEE-519 requirements System analysis

At harmonic frequencies, the circuit of Fig. E1.8.1 can be approximated by the equivalent circuit shown in Fig. E1.8.2. This circuit should be analyzed at each frequency of interest by calculating series and parallel resonances.

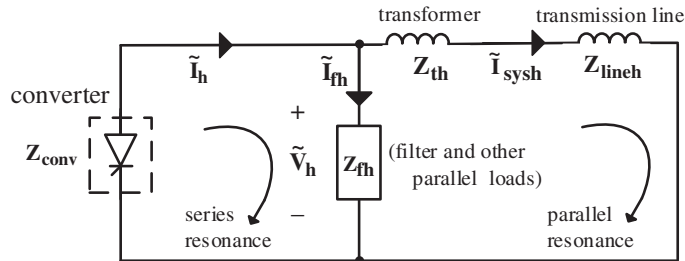


FIG. E1.8.2 Equivalent circuit of Fig. E1.8.1 at harmonic frequencies, where Z_{th} and Z_{fh} are the harmonic impedances of the transformer and the filter, respectively.

For series resonance $\tilde{I}_{fh}$ is large whereas for parallel resonance $\tilde{I}_{fh}$ and $\tilde{I}_{sysh}$ are large. The major impedance elements in the circuit respond differently as frequency changes. The impedance of the transmission line Z_{lineh} is a complex relationship between the inductive and capacitive reactances. Using the fundamental frequency resistance R and inductance of the transmission line, however, gives acceptable results. For most industrial systems Z_{th} and Z_{lineh} can be approximated by the short-circuit impedance if low-frequency phenomena are considered.

The impedance vs frequency characteristic of a transformer

The impedance vs frequency characteristic of a transformer depends on its design, size, voltage, etc. Its load loss, I^2R , will constitute 75%–85% of the total transformer loss and about 75% of this is not frequency dependent (skin effect). The remainder varies with the square of the frequency. The no-load loss (core loss) constitutes between 15% and 25% of the total loss and, depending on flux density, the loss varies as $f^{3/2}$ to f^3 . From this, with the reactance increasing directly with frequency (inductance L is assumed to be constant), it can be seen that the harmonic (X_h/R_h) ratios will be less than the fundamental ($h=1$) frequency (X_1/R_1) ratio, that is,

$$\left(\frac{X_h}{R_h}\right) < \left(\frac{X_1}{R_1}\right).$$

If the fundamental frequency ratio (X_1/R_1) is used, there will be less damping of the high-frequency current than in actuality.

Adjacent capacitor banks

If there are large capacitor banks or filters connected to the utility system, it is necessary to consider their effect.

Converter as a harmonic generator

The converter is usually considered to be a generator of harmonic currents i_{hn} and is considered to be a constant-current source. Thus Z_{conv} is very large and can be ignored. If the converter is a constant-voltage source Z_{conv} should be included.

Circuit analysis

Using Ohm's and Kirchhoff's laws (Fig. E1.8.2):

$$Z_{\text{sysh}} = Z_{th} + Z_{lineh}$$

$$\tilde{I}_h = \tilde{I}_{\text{sysh}} + \tilde{I}_{fh}$$

$$\tilde{I}_{fh}Z_{fh} = \tilde{I}_{\text{sysh}}Z_{\text{sysh}},$$

or

$$\tilde{I}_{fh} = \tilde{I}_{\text{sysh}} \left(\frac{Z_{\text{sysh}}}{Z_{fh}} \right)$$

$$\tilde{I}_{\text{sysh}} = \tilde{I}_h - \tilde{I}_{fh}$$

$$\tilde{I}_{\text{sysh}} = \tilde{I}_h - \tilde{I}_{\text{sysh}} \left(\frac{Z_{\text{sysh}}}{Z_{fh}} \right)$$

or

$$\tilde{I}_{\text{sysh}} \left(1 + \frac{Z_{\text{sysh}}}{Z_{fh}} \right) = \tilde{I}_h$$

$$\tilde{I}_{\text{sysh}} \left(\frac{Z_{fh} + Z_{\text{sysh}}}{Z_{fh}} \right) = \tilde{I}_h$$

or

$$\tilde{I}_{sysh} = \left(\frac{Z_{fh}}{Z_{fh} + Z_{sysh}} \right) \tilde{I}_h.$$

Correspondingly,

$$\tilde{I}_{fh} = \left(\frac{Z_{sysh}}{Z_{fh} + Z_{sysh}} \right) \tilde{I}_h.$$

Define

$$\rho_{sysh} = \frac{Z_{fh}}{Z_{fh} + Z_{sysh}},$$

$$\rho_{fh} = \frac{Z_{sysh}}{Z_{fh} + Z_{sysh}}.$$

Then

$$\tilde{I}_{sysh} = \rho_{sysh} \tilde{I}_h,$$

$$\tilde{I}_{fh} = \rho_{fh} \tilde{I}_h.$$

Because of

$$\tilde{I}_h = \tilde{I}_{sysh} + \tilde{I}_{fh}$$

$$\rho_{sysh} + \rho_{fh} = 1.$$

Note that ρ_{sysh} and ρ_{fh} are complex quantities. It is desirable that ρ_{sysh} be small at the various occurring harmonics. Typical values for a series tuned filter are (at the tuned frequency hf_1)

$$\rho_{sysh} = 0.045 \angle -80.6^\circ, \text{ (for series tuned filters)}$$

$$\rho_{fh} = 0.994 \angle +2.6^\circ, \text{ (for series tuned filters).}$$

Parallel resonances occur between Z_{fh} and Z_{sysh} if ρ_{sysh} and ρ_{fh} are large at the tuned frequency (hf_1). Typical values are

$$\rho_{sysh} = 16.67 \angle -92.9^\circ,$$

$$\rho_{fh} = 16.75 \angle +83.6^\circ.$$

The approximate 180 degree phase difference emphasizes why a parallel resonance cannot be tolerated at a frequency near a harmonic current generated by the converter: a current of the resonance frequency will excite the circuit and a 16.67 pu current will oscillate between the two energy storage units, the system impedance Z_{sysh} and that of the filter capacitors Z_{fh} .

A plot of ρ_{sysh} vs h is a useful display of filter performance. Frequently a plot of $\log(\rho_{sysh})$ is more convenient. The harmonic voltage $\tilde{V}_h$ is

$$\begin{aligned}
\tilde{V}_h &= Z_{sysh} \tilde{I}_{sysh} = Z_{fhl} \tilde{I}_{fh} \\
\tilde{V}_h &= \rho_{sysh} (Z_{fhl} + Z_{sysh}) \tilde{I}_{fh} \\
\tilde{V}_h &= \rho_{sysh} (Z_{fhl} + Z_{sysh}) \rho_{fh} \tilde{I}_h \\
\tilde{V}_h &= \rho_{sysh} (Z_{fhl} + Z_{sysh}) \frac{Z_{sysh}}{Z_{fhl} + Z_{sysh}} \tilde{I}_h \\
\tilde{V}_h &= \rho_{sysh} \cdot Z_{sysh} \cdot \tilde{I}_h,
\end{aligned}$$

or

$$\begin{aligned}
\tilde{V}_h &= \frac{Z_{fhl}}{(Z_{fhl} + Z_{sysh})} (Z_{fhl} + Z_{sysh}) \frac{Z_{sysh}}{(Z_{fhl} + Z_{sysh})} \tilde{I}_h \\
\frac{Z_{sysh}}{(Z_{fhl} + Z_{sysh})} &= \rho_{fh} \\
\tilde{V}_h &= \rho_{fh} \cdot Z_{fhl} \tilde{I}_h.
\end{aligned}$$

1.8.6.3 Application Example 1.9: Several users on a single distribution feeder

Fig. E1.9.1 shows a utility distribution feeder that has four users along a radial feeder [57]. Each user sees a different value of short-circuit impedance or system size. Note that

$$S_{SC} = MVA_{SC} = \frac{10 \text{ MVA}}{Z_{sys}[\text{pu at 10 MVA base}]}.$$

There is one type of transformer ($\Delta - Y$); therefore, only six-pulse static power converters are used.

Solution to Application Example 1.9 Several users on a single distribution feeder

Calculation of harmonic current for user #1 (case A, no filter):

- $S_{SC} = 350 \text{ MVA}$
- $S_{SC\text{phase}} = \frac{S_{SC}}{3} = 116.67 \text{ MVA}$
- $S_{SC\text{phase}} = I_{SC\text{phase}} V_{\text{phase}}$
- $I_{SC\text{phase}} = \frac{S_{SC\text{phase}}}{V_{\text{phase}}} = \frac{116.67 \text{ MVA}}{7.967 \text{ kV}} = 14.65 \text{ kA}$
- $S_{\text{load}} = 2.5 \text{ MVA}$
- $S_{\text{loadphase}} = \frac{S_{\text{load}}}{3} = 0.833 \text{ MVA}$
- $I_{\text{loadphase}} = \frac{S_{\text{loadphase}}}{V_{\text{phase}}} = \frac{0.833 \text{ MVA}}{7.967 \text{ kV}} = 104.7 \text{ A}.$

For this user, there is a 25% static power converter (SPC) load:

- $I_{\text{loadSPC}} = \frac{104.7 \text{ A}}{4} = 26.2 \text{ A}$
- $R_{SC} = \frac{I_{SC\text{phase}}}{I_{\text{loadphase}}} = \frac{14.65 \text{ kA}}{104.7 \text{ A}} = 140 \text{ pu}.$

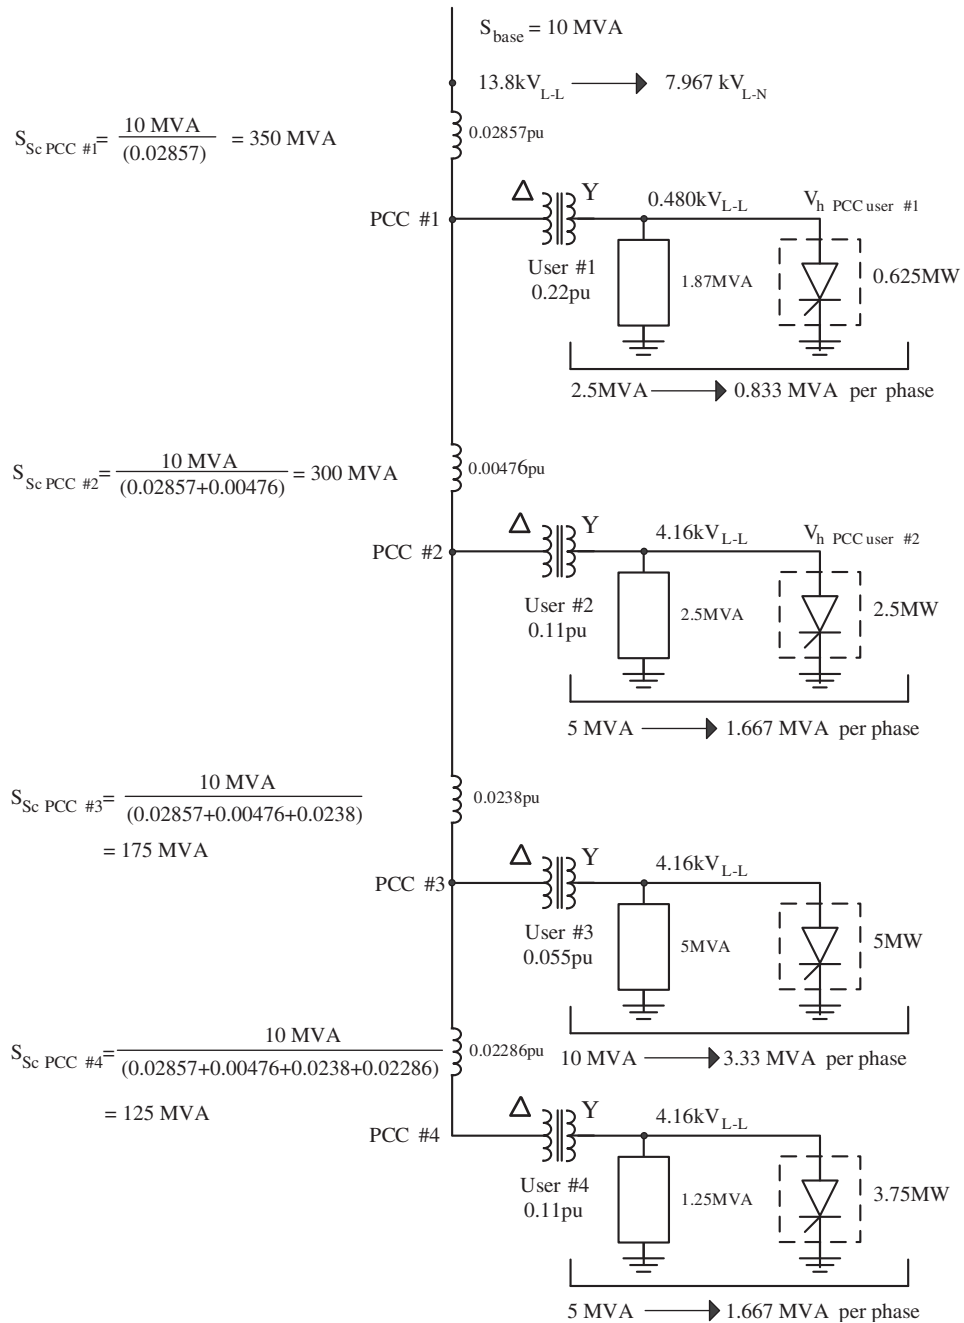


FIG. E1.9.1 Overall one-line diagram of the distribution system feeder containing four users with six-pulse converters [57].

Therefore, harmonic currents for the six-pulse static power converter of user #1 are

- $I_{5[A]} = 26.2(0.192) = 5.03 \text{ A} \rightarrow I_{5[\%]} = \frac{I_{5[A]}}{I_{\text{loadphase}}} (100\%) = \frac{5.03 \text{ A}}{104.7 \text{ A}} (100\%) = 4.8\%$
- $I_{7[A]} = 26.2(0.132) = 3.46 \text{ A} \rightarrow I_{7[\%]} = \frac{I_{7[A]}}{I_{\text{loadphase}}} (100\%) = \frac{3.46 \text{ A}}{104.7 \text{ A}} (100\%) = 3.3\%$
- $I_{11[A]} = 1.91 \text{ A} \rightarrow I_{11[\%]} = 1.82\%$
- $I_{13[A]} = 1.49 \text{ A} \rightarrow I_{13[\%]} = 1.42\%$.

Calculation of harmonic current for user #2 (case A, no filter):

- $S_{SC} = 300 \text{ MVA}$
- $S_{SC\text{phase}} = \frac{S_{SC}}{3} = 100 \text{ MVA}$
- $V_{\text{phase}} = 7.967 \text{ kV}$
- $I_{SC\text{phase}} = \frac{S_{SC\text{phase}}}{V_{\text{phase}}} = \frac{100 \text{ MVA}}{7.967 \text{ kV}} = 12.56 \text{ kA}$
- $S_{\text{load}} = 5 \text{ MVA}$
- $S_{\text{loadphase}} = 1.667 \text{ MVA}$
- $I_{\text{loadphase}} = \frac{S_{\text{loadphase}}}{V_{\text{phase}}} = 209.5 \text{ A}$

The 50% static power converter (SPC) load of this user yields:

- $I_{\text{loadSPC}} = 104.73 \text{ A}$
- $R_{SC} = \frac{I_{SC\text{phase}}}{I_{\text{loadphase}}} = \frac{12,560 \text{ A}}{209.5 \text{ A}} = 59.95 \text{ pu}$
- $R_{SC} \approx 60 \text{ pu}$.

Therefore, harmonic currents for the six-pulse static power converter of user #2 are

- $I_{5[A]} = 104.73(0.192) = 20.11 \text{ A} \rightarrow I_{5[\%]} = \frac{I_{5[A]}}{I_{\text{loadphase}}} (100\%) = \frac{20.11 \text{ A}}{209.5 \text{ A}} (100\%) = 9.6\%$
- $I_{7[A]} = 104.73(0.132) = 13.82 \text{ A} \rightarrow I_{7[\%]} = \frac{I_{7[A]}}{I_{\text{loadphase}}} (100\%) = \frac{13.82 \text{ A}}{209.5 \text{ A}} (100\%) = 6.6\%$
- $I_{11[A]} = 7.64 \text{ A} \rightarrow I_{11[\%]} = 3.65\%$
- $I_{13[A]} = 5.96 \text{ A} \rightarrow I_{13[\%]} = 2.9\%$.

Calculation of harmonic voltages V_h (case A, no filter):

The harmonic equivalent circuit of Fig. E1.9.1 in pu and ohms is shown in Fig. E1.9.2A and B, respectively. Using the harmonic equivalent circuits of Fig. E1.9.2:

- $S_{\text{base}} = 10 \text{ MVA}$
- $S_{\text{basephase}} = \frac{10}{3} \text{ MVA}$
- $I_{\text{base}} = \frac{S_{\text{basephase}}}{V_{\text{phase}}} = \frac{10 \text{ MVA}}{3(7.967 \text{ kV})} = 418.83 \text{ A}$
- $Z_{\text{base}} = \frac{V_{\text{phase}}}{I_{\text{base}}} = \frac{V_{\text{base}}}{I_{\text{base}}}$

Note that $V_{\text{base}} = V_{\text{phase}}$; therefore,

$$Z_{\text{base}} = \frac{7.9585 \text{ kV}}{418.83 \text{ A}} = 19 \Omega.$$

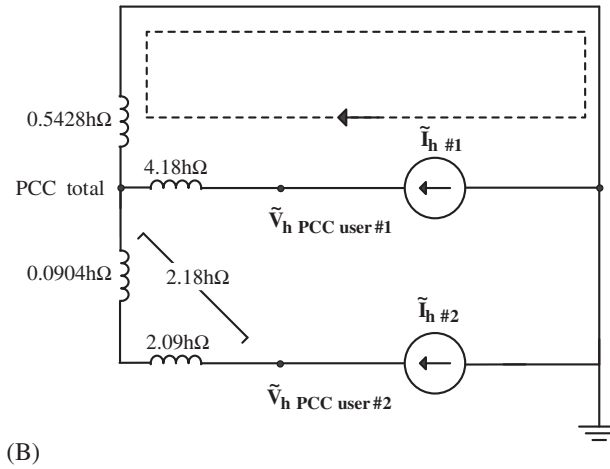
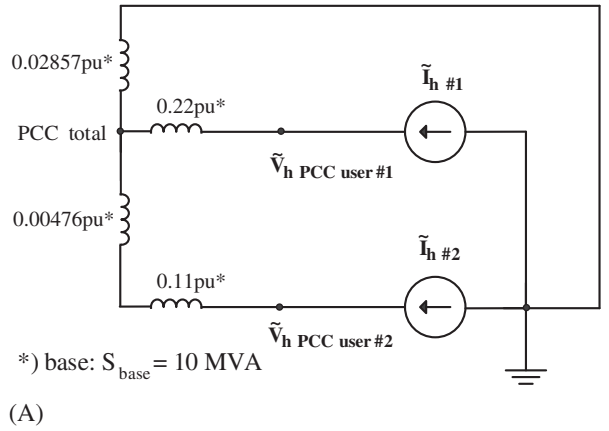


FIG. E1.9.2 Harmonic equivalent circuit of Fig. E1.9.1 with impedances expressed in (A) pu without harmonic order h and (B) expressed in ohms.

Voltage harmonics are computed using the total harmonic currents. For example, for the fifth harmonic:

$$\begin{aligned} I_{5\#1} &= 5.03 \text{ A} \\ I_{5\#2} &= 20.11 \text{ A} \end{aligned} \quad \Rightarrow \quad I_{5\#1} + I_{5\#2} = 25.13 \text{ A}.$$

The fifth voltage harmonic amplitudes for users 1 and 2 are:

- $V_{5\text{PCCuser}\#1} = 4.18(5)(5.03) + 0.5428(5)(25.14) = 173.38 \text{ V}$

$$V_{5\text{PCCuser}\#1} = 2.18\%,$$

- $V_{5\text{PCCuser}\#2} = 2.18(5)(20.11) + 0.5428(5)(25.14) = 287.46 \text{ V}$

$$V_{5\text{PCCuser}\#2} = 3.61\%.$$

The total fifth harmonic voltage is

$$V_{5\text{PCCtot}} = 0.5428(5)(25.14) = 68.26 \text{ V}$$

$$V_{5\text{PCCtot}} = \frac{68.26 \text{ V}}{7.967 \text{ kV}}(100\%) = 0.86\%.$$

1.9 Summary

The focus of this chapter has been on definition, measures, and classification of electric power quality as well as related issues that will be covered in the following chapters. Power quality can be defined as “the measure, analysis, and improvement of the bus voltage to maintain a sinusoidal waveform at rated voltage and frequency.” Main causes of disturbances and power quality problems are unpredictable events, the electric utility, the customer, and the manufacturer.

The magnitude–duration plot can be used to classify power quality events, where the voltage magnitude is split into three regions (e.g., interruption, undervoltage, and overvoltage) and the duration of these events is split into four regions (e.g., very short, short, long, and very long). However, IEEE standards use several additional terms to classify power quality events into seven categories including: transient, short-duration voltage variation, long-duration voltage variation, voltage imbalance, waveform distortion, voltage fluctuation (and flicker), and power–frequency variation. Main sources for the formulations and measures of power quality are IEEE Std 100, IEC Std 61000-1-1, and CENELEC Std EN 50160. Some of the main detrimental effects of poor power quality include increase or decrease of the fundamental voltage component, additional losses, heating, and noise, decrease of appliance and equipment lifetime, malfunction and failure of components, controllers, and loads, resonance and ferroresonance, flicker, harmonic instability, and undesired (harmonic, subharmonic, and interharmonic) torques.

Documents for control of power quality come in three levels of applicability and validity: guidelines, recommendations, and standards. IEEE-Std 519 and IEC 61000 (or EN 61000) are the most commonly used references for power quality in the United States and Europe, respectively.

Three techniques are used for harmonic analysis: time-domain simulation, frequency (harmonic)-domain modeling, and iterative procedures.

Many mitigation techniques for controlling power quality have been proposed, including high power quality equipment design, harmonic cancellation, dedicated line or transformer, optimal placement and sizing of capacitor banks, derating of devices, harmonic filters (passive, active, hybrid), and custom-build power devices. The practice is that if at PCC harmonic currents are not within the permissible limits, the consumer with the nonlinear load must take some measures to comply with standards. However, if harmonic voltages are above

recommended levels—and the harmonic currents injected comply with standards—the utility will have to take appropriate actions to improve the power quality.

Nine application examples with solutions are provided for further clarifications of the presented materials. The reader is encouraged to read the overview of the text given in the preface before delving further into the book.

1.10 Problems

Problem 1.1: Delta/gye three-phase transformer configuration

- Perform a PSpice analysis for the circuit of Fig. P1.1, where a three-phase diode rectifier with filter (e.g., capacitor C_f) serves a load (R_{load}). You may assume ideal transformer conditions. For your convenience you may assume $(N_1/N_2)=1$, $R_{syst}=0.01\Omega$, $X_{syst}=0.05\Omega$ @ $f=60\text{ Hz}$, $v_{AB}(t)=\sqrt{2}\cdot 600\text{ Vcos}\omega t$, $v_{BC}(t)=\sqrt{2}\cdot 600\text{ Vcos}(\omega t-120^\circ)$, $v_{CA}(t)=\sqrt{2}\cdot 600\text{ Vcos}(\omega t-240^\circ)$, ideal diodes D_1 to D_6 , $C_f=500\mu\text{F}$, and $R_{load}=10\Omega$. Plot one period of either voltage or current after steady state has been reached as requested in parts *b* to *e*.
- Plot and subject the line-to-line voltages $v_{AB}(t)$ and $v_{ab}(t)$ to Fourier analysis. Why are they different?
- Plot and subject the input line current $i_{AL}(t)$ of the delta primary to a Fourier analysis. Note that the input line currents of the primary delta do not contain the 3rd, 6th, 9th, 12th, ..., that is, harmonic zero-sequence current components.
- Plot and subject the phase current $i_{Aph}(t)$ of the delta primary to a Fourier analysis. Why do the phase currents of the primary delta not contain the 3rd, 6th, 9th, 12th, ..., that is, harmonic zero-sequence current components?
- Plot and subject the output current $i_{aph}(t)$ of the wye secondary to a Fourier analysis. Why do the output currents of the secondary wye not contain the 3rd, 6th, 9th, 12th, ..., that is, zero-sequence current components?

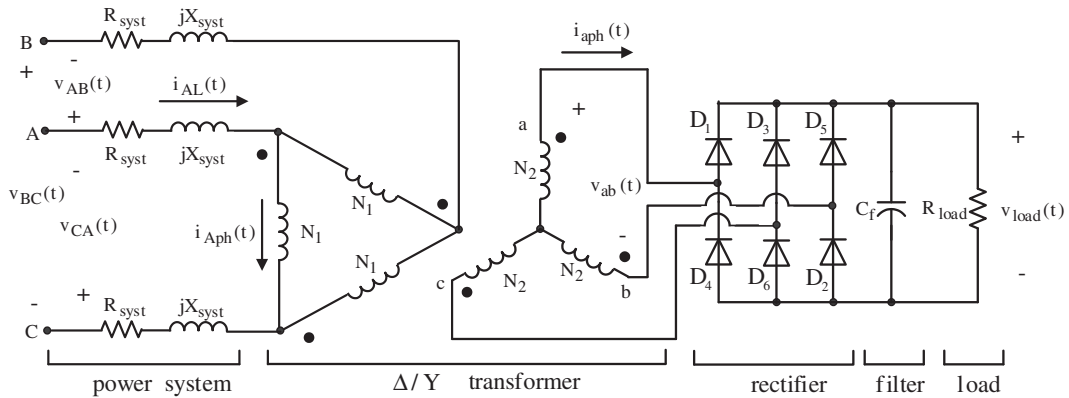


FIG. P1.1 Connection of a delta/wye three-phase transformer with a diode rectifier, filter, and load.

Problem 1.2: Voltage phasor diagrams of a three-phase transformer in delta/zigzag connection

Fig. P1.2 depicts the so-called delta/zigzag configuration of a three-phase transformer, which is used for supplying power to unbalanced loads and three-phase rectifiers. You may assume ideal transformer conditions. Draw a phasor diagram of the primary and secondary voltages when there is no load on the secondary side. For your convenience you may assume $(N_1/N_2)=1$. For balanced phase angles 0, 120, and 240 degrees of voltages and currents you may use hexagonal paper.

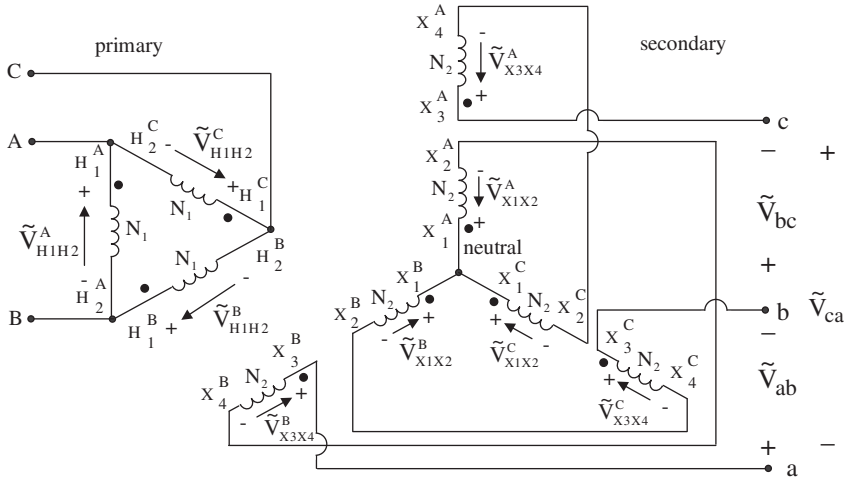


FIG. P1.2 Connection of a delta/zigzag, three-phase transformer with the definition of primary and secondary voltages.

Problem 1.3: Current phasor diagrams of a three-phase transformer in delta/zigzag connection with line-to-line load

The delta/zigzag, three-phase configuration is used for feeding unbalanced loads and three-phase rectifiers. You may assume ideal transformer conditions. Even when only one line-to-line load (e.g., R_{load}) of the secondary is present as indicated in Fig. P1.3, the primary line currents $\tilde{I}_{LA}$, $\tilde{I}_{LB}$ and $\tilde{I}_{LC}$ will be balanced because the line-to-line load is distributed to all three (single-phase) transformers. This is the advantage of a delta/zigzag configuration. If there is a resistive line-to-line load on the secondary side ($|\tilde{I}_{load}| = 10$ A) present as illustrated in Fig. P1.3, draw a phasor diagram of the primary and secondary currents as defined in Fig. P1.3. For your convenience you may assume that the same voltage definitions apply as in Fig. P1.2 and $(N_1/N_2)=1$. For balanced phase angles 0, 120, and 240 degrees of voltages and currents you may use hexagonal paper.

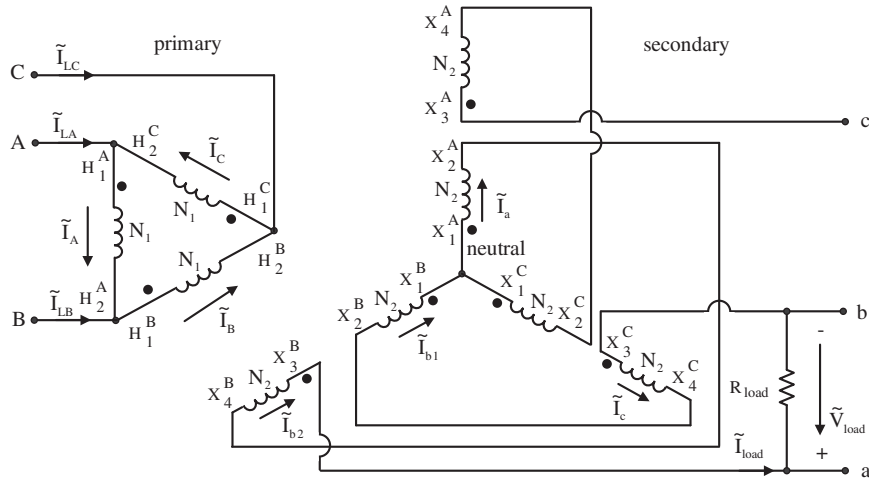


FIG. P1.3 Connection of a delta/zigzag, three-phase transformer with the definition of current for line-to-line load.

Problem 1.4: Current phasor diagrams of a three-phase transformer in delta/zigzag connection with line-to-neutral load

Repeat the analysis of Problem 1.3 if there is a resistive line-to-neutral load on the secondary side ($|\tilde{I}_{load}| = 10 \text{ A}$) present, as illustrated in Fig. P1.4; that is, draw a phasor diagram of the primary and secondary currents as defined in Fig. P1.4. For your convenience you may assume that the same voltage definitions apply as in Fig. P1.2 and $(N_1/N_2) = 1$. In this case, the load is distributed to two (single-phase) transformers. For balanced phase angles 0, 120, and 240 degrees of voltages and currents you may use hexagonal paper.

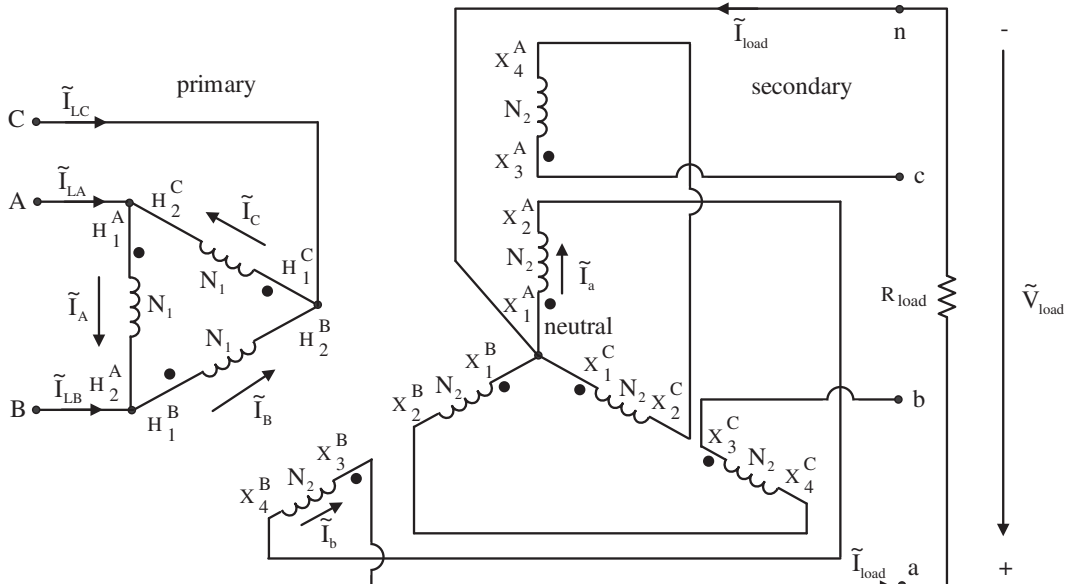


FIG. P1.4 Connection of a delta/zigzag, three-phase transformer with the definition of current for line-to-neutral load.

Problem 1.5: Current phasor diagrams of a three-phase transformer in delta/zigzag connection with three-phase unbalanced load

Repeat the analysis of Problem 1.3 if there is a resistive unbalanced load on the secondary side ($|\tilde{I}_{\text{load } a}| = 30 \text{ A}$, $|\tilde{I}_{\text{load } b}| = 20 \text{ A}$, $|\tilde{I}_{\text{load } c}| = 10 \text{ A}$) present as illustrated in Fig. P1.5; that is, draw a phasor diagram of the primary and secondary currents as defined in Fig. P1.5. For your convenience you may assume that the same voltage definitions apply as in Fig. P1.2 and $(N_1/N_2) = 1$. For balanced phase angles 0, 120, and 240 degrees of voltages and currents you may use hexagonal paper.

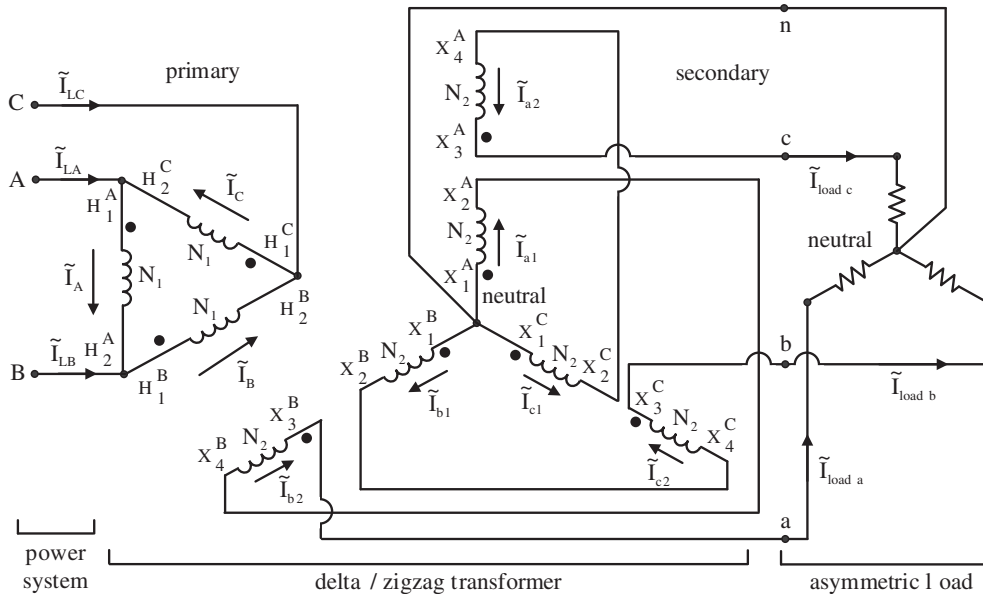


FIG. P1.5 Connection of a delta/zigzag, three-phase transformer with the definition of currents for three-phase unbalanced line-to-neutral loads.

Problem 1.6: Delta/zigzag three-phase transformer configuration without filter

Perform a PSpice analysis for the circuit of Fig. P1.6 where a three-phase diode rectifier without filter (e.g., capacitance $C_f = 0$) serves R_{load} . You may assume ideal transformer conditions. For your convenience you may assume $(N_1/N_2) = 1$, $R_{\text{syst}} = 0.01 \Omega$, $X_{\text{syst}} = 0.05 \Omega$ @ $f = 60 \text{ Hz}$, $v_{AB}(t) = \sqrt{2} \times 600 \text{ V} \cos \omega t$, $v_{BC}(t) = \sqrt{2} \times 600 \text{ V} \cos(\omega t - 120^\circ)$, $\sqrt{2} \times 600 \text{ V} \cos(\omega t - 240^\circ)$, ideal diodes D_1 to D_6 , and $R_{\text{load}} = 10 \Omega$. Plot one period of either voltage or current after steady state has been reached as requested in the following parts.

- Plot and subject the line-to-line voltages $v_{AB}(t)$ and $v_{ab}(t)$ to a Fourier analysis. Why are they different?

- Plot and subject the input line current $i_{AL}(t)$ of the delta primary to a Fourier analysis. Note that the input line currents of the primary delta do not contain the 3rd, 6th, 9th, 12th, ..., that is, harmonic zero-sequence current components.
- Plot and subject the phase current $i_{Aph}(t)$ of the delta primary to a Fourier analysis. Why do the phase currents of the primary delta not contain the 3rd, 6th, 9th, 12th, ..., that is, harmonic zero-sequence current components?
- Plot and subject the output current $i_{aph}(t)$ of the zigzag secondary to a Fourier analysis. Why do the output currents of the secondary zigzag not contain the 3rd, 6th, 9th, 12th, ..., that is, harmonic zero-sequence current components?
- Plot and subject the output voltage $v_{load}(t)$ to a Fourier analysis.

Problem 1.7: Delta/zigzag three-phase transformer configuration with filter

Perform a PSpice analysis for the circuit of Fig. P1.6 where a three-phase diode rectifier with filter (e.g., capacitance $C_f = 500 \mu\text{F}$) serves the load R_{load} . You may assume ideal transformer conditions. For your convenience you may assume $(N_1/N_2)=1$, $R_{syst}=0.01 \Omega$, $X_{syst}=0.05 \Omega$ @ $f=60\text{Hz}$, $v_{AB}(t) = \sqrt{2} \times 600 \text{ V} \cos \omega t$, $v_{BC}(t) = \sqrt{2} \times 600 \text{ V} \cos(\omega t - 120^\circ)$, $v_{CA}(t) = \sqrt{2} \times 600 \text{ V} \cos(\omega t - 240^\circ)$, ideal diodes D_1 to D_6 , and $R_{load}=10 \Omega$. Plot one period of either voltage or current after steady state has been reached as requested in the following parts.

- Plot and subject the line-to-line voltages $v_{AB}(t)$ and $v_{ab}(t)$ to a Fourier analysis. Why are they different?
- Plot and subject the input line current $i_{AL}(t)$ of the delta primary to a Fourier analysis. Note that the input line currents of the primary delta do not contain the 3rd, 6th, 9th, 12th, ..., that is, harmonic zero-sequence current components.
- Plot and subject the phase current $i_{Aph}(t)$ of the delta primary to a Fourier analysis. Why do the phase currents of the primary delta not contain the 3rd, 6th, 9th, 12th, ..., that is, zero-sequence current components?

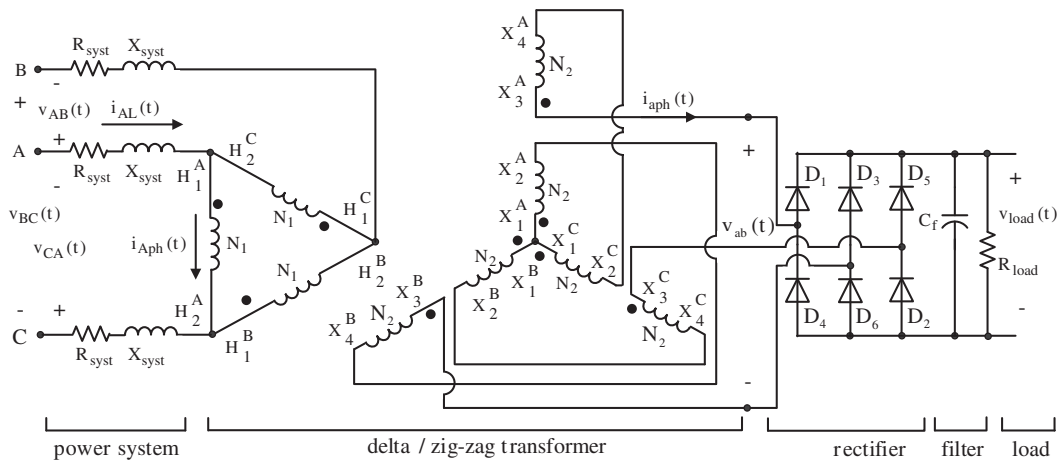


FIG. P1.6 Connection of a delta/zigzag, three-phase transformer with a diode rectifier and load R_{load} .

- d) Plot and subject the output current $i_{aph}(t)$ of the zigzag secondary to a Fourier analysis. Why do the output currents of the secondary zigzag not contain the 3rd, 6th, 9th, 12th, ..., that is, harmonic zero-sequence current components?
- e) Plot and subject the output voltage $v_{load}(t)$ to a Fourier analysis.

Problem 1.8: Transient performance of a brushless DC motor fed by a fuel cell [53]

Replace the battery [52] (with the voltage $V_{DC} = 300$ V) of Fig. E1.3.1 by the equivalent circuit of the fuel cell as described in fig. 2 of [67]. You may assume that in fig. 2 of [67] the voltage $E = 300 \pm 30$ V, where the superimposed rectangular voltage ± 30 V has a period of $T_{\pm 30} = 1$ s. The remaining parameters of the fuel cell equivalent circuit can be extrapolated from Table III of [67]. Repeat the analysis as requested in Application Example 1.3.

Problem 1.9: Transient performance of an inverter feeding into three-phase power system when supplied by a fuel cell [53]

Replace the DC source (with the voltage $V_{DC} = 450$ V) of Fig. E1.5.1 by the equivalent circuit of the fuel cell as described in fig. 2 of [67]. You may assume that in fig. 2 of [67] the voltage $E = 600 \pm 30$ V, where the superimposed rectangular voltage ± 30 V has a period of $T_{\pm 30} = 1$ s. The remaining parameters of the fuel cell equivalent circuit can be extrapolated from table III of [67]. Repeat the analysis as requested in Application Example 1.5.

Problem 1.10: Suppression of subharmonic of 30 Hz with a dedicated transformer

An air-conditioning drive (compressor motor) generates a subharmonic current of $I_{30\text{ Hz}} = 1$ A due to spatial harmonics (e.g., selection of number of slots, rotor eccentricity). A sensitive load fed from the same pole transformer is exposed to a terminal voltage with the low beat frequency of 30 Hz. A dedicated transformer can be used to suppress the 30 Hz component from the power supply of the sensitive load (see Figs. E1.6.1 and E1.6.4–E1.6.6).

The parameters of the single-phase pole transformer at 60 Hz are $X_{sP} = X_{pP'} = 0.07 \Omega$, $R_{sP} = R_{pP'} = 0$.

- Draw an equivalent circuit of the substation transformer (per phase) and that of the pole transformer.
- Find the required leakage primary and secondary leakage inductances L_{pD} and L_{sD} of the substation distribution transformer (per phase) for $R_{pD} = R_{sD} = 0$ such that the subharmonic voltage across the sensitive load $V_{30\text{ Hz}} \leq 1$ mV provided $L_{sD} = L_{pD}'$, where the prime refers the inductance L of the primary to the secondary side of the distribution transformer.
- Without using a dedicated transformer, design a passive filter such that the same reduction of the subharmonic is achieved.

Problem 1.11: Harmonic currents of a feeder

For Application Example 1.9 (Fig. E1.9.1), calculate the harmonic currents associated with users #3 and #4. Are they within the permissible power quality limits of IEEE-519?

Problem 1.12: Design a filter so that the displacement (fundamental power) factor $\cos\phi_1^{\text{total}}$ with filter will be 0.9 lagging (consumer notation) $\leq \cos\phi_1^{\text{total}}$ with filter ≤ 1.0

Fig. P1.12.1 shows the one-line diagram of an industrial plant being serviced from a utility transmission voltage at 13.8 kV_{L-L}. The total power demand on the utility system is 5 MVA: 3 MVA is a six-pulse static power converter load (three-phase rectifier with firing angle $\alpha = 30^\circ$, note $\cos\phi_1^{\text{nonlinear}} = 0.955\cos\alpha$ lagging), while the remaining 2 MVA is a linear (induction motor) load at $\cos\phi_1^{\text{linear}} = 0.8$ lagging (inductive) displacement (fundamental power) factor. The system impedance is $Z_{\text{sys}} = 10\%$ referred to a 10 MVA base.

- Calculate the short-circuit apparent power S_{SC} at PCC.
- Find the short-circuit current I_{SCphase} .
- Before filter installation, calculate the displacement (fundamental power) factor $\cos\phi_1^{\text{total}}$ without filter, where ϕ_1^{total} without filter is the angle between the fundamental voltage $\tilde{V}_{\text{phase}} = V_{\text{phase}}\angle 0^\circ$ and the total fundamental phase current. Hint: For calculation of $\tilde{I}_{\text{totalphase}}$ you may:
 - use a (per-phase) phasor diagram and perform calculations using the cosine law (see Fig. P1.12.2): $a^2 = b^2 + c^2 - 2 \cdot b \cdot c \cdot \cos(\alpha)$

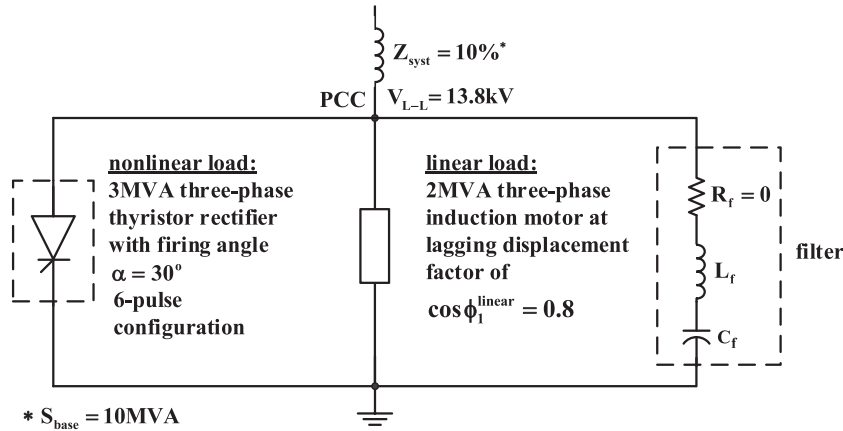


FIG. P1.12.1 Distribution feeder with nonlinear and linear loads as well as a filter.




FIG. P1.12.2 The application of cosine law.

- draw the phasor diagram to scale and find $\tilde{I}_{\text{totalphase}}$ by graphical means, or
 - draw the phasor diagram and use complex calculations.
- d) Calculate harmonic currents and voltages without filter.
- e) Design a passive LC filter at the point of common coupling (PCC) such that the fundamental (60 Hz) current through the filter is $\tilde{I}_F = j100$ A. In your filter design calculation, you may neglect the influence of the ohmic resistance of the filter ($R_F = 0$). Tune the filter to the 6th harmonic: this will lead to two equations and two unknowns (L_F and C_F).
- f) Calculate the displacement (fundamental power) factor $\cos\Phi_1^{\text{total}}$ with filter after the filter has been installed. Is this filter design acceptable from a displacement (fundamental power) factor point of view?
- g) After the filter has been installed ($L_F = 6.04$ mH, $C_F = 32.36$ μ F, $R_F = 0$), compute $\rho_{\text{system}}^{5\text{th}}$ and $\rho_{\text{system}}^{7\text{th}}$. These two values provide information about resonance conditions within the feeder. What type of resonance exists?
- h) Calculate the harmonic currents and voltages with filter.
- i) Is there any advantage of using the $L_F C_F$ filter (see Fig. P1.12.3B) as compared to that of Fig. P1.12.3A? What is the effect on filtering if a resistance R_F^{parallel} is connected in parallel with the inductor L_F (see Fig. P1.12.3c)?

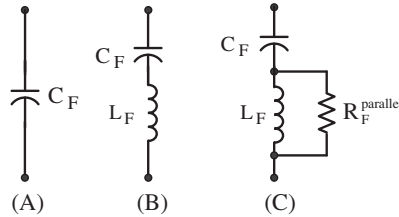


FIG. P1.12.3 Types of filters under consideration ($C_F = 32.36$ μ F, $L_F = 6.04$ mH, $R_F^{\text{parallel}} = 500$ Ω).

Problem 1.13: Passive filter calculations as applied to a distribution feeder with one user including a 12-pulse static power converter load

Fig. P1.13 shows the one-line diagram of a large industrial plant being serviced from a utility transmission voltage at 13.8 kV_{L-L}. The demand on the utility system is 50 MVA and 50% of its load is a 12-pulse static power converter load. For a system impedance $Z_{\text{sys}} = 2.3\%$ referred to a 10 MVA base and a short-circuit current to load current ratio of $R_{sc} = 8.7$ pu, design a passive RLC filter at the point of common coupling (PCC) such that the injected current harmonics and the resulting voltage harmonics at PCC are within the limits of IEEE-519 as proposed by the paper of Duffey and Stratford [57]: this paper shows that (without filter) the 11th, 13th, 23rd, 25th, 35th, 37th, 47th, and 49th current harmonics do not satisfy the limits of IEEE-519, and the 11th and 13th harmonic voltages violate the guidelines of IEEE-519 as well.

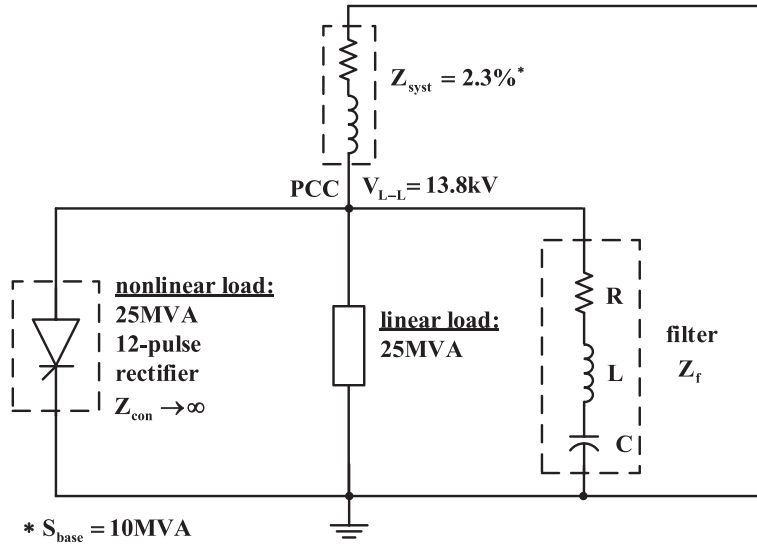


FIG. P1.13 Distribution feeder with one user including linear and nonlinear (12-pulse converter) load.

- For your design you may assume that an inductor with $L = 1\text{ mH}$ and $R = 0.10\Omega$ is available. Is this inductor suitable for such an RLC filter design? Compute the fundamental (60 Hz) current through the RLC filter and compare this current with the total load current.
- Calculate the harmonic currents and the harmonic voltages (5th to 19th) at PCC after the filter has been installed.

Problem 1.14: Passive filter calculations as applied to a distribution feeder with two users each with a six-pulse static power converter load

Fig. P1.14 shows a utility distribution feeder that has two users along the radial feeder. Each user sees a different value of short-circuit or system size.

- For each user compute from the plant specifications apparent short-circuit power S_{sc} , short-circuit phase current I_{scph} , apparent load power S_ℓ , load phase current $I_{\ell ph}$, load phase current of static power converter $I_{\ell spc}$, and short-circuit ratio R_{sc} .
- Determine the harmonic currents (in amperes and %) injected into the system due to the static power converter loads (up to 19th harmonic).
- Compute the harmonic voltages (in volts and %) induced at the 13.8 kV bus due to the harmonic currents transmitted (up to 19th harmonic).
- Design an RLC filter tuned to the frequency of the current with the largest harmonic amplitude. You may assume that an inductor with $R = 0.10\Omega$ and $L = 1\text{ mH}$ is available. The filter is to be installed at the 13.8 kV bus next to user #1.
- Recompute the current harmonics (up to 19th harmonic) transmitted into the system and their associated harmonic voltages at the 13.8 kV bus after the filter has been installed.
- Are the harmonic currents and voltages at user #1 and user #2 within the limits of IEEE-519 as recommended by the paper of Duffey and Stratford [57]?

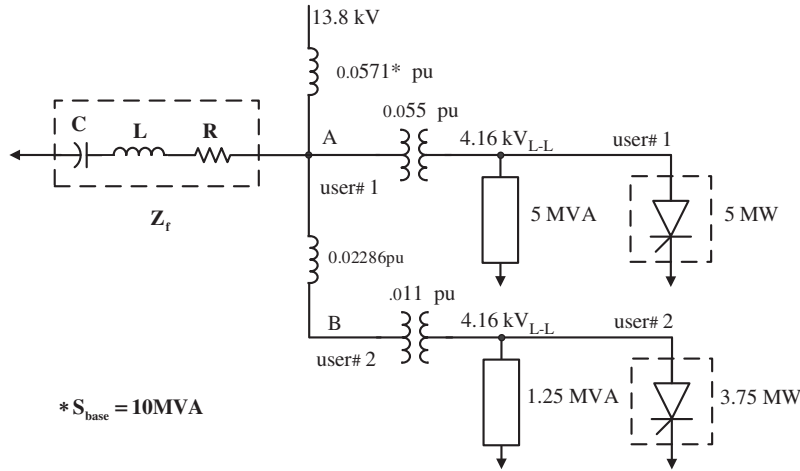


FIG. P1.14 Utility distribution feeder with two users.

Problem 1.15: Design two series LC filters so that the total displacement power factor $\cos\Phi_1^{\text{total}}$ with filter will be 0.9 lagging $\leq \cos\Phi_1^{\text{total}}$ with filter ≤ 1.0 , and the recommendations according to IEEE-519 are satisfied

Fig. P1.15 shows the one-line diagram of an industrial plant being serviced from a utility transmission voltage at 13.8 kV_{L-L}. The total power demand on the utility system is 5 MVA: 3 MVA is a six-pulse static power converter load (three-phase rectifier with firing angle $\alpha = 30^\circ$ degree, note $\cos\Phi_1^{\text{nonlinear}} = 0.955\cos\alpha$ lagging), while the remaining 2 MVA is a linear (induction motor) load at $\cos\Phi_1^{\text{linear}} = 0.8$ lagging (inductive) displacement power factor. The system impedance is $Z_{\text{sys}} = 10\%$ referred to a $S_{\text{base}} = 10$ MVA base.

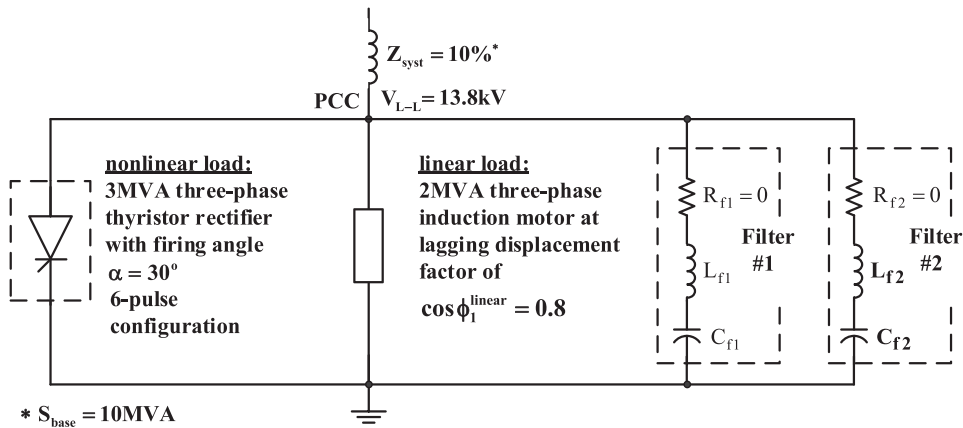


FIG. P1.15 Distribution feeder with nonlinear and linear loads and two LC series filters.

- a) Before any filter installation, the displacement power factor is $\cos\Phi_{1 \text{ with filter}}^{\text{total}} = 0.955\cos\alpha = 0.826$ or $\Phi_{1 \text{ without filter}}^{\text{total}} = 34.2$ degree lagging. The nonlinear load current is $|\tilde{I}_{\text{nonlinear_load}}| = 125.5$ A, the linear load current is $|\tilde{I}_{\text{linear_load}}| = 83.66$ A, and the total load current is $|\tilde{I}_{\text{total_load}}| = 209.1$ A. Verify these data.
- b) Calculate short-circuit apparent power S_{SC} at the point of common coupling (PCC).
- c) Find short-circuit current I_{scphase} and the short-circuit current ratio R_{sc} .
- d) If no filter is employed the harmonic currents I_h exceed IEEE-519 limits. Calculate the harmonic currents and voltages at PCC without filter up to 19th harmonic.
- e) To comply with IEEE-519 it is recommended to install two filters: one tuned at the 5th and the other one tuned at the 11th harmonic. Design two passive, series LC filters at PCC such that the fundamental (60Hz) current through each of the filters is $\tilde{I}_{f1} = \tilde{I}_{f2} = j50$ A. In your filter design calculation, you may neglect the influence of the ohmic resistances of the two filters ($R_{f1} = R_{f2} = 0$). As a function of the filter impedance of filter #1, Z_{f1_h} , and the filter impedance of filter #2, Z_{f2_h} , you may calculate an equivalent filter impedance $Z_{\text{equivalent_h}}$ which can be used for the calculation of the parameter $\rho_{\text{sys_h}}$. Make sure there are no parallel resonances.
- f) Calculate the harmonic currents $I_{\text{sys}5}$ through $I_{\text{sys}19}$ after the two filters have been installed. Are the harmonic currents after these two filters have been installed below the recommended IEEE-519 limits?
- g) Calculate the harmonic voltages V_h at PCC. Do they meet IEEE-519 recommendations?

References

- [1] IEEE Standard 519, IEEE recommended practices and requirements for harmonic control in electric power systems, IEEE-519, 1992.
- [2] IEC 61000-3-2 (2001-10) Consolidated Edition. Electromagnetic compatibility (EMC)—Part 3-2: Limits for harmonic current emissions.
- [3] W. Shepherd, P. Zand, *Energy Flow and Power Factor in Nonsinusoidal Circuits*, Cambridge University Press, 1979.
- [4] J. Arrillaga, D.A. Bradley, P.S. Bodeger, *Power System Harmonics*, John Wiley & Sons, 1985.
- [5] G.T. Heydt, *Electric Power Quality*, Star in a Circle Publications, 1991.
- [6] R.C. Dugan, M.F. McGranaghan, H.W. Beaty, *Electrical Power Systems Quality*, McGraw-Hill, 1996.
- [7] J. Arrillaga, B.C. Smith, N.R. Watson, A.R. Wood, *Power Systems Harmonic Analysis*, John Wiley & Sons, 1997.
- [8] J. Schlabbach, D. Blume, T. Stephanblome, *Voltage Quality in Electrical Power Systems*, Originally Published in German by VDE-Verlag in 1999, English Edition by, The Institution of Electrical Engineers, UK, 2001.
- [9] J. Arrillaga, N.R. Watson, S. Chen, *Power System Quality Assessment*, John Wiley & Sons, 2000.
- [10] C. Sankaran, *Power Quality*, CRC Press, 2002.
- [11] M.H.J. Bollen, *Understanding Power Quality Problems*, IEEE Press Series on Power Engineering, 2000.
- [12] B.W. Kennedy, *Power Quality Primer*, McGraw-Hill, 2000.
- [13] www.cnn.com/2014/06/10/tech/innovation/solar/flares.
- [14] A. Edris, FACTS technology development: an update, *IEEE Power Eng. Rev.* 20 (3) (2000) 4–9.
- [15] F. Nozari, H.S. Patel, Power electronics in electric utilities: HVDC power transmission systems, *Proc. IEEE* 76 (4) (1988) 495–506.
- [16] E.F. Fuchs, Electromagnetic field (EMF) generation and corona effects in transmission lines, in: RMEL Spring Conference, Denver, May 15–18, 2005.
- [17] X. Hui, Z. Xiangjun, F. Shaosheng, W. Xuebin, K. Lang, Medium-voltage power line carrier communication system, in: *PowerCon 2004. 2004 International Conference on Power System Technology*, 2004, Vol. 2, 21–24 November, 2004, pp. 1536–1539.

- [18] K. Stahlkopf, Dream jobs 2004, engineer in paradise, IEEE Spectrum, February 2004, p. 32.
- [19] T. Moore, Sharpening the focus on EMF research, IEEE Power Eng. Rev. 12 (8) (1992) 6–9.
- [20] B. Bhargava, Arc furnace flicker measurements and control, IEEE Trans. Power Delivery 8 (1) (1993) 400–410.
- [21] D.J. Shoup, J.J. Paserba, C.W. Taylor, A survey of current practices for transient voltage dip/sag criteria related to power system stability, in: IEEE PES Power Systems Conference and Exposition 2004, 10–13 October, vol. 2, 2004, pp. 1140–1147.
- [22] IEEE 1453-2011.
- [23] Standard IEEE-1159.
- [24] Standard EN-50160.
- [25] Standard IEEE-1250.
- [26] J.G. Kappenman, V.D. Albertson, Bracing for the geomagnetic storms, IEEE Spectr. 27 (3) (1990) 27–33.
- [27] E.F. Fuchs, Y. You, D. Lin, Development and validation of GIC transformer models, Final report prepared for Martin Marietta Energy Systems, Inc., Oak Ridge, Tennessee 37831-6501, Research Project Contract #19-SK205V, June 1996.
- [28] Y. You, E.F. Fuchs, D. Lin, P.R. Barnes, Reactive power demand of transformers with DC bias, IEEE Ind. Appl. Mag. (1996) 45–52.
- [29] E.F. Fuchs, A.A. Fardoun, Imulation of controller-motor drive system using SPICE, Final report prepared for Unique Mobility, Inc., Contract UNIQUE 153-7065-1, Englewood, Colorado 80110, January 1991.
- [30] W. Grady, E.F. Fuchs, D. Lin, T. Stensland, The potential effects of single-phase power electronic-based loads on power system distortion and losses, vol. 2, Final report #1000655 prepared for the EPRI-PEAC Corporation, September 2003.
- [31] E.F. Fuchs, Investigations on the impact of voltage and current harmonics on end-use devices and their protection, Summary Report DE-RA-50150-23 prepared for the U.S. Department of Energy under contract No. DE-AC02-80RA 50150, January 1987.
- [32] E.F. Fuchs, Power quality in power systems and electric machines, ECEN 5787 Course Notes, Department of Electrical and Computer Engineering, University of Colorado at Boulder, 2005. Fall.
- [33] E.F. Fuchs, D.J. Roesler, F.S. Alashhab, Sensitivity of home appliances to harmonics and fractional harmonics of the power system's voltage, part I: transformers and induction machines, in: International Conference on Harmonics in Power Systems, Worcester, Massachusetts, October 22–23, 1984.
- [34] E.F. Fuchs, D.J. Roesler, K.P. Kovacs, Sensitivity of home appliances to harmonics and fractional harmonics of the power system's voltage, part II: television sets, induction watt-hour meters and universal machines, in: International Conference on Harmonics in Power Systems, Worcester, Massachusetts, October 22–23, 1984.
- [35] J.F. Fuller, E.F. Fuchs, D.J. Roesler, Influence of harmonics on power system distribution protection, IEEE Trans. Power Delivery TPWRD-3 (2) (1988) 546–554.
- [36] Standard IEC 61000-4-7.
- [37] A. Dennhardt, Grundzüge der Tonfrequenz-Rundsteuertechnik und Ihre Anwendung, Verlags- und Wirtschaftsgesellschaft der Elektrizitätswerke m.b.H., Frankfurt 70-Stesemannallee 23, 1971.
- [38] D. Arlt, M. Stark, C. Eberlein, Examples of international flicker requirements in high voltage networks and real world measurements, in: 9th International Conference on Electric Power Quality and Utilization 2007, EPQU 2007, 2007, pp. 1–4.
- [39] R.K. Varma, R.M. Mathur, G.J. Rogers, P. Kundur, Modeling effects of system frequency variation in long-term stability studies, IEEE Trans. Power Syst. 11 (2) (1996) 827–832.
- [40] Standard IEEE Std 100.
- [41] IEEE Cat. No. 04EX951; 11th International Conference on Harmonics and Quality of Power 2004, 2004.
- [42] E.F. Fuchs, D. Lin, Testing of Power Planners at the University of Colorado, Final report, Boulder, Colorado, February 11, 1996.
- [43] T. Batan, Real-Time Monitoring and Calculation of the Derating of Single-Phase transformers Under Nonsinusoidal Operation, PhD thesis, University of Colorado at Boulder, April 8, 1999.
- [44] D. Yildirim, E.F. Fuchs, T. Batan, Test results of a 20 kW, direct-drive, variable-speed wind power plant, in: Proceedings of the International Conference on Electrical Machines, Istanbul, Turkey, September 2–4, 1998, pp. 2039–2044.
- [45] E.F. Fuchs, M.A.S. Masoum, M. Ladjevardi, Effects on distribution feeders from electronic loads based on future peak-load growth, part I: measurements, in: Proceedings of the IASTED International Conference on Power and Energy Systems (EuroPES 2005), Paper # 468-019, Benalmadena, Spain, June 15–17, 2005.

- [46] B.L. Agrawal, R.G. Farmer, Effective damping for SSR analysis of parallel turbine-generators, *IEEE Trans. Power Syst.* 3 (4) (1988) 1441–1448.
- [47] J. Wiik, J.O. Gjeffe, T. Gjengedal, Impacts from large scale integration of wind energy farms into weak power systems, in: *PowerCon 2000, Proceedings of International Conference on Power System Technology*, 2000. vol. 1, 4–7 December, 2000, pp. 49–54.
- [48] E. Clarke, *Circuit Analysis of AC Power Systems*, vol. II, John Wiley & Sons, 1950.
- [49] E.F. Fuchs, Y. You, Measurement of (λ -i) characteristics of asymmetric three-phase transformers and their applications, *IEEE Trans. Power Delivery* 17 (4) (2002) 983–990.
- [50] C.I. Budeanu, *Puissances Reactive et Fictive*, Inst. Romain de l'Energie, Bucharest, 1927.
- [51] D. Yildirim, Commissioning of a 30kVA Variable-Speed, Direct-Drive Wind Power Plant, PhD thesis, University of Colorado at Boulder, February 14, 1999.
- [52] The road ahead for EV batteries, *ERPI J.* (1996).
- [53] Private communication with the Ballard Company, www.ballard.com.
- [54] E.F. Fuchs, R. Fei, J. Hong, Harmonic Losses in Isotropic and Anisotropic Transformer Cores at Low Frequencies (60–3,000 Hz), Final Report prepared for Martin Marietta Energy Systems, Inc., Contract No. 19X-SD079C, January 1991.
- [55] J.P.G. de Abreu, A.E. Emanuel, The need to limit subharmonic injection, in: *Proceedings of the 9th International Conference on Harmonics and Quality of Power*, vol. I, October 1–4, 2000, pp. 251–253.
- [56] Standard IEC 61000.
- [57] C.K. Duffey, R.P. Stratford, Update of harmonic standard IEEE-519: IEEE recommended practices and requirements for harmonic control in power systems, *IEEE Trans. Ind. Appl.* 25 (6) (1989) 1025–1034.
- [58] A. Vladimirescu, SPICE—the third decade, in: *Proceedings of the 1990 Bipolar Circuits and Technology Meeting*, 1990, 17–18 September, 1990, pp. 96–101.
- [59] W. Long, D. Cotcher, D. Ruiiu, P. Adam, S. Lee, R. Adapa, EMTF—a powerful tool for analyzing power system transients, *IEEE Comput. Appl. Power* 3 (3) (1990) 36–41.
- [60] A. Mansoor, W.M. Grady, A.H. Chowdhury, M.J. Samotyj, An investigation of harmonics attenuation and diversity among distributed single-phase power electronic loads, *IEEE Trans. Power Delivery* 10 (1) (1995) 467–473.
- [61] A. Mansoor, W.M. Grady, R.S. Thallam, M.T. Doyle, S.D. Krein, M.J. Samotyj, Effect of supply voltage harmonics on the input current of single-phase diode bridge rectifier loads, *IEEE Trans. Power Deliv.* 10 (3) (1995) 1416–1422.
- [62] A. Mansoor, W.M. Grady, P.T. Staats, R.S. Thallam, M.T. Doyle, M.J. Samotyj, Predicting the net harmonic currents produced by large numbers of distributed single-phase computer loads, *IEEE Trans. Power Deliv.* 10 (4) (1995) 2001–2006.
- [63] M.A.S. Masoum, A. Jafarian, M. Ladjevardi, E.F. Fuchs, W.M. Grady, Fuzzy approach for optimal placement and sizing of capacitor banks in the presence of harmonics, *IEEE Trans. Power Deliv.* 19 (2) (2004) 822–829.
- [64] M.A.S. Masoum, M. Ladjevardi, A. Jafarian, E.F. Fuchs, Optimal placement, replacement and sizing of capacitor banks in distorted distribution networks by genetic algorithms, *IEEE Trans. Power Deliv.* 19 (4) (2004) 1794–1801.
- [65] E.F. Fuchs, Are harmonic recommendations according to IEEE 519 and CEI/IEC too restrictive? in: *Proceedings of Annual Frontiers of Power Conference*, Oklahoma State University, Stillwater, Oklahoma, Oct. 28–29, 2002. IV-1 to IV-18.
- [66] Standard ANSI/IEEE Std C57.110.
- [67] C. Wang, M.H. Nehrir, S.R. Shaw, Dynamic models and model validation for PEM fuel cells using electrical circuits, *IEEE Trans. Energy Convers.* 20 (2) (2005) 442–451.

Additional bibliography

- [68] E.F. Fuchs, Y. You, D.J. Roesler, Modeling, simulation and their validation of three-phase transformers with three legs under DC bias, *IEEE Trans. Power Deliv.* 14 (2) (1999) 443–449.
- [69] A.A. Fardoun, E.F. Fuchs, H. Huang, Modeling and simulation of an electronically commutated permanent-magnet machine drive system using SPICE, *IEEE Trans. Ind. Appl.* 30 (4) (1994) 927–937.
- [70] E.F. Fuchs, D. Lin, J. Martynaitis, Measurement of three-phase transformer derating and reactive power demand under nonlinear loading conditions, *IEEE Trans. Power Deliv.* 21 (2) (2006) 665–672.

- [71] E.F. Fuchs, D.J. Roesler, K.P. Kovacs, Aging of electrical appliances due to harmonics of the power system's voltage, *IEEE Trans. Power Deliv.* TPWRD-1 (3) (1986) 301–307.
- [72] E.F. Fuchs, W.J. Hanna, Measured efficiency improvements of induction motors with thyristor/triac controllers, *IEEE Trans. Energy Convers.* 17 (4) (2002) 437–444.
- [73] D. Lin, E.F. Fuchs, Real-time monitoring of iron-core and copper losses of three-phase transformer under (non) sinusoidal operation, *IEEE Trans. Power Deliv.* 21 (3) (2006) 1333–1341.
- [74] D. Yildirim, E.F. Fuchs, Commentary to various formulations of distortion power D, *IEEE Power Eng. Rev.* 19 (5) (1999) 50–52.
- [75] E.F. Fuchs, R. Fei, A new computer-aided method for the efficiency measurement of low-loss transformers and inductors under nonsinusoidal operation, *IEEE Trans. Power Deliv.* PWRD-11 (1) (1996) 292–304.
- [76] E.F. Fuchs, D.J. Roesler, M.A.S. Masoum, Are harmonic recommendations according to IEEE and IEC too restrictive? *IEEE Trans. Power Deliv.* 19 (4) (2004) 1775–1786.

This page intentionally left blank

Harmonic models of transformers

Extensive application of power electronics and other nonlinear components and loads creates single-time (e.g., spikes) and periodic (e.g., harmonics) events that could lead to serious problems within power system networks and its components (e.g., transformers). Some possible impacts of poor power quality on power transformers are

- saturating transformer core by changing its operating point on the nonlinear $\lambda - i$ curve,
- increasing core (hysteresis and eddy current) losses and possible transformer failure due to unexpected high losses associated with hot spots,
- increasing (fundamental and harmonic) copper losses,
- creating half-cycle saturation in the event of even harmonics and DC current,
- malfunctioning of transformer protective relays,
- aging and reduction of lifetime,
- reduction of efficiency,
- derating of transformers,
- decrease of the power factor,
- generation of parallel (harmonic) resonances and ferroresonance conditions, and
- deterioration of transformers' insulation near the terminals due to high voltage stress caused by lightning and pulse-width-modulated (PWM) converters.

These detrimental effects call for the understanding of how harmonics affect transformers and how to protect them against poor power quality conditions. For a transformer, the design of a harmonic model is essential for loss calculations, derating, and harmonic power flow analysis.

This chapter investigates the behavior of transformers under harmonic voltage and current conditions, and introduces harmonic transformer models suitable for loss calculations, harmonic power flow analysis, and computation of derating functions. After a brief introduction of the conventional (sinusoidal) transformer model, transformer losses with emphasis on the impacts of voltage and current harmonics are presented. Several techniques for the computation of single-phase transformer derating factors (functions) are introduced. Thereafter, a survey of transformer harmonic models is given. In subsequent sections, the issues of ferroresonance, geomagnetically induced currents (GICs), and transformer grounding are presented. A section is also provided for derating of three-phase transformers.

2.1 Sinusoidal (linear) modeling of transformers

Transformer simulation under sinusoidal operating conditions is a well-researched subject and many steady-state and transient models are available. However, transformer cores are made of ferromagnetic materials with nonlinear (B-H) or ($\lambda - i$) characteristics. They exhibit three types of nonlinearities that complicate their analysis: saturation effect, hysteresis (major and minor) loops, and eddy currents. These phenomena result in nonsinusoidal flux, voltage and current waveforms on primary and secondary sides, and additional copper (due to current harmonics) and core (due to hysteresis loops and eddy currents) losses at fundamental and harmonic frequencies. Linear techniques for transformer modeling neglect these nonlinearities (by assuming a linear ($\lambda - i$) characteristic) and use constant values for the magnetizing inductance and the core-loss resistance. Some more complicated models assume nonlinear dependencies of hysteresis and eddy-current losses with fundamental voltage magnitude and frequency, and use a more accurate equivalent value for the core-loss resistance. Generally, transformer total core losses can be approximated as

$$P_{fe} = P_{hys} + P_{eddy} = K_{hys}(B_{max})^S f + K_{eddy}(B_{max})^2 f^2, \quad (2.1)$$

where P_{hys} , P_{eddy} , B_{max} , and f are hysteresis losses, eddy-current losses, maximum value of flux density, and fundamental frequency, respectively. K_{hys} is a constant for the grade of iron employed and K_{eddy} is the eddy-current constant for the conductive material. S is the Steinmetz exponent ranging from 1.5 to 2.5 depending on the operating point of transformer core.

Transient models are used for transformer simulation during turning-on (e.g., inrush currents), faults, and other types of disturbances. They are based on a system of time-dependent differential equations usually solved by numerical algorithms. Transient models require a considerable amount of computing time. Steady-state models mostly use phasor analysis in the frequency domain to simulate transformer behavior, and require less computing times than transient models. Transformer modeling for sinusoidal conditions is not the main objective of this chapter. However, Fig. 2.1 illustrates a relatively simple and accurate frequency-based linear model that will be extended to a harmonic model in Section 2.4. In this figure, R_c is the core-loss resistance, L_m is the (linear) magnetizing inductance, and R_p , R'_s , L_p , and L'_s , are transformer primary and secondary resistances and inductances, respectively. Superscript 'is used for quantities referred from the secondary side to the primary side of the transformer.

The steady-state model of Fig. 2.1 is not suitable for harmonic studies since constant values are assumed for the magnetizing inductance and the core-loss resistance. However, this

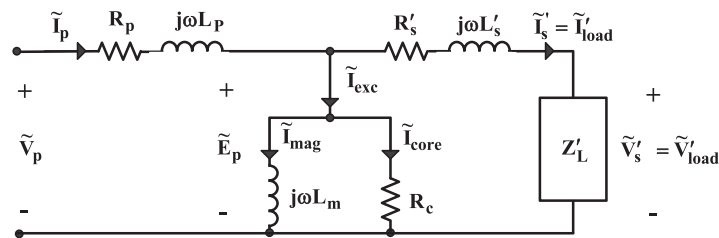


FIG. 2.1 Linear single-phase, steady-state transformer model for sinusoidal analysis.

simple and practical frequency-based model generates acceptable results if a transformer were to operate in the linear region of the $(\lambda - i)$ characteristic, and the harmonic frequency is taken into account.

2.2 Harmonic losses in transformers

Losses due to harmonic currents and voltages occur in windings because of the skin effect and the proximity effect. It is well known that harmonic current $i_h(t)$ and harmonic voltage $v_h(t)$ must be present in order to produce harmonic losses

$$p_h(t) = i_h(t) \cdot v_h(t). \quad (2.2)$$

If either $i_h(t)$ or $v_h(t)$ are zero then $p_h(t)$ will be zero as well. Harmonic losses occur also in iron cores due to hysteresis and eddy-current phenomena. For linear (B-H) characteristics of iron cores, the losses are dependent on fundamental and harmonic amplitudes only, whereas for nonlinear iron-core (B-H) characteristics (Fig. 2.2) the phase shift between harmonic voltage and fundamental voltage is important as well. For example, a magnetizing current with maximum peak-to-peak values results in larger maximum flux densities than a magnetizing current with minimum peak-to-peak values. Proximity losses in windings and (solid) conducting parts of a device (e.g., frame) occur due to the relative location between the various windings and conductive parts.

2.2.1 Skin effect

If a conductor with cross section a_{cond} conducts a DC current I_{DC} , the current density $j_{\text{DC}} = I_{\text{DC}}/a_{\text{cond}}$ is uniform within the conductor and a resistance R_{DC} can be assigned to the conductor representing the ratio between the applied voltage V_{DC} and the resulting current I_{DC} , that is,

$$R_{\text{DC}} = \frac{V_{\text{DC}}}{I_{\text{DC}}}. \quad (2.3)$$

For (periodic) AC currents $i_{\text{ACh}}(t)$, the current flows predominantly near the surface of the conductor and the current density j_{ACh} is nonuniform within the conductor (Fig. 2.3). In general, $R_{\text{DC}} < R_{\text{ACh}}$. The higher the order h of the harmonic current $i_{\text{ACh}}(t)$, the larger is the skin effect.

2.2.2 Proximity effect

The AC current distribution within a conductor depends on the current distribution of neighboring conductors or conducting parts. The AC field $\vec{H}$ of a single conductor in free space consists of circles symmetric to the axis of the conductor. Ampere's law

$$\oint_C \vec{H} \cdot d\vec{\ell} = \int_S^{\text{surface}} \vec{J} \cdot d\vec{s}. \quad (2.4)$$

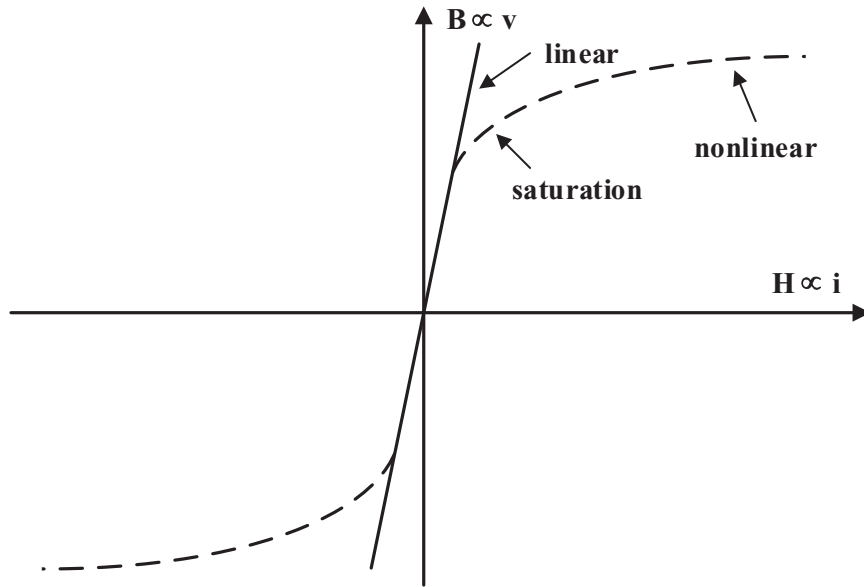


FIG. 2.2 Linear and nonlinear iron-core characteristics.

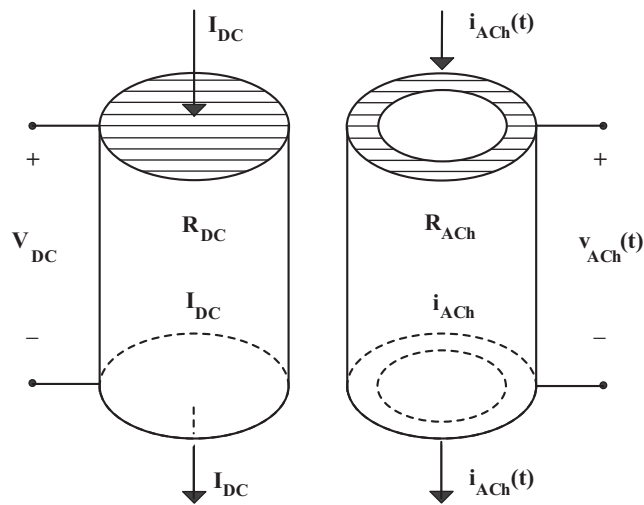


FIG. 2.3 DC resistance R_{DC} versus AC resistance R_{ACh} .

If there are two conductors or more, the circular fields will be distorted and the resulting eddy-current losses within the conductor will differ from those of single conductors. In Figs. 2.4 and 2.5, H stands for $|\vec{H}|$.

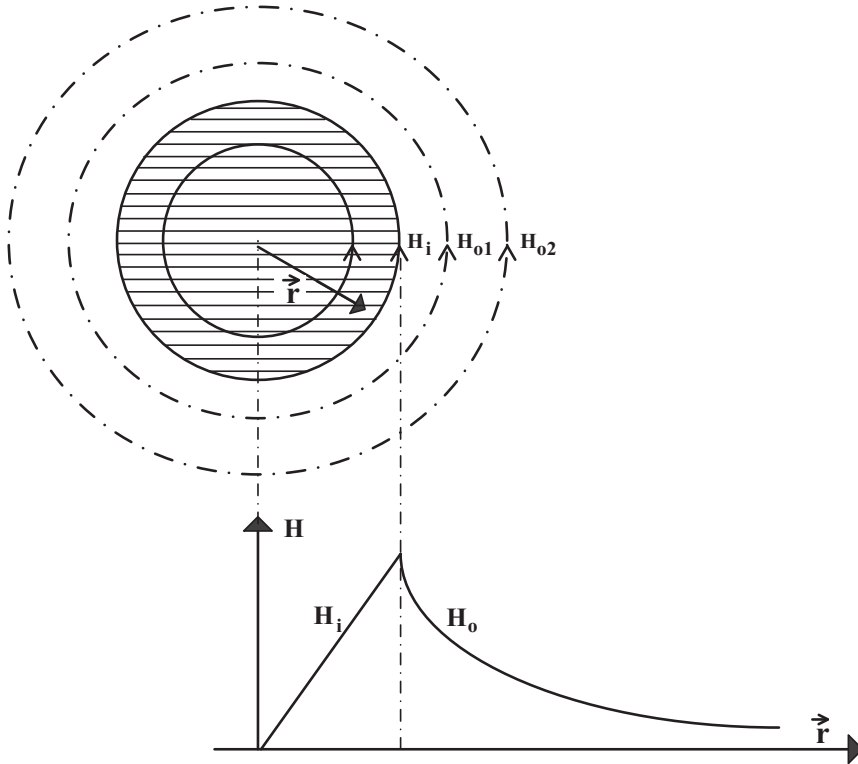


FIG. 2.4 Magnetic field strength inside and outside of a conductor.

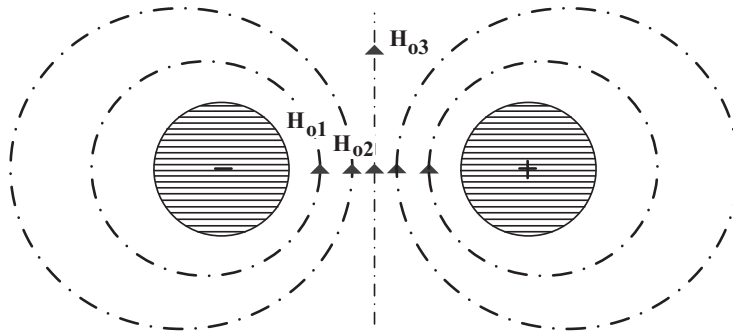


FIG. 2.5 Distortion of magnetic fields due to proximity effect.

2.2.3 Magnetic iron-core (hysteresis and eddy-current) losses

All magnetic materials exhibit saturation and hysteresis properties: there are major loops and minor loops (Fig. 2.6) and such characteristics are multivalued for either a single H or a single B value.

Therefore, even if there is a sinusoidal input voltage to a magnetic circuit and no minor (B-H) loops are assumed, a nonsinusoidal current and increased losses are generated. For nonsinusoidal excitation and/or nonlinear loads, excessive magnetic and (fundamental and harmonic) copper losses may result that could cause transformer failure. In most cases, hysteresis losses can be neglected because they are relatively small as compared with copper losses. However, the nonlinear saturation behavior must be taken into account because all transformers and electric machines operate for economic reasons beyond the knee of saturation.

Faraday's law

$$e(t) = \frac{d\lambda(t)}{dt}, \quad (2.5)$$

or

$$\lambda(t) = \int e(t) dt, \quad (2.6)$$

is valid, where $e(t)$ is the induced voltage of a winding residing on an iron core, $\lambda(t) = N\Phi(t)$ are the flux linkages, N is the number of turns of a winding, and $\Phi(t)$ is the flux linked with the winding.

Depending on the phase shift of a harmonic voltage with respect to the fundamental voltage the resulting wave shape of the flux linkages will be different and not proportional to the resulting voltage wave shape due to the integral relationship between flux linkages $\lambda(t)$ and induced voltage $e(t)$ [1–6].

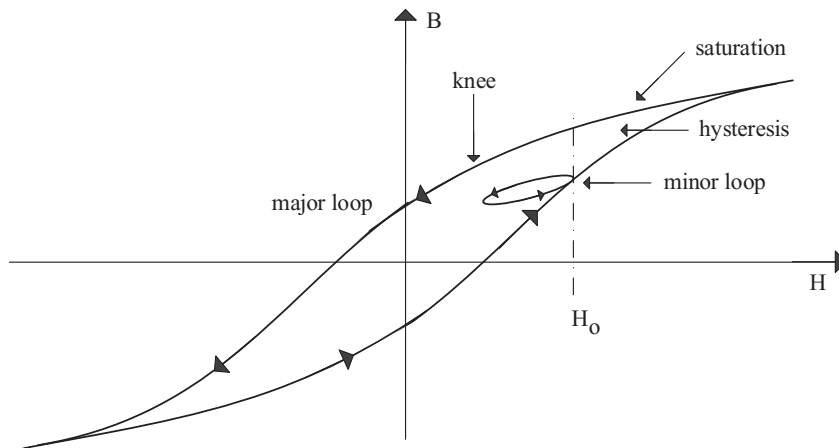


FIG. 2.6 Nonlinear characteristics of transformer core with major and minor hysteresis loops.

2.2.3.1 Application Example 2.1: Relation between voltages and flux linkages for 0° phase shift between fundamental and harmonic voltages

If the third harmonic voltage $e_3(t)$ is in phase (0°) with the fundamental voltage $e_1(t)$ results in a maximum peak-to-peak value for the total nonsinusoidal voltage. According to Eq. (2.6), the peak-to-peak value of the generated $\lambda(t)$ is then minimum, as illustrated by Fig. E2.1.1.

Rule. A “peaky” (peak-to-peak is maximum) voltage $\{e_1(t) + e_3(t)\}$ results in “flat” (peak-to-peak is minimum) flux linkages.

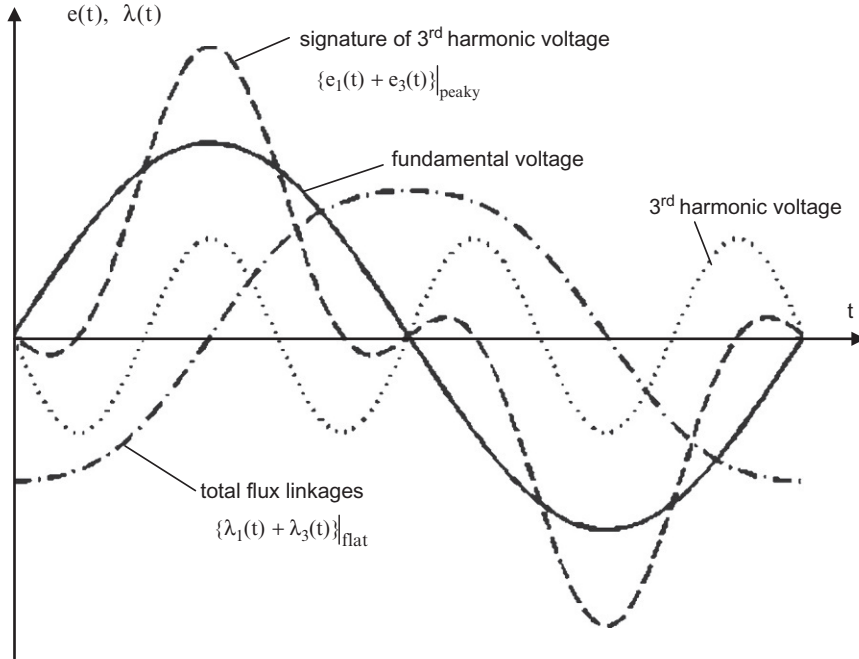


FIG. E2.1.1 Superposition of fundamental and third harmonic voltages that are in phase (0° , peak-to-peak voltage is maximum).

2.2.3.2 Application Example 2.2: Relation between voltages and flux linkages for 180° phase shift between fundamental and harmonic voltages

If the third harmonic voltage $e_3(t)$ is out of phase (180°) with the fundamental voltage $e_1(t)$ then the total voltage and the resulting flux linkages have minimum and maximum peak-to-peak values, respectively (Fig. E2.2.1).

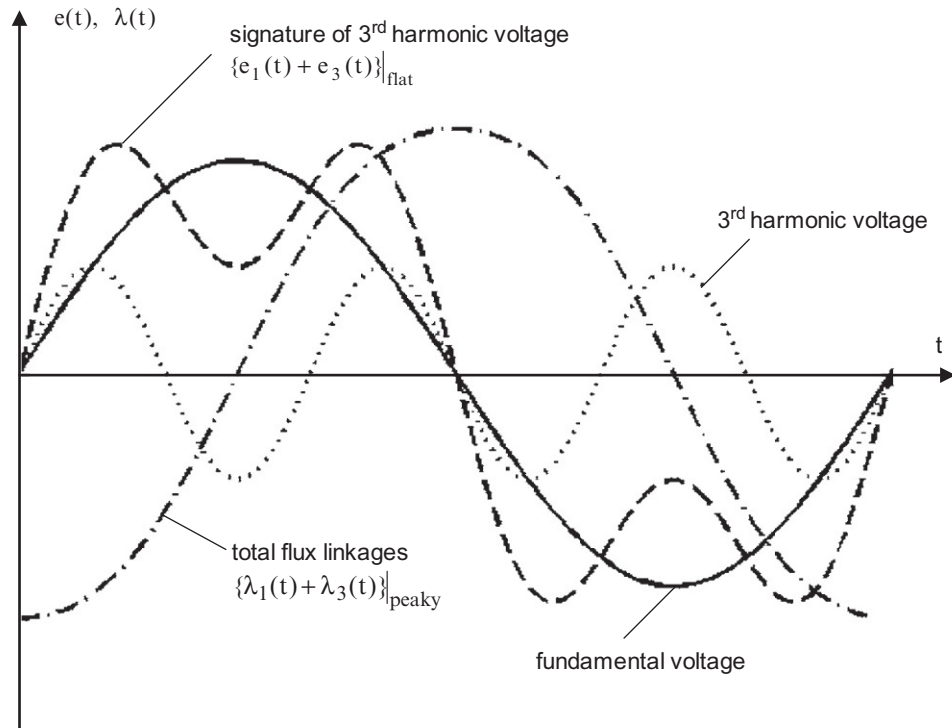


FIG. E2.2.1 Superposition of fundamental and third harmonic voltages that are out of phase (180° , peak-to-peak voltage is minimum).

Rule. A “flat” (peak-to-peak is minimum) voltage $\{e_1(t) + e_3(t)\}$ results in “peaky” (peak-to-peak is maximum) flux linkages.

Generalization. For higher harmonic orders, similar relations between the nonsinusoidal waveforms of induced voltage and flux linkages exist; however, there is an alternating behavior as demonstrated in Table E2.2.1.

TABLE E2.2.1 Phase relations between induced voltages and flux linkages when a harmonic is superposed with the fundamental.

Harmonic order	Nonsinusoidal voltage $e_1(t) + e_h(t)$	Nonsinusoidal flux linkage $\lambda_1(t) + \lambda_h(t)$
$h = 3$	$\{e_1(t) + e_3(t)\}$ peaky ^a	$\{\lambda_1(t) + \lambda_3(t)\}$ flat ^b
	$\{e_1(t) + e_3(t)\}$ flat	$\{\lambda_1(t) + \lambda_3(t)\}$ peaky
$h = 5$	$\{e_1(t) + e_5(t)\}$ peaky	$\{\lambda_1(t) + \lambda_5(t)\}$ peaky
	$\{e_1(t) + e_5(t)\}$ flat	$\{\lambda_1(t) + \lambda_5(t)\}$ flat
$h = 7$	$\{e_1(t) + e_7(t)\}$ peaky	$\{\lambda_1(t) + \lambda_7(t)\}$ flat
	$\{e_1(t) + e_7(t)\}$ flat	$\{\lambda_1(t) + \lambda_7(t)\}$ peaky
$h = 9$	$\{e_1(t) + e_9(t)\}$ peaky	$\{\lambda_1(t) + \lambda_9(t)\}$ peaky
	$\{e_1(t) + e_9(t)\}$ flat	$\{\lambda_1(t) + \lambda_9(t)\}$ flat
$\vdots$	$\vdots$	$\vdots$

^a Maximum peak-to-peak value.

^b Minimum peak-to-peak value.

This alternating behavior (due to the integral relationship between $e(t)$ and $\lambda(t)$) influences the iron-core (magnetic) losses significantly. Therefore, it is possible that a nonsinusoidal voltage results in less iron-core losses than a sinusoidal wave shape [2]. Note that the iron-core losses are a function of the maximum excursions of the flux linkages (or flux densities $B_{\max}$).

2.2.4 Loss measurement

For low efficiency ($\eta < 97\%$) devices (e.g., transformers) the conventional indirect loss measurement approach, where the losses P_{loss} are the difference between measured input power P_{in} and measured output power P_{out} , is acceptable. However, for high efficiency ($\eta \geq 97\%$) devices, the indirect loss measurement approach yields losses that have a large error.

2.2.4.1 Indirect loss measurement

Consider the two-port system shown in Fig. 2.7:

$$P_{\text{loss}} = P_{\text{in}} - P_{\text{out}}, \quad (2.7)$$

or

$$P_{\text{loss}} = \frac{1}{T} \int_0^T v_1 i_1 dt - \frac{1}{T} \int_0^T v'_2 i'_2 dt. \quad (2.8)$$

This is the conventional and relatively simple (indirect) technique used for loss measurements of most low-efficiency electric devices under sinusoidal and/or nonsinusoidal operating conditions.

2.2.4.2 Direct loss measurement

The two port system of Fig. 2.7 can be specified in terms of series and shunt impedances [1–6], as illustrated in Fig. 2.8.

The powers dissipated in Z_{series1} and Z'_{series2} are

$$P_{\text{series}} = \frac{1}{T} \int_0^T p_{\text{series}}(t) dt. \quad (2.9)$$

The power dissipated in Z_{shunt} is

$$P_{\text{shunt}} = \frac{1}{T} \int_0^T p_{\text{shunt}}(t) dt. \quad (2.10)$$

Therefore,

$$P_{\text{loss}} = P_{\text{series}} + P_{\text{shunt}}. \quad (2.11)$$

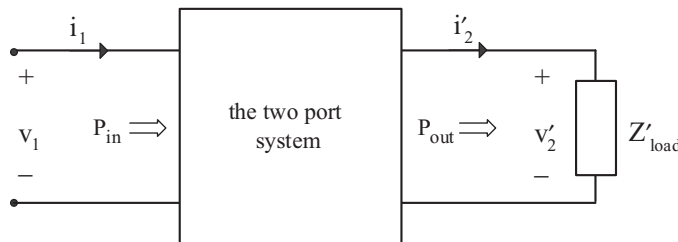


FIG. 2.7 Voltage and current definitions for a two-port system.

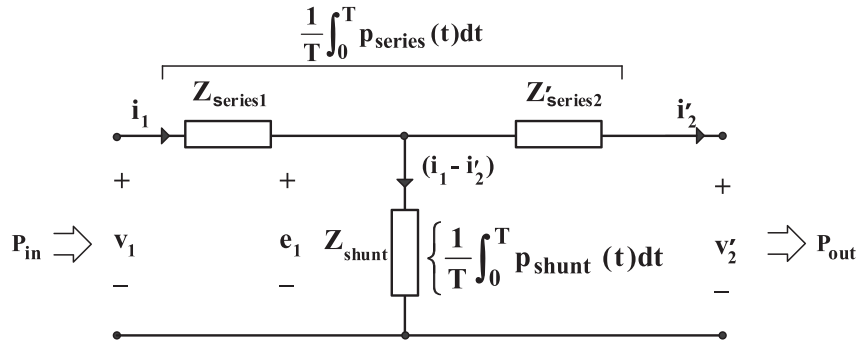


FIG. 2.8 Series and shunt impedances of a two-port system.

2.2.4.3 Application Example 2.3: Application of the direct-loss measurement technique to a single-phase transformer

The direct-loss measurement technique is used to measure losses of a single-phase transformer as illustrated in Fig. E2.3.1 [7].

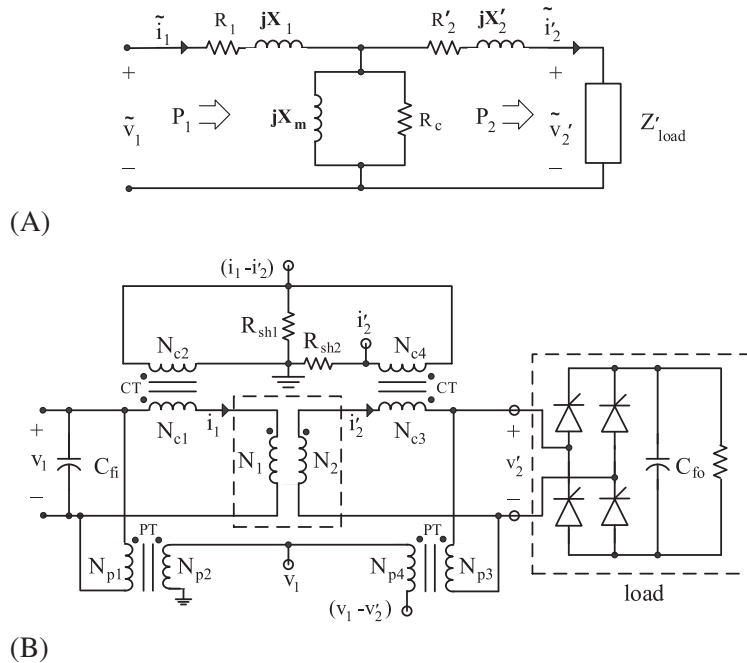


FIG. E2.3.1 Application of direct-loss measurement technique to a single-phase transformer; (A) equivalent circuit, (B) measuring circuit.

Solution to Application Example 2.3 *Application of the Direct-Loss Measurement Technique to a Single-Phase Transformer*

Transformer losses are

$$P_{loss} = P_1 - P_2 = \frac{1}{T} \int_0^T v_1 i_1 dt - \frac{1}{T} \int_0^T v'_2 i'_2 dt. \quad (E2.3.1)$$

Rearrangement of terms results in

$$P_{loss} = \frac{1}{T} \int_0^T i_1 (v_1 - v'_2) dt + \frac{1}{T} \int_0^T v'_2 (i_1 - i'_2) dt, \quad (E2.3.2)$$

$$P_{series} = \frac{1}{T} \int_0^T i_1 (v_1 - v'_2) dt, \quad (E2.3.3)$$

$$P_{shunt} = \frac{1}{T} \int_0^T v'_2 (i_1 - i'_2) dt. \quad (E2.3.4)$$

Note that P_{loss} consists of the sum (not the difference) of two components where $(v_1 - v'_2)$ and $(i_1 - i'_2)$ can be accurately measured and calibrated. Thus the difference of P_{in} and P_{out} is not computed as for the indirect, conventional method of [Section 2.2.4.1](#). This method can be applied to polyphase systems as discussed in [\[8,9\]](#). The two available sampling methods—series and parallel sampling—are addressed in Appendix 1.

2.3 Derating of single-phase transformers

According to the IEEE dictionary, derating is defined as “the intentional reduction of stress/strength ratio (e.g., real or apparent power) in the application of an item (e.g., transformer), usually for the purpose of reducing the occurrence of stress-related failure (e.g., reduction of lifetime of transformer due to increased temperature beyond rated temperature).” As has been discussed in [Section 2.2](#) harmonic currents and voltages result in harmonic losses increasing the temperature rise. This rise beyond its rated value results in a reduction of lifetime [\[10\]](#) as will be discussed in Chapter 7. For transformers two derating parameters can be defined:

- reduction in apparent power rating (RAPR), and
- real power capability (RPC).

Although the first one is independent of the power factor, the second one is strongly influenced by it.

2.3.1 Derating of transformers determined from direct-loss measurements

The direct-loss measurement technique of [Section 2.2.4.2](#) is applied and the reduction of apparent power (RAPR) is determined such that for any given total harmonic distortion of the current (THD_i), the rated losses of the transformer will not be exceeded. [Figs. 2.9 and 2.10](#) show the RAPR and RPC as a function of the THD_i.

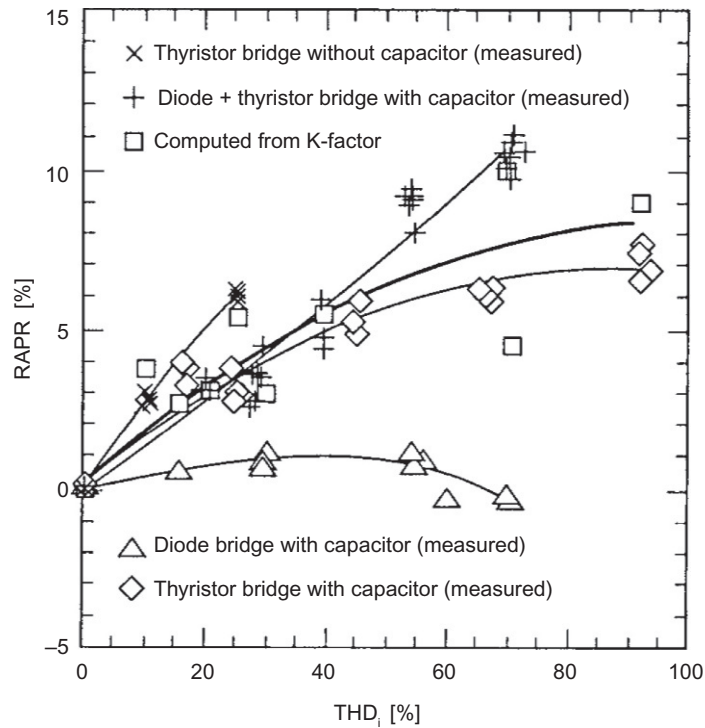


FIG. 2.9 Measured reduction in apparent power rating (RAPR) of 25 kVA single-phase pole transformer as a function of total harmonic current distortion (THD_i) where 3rd and 5th current harmonics are dominant. Calculated values from K-factor [12].

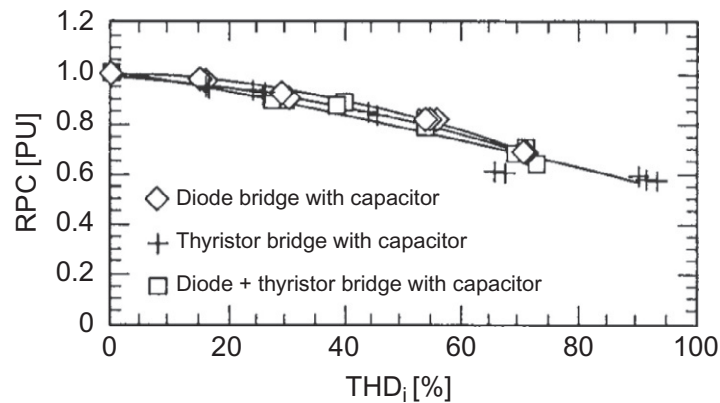


FIG. 2.10 Measured real power capability (RPC) of 25 kVA single-phase pole transformer as a function of total harmonic current distortion (THD_i) [12].

2.3.2 Derating of transformers determined from the K-factor

It is well known that power system transformers must be derated when supplying nonlinear loads. Transformer manufacturers have responded to this problem by developing transformers rated for 50% or 100% nonlinear load. However, the impact of nonlinear loads on transformers greatly depends on the nature and the harmonic spectrum caused by the nonlinear load, which is not considered by the manufacturers. The K-factor rating is an alternative technique for transformer derating that includes load characteristics [11,13].

The assumptions used in calculating K-factor can be found in ANSI/IEEE C57.110, IEEE Recommended Practice for Establishing Transformer Capability when Supplying Nonsinusoidal Load Currents [13,14]. This recommendation calculates the harmonic load current that causes losses equivalent to the rated (sinusoidal) load current so that the transformer's "hot spot" temperature will not be exceeded. The hot spot is assumed to be where eddy-current losses are the greatest and the coolant (oil) is hottest (e.g., at the inner low-voltage winding).

The load loss (LL) generating the hot spot temperature is assumed to consist of I^2R and eddy-current P_{EC} losses:

$$P_{LL} = I^2R + P_{EC} \text{ (watts)}. \quad (2.12)$$

The eddy current losses (Eq. 2.12) are proportional to the square of the current and frequency:

$$P_{EC} = K_{EC} I^2 h^2, \quad (2.13)$$

where K_{EC} is a proportionality constant. Under rated (sinusoidal) conditions, the load loss resulting in the hot spot temperature can be expressed as

$$P_{LL-R} = I^2R + P_{EC-R}, \quad (2.14)$$

where P_{EC-R} is the eddy-current loss resulting in the hot spot temperature under rated (sinusoidal) operating conditions. In per unit of the rated I^2R loss, Eq. (2.14) becomes

$$P_{LL-R} = 1 + P_{EC-R} \text{ (pu)}. \quad (2.15)$$

Therefore, the transformer load loss under harmonic conditions is

$$P_{LL} = \sum_{h=1}^{h \max} I_h^2 + \left(\sum_{h=1}^{h \max} I_h^2 h^2 \right) P_{EC-R} \text{ (pu)}. \quad (2.16)$$

The first and second terms on the right side of the above equation represent the I^2R loss and the eddy-current loss, respectively. Setting $P_{LL} = P_{LL-R}$ gives

$$1 + P_{EC-R} = \sum_{h=1}^{h \max} I_h^2 + \left(\sum_{h=1}^{h \max} I_h^2 h^2 \right) P_{EC-R} \text{ (pu)}. \quad (2.17)$$

Now, if we define the K-factor as follows [13]:

$$K = \frac{\sum_{h=1}^{h \max} I_h^2 h^2}{I_R^2} \text{ (pu)}, \quad (2.18)$$

then

$$1 + P_{EC-R} = \sum_{h=1}^{h \max} I_h^2 + K \left(\frac{\sum_{h=1}^{h \max} I_h^2}{\sum_{h=1}^{h \max} I_h^2} I_R^2 \right) P_{EC-R} (pu). \quad (2.19)$$

Solving for $\sum_{h=1}^{h \max} I_h^2$,

$$\sum_{h=1}^{h \max} I_h^2 = \frac{1 + P_{EC-R}}{1 + K \frac{I_R^2}{\sum_{h=1}^{h \max} I_h^2} (P_{EC-R})} (pu). \quad (2.20)$$

Therefore, the maximum amount of rms harmonic load current that the transformer can deliver is

$$I_{max}^{pu} = \sqrt{\frac{1 + P_{EC-R}}{1 + K \frac{I_R^2}{\sum_{h=1}^{h \max} I_h^2} (P_{EC-R})}} (pu). \quad (2.21)$$

Using the K-factor and transformer parameters, the maximum permissible rms current of the transformer can also be defined as follows [11]

$$I_{max}^{pu} = \sqrt{\frac{R_{DC} + (R_{EC-R})(1 - K) - \frac{(\Delta P_{fe} + \Delta P_{OSL})}{I_R^2}}{R_{DC}}}. \quad (2.22)$$

$R_{DC} = R_{DCprimary} + R'_{DCsecondary}$ is the total DC resistance of a transformer winding. R_{EC-R} is the rated pu additional resistance due to eddy currents. In addition,

$$\Delta P_{fe} = \sum_{h=1}^{h \max} P_{feh} - P_{feR},$$

and

$$\Delta P_{OSL} = \sum_{h=1}^{h \max} P_{OSLh} - P_{OSLR}.$$

ΔP_{fe} is the difference between the total iron core losses (including harmonics) and the rated iron core losses without harmonics. ΔP_{OSL} is the difference between the total other stray losses (OSL) including harmonics and the rated other stray losses without harmonics.

The reduction of apparent power (RAPR) is

$$RAPR = 1 - \left(\frac{V_{2rms}^{nonlinear}}{V_{2rms}^{rat}} \right) I_{max}^{pu}, \quad (2.23)$$

where $V_{2rms}^{nonlinear}$ and V_{2rms}^{rat} are the total rms value of the secondary voltage including harmonics and the rated rms value of the secondary winding without harmonics, respectively. All above parameters are defined in [11].

2.3.3 Derating of transformers determined from the F_{HL} -factor

The K-factor has been devised by the Underwriters Laboratories (UL) [13] and has been recognized as a measure for the design of transformers feeding nonlinear loads demanding nonsinusoidal currents. UL designed transformers are K-factor rated. In February 1998, the IEEE C57.110/D7 [14] standard was created, which represents an alternative approach for assessing transformer capability feeding nonlinear loads. Both approaches are comparable [15].

The F_{HL} -factor is defined as

$$F_{HL} = \frac{P_{EC}}{P_{EC-O}} = \frac{\sum_{h=1}^{h \max} I_h^2 h^2}{\sum_{h=1}^{h \max} I_h^2}. \quad (2.24)$$

Thus the relation between K-factor and F_{HL} -factor is

$$K = \left(\frac{\sum_{h=1}^{h \max} I_h^2}{I_R^2} \right) F_{HL}, \quad (2.25)$$

or the maximum permissible current is [15]

$$I_{max}^{pu} = \sqrt{\frac{R_{DC} + R_{EC-R} - \frac{\Delta P_{fe} + \Delta P_{OSL}}{I_k^2}}{R_{DC} + F_{HL} R_{EC-R}}}, \quad (2.26)$$

and the reduction in apparent power rating (RAPR) is

$$RAPR = 1 - \left(\frac{V_{2rms}^{nonlinear}}{V_{2rms}^{rat}} \right) I_{max}^{pu}. \quad (2.27)$$

The RAPR as a function of THD_i is shown in Fig. 2.11.

2.3.3.1 Application Example 2.4: Sensitivity of K- and F_{HL} -factors and derating of 25 kVA single-phase pole transformer with respect to the number and order of harmonics

The objective of this example is to show that the K- and F_{HL} -factors are a function of the number and order of harmonics considered in their calculation.

The harmonic content of a square wave with magnitude 1.00 pu is known.

- (a) Develop a Fourier analysis program for any periodic function resulting in the DC offset and the amplitudes of any even and odd harmonics involved.

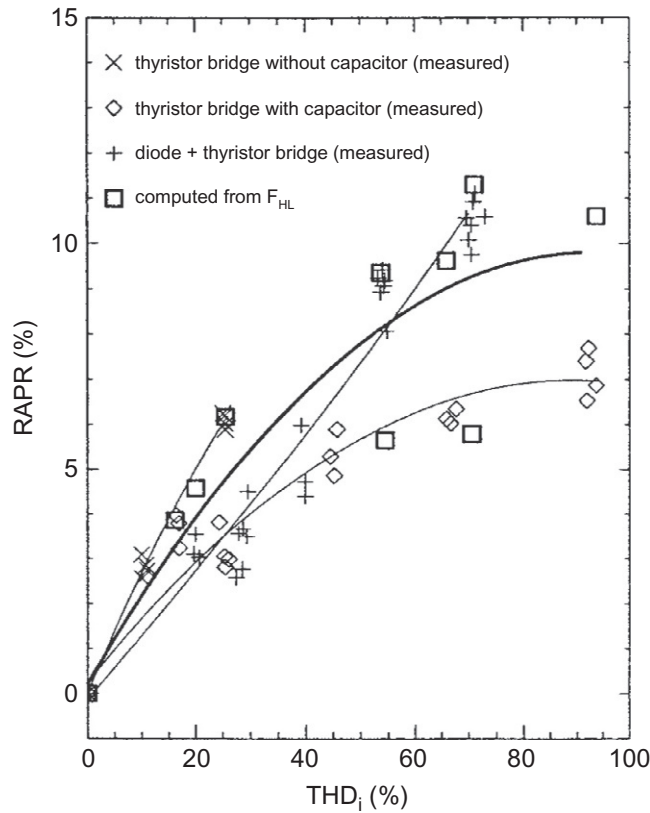


FIG. 2.11 Measured reduction in apparent power rating (RAPR) of 25 kVA single-phase pole transformer as a function of total harmonic current distortion (THD_i) where 3rd and 5th current harmonics are dominant. Calculated values from F_{HL} -factor [12].


- (b) Apply this program to a square wave with magnitude 1.00 pu by taking into account the Nyquist criterion.
- (c) Plot the original square wave and its Fourier approximation.
- (d) Compute the K - and F_{HL} -factors by taking various numbers and orders of harmonics into account.

Solution to Application Example 2.4 *Sensitivity of K - and F_{HL} -Factors and Derating of 25 kVA Single-Phase Pole Transformer with Respect to the Number and Order of Harmonics.*

- (a) The Fourier analysis program is listed in Appendix A2.1.
- (b) Output of the Fourier program for a square wave is listed in Appendix A2.2.
- (c) Taking into account the Nyquist criterion one can compute based on 42 sampled points per period the harmonics up to the 27th order. These harmonics are listed in Table E2.4.1 and the resulting Fourier approximation is shown in Fig. E2.4.1.

TABLE E2.4.1 Spectrum of square wave.

I_{DC} (pu)	I_1 (pu)	I_2 (pu)	I_3 (pu)	I_4 (pu)	I_5 (pu)	I_6 (pu)
0	1.27	0.04	0.42	0.04	0.25	0.04
I_7 (pu)	I_8 (pu)	I_9 (pu)	I_{10} (pu)	I_{11} (pu)	I_{12} (pu)	I_{13} (pu)
0.17	0.04	0.12	0.04	0.09	0.04	0.07
I_{14} (pu)	I_{15} (pu)	I_{16} (pu)	I_{17} (pu)	I_{18} (pu)	I_{19} (pu)	I_{20} (pu)
0.04	0.05	0.03	0.04	0.03	0.03	0.04
I_{21} (pu)	I_{22} (pu)	I_{23} (pu)	I_{24} (pu)	I_{25} (pu)	I_{26} (pu)	I_{27} (pu)
0.04	0.03	0.03	0.02	0.03	0.02	0.03

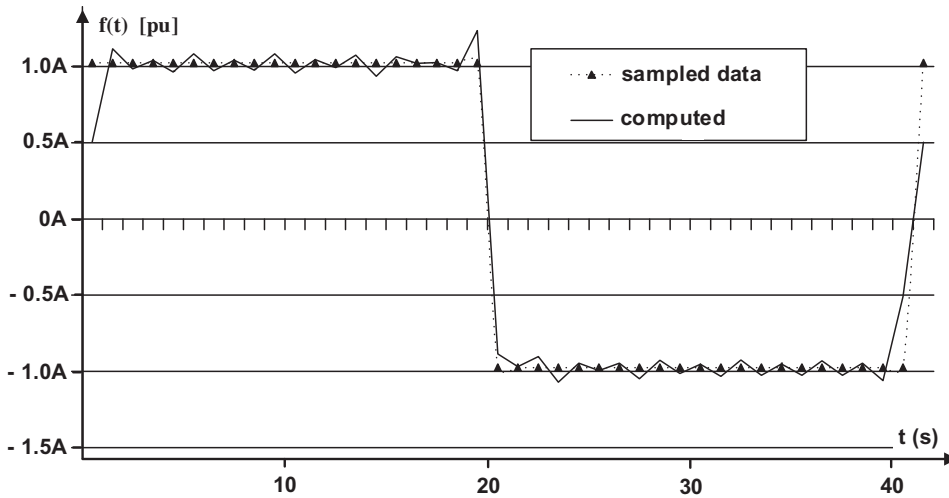**FIG. E2.4.1** Fourier approximation of rectangular function. Note: the triangles (▲) represent sampled values and the continuously drawn function represents the Fourier approximation. Note that 1 A corresponds to 1 pu.

- (d) Taking into account the harmonics up to the 27th order (Table E2.4.2) one obtains for the K-factor: $K_{27} = 9.86$, and for the F_{HL} -factor: $F_{HL27} = 8.22$. Thereby it is assumed that the 25 kVA single-phase pole transformer [11] is loaded only by nonlinear loads having square wave currents. Using these factors and knowing the P_{EC-R} , one can compute the derating of a transformer. The P_{EC-R} can be obtained from the manufacturer or it can be measured [11]. For $P_{EC-R} = 0.0186$ pu one obtains using the K-factor, Eq. (2.21) the derating:

$$I_{\max 27K\text{-factor}}(\text{pu}) = 0.94,$$

and the derating based on the F_{HL} -factor, with Eq. (2.21), Eq. (2.24), and Eq. (2.25):

$$I_{\max 27FHL\text{-factor}}(\text{pu}) = \sqrt{\frac{(1 + P_{EC-R})}{1 + F_{HL}P_{EC-R}}} = 0.94.$$

TABLE E2.4.2 Parameters for the calculation of the K - and F_{HL} -factors (note the values for the I_h (pu) are truncated).

h	I_h (pu)	I_h^2	$h^2 I_h^2$
1	1.0	1.0	1.0
2	0.03	0.001	0.004
3	0.33	0.109	0.984
4	0.03	0.001	0.016
5	0.20	0.040	0.969
6	0.03	0.001	0.036
7	0.13	0.018	0.878
8	0.03	0.001	0.063
9	0.09	0.009	0.723
10	0.03	0.001	0.099
11	0.07	0.005	0.608
12	0.03	0.001	0.143
13	0.06	0.003	0.513
14	0.03	0.001	0.194
15	0.04	0.002	0.349
16	0.02	0.0006	0.143
17	0.03	0.001	0.287
18	0.02	0.0006	0.181
19	0.02	0.0006	0.201
20	0.03	0.001	0.397
21	0.03	0.001	0.438
22	0.02	0.0006	0.270
23	0.02	0.0006	0.295
24	0.02	0.0002	0.143
25	0.02	0.0006	0.348
26	0.02	0.0002	0.168
27	0.02	0.0006	0.407
	Σ	1.2006	9.860

Conclusion. The calculation of the derating of transformers with the K - and F_{HL} -factors leads to the same result provided the same number and order of harmonics are considered.

To show that the K - and F_{HL} -factors and, therefore the derating calculation, critically depend on the number and order of harmonics (used in their calculation), in the following the number of harmonics is reduced from 27 to 13. Thus one obtains $K_{13} = 6.04$ and $F_{HL13} = 5.08$, resulting in

$$I_{\max 13} (\text{pu}) = 0.97.$$

Conclusion.

$K_{27} > K_{13}$ and $F_{HL27} > F_{HL13}$, therefore $I_{\max 13} (\text{pu}) > I_{\max 27} (\text{pu})$.

2.3.3.2 Application Example 2.5: K - and F_{HL} -factors and their application to derating of 25 kVA single-phase pole transformer loaded by variable-speed drives

The objective of this example is to apply the computational procedure of Application Example 2.4 to a 25 kVA single-phase pole transformer loaded only by variable-speed drives of central residential air-conditioning systems [16]. Table E2.5.1 lists the measured current spectrum of the air handler of a variable-speed drive with (medium or) 50% of rated output power.

- Plot the input current wave shape of this variable-speed drive and its Fourier approximation.
- Compute the K - and F_{HL} -factors and their associated derating of the 25 kVA single-phase pole transformer feeding variable-speed drives of central residential air-conditioning systems. This assumption is a worst-case condition, and it is well-known that pole transformers also serve linear loads such as induction motors of refrigerators and induction motors for compressors of central residential air-conditioning systems.

TABLE E2.5.1 Current spectrum of the air handler of a variable-speed drive with (medium or) 50% of rated output power.

I_{DC} (A)	I_1 (A)	I_2 (A)	I_3 (A)	I_4 (A)	I_5 (A)	I_6 (A)
−0.82	10.24	0.66	8.41	1.44	7.27	1.29
I_7 (A)	I_8 (A)	I_9 (A)	I_{10} (A)	I_{11} (A)	I_{12} (A)	I_{13} (A)
4.90	0.97	3.02	0.64	1.28	0.48	0.57
I_{14} (A)	I_{15} (A)	I_{16} (A)	I_{17} (A)	I_{18} (A)	I_{19} (A)	I_{20} (A)
0.53	0.73	0.57	0.62	0.31	0.32	0.14
I_{21} (A)	I_{22} (A)	I_{23} (A)	I_{24} (A)	I_{25} (A)	I_{26} (A)	I_{27} (A)
0.18	0.29	0.23	0.39	0.34	0.39	0.28

Solution to Application Example 2.5 K - and F_{HL} -Factors and Their Application to Derating of 25 kVA Single-Phase Pole Transformer Loaded by Variable-Speed Drives.

Taking into account the harmonics up to the 27th order (Tables E2.5.1 and E2.5.2) one obtains for the K-factor: $K_{27}=50.52$, and for the F_{HL} -factor: $F_{HL27} = 19.42$. Using these factors and knowing the value of P_{EC-R} one can compute the derating of a transformer. The P_{EC-R} can be obtained from the manufacturer or it can be measured [11]. For $P_{EC-R} = 0.0186$ pu one obtains the derating using the K-factor, Eq. (2.21):

$$I_{\max 27K\text{-factor}}(\text{pu}) = 0.87,$$

TABLE E2.5.2 Parameters for the calculation of the K - and F_{HL} -factors (note the values for the I_h (pu) are rounded).

h	I_h (pu)	I_h^2	$h^2 I_h^2$
1	1.024	1.0486	1.0486
2	0.066	0.0044	0.0176
3	0.841	0.7073	6.3657
4	0.144	0.0207	0.3312
5	0.727	0.5285	13.2125
6	0.129	0.01664	0.5990
7	0.490	0.2401	11.7649
8	0.097	0.0094	0.6016
9	0.302	0.0910	7.3710
10	0.064	0.0041	0.4100
11	0.128	0.0164	1.9844
12	0.048	0.0023	0.3312
13	0.057	0.0033	0.5577
14	0.053	0.00281	0.5508
15	0.073	0.0053	1.1925
16	0.057	0.0033	0.8448
17	0.062	0.0038	1.0982
18	0.031	0.0010	0.3240
19	0.032	0.0010	0.3610
20	0.014	0.0002	0.0800
21	0.018	0.0003	0.1323
22	0.029	0.0008	0.3872
23	0.023	0.0005	0.2645
24	0.039	0.0015	0.8640
25	0.034	0.0012	0.7500
26	0.039	0.0015	1.0140
27	0.028	0.0007	0.5103
	Σ	2.7271	52.9690

and the derating based on the F_{HL} -factor, with Eq. (2.21), Eq. (2.24), and Eq. (2.25):

$$I_{max27FHL-factor}(pu) = \sqrt{\frac{(1 + P_{EC-R})}{1 + F_{HL}P_{EC-R}}} = 0.87.$$

Note that the influence of the DC component of the current has been disregarded. As is shown in [9], this DC component contributes to additional AC losses and an additional temperature rise further increasing the derating.

Measured current wave shape of the air handler operating at variable speed with (medium or) 50% of rated output power with a DC component of $I_{DC} = -0.82$ A is shown in Fig. E2.5.1. The corresponding Fourier approximation (based on the Fourier coefficients of Table E2.5.1) without the DC offset is compared with measured current waveform in Fig. E2.5.2. In Table E2.5.2, the fundamental current is not normalized to 1.00 pu; this does not affect the calculation of the K- and F_{HL} -factors.

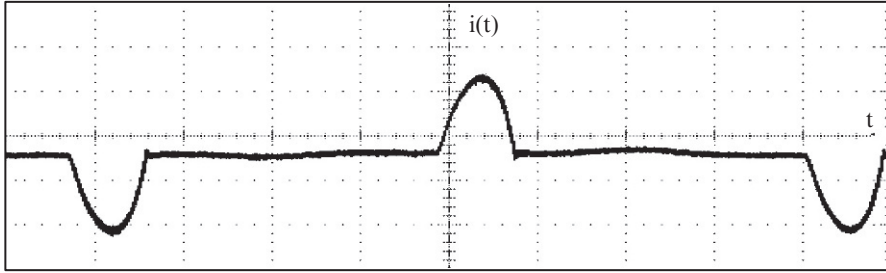


FIG. E2.5.1 Measured 60Hz current wave shape of the air handler operating at variable speed with (medium or) 50% of rated output power.

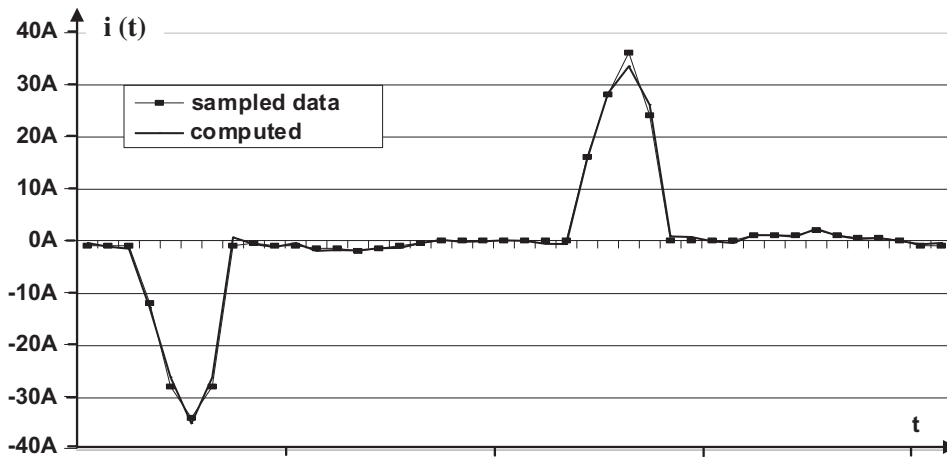


FIG. E2.5.2 Fourier analysis of current of air handler at (medium or) 50% of rated output power without DC component of $I_{DC} = -0.82$ A (see Fig. E2.5.1). The rectangles (■) represent measured (sampled) values and the continuous line is the Fourier approximation based on the Fourier coefficients of Table E2.5.2. All ordinate values must be divided by 10 to obtain pu values.

2.4 Nonlinear harmonic models of transformers

Appropriate harmonic models of all power system components including transformers are the basis of harmonic analysis and loss calculations. Harmonic models of transformers are devised in two steps: the first is the construction of transformer harmonic model, which is mainly characterized by the analysis of the core nonlinearity (due to saturation, hysteresis, and eddy-current effects), causing nonsinusoidal magnetizing and core-loss currents. The second step involves the relation between model parameters and harmonic frequencies. In the literature, many harmonic models for power transformers have been proposed and implemented. These models are based on one of the following approaches:

- time-domain simulation [17–25],
- frequency-domain simulation [26–29],
- combined frequency- and time-domain simulation [30,31], and
- numerical (e.g., finite-difference, finite-element) simulation [1,2,6,32–34].

This section starts with the general harmonic model for a power transformer and the simulation techniques for modeling its nonlinear iron core. The remainder of the section briefly introduces the basic concepts and equations involving each of the above-mentioned modeling techniques.

2.4.1 The general harmonic model of transformers

Fig. 2.12 presents the physical model of a single-phase transformer. The corresponding electrical and magnetic equations are

$$v_p(t) = R_p i_p(t) + L_p \frac{di_p(t)}{dt} + e_p(t), \quad (2.28)$$

$$v_s(t) = R_s i_s(t) + L_s \frac{di_s(t)}{dt} + e_s(t), \quad (2.29)$$

$$\Phi_m = BA, \quad (2.30)$$

$$B = f_{\text{nonlinear}}(H), \quad (2.31)$$

$$N_p i_p(t) - N_s i_s(t) = H\ell, \quad (2.32)$$

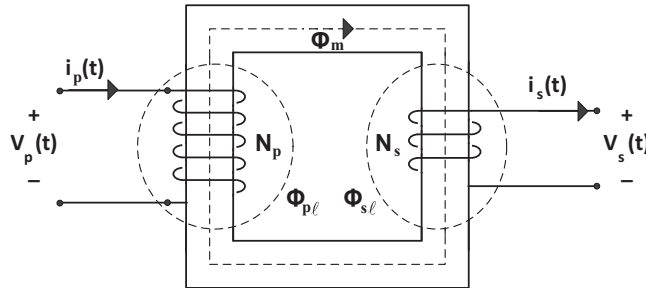


FIG. 2.12 Physical model of a single-phase transformer.

where

- R_p and R_s are the resistances of the primary and the secondary windings, respectively,
- L_p and L_s are the leakage inductances of primary and secondary windings, respectively,
- $e_p(t) = N_p \frac{d\Phi_m}{dt}$ and $e_s(t) = N_s \frac{d\Phi_m}{dt}$ are the induced voltages of the primary and the secondary windings, respectively,
- N_p and N_s are the number of turns of the primary and the secondary windings, respectively,
- B , H and Φ_m are the magnetic flux density, the magnetic field intensity, and the magnetic flux in the iron core of the transformer, respectively, and
- A and ℓ are the effective cross section and length of the integration path of transformer core, respectively.

Dividing Eq. (2.32) by N_p yields

$$i_p(t) - \frac{N_s}{N_p} i_s(t) = i_{exc}(t), \quad (2.33)$$

where $i_{exc}(t) = H\ell/N_p$ is the transformer excitation (no-load) current, which is the sum of the magnetizing ($i_{mag}(t)$) and core-loss ($i_{core}(t)$) currents. Combining Eqs. (2.30), (2.31), it is clear that the no-load current is related to the physical parameters, that is, the magnetizing curve (including saturation and hysteresis) and the induced voltage.

Based on Eqs. (2.28), (2.29), and (2.33), the general harmonic model of transformer is obtained as shown in Fig. 2.13. There are four dominant characteristic parameters:

- winding resistance,
- leakage inductance,
- magnetizing current, and
- core-loss current.

Some models assume constant values for the primary and the secondary resistances. However, most references take into account the influence of skin effects and proximity effects in the harmonic model. Since primary ($\Phi_{p\ell}$) and secondary ($\Phi_{s\ell}$) leakage fluxes mainly flow across air, the primary and the secondary leakage inductances can be assumed to be constants. The main difficulty arises in the computation of the magnetizing and core-loss currents, which are the main sources of harmonics in power transformers.

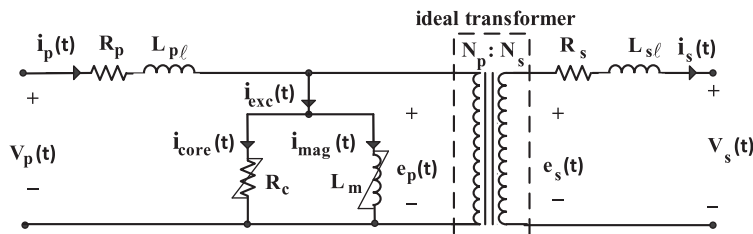


FIG. 2.13 General harmonic model of a single-phase transformer.

2.4.2 Nonlinear harmonic modeling of transformer magnetic core

Accurate transformer models incorporate nonlinear saturation and hysteresis phenomena. Numerous linear, piecewise linear, and nonlinear models are currently available in the literature for the representation of saturation and hysteresis effects of transformer cores. Most models are based on time-domain techniques that require considerable computing time; however, there are also a few frequency-based models with acceptable degrees of accuracy. It is the purpose of this section to classify these techniques and to introduce the most widely used models.

2.4.2.1 Time-domain transformer core modeling by multisegment hysteresis loop

The transformer core can be accurately modeled in the time domain by simulating its $(\lambda - i)$ characteristic including the major hysteresis loop (with or without minor loops), which accounts for all core effects: hysteresis loss, eddy-current loss, saturation, and magnetization (Fig. 2.14). The $(\lambda - i)$ loop is divided into a number of segments and each segment is approximated by a parabola [20], a polynomial [31], a hyperbolic [25], or other functions. The functions expressing the segments must be defined so that $di/d\lambda$ (or dH/dB) is continuous in the entire defined region of the $(\lambda - i)$ or $(B-H)$ plane.

As an example, two typical $(\lambda - i)$ characteristics are shown in Fig. 2.15. Five segments are used in Fig. 2.15A to model the $(\lambda - i)$ loop [20]. The first three are approximated by polynomials of the 13th order while the fourth and the fifth segments (in the positive and negative saturation regions) are represented by parabolas. The expression for describing the four-segment loop of Fig. 2.15B is [31]

$$\begin{aligned} i_{exc} &= A + Be^{C\lambda} && \text{segment I,} \\ i_{exc} &= D + Ee^{F\lambda} && \text{segment II,} \\ i_{exc} &= -D - Ee^{-F\lambda} && \text{segment III,} \\ i_{exc} &= -A - Be^{-C\lambda} && \text{segment IV.} \end{aligned} \quad (2.34)$$

There is a major difficulty with time-domain approaches. For a given value of maximum flux linkage, $\lambda_{\max}$ the loop is easily determined experimentally; however, for variable $\lambda_{\max}$ the loop not only changes its size but also its shape. Since these changes are particularly difficult to predict, the usual approach is to neglect the variation in shape and to assume linear changes in size. This amounts to scaling the characteristics in the λ and i directions for different values of $\lambda_{\max}$.

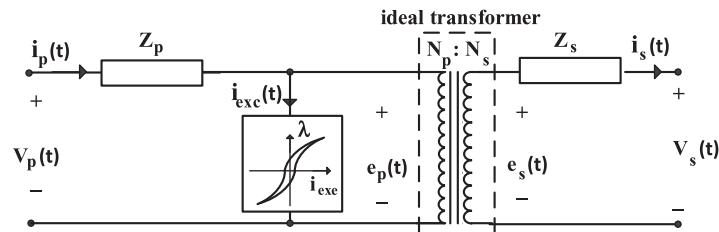


FIG. 2.14 Time-domain nonlinear model of transformer with the complete $(\lambda - i)$ characteristic [30].

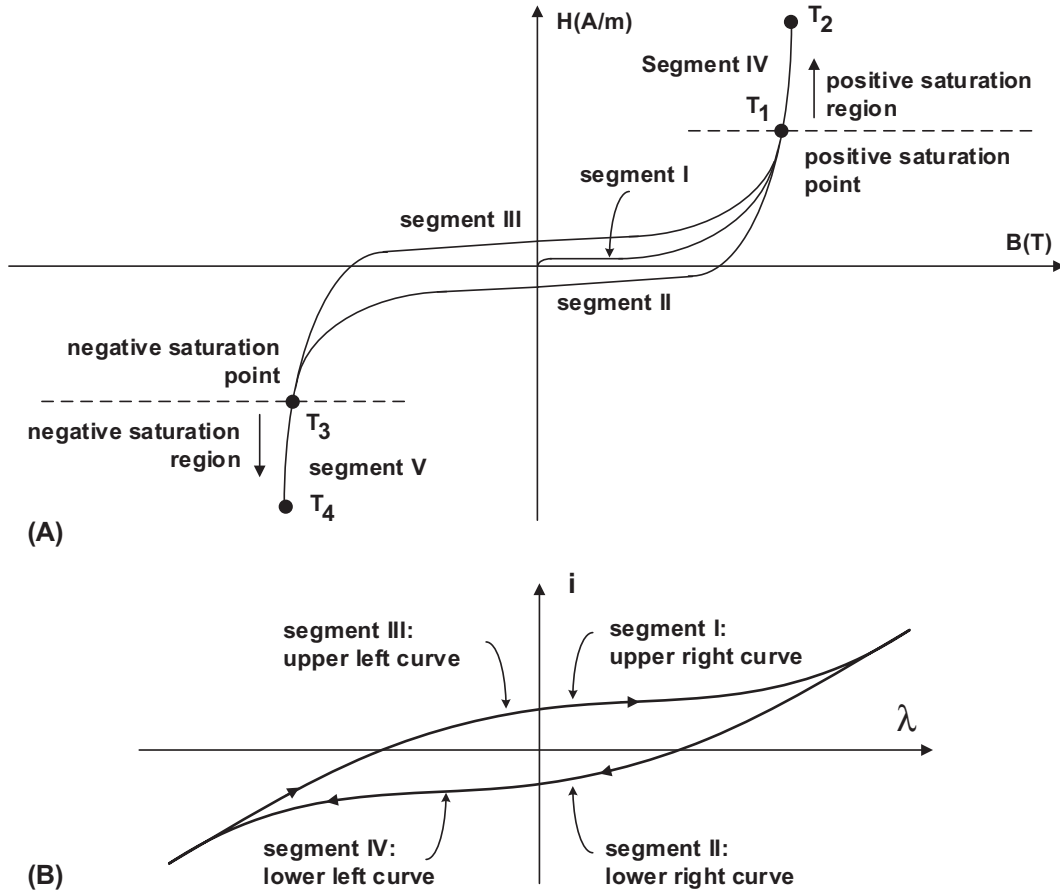


FIG. 2.15 Time-domain nonlinear model of transformer core with the complete hysteresis loop; (A) using five segments [20], (B) using four segments [31].

This is a fairly accurate model for the transformer core; however, it requires considerable computing time. Some more sophisticated models also include minor hysteresis loops in the time-domain analysis [27].

2.4.2.2 Frequency- and time-domain transformer core modeling by saturation curve and harmonic core-loss resistances

In these models, transformer saturation is simulated in the time domain while eddy-current losses and hysteresis are approximated in the frequency domain. If the voltage that produces the core flux is sinusoidal with rms magnitude of E and frequency of f , Eq. (2.1) may be rewritten as [31]

$$P_{fe} = P_{hys} + P_{eddy} = k_{hys} f^{1-S} E^S + k_{eddy} E^2, \quad (2.35)$$

where $k_{hys} \neq K_{hys}$ and $k_{eddy} \neq K_{eddy}$.

Although the application of superposition is incorrect for nonlinear circuits, in some cases it may be applied cautiously to obtain an approximate solution. If superposition is applied, the core loss due to individual harmonic components may be defined to model both hysteresis and eddy-current losses by dividing Eq. (2.35) by the square of the rms harmonic voltages. We define the conductance G_{eddy} (accounting for eddy-current losses) and harmonic conductance $G_{\text{hys}}^{(h)}$ (accounting for hysteresis losses at harmonic frequencies) as [31]

$$G_{\text{eddy}} = k_{\text{eddy}}, \quad (2.36a)$$

$$G_{\text{hys}}^{(h)} = k_{\text{hys}}(hf)^{1-S} E^{S-2}, \quad (2.36b)$$

where f and h are the fundamental frequency and harmonic order, respectively. Therefore, eddy current (P_{eddy}) and hysteresis (P_{hys}) losses are modeled by a constant conductance (G_{eddy}) and harmonic conductances ($G_{\text{hys}}^{(h)}$), respectively, and the transformer ($\lambda - i$) characteristic is approximated by a single-valued saturation curve, as shown in Fig. 2.16 [31]. There are basically two main approaches for modeling the transformer saturation curve: piecewise linear inductances and incremental inductance [19], as shown by Fig. 2.16B and C. The

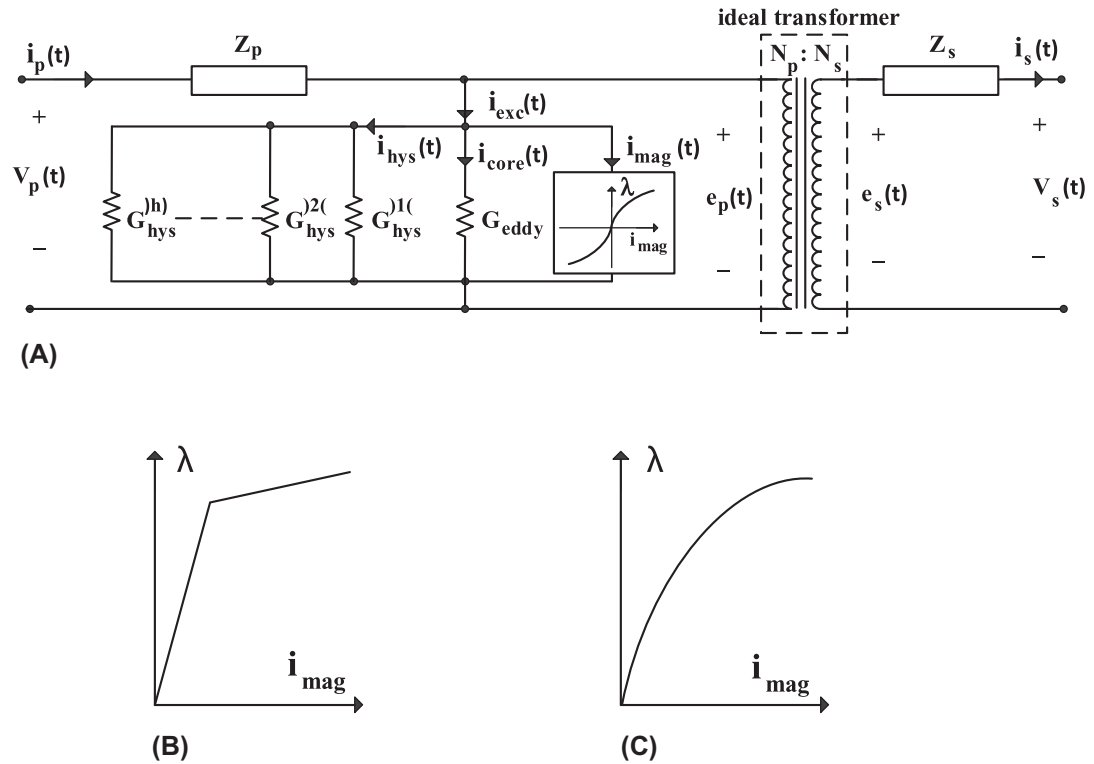


FIG. 2.16 Frequency- and time-domain nonlinear model of transformer core with harmonic conductances and a single-valued saturation curve; (A) transformer model [31], (B) the piecewise linear model of saturation curve, (C) the incremental model of saturation curve [19].

incremental approach uses a polynomial [31,30], arctangent [22,23], or other functions to model the transformer magnetizing characteristic. The incremental reluctances (or inductances) are then obtained from the slopes of the inductance-magnetizing current characteristic.

2.4.2.3 Time-domain transformer coil modeling by saturation curve and a constant core-loss resistance

Due to the fact that the effect of hysteresis in transformers is much smaller than that of the eddy current, and to simplify the computation, most models assume a constant value for the magnetizing conductance [22,23,30]. As mentioned before, the saturation curve may be modeled using a polynomial [30,29], arctangent [22,23], or other functions. The slightly simplified transformer model is shown in Fig. 2.17.

2.4.2.4 Frequency-domain transformer coil modeling by harmonic current sources

Some frequency-based algorithms use harmonic current sources ($\tilde{I}_{core}^{(h)}$ and $\tilde{I}_{mag}^{(h)}$) to model the nonlinear effects of eddy current, hysteresis, and saturation of the transformer core, as shown in Fig. 2.18. The magnitudes and phase angle of the current sources are upgraded at each step of the iterative procedure. There are different methods for upgrading (computing) magnitudes and phase angles of current sources at each step of the iterative procedure. Some models apply the saturation curve to compute $\tilde{I}_{mag}^{(h)}$ in the time domain, and use

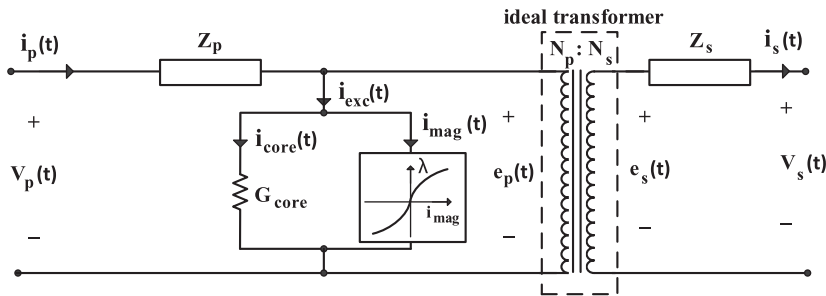


FIG. 2.17 Time-domain nonlinear model of transformer core with a constant magnetizing conductance and a single-valued ($\lambda-i$) characteristic [22].

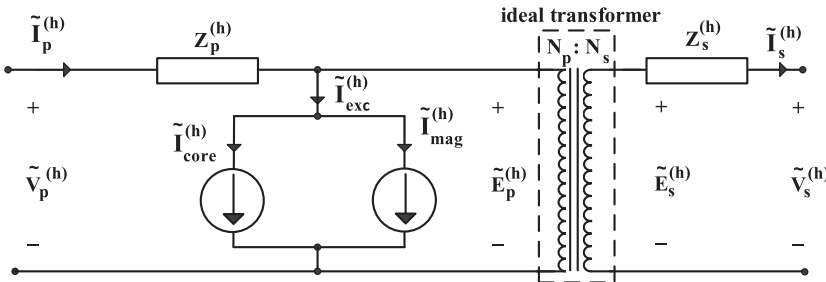


FIG. 2.18 Frequency-domain nonlinear model of transformer core with harmonic current sources [1-4].

harmonic loss-density and so called phase-factor functions to compute $\tilde{I}_{core}^{(h)}$ in the frequency domain [1–4,20]. These currents could also be approximately computed in the frequency domain as explained in the next section.

2.4.2.5 Frequency-domain transformer coil modeling by describing functions

The application of describing functions for the computation of the excitation current in the frequency domain was proposed and implemented for a single-phase transformer under no-load conditions [26]. The selected describing function, which assumes sinusoidal flux linkages and a piecewise linear hysteresis loop, is relatively fast and computes the nonsinusoidal excitation current with an acceptable degree of accuracy. The concept of describing functions as applied to the nonlinear (symmetric) network N is demonstrated in Fig. 2.19, where a sinusoidal input function $\lambda(t) = E \sin(\omega t)$ results in a nonsinusoidal output function $i_e(t)$. Neglecting the influence of harmonics, $i_e(t)$ can be approximated as

$$\begin{aligned} i_e(t) &\approx A_1 \cos(\omega t) + B_1 \sin(\omega t) = C_1 \sin(\omega t + \phi), \\ A_1 &= \frac{1}{\pi} \int_{-\pi}^{\pi} i_e(t) \cos(\omega t) d(\omega t), \\ B_1 &= \frac{1}{\pi} \int_{-\pi}^{\pi} i_e(t) \sin(\omega t) d(\omega t). \end{aligned} \quad (2.37)$$

In Eq. (2.37), A_1 and B_1 are the fundamental coefficients of the Fourier series representation of $i_e(t)$ and its harmonic components are neglected. Also, $C_1 \angle \phi = B_1 + jA_1$.

Based on Eq. (2.37) and Fig. 2.19, the describing function (indicating the gain of nonlinearity) is defined as

$$N(E, \omega) = \frac{B_1 + jA_1}{E} = \frac{C \angle \phi}{E}. \quad (2.38)$$

Fig. 2.20 illustrates a typical $(\lambda - i)$ characteristic where a hysteresis loop defines the nonlinear relationship between the input sinusoidal flux linkage and the output nonsinusoidal exciting current. In order to establish a describing function for the $(\lambda - i)$ characteristic, the hysteresis loop is divided into three linear pieces with the slopes $1/k$, $1/k_1$, and $1/k_2$ as shown in Fig. 2.21.

Comparing the corresponding gain at different time intervals to both input flux-linkage waveform and output exciting current waveform during the same period allows us to calculate the value of $N(E, \omega)$ in three different time intervals, as illustrated by Eq. (2.38) and Fig. 2.21. Therefore, if input $\lambda(t) = E \sin(\omega t)$ is known, $i_e(t)$ can be calculated as follows:




FIG. 2.19 Expression of describing function for a nonlinear network N [26].

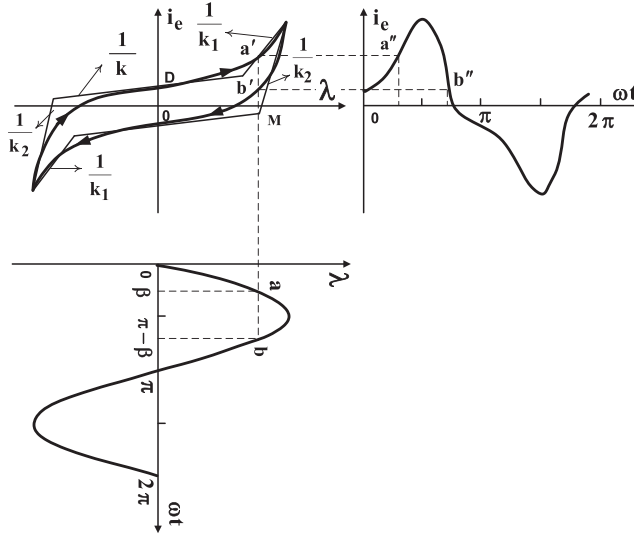


FIG. 2.20 Excitation current waveform for a transformer core [26].

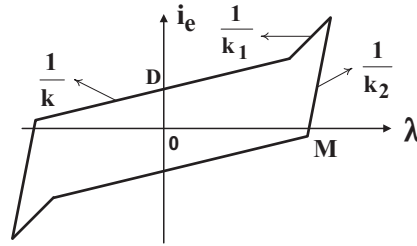


FIG. 2.21 Piecewise linear function approximation of hysteresis loop defining transformer describing function [26].

$$i_e(t) = \begin{cases} \frac{1}{k} [E \sin(\omega t)] + D & 0 < \omega t < \beta \\ \frac{1}{k_1} [E \sin(\omega t) - M] + \frac{M}{k} + D & \beta < \omega t < \frac{\pi}{2} \\ \frac{1}{k_2} [E \sin(\omega t) - M] + \frac{M}{k} - D & \frac{\pi}{2} < \omega t < \pi - \beta \\ \frac{1}{k} [E \sin(\omega t)] - D & \pi - \beta < \omega t < \pi \end{cases}, \quad (2.39)$$

where $\beta = \sin^{-1}(M/E)$ is the angle corresponding to the knee point of the hysteresis loop in radians.

Applying Fourier series to Eq. (2.39), the harmonic components of the excitation current $\tilde{I}_{exc}^{(h)}$ can be determined. Active (real) and reactive (imaginary) parts of the excitation current correspond to harmonics of the core-loss $\tilde{I}_{core}^{(h)}$ and the magnetizing $\tilde{I}_{mag}^{(h)}$ currents, respectively.

2.4.3 Time-domain simulation of power transformers

Time-domain techniques use analytical functions to model transformer primary and secondary circuits and core characteristics [17–25]. Saturation and hysteresis effects, as well as eddy-current losses, are included with acceptable degrees of accuracy. These techniques are mostly used for the electromagnetic transient analysis (such as inrush currents, overvoltages, geomagnetically induced currents, and out-of-phase synchronization) of multiphase and multilimb core-type power transformers under (un)balanced (non)sinusoidal excitations with (non)linear loads. The main limitation of time-domain techniques is the relatively long computing time required to solve the set of differential equations representing transformer dynamic behavior. They are not usually used for steady-state analyses. Harmonic modeling of power transformers in the time domain are performed by some popular software packages and circuit simulators such as EMTP [24] and DSPICE (Daisy's version of circuit simulator SPICE [25]). The electromagnetic mathematical model of multiphase, multilimb core-type transformer is obtained by combining its electric and the magnetic circuits [35–37]. The principle of duality is usually applied to simplify the magnetic circuit. Fig. 2.22 illustrates the topology and the electric equivalent circuit for the general case of a five-limb transformer, from

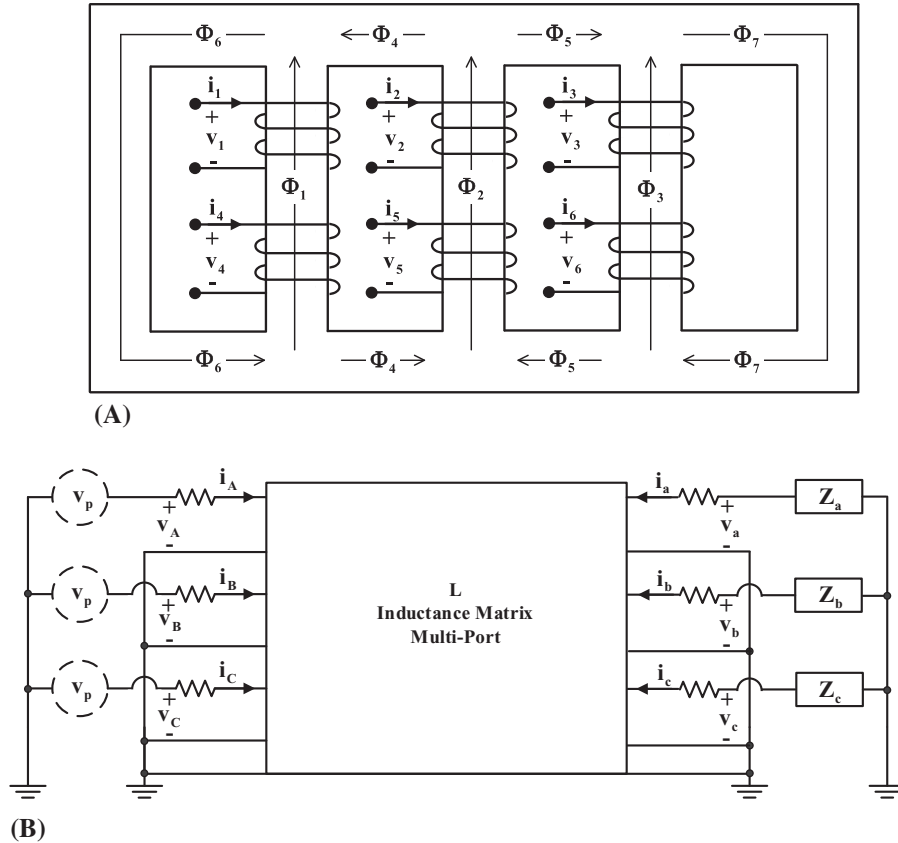


FIG. 2.22 Time-domain harmonic model of power transformers; (A) general topology for the three-phase, five-limb structure, (B) equivalent circuit [23].

which other configurations such as three-phase, three-limb, and single-phase ones can be derived. The open ends of the nonlinear multiport inductance matrix $\vec{L}$ (or its inverse, the reluctance matrix $\vec{\mathcal{R}}$) allow the connection for any electrical configuration of the source and the load at the terminals of the transformer.

Most time-domain techniques are based on a set of differential equations defining transformer electric and magnetic behaviors. Their computational effort involves the numerical integration of ordinary differential equations (ODEs), which is an iterative and time-consuming process. Other techniques use Newton methodology to accelerate the solution [22,23]. Transformer currents and/or flux linkages are usually selected as variables. Difficulties arise in the computation and upgrading of magnetic variables (e.g., flux linkages), which requires the solution of the magnetic circuit or application of the nonlinear hysteresis characteristics, as discussed in Section 2.4.2.

In the next section, time-domain modeling based on state-space formulation of transformer variables is explained. Either transformer currents and/or flux linkages may be used as the state variables. Some models [22,23] prefer flux linkages since they change more slowly than currents and more computational stability is achieved.

2.4.3.1 State-space formulation

The state equation for an m-phase, n-winding transformer in vector form is [19]

$$\vec{V} = \vec{R}\vec{I} + \vec{L}\frac{d\vec{I}}{dt} + \frac{d\vec{\psi}}{dt}, \quad (2.40)$$

where $\vec{V}$, $\vec{I}$, $\vec{R}$, $\vec{L}$, and $\vec{\psi}$ are the terminal voltage vector, the current vector, the resistance matrix, the leakage inductance matrix, and the flux linkage vector, respectively.

The flux linkage vector can be expressed in terms of the core flux vector by

$$\vec{\psi} = \vec{W}\vec{\phi} \quad \text{and} \quad \frac{d\vec{\psi}}{dt} = \vec{W}\frac{d\vec{\phi}}{dt}, \quad (2.41)$$

where $\vec{W}$ is the transformation ratio matrix (number of turns) and $\vec{\phi}$ is the core-flux vector.

In general, the core fluxes are nonlinear functions of the magnetomotive forces ($\vec{F}$), therefore, $\frac{d\vec{\phi}}{dt}$ can be expressed as

$$\frac{d\vec{\phi}}{dt} = \frac{d\vec{\phi}}{d\vec{F}} \frac{d\vec{F}}{dt}, \quad (2.42)$$

where $\frac{d\vec{\phi}}{d\vec{F}}$ is a $m \times m$ Jacobian matrix. The magnetomotive force vector can be expressed in terms of the terminal current vector by

$$\vec{F} = \vec{C}_w \vec{I}, \quad (2.43)$$

where $\vec{C}_w$ is a matrix that can be determined from matrix $\vec{W}$ and the configuration of the transformer.

Substituting Eqs. (2.42), (2.43) into Eq. (2.40), we obtain

$$\vec{V} = \vec{R}\vec{I} + \vec{L}\frac{d\vec{I}}{dt} + \vec{W}\frac{d\vec{\phi}}{d\vec{F}}\vec{C}_w\frac{d\vec{I}}{dt}. \quad (2.44)$$

Defining the nonlinear incremental (core) inductance

$$\vec{L}_d = \vec{W} \frac{d\vec{\phi}}{d\vec{F}} \vec{C}_w, \quad (2.45)$$

the transformer state equation is finally expressed as follows:

$$\vec{V} = \vec{R}\vec{I} + \left(\vec{L} + \vec{L}_d \right) \frac{d\vec{I}}{dt}. \quad (2.46)$$

Eqs. (2.45), (2.46) are the starting point for all modeling techniques based on the decoupling of magnetic and electric circuits. The basic difficulty is the calculation of the elements of the Jacobian $\frac{d\vec{\phi}}{d\vec{F}}$ at each integration step. The incorporation of nonlinear effects (such as magnetic saturation and hysteresis) and the computation of $\frac{d\vec{\phi}}{d\vec{F}}$ are performed by appropriate modifications of the differential and algebraic equations (Eqs. 2.40–2.46). As discussed in Section 2.4.2, numerous possibilities are available for accurate representation of transformer saturation and hysteresis. However, there is a trade-off between accuracy and computational speed of the solution. Fig. 2.23 shows the flowchart of the nonlinear iterative algorithm for transformer modeling based on Eqs. (2.40)–(2.46), where elements of $\frac{d\vec{\phi}}{d\vec{F}}$ can be derived from the solution of transformer magnetic circuit with a piecewise linear (Fig. 2.16B) or an incremental (Fig. 2.16C) magnetizing characteristic [19].

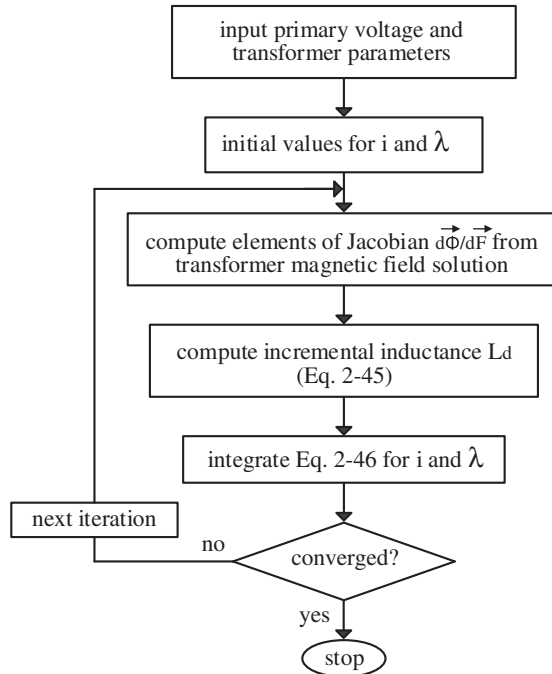


FIG. 2.23 Flowchart of the time-domain iterative algorithm for transformer modeling [19].

2.4.3.2 Transformer steady-state solution from the time-domain simulation

Conventional time-domain transformer models based on the brute force (BF) procedure [22,23] are not usually used for the computation of the periodic steady-state solution because of the computational effort involved requiring the numerical integration of ordinary differential equations (ODEs) until the initial transient decays. This drawback is overcome with the introduction of numerical differentiation (ND) and Newton techniques to enhance the acceleration of convergence [22,23].

2.4.4 Frequency-domain simulation of power transformers

Frequency- or harmonic-domain simulation techniques use Fourier analysis to model the transformer's primary and secondary parameters and to approximate core nonlinearities [26–29]. Most frequency-based models ignore hysteresis and eddy currents or use some measures (e.g., the concept of describing functions as discussed in Section 2.4.2.5) to approximate them; therefore, they are not usually as accurate as time-domain models. Harmonic-based simulation techniques are relatively fast, which makes them fine candidates for steady-state analysis of power transformers. Most (but not all) frequency-domain analyses assume balanced three-phase operating conditions and single-limb transformers (bank of single-phase transformers).

Fig. 2.24 shows a frequency-domain transformer model in the form of the harmonic Norton equivalent circuit. Standard frequency-domain analyses are used to formulate the transformer's electric circuits whereas frequency-based simulation techniques are required to model magnetic circuits. Fig. 2.25 shows the flowchart of the nonlinear iterative algorithm for transformer modeling in the frequency domain. At each step of the algorithm, harmonic current sources $\tilde{I}_{core}^{(h)}$ and $\tilde{I}_{mag}^{(h)}$ are upgraded using a frequency-based model for the transformer core, as discussed in Sections 2.4.2.4 and 2.4.2.5. Some references use the harmonic lattice representation of multilimb, three-phase transformers to define a harmonic Norton equivalent circuit [27]. The main limitations of this approach, as with all frequency-based simulation techniques, are the approximations used for modeling transformer magnetic circuits.

2.4.5 Combined frequency- and time-domain simulation of power transformers

To overcome the limitations of frequency-based techniques and to preserve the advantages of the time-domain simulation, most transformer models use a combination of frequency-domain (to model harmonic propagation on primary and secondary sides) and time-domain (to model core nonlinearities) analyses to achieve the steady-state solution with acceptable

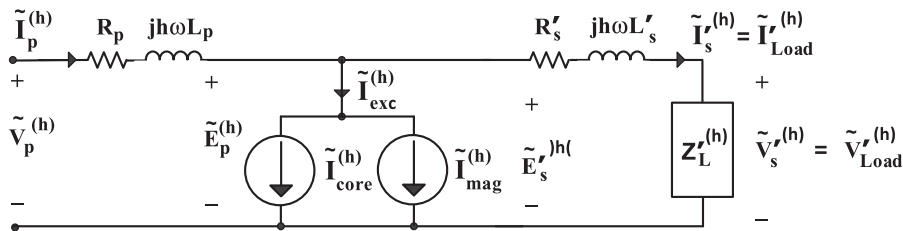


FIG. 2.24 Frequency-domain harmonic model of power transformer [1–4].

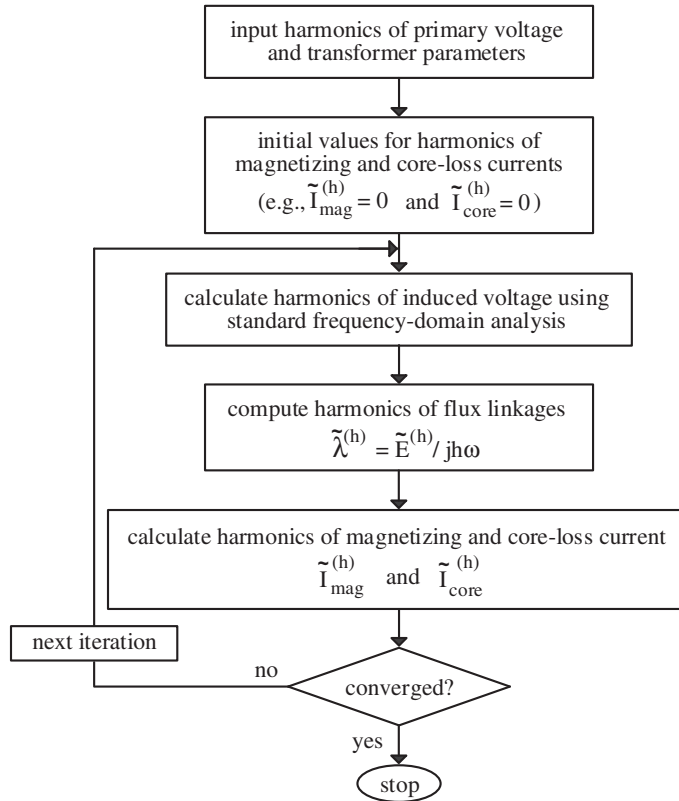


FIG. 2.25 Flowchart of the frequency-domain iterative algorithm for transformer modeling.

accuracy and speed [30,31,1–4]. Thus, accurate modeling of saturation, hysteresis, and eddy-current phenomena are possible. Combined frequency- and time-domain models are fine candidates for steady-state analysis of power transformers. Fig. 2.26 shows the flowchart of the nonlinear iterative algorithm for transformer modeling in the frequency and time domains. Transformer electric circuits are models for standard frequency-domain techniques whereas the magnetic analysis is accurately performed in the time domain. At each step of the algorithm, instantaneous flux linkages ($\lambda(t)$) and transformer ($\lambda - i$) characteristics are used to compute the instantaneous magnetizing ($i_{mag}(t)$) and core-loss ($i_{core}(t)$) currents, as discussed in Sections 2.4.2.1–2.4.2.4. Fast Fourier transformation (FFT) is performed to compute and upgrade harmonic current sources $\tilde{I}_{core}^{(h)}$ and $\tilde{I}_{mag}^{(h)}$.

2.4.6 Numerical (finite-difference, finite-element) simulation of power transformers

These accurate and timely simulation techniques are based on two- or three-dimensional modeling of the anisotropic power transformer [1–4,6,32–34]. They require detailed information about transformer size, structure, and materials. The anisotropic transformer's magnetic

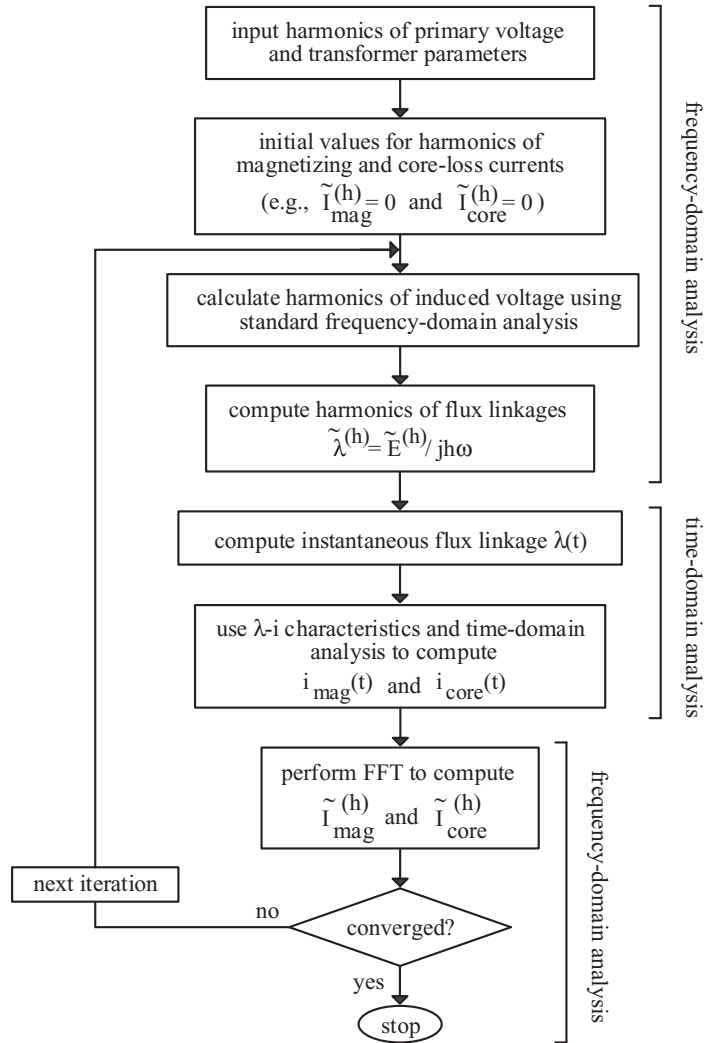


FIG. 2.26 Flowchart of the combined frequency- and time-domain iterative algorithm for transformer modeling [1–4].

core is divided into small (two- or three-dimensional) meshes or volume elements, respectively. Within each mesh (element), isotropic materials and linear B-H characteristics are assumed. The resulting linear equations are solved using matrix solution techniques. Mesh equations are related to each other by boundary conditions. With these nonlinear and time-consuming techniques, simultaneous consideration of most transformer nonlinearities is possible. Finite element/difference techniques are the most accurate tools for transformer modeling under sinusoidal and nonsinusoidal operating conditions. Numerical (e.g., finite-element and finite-difference) software packages are available for the simulation of

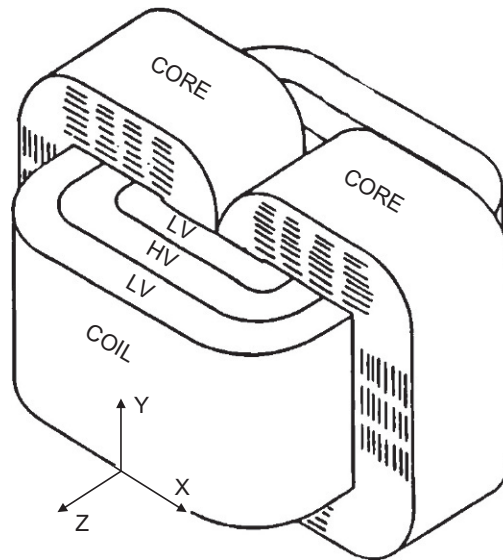


FIG. 2.27 Construction of 25 kVA single-phase pole transformer [36].

electromagnetic phenomena. However, numerical techniques are not very popular since they require much detailed information about transformer size, air gaps, and materials that makes their application a tedious and time-consuming process.

Fig. 2.27 illustrates the construction of a single-phase 25 kVA pole transformer as it is widely employed in residential single-phase systems. The butt-to-butt air gaps and the interlamination gaps of the wound core of Fig. 2.27 are illustrated in Fig. 2.28. These air gaps,

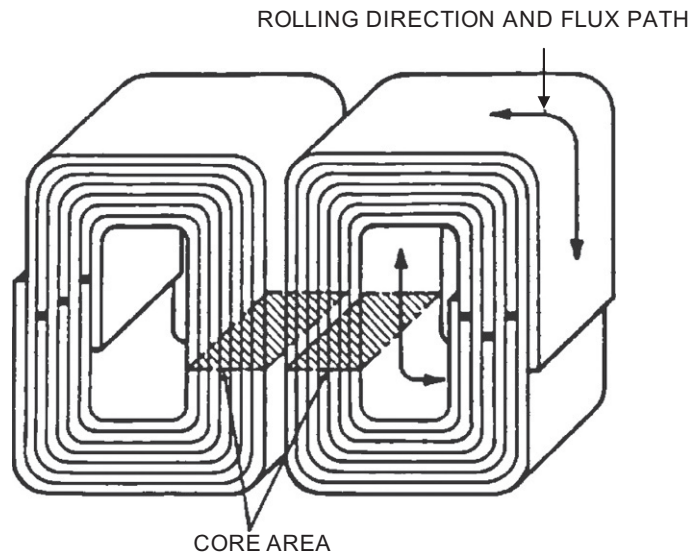


FIG. 2.28 Cross section of wound iron-core of 25 kVA pole transformer [36].

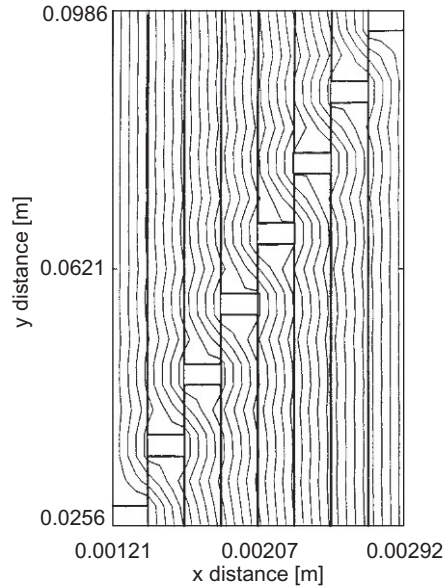


FIG. 2.29 Sample strip for mixed-grain region showing flux paths for an excitation of 10.12 At. One flux tube contains 0.000086 Wb/m [36].

grain orientation of the electrical steel (anisotropy), and saturation of the iron core require the calculation of representative reluctivities as indicated in Fig. 2.29. These representative reluctivity data are used for the computation of the end-region (y–z plane) and x–y planes of the single-phase transformer as depicted in Figs. 2.30 and 2.31, respectively. Measured and computed flux-linkage versus current characteristics are presented in Fig. 2.32. Detailed analyses are given in references [1–4] and [36].

2.5 Ferroresonance of power transformers

Before discussing ferroresonance phenomena, it may be good to review resonance as it occurs in a linear RLC circuit, as shown in Fig. 2.33. The current is

$$|\tilde{I}| = \frac{|\tilde{V}_s|}{\sqrt{R^2 + (X_L - X_C)^2}}. \quad (2.47)$$

From the above equation we observe that whenever the value of the capacitive reactance X_C equals the value of the inductive reactance X_L , the current in the circuit only is limited by the resistance R . Very often the value of R can be very small compared with X_L or X_C , in which case the current can reach very high levels (resonant current).

Now let us look at a simple power circuit, consisting of a transformer connected to a power system as shown by Fig. 2.34; its single-phase equivalent circuit is illustrated in Fig. 2.35. Even though switch S_2 is open, a current $i(t)$ can still flow because the cable shunt capacitance C

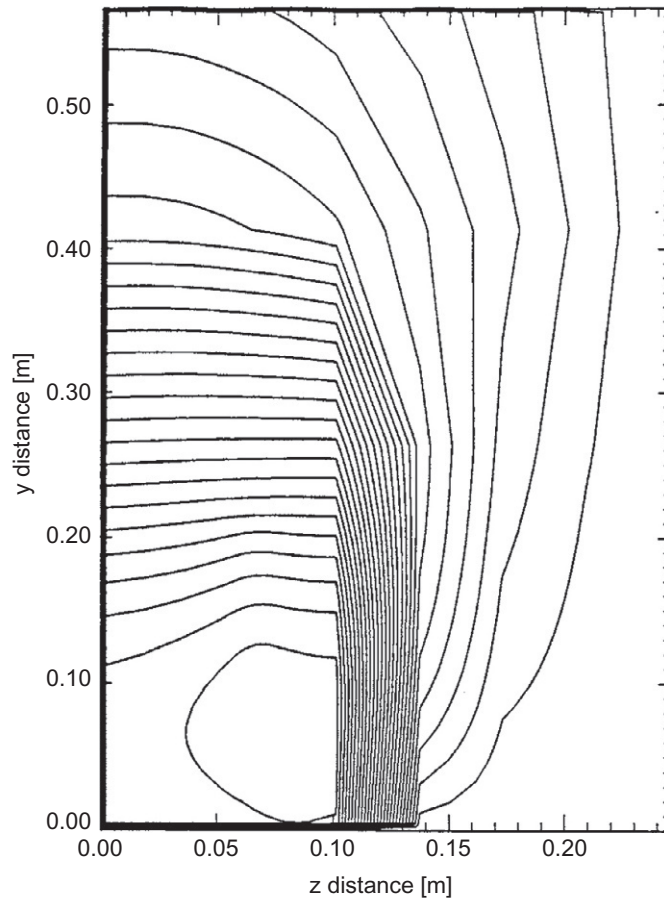


FIG. 2.30 Flux distribution in y-z plane for an excitation of 10.12 At. One flux tube contains 0.00000138 Wb/m [36].

closes the circuit. The transformer is assumed to be unloaded but energized. The magnetizing current $i(t)$ has to return to its source via the cable shunt capacitance C . Therefore,

Resonance occurs whenever X_L and X_C are close to each other.

In power systems, the variations of X_L are mainly due to the nonlinear magnetizing inductance of transformers, as shown in Fig. 2.36, and most changes in X_C are caused by switching capacitor banks and cables. The capacitance between two charged plates is illustrated in Fig. 2.37.

2.5.1 System conditions susceptible (contributive, conducive) to ferroresonance

In the previous section, a single-phase circuit was used to explain in a simplified manner the problem of ferroresonance. Here, three-phase systems will be covered because they are the basic building block of a power system and, as will be shown, they are the most prone to this problem.

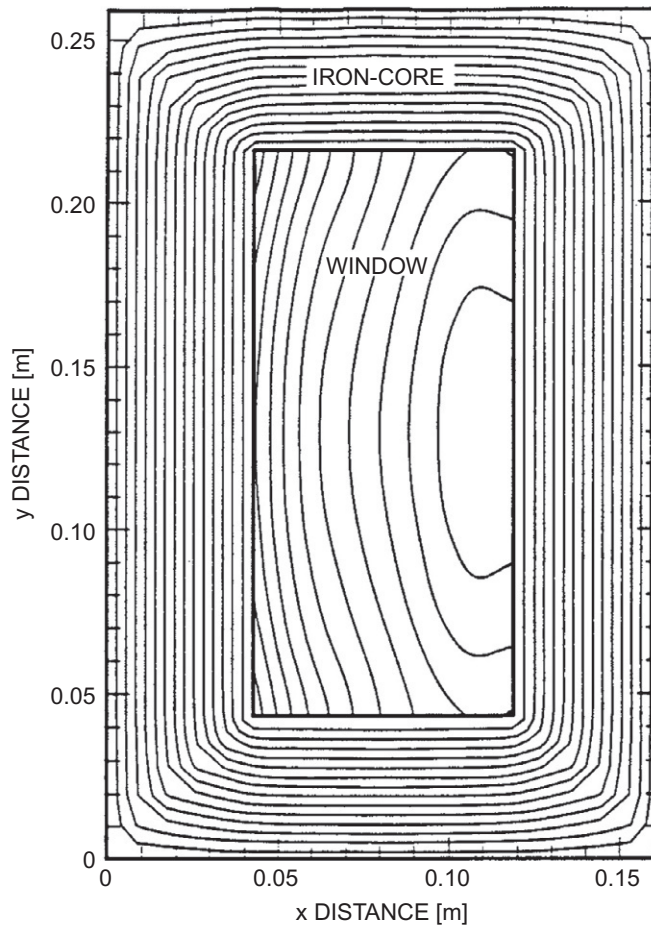


FIG. 2.31 Flux distribution in x-y plane for an excitation of 920 At. One flux tube inside window contains 0.000024 Wb/m and one flux tube in iron contains 0.00502 Wb/m [36].

Now that the principle of ferroresonance has been explained, the next important question is what conditions in an actual power system are contributive (conductive) to ferroresonance? Some conditions may not by themselves initiate the problem, but they certainly are prerequisites (necessary) so that when other conditions are present in a power system, ferroresonance can occur. The purpose of the next section is to prevent these prerequisite conditions.

2.5.2 Transformer connections and single-phase (pole) switching at no load

The transformer is the basic building block in stepping up or down voltages and currents in a power system. It is also one of the basic elements of a ferroresonant circuit. The two most widely used transformer connections are the wye and delta. Each one has its advantages and

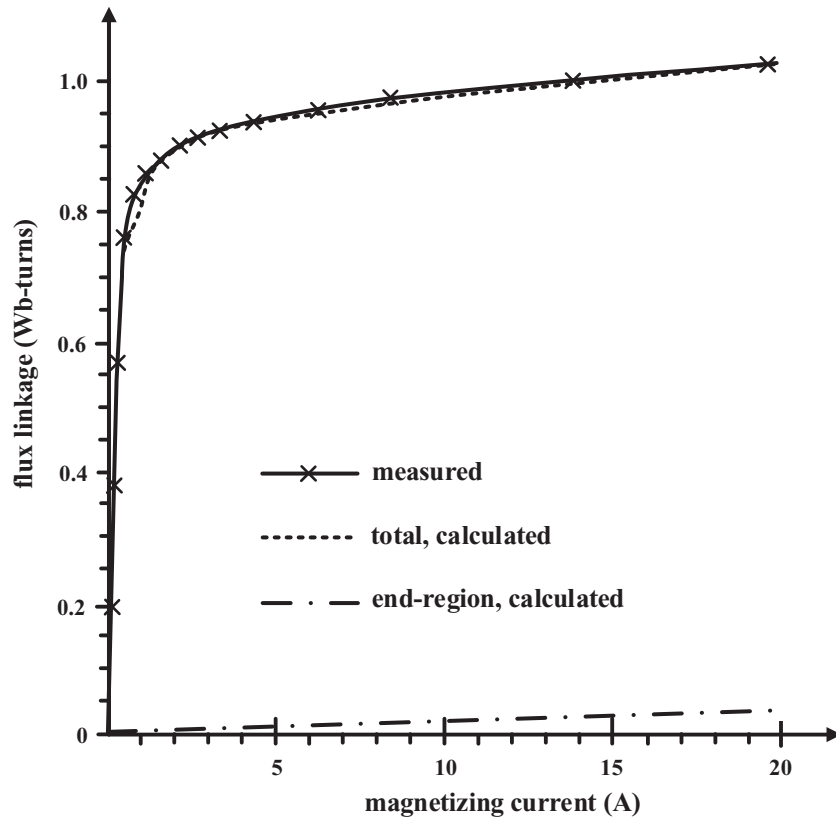


FIG. 2.32 Measured and calculated ($\lambda - i$) characteristics. Total characteristic is that of the end region (y-z) plus that of the iron-core region (x-y) [36].

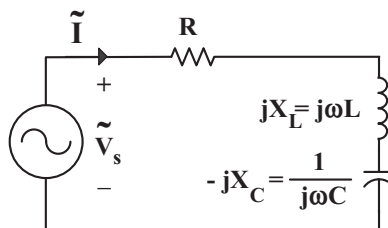


FIG. 2.33 Linear resonant circuit.

disadvantages, and depending on the particular application and engineering philosophies, one or the other or a combination of both will be used. First we will look at the delta connected (at primary) transformer, as shown in Fig. 2.38. Fig. 2.38A shows a simple power system. The source of power is represented by a grounded equivalent power source because normally the system is grounded at the source and/or at some other points in the power system.

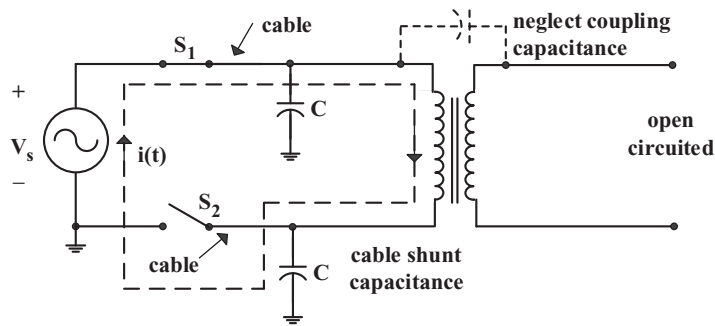


FIG. 2.34 An unloaded single-phase transformer connected to power system via cable.

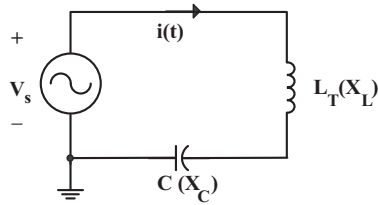


FIG. 2.35 Equivalent circuit of Fig. 2.34.

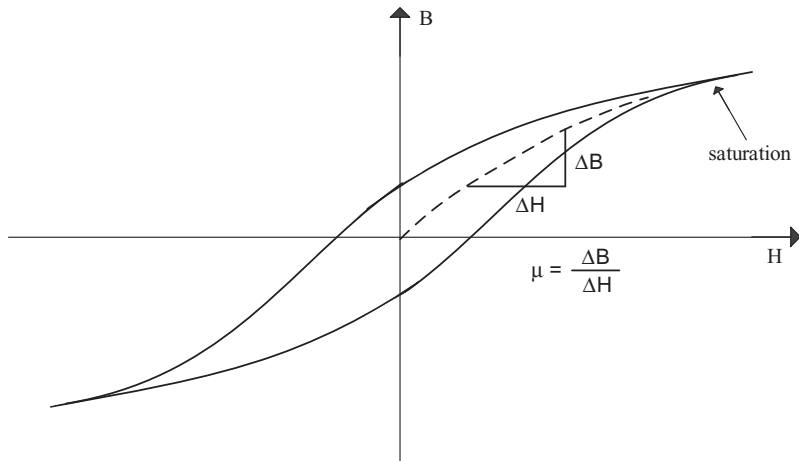


FIG. 2.36 Typical B-H loop with hysteresis of ferromagnetic materials.

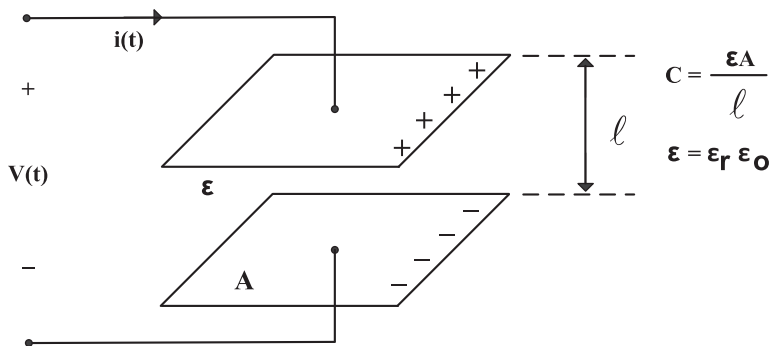


FIG. 2.37 Capacitance between two charged parallel plates.

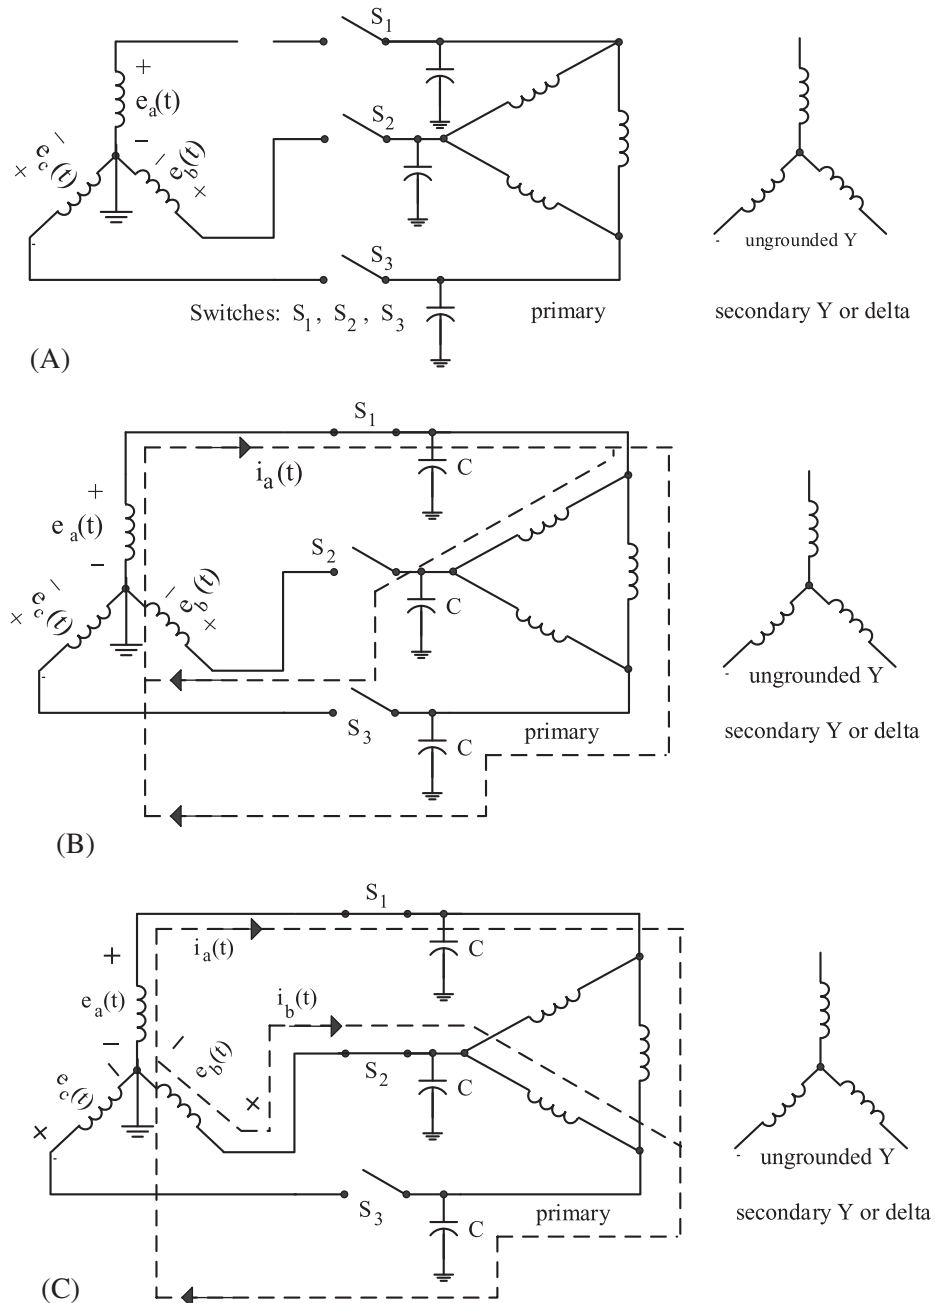


FIG. 2.38 Simple power system; the unloaded secondary can be either wye or delta (not shown) connected. (A) Transformer deenergized; (B) one phase energized: ferroresonance is likely to occur; (C) two phases energized: ferroresonance is likely to occur.

The connection between the source and the transformer is made by an (underground) cable having a capacitance C .

There are four prerequisites for ferroresonance:

- The first prerequisite for ferroresonance is the employment of cables with relatively large capacitances. The transformer primary is delta connected or in ungrounded wye connection, while the secondary can be either grounded or ungrounded wye or delta connected. This system is shown in Fig. 2.38A and the transformer is assumed to be unloaded (load provides damping).
- The second prerequisite for ferroresonance is the transformer connection.
- The third prerequisite for ferroresonance is an unloaded transformer. In order to simplify this discussion, the coupling capacitances of the transformer (from phase to ground, phase to phase, and from primary to secondary) will be assumed to be low enough compared with the shunt capacitance of the primary line (cables in populated areas) so that they can be neglected. However, it must be noted that at voltage levels above 15 kV the coupling capacitances (increased insulation) of the transformer become more important so that their contribution to the ferroresonant circuit cannot be neglected.
- The fourth prerequisite is when either one or two phases are connected; then these circuit configurations are susceptible to ferroresonance. When the third phase is energized, the system will be balanced and the current will flow directly to and from the transformer, bypassing the capacitance to ground.

Adding a load to the secondary side of the transformer changes the ferroresonant circuit considerably: the effective load impedance Z_L will be reflected back into the primary side by the square of the turns ratio of the primary (N_1) to the secondary (N_2). This reflected impedance $Z'_L = (N_1/N_2)^2 Z_L$ will in turn limit considerably the current in the ferroresonant circuit, thus reducing the possibility of this phenomenon significantly.

Now let us look at a transformer with its primary winding connected ungrounded wye as shown in Fig. 2.39. Note that the source is shown grounded and that the unloaded secondary side of the transformer can be connected either ungrounded wye or delta. When one (or two) phase(s) is (are) energized, a closed loop is formed, consisting of transformer windings and the capacitance of the primary conductor (cable) to ground. The resulting large nonsinusoidal magnetizing current can induce ferroresonant overvoltages in the circuit generating large losses within the transformer. As in the previous case, a secondary load can greatly reduce the probability of ferroresonance.

A single-phase transformer connected phase-to-phase to a grounded supply is also likely to become ferroresonant when one of the phases is opened or closed, as shown in Fig. 2.40. If on the other hand, the transformer is connected phase to ground to a grounded source (Fig. 2.41), the circuit is not likely to become ferroresonant when the hot line (S_1) is opened.

The mere presence of the ferroresonant circuit does not necessarily mean that the circuit involved will experience overvoltages due to this problem. The ratio of the capacitive reactance X_C to the transformer magnetizing reactance X_t of the ferroresonant circuit (X_C/X_t) will determine whether the circuit will experience overvoltages or not. These tests have been generalized to cover a wide range of transformer sizes (15 kVA to 15 MVA) and line-to-ground (line-to-neutral) voltages ranging from 2.5 to 19.9 kV, and it has been determined that for three-phase core type banks, they will experience overvoltages above 1.1 to 1.25 pu when

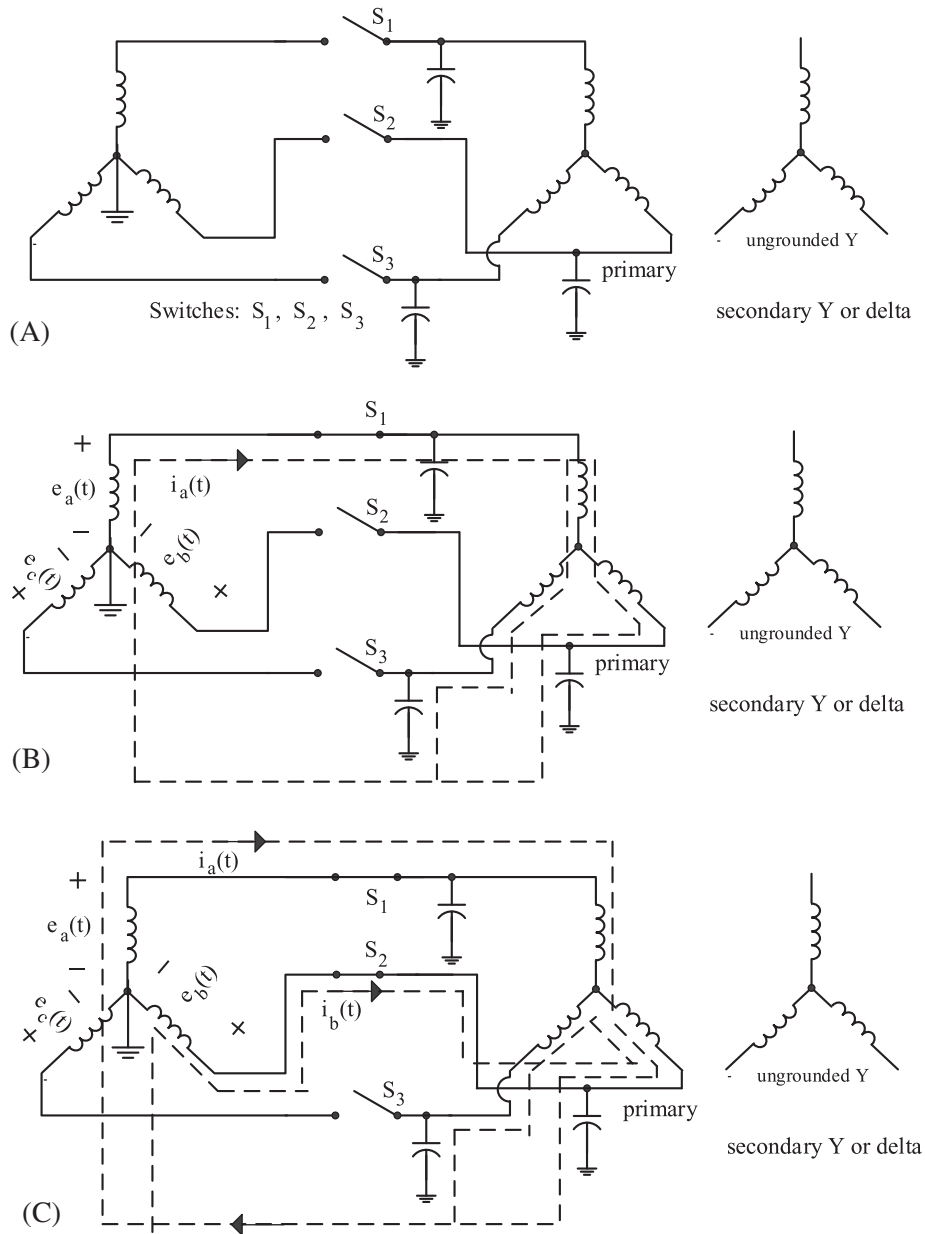


FIG. 2.39 The unloaded secondary can be either wye or delta (not shown) connected. (A) Transformer is de-energized; (B) one phase energized: ferroresonance is likely; (C) two phases energized: ferroresonance is likely.

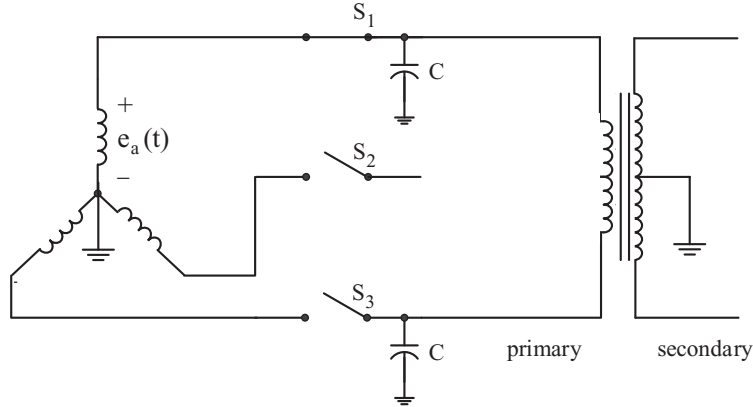


FIG. 2.40 Single-phase transformer with cable.

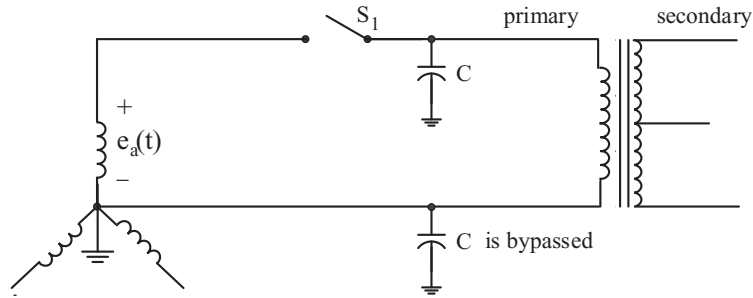


FIG. 2.41 Single-phase transformer with phase to ground: ferroresonance is unlikely.

the ratio $X_C/X_t < 40$, where $X_t = \omega L$, $X_C = 1/\omega C$ or $(1/\omega^2 LC) < 40$. Note that a three-limb, three-phase transformer has a smaller zero-sequence reactance than that of a bank of three single-phase transformers or that of a five-limb, three-phase transformer [38–41].

For banks of single-phase transformers, a ratio $X_C/X_t < 25$ has been found to produce over-voltages when the ferroresonant circuit is present.

2.5.2.1 Application Example 2.6: Susceptibility of transformers to ferroresonance

Assuming linear ($\lambda - i$) characteristics with $\lambda = 0.63$ Wbturns at 0.5 A, we have

$$L = \frac{\lambda}{i} = \frac{0.63 \text{ Wb turns}}{0.5 \text{ A}} = 1.27 \text{ H},$$

$$C = 100 \mu\text{F},$$

$$\omega = 377 \text{ rad/s},$$

$$\frac{1}{\omega^2 LC} = \frac{1}{(377)^2 (1.27) (100) (10^{-6})} = 0.055.$$

Therefore, $X_C/X_t = 0.055 < 40$, that is, ferroresonance is likely to occur.

2.5.3 Ways to avoid ferroresonance

Now that the factors conducive to ferroresonance have been identified, the next question is how to avoid the problem or at least try to mitigate its effects as much as possible. There are a few techniques to limit the probability of ferroresonance:

- *The grounded-wye/grounded-wye transformer.* When the neutral of the transformer is grounded, the capacitance to ground of the line (cable) is essentially bypassed, thus eliminating the series LC circuit that can initiate ferroresonance. It is recommended that the neutral of the transformer be solidly grounded to avoid instability in the neutral of the transformer (grounding could be done indirectly via a “Peterson coil” to limit short-circuit currents). When the neutral of a wye/wye transformer is grounded, other things can happen too: if the grounded three-phase bank is not loaded equally on its three phases, the currents flowing in the bank and consequently the fluxes will not cancel out to zero. If the bank is a three-limb core transformer, the resultant flux will be forced to flow outside the core. Under these conditions, this flux will be forced to flow in the tank of the transformer, thus causing a current to circulate in it, which can cause excessive tank overheating if the imbalance is large enough. Another approach is to use banks made up of three single-phase units or three-phase, five-limb core transformers. When single-phase units are used, the flux for each phase will be restricted to its respective core. In the case of the five-limb core, the two extra limbs provide the path for the remaining flux due to imbalance.
- *Limiting the cable capacitance by limiting the length of the cable.* This is not a practical technique.
- *Fast three-phase switching to avoid longer one- and two-phase connections.* This is an effective but expensive approach
- Use of cables with low capacitance [42–44].

2.5.3.1 Application Example 2.7: Calculation of ferroresonant currents within transformers

The objective of this example is to study the (chaotic) phenomenon of ferroresonance in transformers using Mathematica or MATLAB.

Consider a ferroresonant circuit consisting of a sinusoidal voltage source $v(t)$, a (cable) capacitance C , and a nonlinear (magnetizing) impedance (consisting of a resistance R and an inductance L) connected in series, as shown in Fig. E2.7.1. If the saturation curve (flux linkages λ as a function of current i) is represented by the cubic function $i = a\lambda^3$, the following set of first-order nonlinear differential equations can be formulated:

$$i = a\lambda^3 \Rightarrow \begin{cases} \frac{d\lambda}{dt} = V_{max} \sin \omega t - v_c - aR\lambda^3 \\ \frac{dv_c}{dt} = \frac{a\lambda^3}{C} \end{cases}$$

or in an equivalent manner, one can formulate the second-order nonlinear differential equation

$$\frac{d^2\lambda}{dt^2} + k\lambda^2 \frac{d\lambda}{dt} + \lambda^3 = b \cos \omega t,$$

where $k = 3aR$, $b = V_{\max}\omega$, and $C = a$.

- Show that the above equations are true for the circuit of Fig. E2.7.1.
- The system of Fig. E2.7.1 displays for certain values of the parameters $b = V_{\max}\omega$ and $k = 3aR$ ($\omega = 2\pi f$ where $f = 60\text{Hz}$, $R = 0.1\Omega$, $C = 100\mu\text{F}$, $a = C$, low voltage $V_{\max\text{low}} = \sqrt{2} \cdot 1000\text{V}$, and high voltage $V_{\max\text{high}} = \sqrt{2} \cdot 20,000\text{V}$), which characterize the source voltage and the resistive losses of the circuit, respectively, chaotic behavior as described by [45]. For zero initial conditions—using Mathematica or MATLAB—compute numerically λ , $d\lambda/dt$, and i as a function of time from $t_{\text{start}} = 0$ to $t_{\text{end}} = 0.5\text{s}$.
- Plot λ versus $d\lambda/dt$ for the values as given in part b.
- Plot λ and $d\lambda/dt$ as a function of time for the values as given in part b.
- Plot i as a function of time for the values as given in part b.
- Plot voltage $d\lambda/dt$ versus i for the values as given in part b.

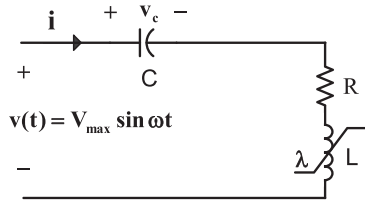


FIG. E2.7.1 Ferroresonant nonlinear circuit.

Solution to Application Example 2.7 Calculation of Ferroresonant Currents within Transformers.

- To show that the equations are true use the circuit of Fig. E2.7.1:

$$i(t) = a\lambda^3, \quad v(t) = V_{\max} \sin(\omega t).$$

By inspection of the circuit of Fig. E2.7.1:

$$V_{\max} \sin(\omega t) = v_c + aR\lambda^3 + \frac{d\lambda}{dt}$$

$$i_C(t) = i(t) = a\lambda^3 = C \frac{dv_c}{dt}, \quad \text{so} \quad \frac{dv_c}{dt} = \frac{a\lambda^3}{C}.$$

Taking the derivative of the circuit equation:

$$\omega V_{\max} \cos(\omega t) = \frac{d\lambda^3}{C} + 3aR\lambda^2 \frac{d\lambda}{dt} + \frac{d^2\lambda}{dt^2}.$$

For $k = 3aR$, $b = \omega V_{\max}$, and $C = a$,

$$\frac{d^2\lambda}{dt^2} + k\lambda^2 \frac{d\lambda}{dt} + \lambda^3 = b \cos(\omega t).$$

- (b) To compute numerical values of λ , $d\lambda/dt$, and i as a function of time for $0 < t < 0.5$ s ($f=60$ Hz, $R=0.1 \Omega$, $C=a=100 \mu\text{F}$, $1000\sqrt{2} \text{ V} < V_{\max} < 20,000\sqrt{2} \text{ V}$, all initial conditions=0) use the MATLAB codes of Table E2.7.1.
- (c) Plots of λ versus $d\lambda/dt$ for the values as given in part *b* are shown in Figs. E2.7.2 and E2.7.3.
- (d) Plots of λ and $d\lambda/dt$ as a function of time for the values given in part *b* are shown in Figs. E2.7.4–E2.7.7.
- (e) Plots of i as a function of time for the values as given in part *b* are shown in Figs. E2.7.8 and E2.7.9.
- (f) Plots of voltage $v = d\lambda/dt$ versus i for the values as given in part *b* are shown in Figs. E2.7.10 and E2.7.11.

TABLE E2.7.1 Matlab program codes for Application Example 2.7.

```
% Matlab code
%
% getting started
clear all;
close all;
nfig = 0;
%
% define integration variables and initial conditions
to = 0;
tf = 0.5;
% time in seconds
xo = 0;
vo = 0;
% initial conditions
zo = [xo vo]';
% initial conditions in vector form
%Vmax = [1000*sqrt(2):100:20000*sqrt(2)];
%Vmax = 20000*sqrt(2);
%b = 2*pi*60*Vmax;
%w = 2*pi*60;
%k = 3*100e-6*0.1;
% Evaluate z numerically
[t, z] = ode23('Hw5eqnfile', [to tf], zo);
%x = dsolve('D2x+k*x^2*Dx+x^3=b*cos(w * t)', 'x(0)=0');
%y = rk2('D2y+k*y^2*Dy+y^3=b*cos(w*t)', [0 0.5], [0 0 0])
%dxdt = [x(2); b*cos(w*t)-Dx(2)-k*x(1)^2*x(2)-x(1)^3];
%
%Evaluate x(t) analytically
% te = linspace (to, tf, 200);
% xe = 0.7737*exp(-3*te)*cos(2*te-1.1903) - 0.3095*cos(5*te-0.3805);
% Plot profiles
nfig = nfig+1;
figure (nfig)
plot (t, z(:, 1)), grid
xlabel ('Time (s)'),
ylabel ('Inductor Flux Linkage')
nfig = nfig+1;
```


TABLE E2.7.1 Matlab program codes for Application Example 2.7—Cont'd

```

figure (nfig)
plot (t,z (:, 2)), grid
xlabel ('Time (s)'),
ylabel ('Voltage')
nfig = nfig+1;
figure (nfig)
plot(t, 100e-6*z(:,1).^3), grid
xlabel('Time (s)'), ylabel ('Current')
% Plot dx/dt versus x(t)
nfig = nfig+1;
figure (nfig)
plot (z(:, 2), z(:,1), zo(1), zo(2), 'rx'), grid
xlabel ('Voltage'), ylabel ('Inductor Flux Linkage')
% Plot dx/dt versus i(t)
nfig = nfig+1;
figure (nfig)
plot (100e-6*z(:, 1).^3, z(:,2), zo(1), zo(2), 'rx'), grid
xlabel('Current'), ylabel ('Voltage')

```

Note: All calculation statements must be on one line and terminated with a semicolon (;), comment lines are beginning with the symbol (%).

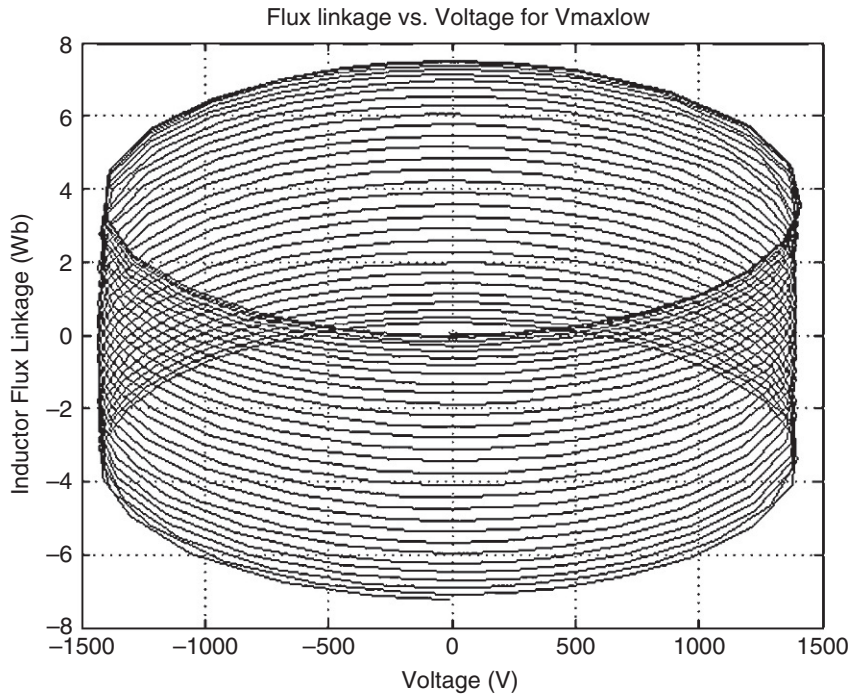**FIG. E2.7.2** Inductor flux linkage versus voltage at $V_{\text{maxlow}} = \sqrt{2} \cdot 1000 \text{ V}$.

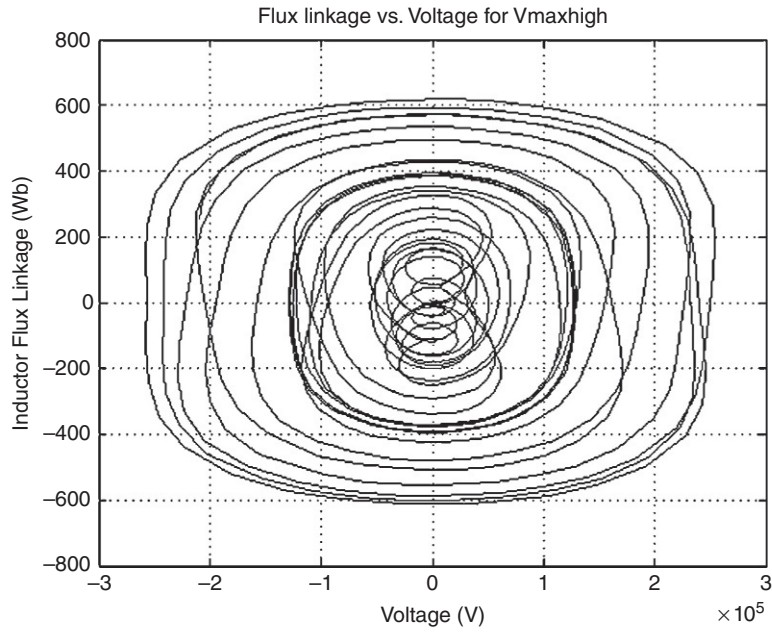


FIG. E2.7.3 Inductor flux linkage versus voltage at $V_{\text{maxhigh}} = \sqrt{2} \cdot 20,000 \text{ V}$.

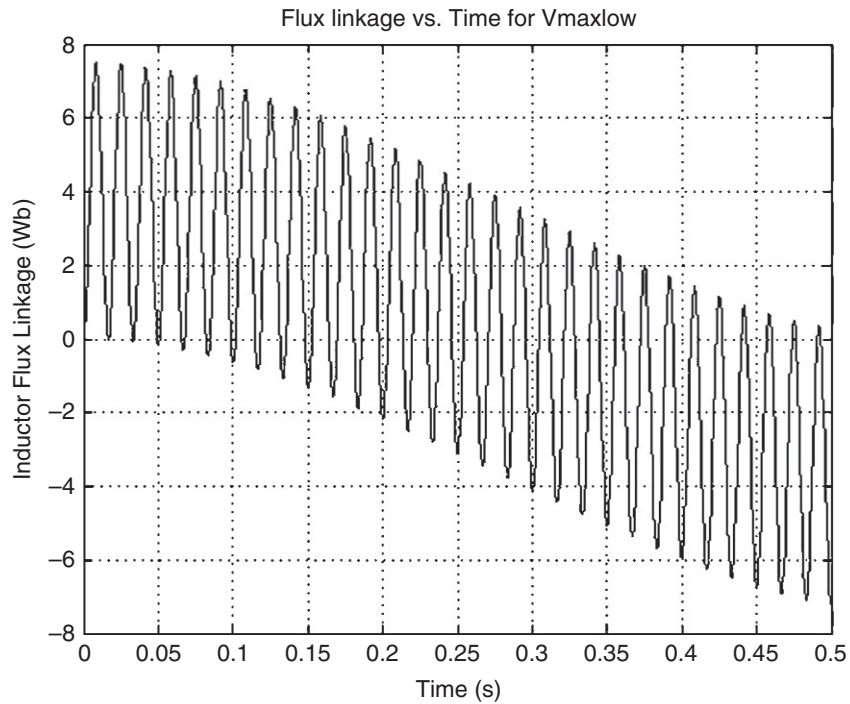


FIG. E2.7.4 Inductor flux linkage versus time at $V_{\text{maxlow}} = \sqrt{2} \cdot 1000 \text{ V}$.

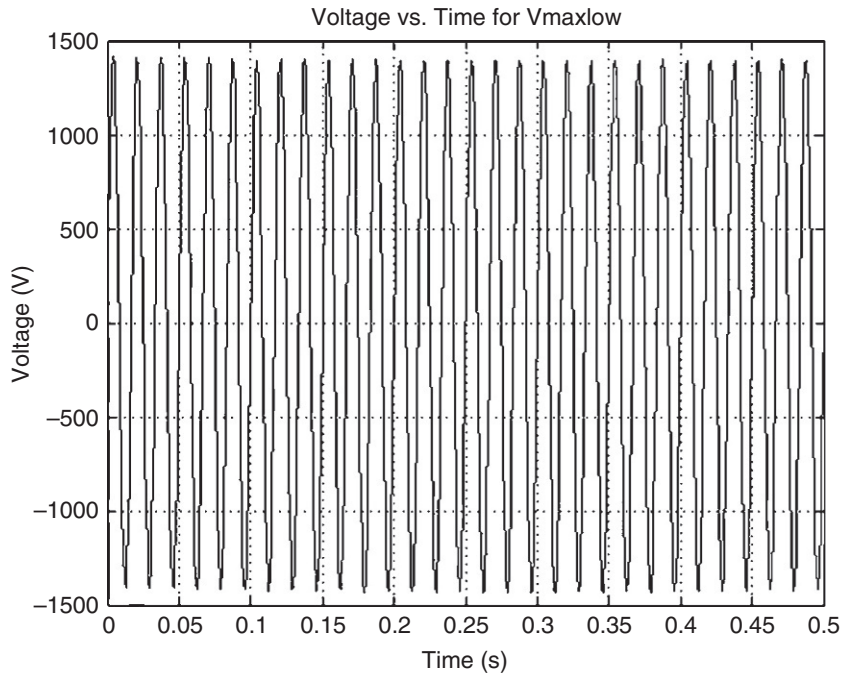


FIG. E2.7.5 Voltage versus time at $V_{\max\text{low}} = \sqrt{2} \cdot 1000\text{V}$.

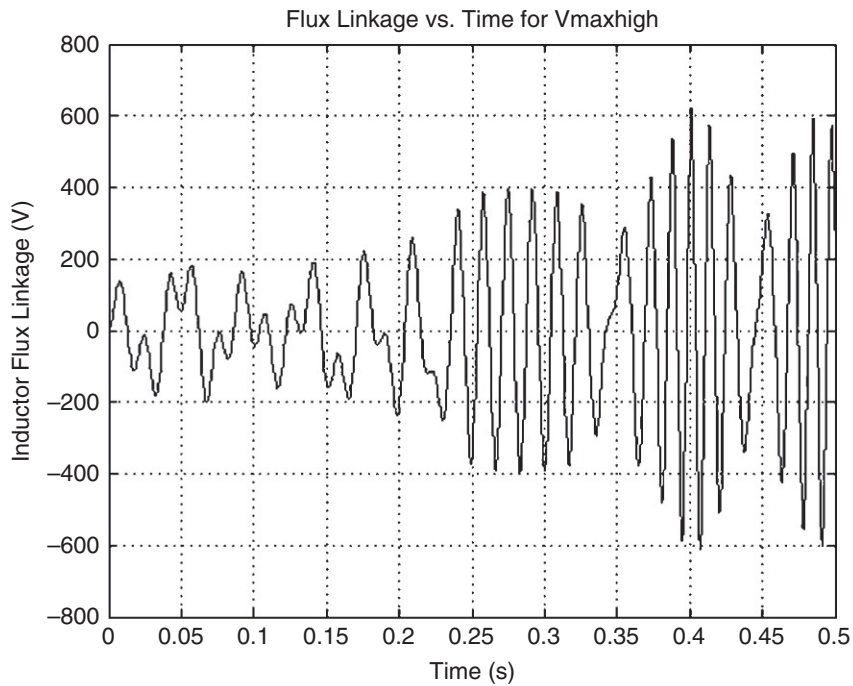


FIG. E2.7.6 Inductor flux linkage versus time at $V_{\max\text{high}} = \sqrt{2} \cdot 20,000\text{V}$.

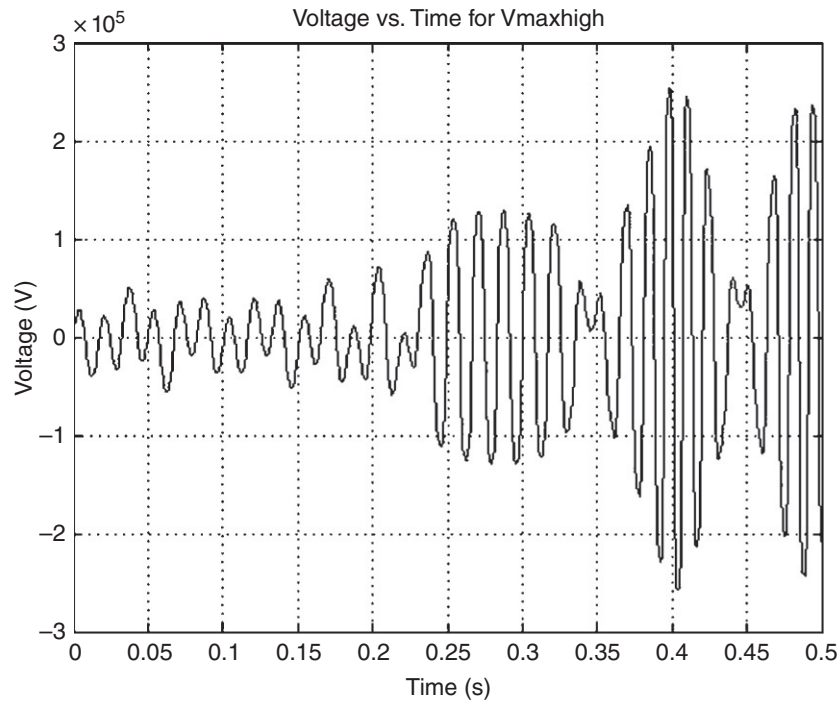


FIG. E2.7.7 Voltage versus time at $V_{\text{maxhigh}} = \sqrt{2} \cdot 20,000$ V.

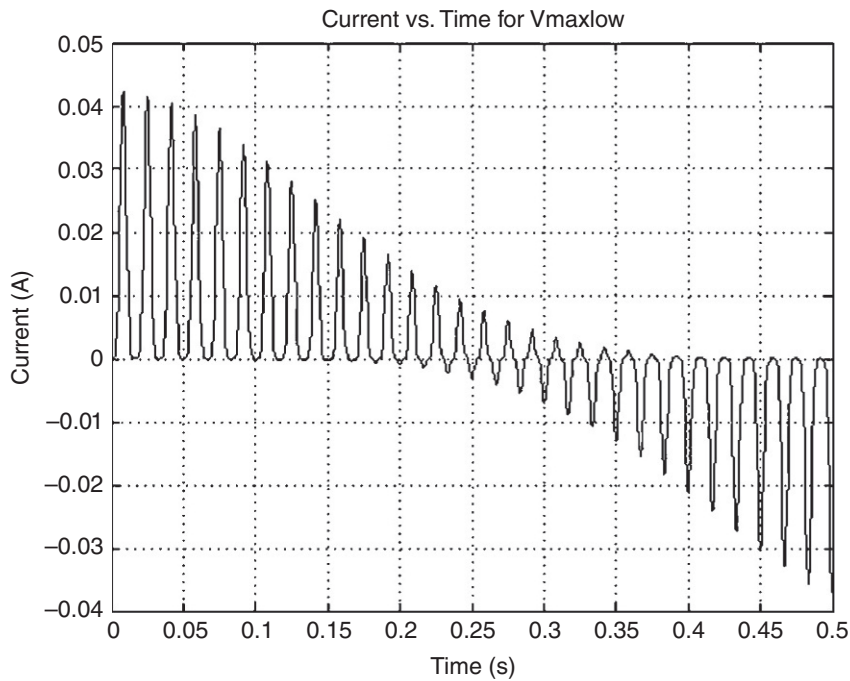


FIG. E2.7.8 Current versus time at $V_{\text{maxlow}} = \sqrt{2} \cdot 1000$ V.

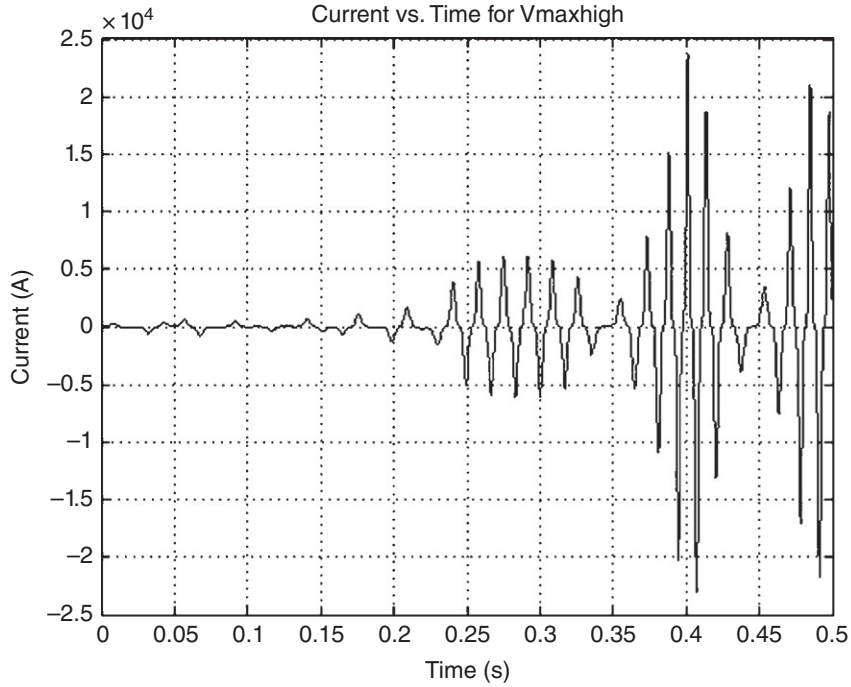


FIG. E2.7.9 Current versus time at $V_{\text{maxhigh}} = \sqrt{2} \cdot 20,000$ V.

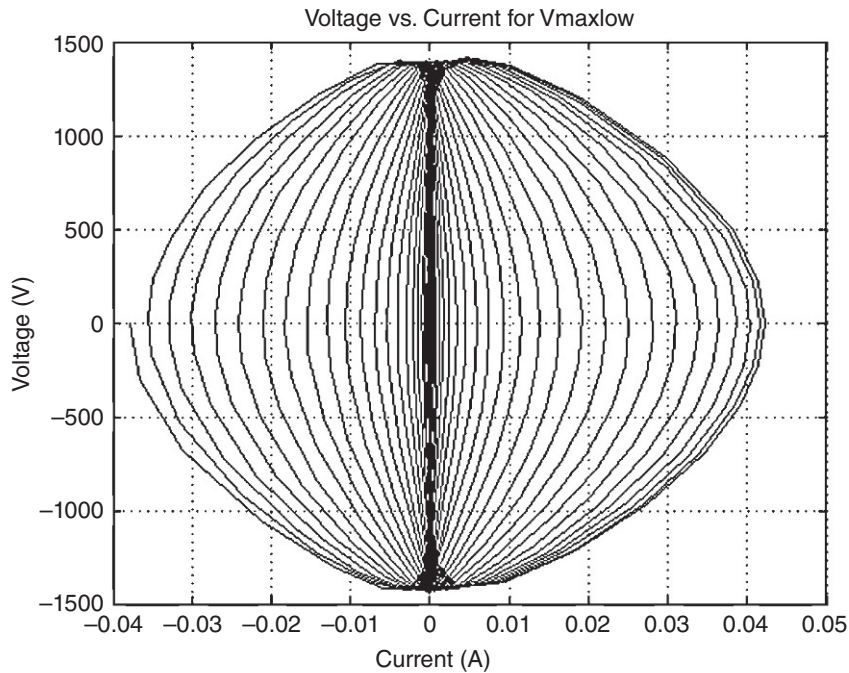


FIG. E2.7.10 Voltage versus current at $V_{\text{maxlow}} = \sqrt{2} \cdot 1000$ V.

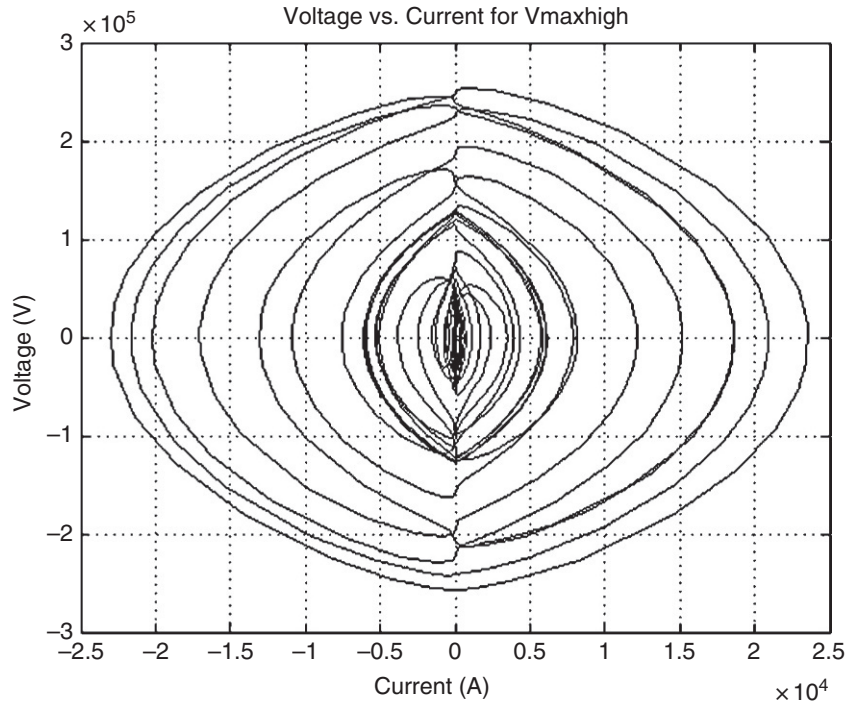


FIG. E2.7.11 Voltage versus current at $V_{\text{maxhigh}} = \sqrt{2} \cdot 20,000 \text{ V}$.

2.6 Effects of solar-geomagnetic disturbances on power systems and transformers

Solar flares and other solar phenomena can cause transient fluctuations in the earth's magnetic field (e.g., $B_{\text{earth}} = 0.6 \text{ gauss} = 60 \mu\text{T}$). When these fluctuations are severe, they are known as geomagnetic storms and are evident visually as the aurora borealis in the Northern Hemisphere and as the aurora australis in the Southern Hemisphere (Fig. 2.42).

These geomagnetic field changes induce an earth-surface potential (ESP) that causes geoelectrically induced currents (GICs) to flow in large-scale 50 or 60 Hz electric power systems. The GICs enter and exit the power system through the grounded neutrals of wye-connected transformers that are located at opposite ends of a long transmission line. The causes and nature of geomagnetic storms and their resulting effects in electric power systems will be described next.

2.6.1 Application Example 2.8: Calculation of magnetic field strength $\vec{H}$

The magnetic field strength $\vec{H}$ of a wire carrying 100 A at a distance of $R = 1 \text{ m}$ (Fig. E2.8.1) is

$$|\vec{H}| = \frac{I}{2\pi R} = \frac{100 \text{ A}}{2\pi \cdot 1 \text{ m}} = 15.92 \text{ A/m},$$

or

$$|\vec{B}| = \mu_0 |\vec{H}| = 20 \mu\text{T}.$$

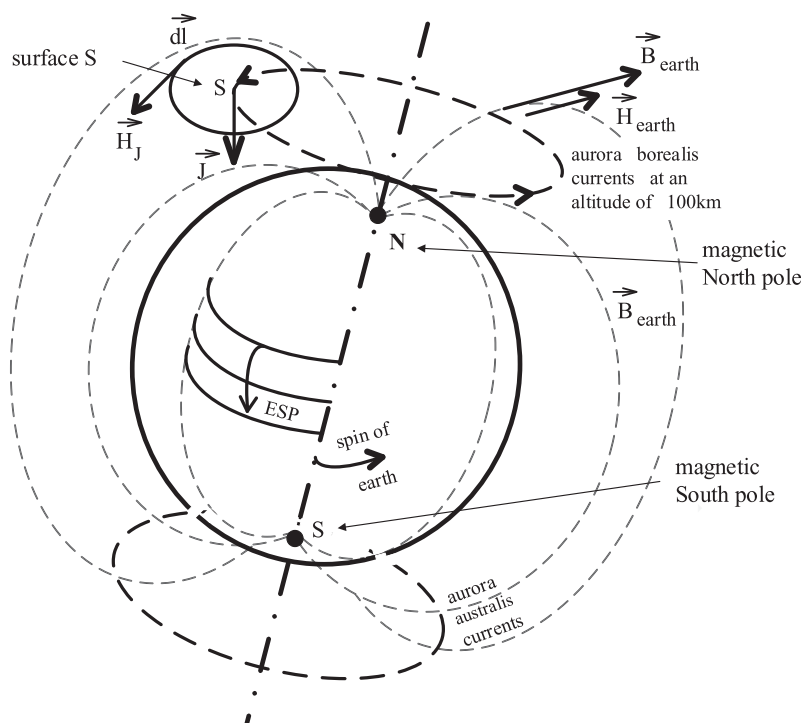
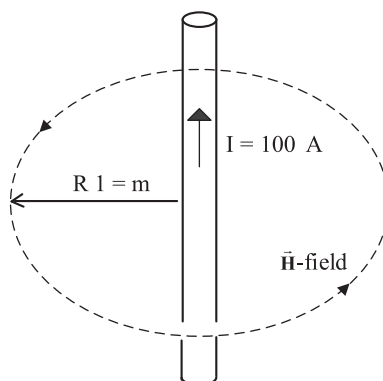


FIG. 2.42 Aurora borealis and aurora australis.

FIG. E2.8.1 $\vec{H}$ field of a single conductor in free space.

2.6.2 Solar origins of geomagnetic storms

The solar wind is a plasma of protons and electrons emitted from the sun due to:

- solar flares,
- coronal holes, and
- disappearing filaments.

The solar wind particles interact with the earth's magnetic field in a complicated manner to produce auroral currents that follow circular paths (see Fig. 2.42) around the geomagnetic poles at altitudes of 100 km or more. These auroral currents produce fluctuations in the earth's magnetic field ($\Delta B = \pm 500 \text{ nT} = \pm 0.5 \mu\text{T}$) that are termed geomagnetic storms when they are of sufficient severity.

2.6.3 Sunspot cycles and geomagnetic-disturbance cycles

On average, solar activity as measured by monthly sun spot numbers follows an 11-year cycle [46–53]. The last sunspot cycle 23 had its minimum in September 1997, and its peak in 2001–2002. The largest geomagnetic storms are most likely due to flare and filament eruption events and could occur at any time during the cycle; the severe geomagnetic storm on March 13, 1989 (Hydro Quebec system collapsed with 21.5 GW) was evidently a striking example.

2.6.4 Earth-surface potential (ESP) and geomagnetically induced current (GIC)

The auroral currents that result from solar-emitted particles interact with the earth's magnetic field and produce fluctuations in the earth's magnetic field B_{earth} . The earth is a conducting sphere, admittedly nonhomogeneous, that experiences (or at least portions of it) a time-varying magnetic field. The portions of the earth that are exposed to the time-varying magnetic field will have electric potential gradients (voltages) induced, which are termed earth-surface potentials (ESPs). Analytical methods have been developed to estimate the ESP based on geomagnetic field fluctuation data and a multilayered earth conductivity model: values in the range of 1.2 to 6 V/km or 2 to 10 V/mile can be obtained during severe geomagnetic storms in regions of low earth conductivity. Low earth conductivity (high resistivity) occurs in regions of igneous rock geology (e.g., Rocky Mountain region). Thus, power systems located in regions of igneous rocky geology are the most susceptible to geomagnetic storm effects.

Electric power systems become exposed to the ESP through the grounded neutrals of wye-connected transformers that may be at the opposite ends of long transmission lines. The ESP acts eventually as an ideal voltage source impressed across the grounded-neutral points and because the ESP has a frequency of one to a few millihertz, the resulting GICs can be determined by dividing the ESP by the equivalent DC resistance of the paralleled transformer winding and line conductors between the two neutral grounding points. The GIC is a quasi-direct current, compared to 50 or 60 Hz, and GIC values in excess of 100 A have been measured in transformer neutrals [46–53].

Ampere's law is valid for the calculation of the aurora currents of Fig. 2.42

$$\oint_C^{\text{contour}} \vec{H}_I \cdot d\vec{\ell} = \int_S^{\text{surface}} \vec{J} \cdot d\vec{S}. \quad (2.48)$$

2.6.5 Power system effects of GIC

GIC must enter and exit power systems through the grounded-neutral connections of wye-connected transformers or autotransformers. The per-phase GIC can be many times larger in magnitude than the rms AC magnetizing current of a transformer. The net result is a DC bias in the transformer core flux, resulting in a high level of half-cycle saturation [40,54]. This half-

cycle saturation of transformers operating within a power system is the source of nearly all operating and equipment problems caused by GICs during magnetic storms (reactive power demand and its associated voltage drop). The direct consequences of the half-cycle transformer saturation are:

- The transformer becomes a rich source of even and odd harmonics;
- A great increase in inductive power (VAR) drawn by the transformer occurs resulting in an excessive voltage drop; and
- Large stray leakage flux effects occur with resulting excessive localized (e.g., tank) heating.

There are a number of effects due to the generation of high levels of harmonics by system power transformers, including:

- overheating of capacitor banks,
- possible misoperation of relays,
- sustained overvoltages on long-line energization,
- higher secondary arc currents during single-pole switching,
- higher circuit breaker recovery voltage,
- overloading of harmonic filters of high voltage DC (HVDC) converter terminals, and
- distortion of the AC voltage wave shape that may result in loss of power transmission.

The increased inductive VARs drawn by system transformers during half-cycle saturation are sufficient to cause intolerable system voltage depression, unusual swings in MW and MVAR flow on transmission lines, and problems with generator VAR limits on some instances.

2.6.6 System model for calculation of GIC

The ESP and GIC due to geomagnetic storms have frequencies in the millihertz range, and appear as quasi-DC in comparison to 50 and 60 Hz power system frequencies. Thus the system model is basically a DC conducting path model, in which the ESP voltage sources, in series with station ground-mat resistances, transformer resistances, and transmission line resistances, are impressed between the neutral grounds of all grounded-wye transformers.

Although there are similarities between the paths followed by GIC and zero-sequence currents in a power system, there are also important differences in the connective topography representing transformers in the two instances. The GIC transformer models are not concerned with leakage reactance values, but only with paths through the transformer that could be followed by DC current. Thus, the zero-sequence network configuration of an AC transmission line grid cannot be used directly to determine GIC. Transmission lines can be modeled for GIC determination by using their positive-sequence resistance values with a small correction factor to account for the differences between AC and DC resistances due to skin, proximity, and magnetic loss effects. A simple three-phase network is shown in Fig. 2.43, and the DC equivalent for determining GIC is shown by Fig. 2.44 [46–54]. The symbols used are defined as follows:

$R_L \equiv$ line resistance per phase,

$R_Y \equiv$ resistance of grounded wye-connected winding per phase,

$R_S \equiv$ autotransformer series winding resistance per phase,

$R_C \equiv$ autotransformer common winding resistance per phase,

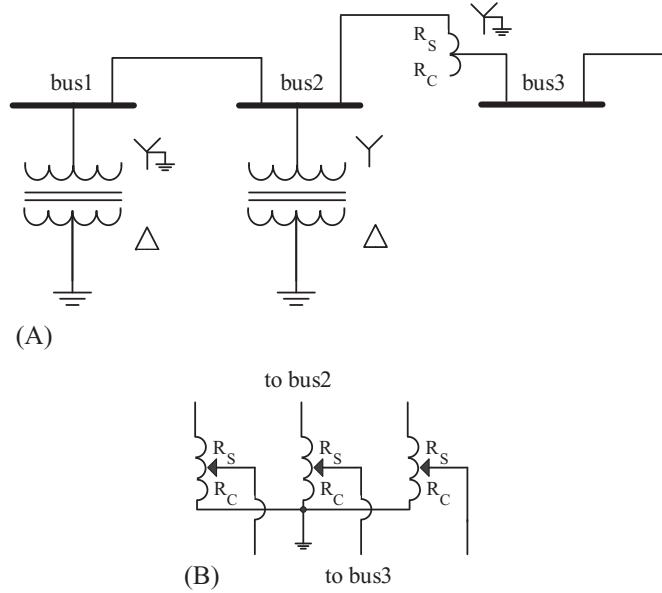


FIG. 2.43 (A) Sample network to illustrate system and ESP modeling, (B) autotransformer as used in (A).

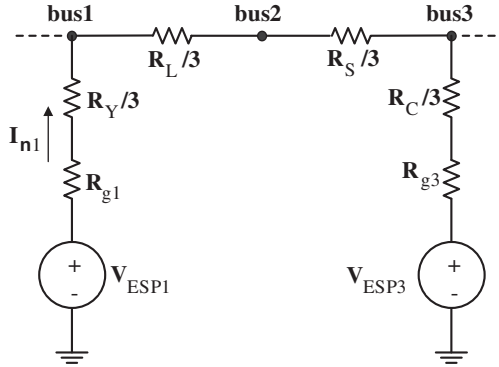


FIG. 2.44 DC model of sample network (Fig. 2.43) with ESP sources for buses $i = 1, 2$, and 3 .

$R_{gi} \equiv$ grounding resistance of bus i ,
 $I_{ni} \equiv$ neutral GIC at bus i , and
 $V_{ESP_i} \equiv$ earth surface potential at bus i .

2.6.7 Mitigation techniques for GIC

Much work has been done [46–54] after some power system failures have occurred during the past 30 years. The most important finding is that three-limb, three-phase transformers

with small zero-sequence reactances—requiring a relatively large air gap between iron core and solid iron tank—are least affected by geomagnetically induced currents.

2.6.8 Conclusions regarding GIC

Geomagnetic storms are naturally occurring phenomena that can adversely affect electric power systems. Only severe storms produce power system effects. Power systems in northern latitudes that are in regions of high geological resistivity (igneous rock formations) are more susceptible. Three-limb, three-phase transformers with large gaps between iron core and tank permit GICs to flow but suppress their detrimental effects such as VAr demand [39,46–54]. The mitigation techniques of Section 2.6.7 have been implemented and for this reason now a major collapse of power systems due to geomagnetic storms can be avoided. This is an example of how research can help increase the reliability of power systems.

2.7 Grounding

Proper power system grounding is very essential for personnel safety, equipment protection, and power continuity to electrical loads. Special attention should be given to grounding location and means for minimizing circulating ground currents, as well as ground-fault sensing. Electrical power systems require two types of grounding, namely, system grounding and equipment grounding; each has its own functions [55]. The IEEE Green Book, IEEE Recommended Practice for Grounding of Industrial and Commercial Power Systems, ANSI/IEEE C114.1, Std.142, is the authoritative reference on grounding techniques [56].

2.7.1 System grounding

System and circuit conductor grounding is an intentional connection between the electric system conductors and grounding electrodes that provides an effective connection to ground (earth). The basic objectives being sought are to:

- limit overvoltages due to lightning,
- limit line surges, or unintentional contact with high-voltage lines,
- stabilize the voltage to ground during normal operation, and
- facilitate overcurrent device operation in case of ground faults.

2.7.1.1 Factors influencing choice of grounded or ungrounded system

Whether or not to ground an electrical system is a question that must be faced sometime by most engineers charged with planning electrical distribution. A decision in favor of a grounded system leads then to the question of how to ground.

Definitions

- *Solidly grounded*: no intentional grounding impedance.
- *Effectively grounded*: grounded through a grounding connection of sufficiently low impedance (inherent or intentionally added or both) such that ground faults that may

occur cannot build up voltages in excess of limits established for apparatus, circuits, or systems so grounded. $R_0 < X_1$, $X_0 \leq 3X_1$, where X_1 is the leakage reactance, and X_0 and R_0 are the grounding reactance and resistance, respectively.

- *Reactance grounded:* $X_0 \leq 10X_1$.
- *Resistance grounded:* $R_0 \geq 2X_0$.
- *High-resistance grounded:* ground fault up to 10 A is permitted.
- *Grounded for serving line-to-neutral loads:* $Z_0 \leq Z_1$.
- *Ungrounded:* no intentional system grounding connection.

Service continuity

For many years a great number of industrial plant distribution systems have been operated ungrounded (Fig. 2.45) at various voltage levels. In most cases, this has been done with the thought of gaining an additional degree of service continuity. The fact that any one contact occurring between one phase of the system and ground is unlikely to cause an immediate outage to any load may represent an advantage in many plants (e.g., submarines), varying in its importance according to the type of plant.

Grounded systems

In most cases systems are designed so that circuit protective devices will remove a faulty circuit from the system regardless of the type of fault. A phase-to-ground fault generally results in the immediate isolation of the faulted circuit with the attendant outage of the loads on that circuit (Fig. 2.46). However, experience has shown in a number of systems that greater service continuity may be obtained with grounded-neutral than with ungrounded-neutral systems.

Multiple faults to ground

Although a ground fault on one phase of an ungrounded system generally does not cause a service interruption, the occurrence of a second ground fault on a different phase before the first fault is cleared does result in an outage (Fig. 2.47). If both faults are on the same feeder,

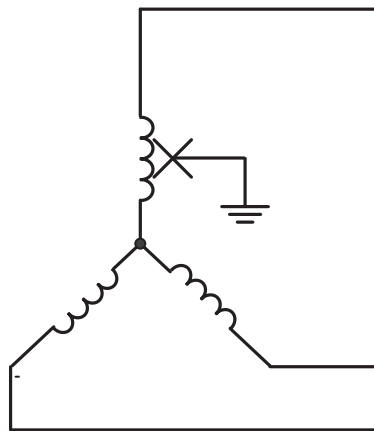


FIG. 2.45 Ungrounded system with one fault.

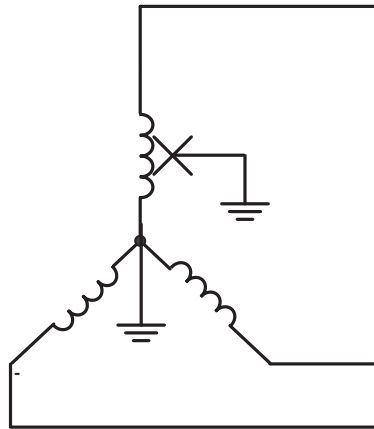


FIG. 2.46 Grounded system with one fault.

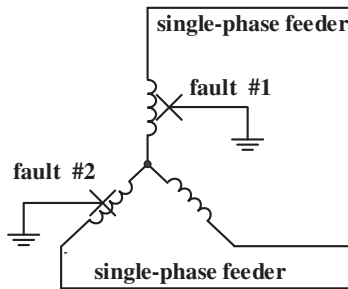


FIG. 2.47 Ungrounded system with two faults.

that feeder will be opened. If the second fault is on a different feeder, both feeders may be deenergized.

The longer a ground fault is allowed to remain on an ungrounded system, the greater is the likelihood of a second ground fault occurring on another phase resulting in an outage. The advantage of an ungrounded system in not immediately dropping load upon the occurrence of a ground fault may be largely destroyed by the practice of ignoring a ground fault until a second one occurs and repairs are required to restore service. With an ungrounded system it is extremely important that an organized maintenance program be provided so that first ground fault is located and removed as soon as possible after its occurrence.

Safety

Many of the hazards to personnel and property existing in some industrial electrical systems are the result of poor or nonexistent grounding of electrical equipment and metallic structures. Although the subject of equipment grounding is treated in the next section, it is important to note that regardless of whether or not the system is grounded, safety considerations require thorough grounding of equipment and structures.

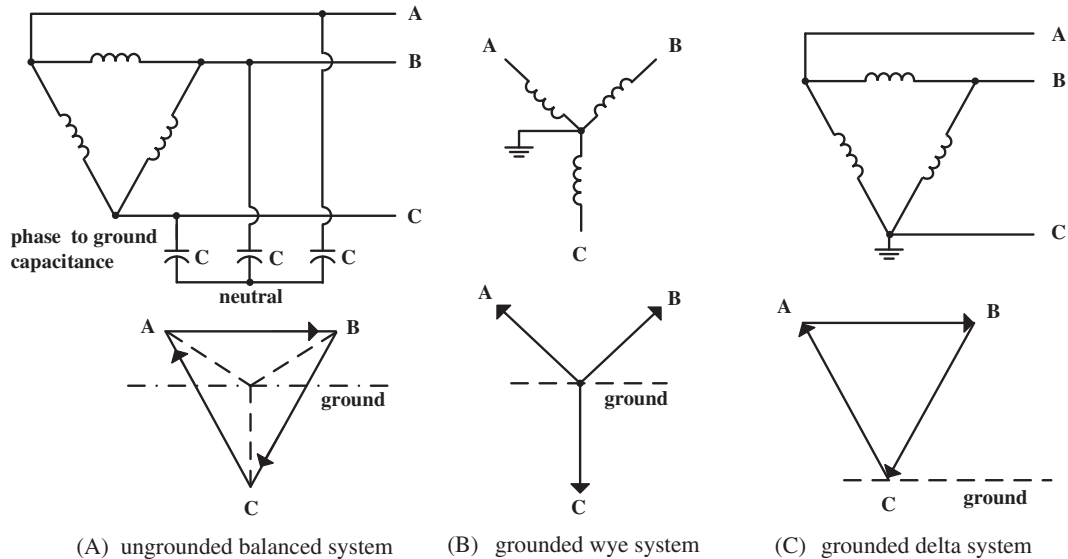


FIG. 2.48 (A) Ungrounded balanced system (circuits and phasor diagrams) indirectly grounded by the neutral of capacitor bank (neutral is on ground potential). (B) and (C) Diagrams showing circuit and voltages to ground under steady-state conditions.

Proper grounding of a low-voltage (600 V or less) distribution system may result in less likelihood of accidents to personnel than leaving the system supposedly ungrounded. The knowledge that a circuit is grounded generally will result in greater care on the part of the workman.

It is erroneous to believe that in an ungrounded system a person may contact an energized phase conductor without personal hazard. As Fig. 2.48 shows, an ungrounded system with balanced phase-to-ground capacitance has rated line-to-neutral voltages existing between any phase conductor and ground. To accidentally or intentionally contact such a conductor may present a serious, perhaps lethal shock hazard in most instances.

During the time a ground fault remains on one phase of an ungrounded system, personnel contacting one of the other phases and ground are subjected to a voltage 1.73 (that is, $\sqrt{3}$) times that which would be experienced on a solidly neutral-grounded system. The voltage pattern would be the same as the case shown in Fig. 2.48C.

Power system overvoltages

Some of the more common sources of overvoltages on a power system are the following:

- lightning (see Application Examples 2.9 and 2.10),
- switching surges,
- capacitor switching,
- static,
- contact with high-voltage system,
- line-to-ground faults,
- resonant conditions, and
- restriking ground faults.

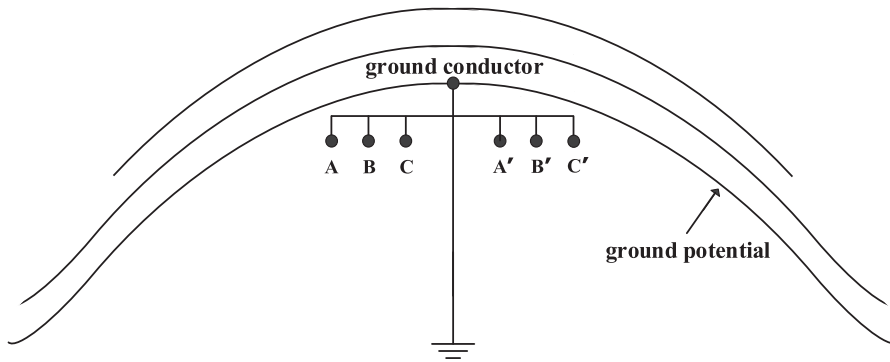


FIG. 2.49 Conductor configuration on transmission tower.

Lightning

Most industrial systems are effectively shielded against direct lightning strikes (Fig. 2.49). Many circuits are either underground in ducts or within grounded metal conduits or raceways. Even open-wire circuits are often shielded by adjacent metallic structures and buildings. Large arresters applied at the incoming service limit the surge voltages within the plant resulting from lightning strikes to the exposed service lines. Other arrester applications may be necessary within the plant to protect low impulse strength devices such as rotating machines and computers.

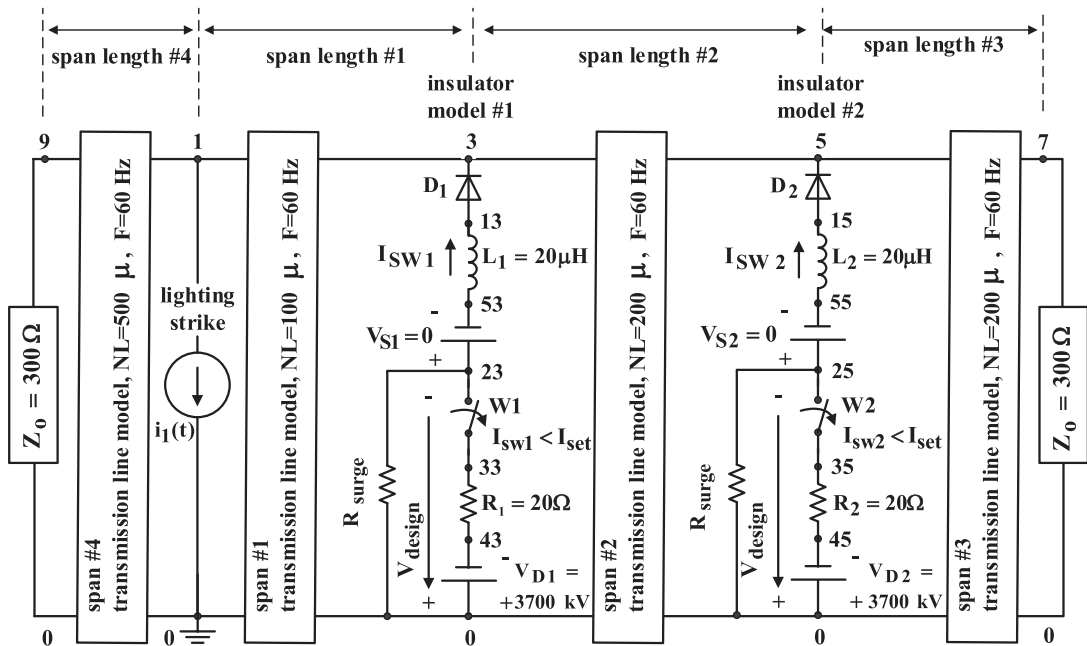
Switching surges

Normal switching operation in the system (e.g., capacitor switching) can cause overvoltages. These are generally not more than three times the normal voltage and of short duration.

2.7.1.2 Application Example 2.9: Propagation of a surge through a distribution feeder with an insulator flashover

This example illustrates the performance of a transmission system when the current of a lightning strike is large enough to cause flashover of tower insulator strings [57]. A lightning strike with the rise time $\tau_1 = 1.0 \mu\text{sec}$, the fall time $\tau_2 = 5.0 \mu\text{s}$, and the peak magnitude of current waveform $I_0 = 15.4 \text{ kA}$ strikes a 138 kV transmission line at node 1 (see Fig. E2.9.1). The span lengths of this transmission line are nonuniform and are given by NL (normalized length). Both ends of the transmission line are terminated by $Z_0 = 300 \Omega$.

The transmission line has steel towers with 10 porcelain insulators. The tower-surge impedance consists of a 20Ω resistance in series with $20 \mu\text{H}$ of inductance. The model used to simulate the first two insulators is shown in Fig. E2.9.1. Note that the transmission line can be simulated by the PSpice (lossless) transmission line model T , where $Z_0 = 300 \Omega$, $f = 60 \text{ Hz}$, and NL as indicated in Fig. E2.9.1. The current-controlled switch can be simulated by W , where $I_{ON} = 1 \text{ A}$.



- Calculate the four span lengths in meters.
- Calculate (using PSpice) and plot the transmission line voltage (in MV) as a function of time (in μs) at the point of strike, at the first insulator, and at the second insulator.

Solution to Application Example 2.9 Propagation of a Surge through a Distribution Feeder with an Insulator Flashover

- (a) The normalized length of a distance traveled by a wave (e.g., span) NL is a function of the frequency f , the span length ℓ , and the speed of light $c = 2.99792 \cdot 10^8$ m/s [58]: $NL = \frac{\ell}{c} f$ or the length of a span is $\ell = c \frac{NL}{f}$. The time to travel the distance $NL \cdot \lambda$, where λ is the wavelength, is $TD = \frac{NL}{f} = \frac{\ell}{c} = NL \cdot \lambda$.

Length of span #1: $\ell_1=2500$ m, length of span #2: $\ell_2=500$ m, length of span #3: $\ell_3=1000$ m, length of span #4: $\ell_4=1000$ m.

- (b) The PSpice program is listed in Table E2.9.1. One obtains the results of Figs. E2.9.2 and E2.9.3.

TABLE E2.9.1 PSpice program codes for propagation of a surge through a distribution feeder with an insulator flashover (Application Example 2.9).

```

*Lightning performance of a transmission line
*Insulator flashover
*lightning current source
il 1 0 exp(0 15.4k 0 1.0u 2.0111u 5u)
*span#1
t1 1 0 3 0 z0=300 f=60 NL=100u
*insulator #1
d1 13 3 dmod
L1 13 53 20u
vs1 23 53 dc 0
w1 23 33 vs1 wmod1
rvs1 33 43 20
vd1 0 43 3700k
rft1 23 0 20
*span#2
t2 3 0 5 0 z0=300 f=60 NL=200u
*insulator#2
d2 15 5 dmod
L2 15 55 20u
vs2 25 55 dc 0
w2 25 35 vs2 wmod1
rvs2 35 45 20
vd2 0 45 3700k
rft2 25 0 20
*span#3
t3 5 0 7 0 z0=300 f=60 NL=200u
*z
RL3 7 0 300
*span#4
t4 1 0 9 0 z0=300 f=60 NL=500u
*z
RL4 9 0 300
.model dmod d(is=1e-14)
.model wmod1 iswitch (ron=1 roff=1e6 ion=1 ioff=1.01)
.tran 0.1u 20u 0 0.05u
.options chgtol=2u abstol=2u vntol=2u
.options ITL4=200 ITL5=0 LIMPTS=100000 reltol=0.001
.probe
.print tran V(1) V(3) V(5)
.end

```

Note: All comment lines must be preceded with an asterisk () while continuation calculation statements must be preceded with a plus sign (+).*

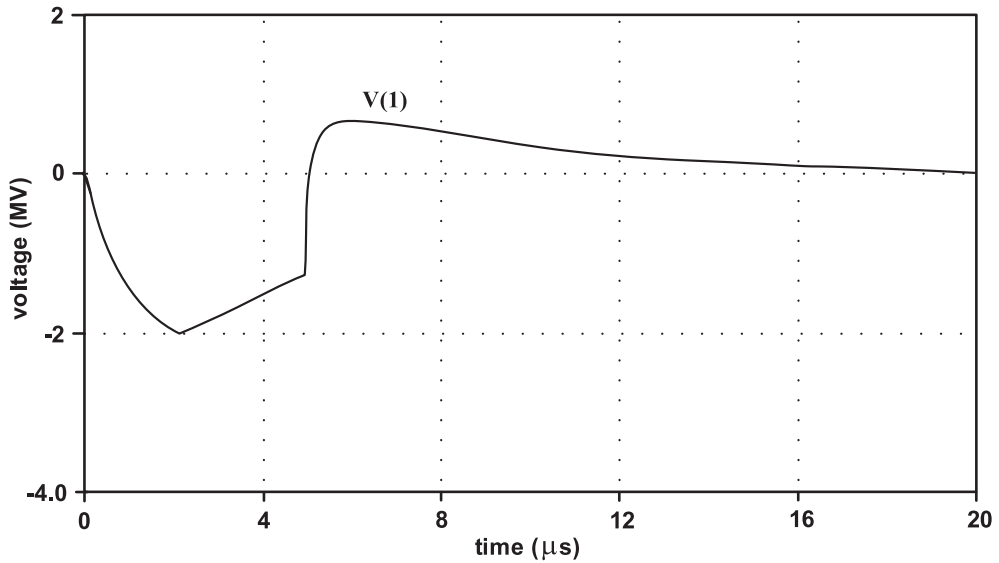


FIG. E2.9.2 Transmission line voltage at the point of strike $v(1)$.

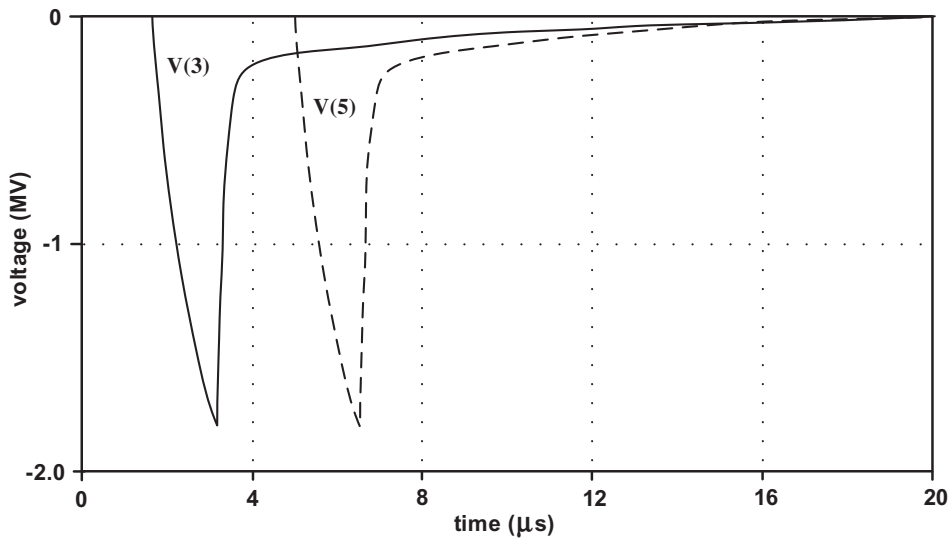


FIG. E2.9.3 Transmission line voltages at the first insulator $v(3)$, and second insulator $v(5)$.

2.7.1.3 Application Example 2.10: Lightning arrester operation

This problem illustrates the performance of a lightning arrester [57]. The same basic parameters as for the lightning strike employed in Application Example 2.9 are used in this example. The only changes are in the value of I_0 (in this problem a value of 7.44 kA is assumed)

and in the voltage of the second lightning arrester ($V_{D2} = 600 \text{ kV}$). This value is small enough that flashover of the insulator string will not occur; however, it is large enough to cause the lightning arrester to operate due to $V_{D2} = 600 \text{ kV}$. The system being simulated is shown in Fig. E2.10.1.

- Calculate and plot the transmission line voltage (in MV) as a function of time (in μs) at the point of strike, at the insulator, and at the lightning arrester.
- Calculate and plot the currents at the point of strike, at the insulator, and at the lightning arrester (in kA) as a function of time (in μs).

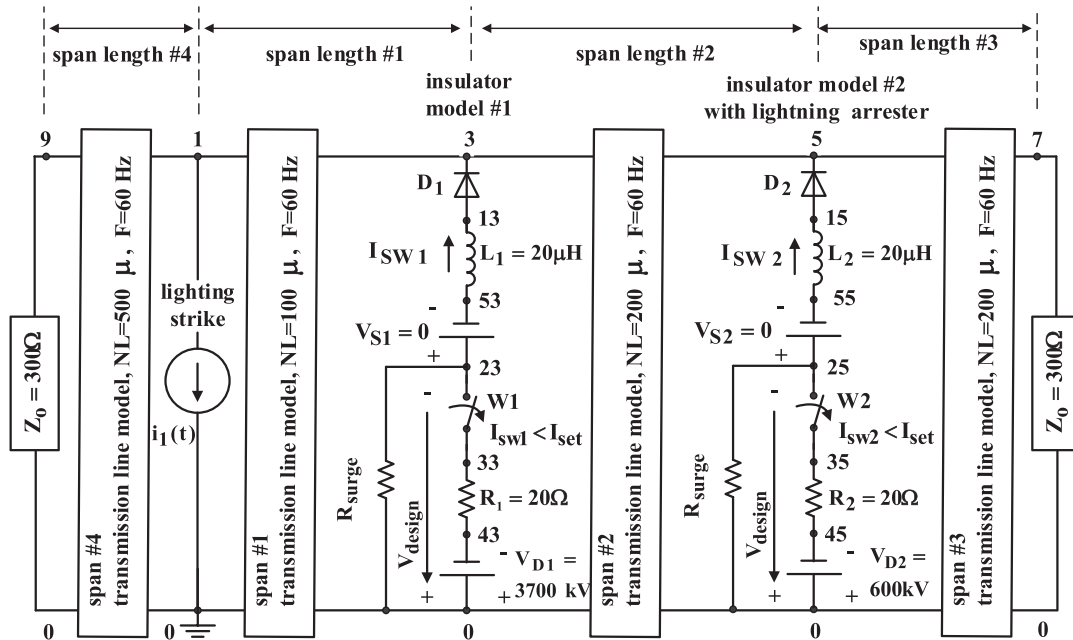


FIG. E2.10.1 PSpice model of a transmission line including insulator and lightning arrester.

Solution to Application Example 2.10 Lightning Arrester Operation.

- Calculations are performed using PSpice, and the plots of the transmission line voltage (in MV) as a function of time (in μs) at the point of strike, at the insulator, and at the lightning arrester are shown in Figs. E2.10.2 and E2.10.3. The PSpice program is listed in Table E2.10.1.
- One obtains the results of Figs. E2.10.4 and E2.10.5 using the PSpice program codes of Table E2.10.1. This is a good example where the various versions of PSpice have different convergence properties similar to the Mathematica software (see Application Example 9.5).

TABLE E2.10.1 PSpice program codes for lightning arrester operation (Application Example 2.10).

```
*Lightning performance of a transmission line
*lightning arrester operation
*lightning current source
i1 1 0 exp(0 7.44k 0 1.0u 2.011u 5u)
*span#1
t1 1 0 3 0 z0=300 f=60 NL=100u
*insulator #1
d1 13 3 dmod
L1 13 53 20u
vs1 23 53 dc 0
w1 23 33 vs1 wmod1
rvs1 33 43 20
vd1 0 43 3700k
rft1 23 0 20
*span#2
t2 3 0 5 0 z0=300 f=60 NL=200u
*insulator#2
d2 15 5 dmod
L2 15 55 20u
vs2 25 55 dc 0
w2 25 35 vs2 wmod1
rvs2 35 45 20
vd2 0 45 600k
rft2 25 0 20
*span#3
t3 5 0 7 0 z0=300 f=60 NL=200u
*z
RL3 7 0 300
*span#4
t4 1 0 9 0 z0=300 f=60 NL=500u
*z
RL4 9 0 300
.model dmod d(is=1)
.model wmod1 iswitch (ron=1 roff=1e6 ion=0.8 ioff=0.3)
.tran 0.1u 30u 0 0.05u
.options chgtol=2u abstol=2u vntol=2u
.options ITL4=25 ITL5=0 LIMPTS=100000 reltol=0.001
.probe
.print tran V(1) V(3) V(5) -i(i1(t)) i(vs1) i(vs2)
.end
```

Note: All comment lines must be preceded with an asterisk (*) while continuation calculation statements must be preceded with a plus sign (+).

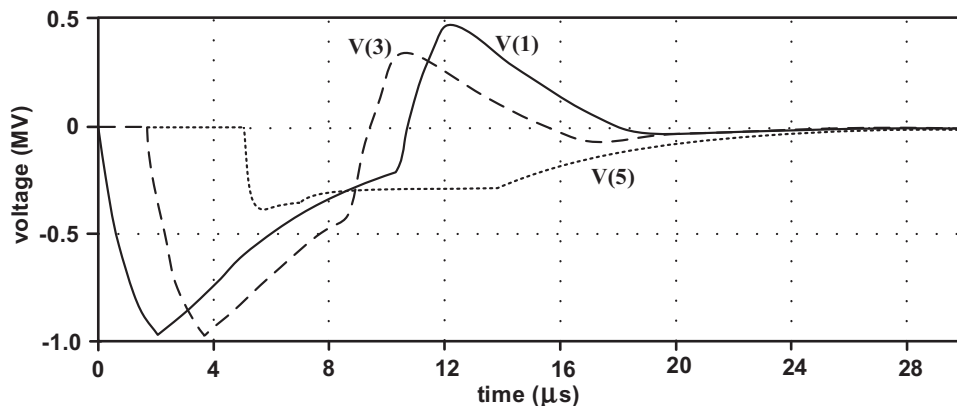


FIG. E2.10.2 Transmission line voltages at the point of strike v(1), at the first insulator v(3), and at the lightning arrester v(5).

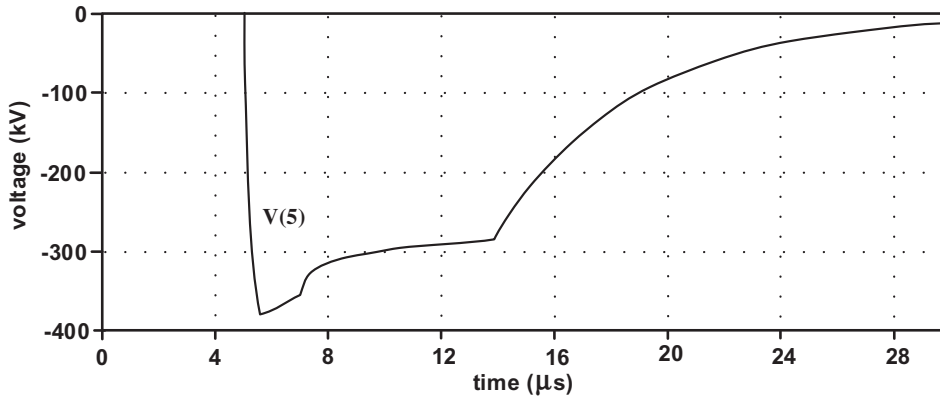


FIG. E2.10.3 Transmission line voltage at the lightning arrester $v(5)$.

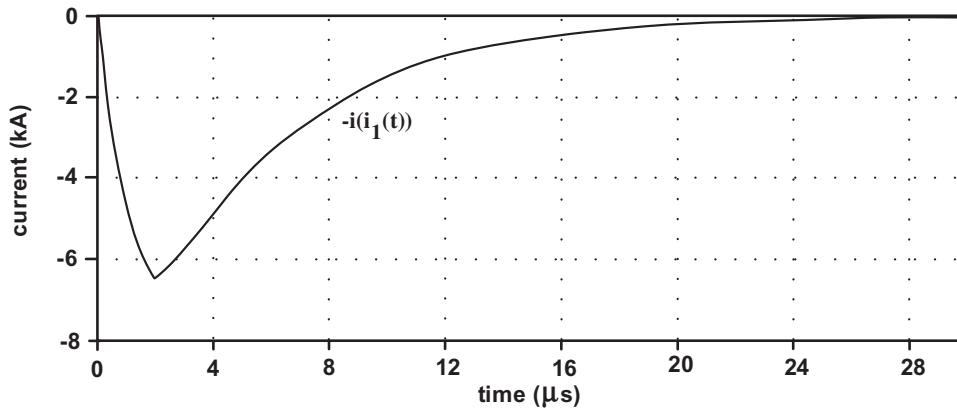


FIG. E2.10.4 Transmission line current at the point of strike $-i(i_1(t))$.

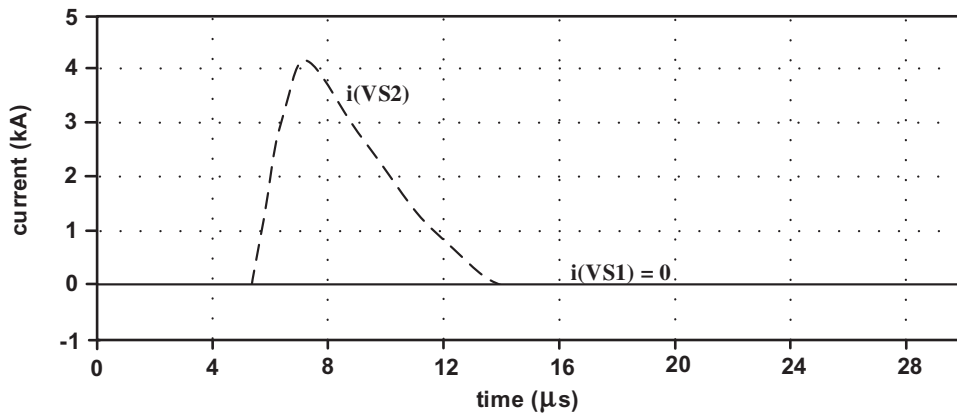


FIG. E2.10.5 Transmission line currents at the insulator $i(VS1)=0$ and the lightning arrester $i(VS2)$.

2.7.2 Equipment grounding

All exposed metal parts of electrical equipment (including generator frames, mounting bases, electrical instruments, and enclosures) should be bonded to a grounding electrode.

Basic Objectives. Equipment grounding, in contrast with system grounding, relates to the manner in which nonelectrical conductive material, which encloses energized conductors or is adjacent thereto, is to be interconnected and grounded. The basic objectives being sought are the following:

- to maintain a low potential difference between nearby metal members, and thereby protect people from dangerous electric-shock-voltage exposure in a certain area,
- to provide current-carrying capability, both in magnitude and duration, adequate to accept the ground-fault current permitted by the overcurrent protection system without creating a fire or explosive hazard to buildings or contents,
- to provide an effective electrical path over which ground-fault currents can flow without creating a fire or explosive hazard, and
- to contribute to superior performance of the electrical system (e.g., suppression of differential and common-mode electrical noise, discussed in Chapter 12).

Investigations have pointed out that it is important to have good electric junctions between sections of conduit or metal raceways that are used as equipment grounding paths, and to assure adequate cross-sectional areas and conductivity of these grounding paths. Where systems are solidly grounded, equipment grounding conductors are bonded to the system grounded conductor and the grounding electrode conductor at the service equipment and at the source of a separately derived system in accordance with the National Electrical Code (NEC) Article 250 [55,56].

2.7.3 Static grounding

The British standard [59] regarding grounding states that the most common source of danger from static electricity is the retention of charge on a conductor, because virtually all the stored energy can be released in a single spark to earth or to another conductor. The accepted method of avoiding the hazard is to connect all conductors to each other and to earth via electrical paths with resistances sufficiently low to permit the relaxation of the charges. This was stated in the original British standard (1980) and is carried out worldwide [60].

Purpose of Static Grounding. The accumulation of static electricity, on materials or equipment being handled or processed by operating personnel, introduces a potentially serious hazard in any area where combustible gases, dusts, or fibers are present. The discharge of the accumulation of static electricity from an object to ground or to another ungrounded object of lower potential is often the cause of a fire or an explosion if it takes place in the presence of readily combustible materials or combustible vapor and air mixtures.

2.7.4 Connection to earth

Resistance to Earth. The most elaborate grounding system that can be designed may prove to be inadequate unless the connection of the system to the earth is adequate and has a low resistance. It follows, therefore, that the earth connection is one of the most important parts of

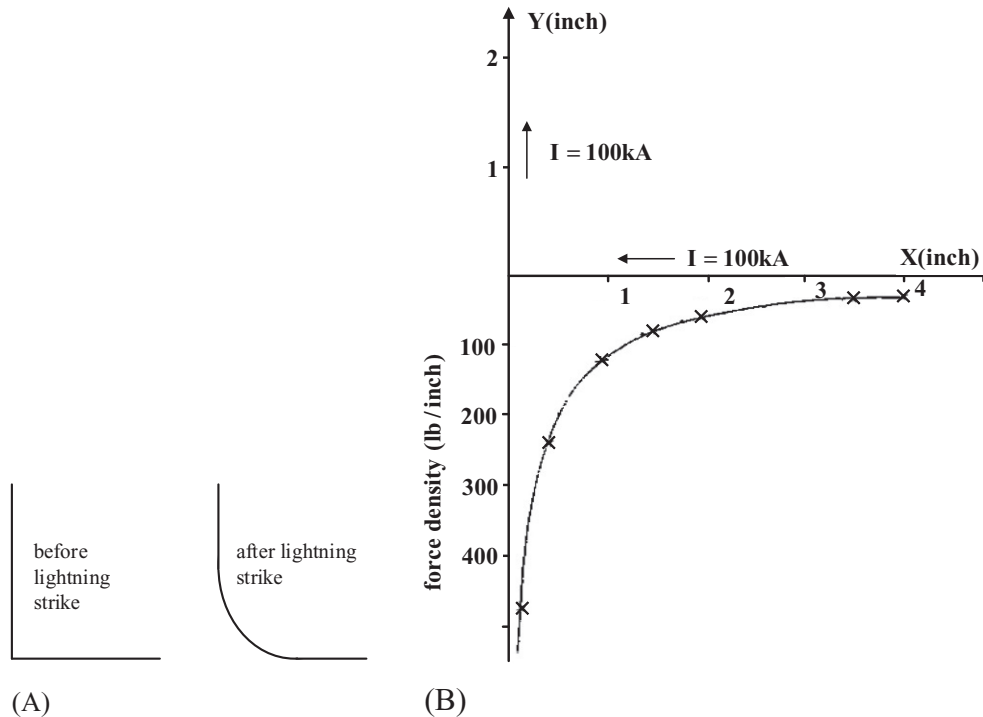


FIG. 2.50 (A) Deformation of grounding conductor due to lightning strike. (B) Force density distribution as it occurs along the x axis for a filamentary 90° bend at a current of $I = 100 \text{ kA}$. The force density distribution along the y axis is not shown but is similar to that along the x axis.

the whole grounding system. It is also the most difficult part to design and to obtain. The perfect connection to earth should have zero resistance, but this is impossible to obtain. Ground resistance of less than 1Ω can be obtained, although this low resistance may not be necessary in many cases. Since the desired resistance varies inversely with the fault current to ground, the larger the fault current, the lower must be the resistance [61,62]. Fig. 2.50A illustrates the deformation of grounding conductor due to large lightning currents.

2.7.5 Calculation of magnetic forces

Considerable work [63,64] has been done concerning the calculation of electromagnetic forces based on closed-form analysis. These methods can be applied to simple geometric configurations only. In many engineering applications, however, three-dimensional geometric arrangements must be analyzed. Based on the theory developed by Lawrenson [65] filamentary conductor configurations can be analyzed. Fig. 2.50A and B illustrate the force density distribution for a filamentary 90° bend at a current of $I = 100 \text{ kA}$. Three-dimensional arrangements are investigated in [66]. Force calculations based on the so-called Maxwell stress are discussed in Chapter 4.

2.8 Measurement of derating of three-phase transformers

Measuring the real and apparent power derating of three-phase transformers is desirable because additional losses due to power quality problems (e.g., harmonics, DC excitation) can be readily limited before any significant damage due to additional temperature rises occurs [8,9]. Measuring transformer losses from the input power minus the output power in real time is inaccurate because the losses are the difference of two large values; this indirect approach results in maximum errors in the losses of more than 60% for high-efficiency ($\eta > 98\%$) transformers [7]. The usually employed indirect method consisting of no-load (iron-core loss) and short-circuit (copper loss) tests [67] cannot be performed online while the transformer is partially or fully loaded. IEEE Recommended Practice C57.110 computes the transformer derating based on R_h for various harmonics h , which is derived from the DC winding resistance and the rated load loss [14]. Kelly et al. [68] describe an improved measuring technique of the equivalent effective resistance R_T as a function of frequency f of single-phase transformers, which allows the direct calculation of transformer loss at harmonic frequencies from $f = 10\text{ Hz}$ up to 100 kHz . This equivalent effective resistance takes into account the total losses of the transformer: the copper losses plus the iron-core losses. Based on the fact that the iron-core losses do not depend on harmonic currents, but depend on harmonic voltages (amplitudes and phase shifts) [69], the total losses determined by [68] are not accurate. In addition, temperature-dependent operating conditions cannot be considered in [68]. Mocci [70] and Arri et al. [71] present an analog measurement circuit to directly measure the total losses for single- and ungrounded three-phase transformers. However, employment of many potential transformers (PTs) and current transformers (CTs) in the three-phase transformer measuring circuits [71] decreases the measurement accuracy.

This section presents a direct method for measuring the derating of three-phase transformers while transformers are operating at any load and any arbitrary conditions. The measuring circuit is based on PTs, CTs, shunts, voltage dividers or Hall sensors [72], A/D converter, and computer (microprocessor). Using a computer-aided testing (CAT) program [7,73], losses, efficiency, harmonics, derating, and wave shapes of all voltages and currents can be monitored within a fraction of a second. The maximum errors in the losses are acceptably small and depend mainly on the accuracy of the sensors used.

2.8.1 Approach

2.8.1.1 Three-phase transformers in Δ - Δ or Y-Y ungrounded connection

For Δ - Δ or ungrounded Y-Y connected three-phase transformers (see Figs. 2.51 and 2.52 for using shunts, voltage dividers, and optocouplers), one obtains with the application of the two-wattmeter method at the input and output terminals by inspection:

$$\begin{aligned} P_{in} - P_{out} &= \frac{1}{T} \int_0^T [(v_{AC} i_A + v_{BC} i_B) - (v'_{ac} i'_a + v'_{bc} i'_b)] dt \\ &= \frac{1}{T} \int_0^T [v_{AC} (i_A - i'_a) + v_{BC} (i_B - i'_b) + (v_{AC} - v'_{ac}) i'_a + (v_{BC} - v'_{bc}) i'_b] dt. \end{aligned} \quad (2.49)$$

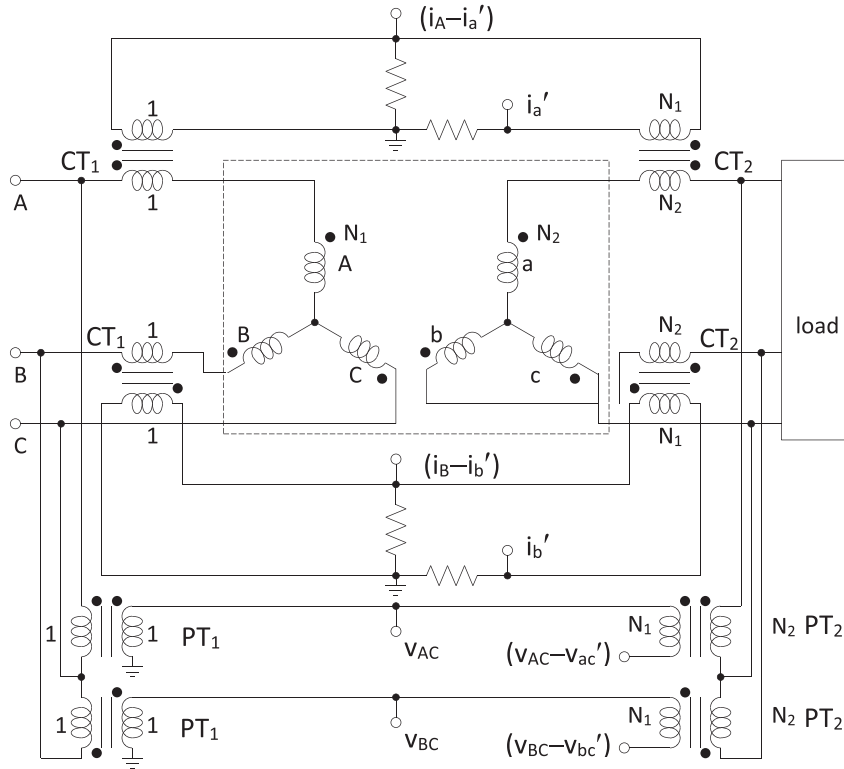


FIG. 2.51 Eight-channel CAT circuit for accurate Δ - Δ or ungrounded Y - Y connected three-phase transformer loss monitoring using PTs and CTs.

The term $p_{fe}(t) = v_{AC}(i_A - i'_b) + v_{BC}(i_B - i'_b)$ represents the instantaneous iron-core loss, and $p_{cu}(t) = (v_{AC} - v'_{ac})i'_a + (v_{BC} - v'_{bc})i'_b$ is the instantaneous copper loss.

2.8.1.2 Three-phase transformers in Δ - Y connection

Fig. 2.53 illustrates the application of the digital data-acquisition method to a Δ - Y connected transformer bank.

For ungrounded Δ - Y connected three-phase transformers, the currents of the Y side must be referred to the line currents of the Δ side, as shown in Fig. 2.53. The loss of the transformer is given by

$$\begin{aligned}
 P_{in} - P_{out} &= \frac{1}{T} \int_0^T [(v_{AC}i_{A\ell} + v_{BC}i_{B\ell}) - (v'_{an}i'_{a\ell} - v'_{cn}i'_{b\ell})] dt \\
 &= \frac{1}{T} \int_0^T [v_{AC}(i_{A\ell} - i'_{a\ell}) + v_{BC}(i_{B\ell} - i'_{b\ell}) + (v_{AC} - v'_{an})i'_{a\ell} + (v_{BC} + v'_{cn})i'_{b\ell}] dt,
 \end{aligned} \tag{2.50}$$

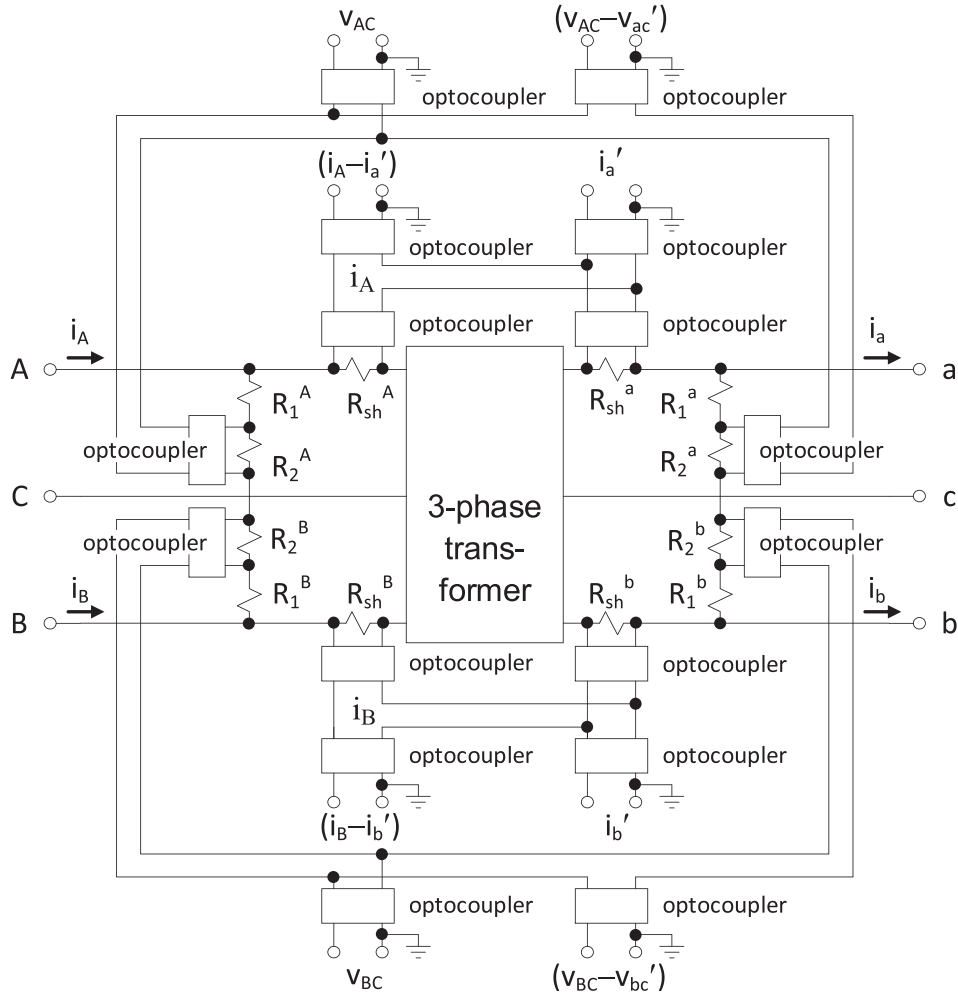


FIG. 2.52 Eight-channel CAT circuit for accurate Δ - Δ or ungrounded Y-Y connected three-phase transformer loss monitoring using shunts, voltage dividers, and optocouplers.

where $i_{A\ell}$ and $i_{B\ell}$ are input line currents of phases A and B, respectively; $i'_{a\ell} = (i'_a - i'_b)$ and $i'_{b\ell} = (i'_b - i'_c)$ are the two-wattmeter secondary currents; v'_{an} and v'_{cn} are the output line-to-neutral voltages of phases a and c, respectively.

Because the neutral of the Y-connected secondary winding (N) is not accessible, the secondary phase voltages are measured and referred to the neutral n of the Y-connected PTs (see Fig. 2.53). This does not affect the accuracy of loss measurement, which can be demonstrated below. The output power is

$$\begin{aligned}
 P_{out} &= \frac{1}{T} \int_0^T (v'_{aN} i'_{a\ell} + v'_{bN} i'_{b\ell} + v'_{cN} i'_{c\ell}) dt \\
 &= \frac{1}{T} \int_0^T [(v'_{an} + v'_{nN}) i'_{a\ell} + (v'_{bn} + v'_{nN}) i'_{b\ell} + (v'_{cn} + v'_{nN}) i'_{c\ell}] dt \\
 &= \frac{1}{T} \int_0^T [v'_{an} i'_{a\ell} + v'_{bn} i'_{b\ell} + v'_{cn} i'_{c\ell} + v'_{nN} (i'_{a\ell} + i'_{b\ell} + i'_{c\ell})] dt,
 \end{aligned} \tag{2.51}$$

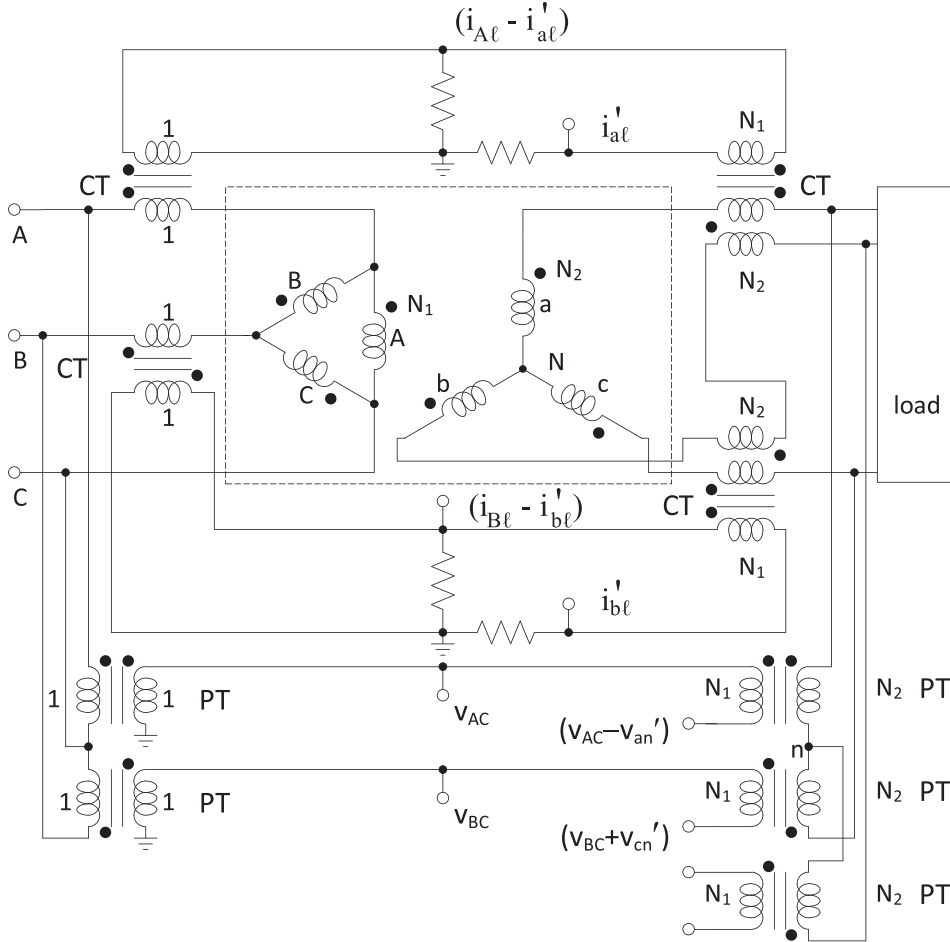


FIG. 2.53 Eight-channel CAT circuit for accurate Δ -Y three-phase transformer loss monitoring using PTs and CTs.

where N denotes the neutral of the Y-connected secondary winding. Because $(i'_a + i'_b + i'_c) = 0$, the measured output power referred to the neutral n of PTs is the same as that referred to the neutral N of the secondary winding.

2.8.1.3 Accuracy requirements for instruments

The efficiencies of high-power electrical apparatus such as single- and three-phase transformers in the kVA and MVA ranges are 97% or higher. For a 15 kVA three-phase transformer with an efficiency of 97.02% at rated operation, the total losses are $P_{\text{Loss}} = 409.3 \text{ W}$, copper and iron-core losses $P_{\text{cu}} = 177.1 \text{ W}$ and $P_{\text{fe}} = 232.2 \text{ W}$ at $V_{L-L} = 234.2 \text{ V}$ and $I_L = 32.4 \text{ A}$, respectively, as listed in Table 2.7A.

The determination of the losses from voltage and current differences as described in Fig. 2.51—where differences are calibrated—greatly reduces the maximum error in the loss

TABLE 2.1 Instruments and their error limits for Figs. 2.51 and 2.52.

Instrument (Fig. 2.51)	Instrument (Fig. 2.52)	Rating	Error limits
PT ₁	VD _A	240 V / 240 V	$\epsilon_{PT1} = 234 \text{ mV}$
PT ₂	VD _a	240 V / 240 V	$\epsilon_{PT2} = 234 \text{ mV}$
CT ₁	SH _A	30 A / 5 A	$\epsilon_{CT1} = 5.4 \text{ mA}$
CT ₂	SH _a	30 A / 5 A	$\epsilon_{CT2} = 5.4 \text{ mA}$
v_{AC}	v_{AC}	300 V	$\epsilon_{V1} = 234 \text{ mV}$
$v_{AC} - v'_{ac}$	$v_{AC} - v'_{ac}$	10 V	$\epsilon_{V2} = 3.56 \text{ mV}$
$i_A - i'_a$	$i_A - i'_a$	5 A	$\epsilon_{A1} = 0.49 \text{ mA}$
i'_a	i'_a	5 A	$\epsilon_{A2} = 5.4 \text{ mA}$

measurement. The series voltage drop and exciting current at rated operation referred to the primary of the 15 kVA, 240 V / 240 V three-phase transformer are $(v_{AC} - v'_{ac}) = 3.56 \text{ V}$, $(i_A - i'_a) = 2.93 \text{ A}$, respectively (Table 2.7A). The instruments and their error limits are listed in Table 2.1. In Table 2.1, v_{AC} , $(v_{AC} - v'_{ac})$, $(i_A - i'_a)$, and i'_a stand for the relevant calibrated voltmeters and ammeters. Because all voltage and current signals are sampled via PTs, CTs (or optocouplers), and current shunts, the error limits for all instruments are equal to the product of the actually measured values and their relative error limits, instead of full-scale errors, as shown in Table 2.1. All error limits are referred to the meter side.

In Fig. 2.52, the voltage divider (R_1^A , R_2^A) combined with an optocoupler (v_{AC}) emulates the function of a PT without hysteresis. The optocoupler can alter the amplitude of a signal and provides isolation without affecting the phase shift of the signal as it is corrupted by PTs. The current shunt (R_{sh}^A) and optocouplers (i_A , i'_a , $i_A - i'_a$) emulate that of a CT without hysteresis and parasitic phase shift. The prime (') indicates that i'_a is about of the same magnitude as i_A ; this is accomplished by adjustment of the amplifier gain(s) of the optocoupler(s). VD and SH in Table 2.1 stand for voltage divider and shunt, respectively.

The line-to-line voltage is measured with the maximum error of (taking into account the maximum errors of PT₁ and voltmeter)

$$\frac{\Delta v_{AC}}{v_{AC}} = \frac{\pm \epsilon_{PT1} \pm \epsilon_{V1}}{v_{AC}} = \frac{\pm 0.234 \pm 0.234}{234} = \pm 0.002. \quad (2.52)$$

The current difference is measured with the maximum error of

$$\frac{\Delta(i_A - i'_a)}{(i_A - i'_a)} = \frac{\pm \epsilon_{CT1} \pm \epsilon_{CT2} \pm \epsilon_{A1}}{(i_A - i'_a)/6} = \frac{(\pm 5.4 \pm 5.4 \pm 0.49) \text{ mA}}{0.49 \text{ A}} = \pm 0.023. \quad (2.53)$$

Therefore, the loss component $v_{AC}(i_A - i'_a)$ in Eq. (2.49) is measured with the maximum error of

$$\frac{\Delta v_{AC}}{v_{AC}} + \frac{\Delta(i_A - i'_a)}{(i_A - i'_a)} = \pm 0.025. \quad (2.54)$$

The series voltage drop is measured with the maximum error of

$$\frac{\Delta(v_{AC} - v'_{ac})}{(v_{AC} - v'_{ac})} = \frac{\pm \epsilon_{PT1} \pm \epsilon_{PT2} \pm \epsilon_{V2}}{(v_{AC} - v'_{ac})} = \frac{(\pm 234 \pm 234 \pm 3.56) \text{ mV}}{3.56 \text{ V}} = \pm 0.1325. \quad (2.55)$$

The output current is measured with the maximum error of

$$\frac{\Delta i'_a}{i'_a} = \frac{\pm \epsilon_{CT2} \pm \epsilon_{A2}}{(i'_a)/6} = \frac{\pm 0.0054 \pm 0.0054}{5.4} = \pm 0.002 \quad (2.56)$$

and the loss component $(v_{AC} - v'_{ac})i'_a$ in Eq. (2.49) is measured with the maximum error of

$$\frac{\Delta i'_a}{i'_a} + \frac{\Delta(v_{AC} - v'_{ac})}{(v_{AC} - v'_{ac})} = \pm 0.1345 \quad (2.57)$$

Thus, the total loss is measured with the maximum error of

$$\frac{\Delta P_{Loss}}{P_{Loss}} = \frac{\Delta P_{cu} + \Delta P_{fe}}{P_{Loss}} = 2 \left[\frac{\pm 0.1345 \cdot 177.1 \pm 0.025 \cdot 232.2}{409.3} \right] = \pm 0.145 = \pm 14.5\%. \quad (2.58)$$

The above error analysis employs PTs and CTs. If these devices generate too-large errors because of hysteresis, voltage dividers (e.g., VD_A) and shunts (e.g., SH_A) combined with optocouplers can be used, as indicated in Fig. 2.52 [74]. A similar error analysis using shunts, dividers, and optocouplers leads to the same maximum error in the directly measured losses, provided the same standard maximum errors (0.1%) of Table 2.1 are assumed. The factor 2 in Eq. (2.58) is employed because loss components in Eq. (2.54) and Eq. (2.57) are only half of those in Eq. (2.49).

2.8.1.4 Comparison of directly measured losses with results of no-load and short-circuit tests

A computer-aided testing electrical apparatus program (CATEA) [73] is used to monitor the iron-core and copper losses of three-phase transformers. The nameplate data of the tested transformers are given in Appendixes 3.1 to 3.4. The results of the on-line measurement of the iron-core and copper losses for a Y-Y connected 9 kVA three-phase transformer (consisting of three 3 kVA single-phase transformers, Appendix 3.1) are given in Table 2.2 for sinusoidal rated line-to-line voltages of 416 V, where the direct (online) measurement data are compared with those of the indirect (separate open-circuit and short-circuit tests) method. The iron-core loss of the indirect method is larger than that of the direct method because the induced voltage of the former is larger than that of the latter. The copper loss of the indirect method is smaller than that of the direct method because the input current of the former (which is nearly the same as the output current) is smaller than that of the latter.

2.8.2 A 4.5 kVA three-phase transformer Bank #1 feeding full-wave rectifier

A 4.5 kVA, 240 V/240 V, Δ - Δ connected three-phase transformer (Fig. 2.51) consisting of three single-phase transformers (bank #1, Appendix 3.2) is used to feed a full-wave diode rectifier (see Appendix 3.5) with an LC filter connected across the resistive load (see Fig. 6-5 of [75]). In Table 2.3, measured data are compared with those of linear load condition. The

TABLE 2.2 Measured iron-core and copper losses of 9 kVA Y-Y connected transformer ($V_{LL} = 416\text{ V}$).

Losses	Direct method [7,73]	Indirect method [67]
Iron-core loss	98.4 W	114.1 W
Copper loss	221.1 W	199.3 W
Total losses	319.5 W	313.4 W

TABLE 2.3 Measured data of 4.5 kVA transformer bank #1.

	Linear load (Fig. 2.54A)	Nonlinear load (Fig. 2.54B)
v_{AC}	237.7 V _{rms}	237.7 V _{rms}
$i_A - i'_a$	1.10 A _{rms}	1.12 A _{rms}
$v_{AC} - v'_{ac}$	8.25 V _{rms}	8.19 V _{rms}
i'_a	11.09 A _{rms}	10.98 A _{rms}
Iron-core loss	100.7 W	103.9 W
Copper loss	161.3 W	157.6 W
Total loss	262.0 W	261.5 W
Output power	4532 W	4142 W
Efficiency	94.55%	94.09%

measured wave shapes of input voltage (v_{AC}), exciting current ($i_A - i'_a$), series voltage drop ($v_{AC} - v'_{ac}$), and output current (i'_a) of phase A are shown in Fig. 2.54A and B for linear and nonlinear load conditions. The total harmonic distortion THD_i , K-factor, and harmonic components of the output current are listed in Table 2.4.

Table 2.3 compares measured data and shows that the transformer is operated at nonlinear load with about the same losses occurring at linear load (261.3 W). With the apparent power derating definition

$$\text{derating}_S = \frac{V_{rms} I_{rms}}{V_{rms}^{rated} I_{rms}^{rated}}. \quad (2.59)$$

the derating at the nonlinear load of Table 2.3 is 99%. The real power delivered to the nonlinear load is 91.4% of that supplied at linear load.

2.8.3 A 4.5 kVA three-phase transformer Bank #2 supplying power to six-step inverter

A 4.5 kVA transformer bank #2 (Appendix 3.3) supplies power to a half-controlled six-step inverter (Appendix 3.6), which in turn powers a three-phase induction motor. The motor is

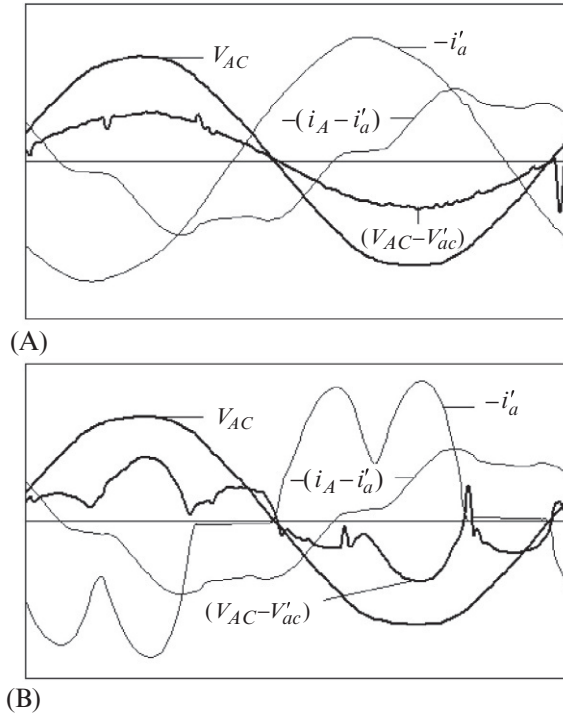


FIG. 2.54 (A) Measured wave shapes of 4.5 kVA three-phase transformer bank #1 feeding linear load (see rms values of Table 2.3). (B) Measured wave shapes of 4.5 kVA three-phase transformer bank #1 feeding full-wave diode rectifier load (see rms values of Tables 2.3 and 2.4).

TABLE 2.4 Output current harmonic components, THD_i , and K-factor (Fig. 2.54B).

i_h (A _{rms})					THD_i (%)	K
$h = 1$	$h = 5$	$h = 7$	$h = 11$	$h = 13$		
10.4	3.55	0.81	0.77	0.24	36.34	4.58

controlled by adjusting the output current and frequency of the inverter. The transformer is operated at rated loss at various motor speeds. Rated loss of bank #2 is determined by a linear (resistive) load at rated operation. The iron-core and copper losses are measured separately and are listed in Table 2.5A. Measured wave shapes of input voltage, exciting current, series voltage drop, and output current of phase A are shown in Fig. 2.55A and B for linear and nonlinear conditions. The output current includes both odd and even harmonics due to the half-controlled input rectifier of the six-step inverter. Dominant harmonics of input voltage and output current are listed for different motor speeds in Table 2.5B. The total harmonic distortion of the input voltage and output current as well as the K-factor are listed in Table 2.5C for the speed conditions of Tables 2.5A and 2.5B.

TABLE 2.5A Measured iron-core and copper losses of 4.5 kVA Δ - Δ connected transformer bank #2 feeding a six-step inverter at various motor speeds (Fig. 2.55B).

Motor speed (%) ^a	Input voltage (V_{rms})	Output current (A_{rms})	Core loss (W)	Copper loss (W)	Total loss (W)	Output power (W)
^b	237.8	11.4	65.7	154.9	220.6	4542
100	237.9	11.1	69.6	150.5	220.2	3216
90	238.1	11.5	62.9	158.8	221.7	2913
80	238.3	11.2	65.6	153.3	218.9	2398
70	238.3	11.3	65.7	154.8	220.4	2081
60	238.2	11.4	64.5	162.2	226.7	1862
50	238.4	10.8	69.2	151.3	220.6	1530
40	238.6	11.1	68.5	151.2	219.7	1308

^a Refers to rated speed of 1145 rpm.

^b Linear resistive load.

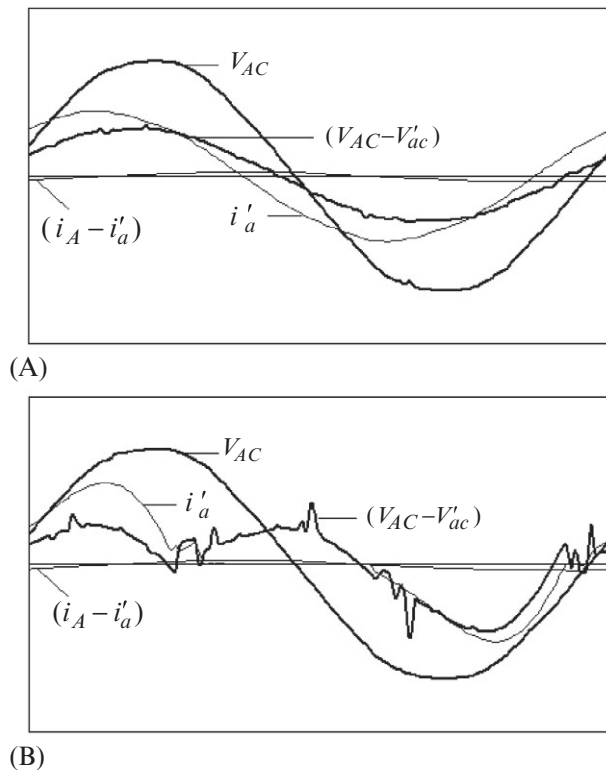


FIG. 2.55 (A) Measured wave shapes of 4.5 kVA three-phase transformer bank #2 feeding linear load (see rms values of Tables 2.5A and 2.5B). (B) Measured wave shapes of 4.5 kVA three-phase transformer bank #2 feeding half-controlled six-step inverter (see rms values of Tables 2.5A and 2.5B).

TABLE 2.5B Input voltage (in rms volts) and output current (in rms amperes) harmonics of phase A (Fig. 2.55A and B).

<i>h</i>		1	2	4	5	7	8	10
Linear load	v_{ACh}	236.9	0.42	0.48	2.96	1.48	0.20	0.40
	i'_{ah}	11.24	0.04	0.02	0.12	0.08	0.00	0.00
100% speed	v_{ACh}	237.2	1.37	0.49	2.88	1.58	0.06	0.30
	i'_{ah}	9.05	5.91	1.08	0.56	0.30	0.32	0.20
90% speed	v_{ACh}	237.4	1.58	0.53	2.57	1.60	0.10	0.20
	i'_{ah}	9.06	6.83	1.87	0.54	0.54	0.16	0.30
80% speed	v_{ACh}	237.5	1.67	0.43	2.91	1.63	0.02	0.30
	i'_{ah}	8.78	6.82	2.47	0.69	0.67	0.43	0.20
70% speed	v_{ACh}	237.6	1.67	0.41	2.78	1.50	0.13	0.20
	i'_{ah}	8.64	6.91	2.82	0.99	0.68	0.60	0.20
60% speed	v_{ACh}	237.3	1.71	0.28	3.14	1.21	0.14	0.20
	i'_{ah}	8.59	6.90	3.20	1.29	0.68	0.74	0.20
50% speed	v_{ACh}	237.8	1.73	0.35	3.18	1.30	0.21	0.00
	i'_{ah}	8.09	6.57	3.52	1.67	0.54	0.79	0.50
40% speed	v_{ACh}	237.7	1.73	0.47	3.08	1.67	0.30	0.30
	i'_{ah}	7.78	6.66	3.70	2.17	0.48	0.82	0.80

TABLE 2.5C Measured *THD*-values and *K*-factor (Fig. 2.55A and B).

Condition	THD_v	THD_i	<i>K</i> -factor
Linear load	1.60%	1.41%	1.01
100% speed	1.62%	67.19%	2.48
90% speed	1.62%	78.76%	2.76
80% speed	1.67%	83.65%	3.25
70% speed	1.58%	87.99%	3.72
60% speed	1.71%	90.86%	4.40
50% speed	1.73%	96.05%	5.53
40% speed	1.88%	104.05%	6.69

TABLE 2.6 Measured data of 15 kVA three-phase transformer with resonant rectifier load (Fig. 2.56A and B).

	Linear load	Resonant rectifier
v_{AC}	215.7 V _{rms}	215.6 V _{rms}
$i_A - i'_a$	2.39 A _{rms}	2.59 A _{rms}
$v_{AC} - v'_{ac}$	4.42 V _{rms}	4.8 V _{rms}
i'_a	27.00 A _{rms}	26.94 A _{rms}
Iron-core loss	42.0 W	49.8 W
Copper loss	191.9 W	192.2 W
Total loss	233.9 W	242 W
Output power	10,015 W	7859 W
Efficiency	97.72%	97.01%

2.8.4 A 15 kVA three-phase transformer supplying power to resonant rectifier

A 15 kVA, 240 V/240 V, Δ - Δ connected three-phase transformer (Appendix 3.4) is used to supply power to a resonant rectifier [12] (Appendix 3.7). The transformer is operated with the resonant rectifier load at the same total loss generated by a three-phase linear (resistive) load. Measured data are compared in Table 2.6. Measured wave shapes of input voltage, exciting current, series voltage drop, and output current of phase A are depicted in Fig. 2.56A and B. The fundamental phase shift between output transformer line-to-line voltage v'_{AC} and phase current i'_a of the resonant rectifier is 67.33° , and the output displacement factor (within transformer phase) is therefore $\cos(67.33^\circ - 30^\circ) = 0.795$. The fundamental phase shift between output line-to-line voltage and phase current for the linear resistive load is 30.95° , and the output displacement factor (within transformer phase) is, therefore, $\cos(30.95^\circ - 30^\circ) \approx 1.0$. Note that the wave shapes of the output currents of Fig. 2.56A and B are about sinusoidal.

If the transformer with the resonant rectifier load is operated (see Table 2.6) at about the same loss as linear load (233.9 W), the output current of the transformer with the resonant rectifier load is 26.94 A, which corresponds to the copper loss of $192.2 \text{ W} = (242 \text{ W} - 49.8 \text{ W})$. Therefore, the transformer apparent power derating of the transformer for the nonlinear load is 99.7%. The real power supplied to the nonlinear load is 78.5% of that of the linear load.

2.8.5 A 15 kVA three-phase transformer bank absorbing power from a PWM inverter

The same transformer of Section 2.8.4 absorbs power from a PWM inverter [12] (Appendix 3.8) and supplies power to a resistive load (case #1) and to a utility system (case #2). The transformer losses are also measured when supplying a linear resistive load fed from sinusoidal power supply (linear load). All measured data are compared in Table 2.7A.

Measured wave shapes of input voltage, exciting current, series voltage drop, and output current of phase A are shown in Fig. 2.57A–C. The total harmonic distortion THD_i , K -factor, and harmonic amplitudes of the transformer output current are listed in Table 2.7B.

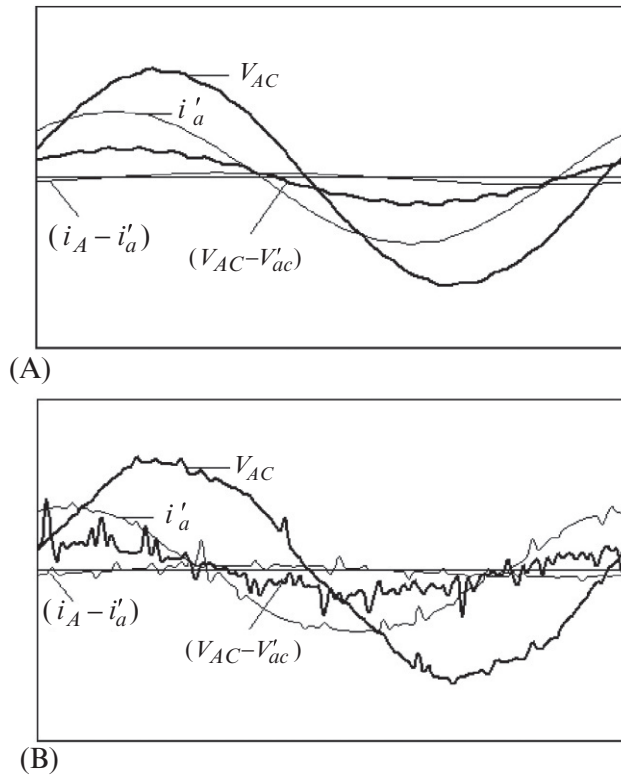


FIG. 2.56 (A) Measured wave shapes of 15 kVA three-phase transformer feeding linear load (see rms values of Table 2.6). (B) Measured wave shapes of 15 kVA three-phase transformer feeding resonant rectifier (see rms values of Table 2.6).

TABLE 2.7A Measured data of 15 kVA three-phase transformer connected to PWM inverter (Fig. 2.57A–C).

	Linear load of transformer	Case #1	Case #2
v_{AC}	234.2 V _{rms}	234.4 V _{rms}	248.2 V _{rms}
$i_A - i'_a$	2.93 A _{rms}	3.30 A _{rms}	3.82 A _{rms}
$v_{AC} - v'_{ac}$	3.56 V _{rms}	3.86 V _{rms}	4.28 V _{rms}
i'_a	32.4 A _{rms}	33.3 A _{rms}	28.2 A _{rms}
Iron-core loss	232.2 W	254.6 W	280.5 W
Copper loss	177.1 W	172.6 W	130.4 W
Total loss	409.3 W	427.2 W	410.9 W
Output power	13,337 W	13,544 W	12,027 W
Efficiency	97.02%	96.94%	96.07%

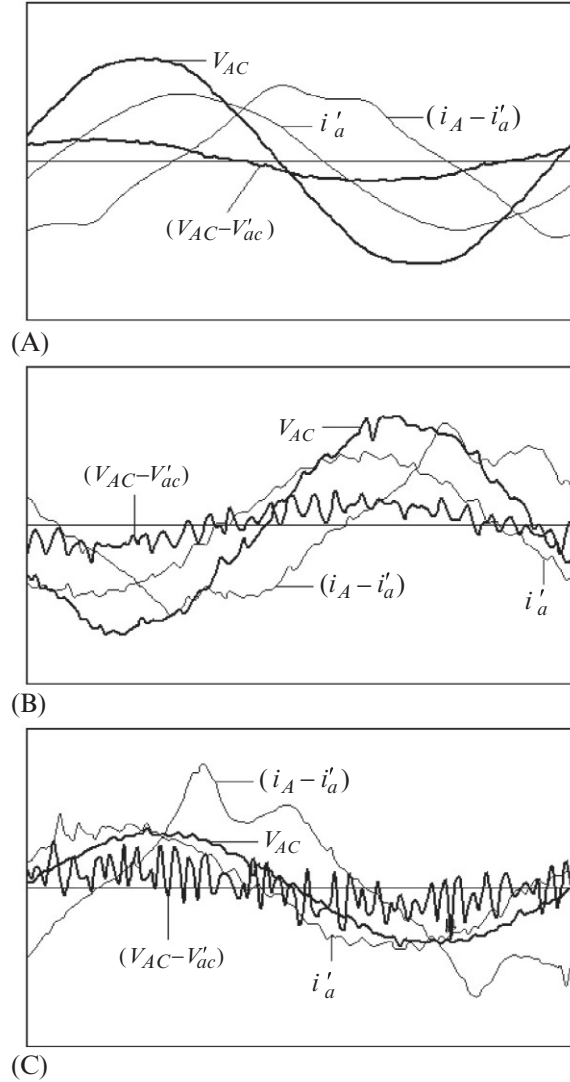


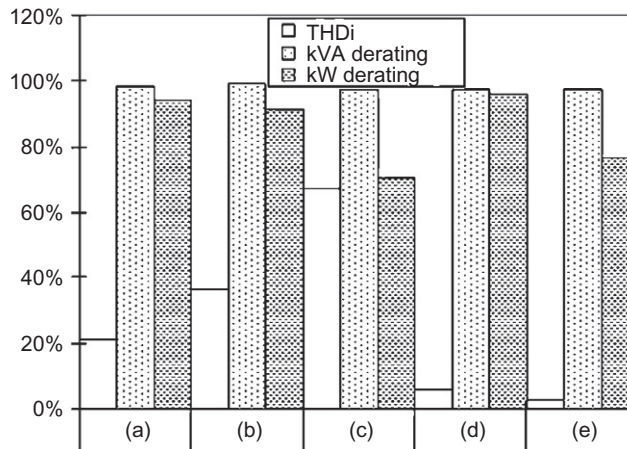
FIG. 2.57 (A) Measured wave shapes of 15 kVA three-phase transformer feeding linear load (see rms values of Table 2.7A). (B) Measured wave shapes of 15 kVA three-phase transformer fed by a PWM inverter (case #1) (see rms values of Tables 2.7A and 2.7B). (C) Measured wave shapes of 15 kVA three-phase transformer fed by a PWM inverter (case #2) (see rms values of Tables 2.7A and 2.7B).

Fig. 2.58 summarizes the total harmonic distortion (THD_i), apparent power (kVA) derating, and real power (kW) derating for uncontrolled (a, b), half-controlled (c), and controlled (d, e) converter loads of transformers. In particular, the graphs of Fig. 2.58 can be identified [75] as follows:

- (a) 25 kVA single-phase pole transformer [7,11,15,75,76] feeding uncontrolled full wave rectifier load,

TABLE 2.7B Output current harmonics, THD_i , and K-factor (Fig. 2.57B and C).

Case	$I_h(A)$					THD_i (%)	K
	$h = 1$	$h = 5$	$h = 7$	$h = 11$	$h = 13$		
#1	32.8	0.53	0.87	0.12	0.19	5.84	1.7
#2	28.2	1.15	1.36	0.19	0.38	10.0	2.7

**FIG. 2.58** Total harmonic distortion of current (THD_i), apparent power (kVA) derating, and real power (kW) derating for uncontrolled (a, b), half-controlled (c), and controlled (d, e) converter loads.

- (b) 4.5 kVA three-phase transformer feeding uncontrolled full wave rectifier load,
(c) 4.5 kVA three-phase transformer feeding half-controlled rectifier load,
(d) 15 kVA three-phase transformer absorbing power from PWM inverter (14kW), and
(e) 15 kVA three-phase transformer feeding resonant rectifier load (8kW).

2.8.6 Discussion of results and conclusions

2.8.6.1 Discussion of results

A new approach for the measurement of the derating of three-phase transformers has been described and applied under nonsinusoidal operation. It extends the measurement approach of single-phase transformers [7,73,12,75,76,77] to three-phase transformers [75,76,78].

The apparent power (kVA) derating (Eq. 2.59) of three-phase transformers is not greatly affected by the THD_i . Even for THD_i values of about 70%, derating is about 99%.

The real power (kW) derating is greatly affected (see Fig. 2.58) by the current wave shape generated by solid-state converters, in particular by the phase shift of the fundamental current component. Therefore, inverters and rectifiers should be designed such that they supply and draw power, respectively, at a displacement (power) factor of about 1.

Three-phase transformers have similar derating properties as single-phase transformers [7,12,73,75,76,77]. The maximum error of the directly measured losses is about 15%, which compares favorably with the maximum error of more than 60% [7,73] for loss measurement based on the difference between input and output powers as applied to high-efficiency ($\eta > 98\%$) transformers.

Transformers of the same type may have significantly different iron-core losses as measured in Table 2.3 (100.7 W) and Table 2.5A (65.7 W). Small transformers (kVA range) have relatively small wire cross sections resulting in small skin-effect losses. Large transformers (MW range) have aluminum secondary windings with relatively large wire cross sections resulting in relatively large skin-effect losses. For this reason substation transformers can be expected to have larger apparent power derating than the ones measured in this section. Unfortunately, transformers in the MW range cannot be operated in a laboratory under real-life conditions. Therefore, it is recommended that utilities sponsor the application of the method of this section and permit on-site measurements.

2.8.6.2 Comparison with existing techniques

The maximum error of the directly measured losses is about 15% (using potential and current transformers), which compares favorably with the maximum error of more than 60% [7,73] (employing shunts and voltage dividers) for loss measurement based on the difference between input and output powers as applied to high-efficiency ($\eta > 98\%$) transformers.

The technique of [68] uses the premeasured transformer effective resistance R_T as a function of frequency f to calculate transformer total losses for various harmonic currents. This method can be classified as an indirect method because the transformer losses are obtained by computation, instead of direct measurement. In addition, the approach of [68] neglects the fact that the iron-core losses are a function of the harmonic phase shift [69]; in other words, the R_T values are not constant for any given harmonic current amplitude but vary as a function of the harmonic voltage amplitude and phase shift as well. Finally, temperature-dependent operating conditions, for example, cannot be considered in [68]. For the above reasons, the method of [68] must be validated by some direct measurements, such as the method presented in this section.

The method of Mocci [70] and Arri et al. [71] has not been practically applied to three-phase transformers. The presented measurement circuit for three-phase transformers [71] uses too many instrument transformers (e.g., nine CTs and nine PTs), and therefore, the measured results will be not as accurate as those based on the measurement circuits of this section, where only four CTs and five PTs are used as shown in Fig. 2.53.

2.9 Summary

This chapter addresses issues related to modeling and operation of transformers under (non)sinusoidal operating conditions. It briefly reviews the operation and modeling of transformers at sinusoidal conditions. It highlights the impact of harmonics and poor power quality on transformer (fundamental and harmonic) losses and discusses several techniques for derating of single- and three-phase transformers including K -factor, F_{HL} -factor, and loss

measurement techniques. Several transformer harmonic models in the time domain and/or frequency domain are introduced. Important power quality problems related to transformers such as ferroresonance and geomagnetically induced currents (GICs) are explored. Different techniques for system and transformer grounding are explained. Many application examples explaining nonsinusoidal flux, voltage and current, harmonic (copper and iron-core) loss measurements, derating, ferroresonance, magnetic field strength, propagation of surge, and operation of lightning arresters are presented for further exploration and understanding of the presented materials.

2.10 Problems

Problem 2.1: Pole Transformer Supplying a Residence

Calculate the currents flowing in all branches as indicated in Fig. P2.1 if the pole transformer is loaded as shown. For the pole transformer you may assume ideal transformer relations. Note that such a single-phase configuration is used in the pole transformer (mounted on a pole behind your house) supplying residences within the United States with electricity. What are the real (P), reactive (Q), and apparent (S) powers supplied to the residence?

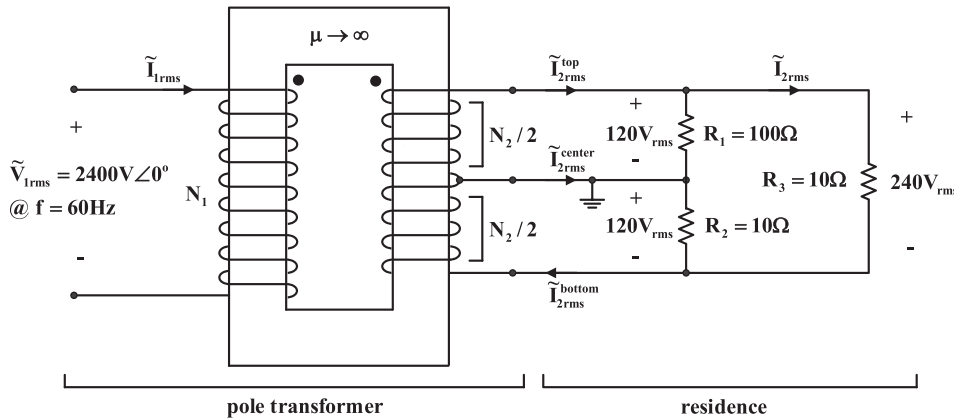


FIG. P2.1 Single-phase transformer loaded by three single-phase loads, where R_1 represents a refrigerator, R_2 a microwave oven, and R_3 an electric stove.

Problem 2.2: Analysis of an Inductor with Three Coupled Windings

- Draw the magnetic equivalent circuit of Fig. P2.2.
- Determine all self- and mutual inductances. Assuming that the winding resistances are known draw the electrical equivalent circuit of Fig. P2.2.

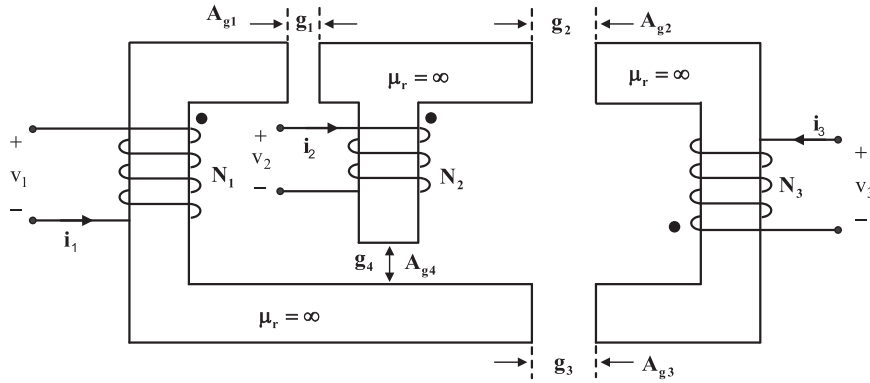


FIG. P2.2 Analysis of an inductor with three coupled windings.

Problem 2.3: Derating of Transformers Based on K-Factor

A substation transformer ($S = 10$ MVA, $V_{L-L} = 5$ kV, $\%P_{EC-R} = 10$) supplies a six-pulse rectifier load with the harmonic current spectrum as given by Table X of the paper by Duffey and Stratford [79].

- Determine the K -factor of the rectifier load.
- Calculate the derating of the transformer for this nonlinear load.

Problem 2.4: Derating of Transformers Based on F_{HL} -Factor

A substation transformer ($S = 10$ MVA, $V_{L-L} = 5$ kV, $\%P_{EC-R} = 10$) supplies a six-pulse rectifier load with the harmonic current spectrum as given by Table X of the paper by Duffey and Stratford [79].

- Determine the F_{HL} -factor of the rectifier load.
- Calculate the derating of the transformer for this nonlinear load.

Problem 2.5: Derating of Transformers Based on K-Factor for a Triangular Current Wave Shape

- Show that the Fourier series representation for the current waveform in Fig. P2.5 is

$$i(t) = \frac{8I_m}{\pi^2} \sum_{h=1,3,5,\dots}^{\infty} \left(\frac{1}{h^2} \right) \sin \left(\frac{h\pi}{2} \right) \sinh \omega_0 t.$$

- Approximate the wave shape of Fig. P2.5 in a discrete manner, that is, sample the wave shape using 36 points per period. Based on the Nyquist criterion, what is the maximum order of harmonic components $h_{\max}$ you can compute in part b? Note that for $h_{\max}$ the approximation error will be a minimum.
- Calculate the K -factor and the derating of the transformer when supplied with a triangular current wave shape, and $\%P_{EC-R} = 20$. The rated current I_R corresponds to the fundamental rms component of the triangular current.
- Approximate the wave shape of Fig. P2.5 in a discrete manner, that is, sample the wave shape using 36 points per period and use PSpice to find its Fourier coefficients.
- Do you know of any different software programs with which a Fourier analysis is possible?

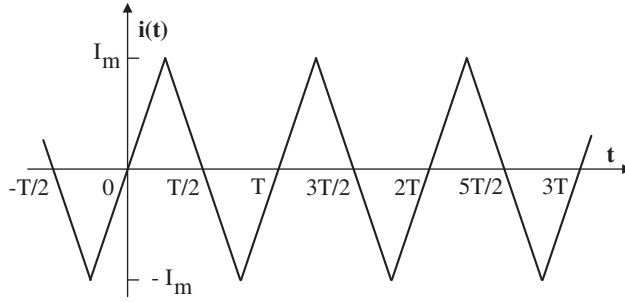


FIG. P2.5 Triangular current wave shape.

Problem 2.6: Derating of Transformers Based on K-Factor for a Trapezoidal Current Wave Shape

(a) Show that the Fourier series representation for the current waveform in Fig. P2.6 is

$$i(t) = \frac{12I_m}{\pi^2} \sum_{h=1,3,5,\dots}^{\infty} \left(\frac{1}{h^2} \right) \sin \left(\frac{h\pi}{3} \right) \sinh \omega_0 t.$$

- (b) Approximate the wave shape of Fig. P2.6 in a discrete manner, that is, sample the wave shape using 36 points per period. Based on the Nyquist criterion, what is the maximum order of harmonic components $h_{\max}$ you can compute in part b? Note that for $h_{\max}$ the approximation error will be a minimum.
- (c) Calculate the K -factor and the derating of the transformer when supplied with a trapezoidal current wave shape, and $\%P_{EC-R} = 20$. The rated current I_R corresponds to the fundamental component of the trapezoidal current.
- (d) Approximate the wave shape of Fig. P2.6 in a discrete manner, that is, sample the wave shape using 36 points per period and use PSpice to find its Fourier coefficients.
- (e) Do you know of any different software programs with which a Fourier analysis is possible?

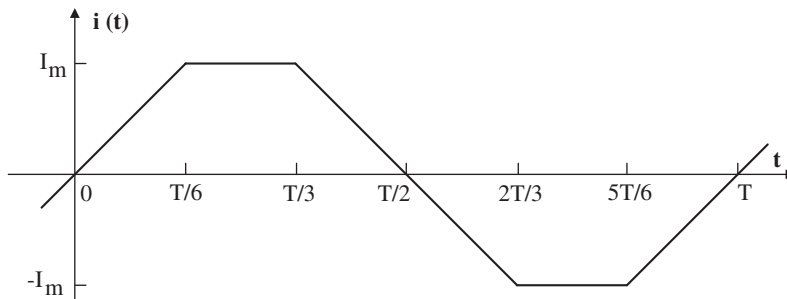


FIG. P2.6 Trapezoidal current wave shape.

Problem 2.7: Force Calculation for a Superconducting Coil for Energy Storage

Design a magnetic storage system which can provide for about 6 min a power of 100 MW, that is, an energy of 10 MWh. A coil of radius $R = 10$ m, height $h = 6$ m, and $N = 3000$ turns is shown in Fig. P2.7. The magnetic field strength H inside such a coil is axially directed, essentially uniform, and equal to $H = Ni/h$. The coil is enclosed by a superconducting box of 2 times its volume. The magnetic field outside the superconducting box can be assumed to be negligible and you may assume a permeability of free space for the calculation of the stored energy.

- Calculate the magnetic field intensity H and the magnetic flux density B of the coil for constant current $i = I_0 = 8000$ A.
- Calculate the energy E_{stored} stored in the magnetic field (either in terms of H or B).
- Determine the radial pressure p_{radial} acting on the coil.
- Devise an electronic circuit that enables the controlled extraction of the energy from this storage device. You may use bidirectional superconducting switches S_1 and S_2 , which are controlled by a magnetic field via the quenching effect. S_1 is ON and S_2 is OFF for charging the superconducting coil. S_1 is OFF and S_2 is ON for the storage time period. S_1 is ON and S_2 is OFF for discharging the superconducting coil.

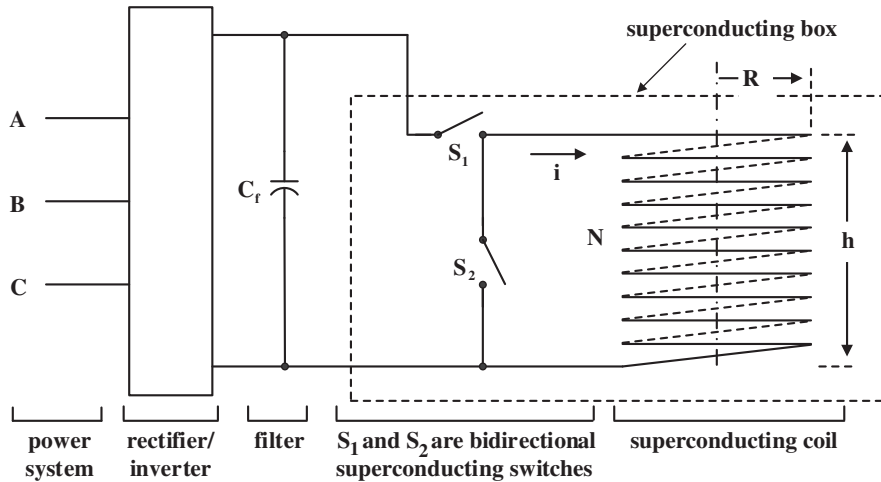


FIG. P2.7 Superconducting coil for energy storage.

Problem 2.8: Measurement of Losses of Delta/Zigzag Transformers

Could the method of Section 2.8 also be applied to a Δ /zigzag three-phase transformer as shown in Fig. P2.8? This configuration is of interest for the design of a reactor [67] where the zero-sequence (e.g., triplen) harmonics are removed or mitigated, and where through phase shifting the 5th and 7th harmonics [80] are canceled.

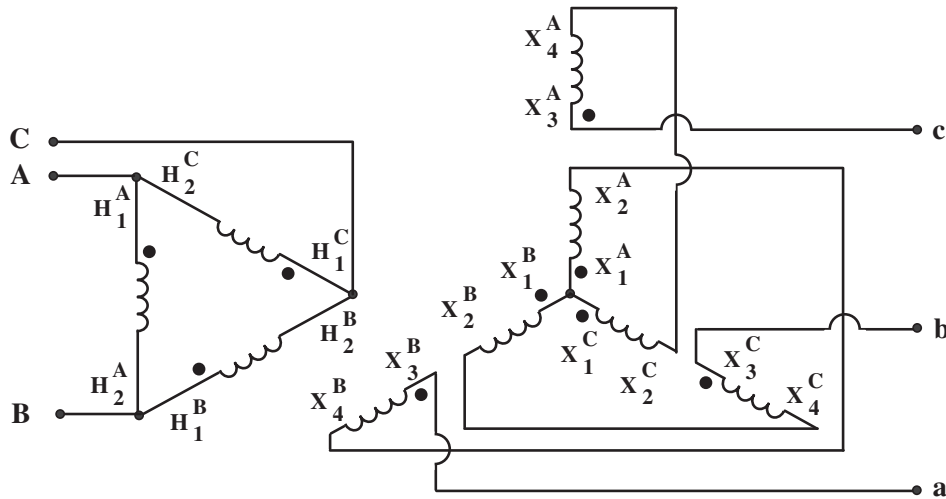


FIG. P2.8 Delta/zigzag three-phase transformer configuration.

Problem 2.9: Error Calculations

For a 25 kVA single-phase transformer of Fig. P2.9 with an efficiency of 98.46% at rated operation, the total losses are $P_{\text{loss}}=390\text{ W}$, where the copper and iron-core losses are $P_{\text{cu}}=325\text{ W}$ and $P_{\text{fe}}=65\text{ W}$, respectively. Find the maximum measurement errors of the copper P_{cu} and iron-core P_{fe} losses as well as that of the total loss P_{loss} whereby the instrument errors are given in Table P2.9.

- (a) Conventional approach: $P_{\text{loss}} = P_{\text{in}} - P_{\text{out}}$
- (b) New approach.
- (c) Back-to back approach.

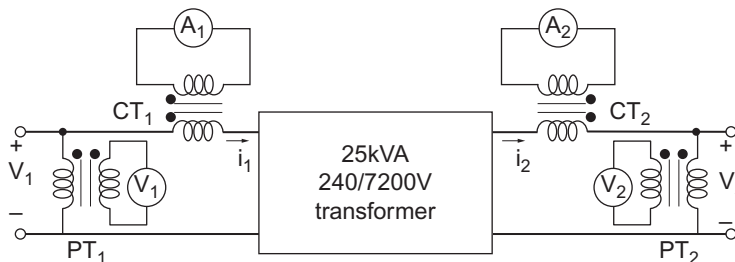


FIG. P2.9 Instrumentation for single-phase transformers employing conventional approach for loss measurement.

TABLE P2.9 Instruments and their error limits of Fig. P2.9.

Instrument	Full scale	Full-scale errors
PT ₁	240 V/240 V	$\epsilon_{PT1} = \pm 0.24 \text{ V}$
PT ₂	7200 V/240 V	$\epsilon_{PT2} = \pm 0.24 \text{ V}$
CT ₁	100 A/5 A	$\epsilon_{CT1} = \pm 5 \text{ mA}$
CT ₂	5 A/5 A	$\epsilon_{CT2} = \pm 5 \text{ mA}$
V ₁	300 V	$\epsilon_{V1} = \pm 0.3 \text{ V}$
V ₂	300 V	$\epsilon_{V2} = \pm 0.3 \text{ V}$
A ₁	5 A	$\epsilon_{A1} = \pm 5 \text{ mA}$
A ₂	5 A	$\epsilon_{A2} = \pm 5 \text{ mA}$

Problem 2.10: Delta/Wye Step-up, Three-Phase Transformer Configuration with Six-Pulse Midpoint Thyristor Rectifier Employing a Coupled Interphase Reactor

- Perform a PSpice analysis for the circuit of Fig. P2.10, where a coupled-midpoint diode rectifier with filter (e.g., capacitor C_f) serves a load (R_{load}). You may assume ideal step-up transformer conditions. For your convenience you may assume $(N_2/N_1) = 1.7$, $R_{\text{syst}} = 0.01 \Omega$, $X_{\text{syst}} = 0.05 \Omega$ @ $f = 60 \text{ Hz}$, $v_{AB}(t) = 600 \text{ V} \cos \omega t$, $v_{BC}(t) = 600 \text{ V} \cos(\omega t - 120^\circ)$, and $v_{CA}(t) = 600 \text{ V} \cos(\omega t - 240^\circ)$. Each of the six thyristors can be modeled by a self-commutated electronic switch and a diode in series, as is illustrated in Fig. E1.1.2 of Application Example 1.1. Furthermore, $C_f = 500 \mu\text{F}$, $L_{\text{left}} = 5 \text{ mH}$, $L_{\text{right}} = 5 \text{ mH}$, and $R_{\text{load}} = 10 \Omega$. You may assume that the two inductors L_{left} and L_{right} are magnetically coupled, that is, $L_{\text{leftright}} = 5 \text{ mH}$. Plot one period of either voltage or current after steady state has been reached, as requested in parts b to e. Print the input program.
- Plot and subject the line-to-line voltages $v_{AB}(t)$, $v_{ab}(t)$, and $v'_{ab}(t)$ to Fourier analysis up to the 12th harmonic order. Why are they different?
- Plot and subject the input line current $i_{AL}(t)$ of the delta primary to a Fourier analysis. Note that the input line currents of the primary delta do not contain the 3rd, 6th, 9th, 12th, ..., that is, harmonic zero-sequence current components.
- Plot and subject the phase voltages $v_{\text{aph_positive}}$, $v_{\text{aph_negative}}$ of the two antiparallel-connected transformer secondaries to Fourier analysis up to the 12th harmonic order.
- Plot and subject the output voltage $v_{\text{load}}(t)$ to Fourier analysis up to the 12th harmonic order.
- How do your results change if the two inductors L_{left} and L_{right} are magnetically not coupled, that is, $L_{\text{leftright}} = 0 \text{ mH}$?

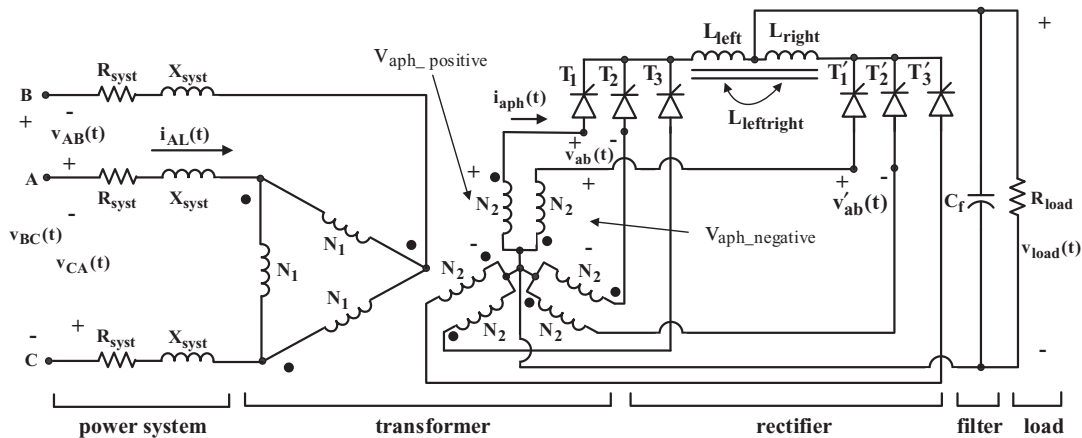


FIG. P2.10 Connection of a delta/ye three-phase transformer configuration with six-pulse midpoint rectifier employing an interphase reactor.

Problem 2.11: Determination of Measurement Uncertainty.

Instead of maximum errors, the U.S. Guide to the Expression of Uncertainty in Measurement [81] recommends the use of uncertainty. As an example the uncertainties and the associated correlation coefficients of the simultaneous measurement of resistance and reactance of an inductor having the inductance L and the resistance R are to be calculated. The five measurement sets of Table P2.11 are available for an inductor consisting of the impedance $Z = R + jX$, where terminal voltage $|\tilde{V}_t|$, current $|\tilde{I}_t|$, and phase-shift angle Φ are measured.

With $R = (|\tilde{V}_t|/|\tilde{I}_t|)\cos\Phi$, $X = (|\tilde{V}_t|/|\tilde{I}_t|)\sin\Phi$, $Z = (|\tilde{V}_t|/|\tilde{I}_t|)$, and $Z^2 = R^2 + X^2$ one obtains two independent output quantities—called measurands.

- Calculate the arithmetic means of $|\tilde{V}_t|$, $|\tilde{I}_t|$, and Φ .
- Determine the experimental standard deviation of mean of $s(\overline{V}_t)$, $s(\overline{I}_t)$, and $s(\overline{\Phi})$.
- Find the correlation coefficients $r(|\tilde{V}_t|, |\tilde{I}_t|)$, $r(|\tilde{V}_t|, \Phi)$ and $r(|\tilde{I}_t|, \Phi)$.
- Find the combined standard uncertainty $\mu \equiv u_c(y_\ell)$ of result of measurement where ℓ is the measurand index.
- Determine the correlation coefficients $r(R/X)$, $r(R/Z)$, and $r(X/Z)$.

TABLE P2.11 Measurement values of the input quantities $|\tilde{V}_t|$, $|\tilde{I}_t|$, and Φ obtained from five sets of simultaneous observations.

Set number k	Input quantities		
	$ \tilde{V}_t (\text{V})$	$ \tilde{I}_t (\text{mA})$	Φ (radians)
1	5.006	19.664	1.0457
2	4.993	19.638	1.0439
3	5.004	19.641	1.0468
4	4.991	19.684	1.0427
5	4.998	19.679	1.0433

Problem 2.12: Delta/Zigzag Three-Phase Transformer Configuration with a Diode Rectifier without (very small) and with Filter and Load

- (a) Perform a PSpice analysis for the circuit of Fig. P2.12, where a three-phase diode rectifier with filter (e.g., capacitor $C_f = 500 \mu\text{F}$) serves a load (R_{load}). You may assume ideal step-down transformer conditions. For your convenience you may assume $(N_1/N_2) = 2$, $R_{\text{sys}} = 0.01 \Omega$, $X_{\text{sys}} = 0.05 \Omega @ f = 60 \text{ Hz}$, $v_{AB}(t) = 600 V \cos \omega t$, $v_{BC}(t) = 600 V \cos(\omega t - 120^\circ)$, and $v_{CA}(t) = 600 V \cos(\omega t - 240^\circ)$, ideal diodes D_1 to D_6 , and $R_{\text{load}} = 10 \Omega$. Plot one period of either voltage or current after steady state has been reached as requested in the following parts.
- (1) Calculate, plot and subject the line-to-line voltages $v_{AB}(t)$ and $v_{ab}(t)$ to Fourier analysis. Why are they different?
 - (2) Calculate, plot and subject the input line current $i_{AL}(t)$ to Fourier analysis. Note that the input line currents do not contain the 3rd, 6th, 9th, 12th, ..., harmonics, that is zero-sequence current harmonics.
 - (3) Calculate, plot and subject the output current $i_{\text{aph}}(t)$ of the zig-zag secondary to Fourier analysis. Note that the phase currents of the primary delta do not contain the 3rd, 6th, 9th, 12th, ..., harmonics, that is, zero-sequence current harmonics.
 - (4) Calculate, plot and subject the output current $i_{R_{\text{load}}}(t)$ to Fourier analysis up to 12th order.
- (b) Perform a PSpice analysis for the circuit of Fig. P2.12, where a three-phase diode rectifier without (very small) filter (e.g., capacitor $C_f = 0.001 \mu\text{F}$) serves the load R_{load} . You may assume ideal step-down transformer conditions. For your convenience you may assume $(N_1/N_2) = 2$, $R_{\text{sys}} = 0.01 \Omega$, $X_{\text{sys}} = 0.05 \Omega @ f = 60 \text{ Hz}$, $v_{AB}(t) = 600 V \cos \omega t$, $v_{BC}(t) = 600 V \cos(\omega t - 120^\circ)$, and $v_{CA}(t) = 600 V \cos(\omega t - 240^\circ)$, ideal diodes D_1 to D_6 , and $R_{\text{load}} = 10 \Omega$. Plot one period of either voltage or current after steady state has been reached as requested in the following parts.
- (5) Calculate, plot and subject the line-to-line voltages $v_{AB}(t)$ and $v_{ab}(t)$ to Fourier analysis. Why are they different?
 - (6) Calculate, plot and subject the input line current $i_{AL}(t)$ to the delta primary to Fourier analysis. Note that the input line currents of the primary delta do not contain the 3rd, 6th, 9th, 12th, ..., harmonics, that is zero-sequence current harmonics.
 - (7) Calculate, plot and subject the output current $i_{\text{aph}}(t)$ of the zig-zag secondary to Fourier analysis. Note that the phase currents of the primary delta do not contain the 3rd, 6th, 9th, 12th, ..., harmonics, that is, zero-sequence current harmonics.
 - (8) Calculate, plot and subject the output current $i_{R_{\text{load}}}(t)$ to Fourier analysis.

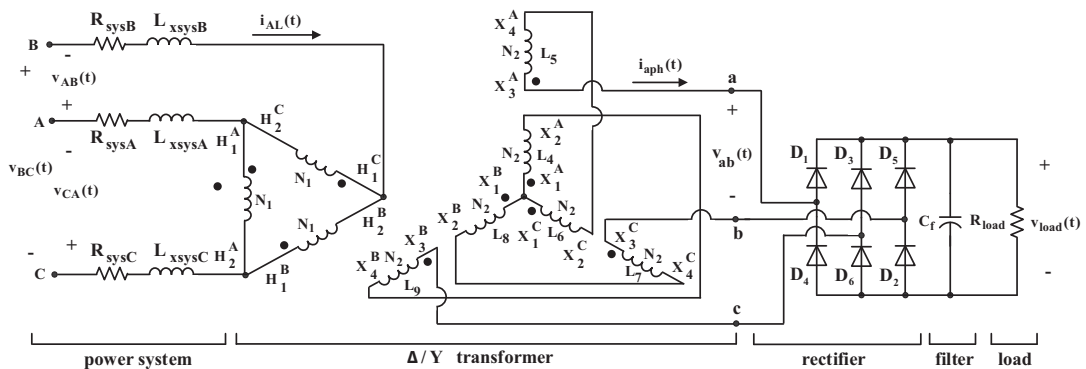


FIG. P2.12 Connection of a delta/zigzag three-phase transformer configuration with a diode rectifier, filter and load.

References

- [1] E.F. Fuchs, M.A.S. Masoum, D. Roesler, Large signal nonlinear model of anisotropic transformers for nonsinusoidal operation, part I: λ - i characteristic, IEEE Trans. Power Delivery 6 (1) (1991) 174–186.
- [2] M.A.S. Masoum, E.F. Fuchs, D. Roesler, Large signal nonlinear model of anisotropic transformers for nonsinusoidal operation, part II: magnetizing and core loss currents, IEEE Trans. Power Delivery 6 (4) (1991) 1509–1516.
- [3] M.A.S. Masoum, E.F. Fuchs, D. Roesler, Impact of nonlinear loads on anisotropic transformers, IEEE Trans. Power Delivery 6 (4) (1991) 1781–1788.
- [4] M.A.S. Masoum, E.F. Fuchs, Transformer magnetizing current in harmonic power flow, IEEE Trans. Power Delivery 9 (1) (1994) 1020.
- [5] E.F. Fuchs, R. Fei, A new computer-aided method for the efficiency measurement of low-loss transformers and inductors under nonsinusoidal operation, IEEE Trans. Power Delivery PWRD-11 (1) (1996) 292–304.
- [6] T. Stensland, E.F. Fuchs, W.M. Grady, M. Doyle, Modeling of magnetizing and core-loss currents in single-phase transformers with voltage harmonics for use in power flow, IEEE Trans. Power Delivery 12 (2) (1997) 768–774.
- [7] E.F. Fuchs, D. Yildirim, T. Batan, Innovative procedure for measurement of losses of transformers supplying nonsinusoidal loads, IET Gener. Transm. Distrib. 146 (6) (1999). IEE Proceedings online no. 19990684.
- [8] E.F. Fuchs, D. Lin, J. Martynaitis, Measurement of three-phase transformer derating and reactive power demand under nonlinear loading conditions, IEEE Trans. Power Delivery 21 (2) (2006) 665–672.
- [9] D. Lin, E.F. Fuchs, Real-time monitoring of iron-core and copper losses of three-phase transformers under (non) sinusoidal operation, IEEE Trans. Power Delivery 21 (3) (2006) 1333–1341.
- [10] V.M. Montsinger, Loading transformer by temperature, Trans. AIEE 49 (1930) 776.
- [11] E.F. Fuchs, D. Yildirim, W.M. Grady, Measurement of eddy-current loss coefficient P_{EC-R} , derating of single-phase transformers, and comparison with K-factor approach, IEEE Trans. Power Delivery 15 (1) (2000) 148–154. Vol. 15, No. 4, October 2000, pp. 1331–1333 (discussions/closure) and p. 1357.
- [12] D. Yildirim, Commissioning of 30 kVA Variable Speed Direct-Drive Wind Power Plant, Ph.D. Thesis, University of Colorado, Boulder, 1999.
- [13] Standard UL 1561, Dry-Type General Purpose and Power Transformers, 1994. April 22.
- [14] Standard ANSI/IEEE C57.110, Recommended Practice for Establishing Transformer Capability When Supplying Nonsinusoidal Load Currents, 1998. February 1998.
- [15] D. Yildirim, E.F. Fuchs, Measured transformer derating and comparison with harmonic loss factor F_{HL} approach, IEEE Trans. Power Delivery 15 (1) (2000) 186–191. Vol. 15, No. 4, October 2000, pp. 1328–1329 (discussions/closure) and p. 1357.
- [16] E.F. Fuchs, M.A.S. Masoum, M. Ladjevardi, Effects on distribution feeders from electronic loads based on future peak-load growth, part I: measurements, in: Proceedings of the IASTED International Conference on Power and Energy Systems (EuroPES 2005), Paper #468-019, Benalmadena, Spain, June 15–17, 2005.
- [17] H. Dommel, Digital computer solution of electromagnetic transients in single and multiphase network, IEEE Trans. Power Appar. Syst. PAS-88 (1974) 487–493.
- [18] H. Dommel, Transformer models in the simulation of electromagnetic transient, in: 5th Power Systems Computation Conference, Paper 3.1/4, pp. 1–16, Cambridge, England, September 1–5, 1975.
- [19] C. Hatziantoniou, G.D. Galanos, J. Milias-Argitis, An incremental transformer model for the study of harmonic overvoltages in weak AC/DC systems, IEEE Trans. Power Delivery 3 (3) (1988) 1111–1121.
- [20] D. Dolinar, J. Pihler, B. Grcar, Dynamic model of a three-phase power transformer, IEEE Trans. Power Delivery 8 (4) (1993) 1811–1819.
- [21] F. Leon, A. Semlyen, Complete transformer model for electromagnetic transients, IEEE Trans. Power Delivery 9 (1) (1994) 231–239.
- [22] S. Garcia, A. Medina, C. Perez, A state space single-phase transformer model incorporating nonlinear phenomena of magnetic saturation and hysteresis for transient and periodic steady-state analysis, in: IEEE Power Engineering Society Summer Meeting, 2000, 16–20 July, vol. 4, 2000, pp. 2417–2421.
- [23] S. Garcia, A. Medina, A state space three-phase multilimb transformer model in time domain: fast periodic steady-state analysis, in: IEEE Power Engineering Society Summer Meeting, 2001, 15–19 July, vol. 3, 2001, pp. 1859–1864.
- [24] H.W. Dommel, Reference Manual for Electromagnetic Transient Program (EMTP), Bonneville Power Administration, Portland, Oregon, 1986.

- [25] J.H. Chan, A. Vladimirescu, X.C. Gao, P. Liebmann, J. Valainis, Nonlinear transformer model for circuit simulation, *IEEE Trans. Comput. Aided Des.* 10 (4) (1991) 476–482.
- [26] S.R. Huang, S.C. Chung, B.N. Chen, Y.H. Chen, A harmonic model for the nonlinearities of single-phase transformer with describing functions, *IEEE Trans. Power Delivery* 18 (3) (2003) 815–820.
- [27] A. Medina, J. Arrillaga, Generalized modeling of power transformers in the harmonic domain, *IEEE Trans. Power Delivery* 7 (3) (1992) 1458–1465.
- [28] A. Semlyen, E. Acha, J. Arrillaga, Newton-type algorithms for the harmonic phasor analysis of nonlinear power circuits in periodical steady state with special reference to magnetic nonlinearities, *IEEE Trans. Power Delivery* 3 (3) (1988) 1090–1099.
- [29] J. Pedra, F. Corcoles, L. Sainz, R. Lopez, Harmonic nonlinear transformer modeling, *IEEE Trans. Power Delivery* 19 (2) (2004) 884–890.
- [30] W. Dugui, X. Zheng, Harmonic model of transformer, in: *Proceedings of 1998 International Conference on Power System Technology, POWERCON '98*, 18–21 August, vol. 2, 1998, pp. 1045–1049.
- [31] J.D. Greene, C.A. Gross, Nonlinear modeling of transformers, *IEEE Trans. Ind. Appl.* 24 (3) (1988) 434–438.
- [32] S. Yamada, K. Bessho, J. Lu, Harmonic balance finite element method applied to nonlinear AC magnetic analysis, *IEEE Trans. Magn.* 25 (4) (1989) 2971–2973.
- [33] P. Silvester, M.V.K. Chari, Finite element solution of saturable magnetic field problem, *IEEE Trans. Power Appar. Syst.* PAS-89 (7) (1970) 1642–1651.
- [34] M. Enokizono, N. Soda, Finite element analysis of transformer model core with measured reluctivity tensor, *IEEE Trans. Magn.* 33 (5, Part 2) (1997) 4110–4112.
- [35] M.A.S. Masoum, Generation and Propagation of Harmonics in Power System Feeders Containing Nonlinear Transformers and Loads, Ph.D. Thesis, University of Colorado at Boulder, 1991.
- [36] T.D. Stensland, Effects of Voltage Harmonics on Single-Phase Transformers and Induction Machines Including Pre-Processing for Power Flow, MS Thesis, University of Colorado at Boulder, Colorado, 1995.
- [37] J.R. Marti, A.C. Soudack, Ferroresonance in power systems: fundamental solutions, in: *IEEE Proceedings C, Generation, Transmission and Distribution* [see also *IEE Proceedings-Generation, Transmission and Distribution*], vol. 138, 1991, pp. 321–329. Issue 4.
- [38] Y. Li, W. Shi, R. Qin, J. Yang, A systematical method for suppressing ferroresonance at neutral-grounded substations, *IEEE Trans. Power Delivery* 18 (3) (2003) 1009–1014.
- [39] E.F. Fuchs, Y. You, D.J. Roesler, Modeling, simulation and their validation of three-phase transformers with three legs under DC bias, *IEEE Trans. Power Delivery* 14 (2) (1999) 443–449.
- [40] E.F. Fuchs, Y. You, Measurement of (λ - i) characteristics of asymmetric three-phase transformers and their applications, *IEEE Trans. Power Delivery* 17 (4) (2002) 983–990.
- [41] F.S. Young, R.L. Schmid, P.I. Fergestad, A laboratory investigation of ferroresonance in cable-connected transformers, *IEEE Trans. Power Appar. Syst.* PAS-87 (5) (1968) 1240–1249.
- [42] H.J. Koch, Gas-insulated transmission line (GIL), in: 0-7803-7989-6/03/\$17.00 Copyright 2003 IEEE, Panel Discussion: Gas-Insulated Transmission Lines, *Proceedings of the IEEE PES General Meeting*, Toronto, 2003, pp. 2480–2483.
- [43] H. Koch, Gas-insulated line (GIL) of the 2nd generation, in: *AC-DC Power Transmission*, 28–30 November 2001, Conference Publication No. 485 Copyright IEEE, 2001, pp. 39–43.
- [44] H. Koch, T. Hillers, Second-generation gas-insulated line, *Power Eng. J.* (2002) 111–116.
- [45] C. Kieny, G. Le Roy, A. Sbai, Ferroresonance study using Galerkin method with pseudo-arclength continuation method, *IEEE Trans. Power Delivery* 6 (4) (1991) 1841–1847.
- [46] M. Lahtinen, J. Elovaaara, GIC occurrences and GIC test for 400 kV system transformer, *IEEE Trans. Power Delivery* 17 (2) (2002) 555–561.
- [47] D.H. Boteler, R.M. Shier, T. Watanabe, R.E. Horita, Effects of geomagnetically induced currents in the BC Hydro 500 kV system, *IEEE Trans. Power Delivery* 4 (1) (1989) 818–823.
- [48] J.G. Kappenman, S.R. Norr, G.A. Sweezy, D.L. Carlson, V.D. Albertson, J.E. Harder, B.L. Damsky, GIC mitigation: a neutral blocking/bypass device to prevent the flow of GIC in power systems, *IEEE Trans. Power Delivery* 6 (3) (1991) 1271–1281.
- [49] W.B. Gish, W.E. Feero, G.D. Rockefeller, Rotor heating effects from geomagnetic induced currents, *IEEE Trans. Power Delivery* 9 (2) (1994) 712–719.
- [50] B. Bozoki, S.R. Chano, L.L. Dvorak, W.E. Feero, G. Fenner, E.A. Guro, C.F. Henville, J.W. Ingleson, S. Mazumdar, P.G. McLaren, K.K. Mustaphi, F.M. Phillips, R.V. Rebbapragada, G.D. Rockefeller, The effects of GIC on protective relaying, *IEEE Trans. Power Delivery* 11 (2) (1996) 725–739.

- [51] D.L. Dickmader, S.Y. Lee, G.L. Desilets, M. Granger, AC/DC harmonic interactions in the presence of GIC for the Quebec–New England Phase II HVDC transmission, *IEEE Trans. Power Delivery* 9 (1) (1994) 68–78.
- [52] R.A. Walling, A.N. Khan, Characteristics of transformer exciting-current during geomagnetic disturbances, *IEEE Trans. Power Delivery* 6 (4) (1991) 1707–1714.
- [53] Y. You, E.F. Fuchs, D. Lin, P.R. Barnes, Reactive power demand of transformers with DC bias, *IEEE Ind. Appl. Soc. Mag.* 2 (4) (1996) 45–52.
- [54] A.A. Fardoun, E.F. Fuchs, M.A.S. Masoum, Experimental analysis of a DC bucking motor blocking geomagnetically induced currents, *IEEE Trans. Power Delivery* TPWRD-9 (1994) 88–99.
- [55] R. Castenschiold, G.S. Johnson, Proper grounding of on-site electrical power systems, *IEEE Ind. Appl. Soc. Mag.* 7 (2) (2001) 54–62.
- [56] American National Standard ANSI/IEEE C114.1, IEEE Recommended Practice for Grounding of Industrial and Commercial Power Systems, The IEEE Green Book, 1973.
- [57] L.A. Kraft, Modelling lightning performance of transmission systems using PSpice, *IEEE Trans. Power Syst.* 6 (2) (1991) 543–549.
- [58] C.T.A. Johnk, *Engineering Electromagnetic Fields and Waves*, John Wiley & Sons, New York, NY, 1975.
- [59] British Standard Code, British Standard Code of Practice for Control of Undesirable Static Electricity, pt. 1, sec. 4, 1991.
- [60] G. Luttgens, Static electricity hazards in the use of flexible intermediate bulk containers (FIBCs), *IEEE Trans. Ind. Appl.* 33 (2) (1997) 444–446.
- [61] P. Pillai, B.G. Bailey, J. Bowen, G. Dalke, B.G. Douglas, J. Fischer, J.R. Jones, D.J. Love, C.J. Mozina, N. Nichols, C. Normand, L. Padden, A. Pierce, L.J. Powell, D.D. Shipp, N.T. Stringer, R.H. Young, Grounding and ground fault protection of multiple generator installations on medium-voltage industrial and commercial systems-part 2: grounding methods working group report, *IEEE Trans. Ind. Appl.* 40 (1) (2004) 17–23.
- [62] A.P.S. Meliopoulos, J. Dunlap, Investigation of grounding related problems in AC/DC converter stations, *IEEE Trans. Power Delivery* 3 (2) (1988) 558–567.
- [63] Frick, C.W.; n.d. “Electromagnetic forces on conductors with bends, short lengths and cross-overs,” *Gen. Electr. Rev.*, vol. 36, no. 5.
- [64] H.B. Dwight, Calculation of magnetic forces in disconnecting switches, *AIEE Trans.* 39 (1920) 1337.
- [65] P.J. Lawrenson, Forces on turbogenerator end windings, *Proc. IEEE* 112 (6) (1965).
- [66] A.S. Al-Barrak, Electromagnetic Forces and Bending Moments on Conductors of Arbitrary Polygonal Filament and Finite Shape, Independent Study, University of Colorado, Boulder, 1979.
- [67] Central Station Engineers of the Westinghouse Electric Corporation, *Electrical Transmission and Distribution Reference Book*, Westinghouse Electric Corporation, 1964.
- [68] A.W. Kelly, S.W. Edwards, J.P. Rhode, M. Baran, Transformer derating for harmonic currents: a wideband measurement approach for energized transformers, in: *Proceedings of the Industry Applications Conference, 1995, Thirtieth IAS Annual Meeting, IAS 1995*. Vol. 1, 8–12 October, 1995, pp. 840–847.
- [69] M.A.S. Masoum, E.F. Fuchs, Derating of anisotropic transformers under nonsinusoidal operating conditions, *Electr. Power Energy Syst.* 25 (2003) 1–12.
- [70] F. Mocci, Un nuovo methodo per la determinazione della potenza assorbita dai doppi bipoli, *L'Energia Elettr.* 7–8 (1989) 323–329.
- [71] E. Arri, N. Locci, F. Mocci, Measurement of transformer power losses and efficiency in real working conditions, *IEEE Trans. Instrum. Meas.* 40 (2) (1991) 384–387.
- [72] LEM n.d. *Current and Voltage Transducer Catalog*, third ed., LEM U.S.A., Inc., Milwaukee, WI.
- [73] D. Lin, E.F. Fuchs, M. Doyle, Computer-aided testing of electrical apparatus supplying nonlinear loads, *IEEE Trans. Power Syst.* 12 (1) (1997) 11–21.
- [74] S. Rieman, An optically Isolated Data Acquisition System, Independent Study, University of Colorado, Boulder, 1997.
- [75] W.M. Grady, E.F. Fuchs, D. Lin, T.D. Stensland, The Potential Effects of Single-Phase Power Electronic-Based Loads on Power System Distortion and Losses, Vol. 2: Single-Phase Transformers and Induction Motors, Technical Report published by the Electric Power Research Institute (EPRI), Palo Alto, CA, 2003, 1000655, 2003.
- [76] E.F. Fuchs, Transformers, liquid filled, in: J.G. Webster (Ed.), *Encyclopedia of Electrical and Electronics Engineering*, John Wiley & Sons, New York, NY, 2000. paper No. 934C, 40 pages.
- [77] T. Batan, Discussion of measurement of eddy-current loss coefficient P_{EC-R} , derating of single phase transformers, and comparison with K-factor approach, *IEEE Trans. Power Delivery* 15 (4) (2000) 1331–1333.

- [78] E.F. Fuchs, Y. You, D. Lin, Development and Validation of GIC Transformer Models, Final Report for Contract 19X-SK205V, Prepared for Martin Marietta Energy Systems, Inc., Oak Ridge, TN, June 1996.
- [79] C.K. Duffey, R.P. Stratford, Update of harmonic standard IEEE-519: IEEE recommended practices and requirements for harmonic control in electric power systems, *IEEE Trans. Ind. Appl.* 25 (6) (1989) 1025–1034.
- [80] MIRUS International, Neutral Current Eliminator (NCE) and Combined Neutral Current Eliminator (CNCE), MIRUS International Inc, 2021. Private communication <http://mirusinternational.com>.
- [81] American National Standard for Calibration, American National Standard for Calibration—U.S. Guide to the Expression of Uncertainty in Measurement, NCSL International, 2002. ANCI/NCSL Z540-2-1997 (r2002).

Additional Bibliography

- [82] B. Hesterman, Time-domain K -factor computation methods, in: *Proc. PCIM 1994, 29th Int. Power Conference, 1994*, pp. 406–417.
- [83] E.F. Fuchs, D.J. Roesler, K.P. Kovacs, Aging of electrical appliances due to harmonics of the power system's voltage, *IEEE Trans. Power Delivery* TPWRD-1 (3) (1986) 301–307.
- [84] E.F. Fuchs, D.J. Roesler, F.S. Alashhab, Sensitivity of electrical appliances to harmonics and fractional harmonics of the power system's voltage, part I, *IEEE Trans. Power Delivery* TPWRD-2 (2) (1987) 437–444.
- [85] E.F. Fuchs, D.J. Roesler, K.P. Kovacs, Sensitivity of electrical appliances to harmonics and fractional harmonics of the power system's voltage, part II, *IEEE Trans. Power Delivery* TPWRD-2 (2) (1987) 445–453.
- [86] M.A.S. Masoum, E.F. Fuchs, Transformer magnetizing current and core losses in harmonic power flow, *IEEE Trans. Power Delivery* PWRD-9 (1994) 10–20.
- [87] A.H. Chowdhury, W.M. Grady, E.F. Fuchs, An investigation of harmonic characteristics of transformer excitation current under nonsinusoidal supply voltage, *IEEE Trans. Power Delivery* 14 (2) (1999) 450–458.
- [88] E.F. Fuchs, D.J. Roesler, M.A.S. Masoum, Are harmonic recommendations according to IEEE and IEC too restrictive? *IEEE Trans. Power Delivery* 19 (4) (2004) 11775–11786.
- [89] E.F. Fuchs, M.A.S. Masoum, Suppression of Harmonic Distortion in Power Systems Due to Geomagnetically Induced Currents (GICs) Through Enforcing Gic Balance in all Phases of a System, Invention Disclosure, University of Colorado, Boulder, 1992.
- [90] E.F. Fuchs, A New Method for Measuring the Efficiency of Low-Loss Electrical Apparatus, Invention Disclosure, University of Colorado, Boulder, 1994.
- [91] Y. You, E.F. Fuchs, Means for Suppressing Harmonic Distortion due to DC Bias Currents/Fluxes in Electric Circuits Containing any Three-Phase Transformers Through Balancing and Canceling of DC MMF/Flux of Every Phase, Invention Disclosure, University of Colorado, Boulder, 1994.
- [92] Y. You, E.F. Fuchs, High AC Impedance, Low DC Resistance Inductor, Invention Disclosure, University of Colorado, Boulder, 1994.
- [93] E.F. Fuchs, D. Lin, On-Line Monitoring of Iron-Core and Copper Losses of Single and Three-Phase Transformers Under (Non)Sinusoidal Operation at any Load, Invention Disclosure, University of Colorado, Boulder, 1995.
- [94] E.F. Fuchs, D. Yildirim, On-Line Technique for Separate Measurement of Copper Loss, Iron-Core Loss and (Rated) Eddy-Current Loss PEC-R Of Transformers Supplying Nonlinear Loads, Invention Disclosure, University of Colorado, Boulder, 1998.

Modeling and analysis of induction machines

Before the development of the polyphase AC concept by Nikola Tesla [1] in 1888, there was a competition between AC and DC systems. The invention of the induction machine in the late 1880s completed the AC system of electrical power generation, transmission, and utilization. The Niagara Falls hydroplant was the first large-scale application of Tesla's polyphase AC system. The theory of single- and three-phase induction machines was developed during the first half of the 20th century by Steinmetz [2], Richter [3], Kron [4], Veinott [5], Schuisky [6], Bödefeld [7], Alger [8], Fitzgerald et al. [9], Lyon [10], and Say [11]—just to name a few of the hundreds of engineers and scientists who have published in this area of expertise. Newer textbooks and contributions are by Match [12], Chapman [13], and Fuchs et al. [14,15]. In these works, mostly balanced steady-state and transient performances of induction machines are analyzed. Most power quality problems as listed below are neglected in these early publications because power quality was not an urgent issue during the last century.

Today, most industrial motors of 1 horsepower or larger are three-phase induction machines. This is due to their inherent advantages as compared with synchronous motors. Although synchronous motors have certain advantages—such as constant speed, generation of reactive power (leading power factor based on consumer notation of current) with an overexcited field, and low cost for low-speed motors—they have the constraints of requiring a DC exciter, inflexible speed control, and high cost for high-speed motors. The polyphase induction motors, however, have certain inherent advantages, including these:

- Induction motors require no exciter (no electrical connection to the rotor windings except for some doubly excited machines);
- They are rugged and relatively inexpensive;
- They require very little maintenance;
- They have nearly constant speed (slip of only a few percent from no load to full load);
- They are suitable for explosive environments;
- Starting of motors is relatively easy; and
- Operation of three-phase machines within a single-phase system is possible.

The main disadvantages of induction motors are:

- complicated speed control,
- high starting current if no starters are relied on, and
- low and lagging (based on consumer notation of current) power factor at light loads.

For most applications, however, the advantages far outweigh the disadvantages. In today's power systems with a large number of nonlinear components and loads, three-phase induction machines are usually subjected to nonsinusoidal operating conditions. Conventional steady-state and transient analyses do not consider the impact of voltage and/or current harmonics on three-phase induction machines. Poor power quality has many detrimental effects on induction machines due to their abnormal operation, including:

- excessive voltage and current harmonics,
- excessive saturation of iron cores,
- static and dynamic rotor eccentricities,
- one-sided magnetic pull due to DC currents,
- shaft fluxes and associated bearing currents,
- mechanical vibrations,
- dynamic instability when connected to weak systems,
- premature aging of insulation material caused by cyclic operating modes as experienced by induction machines for example in hydro- and wind-power plants,
- increasing core (hysteresis and eddy-current) losses and possible machine failure due to unacceptably high losses causing excessive hot spots,
- increasing (fundamental and harmonic) copper losses,
- reduction of overall efficiency,
- generation of inter- and subharmonic torques,
- production of (harmonic) resonance and ferroresonance conditions,
- failure of insulation due to high voltage stress caused by rapid changes in supply current and lightning surges,
- unbalanced operation due to an imbalance of power systems voltage caused by harmonics, and
- excessive neutral current for grounded machines.

These detrimental effects call for the understanding of the impact of harmonics on induction machines and how to protect them against poor power quality conditions. A harmonic model of induction motors is essential for loss calculations, harmonic torque calculations, derating analysis, filter design, and harmonic power flow studies.

This chapter investigates the behavior of induction machines as a function of the harmonics of the power system's voltages/currents, and introduces induction machine harmonic concepts suitable for loss calculations and harmonic power flow analysis. After a brief review of the conventional (sinusoidal) model of the induction machine, time and space harmonics as well as forward- and backward-rotating magnetic fields at harmonic frequencies are analyzed. Some measurement results of voltage, current, and flux density waveforms and their harmonic components are provided. Various types of torques generated in induction machines, including fundamental and harmonic torques as well as inter- and subharmonic torques, are introduced and analyzed. The interaction of space and time harmonics is

addressed. A section is dedicated to voltage-stress winding failures of AC machines fed by voltage-source and current-source PWM inverters. Some available harmonic models of induction machines are briefly introduced. The remainder of the chapter includes discussions regarding rotor eccentricity, classification of three-phase induction machines, and their operation within a single-phase system. This chapter contains a number of application examples to further clarify the relatively complicated issues.

3.1 Complete sinusoidal equivalent circuit of a three-phase induction machine

Simulation of induction machines under sinusoidal operating conditions is a well-researched subject and many transient and steady-state models are available. The stator and rotor cores of an induction machine are made of ferromagnetic materials with nonlinear (B-H) or $(\lambda - i)$ characteristics. As mentioned in [Chapter 2](#), magnetic coils exhibit three types of nonlinearities that complicate their analysis: saturation effects, hysteresis loops, and eddy currents. These phenomena result in nonsinusoidal flux, voltage and current waveforms in the stator and rotor windings, and additional copper (due to current harmonics) and core (due to hysteresis loops and eddy currents) losses at fundamental and harmonic frequencies. Under nonsinusoidal operating conditions, the stator magnetic field will generate harmonic rotating fields that will produce forward- and backward-rotating magnetomotive forces (mmfs); in addition to the time harmonics (produced by the nonsinusoidal stator voltages), space harmonics must be included in the analyses. Another detrimental effect of harmonic voltages at the input terminals of induction machines is the generation of unwanted harmonic torques that are superimposed with the useful fundamental torque, producing vibrations causing a deterioration of the insulation material and rotor copper/aluminum bars. Linear approaches for induction machine modeling neglect these nonlinearities (by assuming linear $(\lambda - i)$ characteristics and sinusoidal current and voltage waveforms) and use constant values for the magnetizing inductance and the core-loss resistance.

Sinusoidal modeling of induction machines is not the main subject of this chapter. However, [Fig. 3.1](#) illustrates a relatively simple and accurate frequency-based linear model that will be extended to a harmonic model in [Sections 3.4–3.9](#). In this figure, subscript 1 denotes the fundamental frequency ($h=1$); ω_1 and s_1 are the fundamental angular frequency (or velocity) and the fundamental slip of the rotor, respectively. R_{fe} is the core-loss resistance, L_m is the (linear) magnetizing inductance, R_s , R_r' , $L_{s\ell}$, and $L_{r\ell}'$ are the stator and the rotor (reflected to the stator) resistances and leakage inductances, respectively [\[3–15\]](#). The value of R_{fe} is

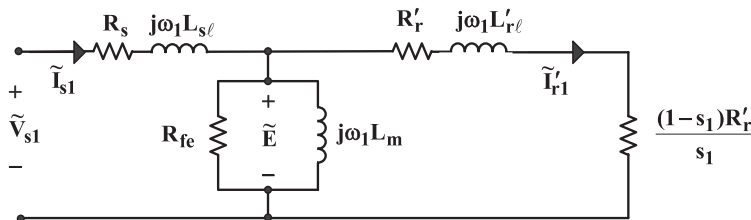


FIG. 3.1 Complete linear per-phase equivalent circuit of a three-phase induction machine for sinusoidal analysis.

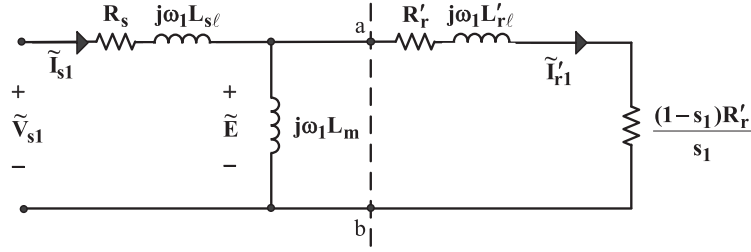


FIG. 3.2 Simplified per-phase equivalent circuit of a three-phase induction machine for sinusoidal analysis.

usually very large and can be neglected. Thus, the simplified sinusoidal equivalent circuit of an induction machine results, as shown in Fig. 3.2.

Replacing the network to the left of line a–b by Thévenin's theorem (TH) one gets

$$\left| \tilde{V}_{s1TH} \right| = \frac{\left| \tilde{V}_{s1} \right| (\omega_1 L_m) \angle \theta_{TH}}{\sqrt{R_s^2 + (\omega_1 L_{s\ell} + \omega_1 L_m)^2}} \quad (3.1a)$$

$$\theta_{TH} = \frac{\pi}{2} - \tan^{-1} \left(\frac{\omega_1 L_{s\ell} + \omega_1 L_m}{R_s} \right) \quad (3.1b)$$

$$R_{sTH} = \frac{(\omega_1 L_m)^2 R_s}{R_s^2 + (\omega_1 L_{s\ell} + \omega_1 L_m)^2} \quad (3.1c)$$

$$X_{s\ell TH} = \omega_1 L_{s\ell TH} = \frac{(\omega_1 L_m) R_s^2 + (\omega_1 L_{s\ell})(\omega_1 L_m)(\omega_1 L_{s\ell} + \omega_1 L_m)}{R_s^2 + (\omega_1 L_{s\ell} + \omega_1 L_m)^2} \quad (3.1d)$$

Using Eq. (3.1), the Thévenin adjusted equivalent circuit is shown in Fig. 3.3.

The fundamental ($h=1$) slip is

$$s_1 = \frac{n_{s1} - n_m}{n_{s1}} = \frac{\omega_{s1} - \omega_m}{\omega_{s1}} \quad (3.2)$$

where n_{s1} is the synchronous speed of the stator field, n_m is the (mechanical) speed of the rotor, and ω_{s1} , ω_m are the corresponding angular velocities (or frequencies), respectively. Note that subscript 1 denotes fundamental frequency.

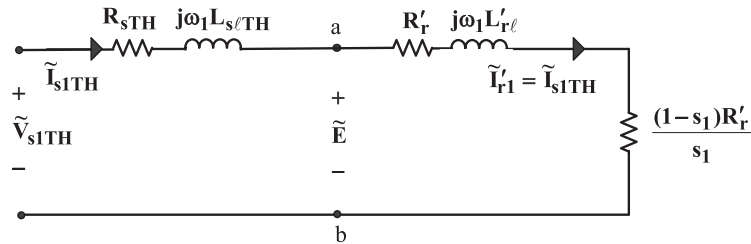


FIG. 3.3 Thévenin (TH) adjusted equivalent circuit of a three-phase induction machine for fundamental frequency ($h=1$).

For a p-pole machine,

$$\omega_{s1} = \left(\frac{\omega_1}{p/2} \right) = 2\pi n_{s1}^{rps} = 2\pi \frac{n_{s1}^{\text{rpm}}}{60} \quad (3.3a)$$

$$\omega_m = 2\pi n_m^{rps} = 2\pi \frac{n_m^{\text{rpm}}}{60} \quad (3.3b)$$

where $\omega_1 = 2\pi f_1 = 377 \text{ rad/s}$ is the fundamental angular velocity (frequency).

For

$p = 2$	$n_{s1}^{\text{rpm}} = 3600 \text{ rpm at}$
	$\omega_1 = 2\pi f_1 = 377 \text{ rad/s,}$
$p = 4$	$n_{s1}^{\text{rpm}} = 1800 \text{ rpm,}$
$p = 6$	$n_{s1}^{\text{rpm}} = 1200 \text{ rpm,}$
$p = 8$	$n_{s1}^{\text{rpm}} = 900 \text{ rpm.}$

The torque of a three-phase ($q_1 = 3$) induction machine is (if $V_{s1TH} = |\tilde{V}_{s1TH}|$)

$$T = \frac{1}{\omega_{s1}} \frac{q_1 V_{s1TH}^2 \frac{R'_r}{s_1}}{\left(R_{sTH} + \frac{R'_r}{s_1} \right)^2 + (\omega_1 L_{s\ell TH} + \omega_1 L'_{r\ell})^2} \quad (3.4a)$$

or

$$T = \frac{1}{\omega_{s1}} \frac{q_1 V_{s1TH}^2 \cdot R'_r}{s_1 \left[\frac{(R_{sTH} s_1 + R'_r)^2}{s_1^2} + (\omega_1 L_{s\ell TH} + \omega_1 L'_{r\ell})^2 \right]} \quad (3.4b)$$

or

$$T = \frac{1}{\omega_{s1}} \frac{q_1 V_{s1TH}^2 \cdot R'_r}{\frac{(R_{sTH} s_1 + R'_r)^2}{s_1} + (\omega_1 L_{s\ell TH} + \omega_1 L'_{r\ell})^2 s_1} \quad (3.4c)$$

or

$$T = \frac{1}{\omega_{s1}} \frac{q_1 V_{s1TH}^2 \cdot R'_r \cdot s_1}{(R_{sTH} s_1 + R'_r)^2 + (\omega_1 L_{s\ell TH} + \omega_1 L'_{r\ell})^2 s_1^2} \quad (3.4d)$$

For small values of s_1 we have

$$T \approx \frac{1}{\omega_{s1}} \frac{q_1 V_{s1TH}^2 \cdot s_1}{R'_r}, \quad s_1 = \text{small} \quad (3.5)$$

This relation is called the small-slip approximation for the torque.

Based on Eq. (3.4), the fundamental torque-speed characteristic of a three-phase induction machine is shown in Fig. 3.4.

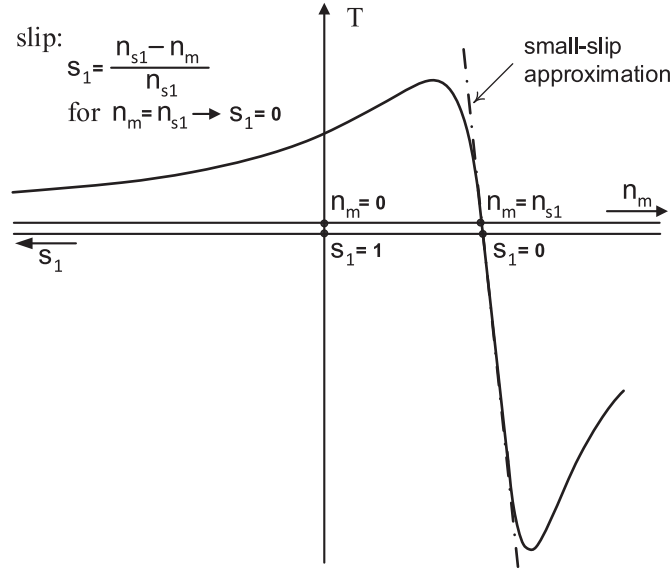


FIG. 3.4 Fundamental electrical torque-speed characteristics for a three-phase induction machine.

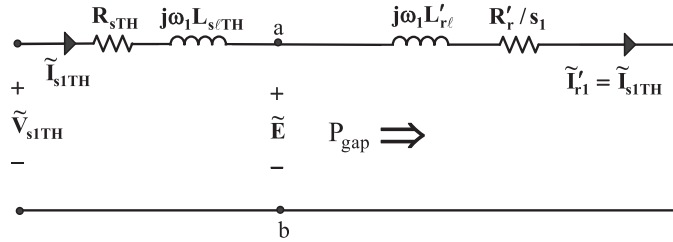


FIG. 3.5 Definition of air-gap power.

Mechanical output power (neglecting iron-core losses, friction, and windage losses) is

$$T_{out} = T \cdot \omega_m \quad (3.6)$$

The air-gap power is (Fig. 3.5)

$$P_{gap} = q_1 \left| \tilde{I}_{r1} \right|^2 \frac{R'_r}{s_1} \quad (3.7)$$

where $\left| \tilde{I}_{r1} \right| = \left| \tilde{I}_{s1TH} \right|$.

The loss distribution within the machine is given in Fig. 3.6. Note that

$$P_{out} = P_{gap} - P_{r\ loss} = P_{in} - P_{s\ loss} - P_{r\ loss}$$

and

$$P_{out} = T \cdot \omega_m$$

The complete fundamental torque-speed relation detailing braking, motoring, and generation regions is shown in Fig. 3.7, where n_{s1} denotes the synchronous (mechanical) speed of the fundamental rotating magnetic field.

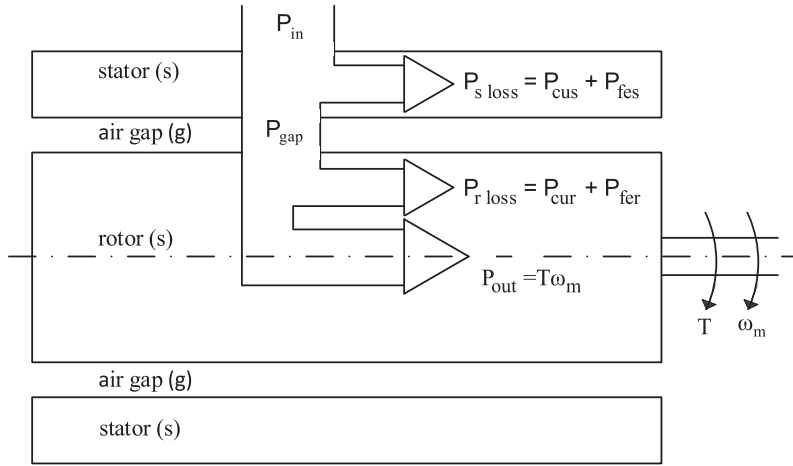


FIG. 3.6 Loss breakdown within induction machine neglecting frictional and windage losses.

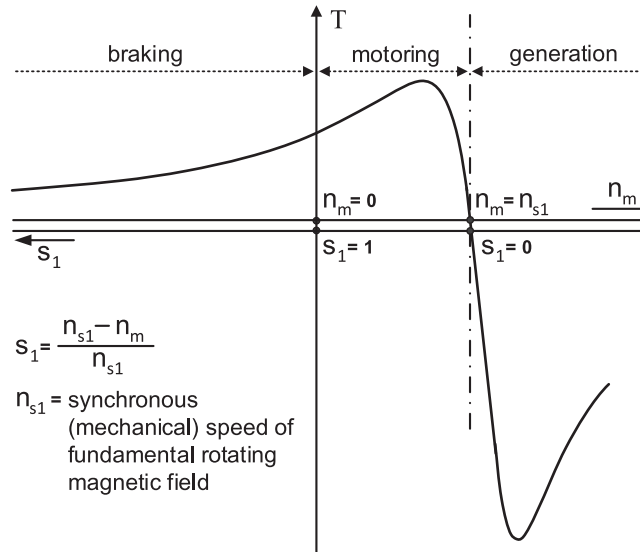


FIG. 3.7 Complete fundamental torque-speed relation detailing braking, motoring, and generation.

3.1.1 Application Example 3.1: Steady-state operation of induction motor at undervoltage

A $P_{out} = 100$ hp, $V_{L-L_{rat}} = 480$ V, $f = 60$ Hz, $p = 6$ pole, three-phase induction motor runs at full load and rated voltage with a slip of 3%. Under conditions of stress on the power system, the line-to-line voltage drops to $V_{L-L_{low}} = 430$ V. If the load is of the constant torque type, compute for the lower voltage:

- Slip s_{low} (use small-slip approximation).
- Shaft speed $n_{m_{low}}$ in rpm.
- Output power $P_{out_{low}}$.
- Rotor copper loss $P_{cur_{low}} = (I_r')^2 R_r'$ in terms of the rated rotor copper loss at rated voltage.

Solution to Application Example 3.1 : Steady-state operation of induction motor at undervoltage

(a) Based on the small-slip approximation $s \propto \frac{1}{V^2}$, the new slip at the low voltage is

$$s_{low} = 0.03(480/430)^2 = 0.0374.$$

(b) With the synchronous speed $n_s = \frac{120f}{p} = \frac{120(60)}{6} = 1200$ rpm one calculates the shaft speed at low voltage as

$$n_{m_low} = (1 - s_{low}) n_s = (1 - 0.0374)(1200) = 1155.14 \text{ rpm.}$$

(c) The output power at low voltage is $P_{out} = \omega_m \cdot T_m$. For constant mechanical torque one gets

$$P_{out_low} = \frac{(1 - 0.0374)}{(1 - 0.03)} (100 \text{ hp}) = 99.23 \text{ hp.}$$

(d) Due to the relation $T = \frac{P_g}{\omega_{s1}}$ (where P_g is the air-gap power), the torque is proportional to P_g , and therefore, for constant torque operation the air-gap power is constant. Thus the rotor loss is

$$P_{cur_low} = s_{low} P_g = \frac{0.0374}{0.03} P_{cur_rat} = 1.247 P_{cur_rat}.$$

One concludes that a decrease of the terminal voltage increases the rotor loss (temperature) of an induction motor.

3.1.2 Application Example 3.2: Steady-state operation of induction motor at overvoltage

Repeat Application Example 3.1 for the condition when the line-to-line voltage of the power supply system increases to $V_{L-L_high} = 510 \text{ V}$.

Solution to Application Example 3.2 : Steady-state operation of induction motor at overvoltage

(a) Based on the small-slip approximation $s \propto \frac{1}{V^2}$ the new slip at the high voltage is

$$s_{high} = 0.03(480/510)^2 = 0.02657.$$

(b) With the synchronous speed $n_s = \frac{120f}{p} = \frac{120(60)}{6} = 1200$ rpm one calculates the shaft speed at high voltage as

$$n_{m_high} = (1 - s_{high}) n_s = (1 - 0.02657)(1200) = 1168.11 \text{ rpm.}$$

(c) The output power at high voltage is $P_{out} = \omega_m \cdot T_m$. For constant mechanical torque one gets

$$P_{out_high} = \frac{(1 - 0.02657)}{(1 - 0.03)} (100 \text{ hp}) = 100.35 \text{ hp.}$$

- (d) Due to the relation $T = \frac{P_g}{\omega_{s1}}$, where P_g is the air-gap power, the torque is proportional to P_g , and therefore, for constant torque operation the air-gap power is constant. Thus the rotor loss is

$$P_{cur_high} = s_{high} P_g = \frac{0.02657}{0.03} P_{cur_rat} = 0.886 P_{cur_rat}.$$

One concludes that an increase of the terminal voltage decreases the rotor loss (temperature) of an induction motor.

3.1.3 Application Example 3.3: Steady-state operation of induction motor at undervoltage and under-frequency

Repeat Application Example 3.1 for the condition when the line-to-line voltage of the power supply system and the frequency drop to $V_{L-L_low}=430$ V and $f_{low}=59$ Hz, respectively.

Solution to Application Example 3.3 : Steady-state operation of induction motor at undervoltage and under-frequency

The small-slip approximation results in the torque equation $T = \frac{q_1 \cdot V_s^2 \cdot s}{\omega_{s1} \cdot R_r'}$.

- (a) Applying the relation to rated conditions (1) one gets $T^{(1)} = \frac{q_1 \cdot V_s^{2(1)} \cdot s^{(1)}}{\omega_{s1}^{(1)} \cdot R_r'}$. Applying the relation to low-voltage and low-frequency conditions (2) one gets $T^{(2)} = \frac{q_1 \cdot V_s^{2(2)} \cdot s^{(2)}}{\omega_{s1}^{(2)} \cdot R_r'}$. With $T^{(1)} = T^{(2)}$ and the relations $\omega_{s1}^{(1)} = \frac{2\pi f^{(1)}}{p/2}$ and $\omega_{s1}^{(2)} = \frac{2\pi f^{(2)}}{p/2}$ one obtains $s^{(2)} = s^{(1)} \frac{(V_s^{(1)})^2 f^{(2)}}{(V_s^{(2)})^2 f^{(1)}} = 0.0367$.

- (b) The synchronous speed $n_s^{(2)}$ at $f^{(2)} = 59$ Hz is $n_s^{(2)} = \frac{120(59)}{6} = 1180$ rpm, or the corresponding shaft speed $n_m^{(2)} = n_s^{(2)}(1 - s^{(2)}) = 1137$ rpm.

- (c) The torque-output power relations are $T^{(1)} = \frac{P_{out}^{(1)}}{\omega_m^{(1)}}$ and $T^{(2)} = \frac{P_{out}^{(2)}}{\omega_m^{(2)}}$. With $T^{(1)} = T^{(2)}$ one gets $\frac{P_{out}^{(1)}}{\omega_m^{(1)}} = \frac{P_{out}^{(2)}}{\omega_m^{(2)}}$ or $\frac{P_{out}^{(1)}}{\omega_{s1}^{(1)}(1-s^{(1)})} = \frac{P_{out}^{(2)}}{\omega_{s1}^{(2)}(1-s^{(2)})}$ or $\frac{P_{out}^{(1)}}{\frac{120f^{(1)}}{p}(1-s^{(1)})} = \frac{P_{out}^{(2)}}{\frac{120f^{(2)}}{p}(1-s^{(2)})}$. For the reduced output power it follows $P_{out}^{(2)} = \frac{(1-s^{(2)})}{(1-s^{(1)})} \frac{f^{(2)}}{f^{(1)}} P_{out}^{(1)} = 97.65$ hp.

- (d) The copper losses of the rotor are $P_{cur} = q_1(I_r')^2 R_r'$ and the output power is $P_{out} = q_1(I_r')^2 R_r' \frac{(1-s)}{s}$. The application of the relations to conditions (1) and (2) yields

$$P_{out}^{(1)} = q_1(I_r'^{(1)})^2 R_r' \frac{(1-s^{(1)})}{s^{(1)}} \text{ and}$$

$$P_{out}^{(2)} = q_1(I_r'^{(2)})^2 R_r' \frac{(1-s^{(2)})}{s^{(2)}} \text{ or}$$

$$\frac{(I_r'^{(2)})^2}{(I_r'^{(1)})^2} = \frac{P_{out}^{(2)}}{P_{out}^{(1)}} \frac{s^{(2)}}{s^{(1)}} \frac{(1-s^{(1)})}{(1-s^{(2)})} = 1.20.$$

The rotor loss increase becomes now $\frac{P_{cur}^{(2)}}{P_{cur}^{(1)}} = \frac{(I_r^{(2)})^2}{(I_r^{(1)})^2} = 1.20$.

One concludes that the simultaneous reduction of voltage and frequency increases the rotor losses (temperature) in a similar manner as discussed in Application Example 3.1. It is advisable not to lower the power system voltage beyond the levels as specified in standards.t

3.2 Magnetic fields of three-phase machines for the calculation of inductive machine parameters

Numerical approaches such as the finite-difference (FD) and finite-element methods [16] enable engineers to compute no-load and full-load magnetic fields and those associated with short circuit and starting conditions, as well as fields for the calculation of stator and rotor inductances/reactances. Figs. 3.8 and 3.9 represent the no-load fields of four- and six-pole induction machines [17,18]. Fig. 3.10A–E illustrates radial forces generated as a function of the rotor position. Such forces cause audible noise and vibrations. The calculation of radial and tangential magnetic forces is discussed in Chapter 4 (Section 4.2.14), where the concept of the “Maxwell stress” is employed. Figs. 3.11–3.13 represent unsaturated stator and rotor leakage fields and the associated field during starting of a two-pole induction motor. Figs. 3.14 and 3.15 represent saturated stator and rotor leakage fields, respectively, and Fig. 3.16 depicts the associated field during starting of a two-pole induction machine. The starting current and starting torque as a function of the terminal voltage are shown in Fig. 3.17 [19]. This plot illustrates how saturation influences the starting of an induction

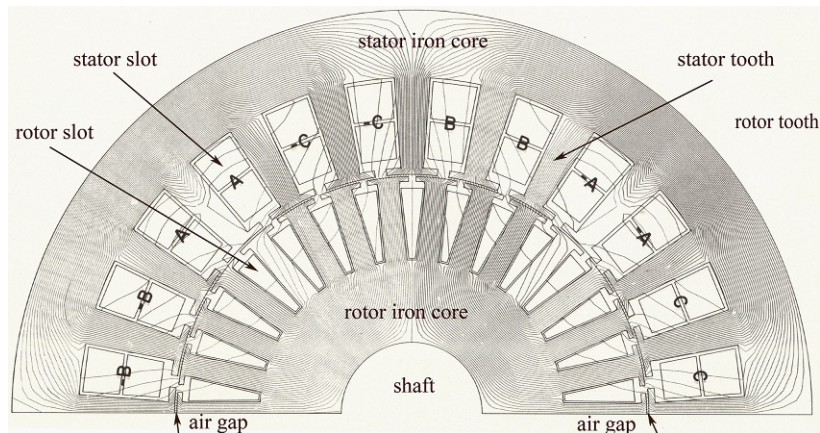


FIG. 3.8 No-load field of four-pole, 800 W, three-phase induction motor. One flux tube contains a flux per unit length of 0.0005 Wb/m.

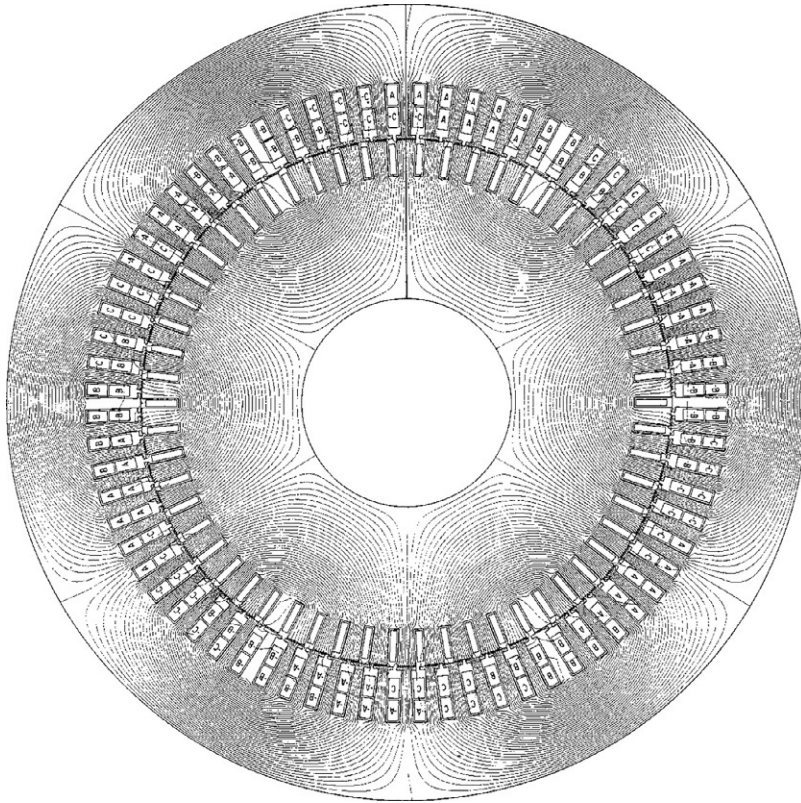


FIG. 3.9 No-load field of six-pole, 75kW, three-phase induction motor. One flux tube contains a flux per unit length of 0.0006 Wb/m .

motor. Note that the linear (hand) calculation results in lower starting current and torque than the numerical solution.

Any rotating machine design is based on iterations. No closed form solution exists because of the nonlinearities (e.g., iron-core saturation) involved. In [Fig. 3.13](#), the field for the first approximation, where saturation is neglected and a linear B-H characteristic is assumed, permits us to calculate stator and rotor currents for which the starting field can be computed under saturated conditions assuming a nonlinear (B-H) characteristic as depicted in [Fig. 3.16](#). For the reluctivity distribution caused by the saturated short-circuit field the stator ([Fig. 3.14](#)) and rotor ([Fig. 3.15](#)) leakage reactances can be recomputed, leading to the second approximation as indicated in [Fig. 3.16](#). In practice, a few iterations are sufficient to achieve a satisfactory solution for the starting torque as a function of the applied voltage as illustrated in [Fig. 3.17](#). It is well known that during starting saturation occurs only in the stator and rotor teeth and this is the reason why [Figs. 3.13 and 3.16](#) are similar.

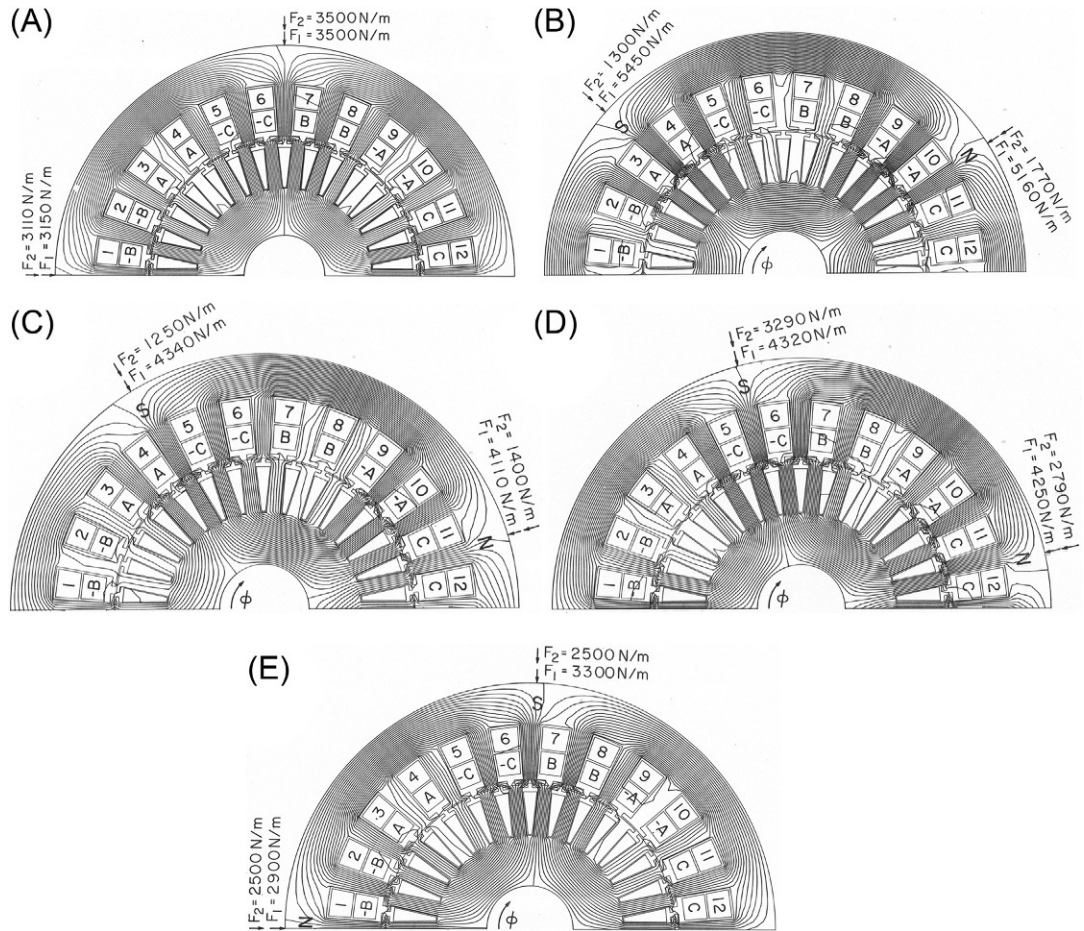


FIG. 3.10 Flux distribution and radial stator core forces at no load and rated voltage for (A) rotor position #1, (B) rotor position #2, (C) rotor position #3, (D) rotor position #4, and (E) rotor position #5.

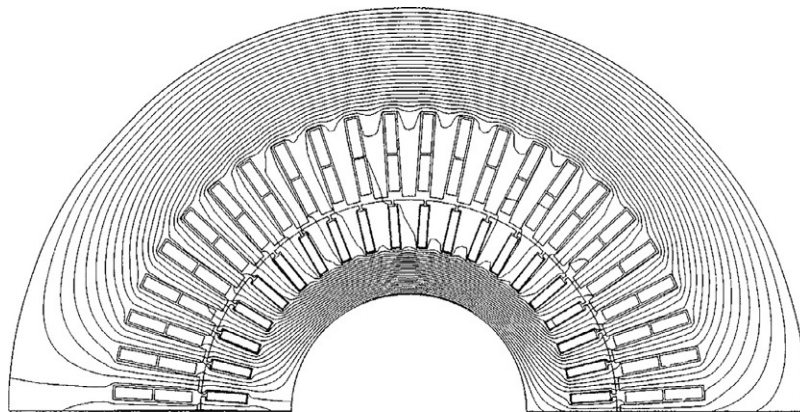


FIG. 3.11 Field for the determination of the unsaturated stator leakage flux of a 3.4MW, two-pole, three-phase induction motor. One flux tube contains a flux per unit length of 0.005 Wb/m [19].

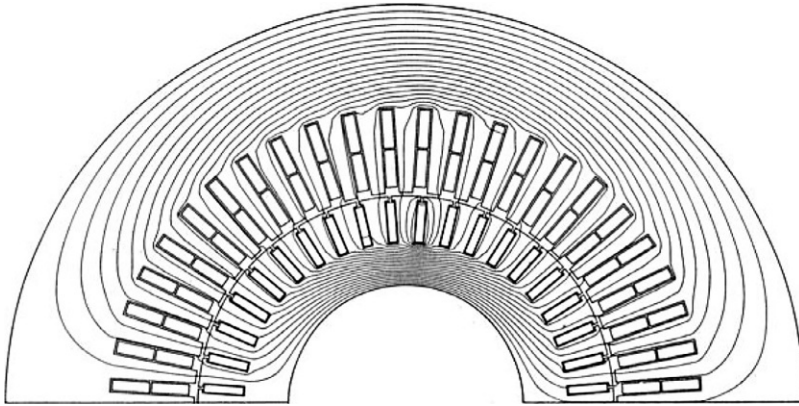


FIG. 3.12 Field for the determination of the unsaturated rotor leakage flux of a 3.4MW, two-pole, three-phase induction motor. One flux tube contains a flux per unit length of 0.015 Wb/m [19].

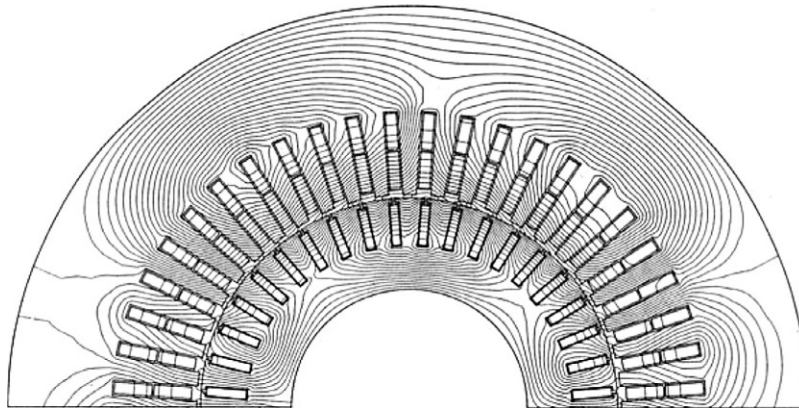


FIG. 3.13 Field distribution (first approximation) at starting with rated voltage of a 3.4MW, two-pole, three-phase induction motor. One flux tube contains a flux per unit length of 0.005 Wb/m [19].

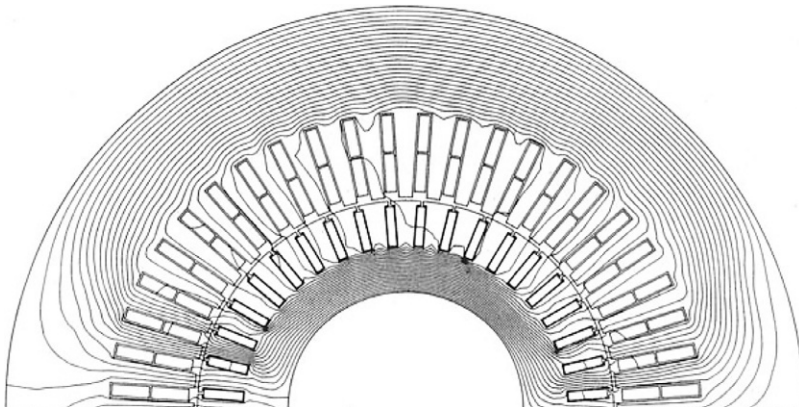


FIG. 3.14 Field for the determination of the saturated stator leakage flux of a 3.4MW, two-pole, three-phase induction motor. One flux tube contains a flux per unit length of 0.15 Wb/m [19].

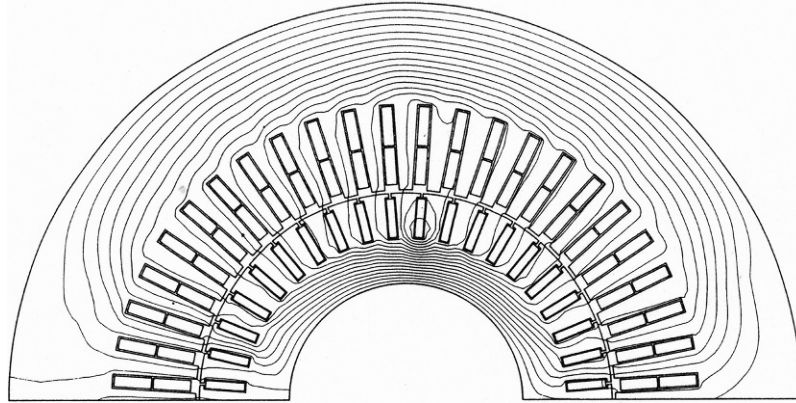


FIG. 3.15 Field for the determination of the saturated rotor leakage flux of a 3.4MW, two-pole, three-phase induction motor. One flux tube contains a flux per unit length of 0.005Wb/m [19].

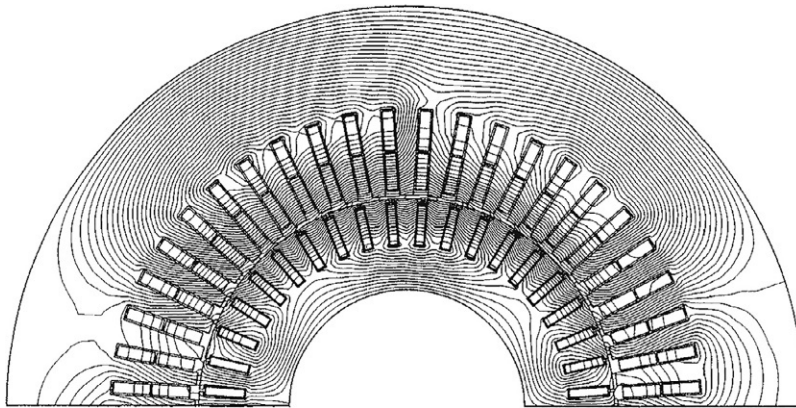


FIG. 3.16 Field distribution (second approximation) during starting with rated voltage of a 3.4MW, two-pole, three-phase induction motor. One flux tube contains a flux per unit length of 0.005Wb/m [19].

3.3 Steady-state stability of a three-phase induction machine

The steady-state stability criterion is [20]

$$\frac{\partial T_L}{\partial \omega_m} > \frac{\partial T}{\partial \omega_m} \quad (3.8)$$

where T_L is the load torque and T is the motor torque. Using this equation, the stable steady-state operating point of a machine for any given load-torque characteristic can be determined.

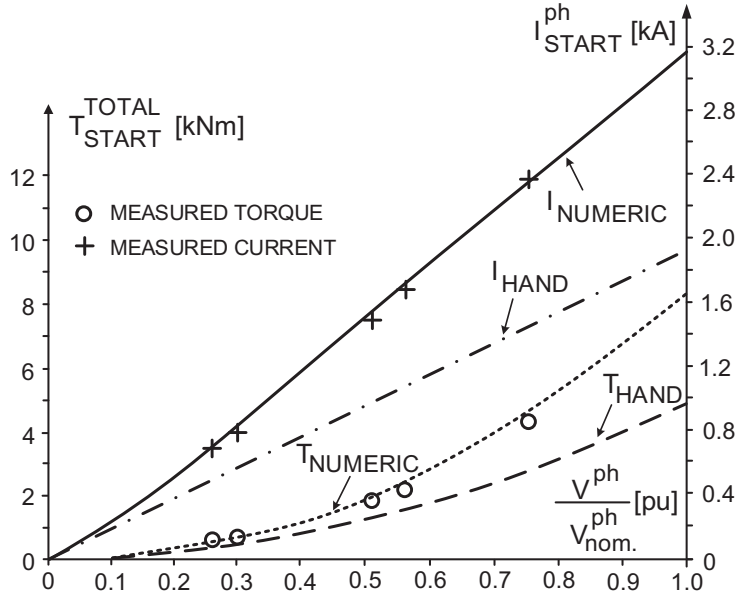


FIG. 3.17 Starting currents and torques as a function of terminal voltage for a 3.4MW, three-phase, induction motor [19].

3.3.1 Application Example 3.4: Unstable and stable steady-state operation of induction machines

Fig. E3.4.1 shows the torque-angular velocity characteristic of an induction motor ($T - \omega_m$) supplying a mechanical constant torque load (T_L). Determine the stability of the operating points Q_1 and Q_2 .

Solution to Application Example 3.4 : Unstable and stable steady-state operation of induction machines

The stability conditions at the two points where the two curves intersect are

$$\text{operating point } Q_1 : \left\{ \begin{array}{l} \frac{\Delta T_L}{\Delta \omega_m} = 0 \\ \frac{\Delta T}{\Delta \omega_m} = \text{positive} \end{array} \right\} \rightarrow \text{unstable}$$

$$\text{operating point } Q_2 : \left\{ \begin{array}{l} \frac{\Delta T_L}{\Delta \omega_m} = 0 \\ \frac{\Delta T}{\Delta \omega_m} = \text{negative} \end{array} \right\} \rightarrow \text{stable.}$$

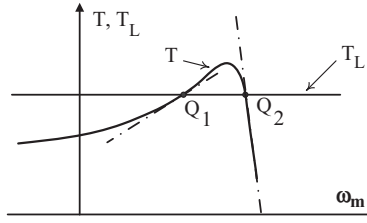


FIG. E3.4.1 Steady-state stability of induction machine with constant load torque.

Therefore, operation at Q_1 is unstable and will result in rapid speed reduction. This will stop the operation of the induction machine, while operating point Q_2 is stable.

3.3.2 Application Example 3.5: Stable steady-state operation of induction machines

Fig. E3.5.1 shows the torque-angular velocity relation ($T - \omega_m$) of an induction motor supplying a mechanical load with nonlinear (parabolic) torque (T_L). Determine the stability of the operating point Q_1 .

Solution to Application Example 3.5 : Stable steady-state operation of induction machines
The stability conditions at the point where the two curves intersect is

$$\text{operating point } Q_1: \left\{ \begin{array}{l} \frac{\Delta T_L}{\Delta \omega_m} = \text{positive} \\ \frac{\Delta T}{\Delta \omega_m} = \text{negative} \end{array} \right\} \rightarrow \text{stable}$$

Therefore, an induction machine connected to a mechanical load with parabolic torque-speed characteristics as shown in Fig. E3.5.1 will not experience any steady-state stability problems.

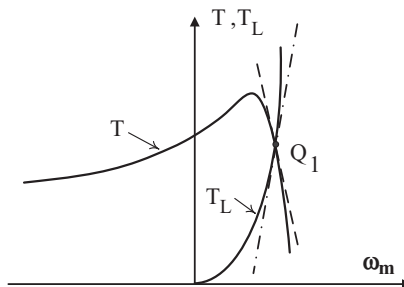


FIG. E3.5.1 Steady-state stability of induction machine with nonlinear load torque.

3.3.3 Resolving mismatch of wind-turbine and variable-speed generator torque-speed characteristics

It is well known that the torque-speed characteristic of wind turbines (Fig. 3.18) and commonly available variable-speed drives employing field weakening (Fig. 3.19A) do not match because the torque of a wind turbine is proportional to the square of the speed and that of a variable-speed drive is inversely proportional to the speed in the field-weakening region. One possibility to mitigate this mismatch is an electronic change in the number of poles p or a change of the number of series turns of the stator winding [21–23]. The change of the number of poles is governed by the relation

$$\frac{E \cdot p}{f} = 4.44 \cdot B_{\max} \cdot N_{\text{rat}} \cdot 4 \cdot R \cdot L$$

where $B_{\max}$ is the maximum flux density at the radius R of the machine, N_{rat} is the rated number of series turns of a stator phase winding, and L is the axial iron-core length of the machine.

The change of the number of turns N is governed by

$$\frac{E}{f \cdot N} = 4.44 \cdot B_{\max} \cdot 4 \cdot R \cdot L / p$$

The introduction of an additional degree of freedom—either by a change of p or N —permits an extension of the constant flux region. Adding this degree of freedom will permit wind turbines to operate under stalled conditions at all speeds, generating maximum power at a given speed with no danger of a runaway. This will make the blade-pitch control obsolete—however, a furling of the blades at excessive wind velocities must be provided—and wind turbines become more reliable and less expensive due to the absence of mechanical control. Fig. 3.19B illustrates the speed and torque increase due to the change of the number of turns from N_{rat} to $N_{\text{rat}}/2$, and Fig. 3.19C demonstrates the excellent dynamic performance of winding switching with solid-state switches from number of poles p_1 to p_2 [21]. The winding reconfiguration occurs near the horizontal axis (small slip) at 2400 rpm.

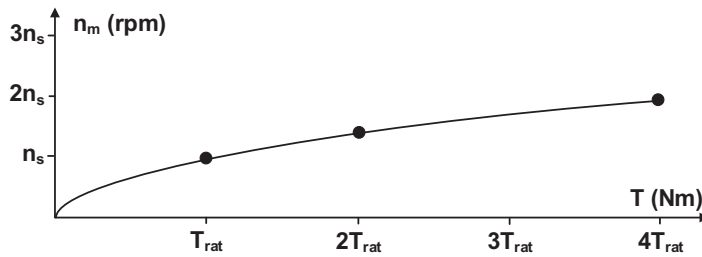


FIG. 3.18 Torque-speed characteristic of a wind turbine $T \propto n_m^2$.

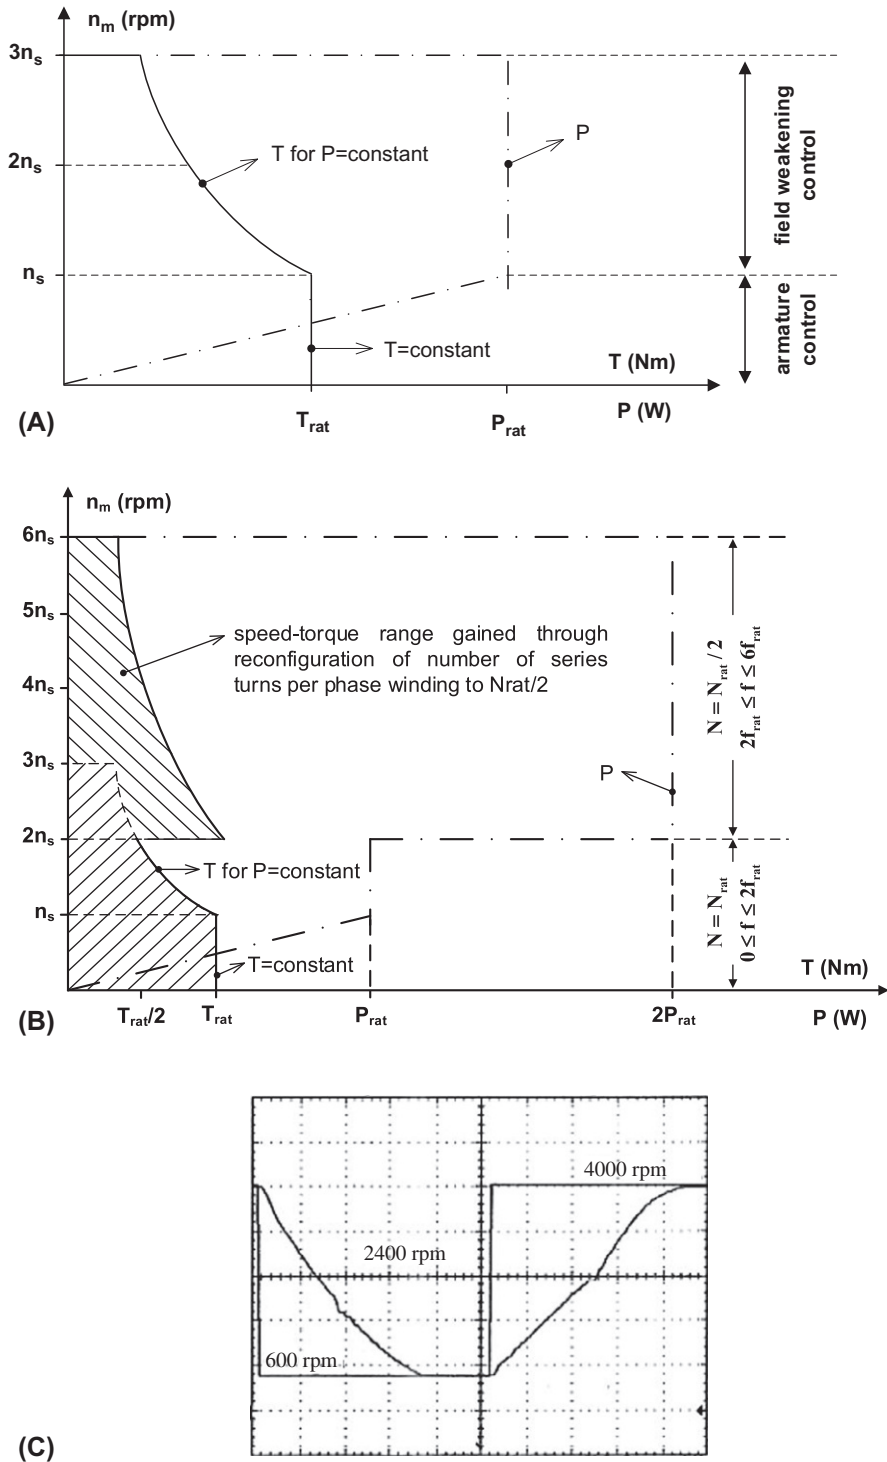


FIG. 3.19 (A) Variable-speed drive torque-speed characteristic without winding switching $T \propto 1/n_m$ in field-weakening region. The full line corresponds to the torque T and the dashed-dotted line to the power P . (B) Variable-speed drive torque-speed characteristic by changing the number of series turns of the stator winding from N_{rat} to $N_{rat}/2$. The full line corresponds to the torque T and the dashed-dotted line to the power P . (C) Measured variable-speed drive response with winding switching from pole number p_1 to p_2 resulting in a speed range from 600 to 4000 rpm [21]. One horizontal division corresponds to 200 ms. One vertical division corresponds to 800 rpm.

3.4 Spatial (space) harmonics of a three-phase induction machine

Due to imperfect (e.g., nonsinusoidal) winding distributions and due to slots and teeth in stator and rotor, the mmfs of an induction machine are nonsinusoidal.

For sinusoidal distribution one obtains the mmfs

$$\begin{aligned} F_a &= \{A_1 \cos \theta\} i_a \\ F_b &= \{A_1 \cos (\theta - 120^\circ)\} i_b \\ F_c &= \{A_1 \cos (\theta - 240^\circ)\} i_c \end{aligned} \quad (3.9)$$

Note that $\cos(\theta - 240^\circ) = \cos(\theta + 120^\circ)$. For nonsinusoidal mmfs (consisting of fundamental, third, and fifth harmonics) one obtains

$$\begin{aligned} F_a &= \{A_1 \cos \theta + A_3 \cos 3\theta + A_5 \cos 5\theta\} i_a(t) \\ F_b &= \{A_1 \cos (\theta - 120^\circ) + A_3 \cos 3(\theta - 120^\circ) + A_5 \cos 5(\theta - 120^\circ)\} i_b(t) \\ F_c &= \{A_1 \cos (\theta - 240^\circ) + A_3 \cos 3(\theta - 240^\circ) + A_5 \cos 5(\theta - 240^\circ)\} i_c(t) \end{aligned} \quad (3.10)$$

where

$$\begin{aligned} i_a(t) &= I_m \cos \omega_1 t \\ i_b(t) &= I_m \cos (\omega_1 t - 120^\circ) \\ i_c(t) &= I_m \cos (\omega_1 t - 240^\circ) \end{aligned} \quad (3.11)$$

The mmf originates in the phase belts $a - a'$, $b - b'$, and $c - c'$ as shown in Fig. 3.20. The total mmf is

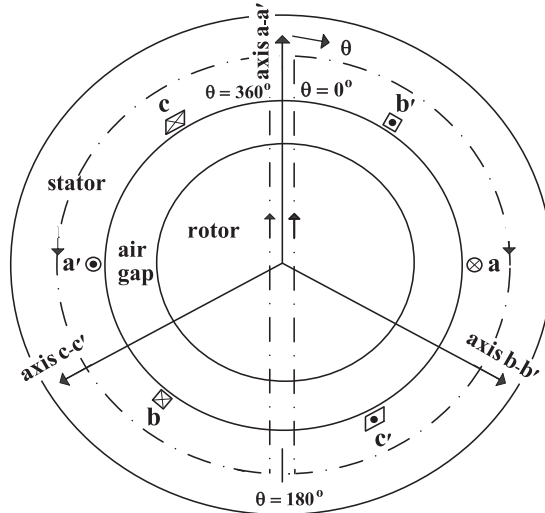


FIG. 3.20 Definition of phase belts and their associated axes in an induction machine.

$$F_{tot}(\theta, t) = F_a + F_b + F_c \quad (3.12)$$

where

$$F_a = \{A_1 \cos \theta + A_3 \cos 3\theta + A_5 \cos 5\theta\} I_m \cos \omega_1 t \quad (3.13a)$$

$$F_a = A_1 I_m \cos \theta \cos \omega_1 t + A_3 I_m \cos 3\theta \cos \omega_1 t + A_5 I_m \cos 5\theta \cos \omega_1 t$$

Note that $\cos x \cos y = \frac{1}{2}[\cos(x - y) + \cos(x + y)]$; therefore,

$$\begin{aligned} F_a = & \frac{A_1 I_m}{2} \{ \cos(\theta - \omega_1 t) + \cos(\theta + \omega_1 t) \} + \frac{A_3 I_m}{2} \{ \cos(3\theta - \omega_1 t) + \cos(3\theta + \omega_1 t) \} \\ & + \frac{A_5 I_m}{2} \{ \cos(5\theta - \omega_1 t) + \cos(5\theta + \omega_1 t) \} \end{aligned} \quad (3.13b)$$

Correspondingly,

$$\begin{aligned} F_b = & \frac{A_1 I_m}{2} \{ \cos(\theta - \omega_1 t) + \cos(\theta + \omega_1 t - 240^\circ) \} \\ & + \frac{A_3 I_m}{2} \{ \cos(3\theta - \omega_1 t - 240^\circ) + \cos(3\theta + \omega_1 t - 480^\circ) \} \\ & + \frac{A_5 I_m}{2} \{ \cos(5\theta - \omega_1 t - 480^\circ) + \cos(5\theta + \omega_1 t - 720^\circ) \} \end{aligned} \quad (3.13c)$$

$$\begin{aligned} F_c = & \frac{A_1 I_m}{2} \{ \cos(\theta - \omega_1 t) + \cos(\theta + \omega_1 t + 240^\circ) \} \\ & + \frac{A_3 I_m}{2} \{ \cos(3\theta - \omega_1 t + 240^\circ) + \cos(3\theta + \omega_1 t + 480^\circ) \} \\ & + \frac{A_5 I_m}{2} \{ \cos(5\theta - \omega_1 t + 480^\circ) + \cos(5\theta + \omega_1 t + 720^\circ) \} \end{aligned} \quad (3.13d)$$

Therefore, with Eq. (3.12) the total mmf is simplified:

$$F_{tot} = \frac{3}{2} A_1 I_m \cos(\omega_1 t - \theta) + \frac{3}{2} A_5 I_m \cos(\omega_1 t + 5\theta) \quad (3.14)$$

The angular velocity of the fundamental mmf $\frac{d\theta_1}{dt}$ is

$$\omega_1 \cdot t - \theta_1 = 0, \quad \theta_1 = \omega_1 \cdot t, \quad \frac{d\theta_1}{dt} = \omega_1$$

and the angular velocity of the 5th space harmonic mmf $\frac{d\theta_5}{dt}$ is

$$\omega_1 \cdot t + 5\theta_1 = 0, \quad 5\theta_1 = -\omega_1 \cdot t, \quad \frac{d\theta_5}{dt} = -\frac{\omega_1}{5}$$

Graphical representation of spatial harmonics (in the presence of fundamental, third, and fifth harmonics mmfs) with phasors is shown in Fig. 3.21. Note that the 3rd harmonic mmf cancels (is equal to zero).

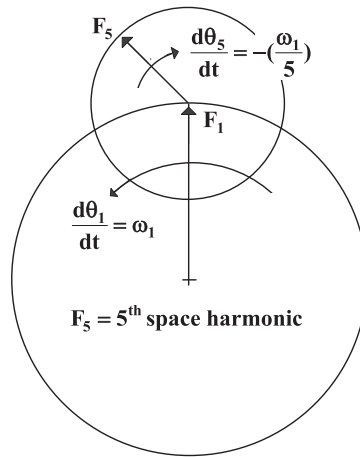


FIG. 3.21 Fundamental and 5th spatial harmonic of an induction machine rotating in opposite directions (see Eq. 3.14). Note: F_1 is rotating in forward (+) or counterclockwise direction and F_5 is rotating in backward (−) or clockwise direction.

Similar analysis is performed to determine the rotating directions of each individual space harmonic, and the positive-, negative-, and zero-sequence harmonic orders can be defined, as listed in Table 3.1.

Note that:

Even and triplen harmonics are normally not present in a balanced three-phase system!

In general one can write for spatial harmonics

$$\frac{d\theta_h}{dt} = \begin{pmatrix} + \\ - \\ 0 \end{pmatrix} \frac{\omega_1}{h} \quad (3.15)$$

where +, −, and 0 are used for positive-, negative-, and zero-sequence space harmonic orders, respectively. Fig. 3.22 illustrates the superposition of fundamental mmf with 5th space harmonic resulting in amplitude modulation where fundamental of 60Hz is modulated with 12Hz.

TABLE 3.1 Positive-, negative-, and zero-sequence spatial harmonics.

Spatial-harmonic sequence	+	−	0
Spatial-harmonic order	1	2	3
	4	5	6
	7	8	9
	10	11	12
	13	14	15
	.	.	.

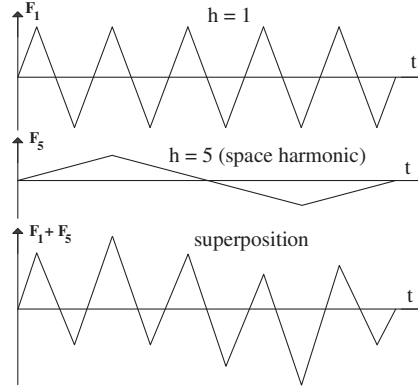


FIG. 3.22 Superposition of fundamental mmf with 5th space harmonic resulting in amplitude modulation of fundamental of 60Hz with 12Hz.

3.5 Time harmonics of a three-phase induction machine

A three-phase induction machine is excited by balanced three-phase $f_1 = 60\text{ Hz}$ currents containing a fifth time harmonic. The equations of the currents are for $\omega_1 = 2\pi f_1$:

$$\begin{aligned} i_a(t) &= \{I_{m1} \cos \omega_1 t + I_{m5} \cos 5\omega_1 t\} \\ i_b(t) &= \{I_{m1} \cos (\omega_1 t - 120^\circ) + I_{m5} \cos (5\omega_1 t - 120^\circ)\} \\ i_c(t) &= \{I_{m1} \cos (\omega_1 t + 120^\circ) + I_{m5} \cos (5\omega_1 t + 120^\circ)\} \end{aligned} \quad (3.16)$$

Note that the three-phase system rotates in a clockwise (cw) manner; that is, in a mathematically negative sense. Assume that the winding has been designed to eliminate all spatial harmonics. Thus for phase a the mmf becomes

$$F_a = A_1 \cos \theta i_a(t) \quad (3.17)$$

Correspondingly,

$$\begin{aligned} F_a &= A_1 \cos (\theta) \{I_{m1} \cos (\omega_1 t) + I_{m5} \cos (5\omega_1 t)\} \\ F_b &= A_1 \cos (\theta - 120^\circ) \{I_{m1} \cos (\omega_1 t - 120^\circ) + I_{m5} \cos (5\omega_1 t - 120^\circ)\} \\ F_c &= A_1 \cos (\theta + 120^\circ) \{I_{m1} \cos (\omega_1 t + 120^\circ) + I_{m5} \cos (5\omega_1 t + 120^\circ)\} \end{aligned} \quad (3.18)$$

The total mmf is

$$F_{tot}(\theta, t) = F_a + F_b + F_c \quad (3.19)$$

expanded:

$$\begin{aligned}
 F_a &= \left(\frac{A_1 I_{m1}}{2}\right) \cos(\theta - \omega_1 t) + \left(\frac{A_1 I_{m1}}{2}\right) \cos(\theta + \omega_1 t) + \left(\frac{A_1 I_{m5}}{2}\right) \cos(\theta - 5\omega_1 t) \\
 &\quad + \left(\frac{A_1 I_{m5}}{2}\right) \cos(\theta + 5\omega_1 t) \\
 F_b &= \left(\frac{A_1 I_{m1}}{2}\right) \cos(\theta - \omega_1 t) + \left(\frac{A_1 I_{m1}}{2}\right) \cos(\theta + \omega_1 t - 240^\circ) + \left(\frac{A_1 I_{m5}}{2}\right) \cos(\theta - 5\omega_1 t) \\
 &\quad + \left(\frac{A_1 I_{m5}}{2}\right) \cos(\theta + 5\omega_1 t - 240^\circ) \\
 F_c &= \left(\frac{A_1 I_{m1}}{2}\right) \cos(\theta - \omega_1 t) + \left(\frac{A_1 I_{m1}}{2}\right) \cos(\theta + \omega_1 t + 240^\circ) + \left(\frac{A_1 I_{m5}}{2}\right) \cos(\theta - 5\omega_1 t) \\
 &\quad + \left(\frac{A_1 I_{m5}}{2}\right) \cos(\theta + 5\omega_1 t + 240^\circ)
 \end{aligned} \tag{3.20}$$

or

$$F_{tot} = \left(\frac{3A_1 I_{m1}}{2}\right) \cos(\theta - \omega_1 t) + \left(\frac{3A_1 I_{m5}}{2}\right) \cos(\theta - 5\omega_1 t) \tag{3.21}$$

The angular velocity of the fundamental $\frac{d\theta_1}{dt}$ is

$$\theta_1 - \omega_1 \cdot t = 0, \quad \theta_1 = \omega_1 \cdot t, \quad \frac{d\theta_1}{dt} = \omega_1$$

and the angular velocity of the fifth time harmonic $\frac{d\theta_5}{dt}$ is

$$\theta_5 - 5\omega_1 \cdot t = 0$$

$$\frac{d\theta_5}{dt} = 5\omega_1$$

For the current system (consisting of the fundamental and 5th harmonic components where the 5th harmonic system rotates in counter-clockwise direction)

$$\begin{aligned}
 i_a(t) &= \{I_{m1} \cos \omega_1 t + I_{m5} \cos 5\omega_1 t\} \\
 i_b(t) &= \{I_{m1} \cos(\omega_1 t - 120^\circ) + I_{m5} \cos(5\omega_1 t + 120^\circ)\} \\
 i_c(t) &= \{I_{m1} \cos(\omega_1 t + 120^\circ) + I_{m5} \cos(5\omega_1 t - 120^\circ)\}
 \end{aligned} \tag{3.22}$$

the fifth time harmonic has the angular velocity

$$\frac{d\theta_5}{dt} = -5\omega_1$$

Phasor representation for forward rotating fundamental and forward rotating 5th harmonic current systems is given in Fig. 3.23. Phasor representation for forward rotating fundamental and backward rotating 5th harmonic current systems is shown in Fig. 3.24.

Similar analysis can be performed to determine the rotating directions of each individual time harmonic and to define the positive-, negative-, and zero-sequence harmonic orders, as listed in Table 3.2. As with the space harmonics, even and triplen harmonics are normally not present, provided the system is balanced.

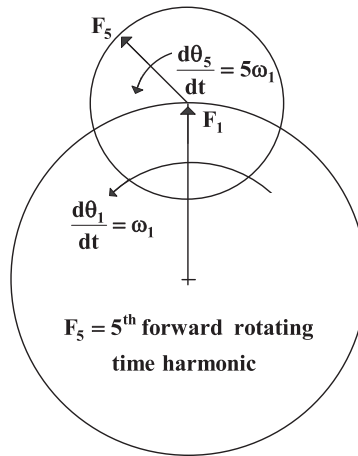


FIG. 3.23 Forward (+) rotating fundamental mmf of an induction machine superposed with forward (+) rotating 5th time harmonic rotating in the same direction.

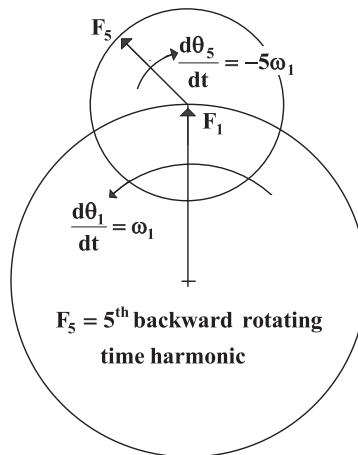


FIG. 3.24 Forward (+) rotating fundamental mmf of an induction machine superposed with backward (−) rotating 5th time harmonic rotating in the opposite direction.

TABLE 3.2 Positive-, negative-, and zero-sequence time harmonics.

Time-harmonic sequence	+	−	0
Time-harmonic order	1	2	3
	4	5	6
	7	8	9
	10	11	12
	13	14	15
	⋮	⋮	⋮

In general one can write for time harmonics

$$\frac{d\theta_h}{dt} = \begin{pmatrix} + \\ - \\ 0 \end{pmatrix} h\omega_1 \quad (3.23)$$

where +, −, and 0 are used for positive-, negative-, and zero-sequence time harmonic orders, respectively.

Therefore, time harmonics voltages have an important impact on induction machines. Forward- and backward-rotating fields are produced by positive-, negative-, and zero-sequence harmonics that produce harmonic shaft torques.

3.6 Fundamental and harmonic torques of an induction machine

Starting with the Thévenin-adjusted circuit as illustrated in Fig. 3.25, one obtains the current of the h th harmonic

$$\tilde{I}_{shTH} = \frac{\tilde{V}_{shTH}}{\left(R_{sTH} + \frac{R'_r}{s_h}\right) + jh\omega_1(L_{s\ell TH} + L'_{r\ell})} \quad (3.24)$$

Therefore, the electrical torque for the h th harmonic is

$$T_{eh} = \frac{1}{\omega_{sh}} \frac{q_1 V_{shTH}^2 \cdot \frac{R'_r}{s_h}}{\left(R_{sTH} + \frac{R'_r}{s_h}\right)^2 + (h\omega_1)^2 (L_{s\ell TH} + L'_{r\ell})^2} \quad (3.25)$$

Similarly, the fundamental ($h = 1$) torque is

$$T_{e1} = \frac{1}{\omega_{s1}} \frac{q_1 V_{s1TH}^2 \cdot \frac{R'_r}{s_1}}{\left(R_{sTH} + \frac{R'_r}{s_1}\right)^2 + (\omega_1)^2 (L_{s\ell TH} + L'_{r\ell})^2} \quad (3.26)$$

3.6.1 The fundamental slip of an induction machine

The fundamental slip is

$$s_1 = \frac{\omega_{s1} - \omega_m}{\omega_{s1}} \quad (3.27)$$

or

$$s_1 = 1 - \frac{\omega_m}{\omega_{s1}} \Rightarrow \frac{\omega_m}{\omega_{s1}} = 1 - s_1$$

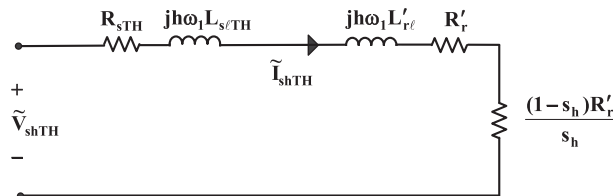


FIG. 3.25 Thévenin (TH) adjusted equivalent circuit of an induction machine for the h th harmonic. It is assumed that the resistive and inductive circuit parameters are independent of h .

where $\omega_{s1} = \frac{\omega_1}{p/2}$ is the (mechanical) synchronous fundamental angular velocity and ω_m is the mechanical angular shaft velocity.

The fundamental torque referred to fundamental slip s_1 is shown in Fig. 3.26 where T_{e1} is the machine torque and T_L is the load torque. If $R_s = 0$ then T_{e1} is symmetric to the point at ($T_{e1}=0/s_1=0$) or ($T_{e1}=0/\omega_{s1}$).

3.6.2 The harmonic slip of an induction machine

The harmonic slip (without addressing the direction of rotation of the harmonic field) is defined as

$$s_h = \frac{h\omega_{s1} - \omega_m}{h\omega_{s1}}$$

where $\omega_{s1} = (\omega_1)/(p/2)$ and ω_1 is the electrical angular velocity, $\omega_1 = 2\pi f_1$ and $f_1 = 60$ Hz.

To include the direction of rotation of harmonic mmfs, in the following we assume that the fundamental rotates in forward direction, the 5th in backward direction, and the 7th in forward direction (see Table 3.2 for positive-, negative-, and zero-sequence components).

For motor operation $\omega_m < \omega_{s1}$; thus for the 5th harmonic component, one obtains

$$s_5 = \frac{-5\omega_{s1} - \omega_m}{-5\omega_{s1}}$$

where $(-5\omega_{s1})$ means rotation in backward direction, or

$$s_5 = \frac{5\omega_{s1} + \omega_m}{5\omega_{s1}}$$

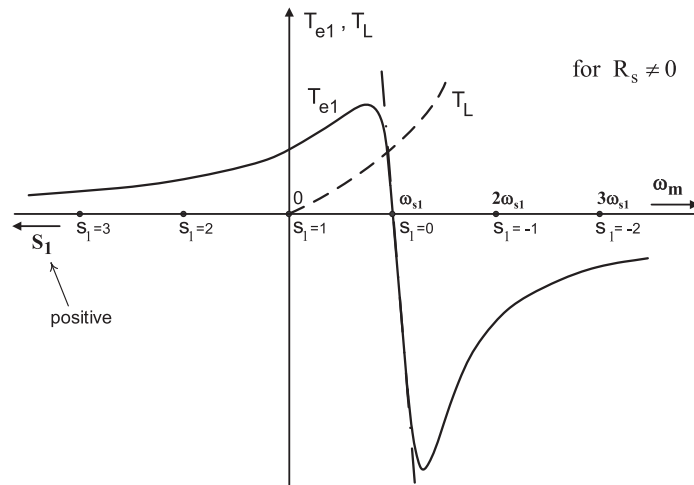


FIG. 3.26 Fundamental induction motor (T_{e1}) and load (T_L) torques as a function of angular velocity and slip s_1 .

Note that in this equation $5\omega_{s1}$ is the base (reference) angular velocity. Correspondingly, one obtains for the forward rotating 7th harmonic:

$$s_7 = \frac{7\omega_{s1} - \omega_m}{7\omega_{s1}}$$

where $7\omega_{s1}$ is the base.

Therefore, the harmonic slip is

$$s_h = \frac{h\omega_{s1} - (\pm)\omega_m}{h\omega_{s1}} \quad (3.28)$$

(+) : for forward rotating field

(-) : for backward rotating field

Harmonic torques T_{e7} and T_{e5} (as a function of the angular velocity ω_m and the harmonic slips s_7 and s_5) are depicted in Figs. 3.27 and 3.28, respectively.

3.6.3 The reflected harmonic slip of an induction machine

If ω_{s1} is taken as the reference angular velocity, then for the backward rotating fifth harmonic one obtains

$$s_5^{(1)} = \frac{5\omega_{s1} + \omega_m}{\omega_{s1}} \quad (3.29)$$

where $s_5^{(1)}$ is the reflected fifth harmonic slip.

Correspondingly, if one takes ω_{s1} as reference then for the forward rotating seventh harmonic one gets

$$s_7^{(1)} = \frac{7\omega_{s1} - \omega_m}{\omega_{s1}}$$

where $s_7^{(1)}$ is the reflected seventh harmonic slip.

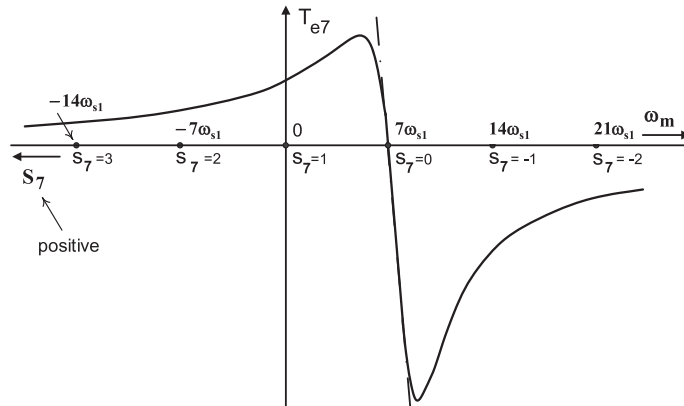


FIG. 3.27 Induction motor torque for 7th time harmonic as a function of angular velocity and slip s_7 .

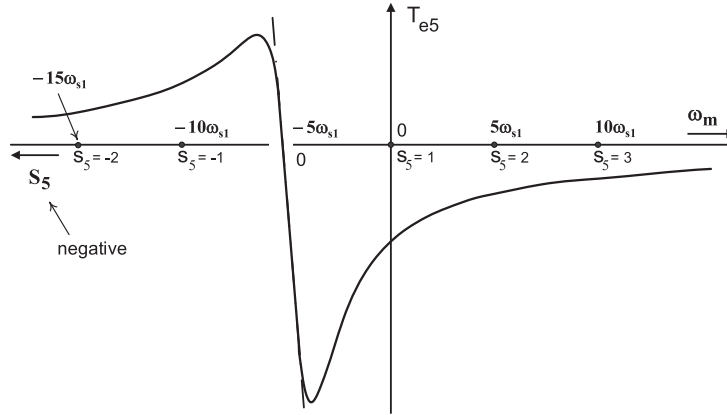


FIG. 3.28 Induction motor torque for 5th time harmonic as a function of angular velocity and slip s_5 .

In general, the reflected harmonic slip is

$$s_h^{(1)} = \frac{h\omega_{s1} - (\pm)\omega_m}{\omega_{s1}} \quad (3.30)$$

(+) : for forward rotating field

(-) : for backward rotating field

To understand the combined effects of fundamental and harmonic torques, it is more convenient to plot harmonic torques (T_{eh}) as a function of the reflected harmonic slips ($s_h^{(1)}$):

- The harmonic torque T_{e7} reflected to harmonic slip $s_7^{(1)} = \frac{7\omega_{s1} - \omega_m}{\omega_{s1}}$ is depicted in Fig. 3.29; and
- The harmonic torque T_{e5} reflected to harmonic slip $s_5^{(1)} = \frac{5\omega_{s1} - \omega_m}{\omega_{s1}}$ is shown in Fig. 3.30

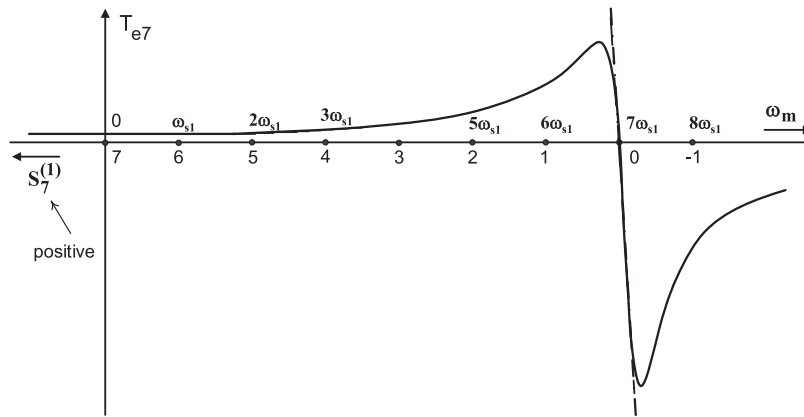


FIG. 3.29 Induction motor torque for 7th time harmonic as a function of mechanical angular velocity and reflected harmonic slip $s_7^{(1)}$.

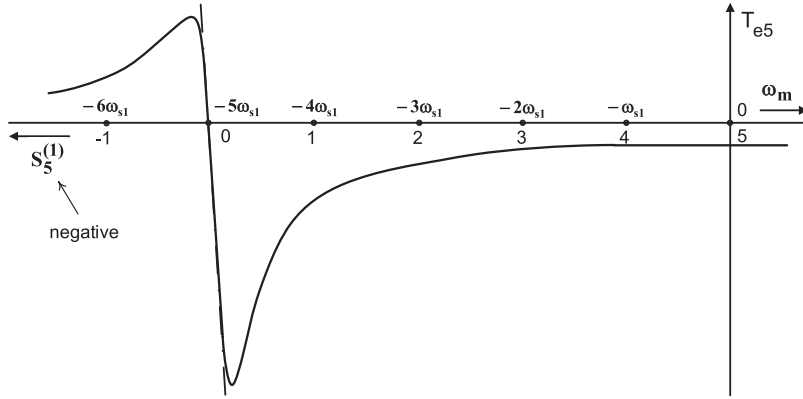


FIG. 3.30 Induction motor torque for 5th time harmonic as a function of mechanical angular velocity and reflected harmonic slip $s_5^{(1)}$.

3.6.4 Reflected harmonic slip of an induction machine in terms of fundamental slip

The relation between s_1 (fundamental slip) and $s_h^{(1)}$ (reflected harmonic slip) is

$$s_h^{(1)} = \frac{h\omega_{s1} - \omega_m}{\omega_{s1}} = \frac{\omega_{s1} - \omega_m}{\omega_{s1}} + \frac{(h-1)\omega_{s1}}{\omega_{s1}} = 1 - \frac{\omega_m}{\omega_{s1}} + h - 1 = h - (1 - s_1)$$

Therefore, the reflected harmonic slip, in terms of fundamental slip, is

$$s_h^{(1)} = s_1 + (h - 1) \quad (3.31a)$$

For the backward rotating 5th harmonic one gets

$$s_5^{(1)} = -s_1 + 6 \quad \text{thus} \quad s_1 = -s_5^{(1)} + 6$$

and for the forward rotating 7th harmonic

$$s_7^{(1)} = s_1 + 6 \quad \text{thus} \quad s_1 = s_7^{(1)} - 6$$

Note that

$$s_5^{(1)} = \frac{5\omega_{s1} + \omega_m}{\omega_{s1}}$$

In general, the reflected harmonic slip $s_h^{(1)}$ for the forward and the backward rotating harmonics is a linear function of the fundamental slip s_1 :

$$\begin{aligned} s_h^{(1)} &= s_1 + (h - 1) & \text{for forward - rotating field} \\ s_h^{(1)} &= -s_1 + (h + 1) & \text{for backward - rotating field} \end{aligned} \quad (3.31b)$$

Superposition of fundamental ($h=1$), fifth harmonic ($h=5$), and seventh harmonic ($h=7$) torque $T_e = T_{e1} + T_{e5} + T_{e7}$ is illustrated in Fig. 3.31. At $\omega_m = \omega_{m\text{rated}}$ the total electrical torque T_e

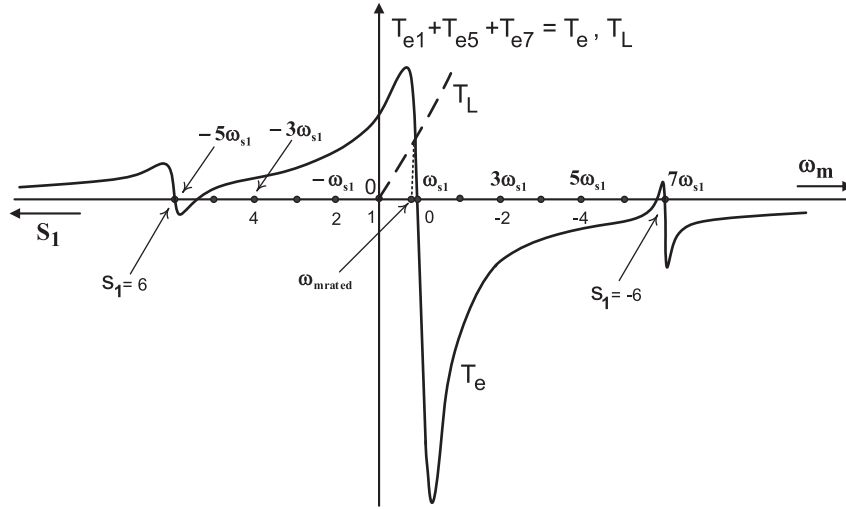


FIG. 3.31 Induction motor torque for fundamental, 5th, and 7th time harmonics as a function of angular velocity and slip s_1 .

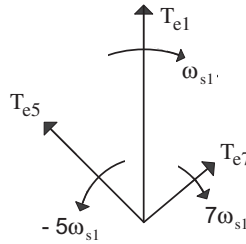


FIG. 3.32 Graphical phasor representation of superposition of torques as given in Fig. 3.31.

is identical to the load torque T_L or $T_{e1} + T_{e5} + T_{e7} = T_L$, where T_{e1} is a motoring torque, T_{e7} is a motoring torque, and T_{e5} is a braking torque. Fig. 3.32 shows the graphical phasor representation of superposition of torques as given in Fig. 3.31.

3.6.5 Reflected harmonic slip of an induction machine in terms of harmonic slip

In this section, the relation between the reflected harmonic slip $s_h^{(1)}$ and the harmonic slip s_h is determined as $s_h^{(1)} = f(s_h)$.

The harmonic slip (without addressing the direction of rotation of the harmonic field) is

$$s_h = \frac{h\omega_{s1} - \omega_m}{h\omega_{s1}} = \frac{(h-1)\omega_{s1}}{h\omega_{s1}} + \frac{\omega_{s1} - \omega_m}{h\omega_{s1}}$$

with

$$s_1 = \frac{\omega_{s1} - \omega_m}{\omega_{s1}}$$

It follows that

$$s_h = \frac{(h-1)\omega_{s1}}{h\omega_{s1}} + \frac{s_1}{h}$$

With $s_h^{(1)} = s_1 + (h-1)$, one obtains for forward rotating harmonics

$$s_1 = s_h^{(1)} - (h-1)$$

or

$$s_h = \frac{(h-1)\omega_{s1}}{h\omega_{s1}} + \frac{s_h^{(1)} - (h-1)}{h} = \frac{(h-1)}{h} + \frac{s_h^{(1)}}{h} - \frac{(h-1)}{h} = \frac{s_h^{(1)}}{h}$$

Similar analysis can be used for backward-rotating harmonics. Therefore, $s_h^{(1)}$ is a linear function of s_h :

$$s_h^{(1)} = hs_h \quad \text{for forward and backward rotating fields} \quad (3.32)$$

3.7 Measurement results for three- and single-phase induction machines

Measurement techniques for the determination of the (copper and iron-core) losses of induction machines are described in [24]. The losses of harmonics of single-phase induction motors are measured in [25]. Typical input current wave shapes for single- and three-phase induction motors fed by thyristor converters are depicted in Figs. 3.33 and 3.34 [26]. In addition to semiconductor converters, harmonics can be generated by the DC magnetization of transformers [27]. A summary of the heating effects due to harmonics on induction machines is given in [28]. The generation of sub- and interharmonic torques by induction machines is presented in [29]. Power quality of machines relates to harmonics of the currents and voltages as well as to those of flux densities. The latter are more difficult to measure because sensors (e.g., search coils, Hall devices) must be implanted in the core. Nevertheless, flux density harmonics are important from an acoustic noise [30] and vibration [31–33] point of view. Excessive vibrations may lead to a reduction of lifetime of the machine. Single-phase induction machines are one of the more complicated electrical apparatus due to the existence of forward- and backward-rotating fields. The methods as applied to these machines are valid for three-phase machines as well, where only forward fundamental rotating fields exist.

3.7.1 Measurement of nonlinear circuit parameters of single-phase induction motors

The optimization of single- and three-phase induction machines is based on sinusoidal quantities neglecting the influence of spatial and time harmonics in flux densities, voltages, and currents [14,15,34,35]. At nonsinusoidal terminal voltages, the harmonic losses of single-phase induction motors impact their efficiency [25]. The computer-aided testing (CAT) of [24] will be relied on to measure nonlinear circuit parameters and flux densities in stator teeth and yokes as well as in the air gap of permanent-split capacitor (PSC) motors. Detailed test results

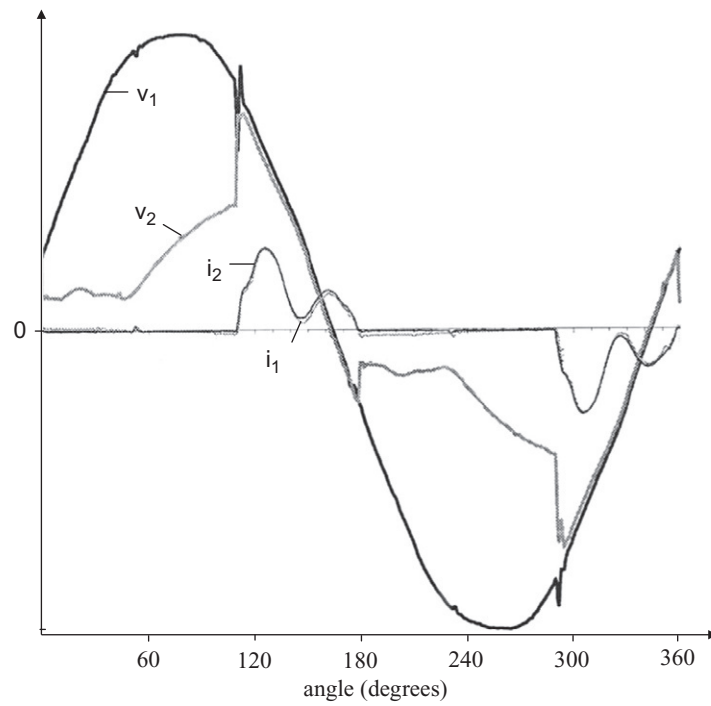


FIG. 3.33 Waveforms of input and output voltages and currents of a thyristor/triac controller feeding a 2hp single-phase induction motor at no load. v_1 , i_1 and v_2 , i_2 are input voltage/current and output voltage/current of controller, respectively [26].

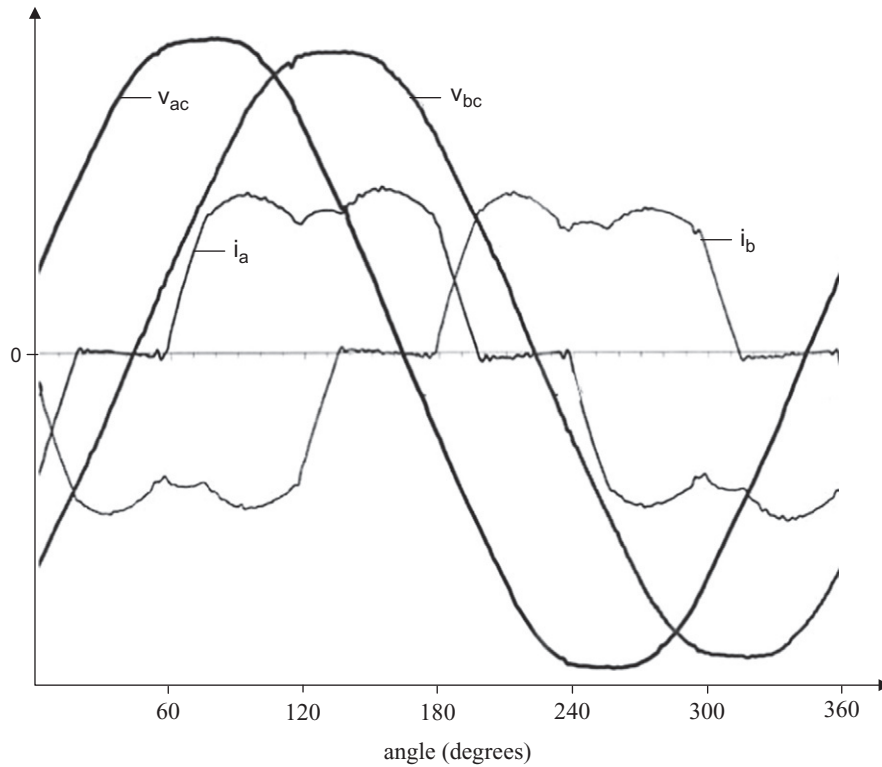


FIG. 3.34 Waveforms of input voltages v_{ac} , v_{bc} and input currents i_a , i_b of 7.5hp three-phase induction motor at no load fed by a thyristor/triac controller [26].

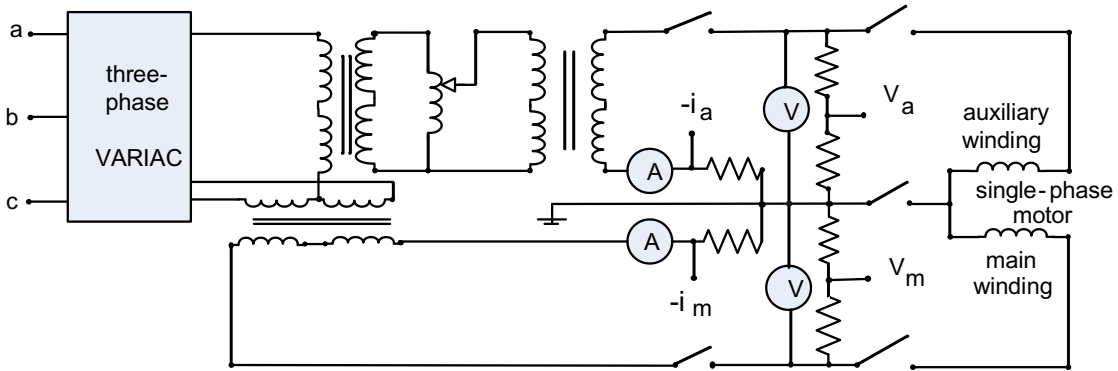


FIG. 3.35 CAT circuit for measuring of nonlinear circuit parameters of single-phase induction machines.

are presented in [36]. One concludes that tooth flux density wave shapes can be nearly sinusoidal although the exciting or magnetizing currents are nonsinusoidal.

A CAT circuit and the computer-aided testing of electrical apparatus program (CATEA) are used in [24] to measure nonlinear parameters. The CAT circuit is shown in Fig. 3.35, where four-channel signals v_m , i_m , v_a , and i_a corresponding to main (m) and auxiliary (a) phase voltages and currents, respectively, are sampled by a personal computer via a 12-bit A/D converter.

Three (see Table 3.3) fractional horsepower PSC single-phase induction motors serving as prime movers for window air conditioners are tested and their parameters listed.

All motors to be tested are operated at minimum load, where input and output lines at the compressor are open to air. Measurements are conducted at an ambient temperature of 22°C. The linear stator leakage impedance of a motor is measured by removing the rotor from the stator bore and applying various terminal voltage amplitudes to the stator windings. When the main-phase parameters are measured, the switch leading to the auxiliary phase must be open, and vice versa. From the sampled data one obtains the fundamental voltages and currents of the main- and auxiliary-phase windings through Fourier analysis.

Stator impedance

The stator input resistance and reactance are derived via linear regression. The stator leakage reactance is obtained by subtracting the reactance corresponding to leakage flux inside the bore of the motor from its input reactance [25].

Rotor impedance

The rotor leakage impedance is frequency dependent and nonlinear because of the closed-rotor slots. The rotor impedance, referred to the main-phase winding, is measured by passing

TABLE 3.3 Three fractional horsepower PSC single-phase induction motors serving as prime movers for window air conditioners.

Single-phase motor R333MC	Capacitor: 15μF, 370 V, output power: 1/2hp
Single-phase motor Y673MG1	Capacitor: 17.5μF, 366 V, output power: 3/4hp
Single-phase motor 80664346	Capacitor: 25μF, 370 V, output power: 1/2hp

varying amplitudes of current—from about 5% to 150% of rated current—through the main-phase winding under locked-rotor conditions. The total input resistance is derived from linear regression and the rotor resistance at rated frequency is obtained by subtracting the main-phase stator winding resistance from the total input resistance. The rotor resistance, taking the skin effect into account, can be obtained from [25]:

$$R_r = \varphi(\xi) R_{ro} \quad (3.33)$$

$$\varphi(\xi) = \xi \frac{\sin h(\xi) + \sin(2\xi)}{\cos h(2\xi) - \cos(2\xi)} \quad (3.34a)$$

where

$$\xi = k_r \sqrt{f} \quad (3.34b)$$

In Eq. (3.34b), f is the frequency of the rotor current. k_r is the skin-effect coefficient derived from the height of the rotor slot h_r and the resistivity of the bar ρ_r :

$$k_r = h_r \sqrt{\frac{\pi \mu_0}{\rho_r}} \quad (3.34c)$$

In Eq. (3.33), R_{ro} is the DC rotor resistance that can be derived from the rotor AC resistance at rated frequency and its skin-effect coefficient. The nonlinear rotor leakage reactance as a function of the amplitude of the rotor current—which can be described by a $(\lambda - i)$ characteristic—is obtained by subtracting the stator main-phase winding leakage reactance from the total input reactance. A linear rotor leakage reactance—which can be used as an approximation of the nonlinear rotor leakage reactance—is also derived from a linear regression.

Magnetizing impedance

The magnetizing $(\lambda - i)$ characteristic referred to the stator main-phase winding is measured by supplying varying amplitudes of voltage to the main-phase winding at no-load operation. The forward induced voltage is determined by subtracting from the input voltage the voltage drop across the stator impedance and the backward induced voltage (the voltage drop across the rotor backward equivalent impedance); note that in [25, Fig. 7A], the main-phase forward circuit, and [25, Fig. 7C], the main-phase backward circuit, are connected in series, whereby $h = 1$. Thereafter, the magnetizing impedance is derived from the ratio of the forward induced voltage and the input current in the frequency (fundamental) domain. The magnetizing reactance as a function of the amplitude of the forward induced voltage is derived from the imaginary part of the (complex) magnetizing impedance.

The $(\lambda - i)$ characteristics are given in the frequency domain, which means that both λ (flux linkages) and i (current) have fundamental amplitudes only. The fundamental amplitudes of either flux linkages or currents can be derived from each other via such characteristics.

Iron-core resistance

The resistance corresponding to the iron-core loss is determined as follows. The iron-core and the mechanical frictional losses are computed by subtracting from the input power at no load:

1. the copper loss of the main-phase winding at no load,
2. the backward rotor loss at no load, and

3. the forward air-gap power responsible for balancing the backward rotor loss.

Thereafter, the iron-core and the mechanical frictional losses, the total value of which is a linear function of the square of the forward induced voltage, are separated by linear regression. The equivalent resistance corresponding to the iron-core loss is derived from the slope of the regression line.

Turns ratio between the turns of the main- and auxiliary-phase windings

The ratio between the turns of the main- and auxiliary-phase windings $\left| \tilde{k}_{am} \right|$ is also an important parameter for single-phase induction motors. The main- and auxiliary-phase windings of some motors are not placed in spatial quadrature; therefore, an additional parameter θ , the spatial angle between the axes of the two stator windings, must be determined. These two parameters $\left(\left| \tilde{k}_{am} \right|, \theta \right)$ are found by measuring the main-phase induced voltage and current as well as the auxiliary-phase induced voltage when the motor is operated at no load. As has been mentioned above, the main-phase forward (f) and backward (b) induced voltages in the frequency domain, $\tilde{E}_f$ and $\tilde{E}_b$, respectively, can be obtained from the input voltage and current. If

$$\tilde{k}_{am} = \left| \tilde{k}_{am} \right| e^{j\theta} \quad (3.35)$$

is used to represent this complex turns ratio, then the auxiliary-phase induced voltage is given by

$$\tilde{E}_a = \tilde{k}_{am} \tilde{E}_f + \tilde{k}_{am}^* \tilde{E}_b \quad (3.36)$$

Therefore, the ratio $\left| \tilde{k}_{am} \right|$ can be iteratively computed from

$$\tilde{k}_{am} = \left(\tilde{E}_a - \tilde{k}_{am}^* \tilde{E}_b \right) / \tilde{E}_f \quad (3.37)$$

where $\tilde{k}_{am}^*$ is the (complex) conjugate of $\tilde{k}_{am}$. Measured parameters of PSC motors are given in [Section 3.7.2](#).

3.7.1.1 Measurement of current and voltage harmonics

Voltage and current harmonics can be measured with state-of-the-art equipment [24–26]. Voltage and current waveshapes representing input and output voltages or currents of thyristor or triac controllers for induction motors are presented in [Figs. 3.33 and 3.34](#). Here it is important that DC currents due to the asymmetric gating of the switches do not exceed a few percent of the rated controller current; DC currents injected into induction motors cause braking torques and generate additional losses or heating [26,28,41].

3.7.1.2 Measurement of flux-density harmonics in stator teeth and yoke (back iron)

Flux densities in the teeth of rotating machines are of the alternating type, whereas those in the yoke (back iron) are of the rotating type. The loss characteristics for both types are different and these can be requested from the electrical steel manufacturers. The motors to be tested are mounted on a testing frame, and measurements are performed under no load or minimum load with rated run capacitors. Four stator search coils with $N=3$ turns each are

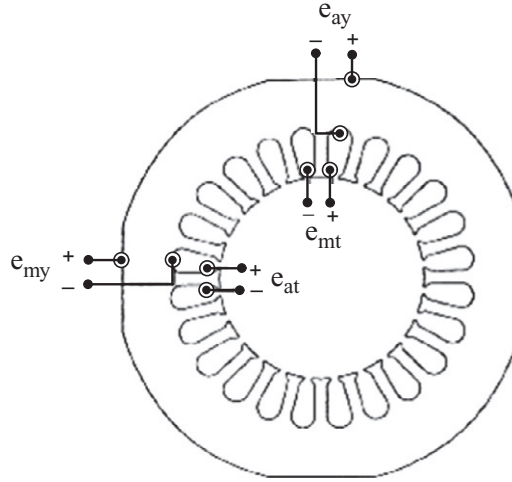


FIG. 3.36 Spatial location of four search coils.

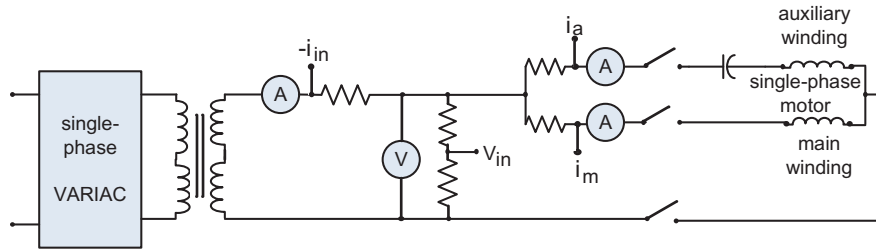


FIG. 3.37 CAT circuit for flux density measurement.

employed to indirectly sense the flux densities of the teeth and yoke located in the axes of the main- and auxiliary-phase windings (see Fig. 3.36). The induced voltages in the four search coils are measured with two different methods: the computer sampling and the oscilloscope methods.

Measurement via computer sampling

The CAT circuit and program [24] are relied on to measure the induced voltages of the four search coils of Fig. 3.36. The CAT circuit is shown in Figs. 3.36 and 3.37, where eight channel signals (v_{in} , i_{in} , i_m , i_a , e_{mt} , e_{at} , e_{my} , and e_{ay} corresponding to input voltage and current, main- and auxiliary-phase currents, main- and auxiliary-phase tooth search-coil induced voltages, and main- and auxiliary-phase yoke (back iron)-search coil induced voltages, respectively), are sampled [36].

The flux linkages of the search coils are defined as

$$\lambda(t) = \int e(t) dt \quad (3.38)$$

and numerically obtained from

$$\lambda_0 = 0 \quad \text{and} \quad \lambda_{i+1} = \lambda_i + \frac{\Delta t(e_{i+1} + e_i)}{2} \quad \text{for} \quad i = 0, 1, 2, \dots, (n-1) \quad (3.39)$$

The average or DC value is

$$\lambda_{avg} = \frac{1}{n} \left(\sum_{i=0}^{n-1} \lambda_i \right), \quad (3.40)$$

or the AC values are

$$\lambda_i = \lambda_i - \lambda_{avg}, \quad \text{for} \quad i = 0, 1, 2, 3, \dots, n \quad (3.41)$$

where $e(t)$ of Eq. 3.38 is the induced voltage measured in a search coil and n in Eqs. (3.39)–(3.41) is the number of sampled points. The maximum flux linkage λ_{max} can be obtained from λ_i . The maximum flux density is given by

$$B_{max} = \lambda_{max} / (N \cdot s) \quad (3.42)$$

where the number of turns of each search coil is $N = 3$ and s is given for a stator tooth and yoke by the following equations:

$$s = k_{fe} w_t \ell \quad (3.43)$$

$$s = k_{fe} h_y \ell \quad (3.44)$$

where w_t , h_y , ℓ , and k_{fe} are the width of the (parallel) stator teeth (where two search coils reside), the height of the yoke or stator back iron (where two search coils reside), the length of the iron core, and the iron-core stacking factor, respectively. Measured data of PSC motors at rated voltage are presented in Section 3.7.2.

The maximum flux densities in stator teeth and yoke at the axes of the main- and auxiliary-phase windings are measured for various voltage amplitudes by recording the induced voltages in the four search coils. A digital oscilloscope is used to plot the induced voltages of the search coils. These waveforms are then sampled either by hand or by computer based on 83 points per period. Complex Fourier series components $\tilde{C}_h$ are computed—taking into account the Nyquist criterion—and the integration is performed in the complex domain as follows:

$$e(t) = \sum_{h=1}^{27} \tilde{C}_h e^{jh\omega t} \quad (3.45)$$

$$\lambda(t) = \sum_{h=1}^{27} \frac{1}{jh\omega} \tilde{C}_h e^{jh\omega t} \quad (3.46)$$

The maximum flux linkage λ_{max} is found from $\lambda(t)$ and the maximum flux densities are determined from Eqs. (3.42) to (3.44).

3.7.2 Application Example 3.6: Measurement of harmonics within yoke (back iron) and tooth flux densities of single-phase induction machines

The three PSC motors (R333MC, Y673MG1, and 80664346) of Table 3.3 are subjected to the tests described in the prior subsections of Section 3.7, and pertinent results will be presented.

TABLE E3.6.1 Main-phase (m) input impedance at single-phase no-load operation as a function of input voltage for R333MC.

V_m (V)	R_m (Ω)	X_m (Ω)	Z_m (Ω)	L_m (mH)
250.3	9.65	46.6	47.6	126
229.9	11.2	56.9	58.0	154
210.3	13.2	67.8	69.1	183
189.8	15.1	77.3	78.7	209
170.6	17.0	82.4	84.1	223
149.5	18.6	85.4	87.4	232
129.8	20.5	86.3	88.7	235
109.2	22.6	86.7	89.5	238
89.9	22.5	87.8	90.6	240
69.4	26.3	87.0	90.9	241

TABLE E3.6.2 Auxiliary-phase (a) Input impedance at single-phase no-load operation as a function of input voltage for R333MC.

V_a (V)	R_a (Ω)	X_a (Ω)	Z_a (Ω)	L_a (mH)
298.88	30.6	94.7	99.5	264
279.9	33.6	106.0	111.2	295
259.3	36.8	117.9	123.5	328
239.8	39.1	126.2	132.1	351
219.4	41.1	132.5	138.7	368
199.0	43.8	135.6	142.5	378
179.3	45.6	137.4	144.7	384
160.0	46.7	138.6	146.3	388
139.1	49.9	139.0	147.6	392
120.8	50.3	140.2	148.9	395
100.1	54.3	139.3	149.5	397

These include stator, rotor, and magnetizing parameters, and tables listing no-load input impedances of the main and auxiliary phases (Tables E3.6.1 and E3.6.2). The bold data of the tables correspond to rated main- and auxiliary-phase voltages at no load. The rated auxiliary-phase voltage is obtained by multiplying the rated main-phase voltage with the measured turns ratio $\left| \tilde{k}_{am} \right|$. L_m and L_a are inductances of the main- and auxiliary-phase windings, respectively.

Solution to Application Example 3.6 : Measurement of harmonics within yoke (Back Iron) and tooth flux densities of single-phase induction machines.

3.7.2.1 Data of motor R333MC

Stator parameters

- 60Hz AC main-phase resistance: 4.53Ω ,
- main-phase leakage reactance: 5.02Ω ,
- auxiliary-phase resistance: 17.77Ω ,
- auxiliary-phase leakage reactance: 6.70Ω ,
- turns ratio between auxiliary- and main-phase windings: 1.34, and
- angle enclosed by the axes of auxiliary- and main-phase windings: 90.8° .

Rotor parameters

- DC resistance: 4.687Ω ,
- 60Hz AC resistance: 4.703Ω ,
- 120Hz AC resistance: 4.751Ω ,
- linear leakage reactance: 5.635Ω ,
- skin-effect coefficient: $k_r = 0.0572$, and
- nonlinear rotor leakage ($\lambda - i$) characteristic (referred to stator) is shown in Fig. E3.6.1.

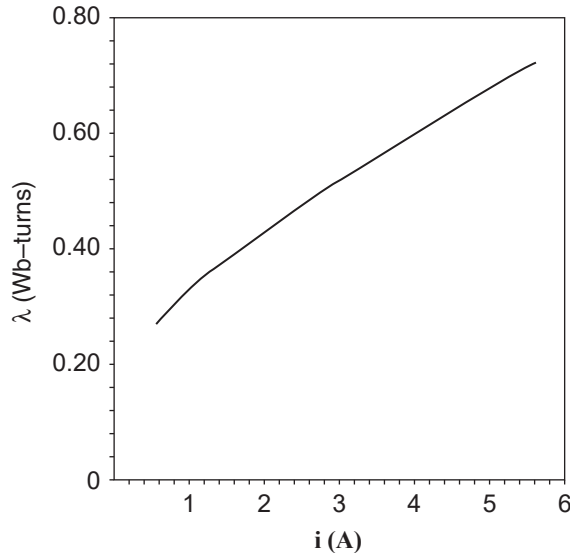


FIG. E3.6.1 Nonlinear rotor leakage ($\lambda - i$) characteristic of R333MC.

Magnetizing parameters

- unsaturated magnetizing reactance: 166.1Ω ,
- resistance corresponding to iron-core loss: 580Ω , and
- nonlinear magnetizing ($\lambda - i$) characteristic is depicted in Fig. E3.6.2.

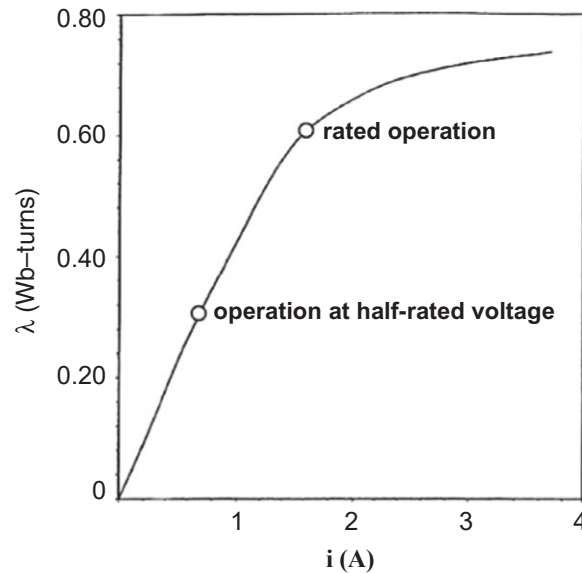


FIG. E3.6.2 Nonlinear magnetizing ($\lambda - i$) characteristic of R333MC.

No-load input impedance

The main- and auxiliary-phase input impedances are measured and recorded in [Tables E3.6.1 and E3.6.2](#), respectively, at single-phase no-load operation as a function of the rms value of the input voltage. Note that in [Table E3.6.1](#) the parameters Z_m and L_m are referred to the main-phase (m) winding, whereas in [Table E3.6.2](#) Z_a and L_a are referred to the auxiliary-phase (a) winding.

Geometric data

- length of iron core: 80 mm,
- width of stator tooth: 3.5 mm,
- height of main-phase yoke: 14.85 mm,
- height of auxiliary-phase yoke: 11.5 mm, and
- iron-core stacking factor: 0.95.

Measured waveforms of induced voltages and flux densities

[Figs. E3.6.3A and E3.6.3B](#) show the induced voltage waveforms within search coils wound on the teeth located at the axes of the main-phase and auxiliary-phase windings, respectively.

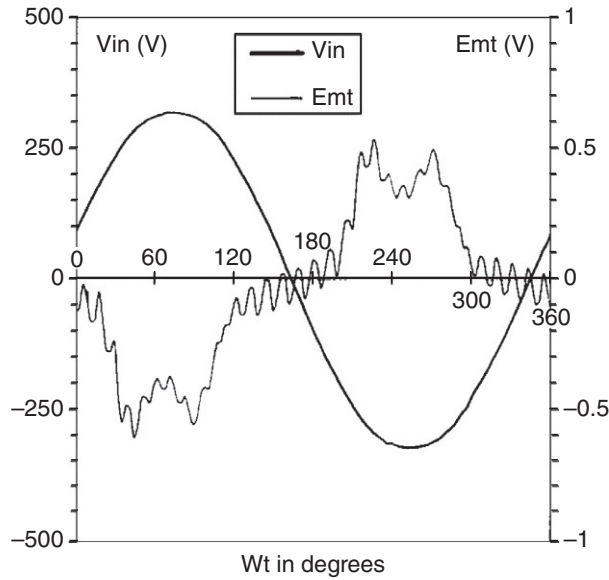


FIG. E3.6.3A Waveforms of input ($v_{in} = V_{in}$, left-hand side ordinate) and main-phase winding tooth induced voltages ($e_{mt} \equiv E_{mt}$, right-hand side ordinate, ωt) of R333MC.

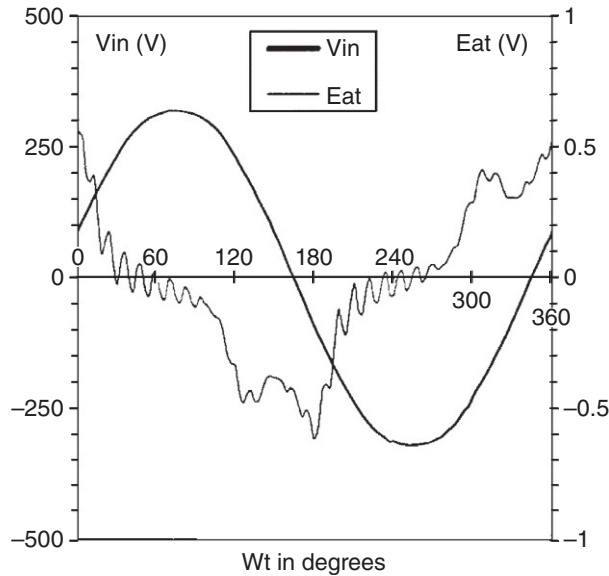


FIG. E3.6.3B Waveforms of input ($v_{in} = V_{in}$, left-hand side ordinate) and auxiliary-phase winding tooth induced voltages ($e_{at} \equiv E_{at}$, right-hand side ordinate, ωt) of R333MC.

Figs. E3.6.4A and E3.6.4B depict the flux density waveforms associated with the axis of the main-phase winding of all three machines as listed in Table 3.3, Figs. E3.6.4C and E3.6.4D depict the flux density waveforms associated with the axis of the auxiliary-phase winding for all three machines.

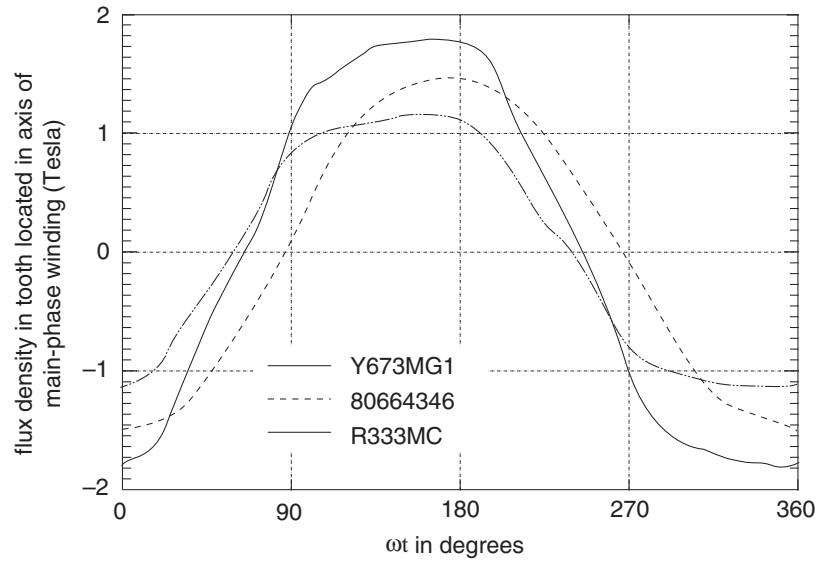


FIG. E3.6.4A Flux density waveforms of tooth (B_{mt}) located in axis of main-phase winding at rated voltage of R333MC, 80664346, and Y673MG1.

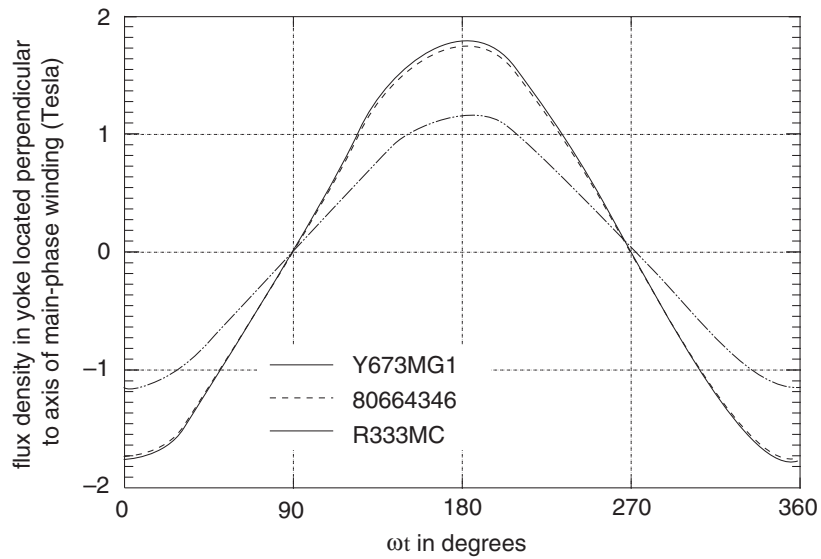


FIG. E3.6.4B Flux density waveforms of yoke (B_{my}) associated with main-phase winding at rated voltage of R333MC, 80664346, and Y673MG1.

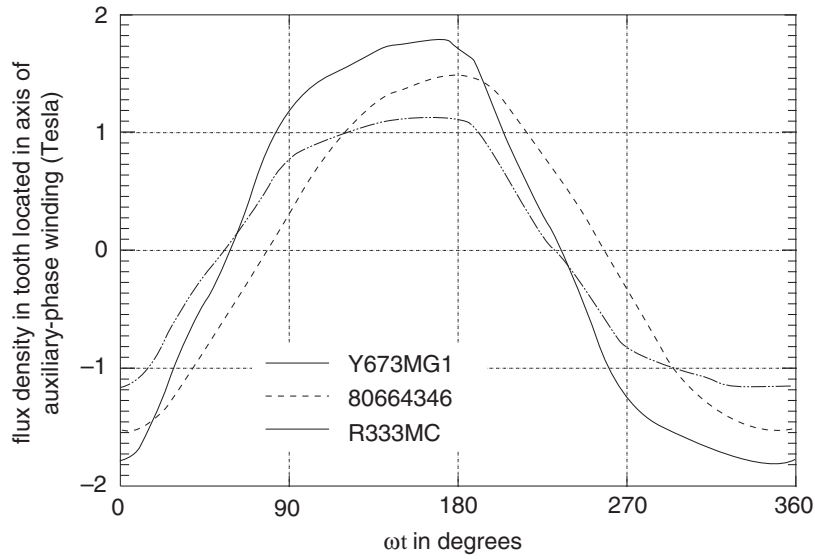


FIG. E3.6.4C Flux density waveforms of tooth (B_{at}) located in axis of auxiliary-phase winding at rated voltage of R333MC, 80664346, and Y673MG1.

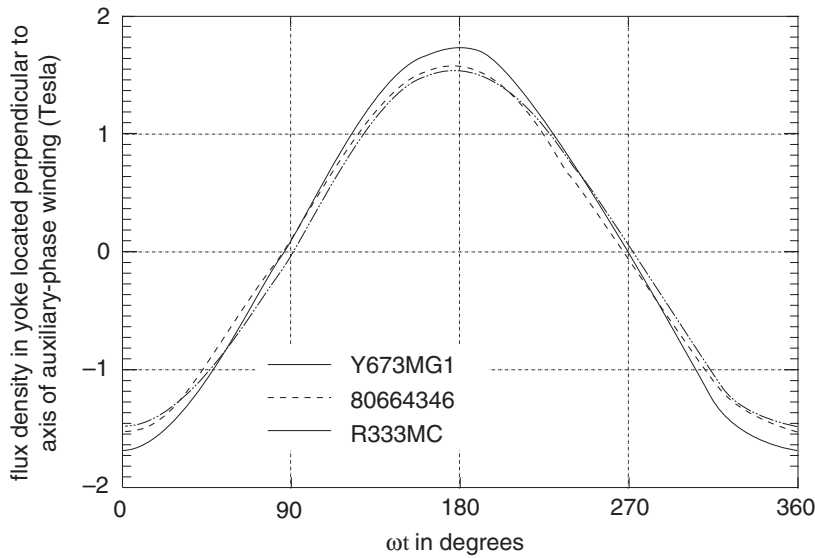


FIG. E3.6.4D Flux density waveforms of yoke (B_{ay}) associated with auxiliary-phase winding at rated voltage of R333MC, 80664346, and Y673MG1.

Figs. E3.6.5A, E3.6.5B, E3.6.5C, and E3.6.5D show that the flux densities are approximately a linear function of the input voltage. In Figs. E3.6.6A and E3.6.6B, comparison of the flux densities in the teeth and yoke (back iron) are presented for the methods discussed in the prior subsections of Section 3.7. The no-load currents of R333MC and 80664346 are depicted in Figs. E3.6.7A and E3.6.7B, respectively.

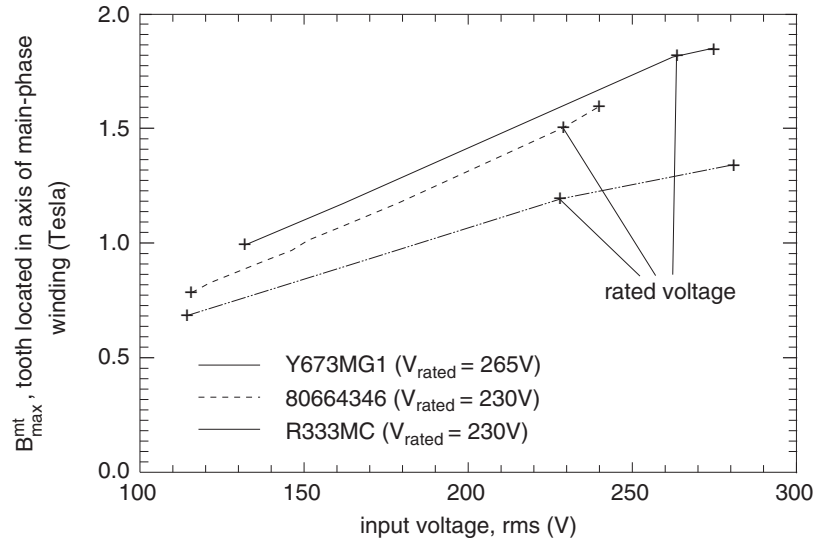


FIG. E3.6.5A Maximum flux density in tooth located in axis of main-phase winding as a function of input voltage of R333MC, 80664346, and Y673MG1.

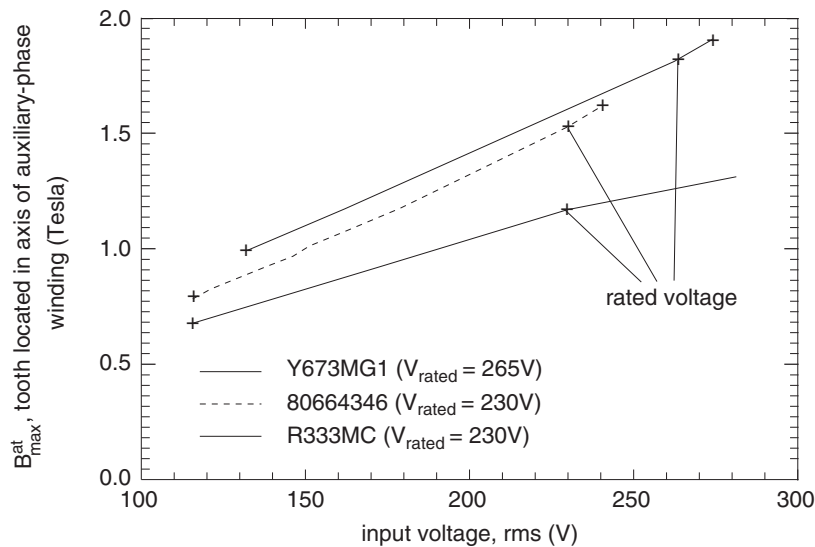


FIG. E3.6.5B Maximum flux density in tooth located in axis of auxiliary-phase winding as a function of input voltage of R333MC, 80664346, and Y673MG1.

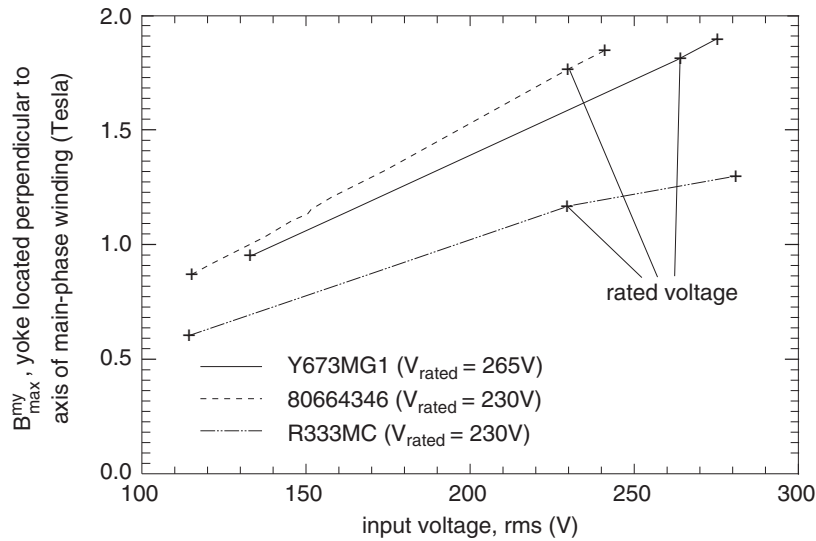


FIG. E3.6.5C Maximum flux density in yoke located in axis of main-phase winding as a function of input voltage of R333MC, 80664346, and Y673MG1.

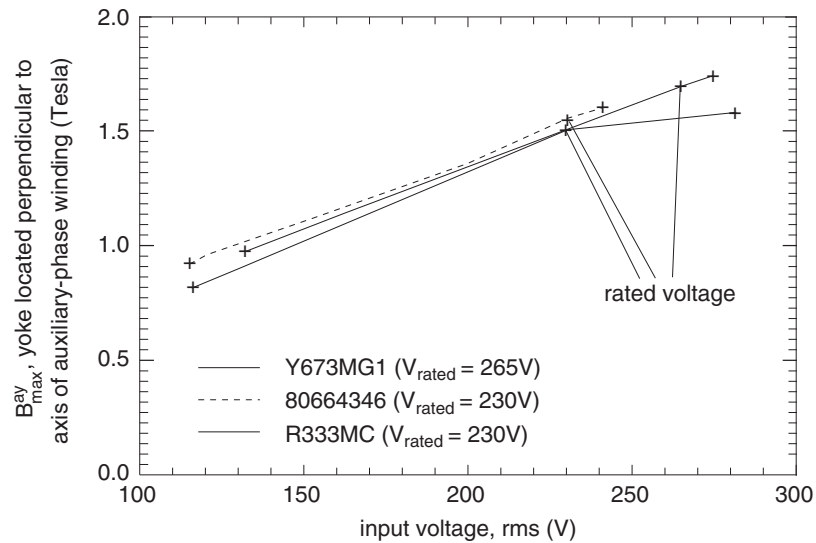


FIG. E3.6.5D Maximum flux density in yoke located in axis of auxiliary-phase winding as a function of input voltage of R333MC, 80664346, and Y673MG1.

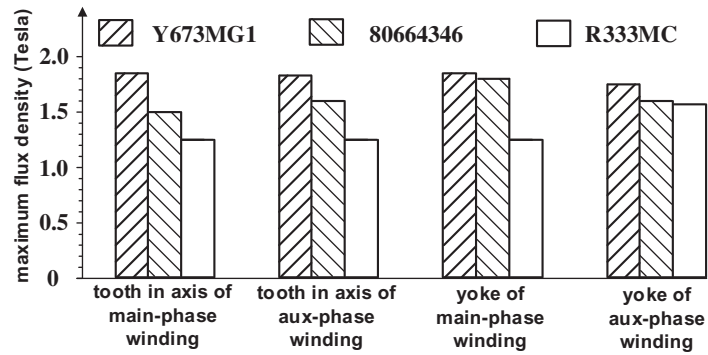


FIG. E3.6.6A Comparison of maximum flux densities in teeth located in axis of main- and auxiliary-phase windings, and yokes located in axis of main- and auxiliary-phase windings for Y673MG1, 80664346, and R333MC (computer-sampling method).

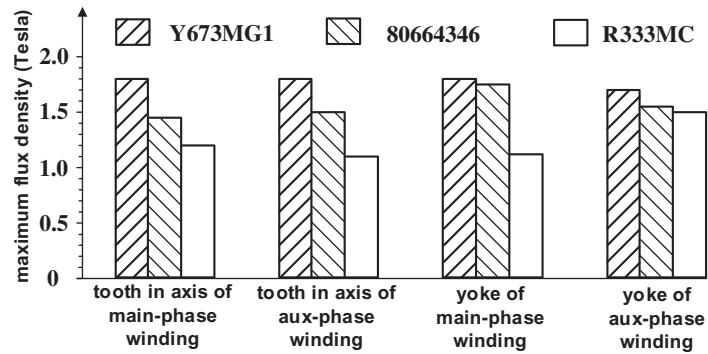


FIG. E3.6.6B Comparison of maximum flux densities in teeth located in axis of main- and auxiliary-phase windings, and yokes located in axis of main- and auxiliary-phase windings for Y673MG1, 80664346, and R333MC (oscilloscope method).

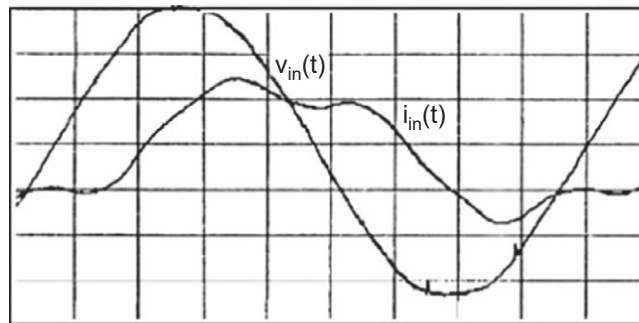


FIG. E3.6.7A Oscilloscope of total input current waveform of R333MC, 2 A/div for current $i_{in}(t)$ and input AC voltage $v_{in}(t)$ with 100 V/div at minimum load at $f=60$ Hz.

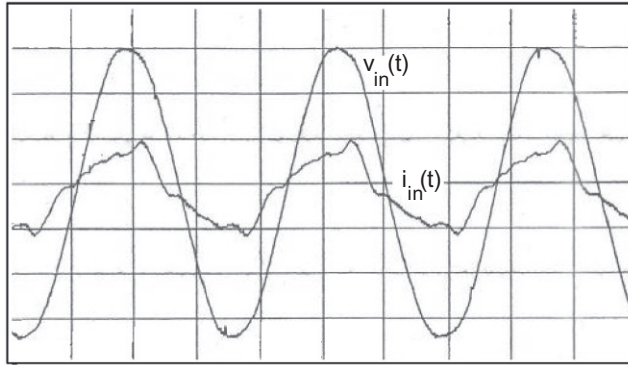


FIG. E3.6.7B Oscillogram of total input current waveform of 80664346, 1 A/div for current $i_{in}(t)$ and input AC voltage $v_{in}(t)$ of 230.5 V_{rms} at minimum load at $f=60$ Hz.

3.7.2.2 Discussion of results and conclusions

The PSC motors of the air conditioners 80664346 and R333MC have the same output power and about the same overall dimensions (length and outer diameter). However, their stator and rotor windings are different. Measurements indicate that the 80664346 motor [36] generates a nearly sinusoidal flux density in the stator teeth (Fig. E3.6.4A), whereas that of the R333MC motor exhibits nonsinusoidal waveform although its $(B_{mt})_{max}$ is smaller. In addition, the no-load current of the 80664346 (Fig. E3.6.7B) is about half that of R333MC (Fig. E3.6.7A), although the latter's maximum flux density in stator teeth and back iron (yoke) is less (Figs. E3.6.4A and E3.6.4C). This indicates that the proper designs of the stator and rotor windings are important for the waveform of the stator tooth flux density and its associated iron-core loss, and for the efficiency optimization of PSC motors.

The yoke flux densities (Figs. E3.6.4B and E3.6.4D) are mostly sinusoidal for all machines tested [36]. Although 80664346 has a larger flux density than R333MC, the no-load losses of 80664346 are smaller as can be seen from their stator, rotor, and magnetizing parameters. References [30,37], and Appendix of [38] address how time-dependent waveforms of the magnetizing current depend on the spatial distribution/pitch of a winding. Figs. E3.6.5A–E3.6.5D show that in these three PSC motors saturation in stator teeth and yokes is small as compared to transformers, and therefore the principle of superposition with respect to flux densities and losses can be applied. Figs. E3.6.6A and E3.6.6B demonstrate that both the computer sampling and the oscilloscope methods lead to similar results with respect to maximum flux densities. One concludes that although a single-phase motor (e.g., 80664346) has relatively large flux densities in stator yoke and teeth the no-load current can be relatively small, although it is quite nonsinusoidal. One of the reasons for this is that the power factor at no load is relatively large. The best design of a PSC motor is thus not necessarily based on sinusoidal current wave shapes. Further work should investigate the following:

- the losses generated by alternating flux densities as they occur in the stator teeth, and rotating flux densities as they occur in the stator yoke, and
- the interrelation between time and space harmonics and their effects on loss generation.

3.8 Inter- and subharmonic torques of three-phase induction machines

In Sections 3.4 and 3.5 the mmfs of spatial and time harmonics including the fundamental fields were derived, respectively. It can be shown that harmonic fields (where $h = \text{integer}$) generate very small asynchronous torques as compared with the fundamental torque. Sub- and interharmonic ($0 \leq h \leq 1$) torques, however, can generate parasitic torques near zero speed—that is, during the start-up of an induction motor. The formulas derived for harmonic torques are valid also for sub- and interharmonic torques. The following subsections confirm that sub- and interharmonic torques can have relatively large amplitudes if they originate from constant-voltage sources and not from constant-current sources.

3.8.1 Subharmonic torques in a voltage-source-fed induction motor

The equivalent circuit of a voltage-source-fed induction motor is shown in Fig. 3.38A for the fundamental ($h=1$) and for the harmonic of order h . Using Thévenin's theorem (subscript TH), the magnetizing branch can be eliminated (Fig. 3.38B) and one obtains the following relation for the electrical torque of the h th harmonic where $V_{shTH} = |\tilde{V}_{shTH}|$:

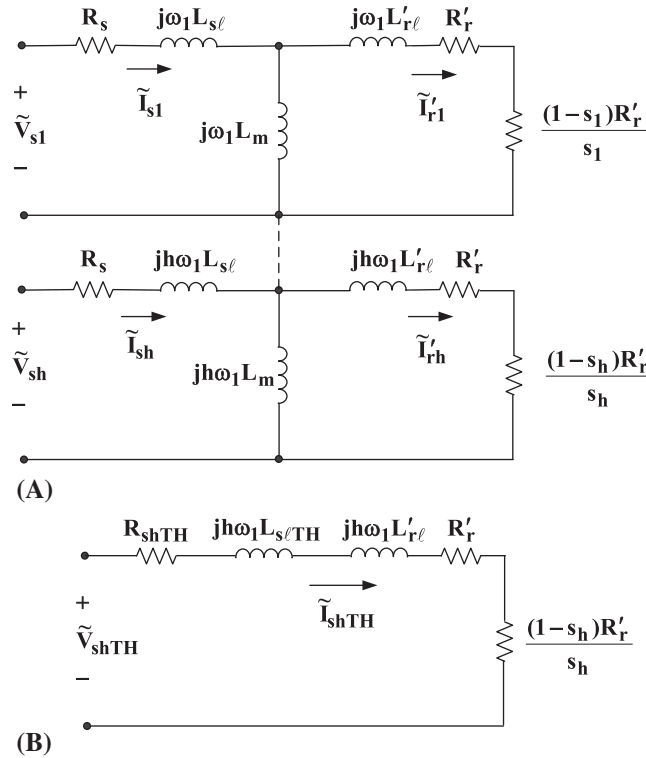


FIG. 3.38 (A) Per-phase equivalent circuit of three-phase induction machine for fundamental ($h=1$) and h th harmonic fed by voltage source. (B) Thévenin (TH) adjusted per-phase equivalent circuit.

$$T_{eh} = \frac{1}{\omega_{msh}} \frac{q_1 \cdot V_{shTH}^2 \cdot R'_r/s_h}{(R_{shTH} + R'_r/s_h)^2 + [h\omega_1(L_{s\ell TH} + L'_{r\ell})]^2} \quad (3.47a)$$

The Thévenin-adjusted machine parameters are

$$V_{shTH} = \frac{V_{sh}(h\omega_1 L_m) \angle \theta_{hTH}}{\sqrt{R_s^2 + (h\omega_1 L_{s\ell} + h\omega_1 L_m)^2}} \quad (3.47b)$$

with

$$\theta_{hTH} = \frac{\pi}{2} - \tan^{-1} \left[\frac{h\omega_1 L_{s\ell} + h\omega_1 L_m}{R_s} \right] \quad (3.47c)$$

$$R_{shTH} = \frac{h^2(\omega_1 L_m)^2 R_s}{R_s^2 + (h\omega_1 L_{s\ell} + h\omega_1 L_m)^2} \quad (3.47d)$$

$$(h\omega_1 L_{s\ell TH}) = \frac{h(\omega_1 L_m) R_s^2 + h^2(\omega_1 L_{s\ell})(\omega_1 L_m)[h(\omega_1 L_{s\ell}) + h(\omega_1 L_m)]}{R_s^2 + (h\omega_1 L_{s\ell} + h\omega_1 L_m)^2} \quad (3.47e)$$

The mechanical synchronous angular velocity is

$$\omega_{msh} = \frac{h\omega_1}{(p/2)} \quad (3.48)$$

where ω_1 is the electrical synchronous angular velocity, p is the number of poles, and q_1 is the number of phases (e.g., $q_1=3$).

In order to obtain the maximum or breakdown torque one matches the impedances of the Thévenin-adjusted equivalent circuit at $s_h = s_{h\max}$:

$$R_{rh}^2 = \left(\frac{R'_r}{s_{h\max}} \right)^2 = R_{shTH}^2 + [h\omega_1(L_{s\ell TH} + L'_{r\ell})]^2 \quad (3.49a)$$

and the breakdown slip for the h th harmonic becomes

$$s_{h\max} = \frac{R'_r}{\pm \sqrt{R_{shTH}^2 + [h\omega_1(L_{s\ell TH} + L'_{r\ell})]^2}} \quad (3.49b)$$

The maximum motoring (*mot*) positive torque and the maximum generator (*gen*) negative torque for the time harmonic of h th order are

$$T_{eh\max}^{mot} = \frac{1}{\omega_{msh}} \frac{q_1 V_{shTH}^2 R'_r / |s_{h\max}|}{(R_{shTH} + R'_r / |s_{h\max}|)^2 + [h\omega_1(L_{s\ell TH} + L'_{r\ell})]^2} \quad (3.50a)$$

$$T_{eh\max}^{gen} = -\frac{1}{\omega_{msh}} \frac{q_1 V_{shTH}^2 R'_r / |s_{h\max}|}{(R_{shTH} - R'_r / |s_{h\max}|)^2 + [h\omega_1(L_{s\ell TH} + L'_{r\ell})]^2} \quad (3.50b)$$

The generator (*gen*) electrical torque reaches its absolute (*abs*) maximum, if

$$R_{shTH} = R'_r / |s_{h\max}| \quad (3.51)$$

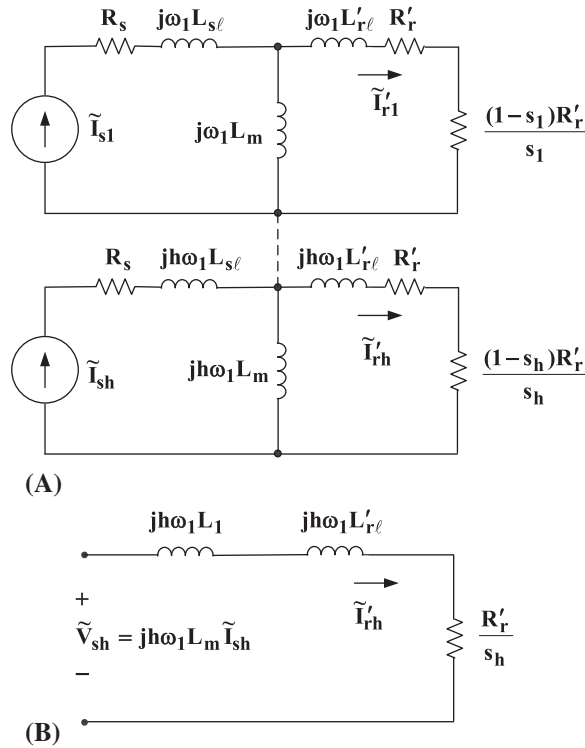


FIG. 3.39 (A) Per-phase equivalent circuit of three-phase induction machine for fundamental ($h = 1$) and h th harmonic fed by current source. (B) Equivalent circuit of three-phase induction machine for the h th harmonic taking into account the magnetizing branch.

that is,

$$T_{eh \max}^{gen \ abs} = -\frac{1}{\omega_{msh}} \frac{q_1 V_{shTH}^2 R'_r / |s_{h \max}|}{[h\omega_1 (L_{s\ell TH} + L'_{r\ell})]^2} = -\frac{(p/2)}{(h\omega_1)} \frac{q_1 V_{shTH}^2 R_{shTH}}{[h\omega_1 (L_{s\ell TH} + L'_{r\ell})]^2} \quad (3.52)$$

3.8.2 Subharmonic torques in a current-source-fed induction motor

The equivalent circuits of a current-source-fed induction motor are shown in Fig. 3.39A and B for the fundamental ($h = 1$) and for the harmonic of order h .

The torque of the h th time harmonic is, from Fig. 3.39B,

$$T_{eh} = \frac{1}{\omega_{msh}} \cdot \frac{q_1 V_{sh}^2 R'_r / s_h}{(R'_r / s_h)^2 + [h\omega_1 (L_m + L'_{r\ell})]^2} \quad (3.53)$$

where $\tilde{V}_{sh} = jh\omega_1 L_m \tilde{I}_{sh}$.

The breakdown slip is

$$s_{h \max} = \pm R'_r / [h\omega_1 (L_m + L'_{r\ell})] \quad (3.54)$$

Two application examples will be presented where an induction motor is first fed by a voltage source and then by a current source containing a forward rotating subharmonic component of 6 Hz ($h=0.1$).

3.8.3 Application Example 3.7: Computation of forward-rotating subharmonic torque in a voltage-source-fed induction motor

Terminal voltages of a three-phase induction motor contain the forward-rotating subharmonic of 6 Hz at an amplitude of $V_{0.1}=5\%$. The fundamental voltage is $V_1=240$ V and the parameters of a three-phase induction machine are as follows:

$$\begin{aligned} 240 \text{ V}/416 \text{ V}, \quad \Delta/Y \text{ connected}, \quad f = 60 \text{ Hz}, \\ n_{rated} = 1738 \text{ rpm}, \quad p = 4 \text{ poles}, \\ R_s = 7.0 \, \Omega, \quad \omega_1 L_{s\ell} = 8 \, \Omega, \quad \omega_1 L_m = 110 \, \Omega, \\ R'_r = 5 \, \Omega, \quad \omega_1 L'_{r\ell} = 7 \, \Omega \end{aligned} \quad (\text{E3.7.1})$$

Compute and plot the sum of the fundamental and subharmonic torques ($T_{e1} + T_{e0.1}$) as a function of the fundamental slip s_1 .

Solution to Application Example 3.7: Computation of forward-rotating subharmonic torque in a voltage-source-fed induction motor.

Parameters of Eqs. (3.47)–(3.54) are listed as a function of the fundamental ($h=1$) and subharmonic $h=0.1$ in Table E3.7.1. Fundamental torque values T_{e1} are listed in Table E3.7.2 as a function of the fundamental slip s_1 .

TABLE E3.7.1 Maximum torques for fundamental ($h=1$) and subharmonic ($h=0.1$) voltages, where the fundamental voltage is 100% and the subharmonic voltage is 5% of the fundamental voltage.

h	V_{shTH} (V)	$\pm S_{hmax}$ (–)	ω_{msh} (rad/s)	$T_{eh\max}^{mot}$ (Nm)	$T_{eh\max}^{gen}$ (Nm)
1	223.34	0.312	188.49	17.98	–39.89
0.1	9.62	0.820	18.849	0.696	–4.61

TABLE E3.7.2 Fundamental torque T_{e1} as a function of fundamental slip s_1 .

s_1 (–)	2.0	1.0	0.9	0.8	0.7
T_{e1} (Nm)	6.78	11.61	12.44	13.37	14.40
s_1 (–)	0.6	0.5	0.4	0.3	0.2
T_{e1} (Nm)	15.5	16.63	17.59	17.97	16.76
s_1 (–)	0.1	0.0344	0	–0.1	–0.2
T_{e1} (Nm)	11.8	4.99	0	–18.46	–34.32

The plot of the positively rotating fundamental torque characteristic $T_{e1}=f(s_1)$ is shown in Fig. E3.7.1 and the positively rotating torque $T_{e0.1}=f(s_{0.1})$ is depicted in Fig. E3.7.2, where the 6Hz voltage component has an amplitude of 5%, that is, $V_{6\text{Hz}}=0.05 \cdot V_{60\text{Hz}}=0.05(240\text{ V})=12\text{ V}$.

Subharmonic torque values $T_{e0.1}$ are listed in Table E3.7.3 as a function of the subharmonic slip $s_{0.1}$.

Using Eqs. (3.4d), (3.25) one can compute the fundamental torque T_{e1} and the subharmonic torque $T_{e0.1}$ as a function of the fundamental slip s_1 (Table E3.7.4). For example a subharmonic ($h=0.1$) slip of $s_{0.1}=1$ corresponds to a fundamental slip of (see Eqs. 3.31b, 3.32, and Table E3.7.3)

$$s_1 = (0.1)(s_{0.1}) + 0.9 = 1.0 \quad (\text{E3.7.2})$$

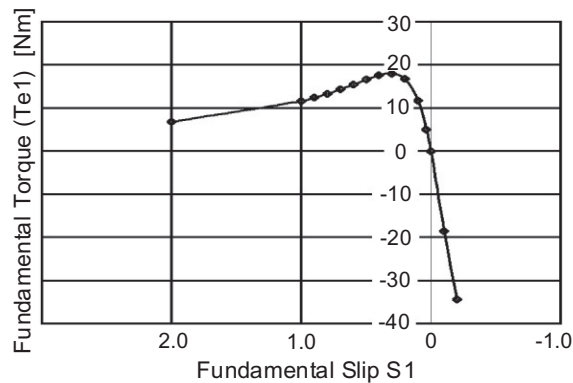
The plot of fundamental and subharmonic torque values ($T_{e1}+T_{e0.1}$) as a function of fundamental slip (s_1) is shown in Fig. E3.7.3.

TABLE E3.7.3 Subharmonic torque $T_{e0.1}$ as a function of subharmonic slip $s_{0.1}$.

$s_{0.1}$ (–)	1.0	0.9	0.82	0.8	0.7	0.6
s_1 (–)	1.0	0.99	0.982	0.98	0.97	0.96
$T_{e0.1}$ (Nm)	0.687	0.693	0.696	0.695	0.69	0.676
$s_{0.1}$ (–)	0.5	0.4	0.3	0.2	0.1	0
s_1 (–)	0.95	0.94	0.93	0.92	0.91	0.9
$T_{e0.1}$ (Nm)	0.648	0.602	0.528	0.415	0.247	0
$s_{0.1}$ (–)	–0.1	–0.2	–0.3	–0.4	–0.5	–0.6
s_1 (–)	0.89	0.88	0.87	0.86	0.85	0.84
$T_{e0.1}$ (Nm)	–0.353	–0.842	–1.488	–2.28	–3.12	–3.88
$s_{0.1}$ (–)	–0.7	–0.8	–0.82	–0.9	–1	–1.1
s_1 (–)	0.83	0.82	0.818	0.81	0.8	0.79
$T_{e0.1}$ (Nm)	–4.40	–4.60	–4.61	–4.53	–4.29	–3.95
$s_{0.1}$ (–)	–1.2	–1.3	–1.4	–1.5	–1.6	–1.7
s_1 (–)	0.78	0.77	0.76	0.75	0.74	0.73
$T_{e0.1}$ (Nm)	–3.60	–3.26	–2.96	–2.68	–2.45	–2.24
$s_{0.1}$ (–)	–2.0	–3.0	–4.0	–5.0	–6.0	–7.0
s_1 (–)	0.70	0.60	0.50	0.40	0.30	0.20
$T_{e0.1}$ (Nm)	–1.76	–0.98	–0.67	–0.51	–0.40	–0.34
$s_{0.1}$ (–)	–8.0	–9.0	–10.0	–11.0	–12.0	–13.0
s_1 (–)	0.1	0	–0.1	–0.20	–0.30	–0.40
$T_{e0.1}$ (Nm)	–0.29	–0.25	–0.22	–0.20	–0.18	–0.17

TABLE E3.7.4 Fundamental and subharmonic torque ($T_{e1} + T_{e0.1}$) as a function of fundamental slip s_1 .

s_1 (—)	1.0	0.99	0.982	0.98	0.97	0.96
T_{e1} (Nm)	11.61	11.69	11.75	11.77	11.85	11.93
$T_{e1} + T_{e0.1}$ (Nm)	12.30	12.38	12.45	12.46	12.54	12.60
s_1 (—)	0.95	0.94	0.93	0.92	0.91	0.9
T_{e1} (Nm)	12.01	12.10	12.18	12.27	12.35	12.44
$T_{e1} + T_{e0.1}$ (Nm)	12.66	12.70	12.71	12.68	12.60	12.44
s_1 (—)	0.89	0.88	0.87	0.86	0.85	0.83
T_{e1} (Nm)	12.53	12.62	12.71	12.80	12.89	13.08
$T_{e1} + T_{e0.1}$ (Nm)	12.18	11.78	11.22	10.52	9.77	8.68
s_1 (—)	0.82	0.818	0.81	0.8	0.79	0.78
T_{e1} (Nm)	13.18	13.19	13.27	13.37	13.47	13.57
$T_{e1} + T_{e0.1}$ (Nm)	8.58	8.58	8.74	9.08	9.52	9.97
s_1 (—)	0.77	0.76	0.75	0.74	0.73	0.70
T_{e1} (Nm)	13.67	13.77	13.87	13.97	14.08	14.40
$T_{e1} + T_{e0.1}$ (Nm)	10.41	10.81	11.19	11.52	11.84	12.64
s_1 (—)	0.60	0.50	0.40	0.30	0.20	0.10
T_{e1} (Nm)	15.50	16.63	17.59	17.97	16.76	11.80
$T_{e1} + T_{e0.1}$ (Nm)	14.52	15.96	17.08	17.57	16.42	11.51
s_1 (—)	0	-0.10	-0.20	-0.30	-0.40	0
T_{e1} (Nm)	0	-18.46	-34.32	-39.84	-38.01	0
$T_{e1} + T_{e0.1}$ (Nm)	-0.25	-18.68	-34.52	-40.02	-38.19	0

**FIG. E3.7.1** Fundamental torque T_{e1} as a function of fundamental slip s_1 .

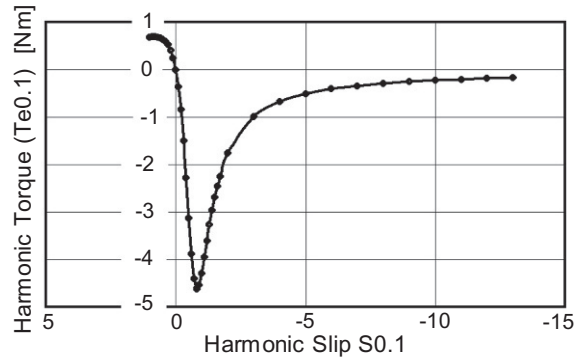


FIG. E3.7.2 Subharmonic torque $T_{e0.1}$ as a function of subharmonic slip $s_{0.1}$.

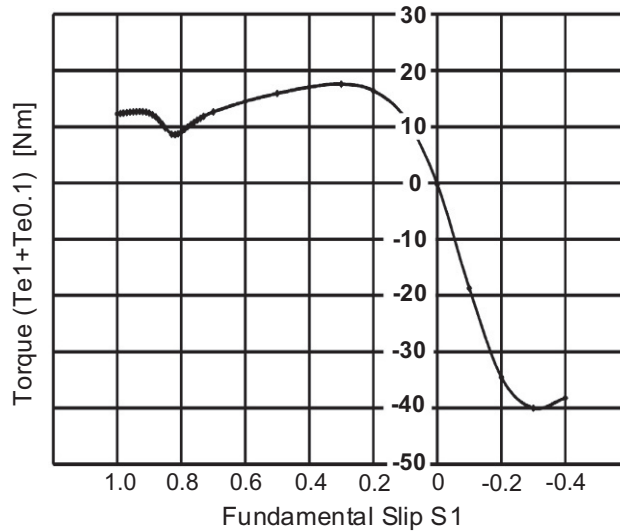


FIG. E3.7.3 Fundamental and subharmonic torque $(T_{e1} + T_{e0.1})$ as a function of fundamental slip s_1 .

3.8.4 Application Example 3.8: Rationale for limiting harmonic torques in an induction machine

Based on results of the previous application example, explain why low-frequency subharmonic voltages at the terminal of induction machines should be limited.

Solution to Application Example 3.8 : Rationale for limiting harmonic torques in an induction machine.

For subharmonic slip $s_{0.1} = 1.0$ one obtains with Eq. (E3.7.2) the fundamental slip $s_1 = 1.0$. Correspondingly for subharmonic slip $s_{0.1} = 0.82$ one obtains $s_1 = 0.982$, and for subharmonic slip $s_{0.1} = -0.82$ one obtains $s_1 = 0.818$ (see Table E3.7.3).

One notes that the subharmonic torque at 6 Hz ($h = 0.1$) is relatively large in the generator region ($T_{e0.1} = -4.61$ Nm). If the worst case is considered as defined by Eq. 3.52 the corresponding low-frequency harmonic torque is even larger. This is the reason why the low-frequency harmonic voltages should be limited to less than a few percent (e.g., 2%) of rated voltage.

3.8.5 Application Example 3.9: Computation of forward-rotating subharmonic torque in current-source-fed induction motor

Terminal currents of a three-phase induction motor contain a forward-rotating subharmonic of 6 Hz at an amplitude $I_{0.1} = 5\%$ of the fundamental $I_1 = 1.73$ A. The parameters of a three-phase induction machine are as follows:

$$\begin{aligned} 3 \text{ A}/1.73 \text{ A}, \quad \Delta/Y \text{ connected}, \quad f = 60 \text{ Hz}, \\ n_{rated} = 1773 \text{ rpm}, \quad p = 4 \text{ poles}, \\ R_s = 7.0 \, \Omega, \quad \omega_1 L_{s\ell} = 5 \, \Omega, \quad \omega_1 L_m = 110 \, \Omega, \\ R'_r = 5 \, \Omega, \quad \omega_1 L'_{r\ell} = 4 \, \Omega \end{aligned} \quad (\text{E3.9.1})$$

Compute the fundamental torque (T_{e1}) as a function of the fundamental slip (s_1) and subharmonic torque ($T_{e0.1}$) as a function of the subharmonic slip ($s_{0.1}$).

Solution to Application Example 3.9: Computation of forward-rotating subharmonic torque in current-source-fed induction motor.

The parameters of Eqs. (3.53), (3.54) and the simplified circuit the 16 differential equation are listed in Tables E3.9.1–E3.9.3 as a function of the fundamental $h = 1$ and the subharmonic $h = 0.1$.

One notes that the low-frequency harmonic torques at 6 Hz and 5% harmonic current amplitudes are very small (about 0.0063 Nm).

TABLE E3.9.1 Maximum torques for fundamental and subharmonic currents, where the fundamental current is 1.73 A and the subharmonic current is 5% of the fundamental current.

h	$ \tilde{V}_{sh} \text{ (V)}$	$\pm s_{h\max} \text{ (—)}$	$\omega_{msh} \text{ (rad/s)}$	$T_{eh\max}^{mot} \text{ (Nm)}$	$T_{eh\max}^{gen} \text{ (Nm)}$
1	190.3	0.044	188.49	2.53	−2.35
0.1	0.952	0.439	18.849	0.0063	−0.0063

TABLE E3.9.2 Torque as a function of slip s_1 for fundamental ($h = 1$) currents.

$s_1 \text{ (—)}$	1.0	0.9	0.8	0.7	0.6
$T_{e1} \text{ (Nm)}$	0.221	0.246	0.276	0.316	0.368
$s_1 \text{ (—)}$	0.5	0.4	0.3	0.2	0.1
$T_{e1} \text{ (Nm)}$	0.440	0.548	0.724	1.058	1.860

TABLE E3.9.3 Torque as a function of slip $s_{0.1}$ for subharmonic ($h = 0.1$) currents of 5% of the fundamental current.

$s_{0.1}$ (—)	1.0	0.9	0.8	0.7	0.6
$T_{e0.1}$ (Nm)	0.0047	0.0050	0.0053	0.0057	0.0060
$s_{0.1}$ (—)	0.5	0.4	0.3	0.2	0.1
$T_{e0.1}$ (Nm)	0.0063	0.0063	0.0059	0.0048	0.0027

3.9 Interaction of space and time harmonics of three-phase induction machines

For mmfs with a fundamental and a spatial harmonic of order H one obtains

$$\begin{aligned} F_a &= \{A_1 \cos \theta + A_H \cos H\theta\}i_a(t) \\ F_b &= \{A_1 \cos (\theta - 120^\circ) + A_H \cos H(\theta - 120^\circ)\}i_b(t) \\ F_c &= \{A_1 \cos (\theta - 240^\circ) + A_H \cos H(\theta - 240^\circ)\}i_c(t) \end{aligned} \quad (3.55)$$

where the currents consist of a fundamental and a time harmonic of order h :

$$\begin{aligned} i_a(t) &= \{I_{m1} \cos \theta + I_{mh} \cos (h\omega_1 t)\} \\ i_b(t) &= \{I_{m1} \cos (\theta - 120^\circ) + I_{mh} \cos (h\omega_1 t - 120^\circ)\} \\ i_c(t) &= \{I_{m1} \cos (\theta - 240^\circ) + I_{mh} \cos (h\omega_1 t - 240^\circ)\} \end{aligned} \quad (3.56)$$

In Eq. (3.55), A_1 , A_H , θ , and H are fundamental mmf amplitude, harmonic mmf amplitude, mechanical (space) angular displacement, and spatial harmonic order, respectively. In Eq. (3.56), I_{m1} , I_{mh} , ω_1 , and h are fundamental current amplitude, harmonic current amplitude, electrical angular velocity, and (time) harmonic order, respectively. The total mmf becomes $F_{total} = F_a + F_b + F_c$

$$\begin{aligned} F_{total} &= \frac{3A_1 I_{m1}}{2} \cos (\theta - \omega_1 t) + \frac{3A_1 I_{mh}}{2} \cos (\theta - h\omega_1 t) + \frac{A_H I_{m1}}{2} \left\{ \cos (H\theta - \omega_1 t) \right. \\ &\quad \left. + \cos [H\theta + (1 - H)120^\circ - \omega_1 t] + \cos [H\theta - (1 - H)120^\circ - \omega_1 t] \right\} \\ &\quad + \frac{A_H I_{m1}}{2} \left\{ \cos (H\theta + \omega_1 t) + \cos [H\theta - (1 + H)120^\circ + \omega_1 t] \right. \\ &\quad \left. + \cos [H\theta + (1 + H)120^\circ + \omega_1 t] \right\} + \frac{A_H I_{m1}}{2} \left\{ \cos (H\theta - h\omega_1 t) \right. \\ &\quad \left. + \cos [H\theta + (1 - H)120^\circ - h\omega_1 t] + \cos [H\theta - (1 - H)120^\circ - \omega_1 t] \right\} \\ &\quad + \frac{A_H I_{mh}}{2} \left\{ \cos (H\theta + h\omega_1 t) + \cos [H\theta - (1 + H)120^\circ + h\omega_1 t] \right. \\ &\quad \left. + \cos [H\theta + (1 + H)120^\circ + h\omega_1 t] \right\} \end{aligned} \quad (3.57)$$

The evaluation of Eq. (3.57) depends on the amplitudes A_1 , A_H , I_{m1} , and I_{mh} as well as on the harmonic orders h and H .

3.9.1 Application Example 3.10: Computation of rotating mmf with time and space harmonics

Compute the mmf and its angular velocities for an induction machine with the following time and space harmonics:

- (a) $A_1 = 1$ pu, $A_H = 0.05$ pu, $I_{m1} = 1$ pu, $I_{mh} = 0.05$ pu, $H = 5$, and $h = 5$.
 (b) $A_1 = 1$ pu, $A_H = 0.05$ pu, $I_{m1} = 1$ pu, $I_{mh} = 0.05$ pu, $H = 13$, and $h = 0.5$.

Solution to Application Example 3.10 : Computation of rotating mmf with time and space harmonics.

- (a) For $A_1 = 1$ pu, $A_H = 0.05$ pu, $I_{m1} = 1$ pu, $I_{mh} = 0.05$ pu, $H = 5$, and $h = 5$ one obtains the rotating mmf as

$$F_{total} = 1.5\cos(\theta - \omega_1 t) + 0.075\cos(\theta - 5\omega_1 t) + 0.075\cos(5\theta + \omega_1 t) + 0.00375\cos(5\theta - 5\omega_1 t)$$

with the angular velocities

$$\frac{d\theta_{h=1}}{dt} = \omega_1, \quad \frac{d\theta_{h=5}}{dt} = 5\omega_1, \quad \frac{d\theta_{H=5}}{dt} = -\omega_1/5, \quad \frac{d\theta_{H=5,h=5}}{dt} = \omega_1 \quad (\text{E3.10.1})$$

- (b) For $A_1 = 1$ pu, $A_H = 0.05$ pu, $I_{m1} = 1$ pu, $I_{mh} = 0.05$ pu, $H = 13$, and $h = 0.5$ one obtains the rotating mmf as

$$F_{total} = 1.5\cos(\theta - \omega_1 t) + 0.075\cos(\theta - 0.5\omega_1 t) + 0.075\cos(13\theta - \omega_1 t) + 0.0035\cos(13\theta - 0.5\omega_1 t)$$

with the angular velocities

$$\frac{d\theta_{h=1}}{dt} = \omega_1, \quad \frac{d\theta_{h=0.5}}{dt} = 0.5\omega_1, \quad \frac{d\theta_{H=13}}{dt} = \omega_1/13, \quad \frac{d\theta_{H=13,h=0.5}}{dt} = \omega_1/26 \quad (\text{E3.10.2})$$

3.9.2 Application Example 3.11: Computation of rotating mmf with even space harmonics

Nonideal induction machines may generate even space harmonics. For $A_1 = 1$ pu, $A_H = 0.05$ pu, $I_{m1} = 1$ pu, $I_{mh} = 0.05$ pu, $H = 12$, and $h = 0.1$, compute the resulting rotating mmf and its angular velocities.

Solution to Application Example 3.11 : Computation of rotating mmf with even space harmonics.

$$F_{total} = 1.5\cos(\theta - \omega_1 t) + 0.075\cos(\theta - 0.1\omega_1 t)$$

with the angular velocities

$$\frac{d\theta_{h=1}}{dt} = \omega_1, \quad \frac{d\theta_{h=0.1}}{dt} = 0.1\omega_1 \quad (\text{E3.11.1})$$

3.9.3 Application Example 3.12: Computation of rotating mmf with noninteger space harmonics

Nonideal induction machines may generate noninteger space harmonics. For $A_1 = 1$ pu, $A_H = 0.05$ pu, $I_{m1} = 1$ pu, $I_{mh} = 0.05$ pu, $H = 13.5$, and $h = 0.1$, compute the resulting rotating mmf and its angular velocities.

Solution to Application Example 3.12 : Computation of rotating mmf with noninteger space harmonics.

$$\begin{aligned}
 F_{\text{total}} = & 1.5 \cos(\theta - \omega_1 t) + 0.75 \cos(\theta - 0.1 \omega_1 t) \\
 & + 0.025 \{ \cos(13.5\theta - \omega_1 t) + \cos(13.5\theta - 60^\circ - \omega_1 t) + \cos(13.5\theta + 60^\circ - \omega_1 t) \} \\
 & + 0.025 \{ \cos(13.5\theta + \omega_1 t) + \cos(13.5\theta + 60^\circ + \omega_1 t) + \cos(13.5\theta - 60^\circ + \omega_1 t) \} \\
 & + 0.00125 \{ \cos(13.5\theta - 0.1 \omega_1 t) + \cos(13.5\theta - 60^\circ - 0.1 \omega_1 t) + \cos(13.5\theta + 60^\circ - 0.1 \omega_1 t) \} \\
 & + 0.00125 \{ \cos(13.5\theta - 0.1 \omega_1 t) + \cos(13.5\theta + 60^\circ + 0.1 \omega_1 t) + \cos(13.5\theta - 60^\circ + 0.1 \omega_1 t) \}
 \end{aligned}$$

with the angular velocities

$$\frac{d\theta_{h=1}}{dt} = \omega_1, \quad \frac{d\theta_{h=0.1}}{dt} = 0.1\omega_1, \quad \frac{d\theta_{H=13.5}}{dt} = \pm\omega_1/13.5, \quad \frac{d\theta_{H=13.5, h=0.1}}{dt} = \pm\omega_1/135. \quad (\text{E3.12.1})$$

Application Examples 3.10–3.12 illustrate how sub- and noninteger harmonics are generated by induction machines. Such harmonics may cause the malfunctioning of protective (e.g., under-frequency) relays within a power system [42].

The calculation of the asynchronous torques due to harmonics and inter- and subharmonics is based on the equivalent circuit without taking into account the variation of the differential leakage as a function of the numbers of stator slots and rotor slots. It is well known that certain stator and rotor slot combinations lead to asynchronous and synchronous harmonic torques in induction machines. A more comprehensive treatment of such parasitic asynchronous and synchronous harmonic torques is presented in [30,43–69]. Speed variation of induction motors is obtained either by voltage variation with constant frequency or by variation of the voltage and the fundamental frequency using inverters as a power source. Inverters have somewhat nonsinusoidal output voltages or currents. Thus parasitic effects like additional losses, dips in the torque-speed curve, output power derating, magnetic noise, oscillating torques, and harmonic line currents are generated. It has already been shown [43–45] that the multiple armature reaction has to be taken into account if effects caused by delta-connection of the stator windings, parallel winding branches, stator current harmonics, or damping of the air-gap field are to be considered. Moreover, the influence of the slot openings [46] and interbar currents [30,47,48,68] in case of slot skewing is important. Compared with conventional methods [25,30,68] the consideration of multiple armature reactions requires additional work consisting of the solution of a system of equations of the order from 14 to 30 for a three-phase induction machine and the summation of the air-gap inductances. The presented theory [69] is based on Fourier analysis and does not employ any transformation. As an alternative to the analytical method described [69] two-dimensional numerical methods (e.g., finite-element method) with time stepping procedures are available [49–51]. These have the advantages of analyzing

transients, variable permeability, and eddy currents in solid iron parts, but have the disadvantages of grid generation, discretization errors, and preparatory work and require large computing CPU time.

3.10 Conclusions concerning induction machine harmonics

One can draw the following conclusions:

- Three-phase induction machines can generate asynchronous as well as synchronous torques depending on their construction (e.g., number of stator and rotor slots) and the harmonic content of their power supplies [25–69].
- The relations between harmonic slip s_h and the harmonic slip referred to the fundamental slip $s_h^{(1)}$ are the same for forward- and backward-rotating harmonic fields.
- Harmonic torques T_{eh} (where $h = \text{integer}$) are usually very small compared to the rated torque T_{e1} .
- Low-frequency and subharmonic torques ($0 \leq h \leq 1$) can be quite large even for small low-frequency and subharmonic voltage amplitudes (e.g., 5% of fundamental voltage). These low-frequency or subharmonics may occur in the power system or at the output terminals of voltage-source inverters (VSIs).
- Low-frequency and subharmonic torques ($0 \leq h \leq 1$) are small even for large low-frequency harmonic current amplitudes (e.g., 5% of fundamental current) as provided by current sources.
- Refs. [25,28,39–41] address the heating of induction machines due to low-frequency and subharmonics, and Ref. [42] discusses the influence of inter- and subharmonics on under-frequency relays, where the zero crossing of the voltage is used to sense the frequency. Because of these negative influences the low-frequency, inter- and subharmonic voltage amplitudes generated in the power system due to inter- and subharmonic currents must be limited to below 0.1% of the rated voltage.
- Time and spatial harmonic voltages or currents may generate sufficiently large mmfs to cause significant harmonic torques near zero speed.
- The interaction of time and space harmonics generates sufficiently small mmfs so that start-up of an induction motor will not be affected.

3.11 Voltage-stress winding failures of AC motors fed by variable-frequency, voltage- and current-source PWM inverters

Motor winding failures have long been a perplexing problem for electrical engineers. There are a variety of different causes for motor failure: heat, vibration, contamination, defects, and voltage stress. Most of these are understood and can be controlled to some degree by procedure and/or design. Voltage (stress) transients, however, have taken on a new dimension with the development of variable-frequency converters (VFCs), which appear to be more intense than voltage stress on the motor windings caused by motor switching or lightning. This

section will use induction motors as the baseline for explaining this phenomenon. However, it applies to transformers and synchronous machines as well.

Control and efficiency advantages of variable-frequency drives (VFDs) based on power electronic CSIs or VSIs lead to their prolific employment in utility power systems. The currents and voltages of inverters are not ideally sinusoidal but have small current ripples that flow in cables, transformers, and motor or generator windings. As a result of cable capacitances and parasitic capacitances this may lead to relatively large voltage spikes (see Application Example 3.14). Most short circuits are caused by a breakdown of the insulation and thus are initiated by excessive voltage stress over some period of time. This phenomenon must be analyzed using traveling wave theory because the largest voltage stress does not necessarily appear at the input terminal but can occur because of the backward (reflected) traveling wave somewhere between the input and output terminals. An analysis of this phenomenon involving pulse-width-modulated (PWM) inverters has not been done, although some engineers have identified this problem [70–74]. It is important to take into account the damping (losses) within the cables, windings, and cores because the voltage stress caused by the repetitive nature of PWM depends on the superposition of the forward- and backward-traveling waves, the local magnitudes of which are dependent on the damping impedances of the cable, winding, and core.

With improved semiconductor technology in VFDs and pulse-width modulators, the low-voltage induction motor drive has become a very viable alternative to the DC motor drive for many applications. The performance improvement, along with its relatively low cost, has made it a major part of process control equipment throughout the industry. The majority of these applications are usually under the 2kV and the 1MW range. Even with advancements in technology, the low-voltage induction motor experiences failures in the motor winding. Although there are differences between medium-voltage and high- and low-voltage induction motor applications, there are similarities between their failures.

The medium-voltage induction motor [75] experiences turn-to-turn failures when exposed to surge transients induced by switching or lightning. Most research shows that the majority of failures that occur in the last turn of the first coil prior to entering the second coil of the windings are due to (capacitor) switching transients. One might not expect to see turn-to-turn failures in small induction machines because of their relatively low voltage levels compared to their high insulation ratings, but this is not the case. Turn-to-turn failures are being experienced in all turns of the first coil of the motor.

As indicated above, most short circuits in power systems occur because of insulation failure. The breakdown of the insulation depends on the voltage stress integrated over time. Although the time component cannot be influenced, the voltage stress across a dielectric can be reduced. Some preliminary work has been done in exploring this wave-propagation phenomenon where forward- and backward-traveling waves superimpose; here, the maximum voltage stress does not necessarily occur at the terminal of a winding, but somewhere in between the two (input, output) terminals. Because of the repetitive nature of PWM pulses, the damping due to losses in the winding and iron core cannot be neglected. The work by Gupta et al. [75] and many others [70–74,76–78] neglects the damping of the traveling waves; therefore, it cannot predict the maximum voltage stress of the winding insulation. Machine,

transformer windings, and cables can be modeled by leakage inductances, resistances, and capacitances. Current-source inverters (CSIs) generate the largest voltage stress because of their inherent current spikes resulting in a large voltage $L(di/dt)$.

The current model [75] of medium-voltage induction motors is based on the transmission line theory neglecting damping effects in windings and cores: since the turns of the coil are in such close proximity to each other, they form sections of a transmission line. As a single steep front wave, or surge, travels through the coil's turns, it will encounter impedance mismatches, usually at the entrance and exit terminals of the coil, as well as at the transitions of the uniform parts (along the machine axial length) to the end winding parts. At these points of discontinuity, the wave will go through a transition, where it can be increased up to 2 per unit. With repetitive PWM pulses this is not the case: simulations have shown voltage increases to be as high as 20 times its source (rated) value due to the so-called swing effect. These increases in magnitude cause turn-to-turn failures in the windings. In dealing with medium-voltage induction motors [75], the transmission line theory neglecting any damping has been quite accurate in predicting where the failures are occurring for a single-current surge. This is not the case with low- and high-voltage induction motors fed by VFDs.

Existing theoretical results can be summarized as follows:

- The existing model [75–78] based on transmission line theory neglects the damping in the winding and iron core and, therefore, is not suitable for repetitive PWM switching simulation where the swing effect (cumulative increase of voltage magnitudes because of repetitive switching such that a reinforcement occurs due to positive feedback caused by winding parameter discontinuities) becomes important.
- A new equivalent circuit of induction motors based on a modified transmission line theory employing resistances, coupling capacitances, and inductances including the feeding cable has been developed, as is demonstrated in the following examples.
- The case of lossless transmission line segments modeling one entire phase of an induction motor with a single-current pulse for input agrees with the findings of the EPRI study [75] and other publications [76–78].
- Forward- and backward-traveling waves superimpose and generate different voltage stresses in coils. Voltage stresses will be different at different locations in the winding.
- Voltage stress appears to be dependent on PWM switching frequency, duty cycle, and motor parameters.
- Voltage stress is also dependent on the wave shape of the voltage/current surge. The wave shape is characterized by the rise, fall, and duration times as well as switching frequency.
- CSIs produce larger voltage stress than VSIs.
- Filters intended to reduce transient voltage damage to a motor may not be able to cover the entire frequency range of the inverter for a VFD.
- Increases in voltage magnitude cause turn-to-turn and coil-to-frame failures in the windings.
- Increasing insulation at certain portions of a turn will help.
- Motor winding parameters are somewhat nonuniform due to the deep motor slots. Inductance and capacitance change along the coil (e.g., the end and slot regions of the coil).

3.11.1 Application Example 3.13: Calculation of winding stress due to PMW voltage-source inverters

Voltage and current ripples due to PWM inverters cause voltage stress in windings of machines and transformers. The configuration of Fig. E3.13.1 represents a simple winding with two turns consisting of eight segments. Each segment can be represented by an inductance L_i , a resistance R_i , and a capacitance to ground (frame) C_i , and there are four interturn capacitances C_{ij} and inductances L_{ij} , that is C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , and L_{48} . Fig. E3.13.2 represents a detailed equivalent circuit for the configuration of Fig. E3.13.1.

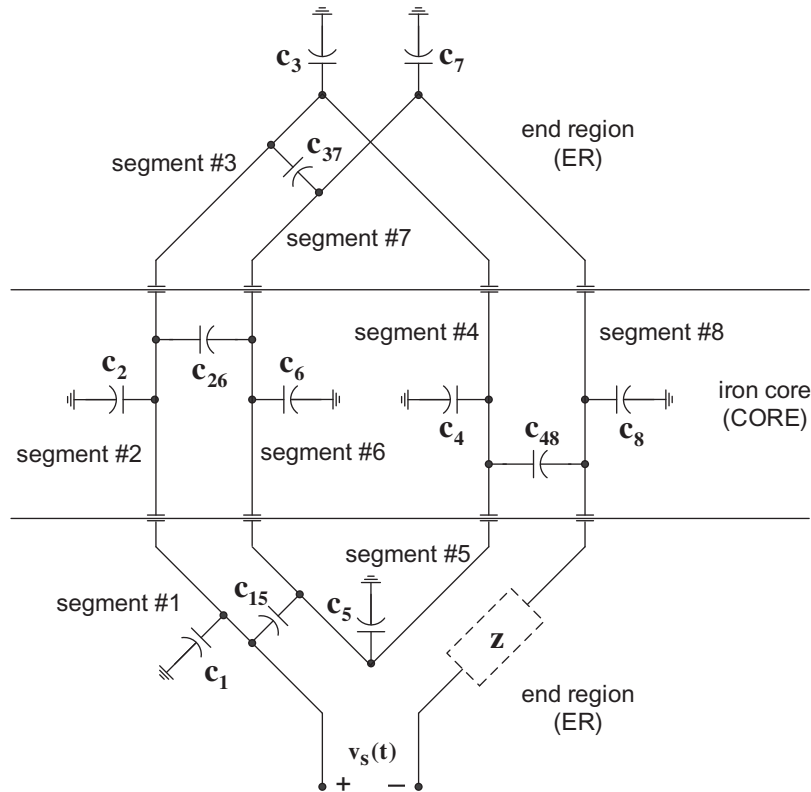


FIG. E3.13.1 Winding consisting of two turns, and each turn consists of four segments.

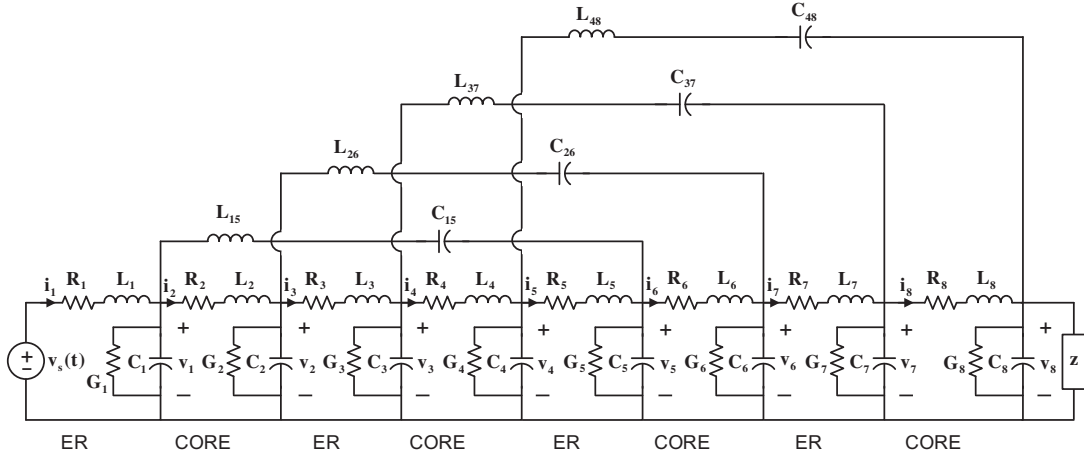


FIG. E3.13.2 Detailed equivalent circuit of Fig. E3.13.1.

a) To simplify the analysis neglect the capacitances C_{ij} and the inductances L_{ij} (C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , and L_{48}) which are assumed to be very small. This leads to the simplified circuit of Fig. E3.13.3, where the winding is fed by a PWM voltage source (see Fig. E3.13.4). One obtains for the simplified circuit the 16 differential equations (Eqs. E3.13.1a, E3.13.1b–E3.13.8a, E3.13.8b) as listed below.

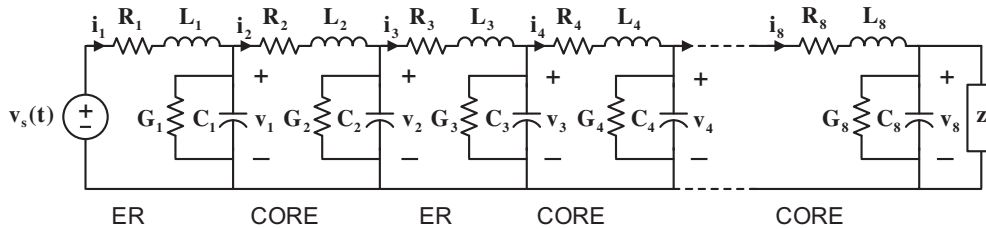


FIG. E3.13.3 Simplified equivalent circuit of Fig. E3.13.2.

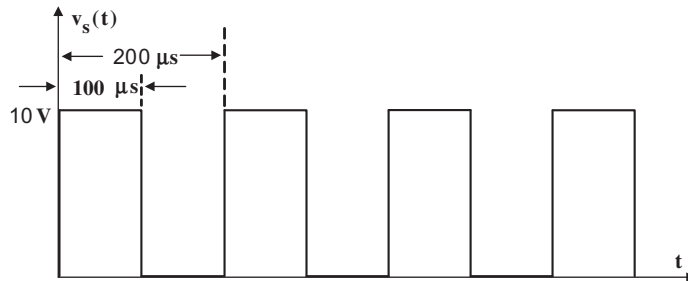


FIG. E3.13.4 PWM voltage source $v_s(t)$.

$$\frac{di_1}{dt} = -\frac{R_1}{L_1}i_1 - \frac{v_1}{L_1} + \frac{v_s(t)}{L_1} \quad (\text{E3.13.1a})$$

$$\frac{dv_1}{dt} = \frac{i_1}{C_1} - \frac{G_1}{C_1}v_1 - \frac{i_2}{C_1} \quad (\text{E3.13.1b})$$

$$\frac{di_2}{dt} = -\frac{R_2}{L_2}i_2 - \frac{v_2}{L_2} + \frac{v_1}{L_2} \quad (\text{E3.13.2a})$$

$$\frac{dv_2}{dt} = \frac{i_2}{C_2} - \frac{G_2}{C_2}v_2 - \frac{i_3}{C_2} \quad (\text{E3.13.2b})$$

$$\frac{di_3}{dt} = -\frac{R_3}{L_3}i_3 - \frac{v_3}{L_3} + \frac{v_2}{L_3} \quad (\text{E3.13.3a})$$

$$\frac{dv_3}{dt} = \frac{i_3}{C_3} - \frac{G_3}{C_3}v_3 - \frac{i_4}{C_3} \quad (\text{E3.13.3b})$$

$$\frac{di_4}{dt} = -\frac{R_4}{L_4}i_4 - \frac{v_4}{L_4} + \frac{v_3}{L_4} \quad (\text{E3.13.4a})$$

$$\frac{dv_4}{dt} = \frac{i_4}{C_4} - \frac{G_4}{C_4}v_4 - \frac{i_5}{C_4} \quad (\text{E3.13.4b})$$

$$\frac{di_5}{dt} = -\frac{R_5}{L_5}i_5 - \frac{v_5}{L_5} + \frac{v_4}{L_5} \quad (\text{E3.13.5a})$$

$$\frac{dv_5}{dt} = \frac{i_5}{C_5} - \frac{G_5}{C_5}v_5 - \frac{i_6}{C_5} \quad (\text{E3.13.5b})$$

$$\frac{di_6}{dt} = -\frac{R_6}{L_6}i_6 - \frac{v_6}{L_6} + \frac{v_5}{L_6} \quad (\text{E3.13.6a})$$

$$\frac{dv_6}{dt} = \frac{i_6}{C_6} - \frac{G_6}{C_6}v_6 - \frac{i_7}{C_6} \quad (\text{E3.13.6b})$$

$$\frac{di_7}{dt} = -\frac{R_7}{L_7}i_7 - \frac{v_7}{L_7} + \frac{v_6}{L_7} \quad (\text{E3.13.7a})$$

$$\frac{dv_7}{dt} = \frac{i_7}{C_7} - \frac{G_7}{C_7}v_7 - \frac{i_8}{C_7} \quad (\text{E3.13.7b})$$

$$\frac{di_8}{dt} = -\frac{R_8}{L_8}i_8 - \frac{v_8}{L_8} + \frac{v_7}{L_8} \quad (\text{E3.13.8a})$$

$$\frac{dv_8}{dt} = \frac{i_8}{C_8} - v_8 \left(\frac{1}{Z \cdot C_8} + \frac{G_8}{C_8} \right) \quad (\text{E3.13.8b})$$

The parameters are

$$\begin{aligned} R_1 &= R_2 = R_3 = R_4 = R_5 = R_6 = R_7 = R_8 = 25 \mu\Omega; \\ L_1 &= L_3 = L_5 = L_7 = 1 \text{ mH}, L_2 = L_4 = L_6 = L_8 = 10 \text{ mH}; \\ C_1 &= C_3 = C_5 = C_7 = 0.7 \text{ pF}, C_2 = C_4 = C_6 = C_8 = 7 \text{ pF}; \\ C_{15} &= C_{37} = 0.35 \text{ pF}, C_{26} = C_{48} = 3.5 \text{ pF}; \\ G_1 &= G_3 = G_5 = G_7 = 1/(5000 \Omega), G_2 = G_4 = G_6 = G_8 = 1/(500 \Omega); \\ L_{15} &= L_{37} = 0.005 \text{ mH}, L_{26} = L_{48} = 0.01 \text{ mH}. \end{aligned}$$

Z is either $1 \mu\Omega$ (short circuit) or $1 \text{ M}\Omega$ (open circuit). As input, assume the PWM voltage-step function $v_s(t)$ (illustrated in Fig. E3.13.4).

Using Mathematica or MATLAB compute all state variables for the time period from $t = t_{\text{calculate}} = 0$ to 2.1 ms. Note that $t_{\text{calculate}}$ must be larger than t_{plot} . Plot the voltages $(v_s - v_1)$, $(v_1 - v_5)$, $(v_2 - v_6)$, $(v_3 - v_7)$, and $(v_4 - v_8)$.

- b) For the detailed equivalent circuit of Fig. E3.13.2 establish all differential equations in a similar manner as has been done in part a. As input, assume a PWM voltage-step function $v_s(t)$ (illustrated in Fig. E3.13.4).

Using Mathematica or MATLAB compute all state variables for the time period from $t = t_{\text{calculate}} = 0$ to 2.1 ms. Note that $t_{\text{calculate}}$ must be larger than t_{plot} . Plot the voltages $(v_s - v_1)$, $(v_1 - v_5)$, $(v_2 - v_6)$, $(v_3 - v_7)$, and $(v_4 - v_8)$ as in part a.

Solution to Application Example 3.13 : Calculation of winding stress due to PMW voltage-source inverters.

Solution #1 (Based on Mathematica)

- (a) Program list for short circuit with $Z = 10^{-6} \Omega$ is presented in Table E3.13.1 and the corresponding plots are shown in Figs. E3.13.5–E3.13.10. Note that the computing time $t = t_{\text{calculate}} = 2.1$ ms must be larger than the plot time $t = t_{\text{plot}} = 2$ ms. All calculation statements must be on one line and terminated with a semicolon (;).

Program list for open circuit with $Z = 10^6 \Omega$ is presented in Table E3.13.2 and the corresponding plots are shown in Figs. E3.13.11–E3.13.15 with very small C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48} values. Note that the computing time $t = t_{\text{calculate}} = 2.1$ ms must be larger than the plot time $t = t_{\text{plot}} = 2$ ms. All calculation statements must be on one line and terminated with a semicolon (;).

TABLE E3.13.1 Mathematica program list for Application Example 3.13 (part a) for short circuit with $Z = 10^{-6} \Omega$ with very small C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48} values.

```
Hval=10.01;
Lval=0;
period=200*10^-6;
duty=0.5;
Vs[t_]:=If[Mod[t, period]<duty*period, Hval,Lval];
Plot[Vs[t],{t,0,0.001},PlotRange->All,AxesLabel->{"t(s)","Vs(t)"}]
R1=25*10^-6;
```

Continued

TABLE E3.13.1 Mathematica program list for Application Example 3.13 (part a) for short circuit with $Z = 10^{-6} \Omega$ with very small C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48} values—Cont'd

```

R2=25*10^-6;
R3=25*10^-6;
R4=25*10^-6;
R5=25*10^-6;
R6=25*10^-6;
R7=25*10^-6;
R8=25*10^-6;
L1=1*10^-3;
L3=1*10^-3;
L5=1*10^-3;
L7=1*10^-3;
L2=10*10^-3;
L4=10*10^-3;
L6=10*10^-3;
L8=10*10^-3;
L15=5*10^-6;
L37=5*10^-6;
L26=10*10^-6;
L48=10*10^-6;
C1=.7*10^-12;
C3=.7*10^-12;
C5=.7*10^-12;
C7=.7*10^-12;
C2=7*10^-12;
C4=7*10^-12;
C6=7*10^-12;
C8=7*10^-12;
C15=.35*10^-12;
C37=.35*10^-12;
C26=3.5*10^-12;
C48=3.5*10^-12;
G1=1/5000;
G3=1/5000;
G5=1/5000;
G7=1/5000;
G2=1/500;
G4=1/500;
G6=1/500;
G8=1/500;
Z=1*10^-6;
eq1=I1'[t]==-R1/L1*I1[t]-V1[t]/L1+Vs[t]/L1;
ic1=I1[0]==0;
eq2=V1'[t]==I1[t]/C1-G1/C1*V1[t]-I2[t]/C1;
ic2=V1[0]==0;
eq3=I2'[t]==-R2/L2*I2[t]-V2[t]/L2+V1[t]/L2;
ic3=I2[0]==0;
eq4=V2'[t]==I2[t]/C2-G2/C2*V2[t]-I3[t]/C2;
ic4=V2[0]==0;
eq5=I3'[t]==-R3/L3*I3[t]-V3[t]/L3+V2[t]/L3;
ic5=I3[0]==0;
eq6=V3'[t]==I3[t]/C3-G3/C3*V3[t]-I4[t]/C3;

```

TABLE E3.13.1 Mathematica program list for Application Example 3.13 (part a) for short circuit with $Z = 10^{-6} \Omega$ with very small C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48} values—Cont'd

```
ic6=V3[0]==0;
eq7=I4'[t]==-R4/L4*I4[t]-V4[t]/L4+V3[t]/L4;
ic7=I4[0]==0;
eq8=V4'[t]==I4[t]/C4-G4/C4*V4[t]-I5[t]/C4;
ic8=V4[0]==0;
eq9=I5'[t]==-R5/L5*I5[t]-V5[t]/L5+V4[t]/L5;
ic9=I5[0]==0;
eq10=V5'[t]==I5[t]/C5-G5/C5*V5[t]-I6[t]/C5;
ic10=V5[0]==0;
eq11=I6'[t]==-R6/L6*I6[t]-V6[t]/L6+V5[t]/L6;
ic11=I6[0]==0;
eq12=V6'[t]==I6[t]/C6-G6/C6*V6[t]-I7[t]/C6;
ic12=V6[0]==0;
eq13=I7'[t]==-R7/L7*I7[t]-V7[t]/L7+V6[t]/L7;
ic13=I7[0]==0;
eq14=V7'[t]==I7[t]/C7-G7/C7*V7[t]-I8[t]/C7;
ic14=V7[0]==0;
eq15=I8'[t]==-R8/L8*I8[t]-V8[t]/L8+V7[t]/L8;
ic15=I8[0]==0;
eq16=V8'[t]==I8[t]/C8-V8[t]*(1/(Z*C8)+G8/C8);
ic16=V8[0]==0;
sol1=NDSolve[{eq1,eq2,eq3,eq4, eq5,eq6,eq7,eq8,eq9,eq10,eq11,eq12,eq13,eq14,eq15,
eq16,ic1,ic2,ic3,ic4,ic5,ic6,ic7,ic8,ic9,ic10,ic11,ic12,ic13,ic14,ic15,ic16},
{I1[t],V1[t],I2[t],V2[t],I3[t],V3[t],I4[t],V4[t],I5[t],V5[t],I6[t],V6[t],I7[t],
V7[t],I8[t],V8[t]}, {t,0,0.0022},MaxSteps->100000];
Plot[Vs[t]-Evaluate[V1[t]/.sol1],{t,0,0.002},AxesLabel->{"Time", "(Vs-V1) (V)"}]
Plot[Evaluate[V1[t]/.sol1]-Evaluate[V5[t]/.sol1],{t,0,0.002},AxesLabel->{"t
(s)", "(V1-V5) (V)"}]
Plot[Evaluate[V2[t]/.sol1]-Evaluate[V6[t]/.sol1],{t,0,0.002},AxesLabel->{"t
(s)", "(V2-V6) (V)"}]
Plot[Evaluate[V3[t]/.sol1]-Evaluate[V7[t]/.sol1],{t,0,0.002},AxesLabel->{"t
(s)", "(V3-V7) (V)"}]
Plot[Evaluate[V4[t]/.sol1]-Evaluate[V8[t]/.sol1],{t,0,0.002},AxesLabel->{"t
(s)", "(V4-V8) (V)"}]
```

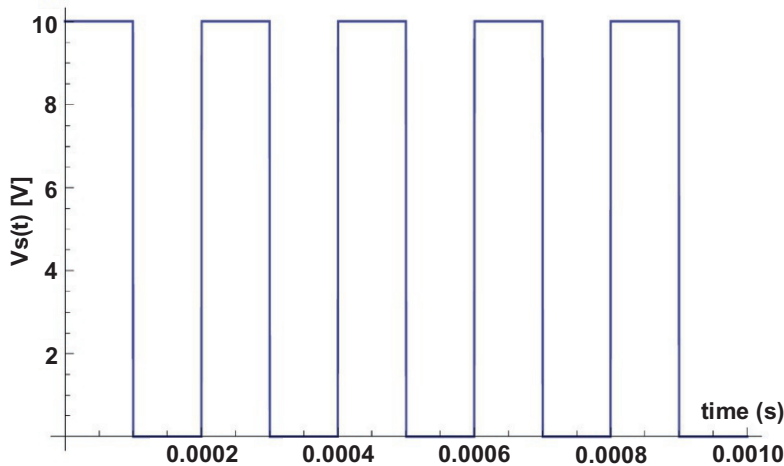


FIG. E3.13.5 PWM voltage source $v_s(t)$ at $Z = 10^{-6} \Omega$ for 1 ms.

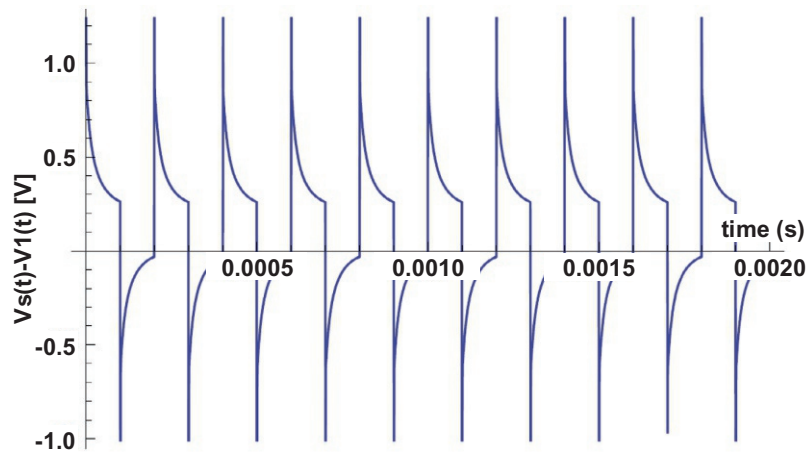


FIG. E3.13.6 Voltage $v_s(t) - v_1(t)$ at $Z = 10^{-6} \Omega$ for 2 ms.

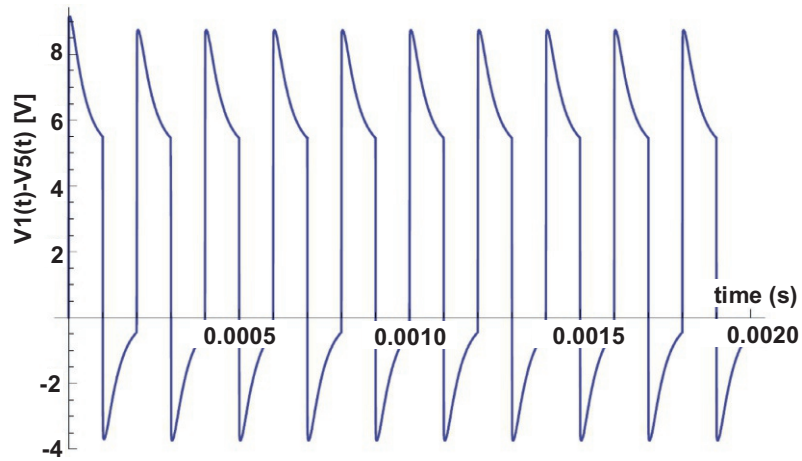


FIG. E3.13.7 Voltage $v_1(t) - v_5(t)$ at $Z = 10^{-6} \Omega$ for 2 ms.

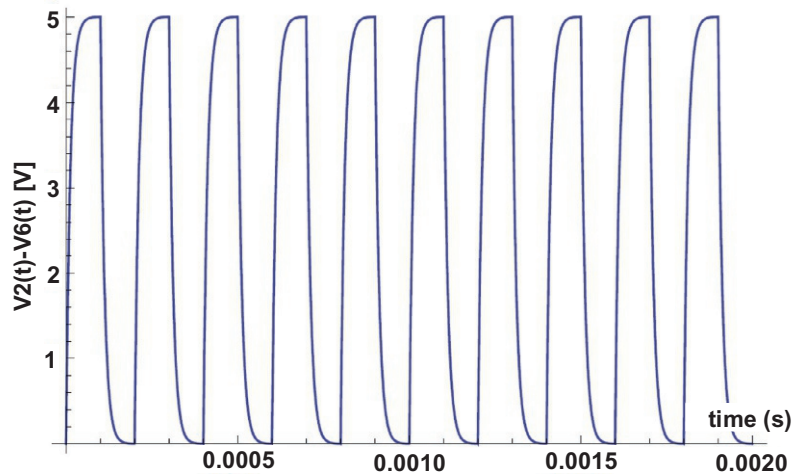


FIG. E3.13.8 Voltage $v_2(t) - v_6(t)$ at $Z = 10^{-6} \Omega$ for 2 ms.

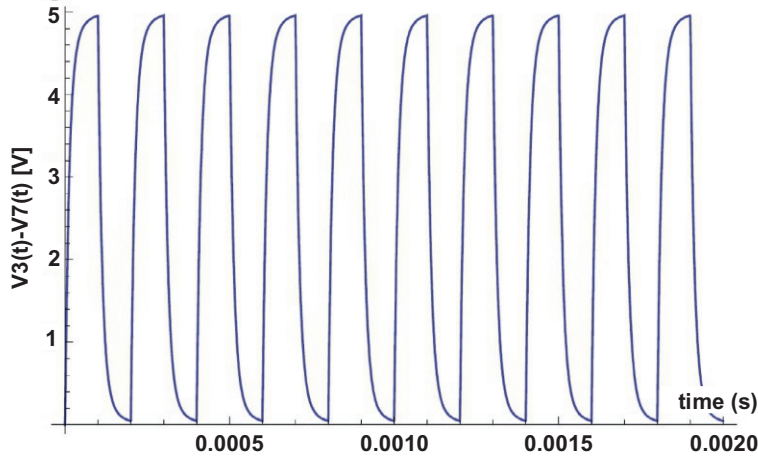


FIG. E3.13.9 Voltage $v_3(t) - v_7(t)$ at $Z = 10^{-6} \Omega$ for 2 ms.

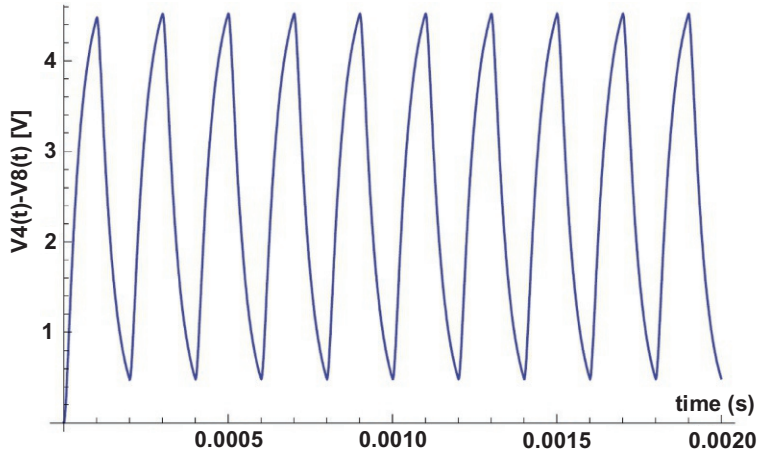


FIG. E3.13.10 Voltage $v_4(t) - v_8(t)$ at $Z = 10^{-6} \Omega$ for 2 ms.

- (b) The detailed (not neglecting C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48}) equivalent circuit (Fig. E3.13.2) generates about the same result as the simplified equivalent circuit (Fig. E3.13.3) and the results are therefore not given. Note, for this case the state-variable equations of Eqs. (E13.1)–(E13.8) are still valid for the detailed (including C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48}) equivalent circuit. However, the following four equations need to be added (assuming that the initial current through all the branches is zero):

$$\frac{di_{15}}{dt} = \frac{v_1}{L_{15}} - \frac{i_{15}}{L_{15}C_{15}} - \frac{v_5}{L_{15}} \quad (\text{E3.13.9})$$

$$\frac{di_{26}}{dt} = \frac{v_2}{L_{26}} - \frac{i_{26}}{L_{26}C_{26}} - \frac{v_6}{L_{26}} \quad (\text{E3.13.10})$$

$$\frac{di_{37}}{dt} = \frac{v_3}{L_{37}} - \frac{i_{37}}{L_{37}C_{37}} - \frac{v_7}{L_{37}} \quad (\text{E3.13.11})$$

$$\frac{di_{48}}{dt} = \frac{v_4}{L_{48}} - \frac{i_{48}}{L_{48}C_{48}} - \frac{v_8}{L_{48}} \quad (\text{E3.13.12})$$

TABLE E3.13.2 Mathematica program list for Application Example 3.13 (part a) for open- circuit with $Z = 10^6 \Omega$ with very small C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48} values.

```

Hva1=10.;
Lva1=0;
period=200*10^-6;
duty=0.5;
Vs[t_]:=If[Mod[t,period]<duty*period,Hva1,Lva1];
Plot[Vs[t],{t,0,0.001},PlotRange->All,AxesLabel->{"t(s)","Vs(t)"]}
R1=25*10^-6;
R2=25*10^-6;
R3=25*10^-6;
R4=25*10^-6;
R5=25*10^-6;
R6=25*10^-6;
R7=25*10^-6;
R8=25*10^-6;
L1=1*10^-3;
L3=1*10^-3;
L5=1*10^-3;
L7=1*10^-3;
L2=10*10^-3;
L4=10*10^-3;
L6=10*10^-3;
L8=10*10^-3;
L15=5*10^-6;
L37=5*10^-6;
L26=10*10^-6;
L48=10*10^-6;
C1=.7*10^-12;
C3=.7*10^-12;
C5=.7*10^-12;
C7=.7*10^-12;
C2=7*10^-12;
C4=7*10^-12;
C6=7*10^-12;
C8=7*10^-12;
C15=.35*10^-12;
C37=.35*10^-12;
C26=3.5*10^-12;
C48=3.5*10^-12;
G1=1/5000;
G3=1/5000;
G5=1/5000;
G7=1/5000;
G2=1/500;
G4=1/500;
G6=1/500;
G8=1/500;
Z=1*10^6;
eq1=I1'[t]==-R1/L1*I1[t]-V1[t]/L1+Vs[t]/L1;
ic1=I1[0]==0;
eq2=V1'[t]==I1[t]/C1-G1/C1*V1[t]-I2[t]/C1;

```

TABLE E3.13.2 Mathematica program list for Application Example 3.13 (part a) for open- circuit with $Z = 10^6 \Omega$ with very small C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48} values—Cont'd

```

ic2=V1[0]==0;
eq3=I2'[t]==-R2/L2*I2[t]-V2[t]/L2+V1[t]/L2;
ic3=I2[0]==0;
eq4=V2'[t]==I2[t]/C2-G2/C2*V2[t]-I3[t]/C2;
ic4=V2[0]==0;
eq5=I3'[t]==-R3/L3*I3[t]-V3[t]/L3+V2[t]/L3;
ic5=I3[0]==0;
eq6=V3'[t]==I3[t]/C3-G3/C3*V3[t]-I4[t]/C3;
ic6=V3[0]==0;
eq7=I4'[t]==-R4/L4*I4[t]-V4[t]/L4+V3[t]/L4;
ic7=I4[0]==0;
eq8=V4'[t]==I4[t]/C4-G4/C4*V4[t]-I5[t]/C4;
ic8=V4[0]==0;
eq9=I5'[t]==-R5/L5*I5[t]-V5[t]/L5+V4[t]/L5;
ic9=I5[0]==0;
eq10=V5'[t]==I5[t]/C5-G5/C5*V5[t]-I6[t]/C5;
ic10=V5[0]==0;
eq11=I6'[t]==-R6/L6*I6[t]-V6[t]/L6+V5[t]/L6;
ic11=I6[0]==0;
eq12=V6'[t]==I6[t]/C6-G6/C6*V6[t]-I7[t]/C6;
ic12=V6[0]==0;
eq13=I7'[t]==-R7/L7*I7[t]-V7[t]/L7+V6[t]/L7;
ic13=I7[0]==0;
eq14=V7'[t]==I7[t]/C7-G7/C7*V7[t]-I8[t]/C7;
ic14=V7[0]==0;
eq15=I8'[t]==-R8/L8*I8[t]-V8[t]/L8+V7[t]/L8;
ic15=I8[0]==0;
eq16=V8'[t]==I8[t]/C8-V8[t]*(1/(Z*C8)+G8/C8);
ic16=V8[0]==0;
sol1=NDSolve[{eq1,eq2,eq3,eq4,eq5,eq6,eq7,eq8,eq9,eq10, eq11,eq12,eq13,eq14,eq15,
  eq16,ic1,ic2,ic3,ic4,ic5,ic6,ic7,ic8,ic9,ic10,ic11,ic12,ic13,ic14,ic15,ic16},
  {I1[t],V1[t],I2[t],V2[t],I3[t],V3[t],I4[t],V4[t],I5[t],V5[t],I6[t],V6[t],I7[t],
  V7[t],I8[t],V8[t]},{t,0,0.0022},MaxSteps->100000];
Plot[Vs[t]-Evaluate[V1[t]/.sol1],{t,0,0.002},AxesLabel->{"Time","(Vs-V1) (V)"}]
Plot[Evaluate[V1[t]/.sol1]-Evaluate[V5[t]/.sol1],{t,0,0.002},AxesLabel->{"t
(s)","(V1-V5) (V)"}]
Plot[Evaluate[V2[t]/.sol1]-Evaluate[V6[t]/.sol1],{t,0,0.002},AxesLabel->{"t
(s)","(V2-V6) (V)"}]
Plot[Evaluate[V3[t]/.sol1]-Evaluate[V7[t]/.sol1],{t,0,0.002},AxesLabel->{"t
(s)","(V3-V7) (V)"}]
Plot[Evaluate[V4[t]/.sol1]-Evaluate[V8[t]/.sol1],{t,0,0.002},AxesLabel->{"t
(s)","(V4-V8) (V)"}]

```

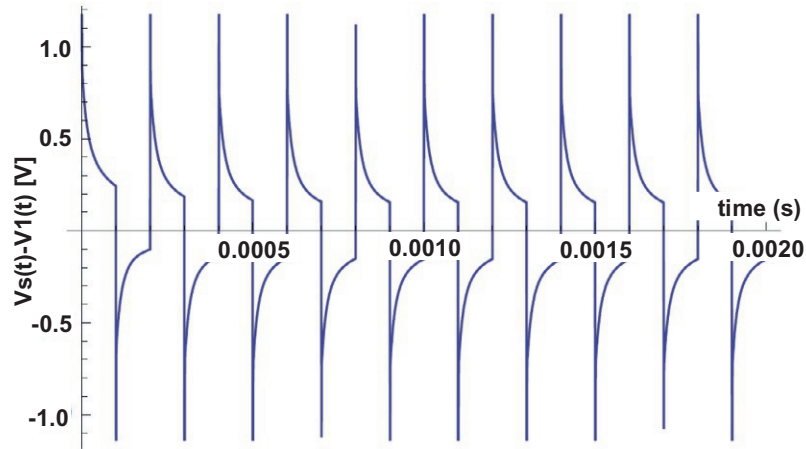


FIG. E3.13.11 Voltage $v_s(t) - v_1(t)$ at $Z = 10^6 \Omega$ for 2 ms.

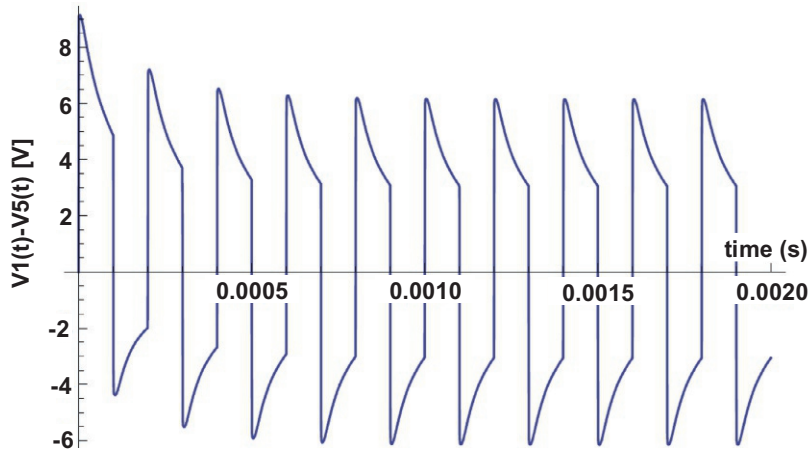


FIG. E3.13.12 Voltage $v_1(t) - v_5(t)$ at $Z = 10^6 \Omega$ for 2 ms.

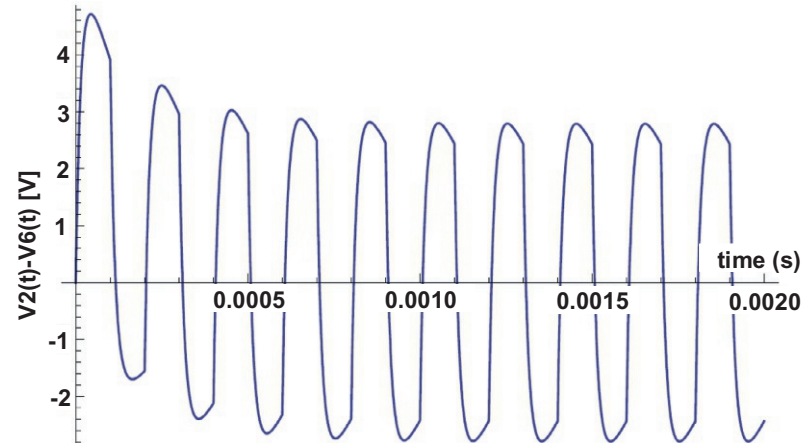


FIG. E3.13.13 Voltage $v_2(t) - v_6(t)$ at $Z = 10^6 \Omega$ for 2 ms.

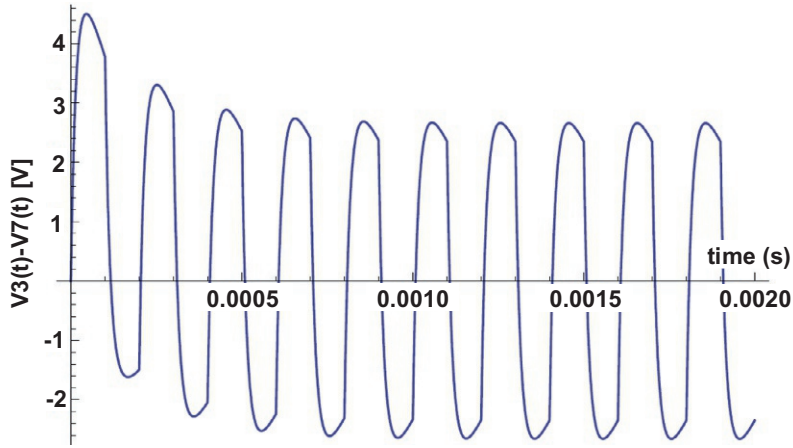


FIG. E3.13.14 Voltage $v_3(t) - v_7(t)$ at $Z = 10^6 \Omega$ for 2 ms.

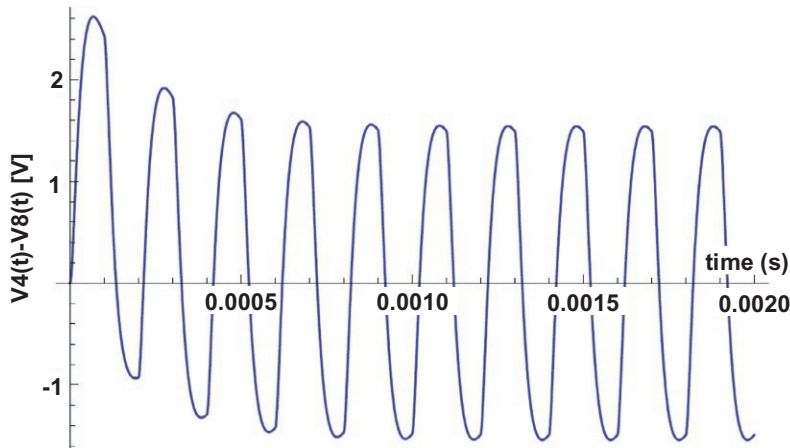


FIG. E3.13.15 Voltage $v_4(t) - v_8(t)$ at $Z = 10^6 \Omega$ for 2 ms.

Solution #2 (Based on MATLAB)

The results as obtained from Mathematica and MATLAB are not exactly identical due to the different integration algorithms used by both software programs, and the results are not given here due to space limitations.

3.11.2 Application Example 3.14: Calculation of winding stress due to PMW current-source inverters

Voltage and current ripples due to PWM CSIs cause voltage stress in windings of machines and transformers. The configuration of Fig. E3.14.1 represents a simple winding with two

turns. Each winding can be represented by four segments having an inductance L_{ij} , a resistance R_{ij} , a capacitance to ground (frame) C_{ij} , and some interturn capacitances C_{ij} and inductances L_{ij} , that is $C_{15}, L_{15}, C_{26}, L_{26}, C_{37}, L_{37}, C_{48}, L_{48}$ values. Fig. E3.14.2 represents a detailed (including $C_{15}, L_{15}, C_{26}, L_{26}, C_{37}, L_{37}, C_{48}, L_{48}$ values) equivalent circuit for the configuration of Fig. E3.14.1.

- a) To simplify the analysis neglect the capacitances C_{ij} and the inductances L_{ij} , that is $C_{15}, L_{15}, C_{26}, L_{26}, C_{37}, L_{37}, C_{48}, L_{48}$ are very small values. This leads to the circuit of Fig. E3.14.3, where the winding is fed by a PWM current source. One obtains the 15 differential equations of Eqs. (E3.14.1)–(E3.14.8a), (E3.14.8b) as listed below. In this case, the current through L_1 is given (e.g., $i_s(t)$) and, therefore, there are only 15 differential equations, as compared with Application Example 3.13.

$$\frac{dv_1}{dt} = \frac{i_s}{C_1} - \frac{G_1}{C_1} v_1 - \frac{i_2}{C_1} \quad (\text{E3.14.1})$$

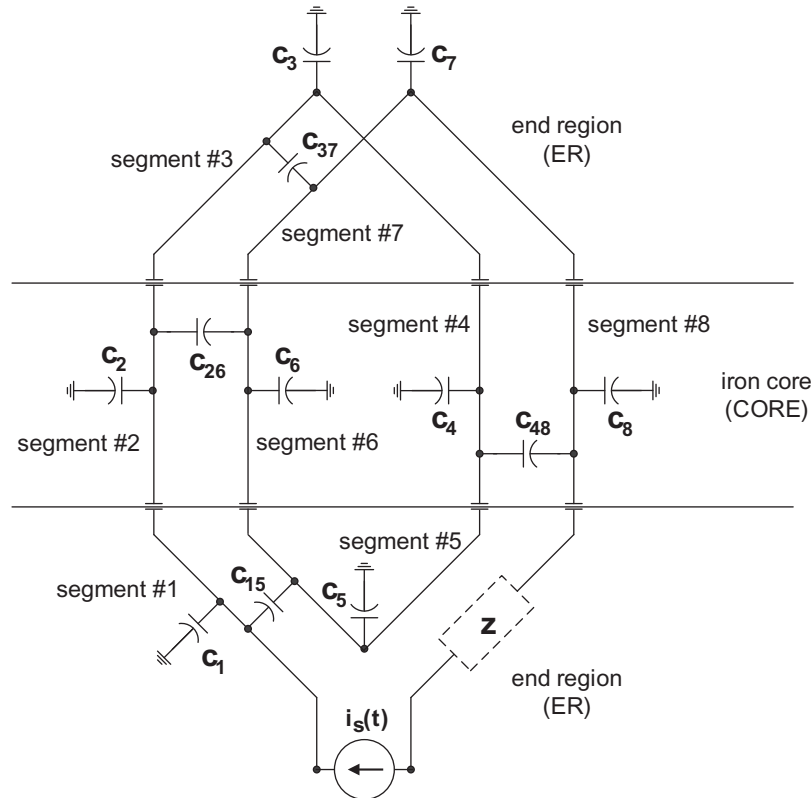


FIG. E3.14.1 Winding consisting of two turns, and each turn consists of four segments.

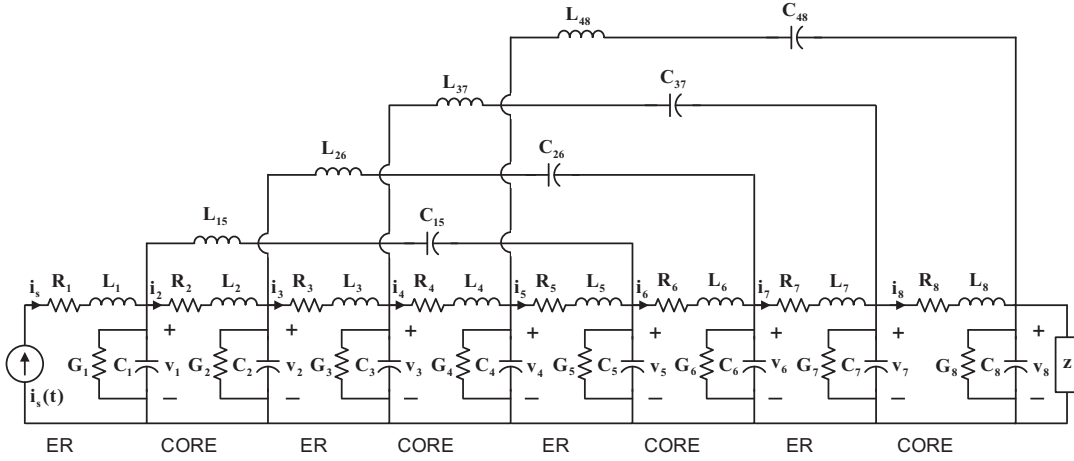


FIG. E3.14.2 Detailed equivalent circuit of Fig. E3.14.1.

$$\frac{di_2}{dt} = -\frac{R_2}{L_2}i_2 - \frac{v_2}{L_2} + \frac{v_1}{L_2} \quad (\text{E3.14.2a})$$

$$\frac{dv_2}{dt} = \frac{i_2}{C_2} - \frac{G_2}{C_2}v_2 - \frac{i_3}{C_2} \quad (\text{E3.14.2b})$$

$$\frac{di_3}{dt} = -\frac{R_3}{L_3}i_3 - \frac{v_3}{L_3} + \frac{v_2}{L_3} \quad (\text{E3.14.3a})$$

$$\frac{dv_3}{dt} = \frac{i_3}{C_3} - \frac{G_3}{C_3}v_3 - \frac{i_4}{C_3} \quad (\text{E3.14.3b})$$

$$\frac{di_4}{dt} = -\frac{R_4}{L_4}i_4 - \frac{v_4}{L_4} + \frac{v_3}{L_4} \quad (\text{E3.14.4a})$$

$$\frac{dv_4}{dt} = \frac{i_4}{C_4} - \frac{G_4}{C_4}v_4 - \frac{i_5}{C_4} \quad (\text{E3.14.4b})$$

$$\frac{di_5}{dt} = -\frac{R_5}{L_5}i_5 - \frac{v_5}{L_5} + \frac{v_4}{L_5} \quad (\text{E3.14.5a})$$

$$\frac{dv_5}{dt} = \frac{i_5}{C_5} - \frac{G_5}{C_5}v_5 - \frac{i_6}{C_5} \quad (\text{E3.13.5b})$$

$$\frac{di_6}{dt} = -\frac{R_6}{L_6}i_6 - \frac{v_6}{L_6} + \frac{v_5}{L_6} \quad (\text{E3.14.6a})$$

$$\frac{dv_6}{dt} = \frac{i_6}{C_6} - \frac{G_6}{C_6}v_6 - \frac{i_7}{C_6} \quad (\text{E3.14.6b})$$

$$\frac{di_7}{dt} = -\frac{R_7}{L_7}i_7 - \frac{v_7}{L_7} + \frac{v_6}{L_7} \quad (\text{E3.14.7a})$$

$$\frac{dv_7}{dt} = \frac{i_7}{C_7} - \frac{G_7}{C_7}v_7 - \frac{i_8}{C_7} \quad (\text{E3.14.7b})$$

$$\frac{di_8}{dt} = -\frac{R_8}{L_8}i_8 - \frac{v_8}{L_8} + \frac{v_7}{L_8} \quad (\text{E3.14.8a})$$

$$\frac{dv_8}{dt} = \frac{i_8}{C_8} - v_8 \left(\frac{1}{Z \cdot C_8} + \frac{G_8}{C_8} \right) \quad (\text{E3.14.8b})$$

The parameters are

$$R_1 = R_2 = R_3 = R_4 = R_5 = R_6 = R_7 = R_8 = 25 \mu\Omega;$$

$$L_1 = L_3 = L_5 = L_7 = 1 \text{ mH}, L_2 = L_4 = L_6 = L_8 = 10 \text{ mH};$$

$$C_1 = C_3 = C_5 = C_7 = 0.7 \text{ pF}, C_2 = C_4 = C_6 = C_8 = 7 \text{ pF}, C_{15} = C_{37} = 0.35 \text{ pF};$$

$$C_{26} = C_{48} = 3.5 \text{ pF};$$

$$G_1 = G_3 = G_5 = G_7 = 1/(5000 \Omega), G_2 = G_4 = G_6 = G_8 = 1/(500 \Omega); \text{ and}$$

$$L_{15} = L_{37} = 0.005 \text{ mH}, L_{26} = L_{48} = 0.01 \text{ mH}.$$

Z is either $1 \mu\Omega$ (short circuit) or $1 \text{ M}\Omega$ (open circuit). Assume a PWM current-step function $i_s(t)$ as indicated in Fig. E3.14.4.

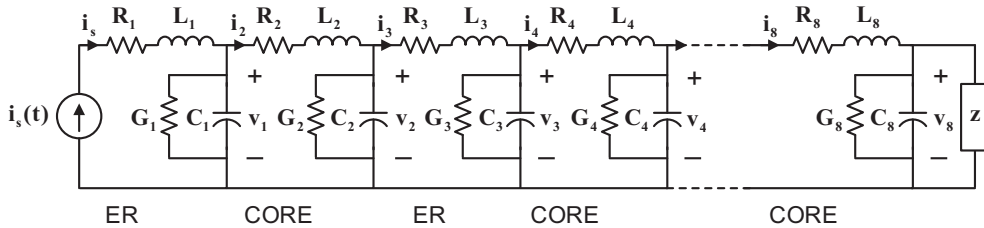


FIG. E3.14.3 Simplified equivalent circuit of Fig. E3.14.2.

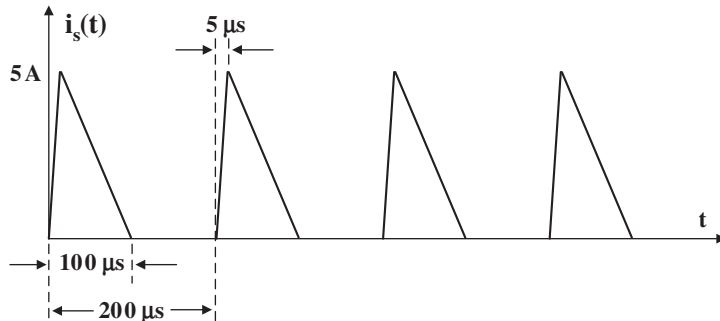


FIG. E3.14.4 PWM current source $i_s(t)$ with $t_{\text{rise}} = 5 \mu\text{s}$.

- b) For the simplified equivalent circuit assuming for C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48} very small values using Mathematica compute all state variables during the time period from $t = t_{\text{calculate}} = 0$ –2.1 ms at rise times of $t_{\text{rise}} = 5$ and $75 \mu\text{s}$. Plot the current $i_s(t)$ for 1 ms and voltages $(v_1 - v_5)$, $(v_2 - v_6)$, $(v_3 - v_7)$, and $(v_4 - v_8)$ for $t_{\text{plot}} = 2$ ms. For $t_{\text{rise}} = 75 \mu\text{s}$ at $Z = 10^{-6} \Omega$ the voltage stress is smaller (see Figs. E3.14.10–E3.14.14).

Solution to Application Example 3.14 : Calculation of winding stress due to PMW current-source inverters with Mathematica.

To demonstrate the sensitivity of the induced voltage stress as a function of the rise time of the current ripple, a rise time of $t_{\text{rise}} = 5 \mu\text{s}$ has been assumed first and the results based on Table E3.14.1 are plotted in Figs. E3.14.5–E3.14.14 for $Z = 10^{-6} \Omega$, that is the considered winding is short-circuited. Note, C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48} are assumed to have very small values, and the voltage across capacitance C_{15} (that is, the voltage between the first turn and the second turn at the end region (ER)) is very large. For $t_{\text{rise}} = 75 \mu\text{s}$ at $Z = 10^{-6} \Omega$ the voltage stress is smaller (see Figs. E3.14.10–E3.14.14). All calculation statements must be on one line and terminated with a semicolon (;).

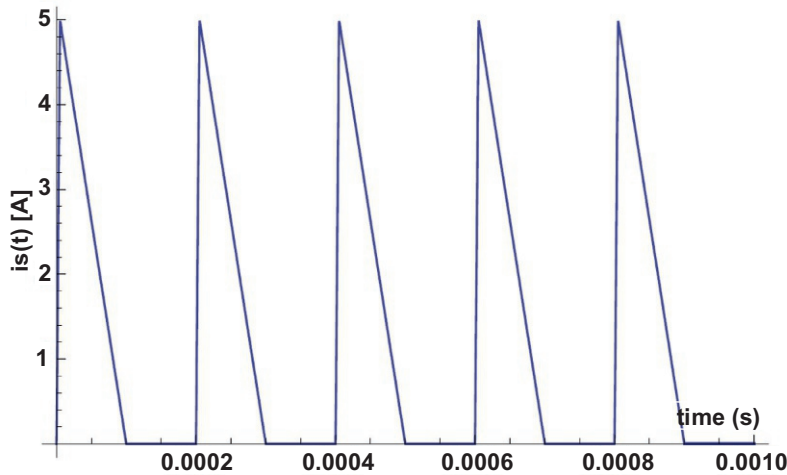


FIG. E3.14.5 PWM current source $i_s(t)$ at $Z = 10^{-6} \Omega$ with $t_{\text{rise}} = 5 \mu\text{s}$ for 1 ms.

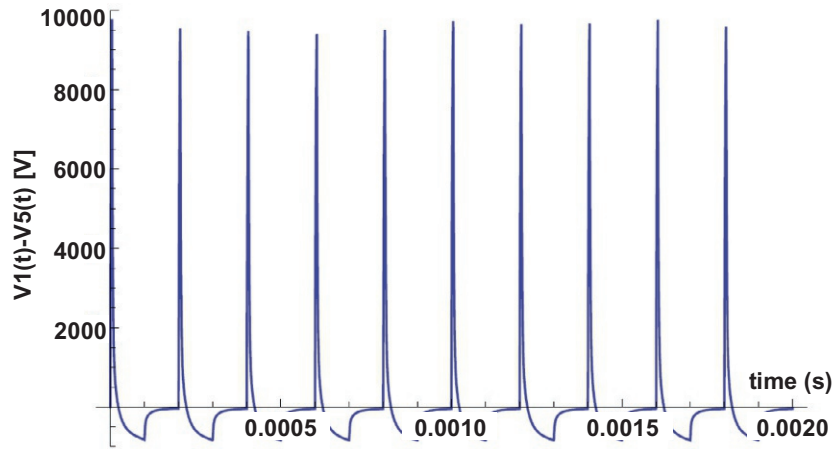


FIG. E3.14.6 Voltage $v_1(t) - v_5(t)$ at $Z=10^{-6}\Omega$ for 2 ms.

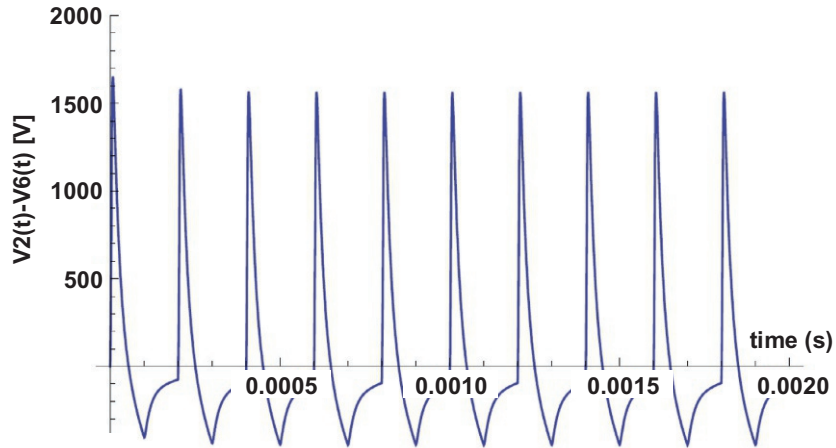


FIG. E3.14.7 Voltage $v_2(t) - v_6(t)$ at $Z=10^{-6}\Omega$ for 2 ms.

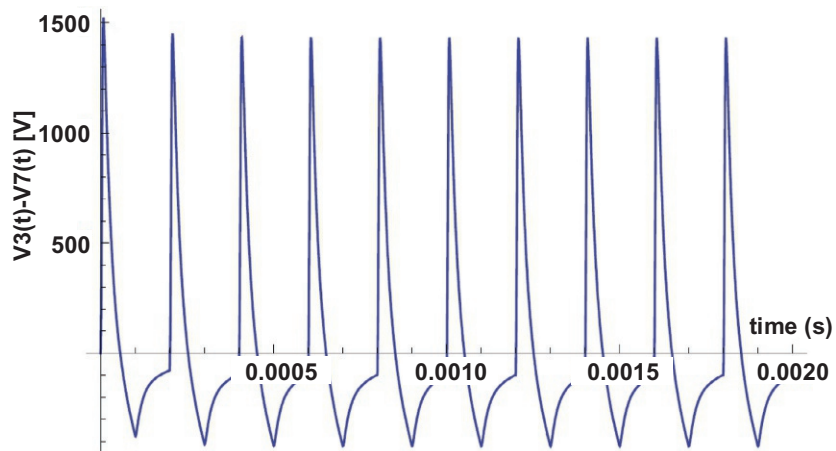


FIG. E3.14.8 Voltage $v_3(t) - v_7(t)$ at $Z=10^{-6}\Omega$ for 2 ms.

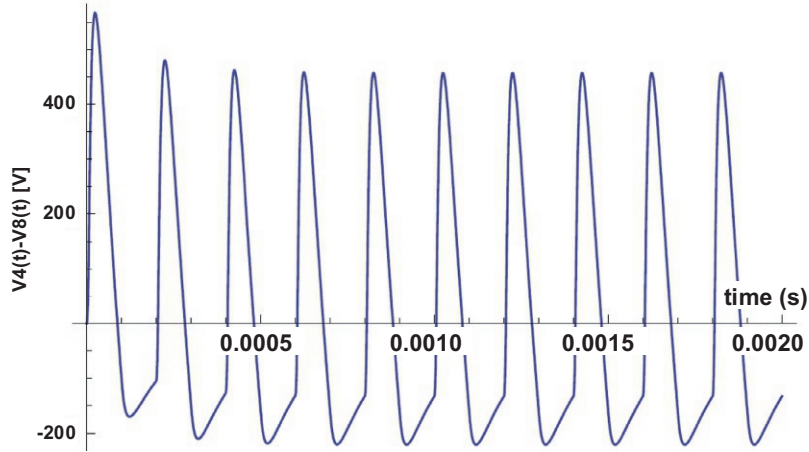


FIG. E3.14.9 Voltage $v_4(t) - v_8(t)$ at $Z=10^{-6}\Omega$ for 2 ms.

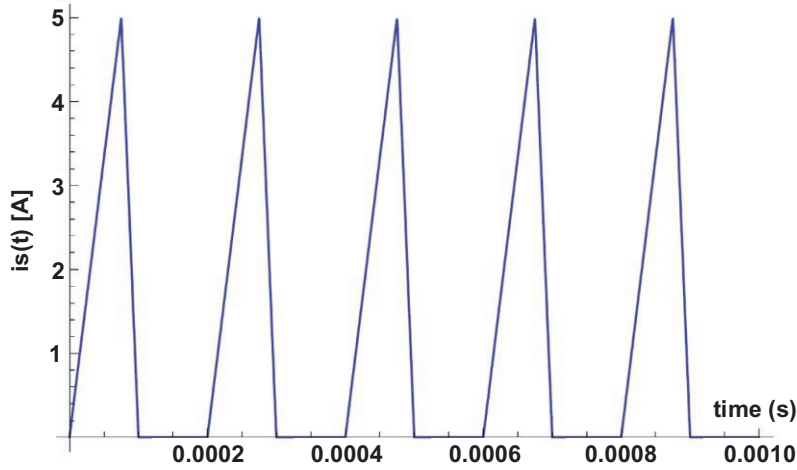


FIG. E3.14.10 PWM current source $i_s(t)$ at $Z=10^{-6}\Omega$ with $t_{\text{rise}}=75\mu\text{s}$ for 1 ms.

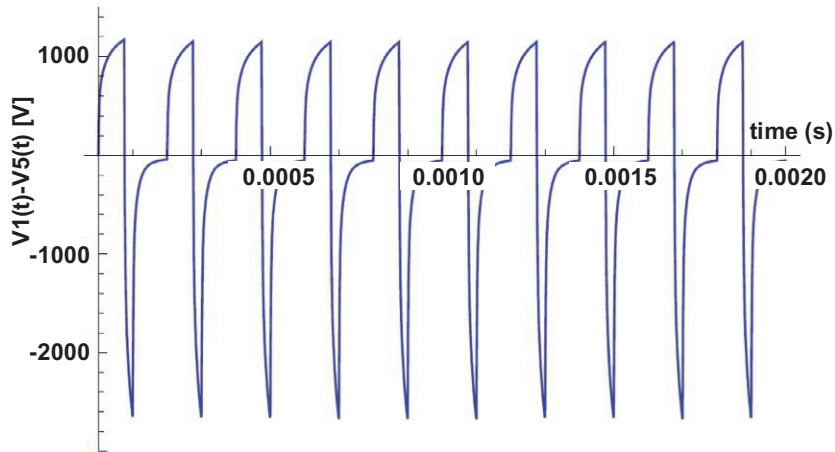


FIG. E3.14.11 Voltage $v_1(t) - v_5(t)$ at $Z=10^{-6}\Omega$ for 2 ms.

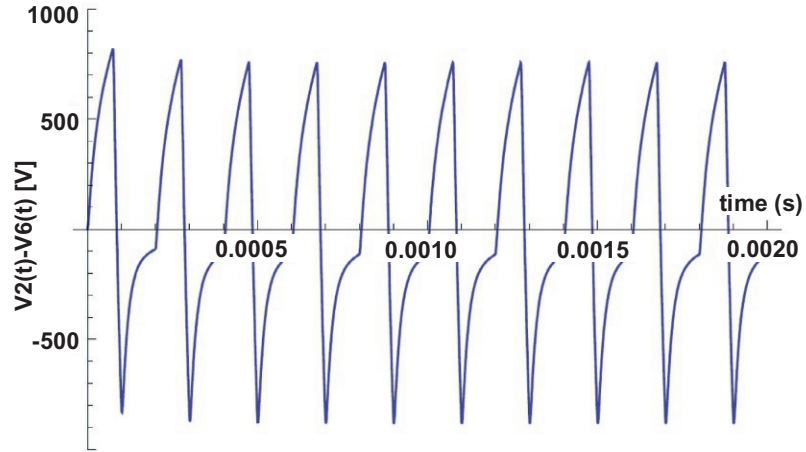


FIG. E3.14.12 Voltage $v_2(t) - v_6(t)$ at $Z = 10^{-6} \Omega$ for 2 ms.

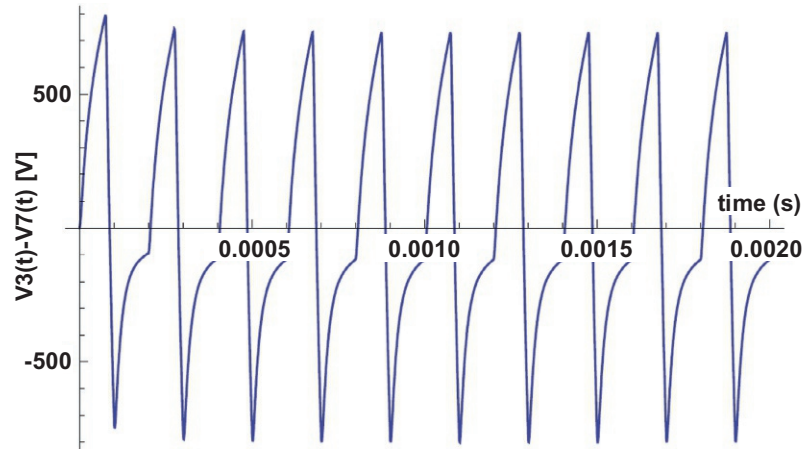


FIG. E3.14.13 Voltage $v_3(t) - v_7(t)$ at $Z = 10^{-6} \Omega$ for 2 ms.

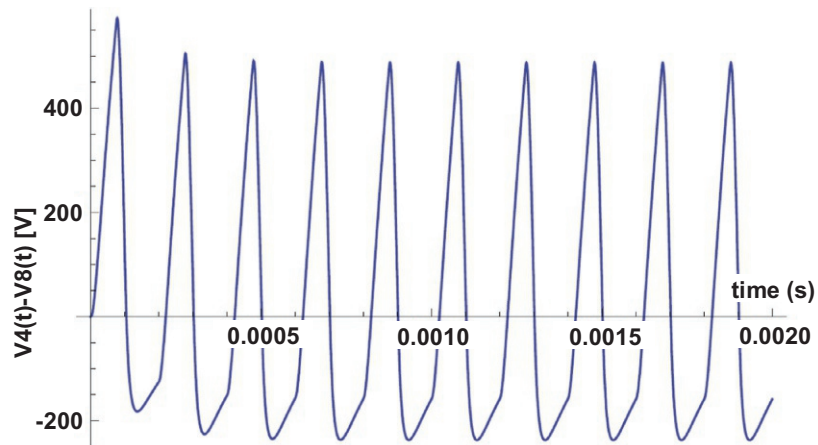


FIG. E3.14.14 Voltage $v_4(t) - v_8(t)$ at $Z = 10^{-6} \Omega$ for 2 ms.

TABLE E3.14.1 Mathematica program list for Application Example 3.14 (part b) for short-circuit with $Z=10^{-6}\Omega$, C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48} are assumed to have very small values.

```

amp=5;
period=200*10^-6;
duty=0.5;
trise=5*10^-6;
Is[t_]:=If[Mod[t,period]>duty*period,0,If[Mod[t,period]<trise,amp/(trise)*Mod[t,
period],amp-amp/(period*duty-trise)*(Mod[t,period]-trise)]];
Plot[Is[t],{t,0,0.001},PlotRange->All,AxesLabel->{"t(s)","Is(t)"}]
R1=25*10^-6;
R2=25*10^-6;
R3=25*10^-6;
R4=25*10^-6;
R5=25*10^-6;
R6=25*10^-6;
R7=25*10^-6;
R8=25*10^-6;
L1=1*10^-3;
L3=1*10^-3;
L5=1*10^-3;
L7=1*10^-3;
L2=10*10^-3;
L4=10*10^-3;
L6=10*10^-3;
L8=10*10^-3;
L15=5*10^-6;
L37=5*10^-6;
L26=10*10^-6;
L48=10*10^-6;
C1=.7*10^-12;
C3=.7*10^-12;
C5=.7*10^-12;
C7=.7*10^-12;
C2=7*10^-12;
C4=7*10^-12;
C6=7*10^-12;
C8=7*10^-12;
C15=.35*10^-12;
C37=.35*10^-12;
C26=3.5*10^-12;
C48=3.5*10^-12;
G1=1/5000;
G3=1/5000;
G5=1/5000;
G7=1/5000;
G2=1/500;
G4=1/500;
G6=1/500;
G8=1/500;
Z=1*10^-6;
eq2=V1'[t]==Is[t]/C1-G1/C1*V1[t]-I2[t]/C1;
ic2=V1[0]==0;

```

Continued

TABLE E3.14.1 Mathematica program list for Application Example 3.14 (part b) for short-circuit with $Z = 10^{-6}\Omega$, C_{15} , L_{15} , C_{26} , L_{26} , C_{37} , L_{37} , C_{48} , L_{48} are assumed to have very small values—Cont'd

```

eq3=I2'[t]==-R2/L2*I2[t]-V2[t]/L2+V1[t]/L2;
ic3=I2[0]==0;
eq4=V2'[t]==I2[t]/C2-G2/C2*V2[t]-I3[t]/C2;
ic4=V2[0]==0;
eq5=I3'[t]==-R3/L3*I3[t]-V3[t]/L3+V2[t]/L3;
ic5=I3[0]==0;
eq6=V3'[t]==I3[t]/C3-G3/C3*V3[t]-I4[t]/C3;
ic6=V3[0]==0;
eq7=I4'[t]==-R4/L4*I4[t]-V4[t]/L4+V3[t]/L4;
ic7=I4[0]==0;
eq8=V4'[t]==I4[t]/C4-G4/C4*V4[t]-I5[t]/C4;
ic8=V4[0]==0;
eq9=I5'[t]==-R5/L5*I5[t]-V5[t]/L5+V4[t]/L5;
ic9=I5[0]==0;
eq10=V5'[t]==I5[t]/C5-G5/C5*V5[t]-I6[t]/C5;
ic10=V5[0]==0;
eq11=I6'[t]==-R6/L6*I6[t]-V6[t]/L6+V5[t]/L6;
ic11=I6[0]==0;
eq12=V6'[t]==I6[t]/C6-G6/C6*V6[t]-I7[t]/C6;
ic12=V6[0]==0;
eq13=I7'[t]==-R7/L7*I7[t]-V7[t]/L7+V6[t]/L7;
ic13=I7[0]==0;
eq14=V7'[t]==I7[t]/C7-G7/C7*V7[t]-I8[t]/C7;
ic14=V7[0]==0;
eq15=I8'[t]==-R8/L8*I8[t]-V8[t]/L8+V7[t]/L8;
ic15=I8[0]==0;
eq16=V8'[t]==I8[t]/C8-V8[t]*(1/(Z*C8)+G8/C8);
ic16=V8[0]==0;
sol1=NDSolve[{eq2,eq3,eq4, eq5,eq6,eq7,eq8,eq9,eq10, eq11,eq12,eq13,eq14,eq15,eq16,
  ic2,ic3,ic4,ic5,ic6,ic7,ic8,ic9,ic10,ic11,ic12,ic13,ic14,ic15,ic16},{V1[t],
  I2[t],V2[t],I3[t],V3[t],I4[t],V4[t],I5[t],V5[t],I6[t],V6[t],I7[t],V7[t],I8[t],
  V8[t]},{t,0,0.0022},MaxSteps->100000];
Plot[Evaluate[V1[t]/.sol1]-Evaluate[V5[t]/.sol1],{t,0,0.002},PlotRange->
  {-1000,10000},AxesLabel->{"t(s)", "(V1-V5) (V)"}]
Plot[Evaluate[V2[t]/.sol1]-Evaluate[V6[t]/.sol1],{t,0,0.002},PlotRange->
  {-500,2000},AxesLabel->{"t(s)", "(V2-V6) (V)"}]
Plot[Evaluate[V3[t]/.sol1]-Evaluate[V7[t]/.sol1],{t,0,0.002},AxesLabel->
  {"t(s)", "(V3-V7) (V)"}]
Plot[Evaluate[V4[t]/.sol1]-Evaluate[V8[t]/.sol1],{t,0,0.002},AxesLabel->
  {"t(s)", "(V4-V8) (V)"}]

```

The voltage stresses at open circuit ($Z = 10^6\Omega$) at a rise time of $t_{rise} = 75\mu s$ are similar to those of Figs. E3.14.5–E3.14.14.

Conclusions with respect to voltage stresses as investigated in Application Examples #3.13 and 3.14:

- 1) The impedance Z (either short-circuit ($10^{-6}\Omega$) or open-circuit ($10^6\Omega$) coils) and the rectangular voltage sources $v_s(t)$ of Figs. E3.13.4 and E3.13.5—caused by ripples due to

voltage-source PWM switching—do not generate large voltage stresses, for example $v_1(t) - v_5(t)$ as shown in Fig. E3.13.7 with a peak value of about 9 V.

- 2) The impedance Z (either short-circuit ($10^{-6}\Omega$) or open-circuit ($10^6\Omega$) coils) and the triangular current source $i_s(t)$ with a rise time of $t_{rise} = 5\mu s$ of Fig. E3.14.5—caused by ripples due to current-source PWM switching—do generate very large voltage stresses, for example $v_1(t) - v_5(t)$ as shown in Fig. E3.14.6 with a peak value of about 10 kV.
- 3) The impedance Z (either short-circuit ($10^{-6}\Omega$) or open-circuit ($10^6\Omega$) coils) and the triangular current source $i_s(t)$ with a rise time of $t_{rise} = 75\mu s$ of Fig. E3.14.10—caused by ripples due to current-source PWM switching—generate large voltage stresses, for example $v_1(t) - v_5(t)$ as shown in Fig. E3.14.11 with a peak value of about -2700 V.

3.12 Nonlinear harmonic models of three-phase induction machines

The aim of this section is to introduce and briefly discuss some harmonic models for induction machines available in the literature. Detailed explanations are given in the references cited.

3.12.1 Conventional harmonic model of an induction motor

Figs. 3.3 and 3.25 represent the fundamental and harmonic per-phase equivalent circuits of a three-phase induction motor, respectively, which are used for the calculation of the steady-state performance. The rotor parameters may consist of the equivalent rotor impedance taking into account the cross-path resistance of the rotor winding, which is frequency dependent because of the skin effect in the rotor bars. The steady-state performance is calculated by using the method of superposition based on Figs. 3.3 and 3.25. In general, for the usual operating speed regions, the fundamental slip is very small and, therefore, the harmonic slip, s_{hr} , is close to unity.

3.12.2 Modified conventional harmonic model of an induction motor

In order to improve the loss prediction of the conventional harmonic equivalent circuit of induction machines (Fig. 3.25), the core loss and stray-core losses associated with high-frequency leakage fluxes are taken into account. Stray-load losses in induction machines are considered to be important—due to leakage—when induction machines are supplied by nonsinusoidal voltage or current sources. This phenomenon can be accounted for by a modified loss model, as shown in Fig. 3.40 [79].

Inclusion of rotor-core loss

Most publications assume negligible rotor-core losses due to the very low frequency (e.g., slip frequency) of the magnetic field within the rotor core. To take into account the rotor-iron losses—associated with the magnetizing path—a slip-dependent resistance R'_{mh} is connected in parallel with the stator-core loss resistance (Fig. 3.40).

Iron loss associated with leakage flux paths (harmonic stray loss)

Resistances in parallel with the primary and the secondary leakage inductances ($R_{\ell sh}$, $R'_{\ell rh}$) in the harmonic equivalent circuit of Fig. 3.40 represent harmonic losses, referred to as stray

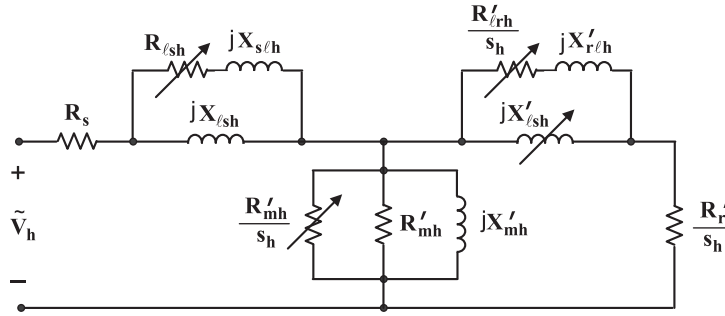


FIG. 3.40 Modified harmonic loss model of induction motor including separate resistances for rotor- and stator-core losses, as well as eddy currents due to leakage fluxes [79].

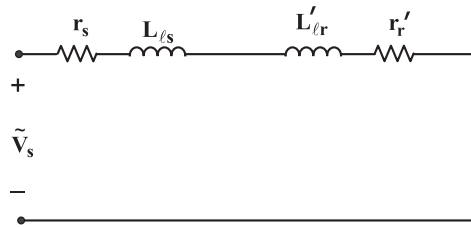


FIG. 3.41 Simplified conventional harmonic model of induction motor [80].

losses. Because almost all stray losses result from hysteresis and eddy-current effects, these equivalent parallel resistors are assumed to be frequency dependent.

3.12.3 Simplified conventional harmonic model of an induction motor

As the mechanical speed is very close to the synchronous speed, the rotor slip with respect to the harmonic mmfs will be close to unity (e.g., about 6/5 and 6/7 for the 5th and 7th harmonics, respectively). Therefore, the resistance $(1 - s_h)R'_r/s_h$ will be negligibly small in the harmonic model of Fig. 3.25, and the equivalent harmonic circuit may be reduced to that of Fig. 3.41. Only the winding resistances and the leakage inductances are included; the magnetizing branches are ignored because the harmonic voltages can be assumed to be relatively small, and at harmonic frequencies the core-flux density is small as well as compared with fundamental flux density. It should be noted that the winding resistances and leakage inductances are frequency dependent.

3.12.4 Spectral-based harmonic model of an induction machine with time and space harmonics

Fig. 3.42 shows a harmonic equivalent circuit of an induction machine that models both time and space harmonics [81]. The three windings may or may not be balanced as each phase has its own per phase resistance R_{equj} , reactance X_{equj} , and speed-dependent complex

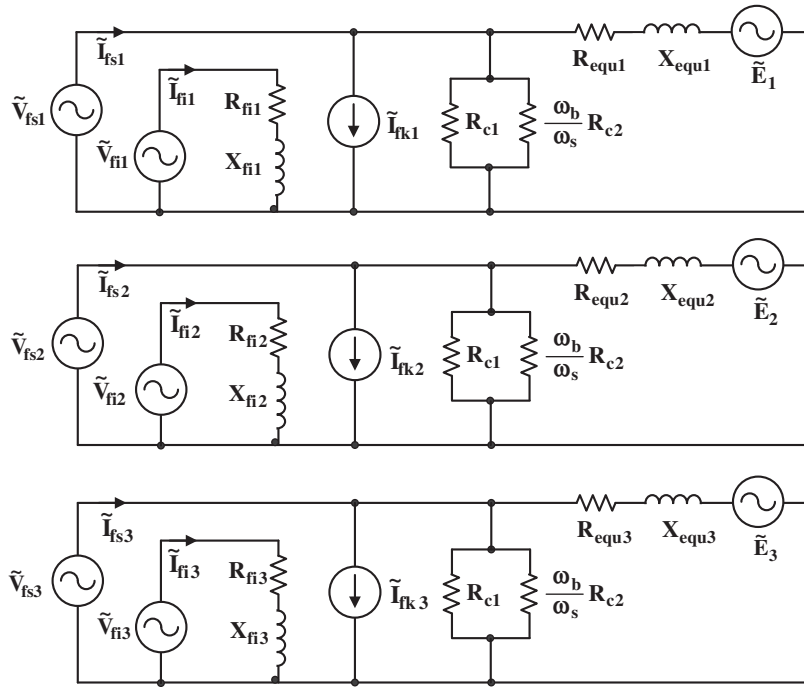


FIG. 3.42 Spectral-based equivalent circuit of induction motor with space-harmonic, time-harmonic, and core losses [81].

electromagnetic force emf $\tilde{E}_j$ (where $j = 1, 2, 3$ represents the phase number). To account for the core losses, two resistances in parallel are added to each phase: R_{c1} representing the portion of losses that depends only on phase voltages and $(\omega_b/\omega_s)R_{c2}$ representing losses that depend on the frequency and voltage of the stator (ω_b is the rated stator frequency whereas ω_s is the actual stator frequency).

To account for space-harmonic effects, the spectral approach modeling technique is used. This concept combines effects of time harmonics (from the input power supply) and space harmonics (from machine windings and magnetic circuits), bearing in mind that no symmetrical components exist in both quantities.

The equivalent circuit of Fig. 3.42 has several branches (excluding the fundamental and the core losses), where each branch per phase is associated with one harmonic of the power supply (impedance) or one frequency for the space distribution (current source). To evaluate various parameters, the spectral analysis of both time-domain stator voltages and currents are required. The conventional blocked-rotor, no-load, and loaded shaft tests can be performed at fundamental frequency to evaluate phase resistance R_{equj} , reactance X_{equj} , complex emf $\tilde{E}_j$, R_{c1} , and R_{c2} .

The harmonic stator voltage $(\tilde{V}_{fij})$ and current $(\tilde{I}_{fij})$ with their respective magnitudes and phase angles need to be measured to determine harmonic impedances (e.g., $R_{fij} + jX_{fij}$ is the ratio of the two phasors).

For the current sources coming from the space harmonics, one has to differentiate between power supply harmonics and space harmonics and those which are solely space-harmonic related. This can be done using a blocked-rotor test or a long-time starting test (with the primary objective of obtaining data at zero speed). Voltage and current measurements in the time domain allow the evaluation of the effects only related to the power supply harmonics in the frequency domain. Determination of the space-harmonics effects is made possible by utilizing the principle of superposition in steady state at a nonzero speed.

In the model of Fig. 3.42:

- Effects of both time and space harmonics are included;
- $R_{fij} + jX_{fij} = \tilde{V}_{fij}/\tilde{I}_{fij}$ originates from phase voltage time harmonics (fi is the i th harmonic);
- $\tilde{I}_{fkj}$ originates from the space harmonics (subscript fk is used for space harmonics);
- The skin effect is ignored, but could be easily included; and
- Core losses related to power supply harmonics except the fundamental are included in the harmonic circuit.

To introduce space harmonics into the model, current sources with the phasor notation $\tilde{I}_{fkj}$ are used which are only linked to the load condition and, as a result, to the speed of the rotor. In most cases, the space-harmonics frequency fk is also a multiple of the power supply frequency f_s . It is understood that the space harmonics will affect electromagnetic torque calculations, which is not shown in the equivalent circuit.

Details of this equivalent circuit are presented in Ref. [81].

3.13 Static and dynamic rotor eccentricity of three-phase induction machines

The fundamentals of rotor eccentricity are described by Heller and Hamata [30]. One differentiates between static and dynamic rotor eccentricity. The case of static rotor eccentricity occurs if the rotor axis and the stator bore axes do not coincide and the rotor is permanently shifted to one side of the stator bore. Dynamic rotor eccentricity occurs when the rotor axis rotates around a small circle within the stator bore. The most common forms are combinations of static and dynamic rotor eccentricities. This is so because any rotor cannot be perfectly (in a concentric manner) mounted within the stator bore of an electric machine. The electric machines most prone to the various forms of rotor eccentricity are induction machines due to their small air gaps. The air gaps of small induction machines are less than 1 mm, and those of large induction machines are somewhat larger than 1 mm. Rotor eccentricity originates therefore in the mounting tolerances of the radial bearings. The main effects of rotor eccentricity are noninteger harmonics, one-sided magnetic pull, acoustic noise, mechanical vibrations, and additional losses within the machine. Simulation, measurement methods, and detection systems [82–87] for the various forms of rotor eccentricities have been developed.

Some phenomena related to rotor imbalance are issues of shaft flux and the associated bearing currents [88,89]. The latter occur predominantly due to PWM inverters and because of mechanical and electrical asymmetries resulting in magnetic imbalance.

3.14 Operation of three-phase machines within a single-phase power system

Very frequently there are only single-phase systems available; however, relatively large electrical drives are required. Examples are pump drives for irrigation applications which require motors in the 40hp range. As it is well known, single-phase induction motors in this range are hardly an off-the-shelf item; in addition such motors are not very efficient and are relatively expensive as compared with three-phase induction motors. For this reason three-phase induction motors are used together with a network—consisting of capacitors—which converts a single-phase system to an approximate three-phase system [90,91].

3.15 Classification of three-phase induction machines

The rotor winding design of induction machines varies depending on their application. There are two types: wound-rotor and squirrel-cage induction machines. Most of the manufactured motors are of the squirrel-cage type. According to the National Electrical Manufacturers Association (NEMA), one differentiates between the classes A, B, C, and D as is indicated in the torque-speed characteristics of Fig. 3.43. Class A has large rotor-bar cross sections near the surface of the rotor resulting in low rotor resistance R'_r and an associated low starting torque. Most induction generators are not required to produce a significant starting torque, and therefore, class A is acceptable for such applications. Class B has large and deep

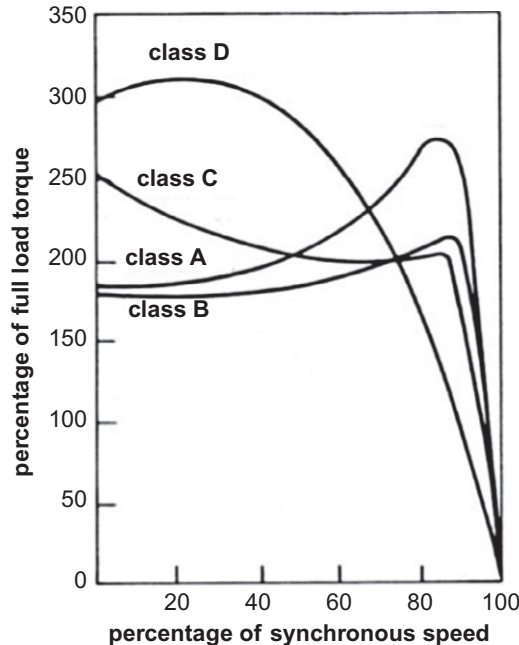


FIG. 3.43 NEMA classification of squirrel-cage induction machines.

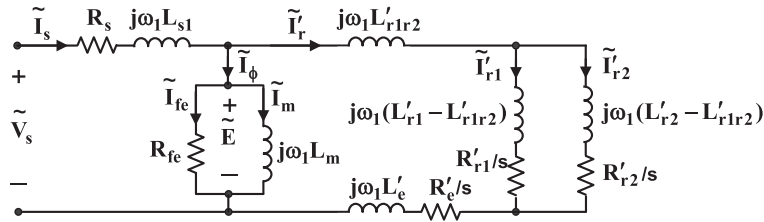


FIG. 3.44 Equivalent circuit of double-cage induction machine.

rotor bars, that is, the skin effect cannot be neglected during start-up. Classes A and B have similar torque-speed characteristics. Class C is of the double-cage rotor design: due to the skin effect the current flows mostly in the outer cage during start-up and produces therefore a relatively large starting torque. Class D has small rotor bars near the rotor surface and produces a large starting torque at the cost of a low efficiency at rated operation.

The equivalent circuit of a single-squirrel cage induction machine is given in Fig. 3.1. That of a double squirrel-cage type is shown in Fig. 3.44 [12,92].

In the double-cage winding $\omega_1 L'_{r1r2}$ is the mutual reactance between cage r_1 and cage r_2 . R'_{r1} and R'_{r2} are the resistances of cages r_1 and r_2 , respectively. R'_e and $\omega_1 L'_e$ are the end-winding resistance and the end-winding leakage reactance of the end rings, respectively, if they are common to both cages. $\omega_1 L'_{r1}$ and $\omega_1 L'_{r2}$ are the leakage reactances of cages r_1 and r_2 , respectively. The induced voltage is

$$\tilde{E} = \tilde{I}'_{r1} \left(\frac{R'_{r1}}{s} + j\omega_1 L'_{r1} \right) + \tilde{I}'_{r2} j\omega_1 L'_{r1r2} + \tilde{I}'_r \left(\frac{R'_e}{s} + j\omega_1 L'_e \right) \quad (3.58)$$

With

$$\tilde{I}'_r = \tilde{I}'_{r1} + \tilde{I}'_{r2} \quad (3.59)$$

one obtains alternatively

$$\tilde{E} = \tilde{I}'_{r1} \left[\frac{R'_{r1}}{s} + j\omega_1 (L'_{r1} - L'_{r1r2}) \right] + \tilde{I}'_r \left(j\omega_1 L'_{r1r2} + \frac{R'_e}{s} + j\omega_1 L'_e \right) \quad (3.60)$$

and

$$\tilde{E} = \tilde{I}'_{r2} \left[\frac{R'_{r2}}{s} + j\omega_1 (L'_{r2} - L'_{r1r2}) \right] + \tilde{I}'_r \left(j\omega_1 L'_{r1r2} + \frac{R'_e}{s} + j\omega_1 L'_e \right) \quad (3.61)$$

The resultant rotor impedance is now

$$\begin{aligned} \frac{\tilde{E}}{\tilde{I}'_r} &= \frac{R'_r(s)}{s} + j\omega_1 L'_r(s) \\ &= \frac{\left[\frac{R'_{r1}}{s} + j\omega_1 (L'_{r1} - L'_{r1r2}) \right] \left[\frac{R'_{r2}}{s} + j\omega_1 (L'_{r2} - L'_{r1r2}) \right]}{\left[\frac{R'_{r1}}{s} + j\omega_1 (L'_{r1} - L'_{r1r2}) \right] + \left[\frac{R'_{r2}}{s} + j\omega_1 (L'_{r2} - L'_{r1r2}) \right]} + \left(j\omega_1 L'_{r1r2} + \frac{R'_e}{s} + j\omega_1 L'_e \right) \end{aligned} \quad (3.62)$$

In Eq. (3.62) the resulting rotor resistance $R_r'(s)$ and leakage inductance $L_r'(s)$ are slip (s) dependent. For an induction motor to be very efficient at rated slip the rotor resistance must be small. However, such a machine has a low starting torque. If the rotor resistance is relatively large the starting torque will be large, but the efficiency of such a machine will be very low. A double-squirrel cage solves this problem through a slip-dependent rotor resistance: at starting the currents mainly flow through the outer squirrel-cage winding having a large resistance, and at rated operation the currents flow mainly through the inner squirrel-cage winding having a small resistance. Triple- or quadruple-squirrel cage windings are employed for special applications only.

3.16 Summary

This chapter addresses first the normal operation of induction machines and the calculation of machine parameters, which are illustrated by flux plots. Power quality refers to the effects caused by induction machines due to their abnormal operation or by poorly designed machines. It discusses the influences of time and space harmonics on the rotating field, and the influence of current, voltage, and flux density harmonics on efficiency. This chapter highlights the detrimental effects of inter- and subharmonics on asynchronous and synchronous torque production, and the voltage stress induced by current source inverters and lightning surges. The applicability of harmonic models to three-phase induction machines is addressed. Static and dynamic rotor eccentricity, bearing currents, the operation of three-phase motors within a single-phase system, and the various classes and different equivalent circuits of induction machines are explained. Many application examples refer to the stable or unstable steady-state operation, the operation at under- or overvoltage and under- or over-frequency and combinations thereof. Calculation of asynchronous (integer, inter-, sub-) harmonic torques is performed in detail, whereas the generation of synchronous torque is mentioned. The calculation of the winding stress due to current and VSIs can be performed with either Mathematica or MATLAB.

3.17 Problems

Problem 3.1: Steady-state stability

Fig. P3.1A and B illustrates the torque-speed characteristics of a 10kW three-phase induction motor with different rotor slot skewing with load torques T_{L1} , T_{L2} , and T_{L3} . Comment on the steady-state stability of the equilibrium points A, B, C, D, E, F, G, H, I, and J in Fig. P3.1A and A, B, C, D, and E in Fig. P3.1B.

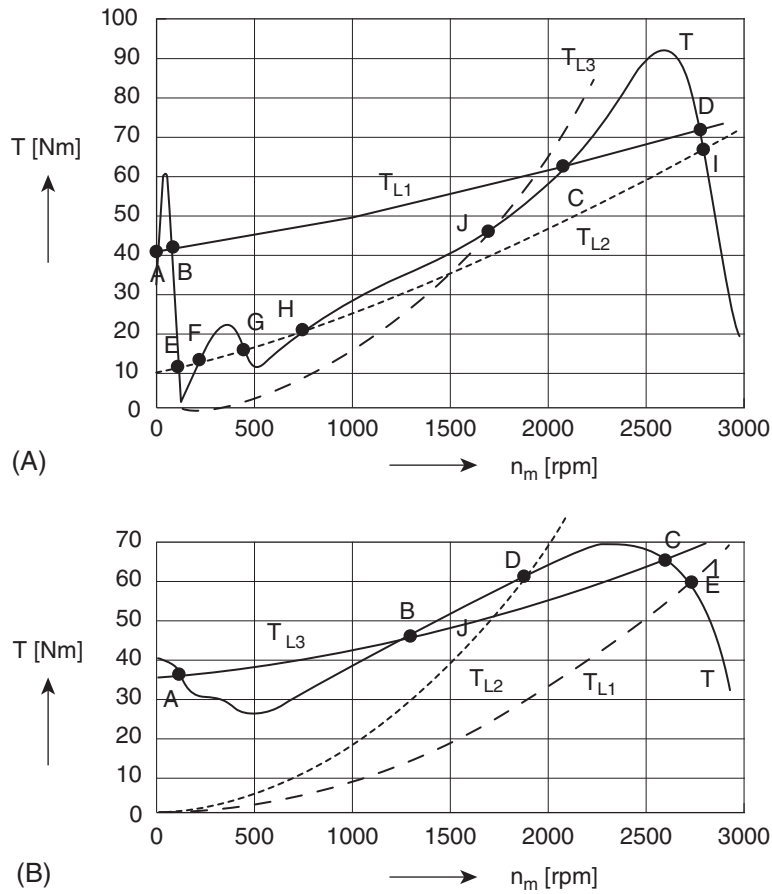


FIG. P3.1 Torque-speed characteristic $T-n_m$ of 10kW three-phase induction motor with three load characteristics $T_{L1}-n_m$, $T_{L2}-n_m$, and $T_{L3}-n_m$ with (A) half a rotor-slot pitch skewing and (B) full rotor-slot pitch skewing.

Problem 3.2: Phasor diagram of induction machine at fundamental frequency and steady-state operation

Draw the phasor diagram for the equivalent circuit of Fig. P3.2. You may use the consumer reference system.

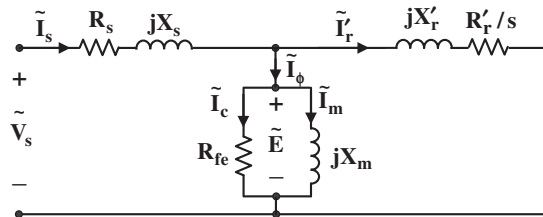


FIG. P3.2 Equivalent circuit of induction machine.

Problem 3.3: Analysis of an induction generator for a wind-power plant

A $P_{out}=3.5\text{MW}$, $V_{L-L}=2400\text{V}$, $f=60\text{Hz}$, $p=12$ poles, $n_{m-generator}=618\text{rpm}$, Y-connected squirrel-cage wind-power induction generator has the following parameters per phase referred to the stator: $R_S=0.1\Omega$, $X_S=0.5\Omega$, $X_m \rightarrow \infty$ (that is, X_m can be ignored), $R'_r=0.05\Omega$, and $X'_r=0.2\Omega$. You may use the equivalent circuit of Fig. P3.2 with X_m and R_{fe} large so that they can be ignored. Calculate:

- Synchronous speed n_s in rpm.
- Synchronous angular velocity ω_s in rad/s.
- Slip s .
- Rotor current $\tilde{I}_r$.
- (Electrical) generating torque T_{gen} .
- Slip s_m where the maximum torque occurs.
- Maximum torque T_{max} in generation region.

Problem 3.4: E/f control of a squirrel-cage induction motor [93]

The induction machine of Problem 3.3 is now used as a motor at $n_{m-motor}=582\text{rpm}$. You may use the equivalent circuit of Fig. P3.2 with X_m and R_{fe} large so that they can be ignored. Calculate for E/f control:

- Induced voltage $\tilde{E}_{rated}$.
- Electrical torque T_{rated} .
- The frequency f_{new} at $n_{m-new}=300\text{rpm}$, and T_{rated} .
- The new slip s_{new} .

Problem 3.5: V/f control of a squirrel-cage induction motor [93]

The induction machine of Problem 3.3 is now used as a motor at $n_{m-motor}=582\text{rpm}$. You may use the equivalent circuit of Fig. P3.2 with X_m and R_{fe} large so that they can be ignored. Calculate for V/f control:

- Electrical torque T_{rated} .
- The new slip s_{new} .
- The frequency f_{new} at $n_{m-new}=300\text{rpm}$, and T_{rated} .

Problem 3.6: Steady-state operation at undervoltage

A $P_{out}=100\text{hp}$, $V_{L-L,rat}=480\text{V}$, $f=60\text{Hz}$, $p=6$ pole three-phase induction motor runs at full load and rated voltage with a slip of 3%. Under conditions of stress on the power supply system, the line-to-line voltage drops to $V_{L-L,low}=450\text{V}$. If the load is of the constant torque type, compute for the lower voltage:

- The slip s_{low} (use small-slip approximation).
- The shaft speed $n_{m,low}$ in rpm.
- The output power $P_{out,low}$.
- The rotor copper loss $P_{cur,low}=I_r^2 R'_r$ in terms of the rated rotor copper loss at rated voltage.

Problem 3.7: Steady-state operation at overvoltage

Repeat Problem 3.6 for the condition when the line-to-line voltage of the power supply system increases to $V_{L-L_high} = 500$ V.

Problem 3.8: Steady-state operation at undervoltage and under-frequency

A $P_{out_rat} = 100$ hp, $V_{L-L_rat} = 480$ V, $f = 60$ Hz, $p = 6$ pole three-phase induction motor runs at full load and rated voltage and frequency with a slip of 3%. Under conditions of stress on the power supply system, the terminal voltage and the frequency drop to $V_{L-L_low} = 450$ V and $f_{low} = 59.5$ Hz, respectively. If the load is of the constant torque type, compute for the lower voltage and frequency:

- The slip (use small-slip approximation).
- The shaft speed in rpm.
- The hp output.
- The rotor copper loss $P_{cur_low} = I_r'^2 R_r'$ in terms of the rated rotor copper loss at rated frequency and voltage.

Problem 3.9: Steady-state operation at overvoltage and over-frequency

A $P_{out_rat} = 100$ hp, $V_{L-L_rat} = 480$ V, $f = 60$ Hz, $p = 6$ pole three-phase induction motor runs at full load and rated voltage and frequency with a slip of 3%. Assume the terminal voltage and the frequency increase to $V_{L-L_high} = 500$ V and $f_{high} = 60.5$ Hz, respectively. If the load is of the constant torque type, compute for the lower voltage and frequency:

- The slip (use small-slip approximation).
- The shaft speed in rpm.
- The hp output.
- The rotor copper loss $P_{cur_high} = I_r'^2 R_r'$ in terms of the rated rotor copper loss at rated frequency and voltage.

Problem 3.10: Calculation of the maximum critical speeds $n_{m_critical}^{motoring}$ and $n_{m_critical}^{regeneration}$ for motoring and regeneration, respectively [93]

A $V_{L-L_rat} = 480$ V, $f_{rat} = 60$ Hz, $n_{m_rat} = 1760$ rpm, 4-pole, Y-connected squirrel-cage induction machine has the following parameters per phase referred to the stator: $R_S = 0.2 \Omega$, $X_S = 0.5 \Omega$, $X_m = 20 \Omega$, $R_r' = 0.1 \Omega$, $X_r' = 0.8 \Omega$. Use the equivalent circuit of Fig. P3.10.1.

A hybrid car employs the induction machine with the above-mentioned parameters for the electrical part of the drive.

- Are the characteristics of Fig. P3.10.2 (for $a < 1$) either E/f control or V/f control?
- Compute the rated electrical torque T_{rat} , the rated angular velocity ω_{m_rat} and the rated output power P_{rat} (see operating point Q₁ of Fig. P3.10.2).
- Calculate the maximum critical motoring speed $n_{m_critical}^{motoring}$, whereby rated output power ($P_{rat} = T_{rat} \cdot \omega_{m_rat}$) is delivered by the machine at the shaft (see operating point Q₂ of Fig. P3.10.2).

- (d) Calculate the maximum critical speed $n_{m_critical}^{regeneration}$, whereby rated power is absorbed at the shaft by the machine (see operating point Q_3 of Fig. P3.10.2).
- (e) In order to increase the critical motoring speed to about 3 times the rated speed n_{m_rat} an engineer proposes to decrease X_s and X_r by a factor of two. Will this accomplish the desired speed increase? Note that the resistances R_s and R_r are so small that no significant speed increase can be expected by changing them.

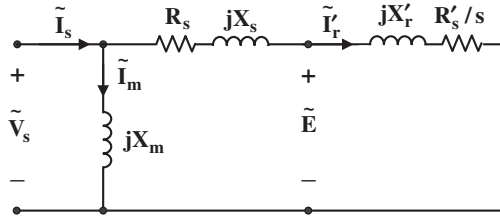
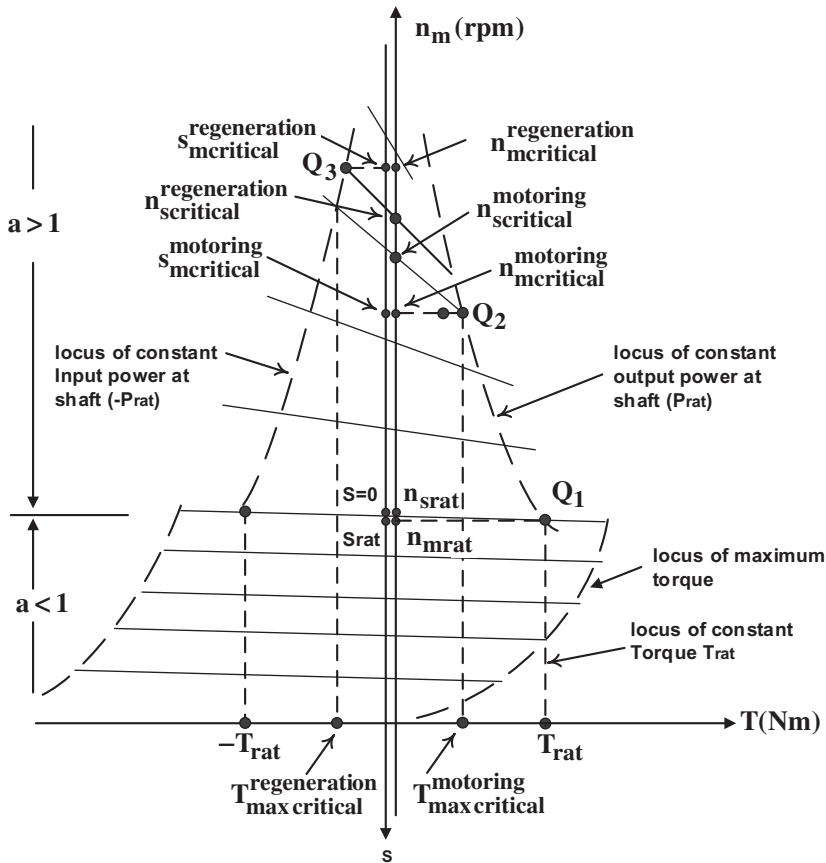


FIG. P3.10.1 Equivalent circuit.

FIG. P3.10.2 Definition of n_{m_rat} , $n_{m_critical}^{motoring}$, and $n_{m_critical}^{regeneration}$. Note that only the linear portions of the torque-speed characteristics are shown.

Problem 3.11: Torque characteristic of induction machine with fundamental and subharmonic fields

The equivalent circuit of a voltage-source-fed induction motor is shown in Fig. 3.38. The fundamental angular frequency of the voltage source is ω_1 and the time-harmonic angular frequency is $h\omega_1$ (caused by imperfections of the VSI).

The parameters of the three-phase induction motor are as follows: $V_{L-L} = 460\text{V}$, Y-connected, $p = 2$ poles, $n_{rated} = 3528\text{rpm}$, $f = 60\text{Hz}$, $R_s = 1\Omega$, $\omega_1 L_{sl} = 2\Omega$, $\omega_1 L_m = \infty$ (you may neglect the magnetizing branch), $R_r' = 1\Omega$, $\omega_1 L_{rl}' = 2\Omega$.

- Compute a few points (e.g., $T_{e1}(s_1=0)$, $T_{e1}(s_1=s_{1\max+})$, $T_{e1}(s_1=s_{1\max-})$, $T_{e1}(s_1=1.0)$) and sketch the fundamental torque characteristic $T_{e1}=f(s_1)$ in Nm, where s_1 is the slip of the rotor with respect to the fundamental positively rotating (forward rotating, positive sequence) field.
- Provided a negatively rotating (backward rotating, negative sequence) voltage time subharmonic of 30 Hz ($h=0.5$) is present with a magnitude of $V_{s0.5}/V_{s1}=0.10$ compute a few points (e.g., $T_{e0.5}(s_{0.5}=0)$, $T_{e0.5}(s_{0.5}=s_{0.5\max+})$, $T_{e0.5}(s_{0.5}=s_{0.5\max-})$, $T_{e0.5}(s_{0.5}=1.0)$) of this subharmonic torque characteristic $T_{e0.5}=f(s_{0.5})$ in Nm.
- Sketch the subharmonic torque characteristic $T_{e0.5}=f(s_{0.5})$ in Nm.
- Sketch the total torque characteristics $(T_{e1}+T_{e0.5})=f(s_1)$ in Nm.
- What is the starting torque (at $s_1=1$) without and with this ($h=0.5$) time subharmonic?

Problem 3.12: Voltage stress due to current ripples in stator windings of an induction motor fed by a current-source inverter through a cable of 10 m length

Voltage and current ripples due to PWM CSIs cause voltage stress in windings of machines. The configuration of Fig. E3.14.1 represents the first two turns of the winding of an induction motor. Each turn can be represented by four segments having an inductance L_i , a resistance R_i , a capacitance to ground (frame) C_i , and some interturn capacitances C_{ij} and inductances L_{ij} . Fig. E3.14.2 represents a detailed equivalent circuit for the configuration of Fig. E3.14.1. To simplify the analysis neglect the capacitances C_{ij} and the inductances L_{ij} . This leads to the circuit in Fig. E3.14.3, where the winding is fed by a PWM current source. One obtains the 15 differential equations as listed below.

$$\frac{dv_1}{dt} = \frac{i_s}{C_1} - \frac{G_1}{C_1}v_1 - \frac{i_2}{C_1}$$

$$\frac{di_2}{dt} = -\frac{R_2}{L_2}i_2 - \frac{v_2}{L_2} + \frac{v_1}{L_2}$$

$$\frac{dv_2}{dt} = \frac{i_2}{C_2} - \frac{G_2}{C_2}v_2 - \frac{i_3}{C_2}$$

$$\frac{di_3}{dt} = -\frac{R_3}{L_3}i_3 - \frac{v_3}{L_3} + \frac{v_2}{L_3}$$

$$\frac{dv_3}{dt} = \frac{i_3}{C_3} - \frac{G_3}{C_3}v_3 - \frac{i_4}{C_4}$$

$$\frac{di_4}{dt} = -\frac{R_4}{L_4}i_4 - \frac{v_4}{L_4} + \frac{v_3}{L_4}$$

$$\frac{dv_4}{dt} = \frac{i_4}{C_4} - \frac{G_4}{C_4}v_4 - \frac{i_5}{C_4}$$

$$\frac{di_5}{dt} = -\frac{R_5}{L_5}i_5 - \frac{v_5}{L_5} + \frac{v_4}{L_5}$$

$$\frac{dv_5}{dt} = \frac{i_5}{C_5} - \frac{G_5}{C_5}v_5 - \frac{i_6}{C_5}$$

$$\frac{di_6}{dt} = -\frac{R_6}{L_6}i_6 - \frac{v_6}{L_6} + \frac{v_5}{L_6}$$

$$\frac{dv_6}{dt} = \frac{i_6}{C_6} - \frac{G_6}{C_6}v_6 - \frac{i_7}{C_6}$$

$$\frac{di_7}{dt} = -\frac{R_7}{L_7}i_7 - \frac{v_7}{L_7} + \frac{v_6}{L_7}$$

$$\frac{dv_7}{dt} = \frac{i_7}{C_7} - \frac{G_7}{C_7}v_7 - \frac{i_8}{C_7},$$

$$\frac{di_8}{dt} = -\frac{R_8}{L_8}i_8 - \frac{v_8}{L_8} + \frac{v_7}{L_8}$$

$$\frac{dv_8}{dt} = \frac{i_8}{C_8} - v_8 \left(\frac{1}{Z \cdot C_8} + \frac{G_8}{C_8} \right)$$

The parameters are

$R_1=R_2=R_3=R_4=R_5=R_6=R_7=R_8=25\mu\Omega$;

$L_1=L_3=L_5=L_7=1\text{ mH}$, and $L_2=L_4=L_6=L_8=10\text{ mH}$;

$C_1=0.2\mu\text{F}$ for the cable of 10m length;

$C_3=C_5=C_7=0.7\text{ pF}$, $C_2=C_4=C_6=C_8=7\text{ pF}$,

$C_{15}=C_{37}=0.35\text{ pF}$, $C_{26}=C_{48}=3.5\text{ pF}$;

$G_1=G_3=G_5=G_7=1/(5000\Omega)$, $G_2=G_4=G_6=G_8=1/(500\Omega)$; and

$L_{15}=L_{37}=0.005\text{ mH}$, $L_{26}=L_{48}=0.01\text{ mH}$.

Z is either $1\mu\Omega$ (short circuit) or $1\text{ M}\Omega$ (open circuit).

Assume a PWM triangular current-step function $i_s(t)$ as indicated in Fig. E3.14.4. Using Mathematica or MATLAB compute all state variables for the time period from $t=t_{\text{calculate}}=0$ –2.1 ms. Plot the voltages $(v_1 - v_5)$, $(v_2 - v_6)$, $(v_3 - v_7)$, and $(v_4 - v_8)$ for $t=t_{\text{plot}}=2\text{ ms}$. Note that the computing time $t=t_{\text{calculate}}=2.1\text{ ms}$ must be larger than the plotting time $t=t_{\text{plot}}=2\text{ ms}$.

- Solve the above listed differential equation system for the above listed parameters for $t_{\text{rise}}=5\mu\text{s}$ and $Z=10^{-6}\Omega$.
- Solve the above listed differential equation system for the above listed parameters for $t_{\text{rise}}=5\mu\text{s}$ and $Z=10^6\Omega$.
- Solve the above listed differential equation system for the above listed parameters for $t_{\text{rise}}=75\mu\text{s}$ and $Z=10^{-6}\Omega$.

Problem 3.13: Voltage stress within the stator winding of a large induction hydrogenerator due to lightning surge

Lightning surges cause voltage stress in windings of machines [94]. The configuration of Fig. E3.14.1 represents the first two turns of the winding of an induction generator operating without transformer on the 2400 V_{L-L} power system. Each turn can be represented by four segments having an inductance L_i , a resistance R_i , a capacitance to ground (frame) C_i , and some interturn capacitances C_{ij} and inductances L_{ij} . Fig. E3.14.2 represents a detailed equivalent circuit for the configuration of Fig. E3.14.1. To simplify the analysis neglect the capacitances C_{ij} and the inductances L_{ij} . This leads to the circuit Fig. E3.14.3. One obtains the 15 differential equations as listed in Problem 3.12.

The parameters are

$$R_1 = R_2 = R_3 = R_4 = R_5 = R_6 = R_7 = R_8 = 25 \mu\Omega;$$

$$L_1 = L_3 = L_5 = L_7 = 1 \text{ mH, and } L_2 = L_4 = L_6 = L_8 = 10 \text{ mH};$$

$$C_1 = C_3 = C_5 = C_7 = 7 \text{ pF, } C_2 = C_4 = C_6 = C_8 = 70 \text{ pF, } C_{15} = C_{37} = 3.5 \text{ pF,}$$

$$C_{26} = C_{48} = 35 \text{ pF; } G_1 = G_3 = G_5 = G_7 = 1/(5000 \Omega), G_2 = G_4 = G_6 = G_8 = 1/(500 \Omega); \text{ and}$$

$$L_{15} = L_{37} = 0.005 \text{ mH, } L_{26} = L_{48} = 0.01 \text{ mH.}$$

Z is either $1 \mu\Omega$ (short circuit) or $1 \text{ M}\Omega$ (open circuit), $I_{\text{surge}} = 500 \text{ A}$.

Assume a lightning surge function $i_s(t)$ as indicated in Fig. P3.13. Using Mathematica or MATLAB compute all state variables for the time period from $t = t_{\text{calculate}} = 0$ –2.1 ms. Plot the voltages $(v_1 - v_5)$, $(v_2 - v_6)$, $(v_3 - v_7)$, and $(v_4 - v_8)$ for $t = t_{\text{plot}} = 2 \text{ ms}$. Note that the computing time $t = t_{\text{calculate}} = 2.1 \text{ ms}$ must be larger than the plotting time $t = t_{\text{plot}} = 2 \text{ ms}$.

- Solve the differential equation system of Problem 3.12 for the above listed parameters for $t_{\text{rise}} = 1 \mu\text{s}$ and $Z = 10^{-6} \Omega$.
- Solve the differential equation system of Problem 3.12 for the above listed parameters for $t_{\text{rise}} = 1 \mu\text{s}$ and $Z = 10^6 \Omega$.

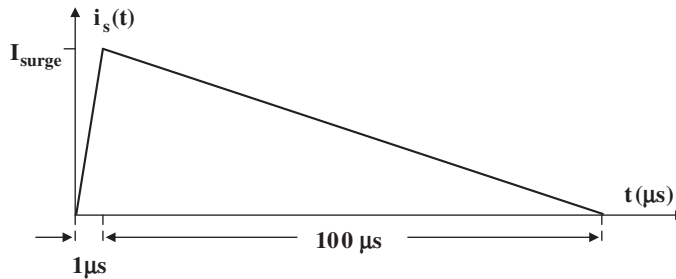


FIG. P3.13 Lightning surge wave shape according to IEC [94].

Problem 3.14: Harmonics of current and voltage wave shapes of three-phase induction motor fed by a thyristor/triac controller

Determine the Fourier coefficients of the (nonsinusoidal) voltages (v_{ac}, v_{bc}) and currents (i_a, i_b) of Fig. 3.34 by sampling the wave shapes in 30° intervals from 0° to 360° which results in $360/30 = 12$ intervals. For the given sampling-rate the Nyquist criterion (the approximation

error of the reconstructed function is minimum) is satisfied for taking into account $12/3 = 4$ harmonics, that is 1st, 2nd, 3rd, and 4th. Is it desirable to sample more points per function, say 36 intervals, to better approximate the above-mentioned functions resulting in $360/10 = 36$ intervals and $36/3 = 12$ harmonics?

Problem 3.15: Harmonics of current and voltage wave shapes of single-phase induction motor fed by a thyristor/triac controller

Determine the Fourier coefficients of the (nonsinusoidal) voltages (V_1 , V_2) and output current (I_2) of Fig. 3.33 by sampling the wave shapes in 30° intervals from 0° to 360° which results in $360/30 = 12$ intervals. For the given sampling-rate the Nyquist criterion (the approximation error of the reconstructed function is minimum) is satisfied when taking into account $12/3 = 4$ harmonics, that is 1st, 2nd, 3rd, and 4th. Is it desirable to sample more points per function, say 36 intervals, to better approximate the above-mentioned functions resulting in $360/10 = 36$ intervals and $36/3 = 12$ harmonics?

Problem 3.16: Harmonics of input current and voltage wave shapes of permanent-split capacitor motor for air conditioner at minimum load at $f = 60$ Hz

Determine the Fourier coefficients of the (nonsinusoidal) current $i_{in}(t)$ and voltage $v_{in}(t)$ of Fig. E3.6.7A by sampling the wave shapes in 30° intervals from 0° to 360° which results in $360/30 = 12$ intervals. For the given sampling-rate the Nyquist criterion (the approximation error of the reconstructed function is minimum) is satisfied for taking into account $N_{\max} = 12/3 = 4$ harmonics, that is 1st, 2nd, 3rd, and 4th. Is it desirable to sample more points per function, say 36 intervals, to better approximate the above-mentioned functions resulting in $360/10 = 36$ intervals and $36/3 = 12$ harmonics?

Problem 3.17: Harmonics of input current and voltage wave shapes of permanent-Split capacitor motor for air conditioner at minimum load at $f = 60$ Hz

Determine the Fourier coefficients of the (nonsinusoidal) current $i_{in}(t)$ and voltage $v_{in}(t)$ of Fig. E3.6.7B by sampling the wave shapes in 30° intervals from 0° to 360° which results in $360/30 = 12$ intervals. For the given sampling-rate the Nyquist criterion (the approximation error of the reconstructed function is minimum) is satisfied for taking into account $N_{\max} = 12/3 = 4$ harmonics, that is 1st, 2nd, 3rd, and 4th. Is it desirable to sample more points per function, say 36 intervals, to better approximate the above-mentioned functions resulting in $360/10 = 36$ intervals and $36/3 = 12$ harmonics?

References

- [1] G. Neidhoefer, Early three-phase power, IEEE Power Energ. Mag. 5 (5) (2007) 88–102.
- [2] C.P. Steinmetz, Steinmetz on induction-motor discussion in New York, AIEE Trans. (1898) 106–110.
- [3] R. Richter, Elektrische Maschinen, vol. 1, Verlag von Julius Springer, Berlin, 1924.
- [4] G. Kron, The generalized theory of electrical machinery, AIEE Trans. 49 (1930) 666–683.
- [5] C.G. Veinott, Performance calculation of induction motors, AIEE Trans. (1932) 743–755.
- [6] W. Schuiskey, Berechnung elektrischer Maschinen, Springer-Verlag, Wien, 1960.
- [7] T. Bodefeld, H. Sequenz, Elektrische Maschinen, Springer-Verlag, Wien, 1962.
- [8] P.L. Alger, The Nature of Polyphase Induction Machines, John Wiley & Sons, Inc, New York, 1951.

- [9] A.E. Fitzgerald, C. Kingsley, S.D. Umans, *Electric Machinery*, fifth ed., McGraw-Hill Publishing Company, New York, 1990.
- [10] W.V. Lyon, *Transient Analysis of Alternating Current Machinery*, John Wiley & Sons, Inc., New York, 1954.
- [11] M.G. Say, *Alternating Current Machines*, John Wiley & Sons, New York, 1983.
- [12] L.W. Match, J.D. Morgan, *Electromagnetic and Electromechanical Machines*, third ed., Harper & Row Publishers, New York, 1986.
- [13] S.J. Chapman, *Electric Machinery Fundamentals*, third ed., McGraw Hill Boston, 1999.
- [14] E.F. Fuchs, J. Appelbaum, I.A. Khan, J. Höll, U.V. Frank, *Optimization of Induction Motor Efficiency*, Vol. 1: Three-Phase Induction Motors, Electric Power Research Institute, 1985. EPRI EL-4152.
- [15] E.F. Fuchs, H. Huang, A.J. Vandenput, J. Appelbaum, Z. Zak, M.S. Erlicki, *Optimization of Induction Motor Efficiency*, Vol. 2: Single-Phase Induction Motors, Electric Power Research Institute, 1987. EPRI EL-4152.
- [16] E.F. Fuchs, G.A. McNaughton, Comparison of first-order finite difference and finite element algorithms for the analysis of magnetic fields. Part I. Theoretical analysis, *IEEE Trans. Power Appar. Syst.* PAS-101 (5) (1982) 1170–1180. Comparison of first-order finite difference and finite element algorithms for the analysis of magnetic fields. Part II. Numerical results, *IEEE Trans. Power Appar. Syst.* PAS-101 (5) (1982) 1181–1201.
- [17] E.F. Fuchs, L.H. Chang, J. Appelbaum, Magnetizing current, iron losses and forces of three-phase induction machines at sinusoidal and nonsinusoidal terminal voltages. Part I. Analysis, *IEEE Trans. Power Appar. Syst.* PAS-103 (11) (1984) 3303–3312.
- [18] E.F. Fuchs, D.J. Roesler, L.H. Chang, Magnetizing current, iron losses and forces of three-phase induction machines at sinusoidal and nonsinusoidal terminal voltages. Part II. Results, *IEEE Trans. Power Appar. Syst.* PAS-103 (11) (1984) 3313–3326.
- [19] E.F. Fuchs, M. Poloujadoff, G.W. Neal, Starting performance of saturable three-phase induction motors, *IEEE Trans. Energy Convers.* EC- 3 (3) (1988) 624–635.
- [20] W. Leonhard, *Control of Electrical Drives*, Springer-Verlag, Berlin, 1985.
- [21] J. Schraud, Control of an induction motor by electronically switching its windings with different pole numbers to extend the speed range at constant power, in: *Independent Study*, University of Colorado, Boulder, 1999.
- [22] E.F. Fuchs, J. Schraud, F.S. Fuchs, Analysis of critical-speed increase of induction machines via winding reconfiguration with solid-state switches, *IEEE Trans. Energy Convers.* 23 (3) (2008) 774–780.
- [23] J. Schraud, E.F. Fuchs, H.A. Fuchs, Experimental verification of critical-speed increase of induction machines via winding reconfiguration with solid-state switches, *IEEE Trans. Energy Convers.* 23 (2) (2008) 460–465.
- [24] D. Lin, E.F. Fuchs, M. Doyle, Computer-aided testing program of electrical apparatus supplying nonlinear loads, *IEEE Trans. Power Syst.* 12 (1) (1997) 11–21.
- [25] D. Lin, T. Batan, E.F. Fuchs, W.M. Grady, Harmonic losses of single-phase induction motors under nonsinusoidal voltages, *IEEE Trans. Energy Convers.* 11 (2) (1996) 273–286.
- [26] E.F. Fuchs, D. Lin, Testing of Power Planners at the University of Colorado, Final Report, Boulder, Colorado, February 11, 1996.
- [27] E.F. Fuchs, Y. You, D.J. Roesler, Modeling, simulation and their validation of three-phase transformers with three legs under DC bias, *IEEE Trans. Power Deliv.* 14 (2) (1999) 443–449.
- [28] E.F. Fuchs, D.J. Roesler, M.A.S. Masoum, Are harmonic recommendations according to IEEE and IEC too restrictive? *IEEE Trans. Power Deliv.* 19 (4) (2004) 1775–1786.
- [29] E.F. Fuchs, ECEN 5787, Power Quality in Power Systems and Electric Machines, Course Notes, University of Colorado, 2006.
- [30] B. Heller, V. Hamata, *Harmonic Field Effects in Induction Machines*, Academia, Publishing House of Czechoslovak Academy of Sciences, Prague, 1977.
- [31] S.P. Verma, A. Balan, Measurement techniques for vibration and acoustic noise of electrical machines, in: *Proceedings of the Sixth International Conference on Electrical Machines and Drives* (Conf. Publ. No. 376), 1993, pp. 546–551.
- [32] S.P. Verma, W. Li, Measurement of vibrations and radiated acoustic noise of electrical machines, in: *Proceedings of the Sixth International Conference on Electrical Machines and Systems*, vol. 2, 2003, pp. 861–866.
- [33] S.P. Verma, A. Balan, Determination of radial forces in relation to noise and vibration problems of squirrel-cage induction motors, *IEEE Trans. Energy Convers.* 9 (2) (1994) 404–412.
- [34] H. Huang, E.F. Fuchs, Z. Zak, J.C. White, Optimization of single-phase induction motor design, parts I and II, *IEEE Trans. Energy Convers.* vol. EC-3 (2) (1988) 349–356. 357–366.

- [35] R. Fei, E.F. Fuchs, H. Huang, Comparison of two optimization techniques as applied to three-phase induction motor design, *IEEE Trans. Energy Convers.* EC-4 (1989) 651–660.
- [36] E.F. Fuchs, D. Lin, D. Yildirim, “Test Results of Prior Art Permanent-Split-Capacitor (PSC) Motors,” Final Report, University of Colorado, Boulder, 1996.
- [37] E.F. Fuchs, H. Huang, A.J. Vandenput, J. Höll, Z. Zak, J. Appelbaum, M. Erlicki, Optimization of Induction Motor Efficiency, Vol. 2: Single-Phase Induction Motors, Publication of the Electric Power Research Institute, Palo Alto, CA, 1987. EPRI EL-4152-CCM. 450 pp.
- [38] E.F. Fuchs, L.H. Chang, D.J. Roesler, J. Appelbaum, Magnetizing current, iron losses and forces of three-phase induction machines at sinusoidal and nonsinusoidal terminal voltages, Parts I and II, *IEEE Trans. Power Appar. Syst.* PAS-103 (11) (1984) 3303–3312. 3313–3326.
- [39] E.F. Fuchs, D.J. Roesler, F.S. Alashhab, Sensitivity of electrical appliances to harmonics and fractional harmonics of the power system’s voltage, Part I, *IEEE Trans. Power Deliv.* TPWRD-2 (2) (1987) 437–444.
- [40] E.F. Fuchs, D.J. Roesler, K.P. Kovacs, Sensitivity of electrical appliances to harmonics and fractional harmonics of the power system’s voltage, Part II, *IEEE Trans. Power Deliv.* TPWRD-2 (2) (1987) 445–453.
- [41] J.P.G. de Abreu, A.E. Emanuel, The need to limit subharmonic injection, in: *Proceedings of the 9th International Conference on Harmonics and Quality of Power*, vol. I, 2000, pp. 251–253.
- [42] J.F. Fuller, E.F. Fuchs, D.J. Roesler, Influence of harmonics on power system distribution protection, *IEEE Trans. Power Deliv.* TPWRD-3 (2) (1988) 546–554.
- [43] K. Oberretl, The field-harmonic theory of the squirrel cage motor taking multiple armature reaction and parallel winding branches into account, *Arch. Electrotech.* 49 (1965) 343–364.
- [44] K. Oberretl, Field-harmonic theory of slip-ring motor taking multiple armature reactions into account, *Proc. IEEE* 117 (1970) 1667–1674.
- [45] K. Oberretl, Influence of parallel winding branches, delta connection, coil pitching, slot opening, and slot skew on the starting torque of squirrel-cage motors, *Elektrotech. Z.* 86A (1965) 619–627.
- [46] K. Oberretl, General field-harmonic theory for three-phase, single-phase and linear motors with squirrel-cage rotor, taking multiple armature reaction and slot openings into account, *Arch. Electrotech.* 76 (1993). Part I: Theory and method of calculation, pp. 111–120, and Part II: Results and comparison with measurements, pp. 201–212.
- [47] W. Wagner, Calculation of Three-Phase Induction Motors with Squirrel-Cage, Taking Multiple Armature Reaction, Slot Openings and Inter-Bar Currents into Account, Doctoral Dissertation, Universität Dortmund, 1986.
- [48] L. Serrano-Iribarnegaray, J. Martinez-Roman, Critical review of the analytical approaches accounting for inter-bar currents and experimental study of aging in two-speed motors for elevator drives, *Proc. IEEE* 152 (2005) 72–80.
- [49] A. Tenhunen, A. Arkio, Modeling of induction machines with skewed rotor slots, *IEE Proc. Electr. Power Appl.* 148 (2001) 45–50.
- [50] R. Gottkehaskamp, Nonlinear Analysis of Induction Machines in Transient and Steady State Using Finite-Element and Time-Stepping Method Accounting for Solid-iron Rotor with Squirrel Cage, Doctoral Dissertation, University of Dortmund, 1992.
- [51] S. Williamson, L.H. Lim, A.C. Smith, Transient analysis of cage-induction motors using finite elements, *IEEE Trans. Magn.* 26 (1990) 941–944.
- [52] K. Oberretl, Dependence of rotor bar currents from rotor position in squirrel-cage motors, in: *International Conference on Electrical Machines*, Athens, 1980, pp. 1761–1767.
- [53] K. Oberretl, Distribution of currents in squirrel-cage rotors dependent on rotor position, *Arch. Electrotech.* 70 (1987) 217–225.
- [54] K. Oberretl, Iron losses, flux pulsation and magnetic slot wedges in squirrel-cage motors, *Electr. Eng.* 82 (2000) 301–311.
- [55] K. Oberretl, New facts about parasitic torques in squirrel-cage induction motors, *Bull. Oerlikon* (389/390) (1969) 130–155 (in English, French, German).
- [56] K. Oberretl, Parasitic synchronous torques and oscillations in squirrel-cage induction motors, influence of transients and iron saturation, *Arch. Electrotech.* 77 (1994). Part I: Steady state, pp. 179–190, and Part II: Rapid running-up, field-dependent permeability, pp. 277–288.
- [57] K. Oberretl, 13 rules to minimize stray load losses in induction motors, *Bull. Oerlikon* (389/390) (1969) 1–11 (in English, French, German).

- [58] K. Oberretl, Tooth breakage and tooth forces in asynchronous motors, *Electr. Eng.* 80 (1997) 309–323.
- [59] H. Frohne, Über die primären Bestimmungsgrößen der Lautstärke bei Asynchronmotoren, Doctoral Dissertation, University of Hannover, 1959.
- [60] H. Jordan, Geräuscharme Elektromotoren, Girardet, Essen, 1950.
- [61] B. Narolski, Beiträge zur Berechnung des magnetischen Geräusches bei Asynchronmotoren, *Acta Tech. CSAV* (1965) 156–171.
- [62] Z. Üner, Über die Ermittlung der Lautstärke des magnetischen Lärms von Drehstrommotoren, Doctoral Dissertation, University of Hannover, 1964.
- [63] R.S. Girgis, S.P. Verma, Resonant frequencies and vibration behavior of electrical machines as affected by teeth, windings, frame and laminations, *IEEE Trans. Power Appar. Syst.* (1979) 1446–1455.
- [64] W. Kuhl, Messungen zu den Theorien der Eigenschwingungen von Kreisringen beliebiger Wandstärke, in: *Akustische Zeitschrift*, vol. 7, 1942, pp. 125–152.
- [65] L. Beranek, *Acoustics*, McGraw-Hill, New York, 1954.
- [66] A.J. Ellison, C.J. Moore, Calculation of acoustic power radiated by short electric machines, *Acustica* 21 (1969) 10–15.
- [67] Z.Q. Zhu, D. Howe, Improved methods for prediction of electromagnetic noise radiated by electrical machines, *Proc. IEEE* 1451 (1994) 199.
- [68] S. Williamson, A.C. Smith, Equivalent circuits for cage induction motors with inter-bar currents, *IEEE Proc. Electr. Power Appl.* 149 (2002).
- [69] K. Oberretl, Losses, torques and magnetic noise in induction motors with static converter supply taking multiple armature reaction and slot openings into account, *IET Electr. Power Appl.* 1 (4) (2007) 517–531.
- [70] B.S. Oyegoke, Effect of the overhang capacitance on the fast-rising surge distribution in winding of a large motor, *IEE Proc. Sci. Meas. Technol.* 146 (6) (1999) 299–303.
- [71] M. Kaufhold, et al., Electrical stress and failure mechanism of the winding insulation in PWM-inverter-fed low-voltage induction motors, *IEEE Trans. Ind. Electron.* 47 (3) (2000) 396–402.
- [72] J. Wang, et al., Insulation Fault Detection in a PWM Controlled Induction Motor—Experimental Design and Preliminary Results, Paper No. 0-7803-6, IEEE, 2000.
- [73] A.H. Bonnet, Analysis of the impact of pulse-width modulated inverter voltage waveforms on AC induction motors, *IEEE Trans. Ind. Appl.* 32 (2) (1996) 386–392.
- [74] H.W. Penrose, Electric motor repair for low voltage induction motors in PWM inverter duty environments, in: *Proceedings of Electrical Insulation and Electrical Manufacturing and Coil Winding Conference* (Cat. No. 97CH36075), 1997, pp. 841–848. <https://ieeexplore.ieee.org/document/651321>.
- [75] B.K. Gupta, et al., Turn insulation capability of large AC motors, parts 1, 2, 3, *IEEE Trans. Energy Convers. EC-2* (4) (1987) 658–665. pp. 666–673, pp. 674–679.
- [76] A. Narang, et al., Measurement and analysis of surge distribution in motor windings, *IEEE Trans. Energy Convers.* 4 (1) (1989) 126–134.
- [77] J.L. Guardado, K.J. Cornick, The effects of coil parameters on the distribution of steep-fronted surges in machine windings, *IEEE Trans. Energy Convers.* 7 (3) (1992) 552–556.
- [78] J.L. Guardado, K.J. Cornick, A computer model for calculating steep-fronted surge distribution in machine windings, *IEEE Trans. Energy Convers.* 4 (1) (1989) 95–101.
- [79] V. Kinnarees, P. Jaruwanchai, D. Suksawat, S. Pothivejkul, Effect of motor parameter changes on harmonic power loss in PWM fed induction machines, in: *IEEE International Conference on Power Electronic and Drive System, PEDS '99, Hong Kong*, 1999.
- [80] K. Smith, L. Ran, A time domain equivalent circuit for the inverter-fed induction motor, in: *9th International Conference on Electrical Machines and Drives*, No. 486, IEE, 1999, pp. 1–5.
- [81] G.A. Capolino, H. Henao, A new model for three-phase induction machine diagnosis using a simplified spectral approach, in: *Industry Applications Conference*, 2001. Thirty-Sixth IAS Annual Meeting, Conference Record of the 2001 IEEE, vol. 3, 2001, pp. 1558–1563.
- [82] K.D. Hurst, T.G. Habetler, Sensorless speed measurement using current harmonic spectral estimation in induction machine drives, *IEEE Trans. Power Electron.* 11 (1) (1996) 66–73.
- [83] S. Fruchtenicht, E. Pittius, H.O. Seinsch, A diagnostic system for three-phase asynchronous machines, in: *Fourth International Conference on Electrical Machines and Drives*, 1989, pp. 163–171.

- [84] D.G. Dorrell, W.T. Thomson, S. Roach, Combined effects of static and dynamic eccentricity on airgap flux waves and the application of current monitoring to detect dynamic eccentricity in 3-phase induction motors, in: *Seventh International Conference on Electrical Machines and Drives*, 11–13 September, 1995, pp. 151–155.
- [85] T.M. Wolbank, P. Macheiner, J.L. Machl, H. Hauser, Detection of rotor eccentricity caused air gap asymmetries in inverter fed AC machines based on current step response, in: *The Fifth International Conference on Power Electronics and Drive Systems 2003, PEDS 2003*, vol. 1, 2003, pp. 468–473.
- [86] H.A. Toliyat, M.S. Arefeen, A.G. Parlos, A method for dynamic simulation of air-gap eccentricity in induction machines, *IEEE Trans. Ind. Appl.* 32 (4) (1996) 910–918.
- [87] C. Kral, T.G. Habetler, R.G. Harley, Detection of mechanical imbalances of induction machines without spectral analysis of time-domain signals, *IEEE Trans. Ind. Appl.* 40 (4) (2004) 1101–1106.
- [88] J. Zitzelsberger, W. Hofmann, Effects of modified modulation strategies on bearing currents and operational characteristics of AC induction machines, in: *Industrial Electronics Society, 2004. IECON 2004. 30th Annual Conference of IEEE*, vol. 3, 2004, pp. 3025–3030.
- [89] S. Chen, T.A. Lipo, D. Fitzgerald, Source of induction motor bearing currents caused by PWM inverters, *IEEE Trans. Energy Convers.* 11 (1) (1996) 25–32.
- [90] O.J.M. Smith, Large low-cost single-phase SEMIHEX™ motors, *IEEE Trans. Energy Convers.* 14 (4) (1999) 1353–1358.
- [91] O.J.M. Smith, High-efficiency single-phase motor, *IEEE Trans. Energy Convers.* 7 (3) (1992) 560–569.
- [92] M.L. Barnes, C.A. Gross, Comparison of induction machine equivalent circuit models, in: *Proceedings of the Twenty-Seventh Southeastern Symposium on System Theory*, 12–14 March, 1995, pp. 14–17.
- [93] G.K. Dubey, *Power Semiconductor Controlled Drives*, Prentice Hall, Englewood Cliffs, NJ, 1989.
- [94] Standard | High Voltage Test Techniques—Part 2, IEC Publication 60060-2, 2010. <https://webstore.iec.ch>.

Additional bibliography

- [95] E.F. Fuchs, W.J. Hanna, Measured efficiency improvements of induction motors with thyristor/triac controllers, *IEEE Trans. Energy Convers.* 17 (4) (2002) 437–444.
- [96] P.K. Kovacs, *Transient Phenomena in Electrical Machines*, Akademiai Kiado, Budapest, Hungary, 1984.
- [97] E.F. Fuchs, Speed control of electric machines based on the change of the number of series turns of windings and the (induced) voltage/frequency ratio, in: *Invention Disclosure*, University of Colorado, Boulder, July 1999.
- [98] E.F. Fuchs, Elimination of blade-pitch control by operating variable-speed wind turbines under stalled conditions at any rotational speed, in: *Invention Disclosure*, University of Colorado, Boulder, February 2007.
- [99] E.F. Fuchs, Integrated starter/alternator with wide torque-speed range for automotive applications on land, water, and in air, in: *Invention Disclosure*, University of Colorado, Boulder, February 2007.
- [100] E.F. Fuchs, Alternating Current Machine with Increased Torque Above and Below Rated Speed for Hybrid Electric Propulsion Systems, United States Patents 8183814 (dated 01-28-2010), and 20120268053 (dated 10-25-2012).

This page intentionally left blank

Modeling and analysis of synchronous machines

Power quality problems of synchronous machines can be of the following types due to abnormal operation:

- unbalanced load,
- torques during faults such as short circuits (e.g., balanced three-phase short circuit, line-to-line short circuit), out-of-phase synchronization, unbalanced line voltages, reclosing,
- winding forces during abnormal operation and faults,
- excessive saturation of iron cores,
- excessive voltage and current harmonics,
- harmonic torques,
- mechanical vibrations and hunting,
- static and dynamic rotor eccentricities,
- bearing currents and shaft fluxes
- insulation stress due to nonlinear sources (e.g., inverters) and loads (e.g., rectifiers)
- dynamic instability when connected to weak systems, and
- premature aging of insulation material caused by cyclic operating modes as experienced by machines, for example, in pumped-storage and wind-power plants.

The theory of synchronous machines under load was developed during the first half of the 20th century by Blondel [1], Doherty and Nickle [2,3], Park [4,5], Kilgore [6], Concordia [7], and Lyon [8]—just to name a few of the hundreds of engineers and scientists who have published in this area of expertise. In these works, mostly balanced steady-state, transient, and subtransient performances of synchronous machines are analyzed. Most power quality problems as listed above are neglected in these early publications because power quality was not an issue during the last century. However, the asymmetric properties of synchronous machines are well known, resulting in an infinite series of even-current harmonics in the rotor and an infinite series of odd-current harmonics in the stator. An extremely asymmetric machine is the single-phase synchronous machine. Such machines are still used today—albeit

with a very strong damper winding (amortisseur) in order to attenuate the higher harmonics within the machine. This attenuation of harmonics requires large amortisseurs and results in very large machines; that is, the volume per generated power is large. Examples are the 16 and $2/3 = 16.666\dots$ Hz generator of the German railroad system [9].

Application of power electronic devices, nonlinear loads, and distributed generation (DG) due to renewable energy sources in interconnected and islanding power systems causes concerns with respect to the impact of harmonics and poor power quality on the performance and stability of synchronous generators. Although standards generally accept small to medium-sized distorting loads, for large nonlinear loads a detailed harmonic flow study is desirable. For strong power systems, studies do not extend beyond the substation level, but for weak power systems the analysis may need to include generators of larger generating plants. For the analysis of such systems and for the optimal design of newly developed DG and isolated systems as well as synchronous motor drives, accurate harmonic models of synchronous machines are required. An example for the latter is the connection of wind-farm generators (without power electronic interface) to a weak power system.

The synchronous machine is an essential component of a power system; it allows conversion from mechanical to electrical energy. It is a device that works in synchronism with the rest of the electrical network. Several frames of reference have been used to model synchronous machine operation. The first and still the most widely used model is based on the concept of the $dq0$ -coordinate system [4,5]. The synchronous machine has also been represented in $\alpha\beta0$ coordinates [10] to allow a natural transition between abc and $dq0$ coordinates. Detailed models of the synchronous machine have also been developed for harmonic analysis [11–13].

All these models, however, cannot accurately describe the transient and steady-state unbalanced operation of a synchronous machine unless transient and subtransient parameters are introduced. A machine model in the abc -coordinate system can naturally simulate these abnormal operating conditions, because it is based on a realistic representation that can take into account the explicit time-varying nature of the stator inductances and that of the mutual stator-rotor inductances, as well as spatial harmonic effects. In one of the first models in the abc time domain [14], the analysis illustrates the advantages of this abc -coordinate system (as applied to synchronous machine representation) compared with the models based on $dq0$ and $\alpha\beta0$ coordinates. For example, a model in abc coordinates is used for the dynamic analysis of a three-phase synchronous generator feeding a static converter for high-voltage DC (HVDC) transmission [15]: harmonic terms up to the fourth order are introduced in the stator-inductance matrix. In more recent contributions [16,17], abc time-domain models of a synchronous machine are proposed where saturation effects are incorporated.

This chapter reviews the electrical and mechanical equations related to synchronous machines, and their conventional model in $dq0$ coordinates—which is suitable for sinusoidal operating conditions—is presented. It investigates the behavior of synchronous machines under faults (e.g., balanced and unbalanced short circuits, out-of-phase synchronization, reclosing) and the influence of harmonics superimposed with the fundamental quantities, and it introduces various harmonic models of synchronous machines.

4.1 Sinusoidal state-space modeling of a synchronous machine in the time domain

A synchronous machine is a complicated electromagnetic device, and it is very important for the operation of power systems. Detailed models are needed to analyze its behavior under different (e.g., steady-state, transient, subtransient, imbalance, under the influence of harmonics) operating conditions and to understand their impact on the power system. Before introducing the conventional $dq0$ model of synchronous machines for sinusoidal operating conditions, the associated electrical and mechanical equations and magnetic nonlinearities are presented.

4.1.1 Electrical equations of a synchronous machine

Based on the stator and rotor equivalent circuits, voltage equations can be obtained in terms of flux linkages and winding resistances [17]. According to Faraday's and Kirchhoff's laws

$$v = Ri + \frac{d\psi}{dt}. \quad (4.1)$$

Neglecting saturation the flux linkages are proportional to the currents; thus

$$\Psi = Li. \quad (4.2)$$

Substitution of Eq. (4.2) into Eq. (4.1) yields—after solving for $d\Psi/dt$ —the differential equation

$$\frac{d\psi}{dt} = v - RL^{-1}\psi. \quad (4.3)$$

However, it is required to take into account the interaction between self- and mutual inductances of the windings residing on the stator and rotor members. Thus, a set of differential equations can be written in matrix form for the stator and rotor circuits as

$$v_{abc} = R_S i_{abc} + p\psi_{abc}, \quad (4.4)$$

$$v_{fdq} = R_R i_{fdq} + p\psi_{fdq}, \quad (4.5)$$

where subscripts abc and fdq represent the stator (e.g., abc components) and rotor (e.g., field, d - and q -axes components), respectively, and p is the differential operator.

The matrix equation for the flux linkages is

$$\begin{bmatrix} \psi_{abc} \\ \psi_{fdq} \end{bmatrix} = [L] \begin{bmatrix} i_{abc} \\ i_{fdq} \end{bmatrix}. \quad (4.6)$$

In Eqs. (4.1)–(4.6):

$$p\psi = p \begin{bmatrix} \psi_{abc} & \psi_{fdq} \end{bmatrix}^T = p \begin{bmatrix} \psi_a & \psi_b & \psi_c & \psi_f & \psi_{kd1} & \dots & \psi_{kdn} & \psi_{kq1} & \dots & \psi_{kqn} \end{bmatrix}^T, \quad (4.7)$$

$$v = [v_{abc} \ v_{fdq}]^T = [v_a \ v_b \ v_c \ v_f \ v_{kd1} \dots v_{kdn} \ v_{kq1} \dots v_{kqn}]^T, \quad (4.8)$$

$$i = [i_{abc} \ i_{fdq}]^T = [i_a \ i_b \ i_c \ i_f \ i_{kd1} \dots i_{kdn} \ i_{kq1} \dots i_{kqn}]^T, \quad (4.9)$$

$$R = \text{diag}[R_a \ R_b \ R_c \ R_f \ R_{kd1} \dots R_{kdn} \ R_{kq1} \dots R_{kqn}]^T, \quad (4.10)$$

where kdn and kqn are the number of damper windings of the d - and q -axes, respectively. The inductance matrix L has the form

$$[L] = \begin{bmatrix} L_{SS} & L_{SR} \\ L_{RS} & L_{RR} \end{bmatrix} \quad (4.11)$$

L_{SS} are stator self-inductances, L_{SR} are stator-rotor mutual inductances, where $L_{SR} = [L_{RS}]^T$, and L_{RR} are rotor self-inductances. T indicates the transpose of a matrix. Note that L_{SS} , L_{SR} , and L_{RS} consist of time-varying inductances representing the interrelationships between the stator and rotor windings as a function of the rotor position angle θ .

Therefore, the inductance matrix is a function of time due to θ which itself is a function of time (e.g., $\theta = \omega_r t + \delta - \pi/2$, where ω_r and δ are rotor angular velocity and rotor angle, respectively):

$$L = \begin{bmatrix} L_{aa} & L_{ab} & L_{ac} & L_{af} & L_{akd} & L_{akq} & L_{akD} & L_{akQ} \\ L_{ba} & L_{bb} & L_{bc} & L_{bf} & L_{bkd} & L_{bkq} & L_{bkD} & L_{bkQ} \\ L_{ca} & L_{cb} & L_{cc} & L_{cf} & L_{ckd} & L_{ckq} & L_{ckD} & L_{ckQ} \\ L_{fa} & L_{fb} & L_{fc} & L_{ff} & L_{fkD} & 0 & L_{fkD} & 0 \\ L_{kda} & L_{kdb} & L_{kdc} & L_{kdf} & L_{kdD} & 0 & L_{kdD} & 0 \\ L_{kqa} & L_{kqb} & L_{kqc} & 0 & 0 & L_{kqkq} & 0 & L_{kqkQ} \\ L_{kDa} & L_{kDb} & L_{kDc} & L_{kDf} & L_{kDD} & 0 & L_{kDD} & 0 \\ L_{kQa} & L_{kQb} & L_{kQc} & 0 & 0 & L_{kQkq} & 0 & L_{kQkQ} \end{bmatrix}. \quad (4.12a)$$

In the above equations, only two damper windings along the d - and q -axes are assumed and [17]:

- The entries of L_{RR} represent—neglecting saturation—constant inductances, independent of the rotor position θ . L_{RR} has the form

$$L_{RR} = \begin{bmatrix} L_{ff} & L_{fkD} & 0 & L_{fkD} & 0 \\ L_{kdf} & L_{kdD} & 0 & L_{kdD} & 0 \\ 0 & 0 & L_{kqkq} & 0 & L_{kqkQ} \\ L_{kDf} & L_{kDD} & 0 & L_{kDD} & 0 \\ 0 & 0 & L_{kQkq} & 0 & L_{kQkQ} \end{bmatrix}. \quad (4.12b)$$

- Considering even harmonics (h) up to the n th order, L_{SS} has the form

$$L_{SS} = \begin{bmatrix} L_{aa_0} + \sum_{h=2}^n L_{aa_h} \cos h\theta & -L_{ab_0} - \sum_{h=2}^n L_{ab_h} \cos h\left(\theta + \frac{\pi}{6}\right) & -L_{ac_0} - \sum_{h=2}^n L_{ac_h} \cos h\left(\theta + \frac{5\pi}{6}\right) \\ -L_{ba_0} - \sum_{h=2}^n L_{ba_h} \cos h\left(\theta + \frac{\pi}{6}\right) & L_{bb_0} + \sum_{h=2}^n L_{bb_h} \cos h\left(\theta - \frac{2\pi}{3}\right) & -L_{bc_0} - \sum_{h=2}^n L_{bc_h} \cos h\left(\theta - \frac{\pi}{2}\right) \\ -L_{ca_0} - \sum_{h=2}^n L_{ca_h} \cos h\left(\theta + \frac{5\pi}{6}\right) & -L_{cb_0} - \sum_{h=2}^n L_{cb_h} \cos h\left(\theta - \frac{\pi}{2}\right) & L_{cc_0} + \sum_{h=2}^n L_{cc_h} \cos h\left(\theta + \frac{2\pi}{3}\right) \end{bmatrix}. \quad (4.12c)$$

- Considering odd harmonics (h) up to the m th order, L_{SR} has the form

$$L_{SR} = \begin{bmatrix} \sum_{h=1}^m M_{f_h} \cosh \theta & \sum_{h=1}^m M_{kd_h} \cosh \theta & -\sum_{h=1}^m M_{kq_h} \cosh \theta & \sum_{h=1}^m M_{kD_h} \cosh \theta & -\sum_{h=1}^m M_{kQ_h} \cosh \theta \\ \sum_{h=1}^m M_{f_h} \cosh\left(\theta - \frac{2\pi}{3}\right) & \sum_{h=1}^m M_{kd_h} \cosh\left(\theta - \frac{2\pi}{3}\right) & -\sum_{h=1}^m M_{kq_h} \cosh\left(\theta - \frac{2\pi}{3}\right) & \sum_{h=1}^m M_{kD_h} \cosh\left(\theta - \frac{2\pi}{3}\right) & -\sum_{h=1}^m M_{kQ_h} \cosh\left(\theta - \frac{2\pi}{3}\right) \\ \sum_{h=1}^m M_{f_h} \cosh\left(\theta + \frac{2\pi}{3}\right) & \sum_{h=1}^m M_{kd_h} \cosh\left(\theta + \frac{2\pi}{3}\right) & -\sum_{h=1}^m M_{kq_h} \cosh\left(\theta + \frac{2\pi}{3}\right) & \sum_{h=1}^m M_{kD_h} \cosh\left(\theta + \frac{2\pi}{3}\right) & -\sum_{h=1}^m M_{kQ_h} \cosh\left(\theta + \frac{2\pi}{3}\right) \end{bmatrix}. \quad (4.12d)$$

Combining Eqs. (4.3) to (4.12a), (4.12b), (4.12c), (4.12d) results in a unified representation for the electrical part of the synchronous machine having the form

$$p\psi = v - RL^{-1}\psi. \quad (4.13)$$

It is important to note that, for the computation of the state variables with Eq. (4.13), the inverse of the time-varying inductance matrix must be obtained at each step of integration.

The electric torque is expressed in terms of the stator currents and flux linkages as

$$T_e = p \frac{2}{3\sqrt{3}} [\psi_a(i_b - i_c) + \psi_b(i_c - i_a) + \psi_c(i_a - i_b)], \quad (4.14)$$

where p is the number of poles.

4.1.2 Mechanical equations of synchronous machine

The second-order mechanical equation of a synchronous machine can be decomposed into two first-order differential equations: one for the mechanical angular velocity of the rotor ω_r and the other for the mechanical rotor angle δ . The constant k_D is usually incorporated into the angular velocity equation to add a damping component that is proportional to the difference of angular velocities ω_r and ω_B :

$$\frac{d\omega_r}{dt} = \frac{\omega_B}{2H} (T_m - T_e - k_D(\omega_r - \omega_B)). \quad (4.15)$$

$$\frac{d\delta}{dt} = \omega_r - \omega_B, \quad (4.16)$$

where

$$H = \frac{1}{2} \frac{J\omega_B^2}{(VA)_{\text{base}}}. \quad (4.17)$$

In the above equations ω_B is the rated angular velocity of the rotor, k_D is the damping factor (pu torque/pu angular velocity), H is the unit inertia constant (watt-s/VA at rated angular velocity), J is the axial combined (rotor and prime mover) moment of inertia (kg m^2), and $(VA)_{\text{base}}$ is the apparent power base S_{base} .

4.1.3 Magnetic saturation of synchronous machine

This section introduces a simple approach to approximately include magnetic saturation in the synchronous machine equations [17]. The nonlinear effect of saturation in a synchronous machine is modeled according to the following algorithm, which is based on modifying the stator currents in $dq0$ coordinates.

- For the input stator currents and fluxes (e.g., i_a , i_b , i_c , and Ψ_a , Ψ_b , Ψ_c) apply the $dq0$ transformation to obtain i_d , i_q , i_0 , and Ψ_d , Ψ_q , Ψ_0 :

$$\begin{bmatrix} i_d \\ i_q \\ i_0 \end{bmatrix} = [T_{\text{Park}}] \begin{bmatrix} i_a \\ i_b \\ i_c \end{bmatrix} \quad \text{and} \quad \begin{bmatrix} \psi_d \\ \psi_q \\ \psi_0 \end{bmatrix} = [T_{\text{Park}}] \begin{bmatrix} \psi_a \\ \psi_b \\ \psi_c \end{bmatrix}, \quad (4.18a)$$

where the Park transformation is

$$[T_{\text{Park}}] = \sqrt{\frac{2}{3}} \begin{bmatrix} \cos \theta & \cos (\theta - 120^\circ) & \cos (\theta + 120^\circ) \\ -\sin \theta & -\sin (\theta - 120^\circ) & -\sin (\theta + 120^\circ) \\ 1/\sqrt{2} & 1/\sqrt{2} & 1/\sqrt{2} \end{bmatrix}. \quad (4.18b)$$

- Calculate the dq -components of the total mmf in the machine as

$$I_d = i_d + i_f + \sum_{j=1}^n i_{kdj}, \quad (4.19a)$$

$$I_q = i_q + \sum_{j=1}^n i_{kqj}, \quad (4.19b)$$

where kdn and kqn are the number of damper windings of d - and q -axes, respectively.

- For given saturation characteristics of the d - and q -axes, saturated $mmfs$ (I_d' and I_q') are calculated based on a polynomial approximation, for example,

$$I_d' = \alpha_d \Psi_d + \beta_d \Psi_d^n. \quad (4.20a)$$

$$I_q' = \alpha_q \Psi_q + \beta_q \Psi_q^m. \quad (4.20b)$$

- The relationship between the saturated $mmfs$ of Eqs. (4.20a), (4.20b) and the linear $mmfs$ of Eqs. (4.19a), (4.19b) are

$$K_d = I_d' / I_d. \quad (4.21a)$$

$$K_q = I_q' / I_q. \quad (4.21b)$$

- Stator and rotor currents are now adjusted for saturation, as follows:

$$i_a' = K_d i_a, \quad (4.22a)$$

$$i_b' = K_d i_b, \quad (4.22b)$$

$$i_c' = K_d i_c, \quad (4.22c)$$

$$i_f' = K_d i_f, \quad (4.22d)$$

$$i'_{kd} = K_d i_{kd}, \quad (4.22e)$$

$$i'_{kD} = K_d i_{kD}, \quad (4.22f)$$

$$i'_{kq} = K_q i_{kq}, \quad (4.22g)$$

$$i'_{kQ} = K_q i_{kQ}. \quad (4.22h)$$

4.1.4 Sinusoidal model of a synchronous machine in $dq0$ coordinates

Several reference frames can be employed to represent synchronous machine operation. The first and most widely used model is based on the concept of the ideal synchronous machine represented by fictitious $dq0$ coordinates attached to the rotating rotor reference frame [4,5], as shown in Fig. 4.1. This model assumes balanced operating conditions at the input terminals and within the machine. Synchronous machines can be also represented in $\alpha\beta0$ coordinates [10] to allow for a natural transition between abc and $dq0$ coordinates.

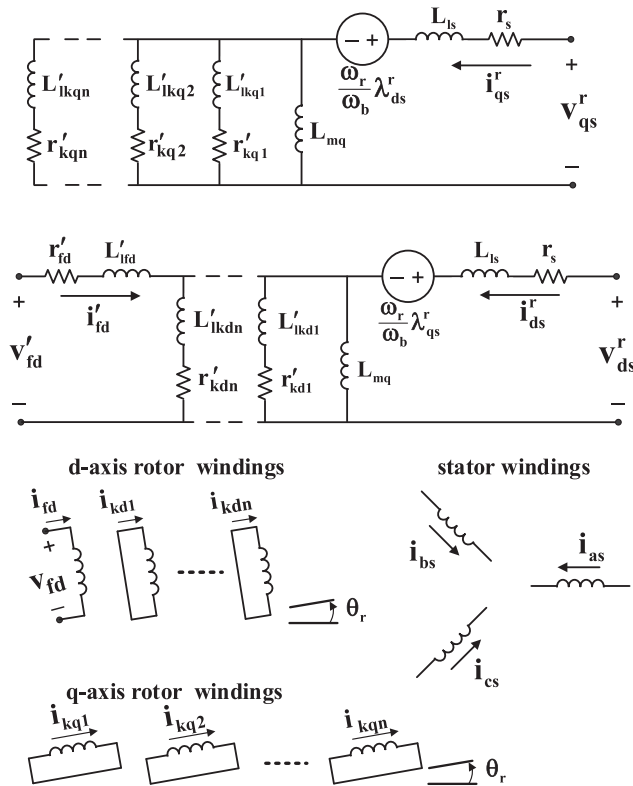


FIG. 4.1 Synchronous machine model represented in $dq0$ coordinates for sinusoidal analysis [1–8]. Superscript (r) means rotating reference frame, and superscript ($'$) means referred to stator.

4.2 Steady-state, transient, and subtransient operation

Numerical methods such as the finite-difference and finite-element methods [18] enable the engineer to compute no-load and full-load magnetic fields and those associated with short circuit and starting conditions, as well as fields for the calculation of leakage, synchronous, transient, and subtransient inductances or reactances. Figs. 4.2–4.4 represent the no-load, short circuit, and full-load fields, respectively, of a four-pole generator [20,21]. Fig. 4.3 illustrates the winding forces during steady-state short-circuit conditions. These forces were computed based on the “Maxwell stress” discussed later in this chapter. Fig. 4.2B [19] shows that at rated voltage only a small amount of flux (e.g., 1.4 mT) enters the space between the iron core (stator back iron) and the stator frame, and the eddy currents induced in the solid key bars are negligible. Figs. 4.5 and 4.6 illustrate synchronous linear (unsaturated) L_d , L_q inductances or synchronous X_d , X_q reactances [20–22] of a two-pole generator. Figs. 4.5 and 4.6 do not indicate any coupling between the d - and q -axes. Such a coupling is due to the saturation and is called cross-coupling [23], which will be neglected in subsequent sections. Fig. 4.7 pertains to the calculation of the transient inductance L'_d or transient reactance X'_d [19,22]. Fig. 4.8 illustrates the field of a two-pole generator at full load.

In general, for synchronous machines with a field-current excitation in the d -axis the following inequalities are valid: $X_d \geq X_q$, $X'_d \leq X'_q$, and $X''_d \leq X''_q$. However, for inverter-fed synchronous machines with permanent-magnet excitation—also called brushless DC machines—as used in high-efficiency, variable-speed drives [25,26], due to the lack of field and damper windings in such machines, the transient and subtransient reactances are not defined. Figs. 4.9 and 4.10 depict no-load and full-load fields of a permanent-magnet machine, respectively, whereas Fig. 4.11 illustrates the field for the calculation of the stator quadrature-axis inductance (e.g., L_q). In permanent-magnet machines, the leakage is not clearly defined: some authors say it is the leakage flux between two stator winding phases, and some opine it is the leakage flux between the stator and the rotor windings (which do not exist, however the permanent magnet can be represented by a fictitious rotor coil) as it is normally defined for other types of machines. The authors of this book tend to assume that the second definition is true. In addition, L_q is larger than the stator direct-axis inductance L_d , and there is a significant amount of cogging [27].

4.2.1 Definition of transient and subtransient reactances as a function of leakage and mutual reactances

The $dq0$ model requires the availability of values for the synchronous (X_d , X_q), transient (X'_d , X'_q), and subtransient (X''_d , X''_q) reactances of synchronous machines. Most turbogenerators have field windings in the d -axis only and none in the q -axis, therefore, $X'_q \approx X_q$. The direct-axis transient reactance X'_d can be defined in terms of leakage and mutual reactances, as depicted in Fig. 4.12:

$$X'_d = X_{al} + \frac{X_{af}X_{f\ell}}{X_{af} + X_{f\ell}}, \quad (4.23)$$

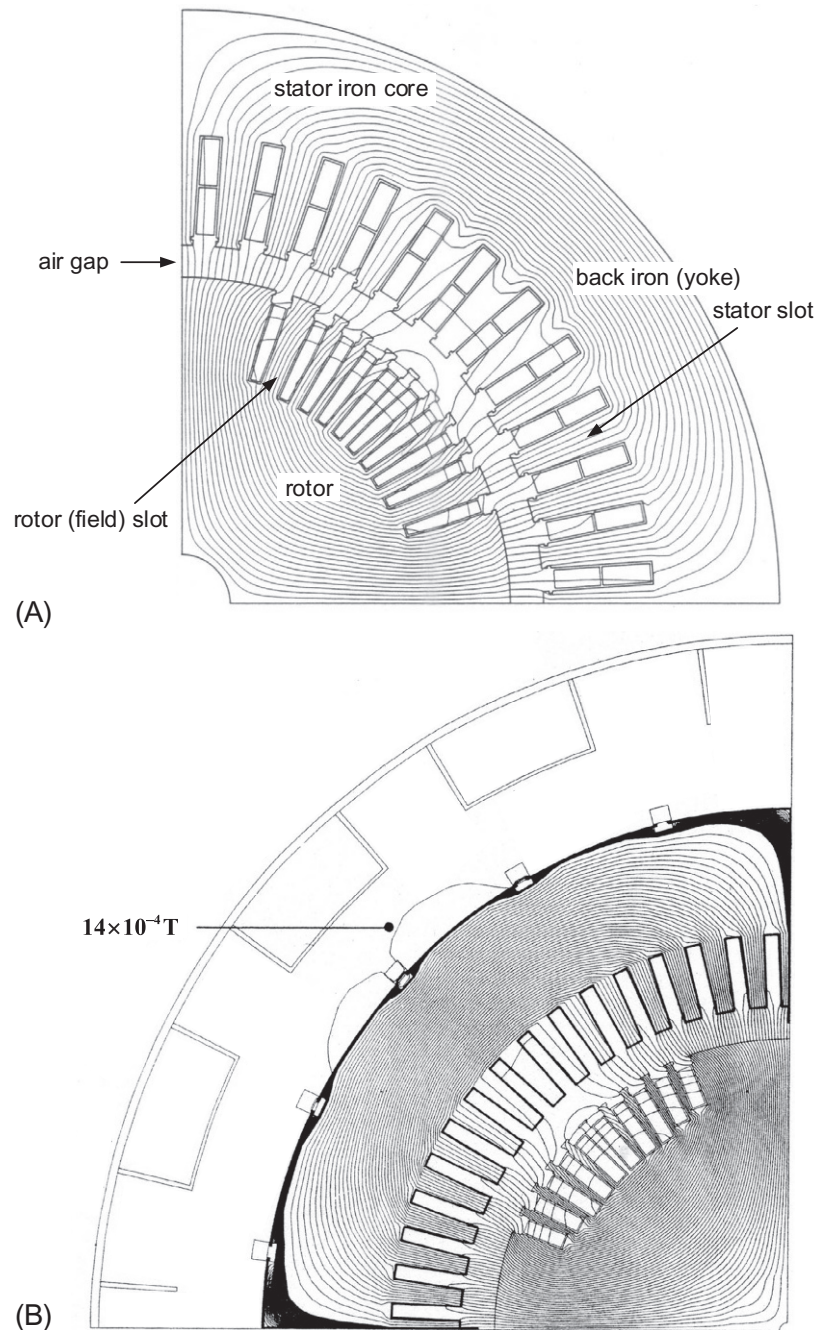


FIG. 4.2 (A) No-load field of four-pole synchronous generator. (B) No-load field of four-pole synchronous generator including leakage fields outside the iron core [19].

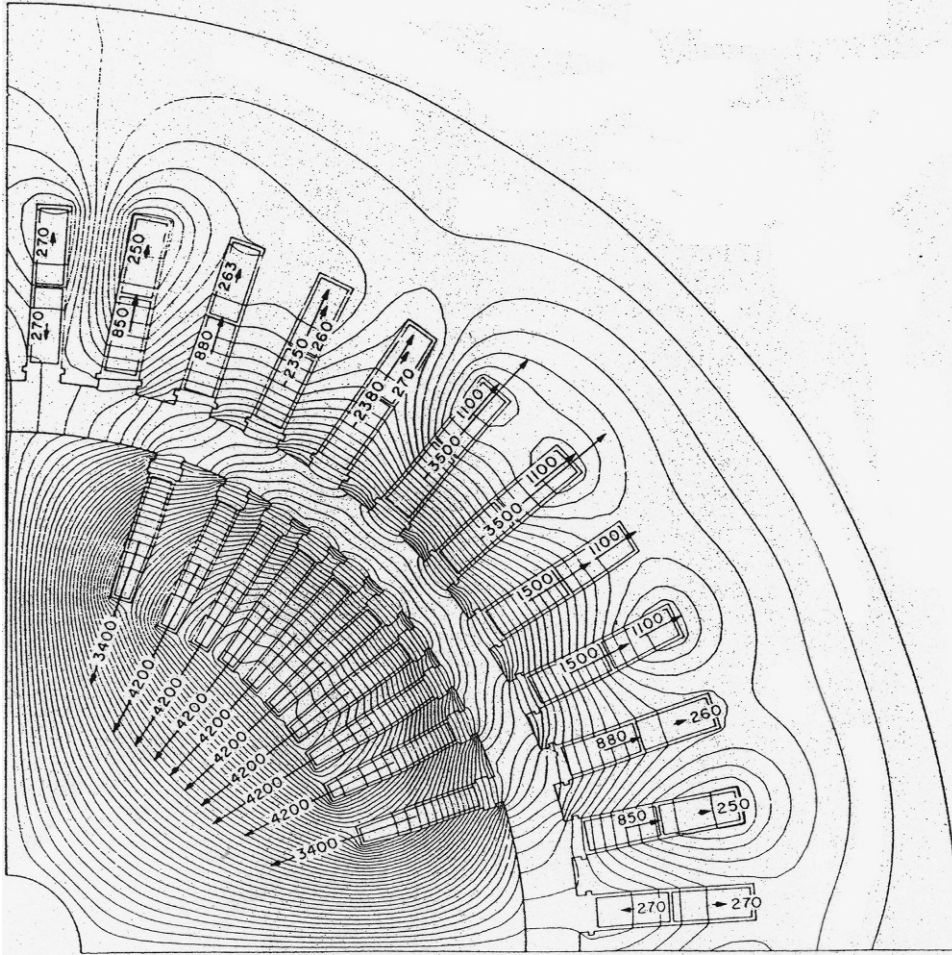


FIG. 4.3 Short-circuit field and force (measured in N/m, see Section 4.2.14) distribution of four-pole synchronous generator. The arrows indicate the direction and value (length of arrow) of the winding forces developed due to balanced steady-state, three-phase short circuit.

where X_{al} is the amature (stator) leakage reactance, X_{fl} is the field leakage reactance, and X_{af} is the mutual reactance between armature and field circuits.

Correspondingly, one obtains for the direct-axis subtransient reactance X''_d (Fig. 4.13):

$$X''_d = X_{al} + \frac{X_{af}X_{fl}X_{dl}}{X_{af}X_{fl} + X_{af}X_{dl} + X_{dl}X_{fl}}, \quad (4.24)$$

where X_{dl} is the d -axis damper winding leakage reactance.

Representative per-unit values for a typical turbogenerator are

$$X_d = 1.6 \text{ pu}, \quad X_q = 1.4 \text{ pu}, \quad X'_d = 0.2 \text{ pu}, \quad X''_d = 0.15 \text{ pu}. \quad (4.25)$$

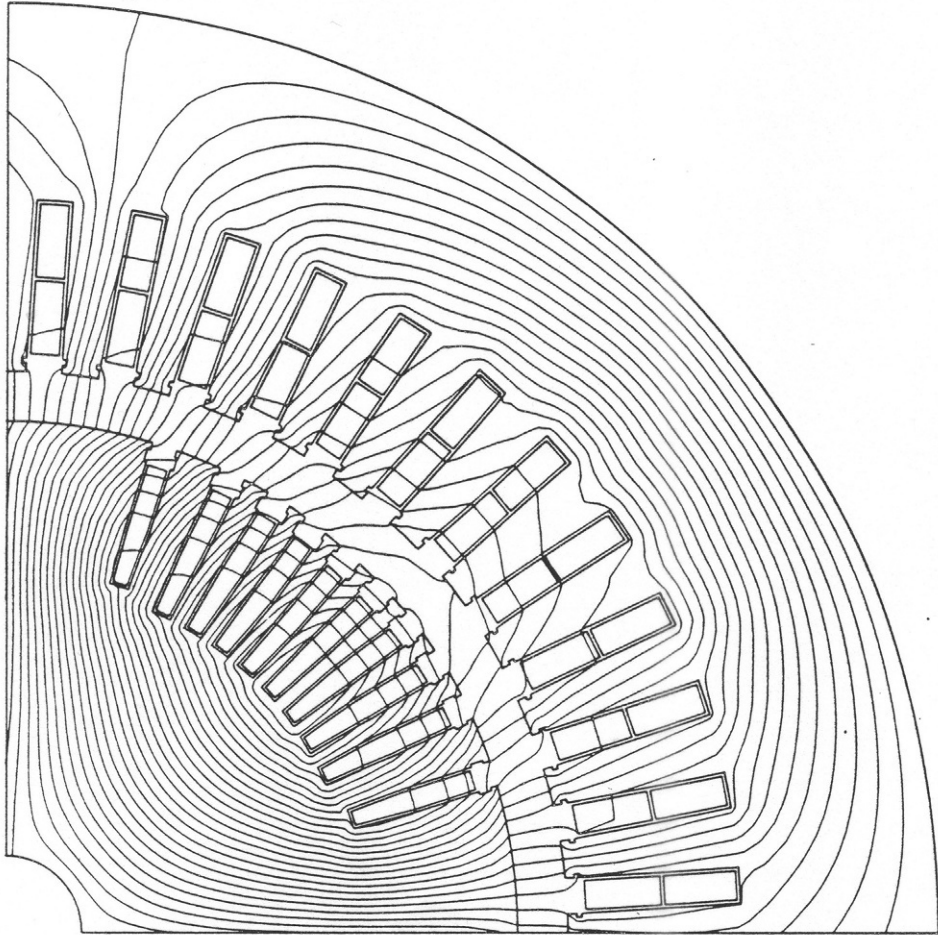


FIG. 4.4 Full-load field of four-pole synchronous generator.

In general, $1 \text{ pu} \leq X_d \leq 2 \text{ pu}$, $1 \text{ pu} \leq X_q \leq 2 \text{ pu}$, $0.2 \text{ pu} \leq X'_d \leq 0.4 \text{ pu}$, $0.1 \text{ pu} \leq X''_d \leq 0.3 \text{ pu}$, and the values of X'_q and X''_q depend on the field and damper winding design within the q -axis, respectively. Note that the value of X''_q depends on the rotor construction and the damper winding associated with the q -axis: if there are no additional damper bars located on the rotor pole, then X''_q is relatively large and in the neighborhood of X_q . In the presence of damper windings in the q -axis, X''_q is somewhat larger than X'_d because the damper winding (e.g., solid rotor or embedded damper bars on the rotor pole) of the q -axis is less effective than that of the d -axis. The rationale for selecting the above ranges for the various reactances lies in the stability requirements for generators when operating on the power system: machines with small reactances exhibit better stability than machines with large reactances; or in other words, machines with small reactances or inductances have smaller time constants than those with large reactances or inductances. Small reactances require a large air gap

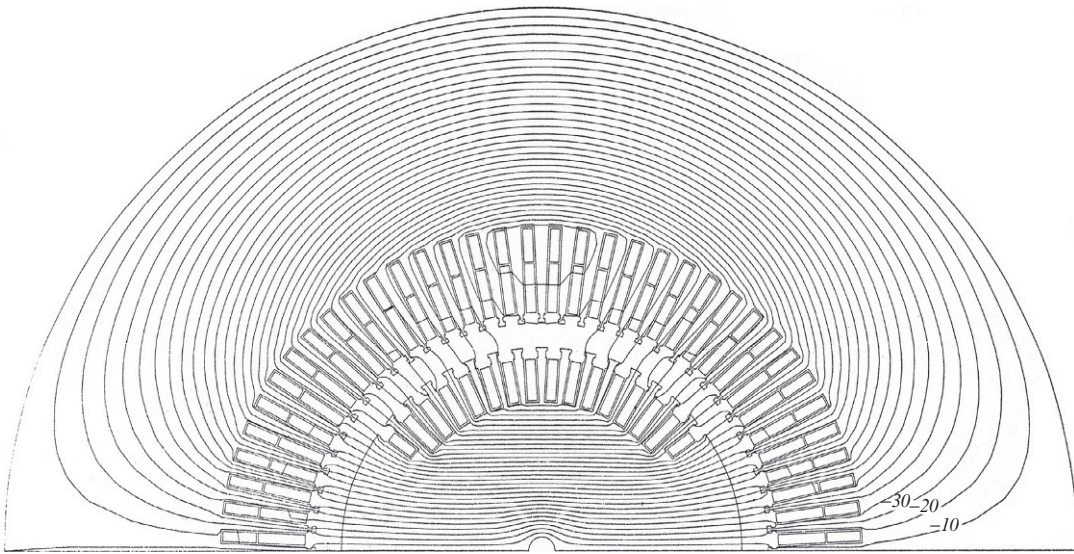


FIG. 4.5 Field of two-pole synchronous generator for the calculation of either L_d or X_d .

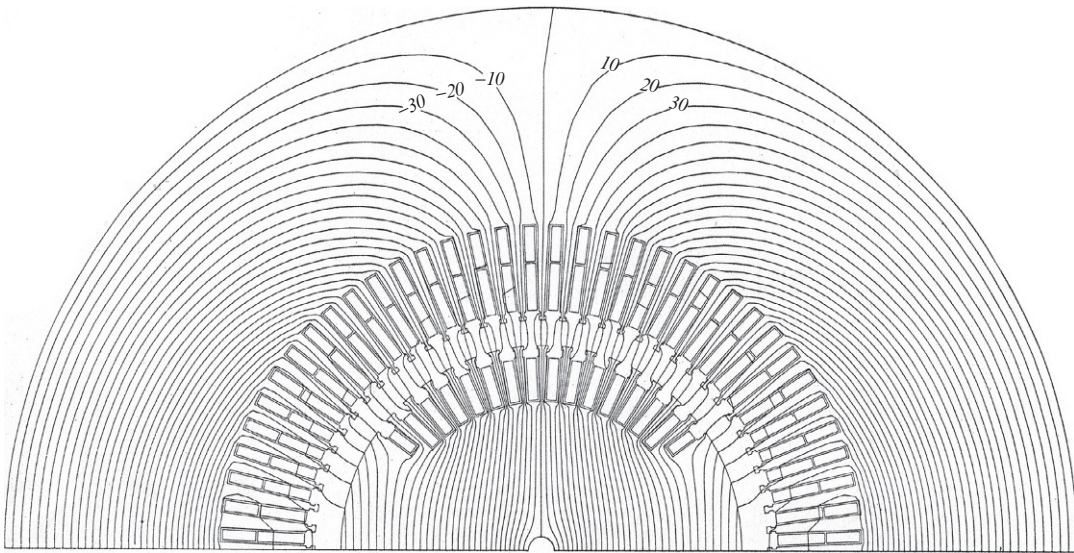


FIG. 4.6 Field of two-pole synchronous generator for the calculation of either L_q or X_q .

and a large field current for setting up the maximum flux density across the air gap of about $B_{\max} = 0.7T$. The large air gap makes machines less efficient as compared to those with small air gaps. One has to weigh the benefits of a more stable but less efficient machine versus that with less stability but greater efficiency. In addition, machines with small reactances result in larger short-circuit currents and larger transient torques and winding forces than machines with larger reactances.

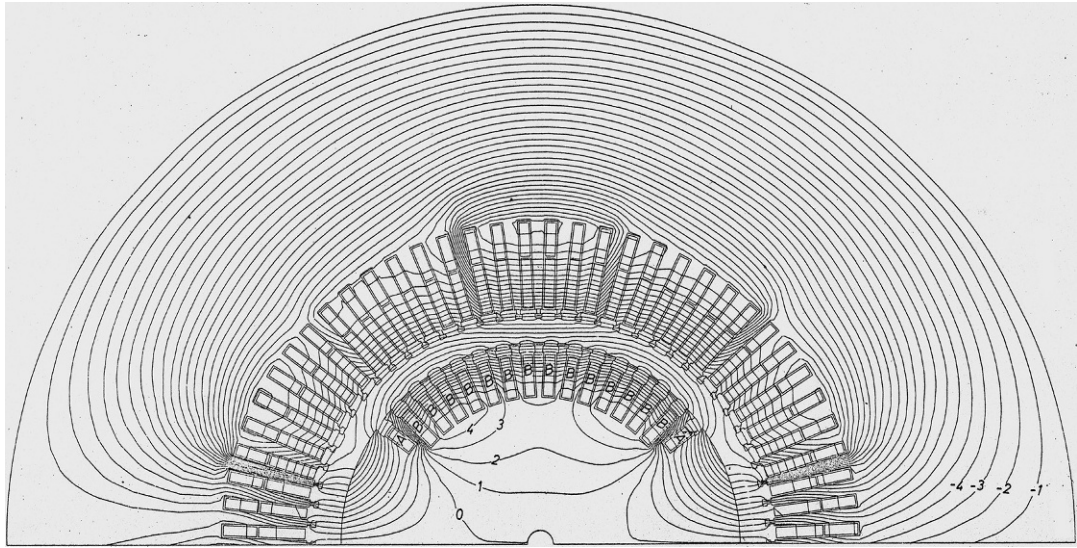


FIG. 4.7 Field of two-pole synchronous generator for the calculation of either L_d' or X_d' .

4.2.2 Phasor diagrams for round-rotor synchronous machines

There are two ways of drawing equivalent circuits and phasor diagrams of synchronous machines. The first one is based on the so-called consumer system, where the terminal current flows into the equivalent circuit, and the second one is the generator system, where the terminal current flows out of the equivalent circuit. The first one is mostly employed by engineers concerned with drives, and the latter one is mostly used by power system engineers who are concerned with generation issues.

4.2.2.1 Consumer (motor) reference frame

Fig. 4.14A depicts the equivalent circuit of a round-rotor synchronous machine based on the consumer (motor) reference current system. Fig. 4.14B illustrates the corresponding phasor diagram for overexcited operation, and Fig. 4.14C pertains to underexcited operation. Note that the polarity of the voltages is indicated by + and – signs as well as by arrows, where the head of the arrow coincides with the + sign and the tail of the arrow with the – sign. Such an arrow notation makes it easier to draw phasor diagrams. The phasor diagrams are not to scale because the ohmic voltage drop $\tilde{V}_R$ is normally much smaller than the reactive voltage drop $\tilde{V}_X$.

4.2.2.2 Generator reference frame

Fig. 4.15A depicts the equivalent circuit of a round-rotor synchronous machine based on the generator reference current system. Fig. 4.15B and C illustrate the corresponding phasor diagram for overexcited and underexcited operation, respectively.

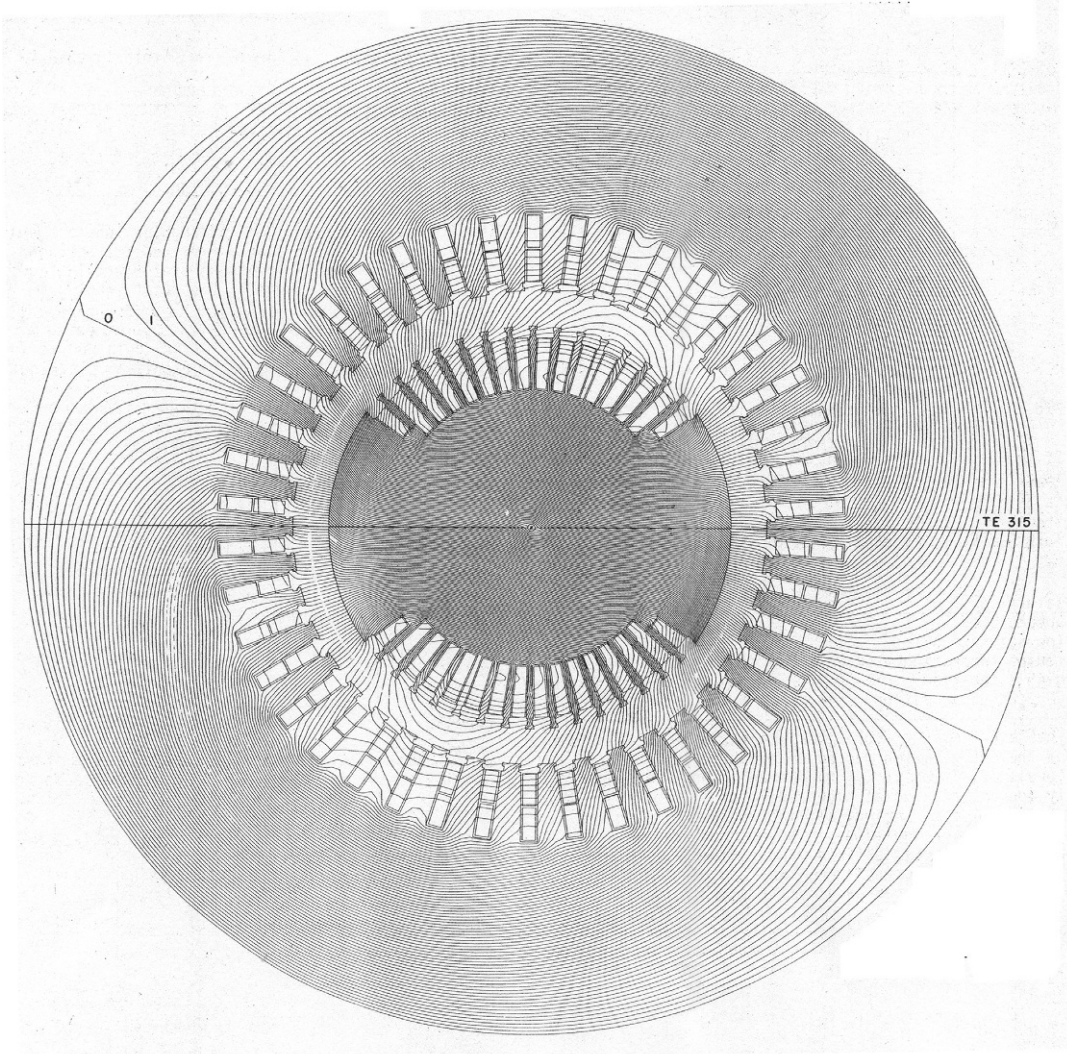


FIG. 4.8 Magnetic field of a two-pole, three-phase synchronous machine under full load [24].

4.2.2.3 Similarities between synchronous machines and pulse-width-modulated (PWM) current-controlled, voltage-source inverters

Inverters are electronic devices transforming voltages and currents from a DC source to an equivalent AC source. Fig. 4.16A illustrates the actual circuit of an inverter, where the input voltage is a DC voltage V_{dc} and the output voltage is an AC voltage $\tilde{V}_{load}$. It is assumed that the PWM switching is lossless. In Fig. 4.16B, the DC voltage ($V_{dc}/2$) is transformed to the AC side and represented by the phasor $(\tilde{V}_{dc}/2)$, which makes the equivalent circuit of Fig. 4.16B

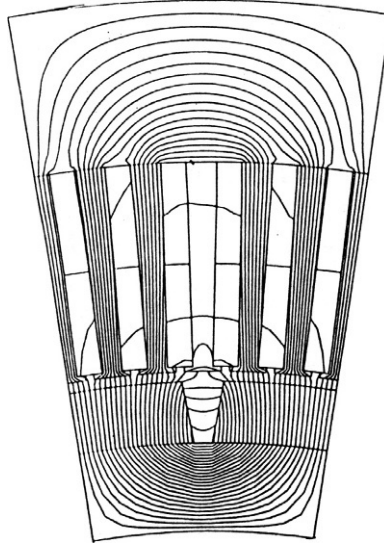


FIG. 4.9 Flux distribution at no load of a permanent-magnet machine.

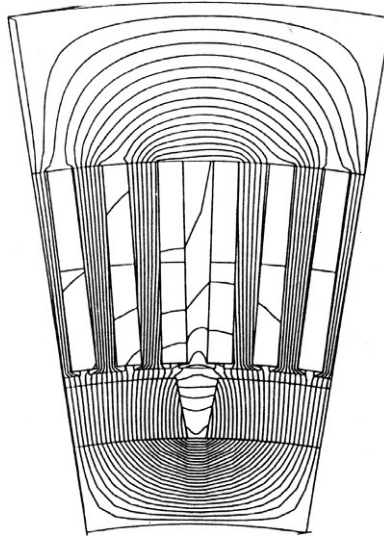


FIG. 4.10 Flux distribution at full load of a permanent-magnet machine.

similar to that of a round-rotor synchronous machine, as depicted in Fig. 4.15A. The relation between the (fundamental) output voltage $\left| \tilde{V}_{\text{load}} \right|$ of the inverter and the input voltage $\tilde{V}_{dc}/2$ (transformed to the AC side) is given [28] by

$$\left| \tilde{V}_{\text{load}} \right| = m \cdot \frac{\left| \frac{\tilde{V}_{dc}}{2} \right|}{\sqrt{2}}, \quad (4.26)$$

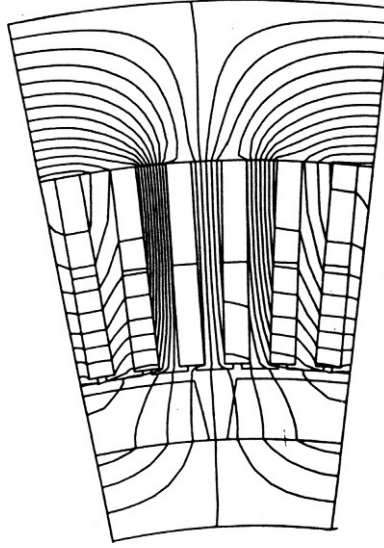


FIG. 4.11 Flux distribution for quadrature-inductance calculation (L_q) of a permanent-magnet machine.

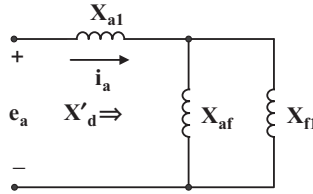


FIG. 4.12 Equivalent circuit for the definition of the d -axis transient reactance X'_d .

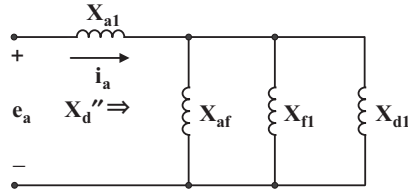


FIG. 4.13 Equivalent circuit for the definition of the d -axis subtransient reactance X''_d .

where $m \leq 1$ is the modulation index of the (sinusoidal) PWM. This relation appears to hold for operation around unity displacement (fundamental power) factor only where $m = 1$ [29,30]. In these references, it is shown that at lagging (generator reference system, overexcited, delivering reactive power to the grid) displacement power factor a higher input voltage V_{dc} than specified by Eq. (4.26) is required, whereas for leading (generator reference

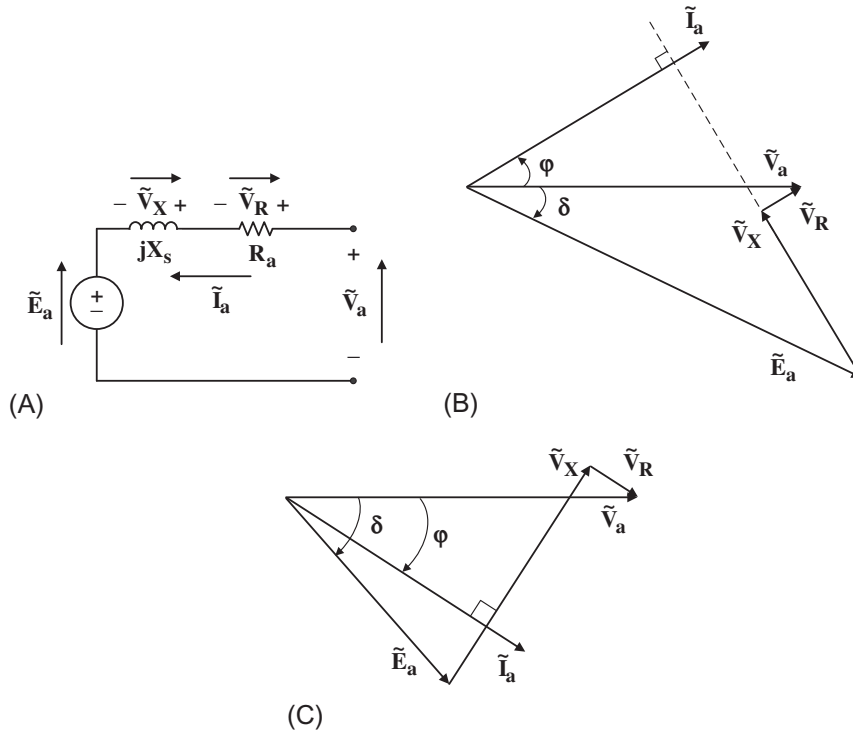


FIG. 4.14 (A) Equivalent circuit based on consumer (motor) reference frame for the terminal current $\tilde{I}_a$. (B) Phasor diagram based on consumer (motor) reference frame for leading (overexcited) terminal current $\tilde{I}_a$. (C) Phasor diagram based on consumer (motor) reference frame for lagging (underexcited) terminal current $\tilde{I}_a$.

system, underexcited, absorbing reactive power from the grid) displacement power factor a smaller input voltage V_{dc} is sufficient. For example, although for unity displacement factor $V_{dc_unity_pf} = 400\text{ V}$ is acceptable, a higher input voltage, e.g., $V_{dc_lagging_pf} = 600\text{ V}$ is required for displacement factors larger than $\cos \varphi = 0.8$ lagging (overexcited) [29,30] at $|\tilde{V}_{load}| = 139\text{ V}$, where $m = 0.66$.

4.2.2.4 Phasor diagram of a salient-pole synchronous machine

The d - and q -equivalent circuits and the associated phasor diagram of a (balanced) salient-pole synchronous machine are given in Fig. 4.17A–C. Note there is no zero-sequence equivalent circuit, which becomes important for unbalanced operation (e.g., asymmetrical short circuits) of synchronous machines only. Fig. 4.17C represents the phasor diagram without cross-coupling between the d - and q -axes due to saturation. The relation between voltages, currents, and reactances is given by the phasor diagram of Fig. 4.18 including cross-coupling of d - and q -axes parameters [21,23]. This cross-coupling is due to saturation of the machine and will be neglected in subsequent sections.

According to Ref. [7] the following relations are valid.

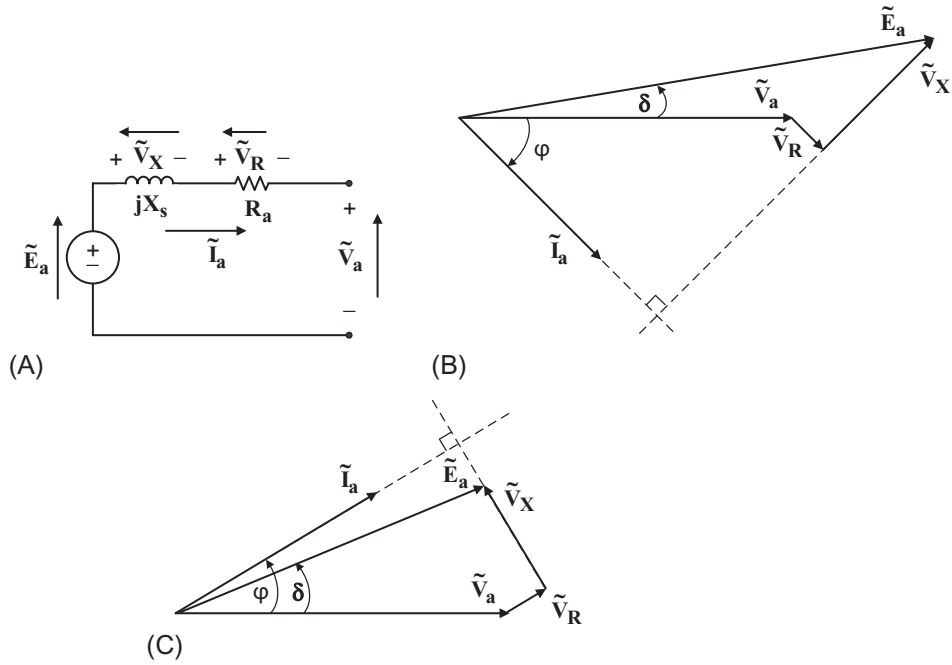


FIG. 4.15 (A) Equivalent circuit based on generator reference frame for the terminal current $\tilde{I}_a$. (B) Phasor diagram based on generator reference frame for lagging (overexcited) terminal current $\tilde{I}_a$. (C) Phasor diagram based on generator reference frame for leading (underexcited) terminal current $\tilde{I}_a$.

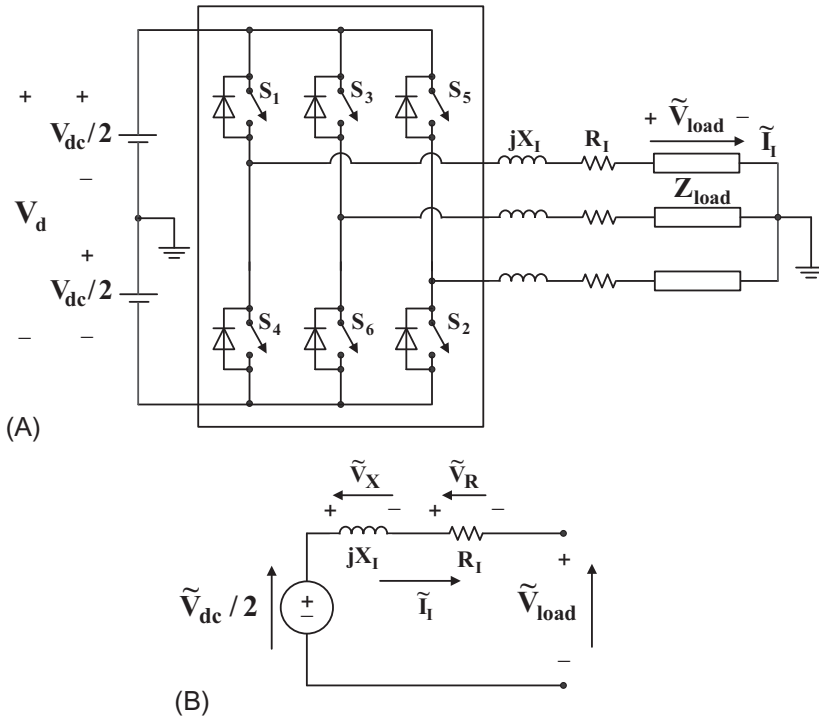


FIG. 4.16 (A) Equivalent circuit for inverter (feeding a load) where input voltage V_{dc} is referred to the primary side. (B) Equivalent circuit for inverter where input voltage $\tilde{V}_{dc}/2$ is referred to the secondary side.

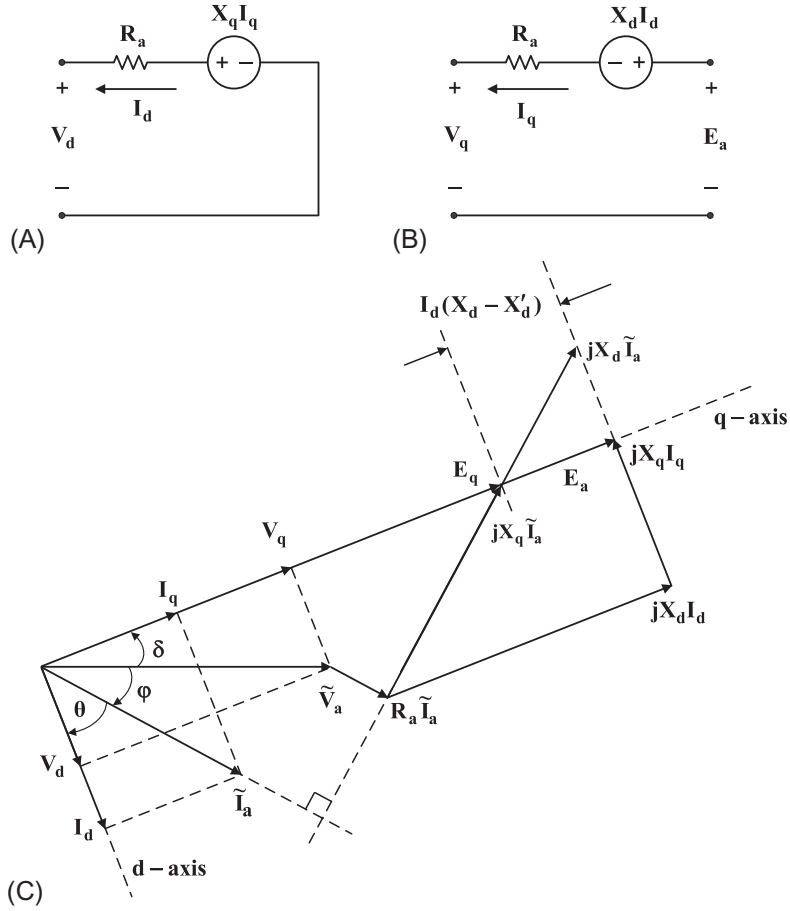


FIG. 4.17 (A) The d -equivalent circuit of salient-pole synchronous machine without cross-coupling of d - and q -axes. (B) The q -equivalent circuits of salient-pole synchronous machine without cross-coupling of d - and q -axes. (C) Phasor diagram of salient-pole synchronous machine without cross-coupling of d - and q -axes.

Terminal voltage component in d -axis as a function of the fluxes and currents in d - and q -axes:

$$V_d = -\Psi_q - R_a I_d = X_q I_q - R_a I_d. \quad (4.27)$$

Terminal voltage component in q -axis:

$$V_q = \Psi_d - R_a I_q = E_a - X_d I_d - R_a I_q. \quad (4.28)$$

Eqs. (4.27), (4.28) solved for I_d and I_q yield

$$I_d = \frac{-R_a V_d + X_q (E_a - V_q)}{X_d X_q + R_a^2}, \quad (4.29)$$

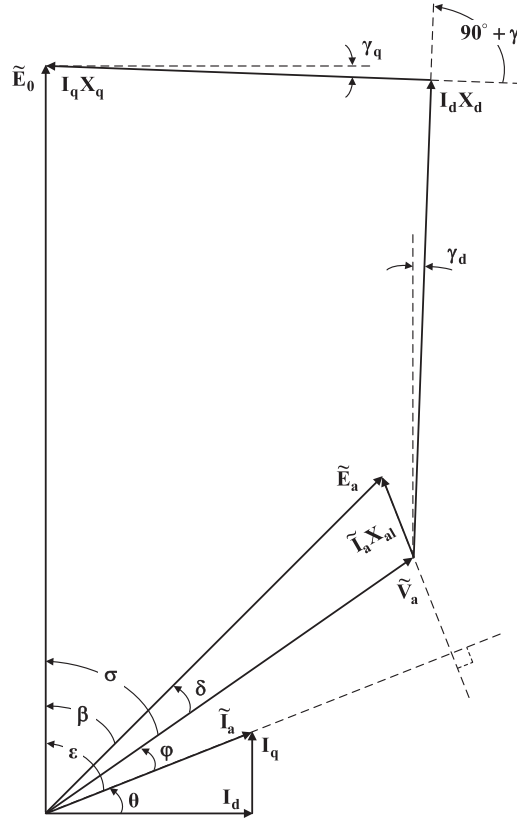


FIG. 4.18 Phasor diagram of salient-pole synchronous machine with cross-coupling of d - and q -axes [20,21].

$$I_q = \frac{X_d V_d + R_a (E_a - V_q)}{X_d X_q + R_a^2}, \quad (4.30)$$

which may be written in terms of the terminal voltage $\tilde{V}_a$:

$$I_d = \frac{-R_a |\tilde{V}_a| \sin \delta + X_q (E_a - |\tilde{V}_a| \cos \delta)}{X_d X_q + R_a^2}, \quad (4.31)$$

$$I_q = \frac{X_d |\tilde{V}_a| \sin \delta + R_a (E_a - |\tilde{V}_a| \cos \delta)}{X_d X_q + R_a^2}, \quad (4.32)$$

where

$$|\tilde{V}_a| = \sqrt{V_d^2 + V_q^2}, \quad (4.33)$$

$$|\tilde{I}_a| = \sqrt{I_d^2 + I_q^2}. \quad (4.34)$$

4.2.3 Application Example 4.1: Steady-state analysis of a nonsalient-pole (round-rotor) synchronous machine

A three-phase ($m=3$), four-pole ($p=4$) nonsalient-pole (round-rotor) synchronous machine has the parameters $X_S = 2\text{ pu}$ and $R_a = 0.05\text{ pu}$. It is operated at (the phase voltage) $V_a = 1\text{ pu}$ at an overexcited (lagging current based on the generator reference system, where the current flows out of the machine) displacement power factor of $\cos \varphi = 0.8$ lagging, and per-phase current $|\tilde{I}_a| = 1\text{ pu}$. The base (rated phase) values are $|\tilde{V}_a|_{\text{rated}} = V_{\text{base}} = 24\text{ kV}$, $|\tilde{I}_a|_{\text{rated}} = I_{\text{base}} = 1.4\text{ kA}$, and the base impedance is $Z_{\text{base}} = V_{\text{base}}/I_{\text{base}} = 17.14\ \Omega$.

- Draw the per-phase equivalent circuit of this machine.
- What is the total rated apparent input power S (expressed in MVA)?
- What is the total rated real input power P (expressed in MW)?
- Draw a per-phase phasor diagram with the voltage scale of $1.0\text{ pu} \equiv 3\text{ in.}$, and the current scale of $1.0\text{ pu} \equiv 2.5\text{ in.}$
- From this phasor diagram determine the per-phase induced voltage $|\tilde{E}_a|$ and the torque angle δ .
- Calculate the rated speed (in rpm) of this machine at $f=60\text{ Hz}$.
- Calculate the angular velocity ω_s (in rad/s).
- Calculate the total (approximate) shaft power $P_{\text{shaft}} \approx 3(E_a \cdot V_a \cdot \sin \delta)/X_S$.
- Find the shaft torque T_{shaft} (in Nm).
- Determine the total ohmic loss of the motor $P_{\text{loss}} = 3 \cdot R_a |\tilde{I}_a|^2$.
- Repeat the above analysis for $\cos \varphi = 0.8$ underexcited (leading current based on generator notation) displacement power factor and $|\tilde{I}_a| = 0.5\text{ pu}$.

Solution to Application Example 4.1 *Steady-state analysis of a nonsalient-pole (round-rotor) synchronous machine*

- The per-phase equivalent circuit of a nonsalient-pole synchronous machine based on generator notation is shown in Fig. 4.15A. The parameters of the machine are in ohms:

$$R_a = 0.05 \cdot Z_{\text{base}} = (0.05)(17.14\ \Omega) = 0.857\ \Omega, \quad X_S = 2 \cdot Z_{\text{base}} = 2(17.14\ \Omega) = 34.28\ \Omega.$$

-

$$S_{\text{rated}} = 3 V_{a,\text{rated}} \cdot I_{a,\text{rated}} = 3(24\text{ kV})(1.4\text{ kA}) = 100.8\text{ MVA} \quad (\text{E4.1.1})$$

-

$$P_{\text{rated}} = S_{\text{rated}} \cdot \cos \varphi = 80.64\text{ MW} \quad (\text{E4.1.2})$$

-

- The phasor diagram is given in Fig. E4.1.1.

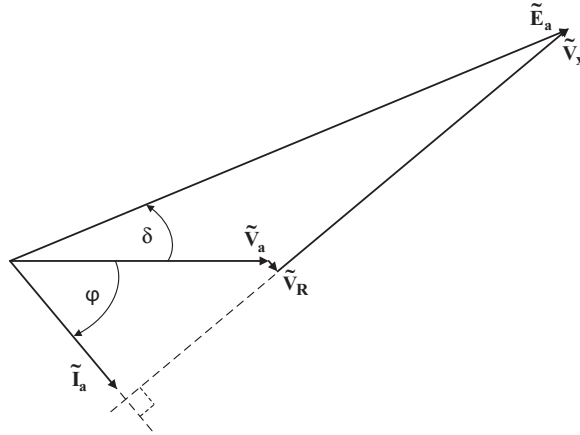


FIG. E4.1.1 Per-phase phasor diagram of nonsalient-pole (round-rotor) synchronous motor for lagging (overexcited) operation (not drawn to-scale).

$$\varphi = \cos^{-1}(0.8) = 0.6435 \text{ rad} \quad \text{or} \quad 36.87^\circ \text{ lagging} \quad (\text{E4.1.3})$$

$$|\tilde{V}_{a_rated}| = 1 \text{ pu} = 24 \text{ kV} \equiv 3 \text{ in.}$$

$$|\tilde{I}_{a_rated}| = 1 \text{ pu} = 1.4 \text{ kA} \equiv 2.5 \text{ in.}$$

$$|\tilde{I}_{a_rated}| \cdot R_a = 1.4 \text{ kA}(0.05)(17.141 \Omega) = 1199.8 \text{ V} \equiv 0.15 \text{ in.}$$

$$|\tilde{I}_{a_rated}| \cdot X_s = 1.4 \text{ kA}(2)(17.141 \Omega) = 47,992 \text{ V} \equiv 6 \text{ in.}$$

(e) For the induced voltage one obtains

$$E_a = \sqrt{\left(|\tilde{V}_a| + |\tilde{V}_R| \cos \varphi + |\tilde{V}_X| \sin \varphi\right)^2 + \left(|\tilde{V}_X| \cos \varphi - |\tilde{V}_R| \sin \varphi\right)^2} = 2.735 \text{ pu}, \quad (\text{E4.1.4})$$

where

$$|\tilde{V}_a| = 1 \text{ pu}, \quad |\tilde{V}_X| = 2 \text{ pu}, \quad |\tilde{V}_R| = 0.05 \text{ pu}, \quad \sin \varphi = 0.6, \quad \text{and} \quad \cos \varphi = 0.8.$$

The torque angle δ is

$$\delta = \cos^{-1} \left\{ \left(|\tilde{V}_a| + |\tilde{V}_R| \cos \varphi + |\tilde{V}_X| \sin \varphi \right) / E_a \right\} = 0.611 \text{ rad or } 35^\circ.$$

(f) Rated speed is

$$n_s = 120f/p = 120(60)/4 = 1800 \text{ rpm.} \quad (\text{E4.1.5})$$

(g) Angular velocity is

$$\omega_s = \frac{2\pi n_s}{60} = 188.7 \text{ rad/s.} \quad (\text{E4.1.6})$$

(h) Approximate shaft power is

$$P_{\text{shaft}} \approx 3(E_a \cdot V_a \cdot \sin \delta) / X_s = 3[(2.735)(24\text{k})(24\text{k}) \sin (0.611 \text{ rad})] / [(2)(17.14)] = 79.1 \text{ MW.} \quad (\text{E4.1.7})$$

(i) The shaft torque T_{shaft} is

$$T_{\text{shaft}} = P_{\text{shaft}} / \omega_s = 419.14 \text{ kNm.} \quad (\text{E4.1.8})$$

(j) The total ohmic loss of the motor is

$$P_{\text{loss}} = 3 \cdot R_a |\tilde{I}_a|^2 = 3(0.05)(17.14)(1.4\text{k})^2 = 5.04 \text{ MW.} \quad (\text{E4.1.9})$$

(k) Repeat the above analysis for underexcited (leading current based on generator reference system) displacement power factor $\cos \varphi = 0.8$ leading and $|\tilde{I}_a| = 0.5 \text{ pu}$.

- a. see Fig. 4.15A.
- b. $S_{\text{rated}} = 3 \cdot V_{a,\text{rated}} \cdot I_{a,\text{rated}} = 3(24\text{kV})(0.7\text{kA}) = 50.4 \text{ MVA}$.
- c. $P_{\text{rated}} = S_{\text{rated}} \cdot \cos \varphi = 40.32 \text{ MW}$.
- d. The phasor diagram is given in Fig. E4.1.2.

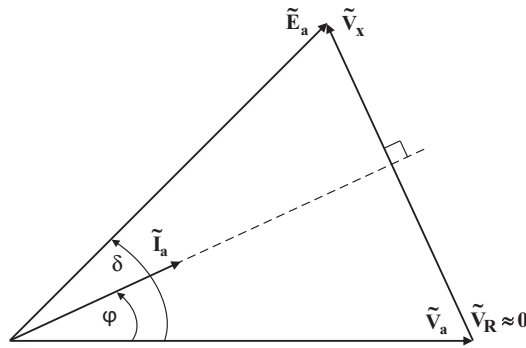


FIG. E4.1.2 The per-phase phasor diagram of a nonsalient-pole (round-rotor) synchronous motor for leading (underexcited) operation (not drawn to-scale).

$$\varphi = \cos^{-1}(0.8) = 0.6435 \text{ rad or } 36.87^\circ \text{ leading (underexcited),}$$

$$|\tilde{V}_{a_rated}| = 1 \text{ pu} = 24 \text{ kV} \equiv 3 \text{ in.}$$

$$|\tilde{I}_{a_rated}| = 0.5 \text{ pu} = 700 \text{ kA} \equiv 1.25 \text{ in.}$$

$$|\tilde{I}_{a_rated}| R_a = 700 \text{ A}(0.05)(17.141 \Omega) = 599.9 \text{ V} \equiv 0.075 \text{ in.}$$

$$|\tilde{I}_{a_rated}| X_s = 700 \text{ A}(2)(17.14 \Omega) = 23.996 \text{ kV} \equiv 3 \text{ in.}$$

e. For the induced voltage one obtains

$$\begin{aligned} E_a &= \sqrt{\left(|\tilde{V}_a| + |\tilde{V}_R| \cos \varphi - |\tilde{V}_X| \sin \varphi \right)^2 + \left(|\tilde{V}_X| \cos \varphi + |\tilde{V}_R| \sin \varphi \right)^2} \\ &= 0.917 \text{ pu or } 22.004 \text{ kV,} \end{aligned}$$

where

$$|\tilde{V}_a| = 1 \text{ pu}, |\tilde{V}_X| = 1 \text{ pu}, |\tilde{V}_R| = 0.025 \text{ pu}, \sin \varphi = 0.6, \cos \varphi = 0.8.$$

The torque angle δ is

$$\delta = \cos^{-1} \left\{ \left(|\tilde{V}_a| + |\tilde{V}_R| \cos \varphi - |\tilde{V}_X| \sin \varphi \right) / E_a \right\} = 1.095 \text{ rad or } 62.74^\circ.$$

f. Rated speed is

$$n_s = 120f/p = 120 \cdot 60/4 = 1800 \text{ rpm.}$$

g. Angular velocity is $\omega_s = 2\pi n_s/60 = 188.7 \text{ rad/s.}$

h. Approximate shaft power is

$$P_{\text{shaft}} \approx 3(E_a \cdot V_a \cdot \sin \delta) / X_s = 3[(0.917)(24 \text{ k})(24 \text{ k}) \sin(1.095 \text{ rad})] / [(2)(17.14)] = 41.09 \text{ MW.}$$

i. The shaft torque T_{shaft} is $T_{\text{shaft}} = P_{\text{shaft}} / \omega_s = 217.75 \text{ kNm.}$

j. The total ohmic loss of the motor is

$$P_{\text{loss}} = 3 \cdot R_a |\tilde{I}_a|^2 = 3(0.05)(17.14)(0.7 \text{ k})^2 = 1.26 \text{ MW.}$$

4.2.4 Application Example 4.2: Calculation of the synchronous reactance X_s of a cylindrical-rotor (round-rotor, nonsalient-pole) synchronous machine

A $p = 2$ pole, $f = 60 \text{ Hz}$ synchronous machine (generator, alternator, motor) is rated $S_{\text{rat}} = 16 \text{ MVA}$ at a lagging (generating reference system) displacement power factor $\cos \varphi = 0.8$, a line-to-line terminal voltage of $V_{L-L} = 13,800 \text{ V}$, and a (one-sided) air-gap length of $g = 0.0127 \text{ m}$. The stator has 48 slots and has a three-phase double-layer, 60° phase-belt winding with 48 armature coils having a short pitch of $2/3$. Each coil consists of one turn $N_{\text{coil}} = 1$. Sixteen stator coils are connected in series, that is, the number of series turns per phase of the stator (st) are $N_{\text{st_phase}} = 16$ (see Fig. E4.2.1). The maximum air-gap flux density at no load (stator current $I_{\text{st_phase}} = 0$) is $B_{\text{st_max}} = 1 \text{ T}$.

There are eight field coils per pole (see Fig. E4.2.2) and they are pitched 44–60–76–92–124–140–156–172 degrees, respectively, as indicated in Fig. E4.2.2. Each field coil has 18 turns. The developed rotor (field) magnetomotive force (mmf) F_r is depicted in Fig. E4.2.3. Note that the field mmf is approximately sinusoidal.

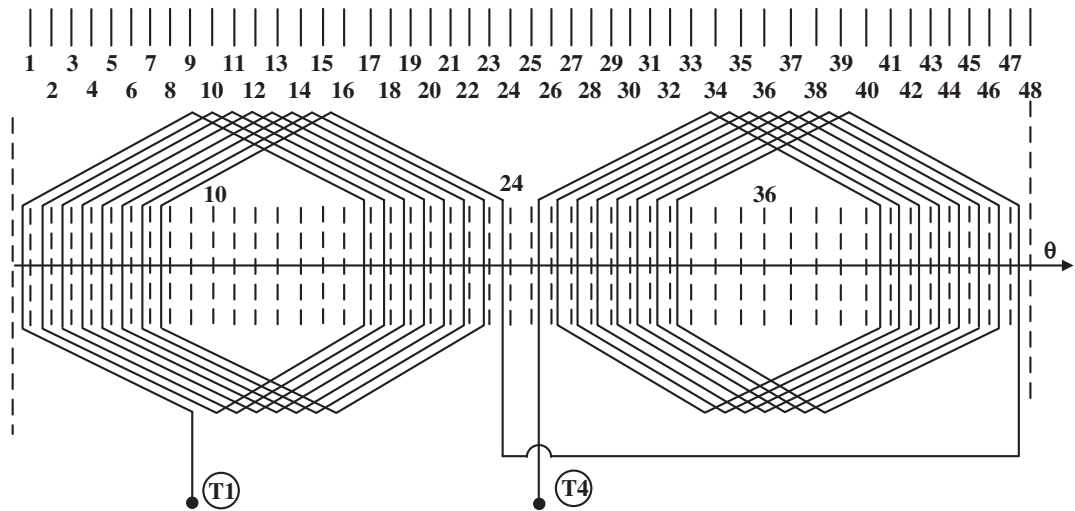


FIG. E4.2.1 Stator winding of two-pole, three-phase synchronous machine.

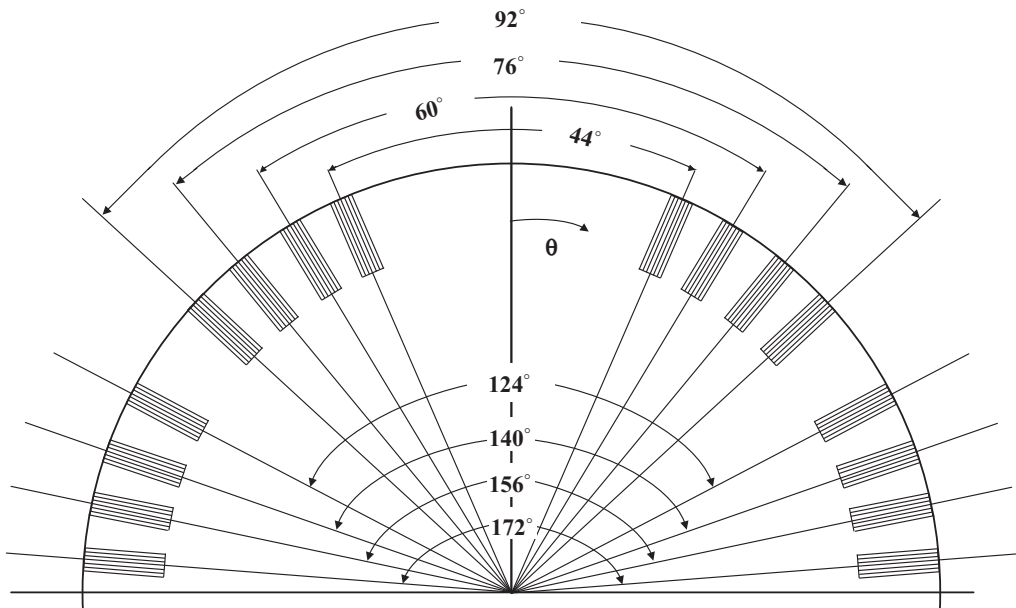


FIG. E4.2.2 Rotor winding of two-pole, three-phase synchronous machine.

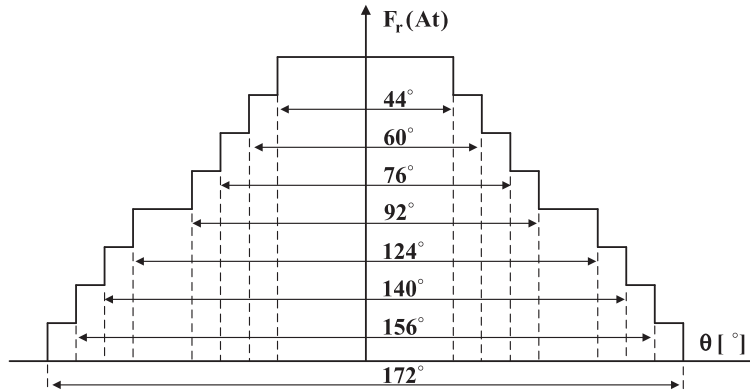


FIG. E4.2.3 Rotor mmf F_r of two-pole, three-phase synchronous machine.

- Calculate the distribution (breadth) factor of the stator winding k_{stb} ($=k_{std}$).
- Calculate the fundamental pitch factor of the stator winding k_{stp1} .
- Calculate the pitch factor of the rotor (r) winding k_{rp} .
- Determine the stator flux Φ_{st_max} .
- Compute the area ($area_p$) of one pole.
- Compute the field (f) current I_{f0} required at no load.
- Determine the synchronous (s) reactance (per phase value) X_S of this synchronous machine in ohms.
- Find the base impedance Z_{base} expressed in ohms.
- Express the synchronous reactance X_S in per unit (pu).

Solution to Application Example 4.2 Calculation of the synchronous reactance X_S of a cylindrical-rotor (round-rotor, nonsalient-pole) synchronous machine

- Calculation of the distribution (breadth) factor of the stator winding $k_{stb}=k_{std}$ is as follows. The breadth factor is defined for one phase belt as

$$k_{stb} = \frac{\text{geometric sum } \sum_{i=1}^8 F_i}{\text{algebraic sum } \sum_{i=1}^8 F_i}. \quad (\text{E4.2.1})$$

It is convenient to evaluate Eq. (E4.2.1) graphically, as shown in Fig. E4.2.4. Note that one slot pitch corresponds to $360^\circ/48=7.5^\circ$. Thus, one gets from Fig. E4.2.4 the distribution or breadth factor

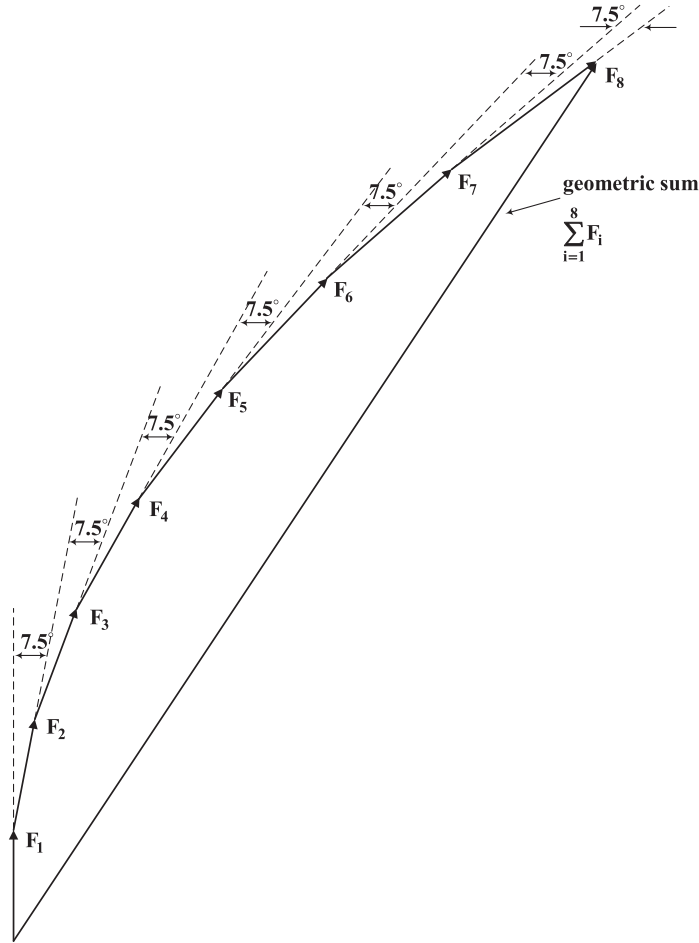


FIG. E4.2.4 Graphical determination of the stator breadth or distribution factor k_{stb} .

$$k_{stb} = 0.96. \quad (E4.2.2)$$

- (b) Calculation of the pitch factor of the stator winding k_{stp1} is as follows. One stator turn spans 16 slots out of 24 slots, that is, it has a pitch of $(2/3)$; therefore, one obtains for the fundamental $n = 1$

$$k_{stp1} = \left| \sin \left(\frac{n\beta}{2} \right) \right| = \left| \sin \left(\frac{(1)(120)}{2} \right) \right| = 0.866 \quad (E4.2.3)$$

or for the 5th harmonic $n = 5$

$$k_{stp5} = \left| \sin \left(\frac{(5)(120)}{2} \right) \right| = 0.866.$$

The 5th harmonic is not attenuated; therefore, the choice of a 2/3 winding pitch is not recommended.

The total fundamental winding factor of the stator winding is now.

$$k_{st} = k_{stb} \cdot k_{stp1} = 0.96(0.866) = 0.831.$$

- (c) Calculate the pitch factor of the rotor (r) winding k_{rp} as follows. The fundamental ($n=1$) pitch-factor of the rotor winding is correspondingly

$$k_{rp} = \left\{ \left| \sum_{i=1}^8 \sin \left(\frac{n\beta_i}{2} \right) \right| \right\} / 8, \quad (\text{E4.2.4})$$

$$k_{rp} = \left\{ \left| \sin \left(\frac{44^\circ}{2} \right) \right| + \left| \sin \left(\frac{60^\circ}{2} \right) \right| + \left| \sin \left(\frac{76^\circ}{2} \right) \right| + \left| \sin \left(\frac{92^\circ}{2} \right) \right| + \left| \sin \left(\frac{124^\circ}{2} \right) \right| \right. \\ \left. + \left| \sin \left(\frac{140^\circ}{2} \right) \right| + \left| \sin \left(\frac{156^\circ}{2} \right) \right| + \left| \sin \left(\frac{172^\circ}{2} \right) \right| \right\} / 8 \Rightarrow k_{rp} = 0.751.$$

- (d) Determination of the stator flux $\Phi_{st_{\max}}$ is as follows. The induced voltage in the stator winding per phase is

$$E_{ph} = 4.44 \cdot f \cdot N_{stph} \cdot k_{stb} \cdot k_{stp1} \cdot \Phi_{st_{\max}} \quad (\text{E4.2.5})$$

or one obtains for the stator flux

$$\Phi_{st_{\max}} = \frac{E_{L-L}}{\sqrt{3} \cdot 4.44 \cdot f \cdot N_{stph} \cdot k_{stb} \cdot k_{stp1}} \quad (\text{E4.2.6})$$

with $E_{L-L} = V_{L-L} = 13,800 \text{ V}$ at no load, one gets the flux for no-load condition:

$$\Phi_{st_{\max}}^{\text{no-load}} = \frac{13800}{\sqrt{3} (4.44)(60)(16)(0.96)(0.866)} = 2.25 \text{ Wb/pole}. \quad (\text{E4.2.7})$$

- (e) Compute the area (area_p) of one pole:

$$\text{area}_p = \frac{\Phi_{st_{\max}}^{\text{no-load}}}{B_{st_{\max}}} = 2.25 \text{ m}^2. \quad (\text{E4.2.8})$$

- (f) Compute the field (f) current I_{fo} required at no load:

$$I_{fo} = \frac{B_{st_{\max}} \cdot p \cdot g \cdot \pi}{4 \cdot \mu_0 \cdot k_{rp} \cdot N_{rtot}} = \frac{1(2)(0.0127)(\pi)}{4(4\pi \cdot 10^{-7})(0.751)(288)} = 73.4 \text{ A}. \quad (\text{E4.2.9})$$

- (g) Determine the synchronous (s) reactance (per phase value) X_s in ohms. The self-inductance of phase a is

$$\begin{aligned}
 L_{aa} &= \frac{\lambda_{aa}}{i_a} = \frac{N_{st} \cdot \Phi_{st_max}}{i_a} = \frac{N_{st} \cdot B_{st_max} \cdot \text{area}_p}{i_a} = \frac{\mu_0 \cdot 4 \cdot k_{stb} \cdot k_{stp1} \cdot (N_{stph})^2 \cdot \text{area}_p}{p \cdot g \cdot \pi} \\
 &= \frac{(4\pi \cdot 10^{-7})(4)(0.96)(0.866)(16)^2(2.25)}{2(0.0127)(\pi)} = 30.16 \text{ mH}.
 \end{aligned} \tag{E4.2.10}$$

According to Concordia [7].

$$L_d = L_{aa} + L_{ab} + 1.5L_{aa2}. \tag{E4.2.11}$$

Neglecting L_{aa2} and $L_{aa} \approx L_{ab}$ one gets for the synchronous inductance L_d

$$L_d \approx 2 \cdot L_{aa} = 60.33 \text{ mH}.$$

The synchronous reactance of the round-rotor machine is

$$X_S = \omega L_d = \omega L_S = 22.74 \Omega. \tag{E4.2.12}$$

The base voltage is

$$V_{\text{base}} = \frac{V_{L-L}}{\sqrt{3}} = V_{\text{phase}} = 7967 \text{ V}. \tag{E4.2.13}$$

The base apparent power is per phase

$$S_{\text{base}} = S_{\text{phase}} = \frac{S_{\text{rat}}}{3} = 5.33 \text{ MVA} \tag{E4.2.14}$$

and the base current is

$$I_{\text{base}} = I_{\text{phase}} = \frac{S_{\text{base}}}{V_{\text{base}}} = 669 \text{ A}. \tag{E4.2.15}$$

(h) Find the base impedance Z_{base} expressed in ohms. The base impedance becomes

$$Z_{\text{base}} = \frac{V_{\text{base}}}{I_{\text{base}}} = 11.9 \Omega. \tag{E4.2.16}$$

(i) Express the synchronous reactance X_S in per unit (pu). The per-unit synchronous reactance is now

$$X_S^{\text{pu}} = \frac{X_S}{Z_{\text{base}}} = \frac{22.74}{11.9} = 1.91 \text{ pu}. \tag{E4.2.17}$$

4.2.5 Application Example 4.3: $dq0$ modeling of a salient-pole synchronous machine

Engineers are most concerned about the torques generated by the machine under abnormal operating conditions such as:

- balanced three-phase short circuit,

- line-to-line short circuit,
- line-to-neutral short circuit,
- out-of-phase synchronization,
- synchronizing and damping torques,
- reclosing, and
- stability.

Linear (not saturation-dependent) reactances are assumed and amortisseur (damper) windings are neglected except for some out-of-phase synchronization results and for reclosing events. Most machines have very weak damper windings, and therefore, this assumption is justified. Synchronizing T_S and damping T_D torques of the salient-pole synchronous machine using $dq0$ modeling are also addressed in Problem 4.8.

Solution to Application Example 4.3 *dq0 modeling of a salient-pole synchronous machine*

- (a) **Balanced Three-Phase Short Circuit.** If the terminals of a synchronous generator are short circuited at rated no-load excitation one obtains the balanced short-circuit currents in per unit [31]:

$$i_a(\varphi) = \frac{1}{X_d} \cos(\varphi + \alpha) + \frac{(X_d - X'_d)}{X_d X'_d} e^{-\frac{\varphi}{T'_d}} \cdot \cos(\varphi + \alpha) - \frac{1}{2} \left(\frac{1}{X'_d} + \frac{1}{X_q} \right) e^{-\frac{\varphi}{T_a}} \cdot \cos \alpha - \frac{1}{2} \left(\frac{1}{X'_d} + \frac{1}{X_q} \right) e^{-\frac{\varphi}{T_a}} \cdot \cos(2\varphi + \alpha) \quad (\text{E4.3.1})$$

$$i_b(\varphi) = \frac{1}{X_d} \cos(\varphi + \alpha - 120^\circ) + \frac{(X_d - X'_d)}{X_d X'_d} e^{-\frac{\varphi}{T'_d}} \cdot \cos(\varphi + \alpha - 120^\circ) + \frac{1}{4} \left(\frac{1}{X'_d} + \frac{1}{X_q} \right) e^{-\frac{\varphi}{T_a}} \cdot \cos \alpha + \frac{1}{2} \left(\frac{1}{X'_d} - \frac{1}{X_q} \right) e^{-\frac{\varphi}{T_a}} \cdot \cos(2\varphi + \alpha + \delta) \quad (\text{E4.3.2})$$

$$i_c(\varphi) = \frac{1}{X_d} \cos(\varphi + \alpha + 120^\circ) + \frac{(X_d - X'_d)}{X_d X'_d} e^{-\frac{\varphi}{T'_d}} \cdot \cos(\varphi + \alpha + 120^\circ) + \frac{1}{4} \left(\frac{1}{X'_d} + \frac{1}{X_q} \right) e^{-\frac{\varphi}{T_a}} \cdot \cos \alpha + \frac{1}{2} \left(\frac{1}{X'_d} - \frac{1}{X_q} \right) e^{-\frac{\varphi}{T_a}} \cdot \cos(2\varphi + \alpha - \delta), \quad (\text{E4.3.3})$$

where $\tan \delta = \sqrt{3}$, $\varphi = \omega t$.

The field current is

$$i_f(\varphi) = 1 + \frac{(X_d - X'_d)}{X'_d} \left(e^{-\frac{\varphi}{T'_{d0}}} - \cos \varphi \cdot e^{-\frac{\varphi}{T_a}} \right) \quad (\text{E4.3.4})$$

and the torque is

$$T_{3_phase} = \frac{(X'_d - X_q)}{2X'_d X_q} \cdot \sin(2\varphi) + \frac{1}{X'_d} \sin \varphi. \quad (\text{E4.3.5})$$

The maximum torque occurs at the angle $\varphi_{\max}$ which can be obtained from

$$\cos \varphi_{\max} = \frac{1}{4} \left(\frac{X_q}{X_q - X'_d} \pm \sqrt{\left(\frac{X_q}{(X'_d - X_q)} \right)^2 + 8} \right). \quad (\text{E4.3.6})$$

Fig. E4.3.1 illustrates the torque of Eqs. (E4.3.5), (E4.3.6).

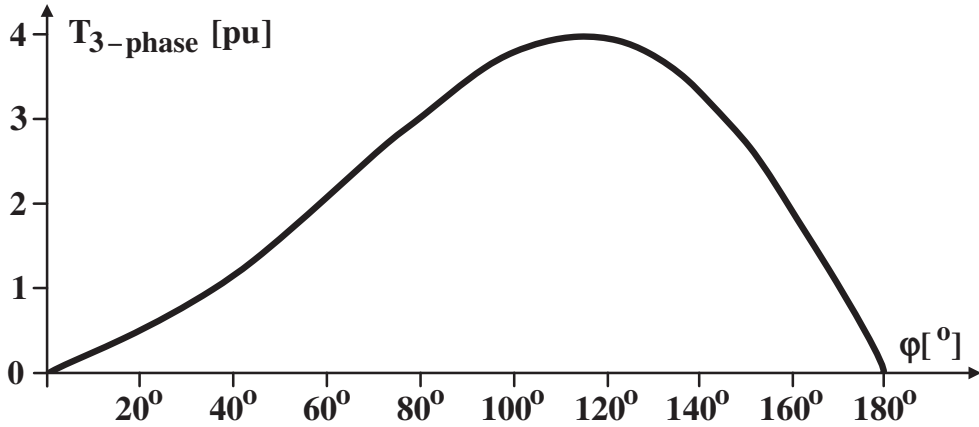


FIG. E4.3.1 First half-cycle of torque $T_{3\text{-phase}}$ described by Eqs. (E4.3.5), (E4.3.6) (for the parameters $X'_d = 0.2909$ pu and $X_q = 0.8$ pu).

(b) Line-to-line short circuit. The short circuit of the two terminals b and c of a synchronous generator results in the line-to-line short-circuit current [31].

$$i_b = \frac{\sqrt{3}(\cos \varphi - \cos \varphi_0)}{(X_q + X'_d) - (X_q - X'_d) \cos 2\varphi} \quad (\text{E4.3.7})$$

or for $\varphi_0 = 0$

$$i_b = \frac{\sqrt{3}(\cos \varphi - 1)}{(X_q + X'_d) - (X_q - X'_d) \cos 2\varphi} \quad (\text{E4.3.8})$$

and the torque is

$$T_{L-L} = -\frac{2}{\sqrt{3}}(\sin \varphi)i_b + \frac{2}{3} \sin 2\varphi (X'_d - X_q)i_b^2 \quad (\text{E4.3.9})$$

or

$$T_{L-L} = \frac{-2 \sin \varphi (\cos \varphi - 1)}{[(X_q + X'_d) - (X_q - X'_d) \cos 2\varphi]} + \frac{2 \sin 2\varphi (X'_d - X_q) (\cos \varphi - 1)^2}{[(X_q + X'_d) - (X_q - X'_d) \cos 2\varphi]^2}. \quad (\text{E4.3.10})$$

Fig. E4.3.2 illustrates the torques of Eqs. (E4.3.5), (E4.3.6), (E4.3.10).

The open-circuit voltage induced in phase a in case of a short circuit of line *b* with line *c* is

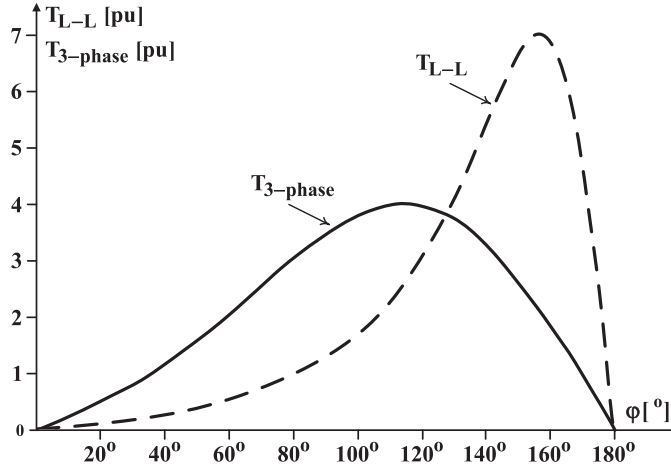


FIG. E4.3.2 First half-cycle of torques T_{L-L} and $T_{3-phase}$ described by Eqs. (E4.3.5), (E4.3.10) (for the parameters $X_d' = 0.2909$ pu and $X_q = 0.8$ pu).

$$e_a = -\cos \varphi - b \left(\frac{[-\sin \varphi \sin 2\varphi + (\cos \varphi - \cos \varphi_0) 2 \cos 2\varphi]}{[a - b \cos 2\varphi]} - \frac{(\cos \varphi - \cos \varphi_0)(\sin 2\varphi)^2 2b}{[a - b \cos 2\varphi]^2} \right), \quad (\text{E4.3.11})$$

where

$$a = (X_q + X_d') \quad (\text{E4.3.12a})$$

and

$$b = (X_q - X_d'). \quad (\text{E4.3.12b})$$

The maximum value of e_a occurs for $\varphi_0 = 0$.

Fig. E4.3.3 illustrates the induced voltage e_a of Eqs. (E4.3.11), (E4.3.12a), (E4.3.12b).

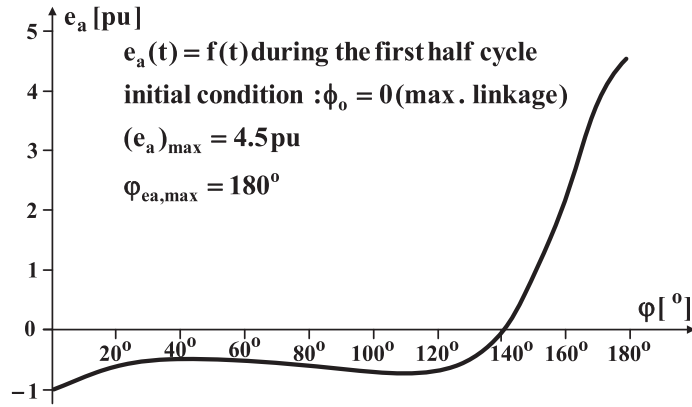


FIG. E4.3.3 Induced voltage $e_a(t)$ during first half-cycle at an initial condition $\varphi_0 = 0$, described by Eqs. (E4.3.11), (E4.3.12a), (E4.3.12b) (for the parameters $X_d' = 0.2909$ pu and $X_q = 0.8$ pu).

(c) Line-to-neutral short circuit. The current when phase a of a synchronous machine at no load is short-circuited is for $\theta = 90^\circ + \varphi$ [31].

$$i_a = \frac{3(\cos \theta - \cos \theta_0)}{(X_q - X_d')} \cdot \frac{1}{\frac{(X_d' + X_q + X_0)}{(X_q - X_d')} - \cos 2\theta} \quad (\text{E4.3.13})$$

or in terms of an infinite series

$$i_a = \frac{3(\cos \theta - \cos \theta_0)}{(X_q - X_d')} \cdot \frac{2a}{1 - a^2} (1 + 2a \cos 2\theta + 2a^2 \cos 4\theta + \dots), \quad (\text{E4.3.14})$$

where

$$a = \frac{\sqrt{X_q + \frac{X_0}{2}} - \sqrt{X_d' + \frac{X_0}{2}}}{\sqrt{X_q + \frac{X_0}{2}} + \sqrt{X_d' + \frac{X_0}{2}}}. \quad (\text{E4.3.15})$$

Note that i_a must be initially zero, that is, $\varphi = \varphi_0 = 0$ or $\theta_0 = 90^\circ$.
The fundamental component becomes now

$$i_{a1} = \frac{3 \cos \theta}{X_d' + \sqrt{X_q + \frac{X_0}{2}} \cdot \sqrt{X_d' + \frac{X_0}{2}} + \frac{X_0}{2}} \quad (\text{E4.3.16})$$

or in terms of symmetrical components

$$i_{a1} = \frac{3 \cos \theta}{X_d' + X_2 + X_0}. \quad (\text{E4.3.17})$$

(d) Out-of-Phase Synchronization. When synchronizing a generator (either machine or inverter) with the power system the following conditions must be met:

- phase sequence and frequency must be the same,
- the phase angle between the two voltage systems must be sufficiently small, and
- the slip must be small for synchronous generator paralleling.

Synchronizing out of phase is an important issue because it generates the highest torques and forces (in particular within the end winding of a machine) when paralleled with the power system [31]. The torque during out-of-phase synchronization is as a function of time $\varphi = \omega t$ and the angle δ between the power system's voltage and that of the synchronous machine voltage at the time of paralleling:

$$T_{\text{out-of-phase}} = \frac{1}{X_q} [\sin \delta (1 - \cos \varphi) + (1 - \cos \delta) \sin \varphi] \cdot \left\{ 1 + \frac{(X_q - X'_d)}{X'_d} [(1 - \cos \delta)(1 - \cos \varphi) - \sin \delta \sin \varphi] \right\}. \quad (\text{E4.3.18})$$

Note this expression is symmetrical in δ and φ , that is, δ and φ can be interchanged without altering the relation. Introducing $\delta = \varphi$ in Eq. (E4.3.18), one obtains for the torque

$$T_{\text{out-of-phase}} = \frac{2 \sin \delta (1 - \cos \delta)}{X'_d} - \sin \delta \left[\frac{X_q - X'_d}{X_q X'_d} \right] \cdot [2 + 2 \cos \delta - 8(\cos \delta)^2 + 4(\cos \delta)^3]. \quad (\text{E4.3.19})$$

The corresponding field current is

$$i_f(\varphi) = \frac{X_d - X'_d}{X'_d} [1 - \cos \delta + (\cos \delta - 1) \cos \varphi - \sin \delta \sin \varphi] + 1. \quad (\text{E4.3.20})$$

Fig. E4.3.4 illustrates the very large torque if the generator is out-of-phase synchronized with the worst case angle of $\delta = 141.5^\circ$ and when $\varphi = \delta$ in Eq. (E4.3.18).

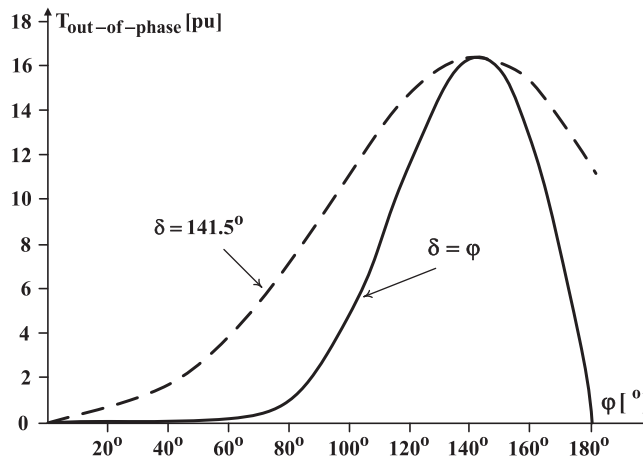


FIG. E4.3.4 Out-of-phase synchronizing torque $T_{\text{out-of-phase}}$ when $\delta = 141.5^\circ$ (worst case) and when $\varphi = \delta$ in Eq. (E4.3.18) (for the parameters $X'_d = 0.2909$ pu and $X_q = 0.8$ pu).

Experimental results [32–34] during out-of-phase synchronization show that for small synchronous machines below 100 kVA a voltage difference of $\Delta V \leq \pm 10\%$, a phase angle difference of $\Delta\delta \leq \pm 5^\circ$, and a slip of $s \leq 1\%$ can be permitted. For large machines these conditions must be more stringent; that is, the voltage difference $\Delta V \leq \pm 1\%$, the phase angle difference $\Delta\delta \leq \pm 0.5^\circ$, and the slip $s \leq 0.1\%$. During the past first analog [32–34] and then digital paralleling devices have been employed to connect synchronous generators to the grid. Although these devices are very reliable, once in a while a faulty paralleling occurs.

Fig. E4.3.5 depicts the various parameters when out-of-phase synchronization occurs with an angle of $\delta = 255^\circ$ —which is not the worst-case condition (see Fig. E4.3.4). In this analysis, subtransient reactances are taken into account.

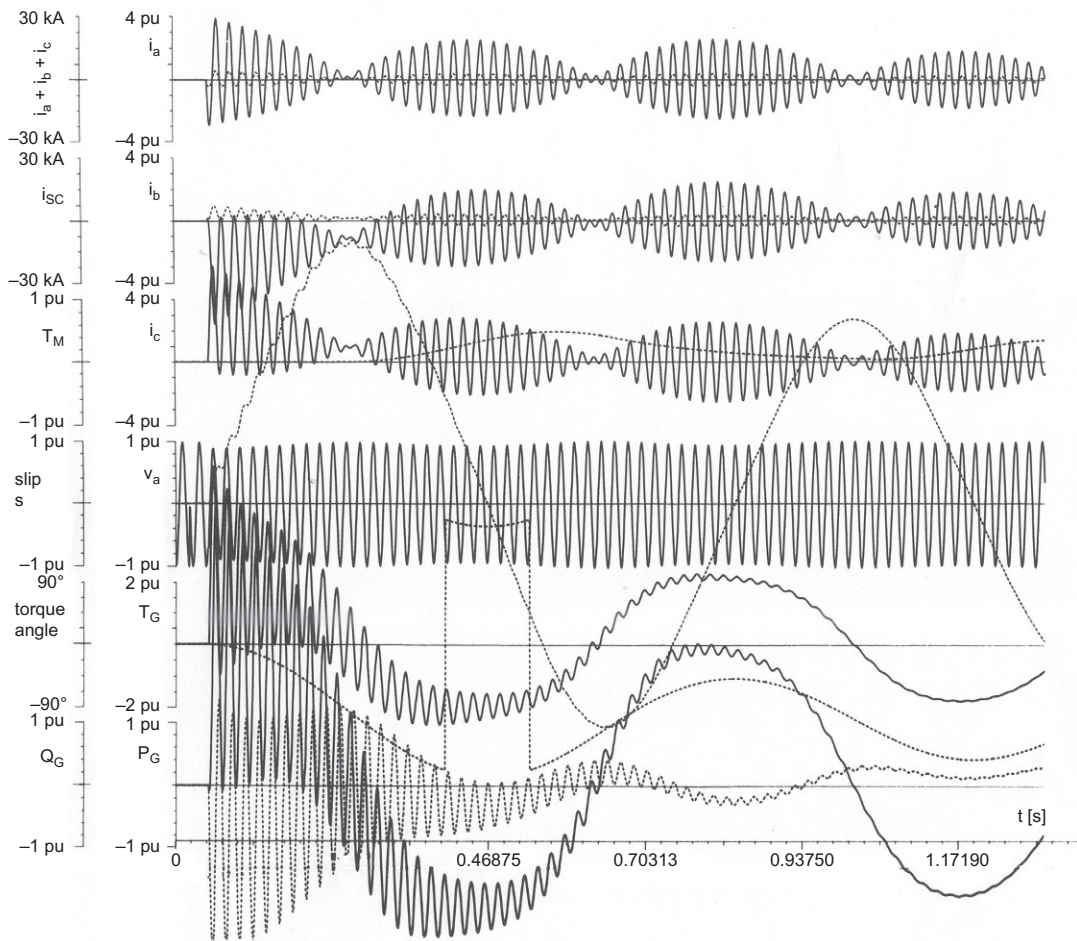


FIG. E4.3.5 Various parameters for out-of-phase synchronization of a turbogenerator when the out-of-phase synchronizing angle is $\delta = 255^\circ$.

- Stator currents i_a , i_b , and i_c are amplitude modulated and reach maximum values of 4 pu.
- Zero-sequence component current ($i_0 = i_a + i_b + i_c$) flowing in the grounded neutral is relatively small and about 0.5 pu.
- Electrical generator (G) torque T_G assumes a maximum value of about 4 pu.
- Rotor (torque) angle exceeds 90° .
- Real P_G and reactive Q_G power oscillations occur.
- Slip s reaches values of more than 3 pu.
- Mechanical torque T_M between generator and turbine is below 1 pu.

Not shown in this graph are the extremely large winding forces in the end region of the stator winding, and the excessive heating of the amortisseur bars and the solid-rotor pole face. The latter issue will be addressed in a later example. In Fig. E4.3.5 the left scale pertains to the dotted signals and the right scale belongs to the full-line signals.

Fig. E4.3.6A illustrates the conditions under which a 30 kVA inverter of a wind-power plant was paralleled with the power system [29,30]. The switching frequency and therefore the fundamental (nominally 60 Hz) frequency were phase-locked with the power system's frequency and thus the slip is by definition $s = 0$. However, the voltage differences and the phase differences must be within certain limits. Experiments showed it was advisable to choose the inverter rms value of the line-to-line voltage always somewhat larger (e.g., $V_{L-L\text{inverter}} = 260 V_{rms}$) than that of the power system's line-to-line voltage (e.g., $V_{L-L\text{power system}} = 240 V_{rms}$). Fig. E4.3.6B depicts the transient current flowing from inverter to power system when inverter is paralleled at an inverter voltage of $V_{L-L\text{inverter}} = 260 V_{rms}$ at an out-of-phase voltage angle of $\delta = 24^\circ$, where the inverter voltage leads that of the power system. As can be seen, the transient current is more than 200 A.

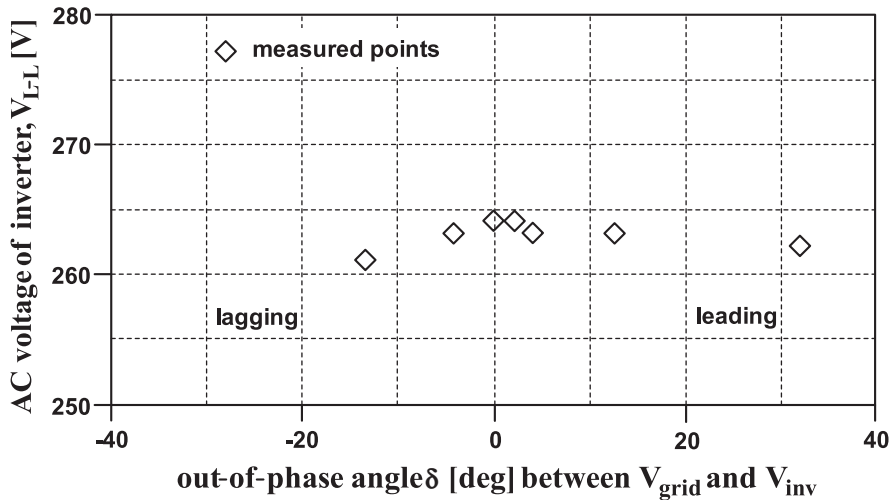


FIG. E4.3.6A Voltage rms values V_{L-L} and out-of-phase voltage angles δ ($^\circ$) when 30 kVA inverter is out-of-phase synchronized with power system.

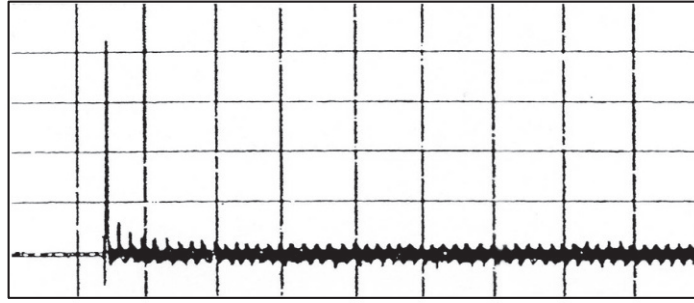


FIG. E4.3.6B Measured transient current (0.1 s/div, 50 A/div) during the time of paralleling the 30 kVA inverter with the power system at V_{L-L} power system = $240 V_{rms}$ and out-of-phase synchronizing angle is $\delta = 24^\circ$ (inverter voltage leads the power system voltage).

Fig. E4.3.7 illustrates the stator flux distribution when a large synchronous generator is paralleled out-of-phase [19]: the stator flux leaves the iron core (stator back iron) and currents are induced in the key bars of the iron-core suspension as well as in the aluminum bars within the dovetails of the iron core. The flux density within the space between the iron core and the frame is 17 mT at a terminal voltage of 1.23 pu. This flux density is sufficient to heat up the solid iron key bars and melt the aluminum bars within the dovetails of the iron core.

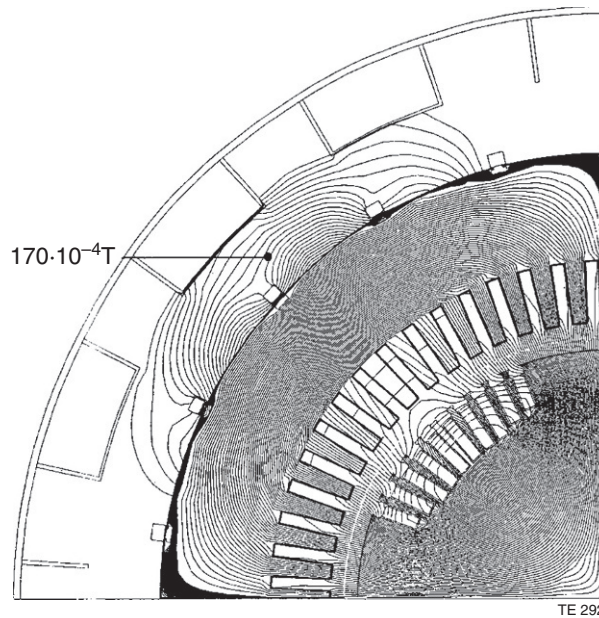


FIG. E4.3.7 Flux distribution when a large generator is out-of-phase synchronized with power system [19].

- (e) Synchronizing and damping torques. When a synchronous generator is paralleled with the power system one obtains for the angle perturbation $\Delta \sin \omega t$ from the steady-state angle δ_0 the synchronizing T_S and damping T_D torques in addition to the steady-state torque T_0 [31]:

$$T = T_0 + T_S(\Delta \sin \omega t) + T_D(\omega \cdot \Delta \cos \omega t), \quad (\text{E4.3.21})$$

where

$$T_0 = \frac{V_{\ell-n} \cdot V_{\ell-no}}{X_d} \sin \delta_0 + V_{\ell-n}^2 \left[\frac{X_d - X_q}{2X_q X_d} \right] \sin 2\delta_0, \quad (\text{E4.3.22})$$

$$\begin{aligned} T_S = & \frac{V_{\ell-n} \cdot V_{\ell-no}}{X_d} \cos \delta_0 + V_{\ell-n}^2 \left(\frac{1}{X_q} - \frac{1}{X_d} \right) \cos 2\delta_0 \\ & + V_{\ell-n}^2 \frac{(X_d - X'_d)}{X_d X'_d} \cdot \frac{(\omega T'_d)^2}{1 + (\omega T'_d)^2} (\sin \delta_0)^2, \end{aligned} \quad (\text{E4.3.23})$$

where $V_{\ell-no}$ is the open-circuit phase (line-to-neutral) voltage at steady-state operation $V_{\ell-n}$ is the phase (line-to-neutral) voltage during synchronization and is approximately $V_{\ell-no} \approx V_{\ell-n} (\approx 1.0 \text{ pu})$

$$T_D = V_{\ell-n}^2 (\sin \delta_0)^2 \left[\frac{(X_d - X'_d)}{X_d X'_d} \right] \frac{T'_{do}}{1 + (\omega T'_d)^2}, \quad (\text{E4.3.24})$$

where

$$T'_{do} = \frac{X_f}{R_f} = \frac{X_d}{X'_d} = T'_d.$$

- (f) Torques during reclosing. In order to minimize power quality problems after short circuits have occurred, it is common practice to reclose the switches that have been opened due to the short circuit. Short circuits can be interrupted within four to six 60 Hz cycles. In the hope that the short circuit has been cleared, the utilities reclose the previously opened switches after nine to fifteen 60 Hz cycles have elapsed. If the short circuit still persists, then the fault will be cleared again after additional four to six 60 Hz cycles. At the most three to five reclosing operations are performed. The timing of the reclosing is important: if the timing is unfavorable the mechanical torques of the turbine stages become excessive, but under favorable conditions these mechanical torques can be minimized. Only an accurate dynamic calculation can approximately predetermine the most favorable reclosing times. Transient electromagnetic and shaft torques of synchronous generators can become as high as 5 to 6 during reclosing [35–39]. The magnitudes of the torques depend on the reclosing time. If the reclosing occurs at a time when the electrical torque due to reclosing adds to the transient shaft torque, the resulting mechanical shaft becomes

large as compared to the case where the electrical torque due to the reclosing opposes the transient shaft torque; in the latter case the resulting shaft torque will be relatively small. This amplification effect of the mechanical transient torque has its analogy in the “swing effect” one encounters on a playground.

Joyce et al. [35,36] have recommended introducing a measure for the theoretical lifetime of a turbine shaft: the occurrence of many high torsional torques reduces the lifetime of a shaft more quickly than the occurrence of low torsional torques. Fig. E4.3.8 illustrates a common connection of a power plant to the high-voltage system. One generator feeds two transformers, which are connected to high-voltage feeders each. This is to minimize the outage of a power plant due to external faults such as short circuits within the power system. The short circuit is caused by making the impedances Z_{Fa} , Z_{Fb} , and Z_{Fc} zero. Breaker #2 interrupts the short circuit and recloses after a preprogrammed time.

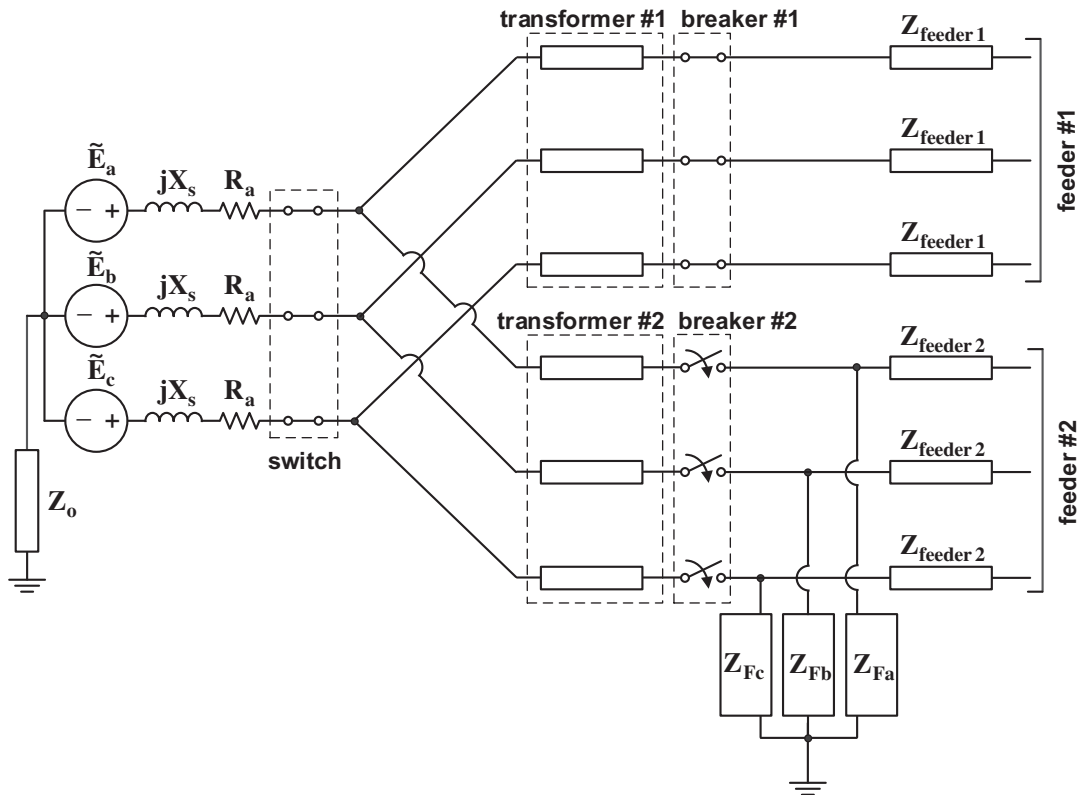


FIG. E4.3.8 Large synchronous generator feeding two transmission lines via two transformers.

Figs. E4.3.9A and E4.3.9B depict the various parameters when reclosing with different reclosing times but with the same short-circuit duration (104 ms) occurs. In these graphs, the left scale pertains to the dotted signals and the right scale belongs to the full-line signals.

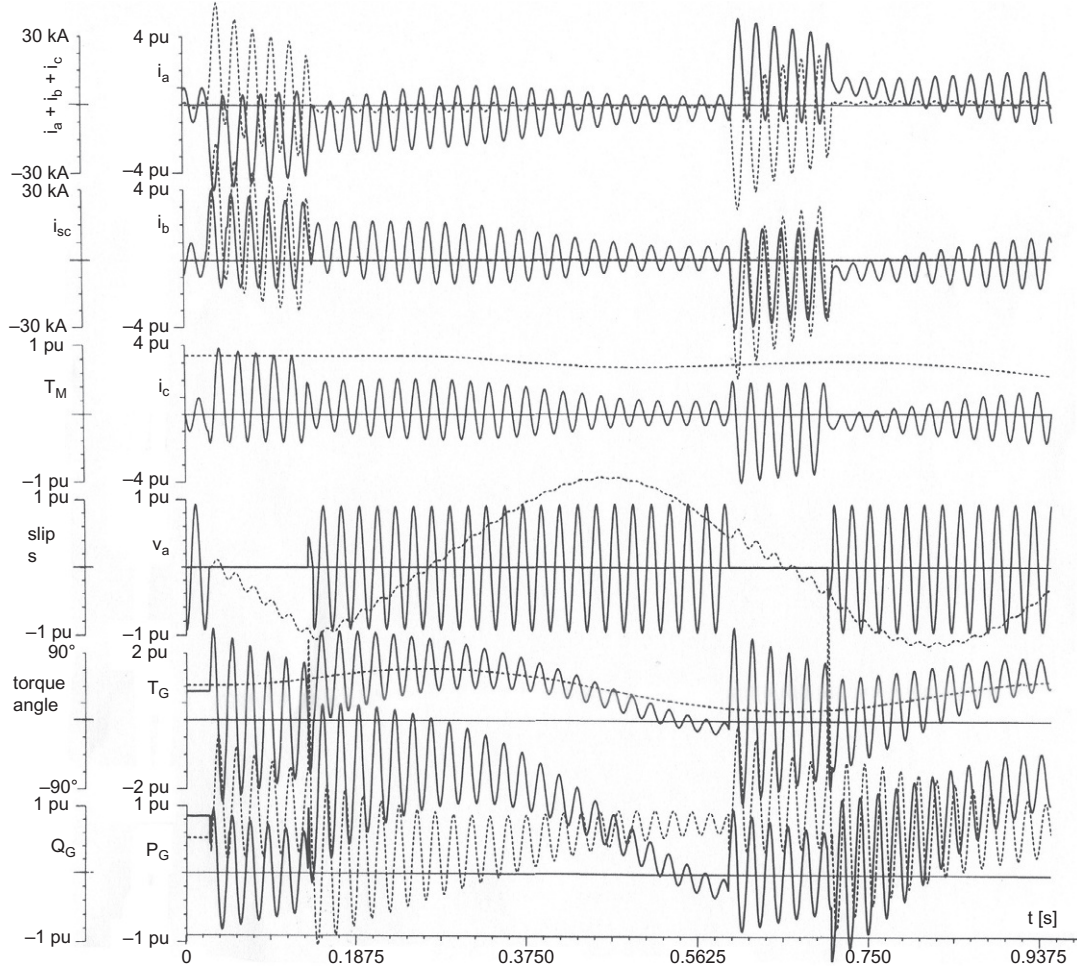


FIG. E4.3.9A Various parameters for three-phase short circuit lasting 104 ms followed by clearing of short circuit for 450 ms, and thereafter followed by reclosing whereby the short circuit has not cleared and lasts 104 ms, thereafter clearing of short circuit.

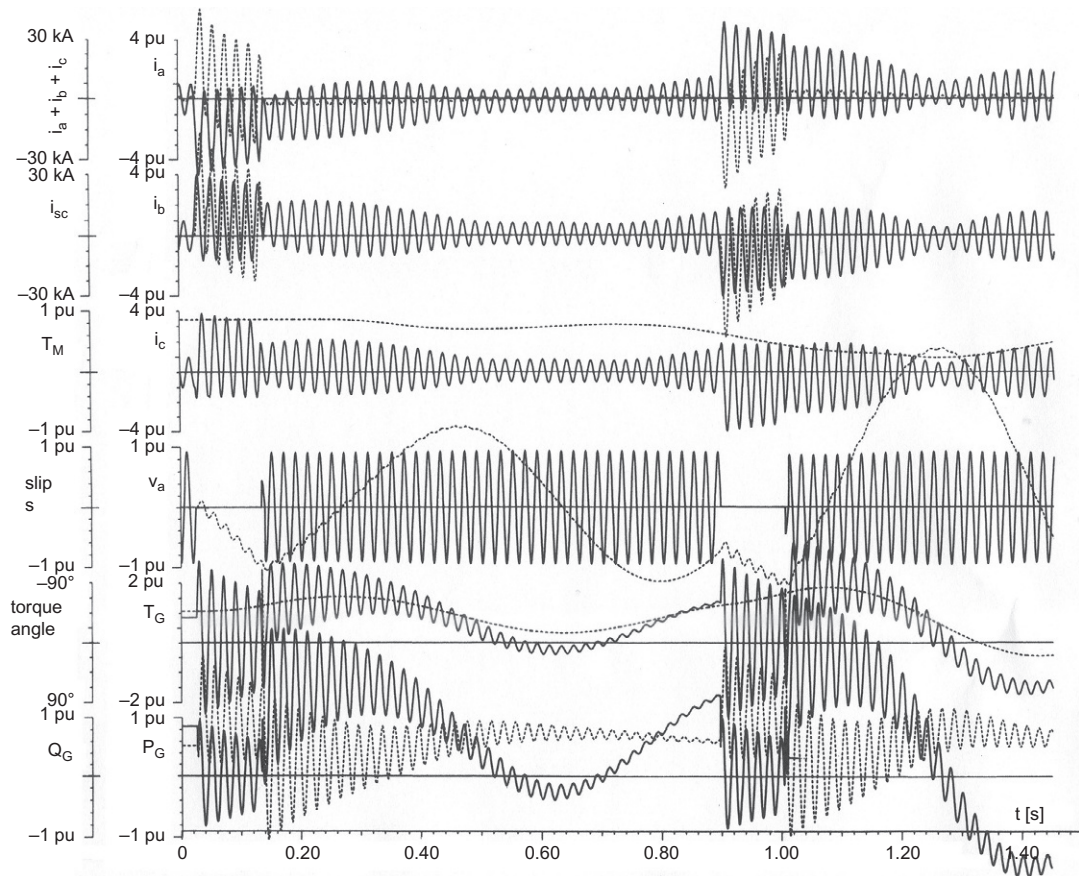


FIG. E4.3.9B Various parameters for three-phase short circuit lasting 104 ms followed by clearing of short circuit for 745 ms, and thereafter followed by reclosing whereby the short circuit has not cleared and lasts 104 ms, thereafter again clearing of short circuit.

Summarizing one can state the following:

- During the three-phase short circuit, the stator currents i_a , i_b , and i_c are amplitude modulated and exceed maximum values of 4 pu.
- Zero-sequence component current ($i_0 = i_a + i_b + i_c$) flowing in the grounded neutral is relatively large and exceeds 4 pu.
- Electrical torque T_G assumes a maximum value of about 3 pu.
- Rotor (torque) angle is below 90° .
- Very large (about 2 pu) real P_G and reactive Q_G power swings occur.
- Maximum slip reaches values of more than 1 pu.
- Mechanical torque T_M between generator and turbine is below 1 pu, but it has an alternating component causing mechanical stress.

- In both cases the stability of the synchronous generators is maintained due to the torque angle δ being less than 90° .

Not shown in the graphs are the extremely large winding forces in the end region of the stator winding, and the excessive heating of the amortisseur bars residing on the rotor. As can be expected, the electrical and mechanical stresses depend on the reclosing times, which are 450 and 745 ms for Figs. E4.3.9A and E4.3.9B, respectively.

4.2.6 Application Example 4.4: Calculation of the amortisseur (damper winding) bar losses of a synchronous machine during balanced three-phase short circuit, line-to-line short circuit, out-of-phase synchronization, and unbalanced load based on the natural abc reference system [40]

For the analysis of subtransient phenomena, a simulation of the damper-winding system of alternators is of utmost importance. Concordia [7] expanded the usual d - and q -axes decomposition by introducing more than two (e.g., d and q) damper winding systems. In this application example, the amortisseur is approximated by 16 damper windings in the d - and q -axes as shown in Fig. E4.4.1, that is, 8 damper windings in the d -axis and 8 damper windings in the q -axis. Damper bars reside in the rotor slots and some bars are embedded in the solid rotor pole zone. To simplify this analysis it is assumed that the rotor is laminated; that means no eddy currents are induced, saturation is neglected, and there are no damper bars embedded in the pole zone.

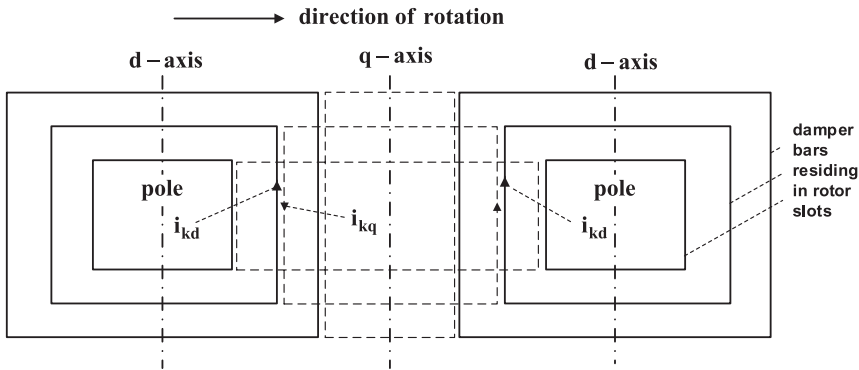


FIG. E4.4.1 Decomposition of amortisseur winding of a two-pole generator [40]. In this graph, only six damper windings are shown: three in the d -axis and three in the q -axis. Figs. E4.4.2–E4.4.4 and E4.4.11–E4.4.12 provide details about the location of the 16 damper bars within the rotor slots.

Solution to Application Example 4.4 Calculation of the amortisseur (damper winding) bar losses of a synchronous machine during balanced three-phase short circuit, line-to-line short circuit, out-of-phase synchronization, and unbalanced load based on the natural abc reference system [40]

Following the notation of [7] one obtains the voltage equations:

$$e_a = p\psi_a - r \cdot i_a \quad (\text{E4.4.1a})$$

$$e_b = p\psi_b - r \cdot i_b \quad (\text{E4.4.1b})$$

$$e_c = p\psi_c - r \cdot i_c \quad (\text{E4.4.1c})$$

$$e_{fd} = p\psi_{fd} + r_{fd} \cdot i_{fd} \quad (\text{E4.4.1d})$$

$$0 = p\psi_{kd} - r_{kd} \cdot i_{kd} + v_{kd} \quad (\text{E4.4.1e})$$

$$0 = p\psi_{kq} - r_{kq} \cdot i_{kq} + v_{kq} \quad (\text{E4.4.1f})$$

for $k = 1, 2, 3, \dots, 8$ damper windings in d - or q -axes.

The flux linkage equations are

$$\psi_a = -L_{aa}i_a - L_{ab}i_b - L_{ac}i_c + L_{afd}i_{fd} + L_{akd}i_{kd} + L_{akq}i_{kq} \quad (\text{E4.4.2a})$$

$$\psi_b = -L_{ba}i_a - L_{bb}i_b - L_{bc}i_c + L_{bfd}i_{fd} + L_{bkd}i_{kd} + L_{bkq}i_{kq} \quad (\text{E4.4.2b})$$

$$\psi_c = -L_{ca}i_a - L_{cb}i_b - L_{cc}i_c + L_{cfd}i_{fd} + L_{ckd}i_{kd} + L_{ckq}i_{kq} \quad (\text{E4.4.2c})$$

$$\psi_{fd} = -L_{fda}i_a - L_{fdb}i_b - L_{fdc}i_c + L_{fdfd}i_{fd} + L_{fdkd}i_{kd} \quad (\text{E4.4.2d})$$

$$\psi_{kd} = -L_{kda}i_a - L_{kdb}i_b - L_{kdc}i_c + L_{kdfd}i_{fd} + L_{kd1d}i_{1d} + L_{kd2d}i_{2d} + \dots + L_{kd\ell d}i_{\ell d} \quad (\text{E4.4.2e})$$

$$\psi_{kq} = -L_{kqa}i_a - L_{kqb}i_b - L_{kqc}i_c + L_{kq1q}i_{1q} + L_{kq2q}i_{2q} + \dots + L_{kq\ell q}i_{\ell q} \quad (\text{E4.4.2f})$$

for $k = 1, 2, \dots, 8$ and $\ell = 1, 2, \dots, 8$.

Following the notation of Fig. E4.4.2, the self-inductance of the k th damper winding is—with ℓ_R being the rotor length

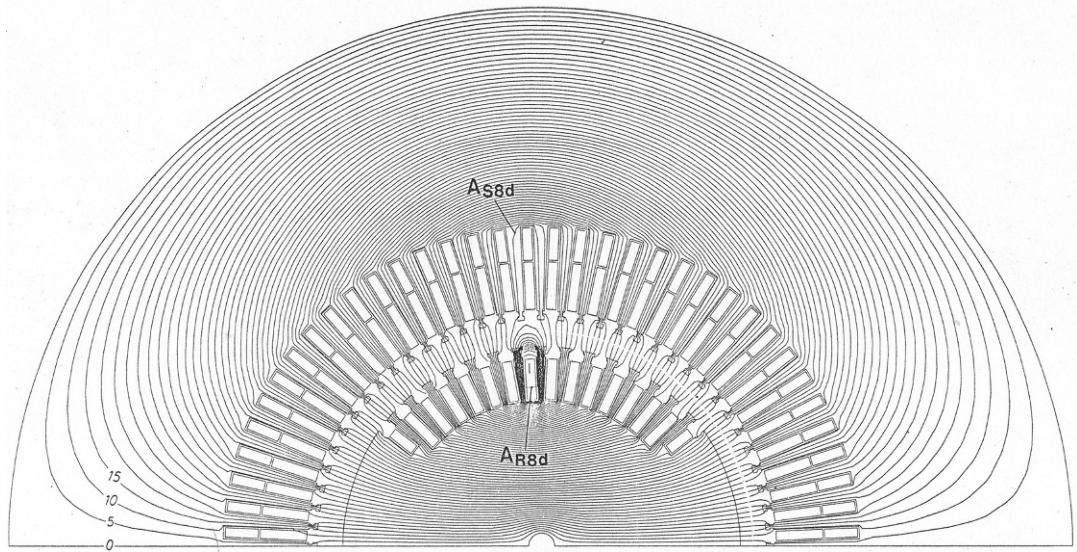


FIG. E4.4.2 Calculation of linear d -axis rotor leakage-, mutual-, and self-inductances, $I = I_{kd} = 500 \text{ kA}$, where $k = 1$. All vector potentials must be multiplied by 10^{-2} Wb/m [40].

$$L_{kd}^R = 2 \cdot \ell_R \cdot A_{Rkd} / I_{kd} \quad (\text{E4.4.3})$$

and the leakage (ℓ) inductance with respect to stator winding is

$$L_{kd\ell}^R = 2 \cdot \ell_R \cdot (A_{Rkd} - A_{Skd}) / I_{kd} \quad (\text{E4.4.4})$$

or referred to the stator reference frame, where m_1 and m_2 are the number of stator and rotor phases, respectively and ℓ_R is the length of the rotor:

$$L_{kd} = m_1 (2 \cdot \ell_R \cdot A_{Rkd} / I_{kd}) M_{kda}^2 / m_2 \quad (\text{E4.4.5})$$

$$L_{kd\ell} = m_1 \{ 2 \cdot \ell_R \cdot (A_{Rkd} - A_{Skd}) / I_{kd} \} M_{kda}^2 / m_2. \quad (\text{E4.4.6})$$

The mutual inductances between the k th and the ℓ th d -axis windings are

$$L_{kd\ell d} = m_1 \cdot L_{kd\ell d}^{kd} \cdot M_{kd\ell d}^2 \cdot M_{\ell da}^2 / m_2 \quad (\text{E4.4.7a})$$

$$L_{\ell dkd} = m_1 \cdot L_{\ell dkd}^{\ell d} \cdot M_{\ell dkd}^2 \cdot \frac{M_{kda}^2}{m_2}. \quad (\text{E4.4.7b})$$

Correspondingly the ohmic resistance is

$$r_{kd} = m_1 \cdot R_{kd} \cdot \frac{M_{kda}^2}{m_2}. \quad (\text{E4.4.8})$$

The same procedure applies to the q -axis parameters, as indicated in Fig. E4.4.3. In these equations, ℓ_R is the rotor length and ℓ signifies either leakage or the ℓ th rotor damper winding. M_{kda} , $M_{kd\ell d}$, $M_{\ell da}$, and $M_{\ell dkd}$ are transformation ratios. The calculation of the stator inductances (Fig. E4.4.4) is performed in the same manner as for the rotor inductances.

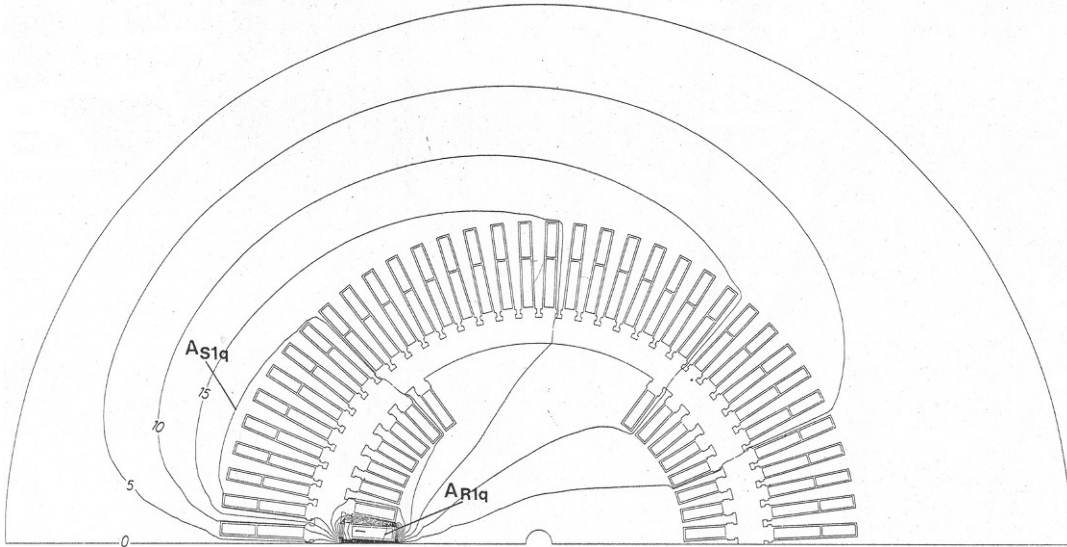


FIG. E4.4.3 Calculation of linear q -axis rotor leakage-, mutual-, and self-inductances, $I = I_{kq} = 500$ kA, where $k = 1$. All vector potentials must be multiplied by 10^{-2} Wb/m [40].

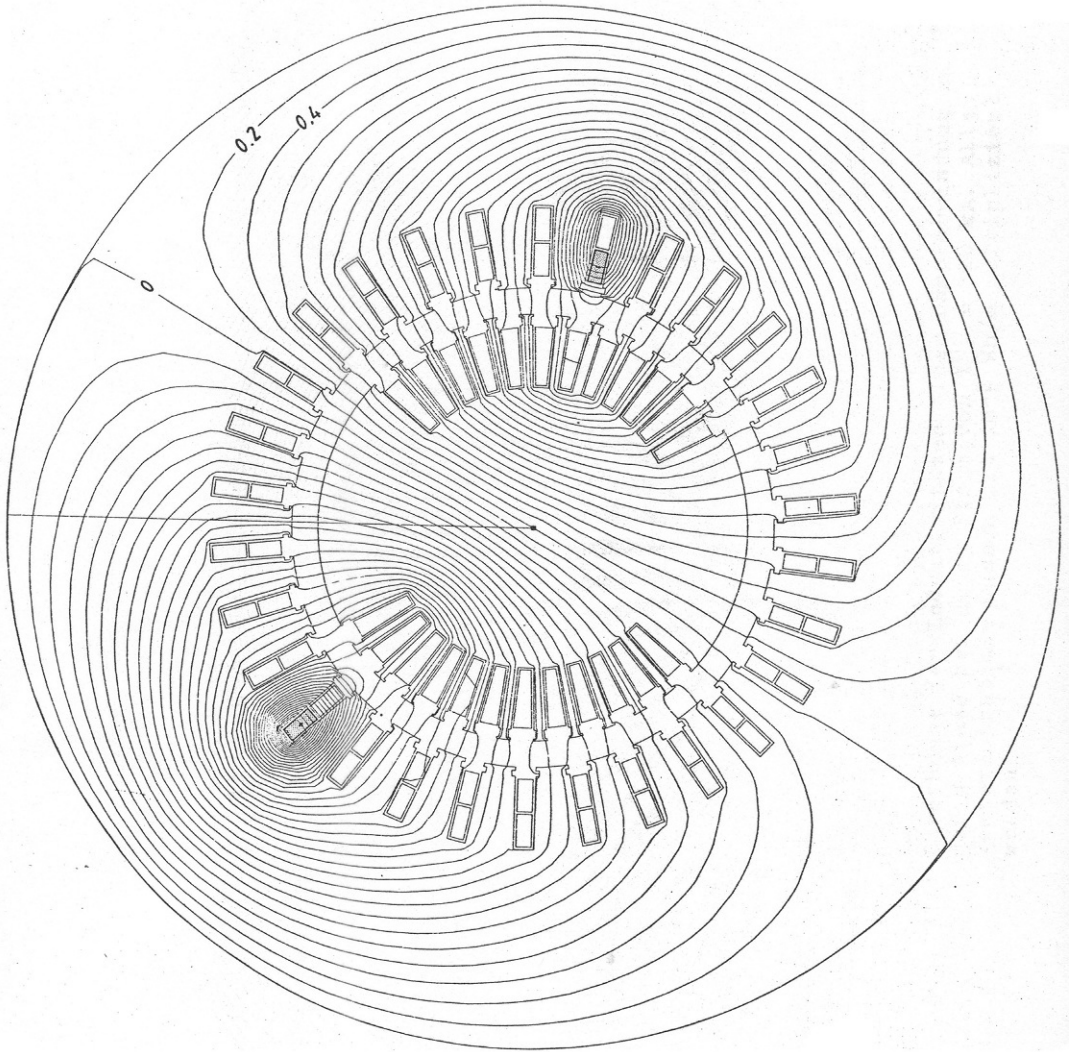


FIG. E4.4.4 Calculation of linear stator leakage-, mutual-, and self-inductances. One stator winding turn is excited with the current 50 A. All vector potentials must be multiplied by 10^{-3} Wb/m [40].

If Eqs. (E4.4.2a), (E4.4.2b), (E4.4.2c), (E4.4.2d), (E4.4.2e), (E4.4.2f)–(E4.4.8) are introduced in Eqs. (E4.4.1a), (E4.4.1b), (E4.4.1c), (E4.4.1d), (E4.4.1e), (E4.4.1f) one obtains

$$[L] \cdot \left[\frac{di}{dt} \right] = [V], \quad (\text{E4.4.9})$$

where $[L]$ is an inductance matrix with time-varying coefficients, $\left[\frac{di}{dt} \right]$ is the derivative of the solution vector $[i]$ and $[V]$ represents the forcing sources. Using Gaussian elimination one gets

$$\left[\frac{di}{dt} \right] = [L]^{-1} \cdot [V]. \quad (\text{E4.4.10})$$

Subsequently a Runge-Kutta integration procedure of the fourth order provides the first starting steps for the Adams-Moulton method, which is a predictor-corrector integration procedure, and one obtains the solution vector $[i]$. A line-to-line short circuit including the generator-transformer leakage impedance is performed. The line-to-neutral voltages in per unit (referred to the rated voltage of the generator) are shown in Fig. E4.4.5. The stator currents are depicted in Fig. E4.4.6, and field and damper bar currents are shown in Figs. E4.4.7, E4.4.8A, and E4.4.8B. The resulting electrical and mechanical torques are depicted in Figs. E4.4.9 and E4.4.10.

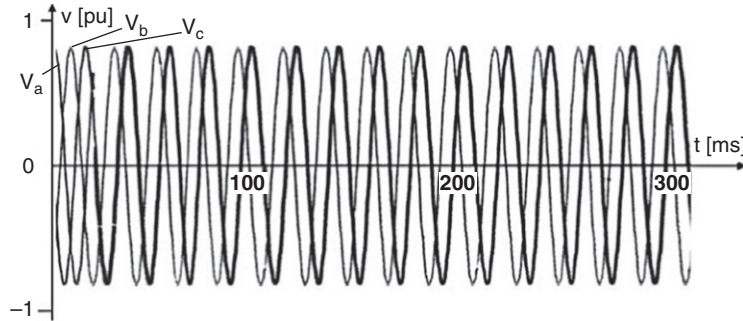


FIG. E4.4.5 Line-to-neutral voltages v_a , v_b , and v_c as a function of time. The line-to-line short circuit occurs at 25 ms at no load and $v_c = v_a$. The voltages are referred to rated line-to-neutral voltage.

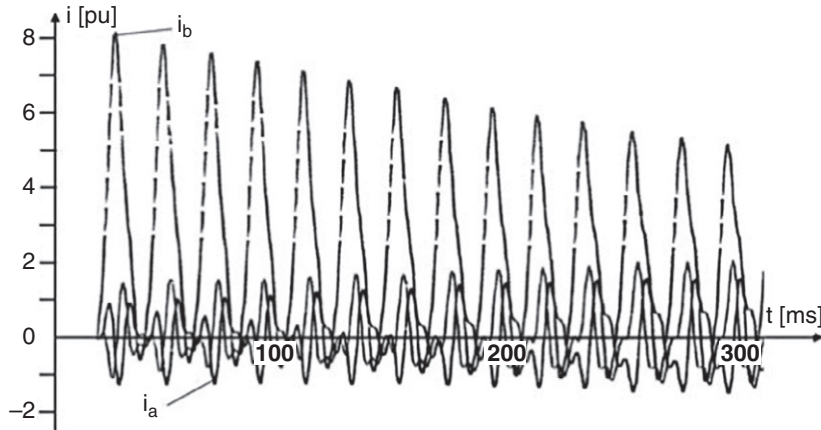


FIG. E4.4.6 Phase currents i_a , i_b , and i_c as a function of time. The line-to-line short circuit occurs at 25 ms at no load and $v_c = v_a$. The voltages are referred to rated line-to-neutral voltage.

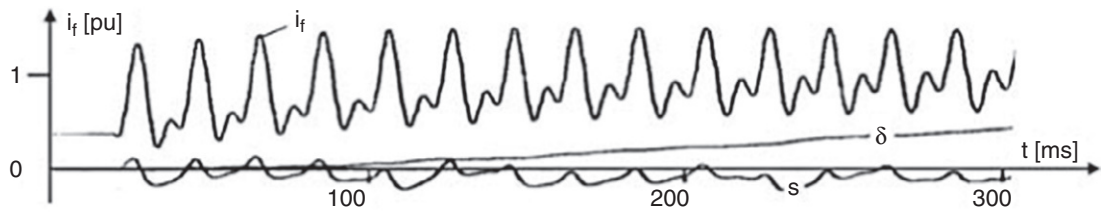


FIG. E4.4.7 Field current i_f , slip s , and change in rotor angle δ as a function of time. The line-to-line short circuit occurs at 25 ms at no load and $v_c = v_a$. The voltages are referred to rated line-to-neutral voltage.

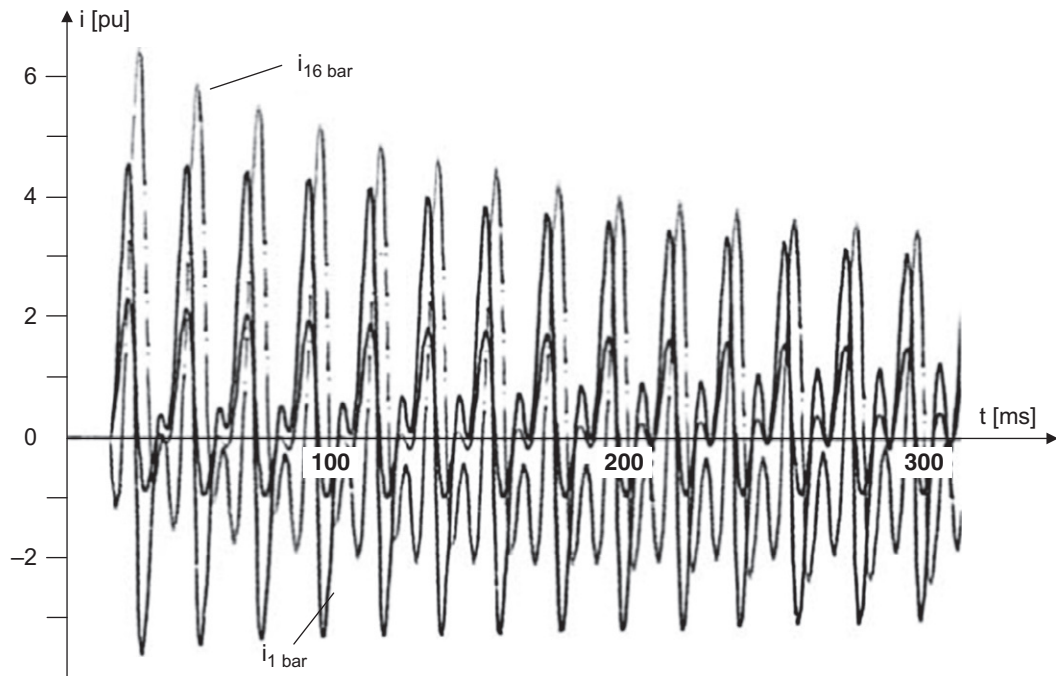


FIG. E4.4.8A Rotor bar currents $i_{1\text{bar}}$, $i_{16\text{bar}}$ (see Fig. E4.4.11) as a function of time. The line-to-line short circuit occurs at 25 ms at no load and $v_c = v_a$. The voltages are referred to rated line-to-neutral voltage.

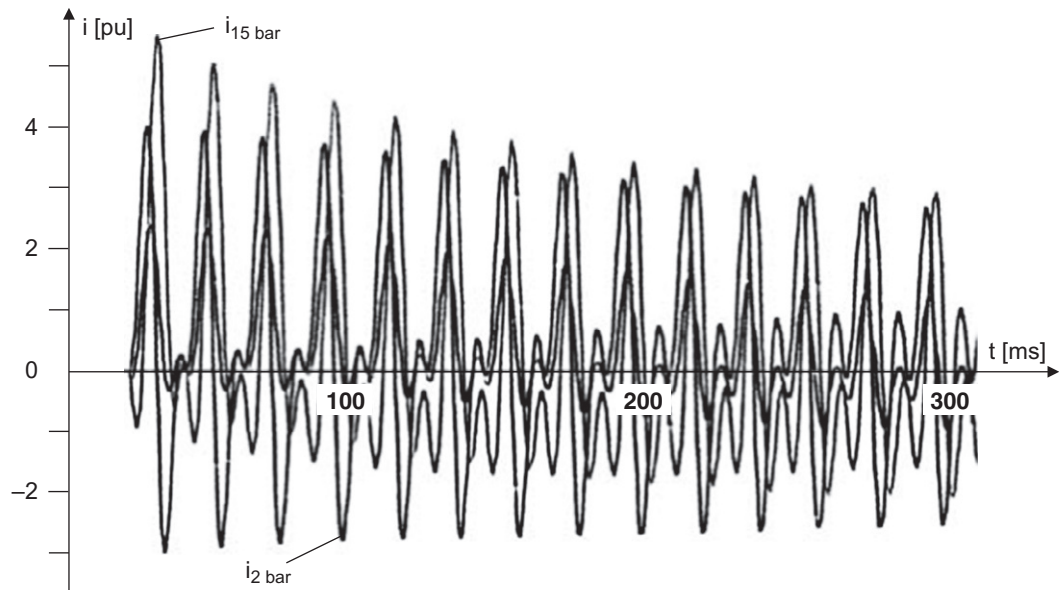


FIG. E4.4.8B Rotor bar currents $i_{2\text{bar}}$, $i_{15\text{bar}}$ (see Fig. E4.4.11) as a function of time. The line-to-line short circuit occurs at 25 ms at no load and $v_c = v_a$. The voltages are referred to rated line-to-neutral voltage.

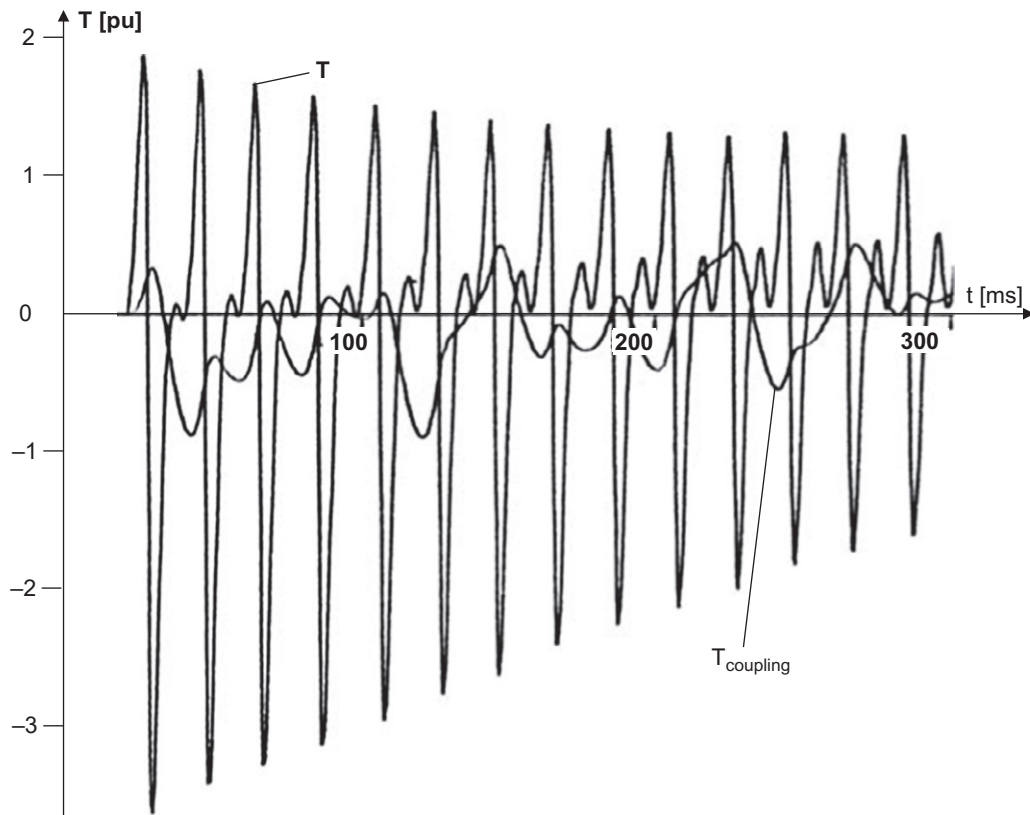


FIG. E4.4.9 Electrical generator torque T and mechanical torque T_{coupling} between generator and steam turbine stage #1 as a function of time. The line-to-line short circuit occurs at 25 ms at no load and $v_c = v_a$. The torques are referred to the rated torque of generator.

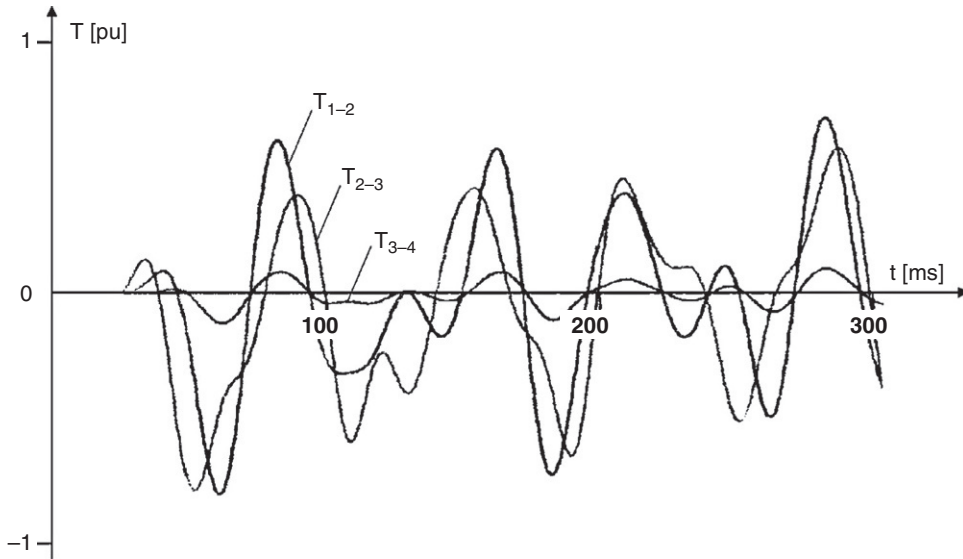


FIG. E4.4.10 Mechanical torques at the couplings 1–2, (T_{1-2} , stages 1 and 2), 2–3 (T_{2-3} , stages 2 and 3), and 3–4 (T_{3-4} , generator and exciter) as a function of time. The line-to-line short circuit occurs at 25 ms at no load and $v_c = v_a$. The torques are referred to the rated torque of generator.

The integral $\int_{t_1}^{t_2} (i_{kbar})^2 dt$ is a measure for the energy absorbed by the damper bar k due to the current i_{kbar} . Therefore, the energy dissipated in the damper bar k during time $(t_2 - t_1)$ is

$$E_{kbar} = \left\{ \int_{t_1}^{t_2} (i_{kbar})^2 dt \right\} R_{kbar}. \quad (\text{E4.4.11})$$

It is well known that the bar (e.g., #16) of the amortisseur (see Fig. E4.4.11) located before the rotor pole as viewed in the direction of rotation incurs greater loss than the bar (e.g., #1) of the amortisseur located behind the rotor pole as viewed in the direction of rotation. Fig. E4.4.12 shows the values E_{kbar} for a sudden line-to-line short circuit at the terminals including transformer impedance for various time intervals $(t_2 - t_1)$. Fig. E4.4.13 depicts the subtransient field of a generator during the first cycle of a three phase short circuit.

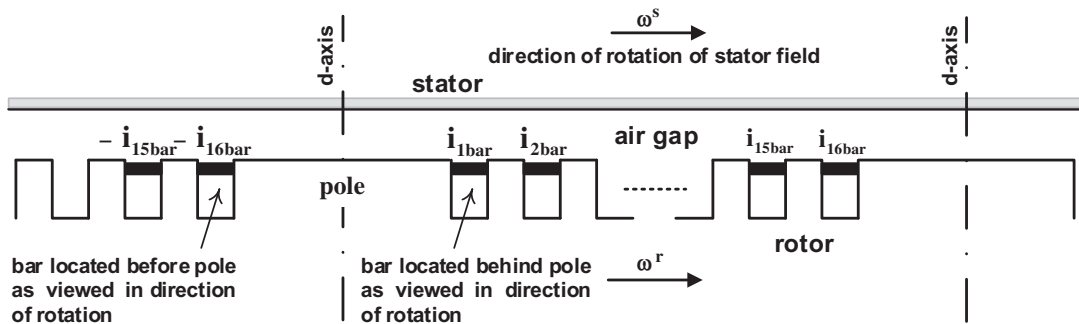


FIG. E4.4.11 Definition of the bars of the amortisseur located before (#16) and after (#1) the rotor pole as viewed in direction of rotation.

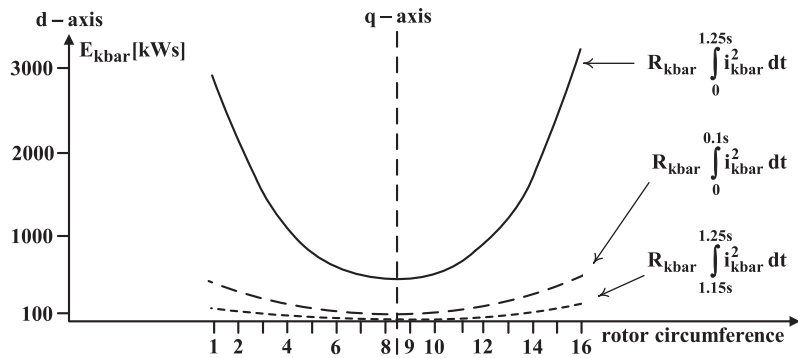


FIG. E4.4.12 Energy dissipated in the k damper (amortisseur) bars during line-to-line short circuit at the secondary terminals of a transformer fed by a generator [40].

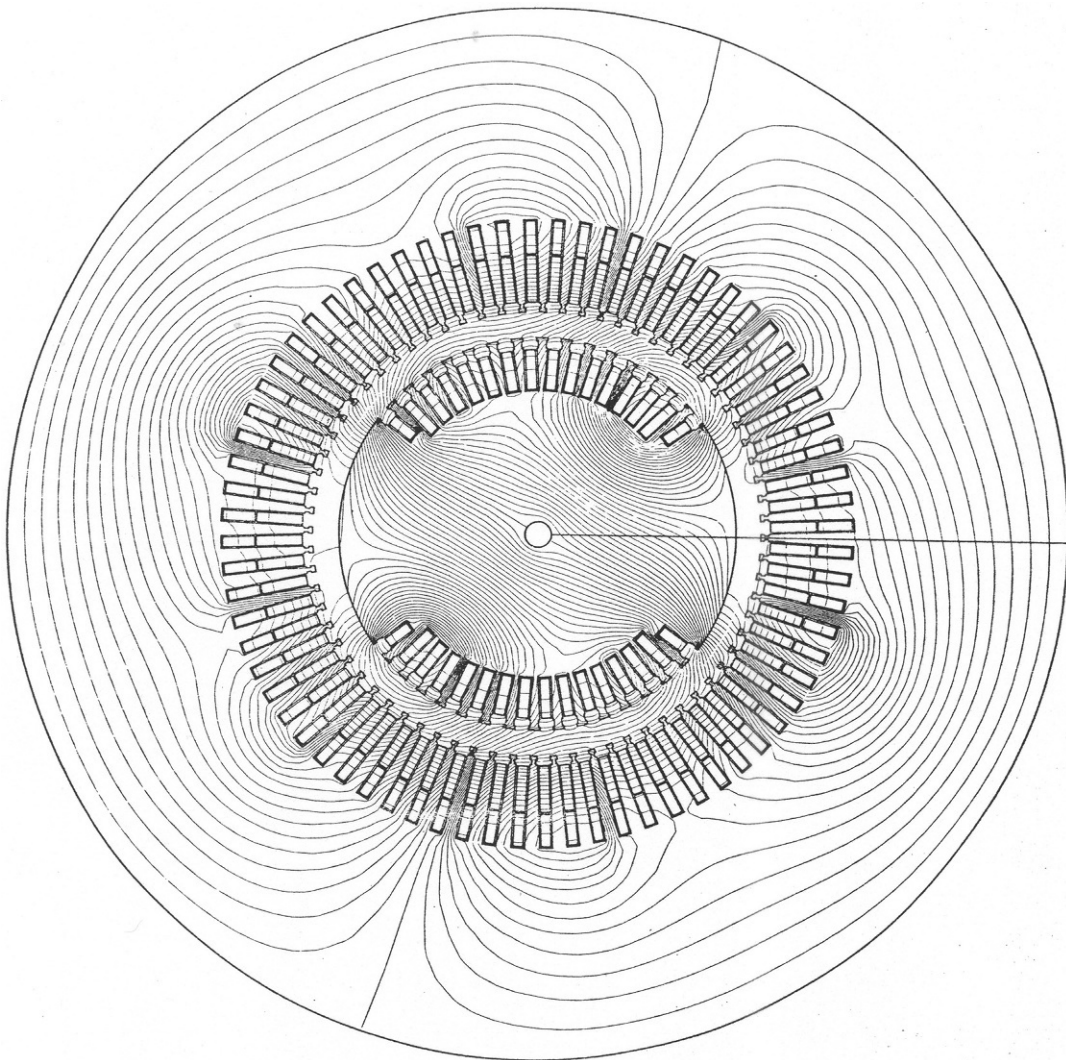


FIG. E4.4.13 Subtransient magnetic field during the first cycle of a synchronous generator during balanced three-phase short circuit.

Table E4.4.1 summarizes the dissipated energies in the 1st and 16th amortisseur bars during various fault conditions of a generator including the generator-transformer leakage impedance:

- (1) line-to-line short circuit.
- (2) balanced three-phase short circuit.
- (3) out-of-phase synchronization with a 120° leading rotor angle.
- (4) out-of-phase synchronization with a 120° lagging rotor angle.
- (5) unbalanced stator currents resulting in an inverse stator current of $|\tilde{I}_2| = 8.7\%$.

TABLE E4.4.1 Dissipated energies in amortisseur bars #1 and #16 for different fault conditions

Fault condition	Energy dissipated in per unit ^a in bar #1 during first 1.25 s	Energy dissipated in per unit ^a in bar #16 during first 1.25 s
Line-to-line short circuit	0.95	1.05
Balanced three-phase short circuit	0.92	1.12
Out-of-phase synchronization with a 120° leading rotor angle	2.36	2.43
Out-of-phase synchronization with a 120° lagging rotor angle	1.25	1.57
Unbalanced stator currents resulting in an inverse stator current of $ \tilde{I}_2 = 8.7\%$.	0.049	0.053

^a Energy dissipated in a bar is referred to the heat energy required to melt 1 bar if there is no cooling.

Discussion of results

- Most transients decay within 1 to 2 s.
- The 2nd harmonic in the stator currents of Fig. E4.4.6 is confirmed by measurements.
- The thermal stress of the amortisseur bars due to a balanced short circuit can be tolerated, provided there are no subsequent short circuits within a brief time frame.
- An imbalance due to an inverse current of $|\tilde{I}_2| = 8.7\%$ is acceptable—even during steady-state operation.
- There is a great difference when synchronizing with either a leading rotor angle or a lagging rotor angle. Out-of-phase synchronization with a leading rotor angle generates more losses within the generator than in the case of synchronization with a lagging rotor angle. In the first case, the machine acts as a generator and in the latter it acts as a motor during the synchronization process. Note that an out-of-phase angle in the neighborhood of 140° leads to the largest currents and torques (see Fig. E4.3.4).
- To mitigate or reduce the thermal stress of damper bars #1 and #16 manufacturers of synchronous generators embed damper bars also on the surface of the rotor poles. In this manner, the thermal stress of all amortisseur bars will be made more equal.
- Not neglecting saturation and the generation of eddy currents within the solid rotor poles will in addition mitigate the thermal stress of the entire amortisseur because the inductive coupling between stator and rotor damper windings will be reduced.

- A similar analysis applies to the induced currents of an induction machine. Under normal operation the currents induced in the rotor bars of an induction machine are uniform and have the same rated magnitude $I_{\text{bar_rated}}$ in each and every bar. However, if a bar is broken (that is, no current can flow) then the neighboring bars will have currents that can be significantly larger than the rated magnitude. Such an unequal current distribution may result in a thermal imbalance. As a consequence due to this imbalance and the very small air gap of induction machines, the rotor may become eccentric and rub against the stator core, and this may lead to failure of the induction machine. See [Chapter 3](#) for more details.

The abc -reference frame employed in this example has been subsequently used in Refs. [41–43]. The above results are confirmed in these references. However, the out-of-phase synchronizing angle of 180° as used in Ref. [43] does not yield the largest currents, losses, and torques (see [Fig. E4.3.4](#)). These references teach that the large losses in the damper bars next to the poles (e.g., bar #1 and bar #16) can be reduced by the deployment of amortisseur bars, which are embedded within the pole faces.

4.2.7 Application Example 4.5: Measured voltage ripple of a 30kVA permanent-magnet synchronous machine, designed for a direct-drive wind-power plant

A permanent-magnet generator is designed [29,30] for a variable-speed drive of a wind-power plant without any mechanical gear. The rated speed range is from 60 to 120rpm. Line-to-neutral voltages v_{L-N} and line-to-line voltages v_{L-L} are recorded at no load and under rated load.

The voltage wave shapes are subjected to a Fourier analysis. [Figs. E4.5.1 and E4.5.2](#) depict the line-to-neutral voltages at no load and rated load, respectively, and [Tables E4.5.1 and E4.5.2](#) represent their Fourier coefficients. [Figs. E4.5.3 and E4.5.4](#) represent the line-to-line voltages at no load and at rated load, and [Tables E4.5.3 and E4.5.4](#) list their spectra. To minimize the size of this low-speed generator, the stator pitch k_p and distribution k_d winding factors are chosen relatively high ($k_p \cdot k_d = 0.8$) resulting in a somewhat nonsinusoidal voltage wave shape. The generator feeds a rectifier and for this reason the nonsinusoidal voltage wave shape does not matter, except it increases the generator losses within acceptable limits.

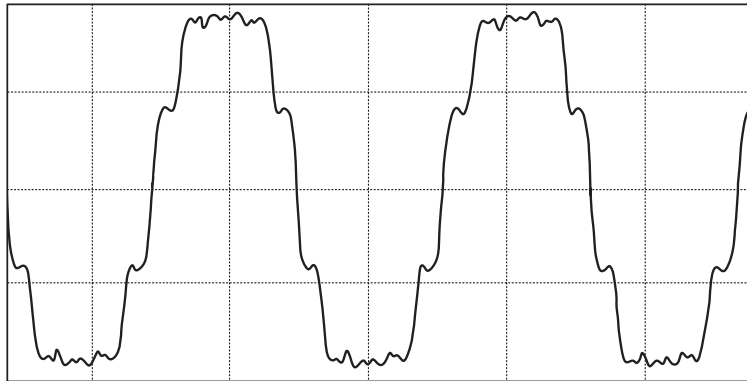


FIG. E4.5.1 Measured line-to-neutral v_{L-N} voltage wave shape of permanent-magnet generator at no load designed for wind-power application [44].

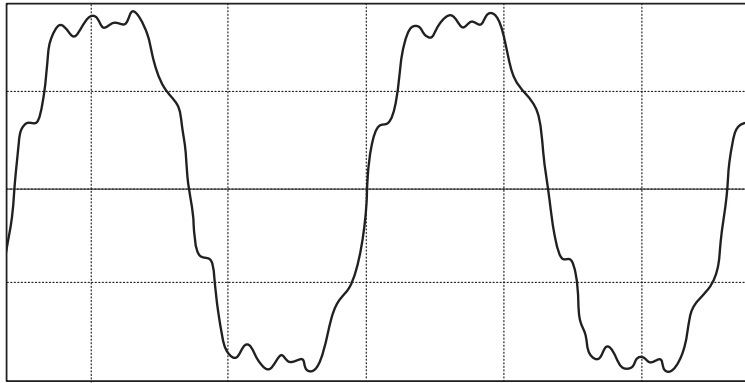


FIG. E4.5.2 Measured line-to-neutral v_{L-N} voltage wave shape of permanent-magnet generator at rated load designed for wind-power application [44].

TABLE E4.5.1 Harmonic spectrum of Fig E4.5.1.

Harmonic order	Harmonic magnitude (%)	Harmonic order	Harmonic magnitude (%)
1	100	7	3
2	0	8	0
3	11	9	8
4	0	10	0
5	1	11	7
6	0	12	0

TABLE E4.5.2 Harmonic spectrum of Fig E4.5.2.

Harmonic order	Harmonic magnitude (%)	Harmonic order	Harmonic magnitude (%)
1	100	7	2
2	0	8	0
3	14	9	7
4	0	10	0
5	1	11	5
6	0	12	0

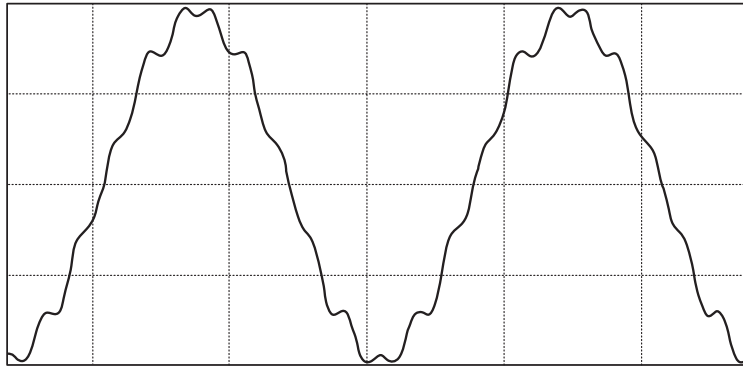


FIG. E4.5.3 Measured line-to-line v_{L-L} voltage wave shape of permanent-magnet generator at no load designed for wind-power application [44].

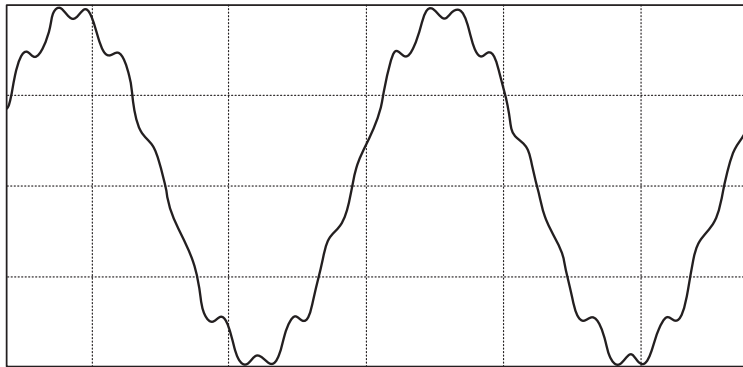


FIG. E4.5.4 Measured line-to-line v_{L-L} voltage wave shape of permanent-magnet generator at rated load designed for wind-power application [44].

TABLE E4.5.3 Harmonic spectrum of Fig E4.5.3.

Harmonic order	Harmonic magnitude (%)	Harmonic order	Harmonic magnitude (%)
1	100	7	3
2	1	8	0
3	0	9	0
4	1	10	0
5	1	11	6
6	0	12	0

TABLE E4.5.4 Harmonic spectrum of Fig E4.5.4.

Harmonic order	Harmonic magnitude (%)	Harmonic order	Harmonic magnitude (%)
1	100	7	3
2	1	8	0
3	1	9	0
4	0	10	0
5	1	11	6
6	0	12	0

4.2.8 Application Example 4.6: Calculation of synchronous reactances X_d and X_q from measured data based on phasor diagram

Synchronous reactances are defined for fundamental frequency. Subjecting the voltage and current to a Fourier series yields the following data: line-to-neutral terminal voltage $V_{(l-n)}$, phase current $I_{(l-n)}$, instead of the induced voltage E the no-load voltage $V_{(l-n), \text{no-load}} \approx E$ can be used for a permanent-magnet machine if saturation is not dominant. The displacement power factor angle φ and the torque angle δ can be determined from an oscilloscope recording and from a stroboscope, respectively. The ohmic resistance R can be measured as a function of the machine temperature. The relationship between these quantities is given by the phasor diagram of Fig. E4.6.1. Calculate the synchronous reactances X_q and X_d .

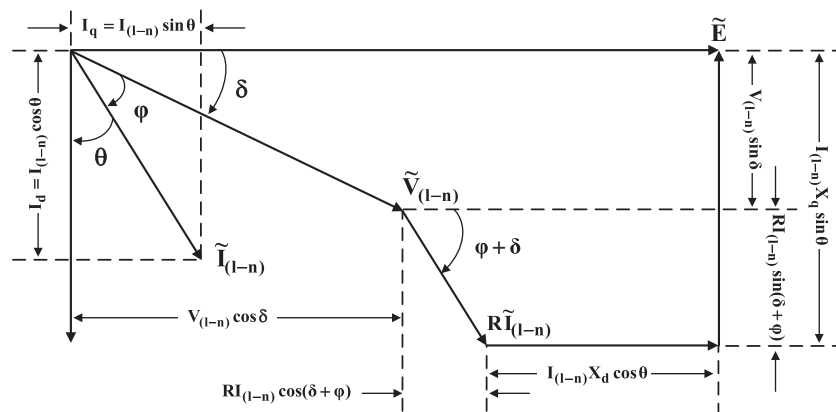


FIG. E4.6.1 Phasor diagram of synchronous machine with saliency.

Solution to Application Example 4.6 Calculation of synchronous reactances X_d and X_q from measured data based on phasor diagram

From the phasor diagram of Fig. E4.6.1, the following relations for the synchronous reactances X_q and X_d are derived:

$$X_q = \frac{V_{(l-n)} \sin \delta + RI_{(l-n)} \sin \delta \cos \varphi + RI_{(l-n)} \cos \delta \sin \varphi}{I_{(l-n)} \cos \varphi \cos \delta - I_{(l-n)} \sin \varphi \sin \delta}, \quad (\text{E4.6.1})$$

$$X_d = \frac{E - V_{(l-n)} \cos \delta + RI_{(l-n)} \cos (\delta + \varphi)}{I_{(l-n)} \cos (90^\circ - \varphi - \delta)}. \quad (\text{E4.6.2})$$

An application of these relations is given in Ref. [44].

4.2.9 Application Example 4.7: Design of a low-speed 20kW permanent-magnet generator for a wind-power plant

A $P = 20 \text{ kW}$, $V_{L-L} = 337 \text{ V}$ permanent-magnet generator has the cross sections of Figs. E4.7.1 and E4.7.2. The number of poles is $p = 12$ and its rated speed is $n_{\text{rat}} = n_s = 60 \text{ rpm}$, where n_s is the synchronous speed. The B-H characteristic of the neodymium-iron-boron (NdFeB) permanent-magnet material is shown in Fig. E4.7.3.

- Calculate the frequency f of the stator voltages and currents.
- Apply Ampere's law to path C (shown in Figs. E4.7.1 and E4.7.2) assuming the stator and rotor iron cores are ideal ($\mu_r \rightarrow \infty$).
- Apply the continuity of flux condition for the areas A_m and A_g (representing half of the magnet area per pole and half of the air-gap area per pole, respectively) perpendicular to path C (two times the one-sided magnet (m) length l_m , and two times the one-sided air gap (g) length l_g , respectively). Furthermore $l_m = 7 \text{ mm}$, $l_g = 1 \text{ mm}$, $A_m = 11,668 \text{ mm}^2$, and $A_g = 14,469 \text{ mm}^2$.
- Provided the relative permeability of the stator and rotor cores is $\mu_r \rightarrow \infty$, compute the load line of this machine. Plot the load line in a figure similar to that of Fig. E4.7.3. Is the permanent-magnet material (NdFeB) operated at the point of the maximum energy product?
- What is the recoil permeability μ_R of the NdFeB material?
- Compute the fluxes Φ_{max} and $\Phi_{\text{total max}} = 2\Phi_{\text{max}}$, provided there are $N = 360$ turns per stator phase, the (pitch and distribution) winding factor is $k_w = 0.8$, and the iron-core stacking factor is $k_{fe} = 0.94$.
- Determine the diameter D of stator wire for a copper-fill factor of $k_{cu} = 0.62$ and a stator slot cross section of $A_{\text{st_slot}} = 368 \text{ mm}^2$.

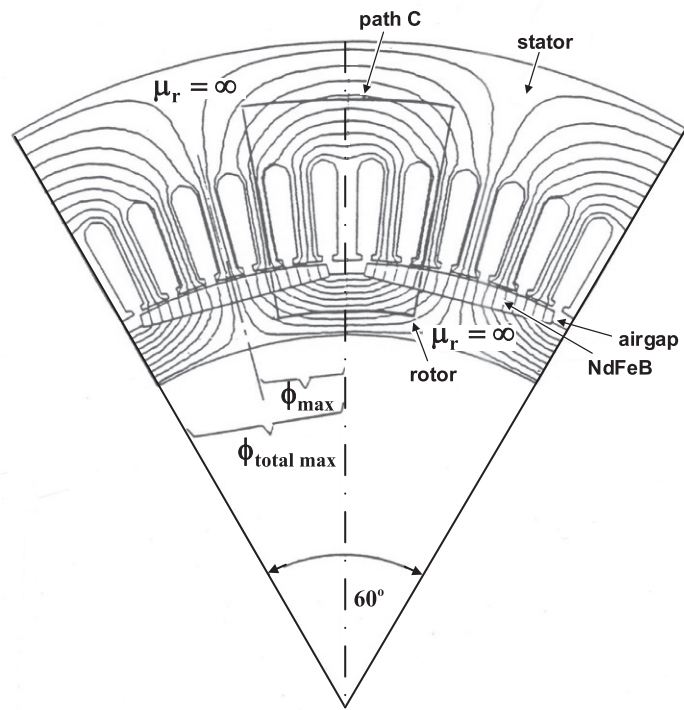


FIG. E4.7.1 Cross section of one period (two pole pitches) of permanent-magnet machine with no-load field.

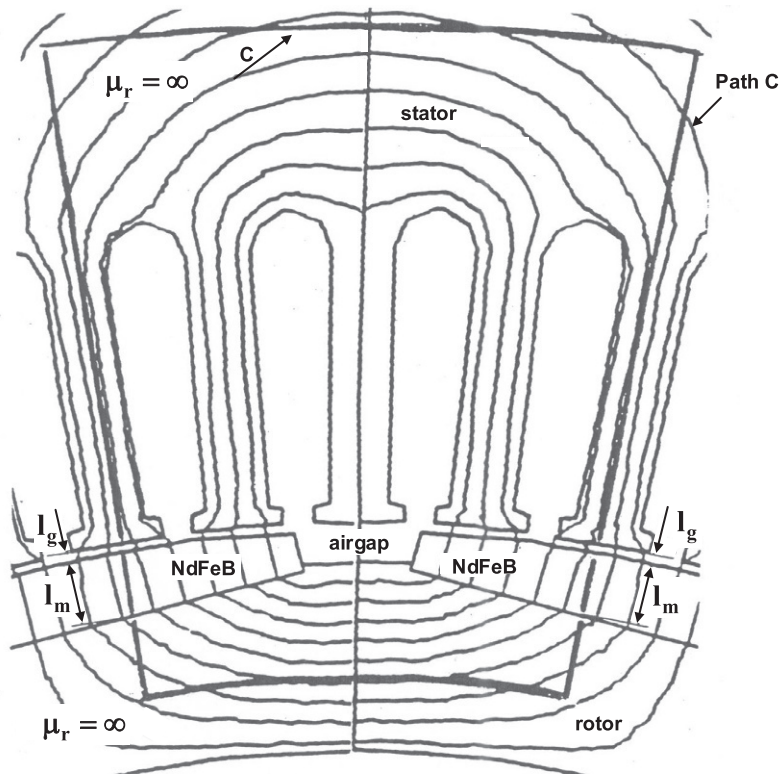


FIG. E4.7.2 Magnified cross section of area enclosed by path C of a pole pitch of permanent-magnet machine (see Fig. E4.7.1).

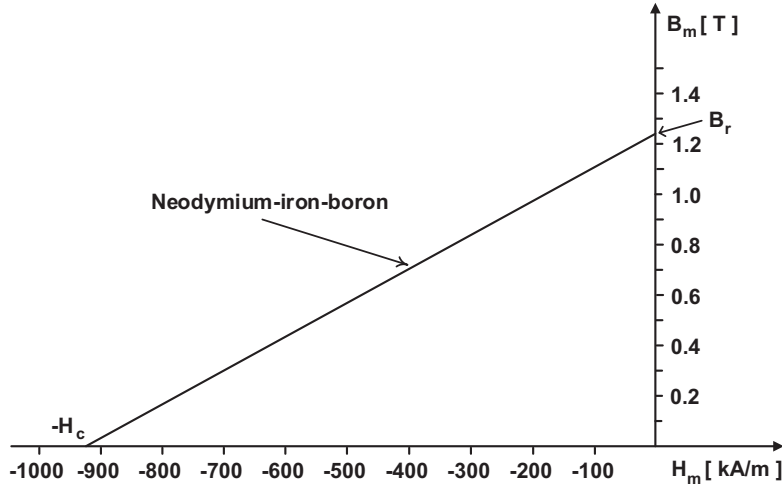


FIG. E4.7.3 B_m - H_m characteristic of neodymium-iron-boron (NdFeB) permanent-magnet material.

Solution to Application Example 4.7 *Design of a low-speed 20kW permanent-magnet generator for a wind-power plant*

(a) Synchronous speed

$$n_s = \frac{120f}{p} \quad \text{or} \quad f = \frac{n_s \cdot p}{120} = \frac{60(12)}{120} = 6 \text{ Hz.} \quad (\text{E4.7.1})$$

(b) Ampere's law

$$H_m l_m + H_g l_g = 0. \quad (\text{E4.7.2})$$

(c) Continuity of flux

$$\Phi = B_m A_m = B_g A_g, \quad (\text{E4.7.3})$$

(d) Constituent relation

$$B_g = \mu_0 H_g, \quad (\text{E4.7.4})$$

From Eq. (E4.7.2)

$$H_m l_m = -H_g l_g, \quad (\text{E4.7.5})$$

With Eq. (E4.7.4)

$$H_m l_m = -\frac{B_g l_g}{\mu_0}, \quad (\text{E4.7.6})$$

and with Eq. (E4.7.3)

$$B_g = B_m \left(\frac{A_m}{A_g} \right), \quad (\text{E4.7.7})$$

the load-line equation becomes

$$H_m = -\left(\frac{A_m}{A_g} \right) \left(\frac{l_g}{l_m} \right) \frac{B_m}{\mu_0}. \quad (\text{E4.7.8})$$

Introducing the given numerical values into load-line equation gives

$$H_m = -91.7 B_m \left[\frac{\text{kA}}{\text{m}} \right]. \quad (\text{E4.7.9})$$

This equation is plotted in Fig. E4.7.4. Note that the magnet material is not operated in the point of the maximum energy product.

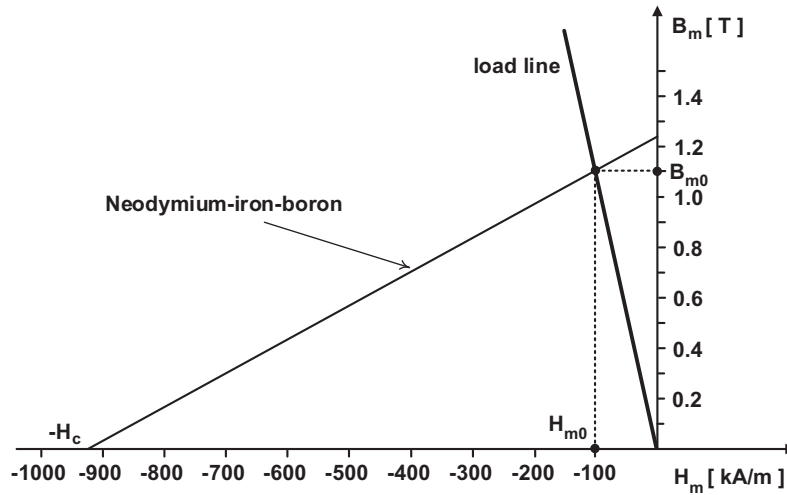


FIG. E4.7.4 Magnet (NdFeB) characteristic and load line.

(e) Recoil permeability of NdFeB (slope of the permanent-magnet characteristic).

$$\mu_R = \frac{(y_2 - y_1)}{(x_2 - x_1)} = \frac{(B_r - 0)}{(0 - (-H_c))} = \frac{1.25}{950 \cdot 10^3} = 1.316 \cdot 10^{-6} \text{ (H/m)}. \quad (\text{E4.7.10})$$

or

$$\mu_R = 1.047\mu_0. \quad (\text{E4.7.11})$$

(f) Induced voltage

$$\Phi_{\max} = B_m A_m, \quad (\text{E4.7.12})$$

$$\Phi_{\text{total max}} = 2\Phi_{\max} = 2B_m A_m. \quad (\text{E4.7.13})$$

The flux is defined as

$$\Phi(t) = \Phi_{\text{total max}} \cos \omega t. \quad (\text{E4.7.14})$$

Therefore, the induced voltage is

$$E_{\max} = N \left(\frac{d\Phi}{dt} \right) = \omega N_{ph} k_w k_{fe} \Phi_{\text{total max}}. \quad (\text{E4.7.15})$$

From load line and magnet characteristic one obtains the operating point:

$$B_{m0} = 1.1 \text{ T}, \quad (\text{E4.7.16a})$$

$$H_{m0} = -100 \text{ kA/m}. \quad (\text{E4.7.16b})$$

Therefore,

$$\Phi = \Phi_{\text{total max}} = 2(1.1)(11668 \cdot 10^{-6}) \text{ Wb} = 0.0257 \text{ Wb} \quad (\text{E4.7.17})$$

and the induced voltage is now

$$e(t) = (360)(0.0257)(2\pi)(6)(0.8)(0.94) \sin \omega t = E_{\max} \sin \omega t, \quad (\text{E4.7.18a})$$

or

$$E_{\max} = 262.3 \text{ V}, \quad (\text{E4.7.18b})$$

$$E_{rms} = \frac{E_{\max}}{\sqrt{2}} = 185.48 \text{ V}, \quad (\text{E4.7.18c})$$

and the line-to-line terminal voltage is approximately

$$V_{L-L} = \sqrt{3}V_{L-N} = \sqrt{3}(1.05)E_{rms} = 337.3 \text{ V}. \quad (\text{E4.7.19})$$

(g) Determination of wire diameter of the stator winding. Fig. E4.7.5 depicts the stator winding housed in 72 slots. It is a full-pitch, double-layer winding. Using a copper-fill factor of $k_{cu} = 0.62$ one obtains for a stator slot cross section of $A_{st_slot} = 368 \text{ mm}^2$ and $(360/12) = 30$ turns per stator pole and per phase with the copper cross section of one stator slot $A_{st_slot_cu} = A_{st_slot} \cdot k_{cu} = 368 \cdot 0.62 \text{ mm}^2 = 30\pi D^2/4$ or a wire diameter of $D = 3.1 \text{ mm}$. For a rated current of $I_{rat} = 31 \text{ A}$ one obtains a current density of $J = 31/7.6 = 4.07 \text{ A/mm}^2$. This current density is acceptable for a ventilated machine.

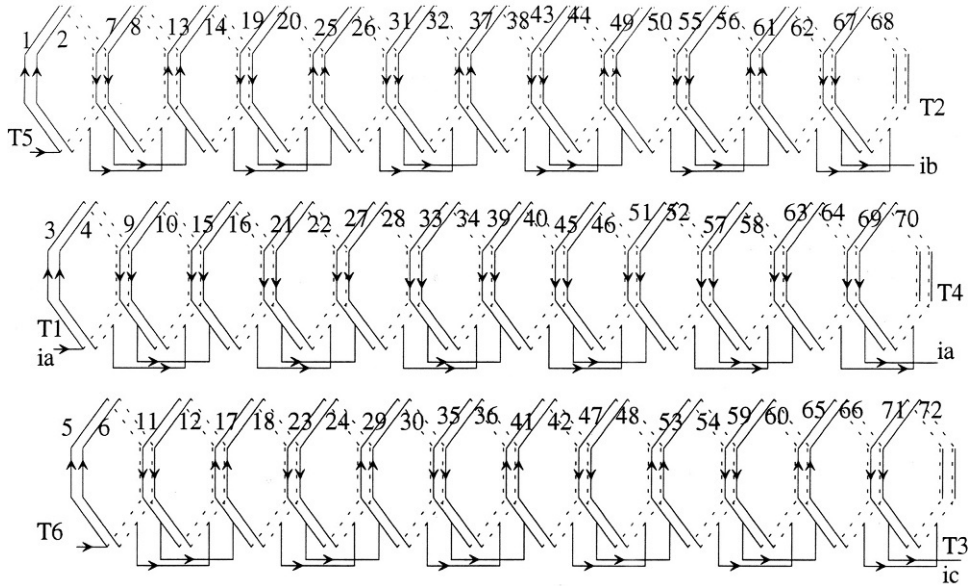


FIG. E4.7.5 Stator winding of permanent-magnet generator. Input terminals are T_1 , T_2 , and T_3 . In Y-configuration connect T_4 , T_5 , and T_6 .

4.2.10 Application Example 4.8: Design of a 10kW wind-power plant based on a synchronous machine

Design a wind-power plant (Fig. E4.8.1) feeding $P_{\text{out_transformer}} = 10\text{kW}$ into the distribution system at a line-to-line voltage of $V_{L-L \text{ system}} = 12.47\text{kV} = V_{L-L \text{ secondary}}$ of transformer. The wind-power plant consists of a $Y-\Delta$ three-phase (ideal) transformer connected between three-phase PWM inverter and power system, where the Y is the primary and Δ is the secondary of the ideal transformer (Fig. E4.8.2). The input voltage of the PWM inverter (see Chapter 1, Fig. E1.5.1) is $V_{dc} = 600\text{V}$, where the inverter delivers an output AC current I_{inverter} at about 18° lagging displacement power factor (consumer notation) $\cos \varphi \approx 0.95$ lagging to the primary line-neutral voltage of the $Y-\Delta$ transformer, and the inverter output line-to-line voltage is $V_{L-L \text{ inverter}} = 240\text{V} = V_{L-L \text{ primary}}$ of transformer.

The three-phase diode rectifier (see Chapter 1, Fig. E1.2.1) with one self-commuted PWM-operated switch (IGBT) is fed by a three-phase synchronous generator. The input line-to-line voltage of the three-phase diode rectifier is $V_{L-L \text{ rectifier}} = 480\text{V} = V_{L-L \text{ generator}}$. Design the mechanical gear between wind turbine and generator (with $p = 2$ poles at $n_s = 3600\text{rpm}$, utilization factor $C = 1.3\text{kWmin/m}^3$, $D_{\text{rotor}} = 0.2\text{m}$, the leakage reactance $X_{s \text{ leakage}} = 2\pi f L_{s \text{ leakage}}$ is 10% of the synchronous reactance $X_s = 1.5\text{pu}$, maximum flux density $B_{\text{max}} = 0.7\text{T}$, iron-stacking factor $k_{fe} = 0.95$, stator winding factor $k_s = 0.8$, rotor winding factor $k_r = 0.8$, and torque angle $\delta = 30^\circ$) so that a wind turbine can operate at $n_{\text{turbine}} = 30\text{rpm}$. Lastly, the wind turbine—using the Lanchester-Betz-Joukowski limit [45–48] for the maximum energy efficiency of a wind turbine as a guideline—is to be designed for the rated wind velocity of $v = 10\text{m/s}$ at an altitude of 1600m and a coefficient of performance (actual efficiency) $c_p = 0.3$. You may assume that all

components (transformer, inverter, rectifier, generator, mechanical gear) except the wind turbine have each an efficiency of $\eta = 95\%$.

- (a) Based on the given transformer output power of $P_{\text{out_transformer}} = 10 \text{ kW}$ compute the output powers of inverter, rectifier, generator, gear, and wind turbine.
- (b) For the circuit of Fig. E4.8.1 determine the transformation ratio (N_Y/N_Δ) of the $Y - \Delta$ transformer, where the Y is the primary (inverter side) and Δ the secondary (power system side).
- (c) What is the phase shift between $\tilde{V}_{L-L \text{ system}}$ and $\tilde{V}_{L-L \text{ inverter}}$?
- (d) What is the phase shift between $\tilde{I}_{L-\text{system}}$ and $\tilde{I}_{L-\text{inverter}}$?
- (e) Use sinusoidal PWM to determine for the circuit of Fig. E1.5.1 the inverter output current $\tilde{I}_{\text{inverter}}$ which lags $\tilde{V}_{L-N \text{ inverter}} = 138.57 \text{ V}$ about 18° at an inverter switching frequency of $f_{sw} = 7.2 \text{ kHz}$. You may assume $R_{\text{system}} = 50 \text{ m}\Omega$, $X_{\text{system}} = 0.1 \Omega$, $R_{\text{inverter}} = 10 \text{ m}\Omega$, and $X_{\text{inverter}} = 0.377 \Omega$ at $f = 60 \text{ Hz}$.
- (f) For the circuit of Fig. E1.2.1 and a duty cycle of $\delta = 50\%$, compute the input current of the rectifier $I_{\text{rectifier}}$.
- (g) Design the synchronous generator for the above given data provided it operates at unity displacement power factor.
- (h) Design the mechanical gear.
- (i) Determine the radius of the wind turbine blades for the given conditions.

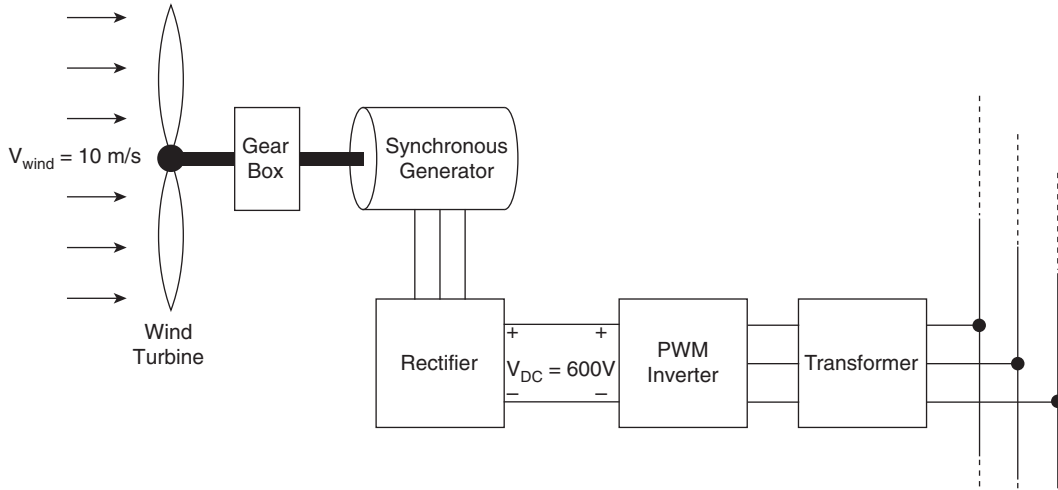


FIG. E4.8.1 Block diagram of wind-power plant.

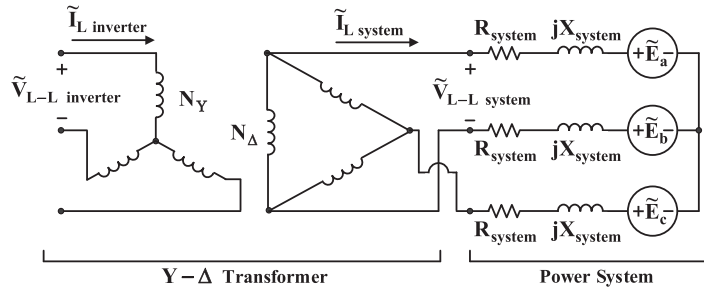


FIG. E4.8.2 Y-Δ three-phase transformer connected to power system.

Solution to Application Example 4.8 *Design of a 10kW wind-power plant based on a synchronous machine*

$$(a) \quad P_{\text{out_transformer}} = 10 \text{ kW}, \quad P_{\text{out_inverter}} = 10.53 \text{ kW}, \quad P_{\text{out_rectifier}} = 11.08 \text{ kW}, \\ P_{\text{out_generator}} = 11.67 \text{ kW}, \quad P_{\text{out_gear}} = 12.28 \text{ kW}, \quad P_{\text{out_wind turbine}} = 12.92 \text{ kW}. \quad (E4.8.1)$$

$$(b) \quad \left(\frac{N_Y}{N_\Delta} \right) = \frac{1}{89.9}. \quad (E4.8.2)$$

(c) Note $\tilde{V}_{L-L \text{ system}} = \tilde{V}_{L-L\Delta}$, and $\tilde{V}_{L-L \text{ inverter}} = \tilde{V}_{L-L Y}$; therefore,

$$\tilde{V}_{L-L\Delta} = \tilde{V}_{L-L Y} \angle 30^\circ, \quad (E4.8.3)$$

$$\tilde{I}_{L \text{ system}} = \tilde{I}_{L \text{ inverter}} \angle 30^\circ. \quad (E4.8.4)$$

- (d) One concludes that the line-to-line voltages of the secondary Δ as well as the line currents fed into the power system are shifted by 30 degrees.
- (e) The computer program for the inverter is given in [Chapter 1](#), resulting in an inverter output current of $I_{\text{out_inverter}} = 25.33 \text{ A}$, and an inverter input current of $I_{\text{in_inverter}} = 18.47 \text{ A}$. The inverter output phase voltage and output line current are shown in [Fig. E4.8.3](#).
- (f) Computer program for rectifier is given in [Chapter 1](#) resulting in a rectifier output current of $I_{\text{out_rectifier}} = 18.47 \text{ A}$, and a rectifier input current of $I_{\text{in_rectifier}} = 14.04 \text{ A}$. The output voltage of the rectifier is depicted in [Fig. E4.8.4](#).

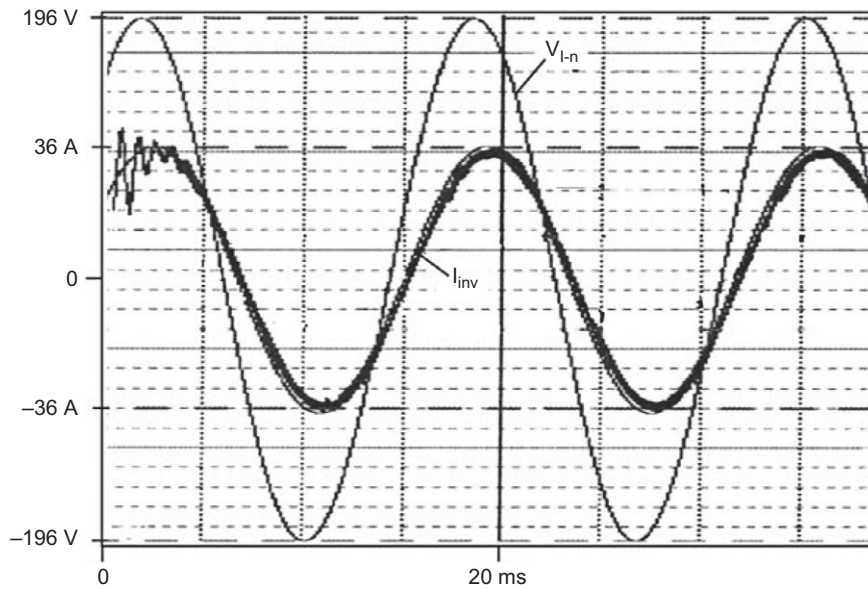


FIG. E4.8.3 Inverter output phase voltage and output line current.

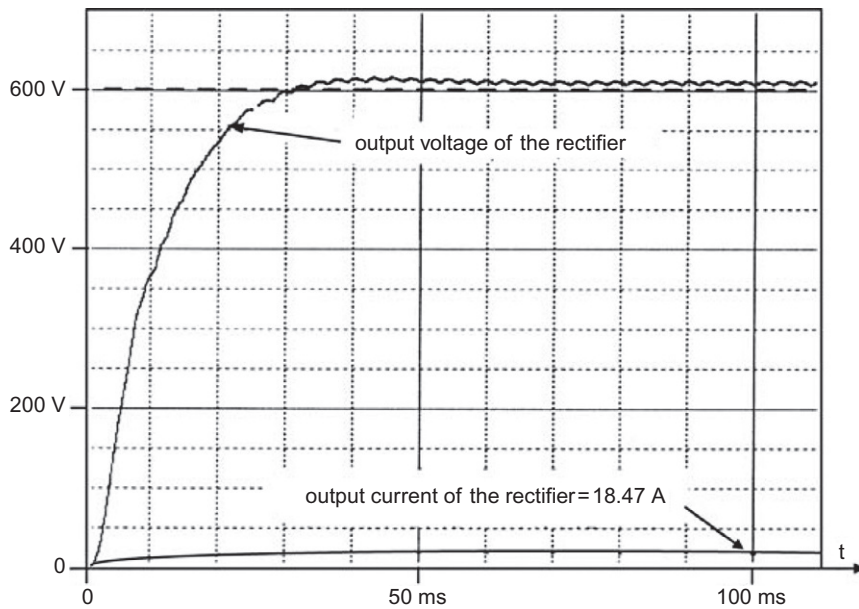


FIG. E4.8.4 Rectifier output voltage and output current.

(g) Design of synchronous generator:

- Stator frequency

$$f = \frac{n_s \cdot p}{120} = \frac{3600 \cdot 2}{120} = 60 \text{ Hz}, \quad (\text{E4.8.5})$$

- Phase voltage

$$V_{L-N} = \frac{480}{1.732} \text{ V} = 277.14 \text{ V}, \quad (\text{E4.8.6a})$$

- Base voltage

$$V_{\text{base}} = V_{L-N} = 277.14 \text{ V}, \quad (\text{E4.8.6b})$$

- Base (rated) current

$$I_{\text{base}} = \frac{P_{\text{out_generator}}}{3 \cdot V_{L-N}} = \frac{11670}{3 \cdot 277.14} = 14.04 \text{ A}, \quad (\text{E4.8.7})$$

- Base impedance

$$Z_{\text{base}} = \frac{V_{\text{base}}}{I_{\text{base}}} = \frac{277.14 \text{ V}}{14.04 \text{ A}} = 19.74 \Omega, \quad (\text{E4.8.8})$$

- Generator loss

$$P_{\text{loss}} = P_{\text{in_generator}} - P_{\text{out_generator}} = (12280 - 11670) \text{ W} = 610 \text{ W}, \quad (\text{E4.8.9})$$

- Stator resistance

$$R_a = \frac{P_{\text{loss}}}{3 \cdot I_{\text{base}}^2} = 1.03 \Omega, \quad (\text{E4.8.10})$$

- Ideal core length

$$l_i = \frac{P_{\text{out_generator}}}{D_{\text{rotor}}^2 \cdot C \cdot n_s} = \frac{11670}{(0.2^2)(1.3)(3600)} = 0.0623 \text{ m}, \quad (\text{E4.8.11})$$

- Actual iron core length (with interlamination insulation)

$$l_{\text{act}} = \frac{l_i}{k_{fe}} = \frac{0.0623}{0.95} \text{ m} = 0.0656 \text{ m}, \quad (\text{E4.8.12})$$

- Stator synchronous reactance

$$X_S = X_S [\text{pu}] \cdot Z_{\text{base}} = (1.5)(19.74) = 29.61 \Omega, \quad (\text{E4.8.13})$$

with $X_d \approx X_S = X_{aa} + X_{ab} + \frac{3}{2}X_{aa2}$ one gets approximately $X_S = 2 (2\pi f)L_{aa}$ or for the self-inductance L_{aa} of one phase

$$L_{aa} = \frac{X_S}{4\pi f} = 0.0393 \text{ H}, \quad (\text{E4.8.14})$$

and the leakage (ℓ) inductance of one stator (s) phase

$$L_{s\ell} = 0.1 \left(\frac{29.61}{2\pi 60} \right) = 0.0079 \text{ H}. \quad (\text{E4.8.15})$$

- The area per pole is

$$\text{Area}_p = \frac{2\pi \cdot D_{rotor}}{2} \cdot \frac{l_i}{2} = \frac{2\pi(0.2)(0.0623)}{4} = 0.0196 \text{ m}^2. \quad (\text{E4.8.16})$$

- The maximum flux linked with one pole is

$$\Phi_{s_max} = B_{max} \cdot \text{area}_p = 0.7(0.0196) = 0.0137 \text{ Wb}. \quad (\text{E4.8.17})$$

- The induced voltage in one phase of the stator winding becomes (generator operation)

$$E_{ph} = 1.05 \cdot V_{L-N} = 4.44 \cdot f \cdot N_s \cdot k_s \cdot \Phi_{s_max} = 291.0 \text{ V}, \quad (\text{E4.8.18})$$

or the number of stator turns per phase is

$$N_s = \frac{E_{ph}}{4.44 \cdot f \cdot k_s \cdot \Phi_{s_max}} = \frac{291}{4.44(60)(0.8)(0.0137)} = 100 \text{ turns}. \quad (\text{E4.8.19})$$

The one-sided air-gap length can be obtained from

$$L_{aa} = \frac{\lambda_{aa}}{i_a} = \frac{N_s \cdot \Phi_{s_max}}{i_{max}}, \quad (\text{E4.8.20})$$

where

$$\Phi_{s_max} = \frac{\mu_0 \cdot \frac{4}{\pi} \cdot k_s \cdot N_s \cdot i_{max} \cdot \text{area}_p}{p \cdot g}. \quad (\text{E4.8.21})$$

Therefore

$$L_{aa} = \frac{\mu_0 \cdot \frac{4}{\pi} \cdot k_s \cdot N_s^2 \cdot \text{area}_p}{p \cdot g}$$

or solved for the air-gap length

$$g = \frac{\mu_0 \cdot \frac{4}{\pi} \cdot k_s \cdot N_s^2 \cdot \text{area}_p}{p \cdot L_{aa}} = \frac{(4\pi \cdot 10^{-7}) \left(\frac{4}{\pi}\right) (0.8) (10000) (0.0196)}{2(0.0393)} \\ = 0.0032 \text{ m} = 3.2 \text{ mm.} \quad (\text{E4.8.22})$$

- The torque of the generator is

$$(-T) = \frac{P_{\text{out_generator}}}{\omega_s} = \frac{11670}{377} = 30.94 \text{ Nm.} \quad (\text{E4.8.23})$$

For a torque angle of $\delta (= 30^\circ)$ one gets with

$$T = \frac{p \cdot \pi \cdot D_{\text{rotor}} \cdot l_{\text{act}} \cdot B_{\text{max}} \cdot F_r}{4} \cdot \sin \delta, \quad (\text{E4.8.24})$$

or the rotor mmf

$$F_r = \frac{(-T) \cdot 4}{p \cdot \pi \cdot D_{\text{rotor}} \cdot l_{\text{act}} \cdot B_{\text{max}} \cdot \sin \delta} = \frac{(30.94)(4)}{(2)(\pi)(0.2)(0.0656)(0.7)(0.5)} = 4289.6 \text{ At.} \quad (\text{E4.8.25})$$

- The ampere turns for the rotor are $F_r = \frac{4}{\pi} \cdot k_r \cdot \frac{N_{r(\text{tot})}}{p} \cdot I_r$ or solved for the ampere turns

$$N_{r(\text{tot})} \cdot I_r = \frac{F_r \cdot p \cdot \pi}{4 \cdot k_r} = \frac{(4289.6)(2)(\pi)}{(4)(0.8)} = 8422.4 \text{ At.} \quad (\text{E4.8.26})$$

- Selecting 16 rotor slots with 20 turns each, one obtains the field (rotor) current:

$$I_r = 8422.4 \text{ Aturns} / (16 \cdot 20 \text{ turns}) = 26.3 \text{ A.} \quad (\text{E4.8.27})$$

(h) Gear ratio. The gear ratio is

$$\text{Gear ratio} = \frac{n_{\text{generator}}}{n_{\text{wind_turbine}}} = \frac{3600}{30} = 120. \quad (\text{E4.8.28})$$

- (i) Radius of (three) wind turbine blades. The limiting efficiency for wind turbines is according to Lanchester-Betz-Joukowsky [45–48] $\eta_{\text{Lanchester-Betz-Joukowsky}} = (16/27) = 0.59$. The wind turbine design depends on the density of the air and the ambient temperature. Table E4.8.1 provides the air density as a function of altitude.

TABLE E4.8.1 Air density as a function of altitude

Altitude (m)	−500	0	500	1000	1500	2000	2500	3000
Air (mass) density ρ (kg/m ³)	1.2854	1.2255	1.1677	1.112	1.0583	1.0067	0.957	0.9092
Altitude (m)	3500	4000	4500					
Air (mass) density ρ (kg/m ³)	0.8623	0.8191	0.7768					

The wind turbine has to provide a rated output power of $P_{\text{out_wind turbine}} = 12.92 \text{ kW}$ at a rated wind velocity of $v = 10 \text{ m/s}$. The efficiency (coefficient of performance) is $c_p = 0.3$, where c_p is the ratio between the power delivered by the rotor of the wind turbine to the power in the wind with velocity v striking the area A swept by the rotor.

According to Ref. [45] the output power of the wind turbine is

$$P_{\text{wind_turbine}} = \frac{1}{2} \cdot c_p \cdot v^3 \cdot A \cdot \rho. \quad (\text{E4.8.29})$$

The area swept by the rotor is

$$A = \frac{2 \cdot P_{\text{wind_turbine}}}{c_p \cdot v^3 \cdot \rho} = \frac{2(12920)}{0.3(1000)(1.05)} = 82 \text{ m}^2, \quad (\text{E4.8.30})$$

or the rotor blade radius is

$$R_{\text{blade}} = \sqrt{\frac{A}{\pi}} = \sqrt{\frac{82}{\pi}} = 5.1 \text{ m}. \quad (\text{E4.8.31})$$

The height of the tower can be assumed to be about 2 times the blade radius, that is, $H_{\text{tower}} = 10 \text{ m}$.

4.2.11 Synchronous machines supplying nonlinear loads

Frequently synchronous machines or permanent-magnet machines are used together with solid-state converters, that is, either rectifiers as a load [49–52] or inverters feeding the machine. The question arises how much current distortion can be permitted in order to prevent noise and vibrations as well as overheating? It is recommended to limit the total harmonic current distortion of the phase current to $THD_i \leq 5\%–20\%$ as specified by recommendation IEEE-519 (see Chapter 1). The 5% limit is for very large machines and the 20% limit is for small machines. The calculation of the synchronous, transient, and subtransient reactances based on numerical field calculations is addressed in Ref. [53]. Synchronous machines up to 10 MW are used in variable-speed drives for wind-power plants. Enercon [54] uses synchronous generators with a large pole number; this enables them to avoid any mechanical gear within the wind-power train. The AC output is rectified and an inverter supplies the wind power to the grid. Hydrogenerators are another example where a large number of poles are used.

4.2.12 Switched-reluctance machine

Switched-reluctance machines [55–58] have the advantage of simplicity: such machines consist of a salient pole (solid) rotor member without any winding and the stator member carries concentrated coils that are excited by a solid-state converter. The only disadvantages of such machines are the encoder required to sense the speed of the rotor and the acoustic noise emanating from the salient-pole rotor. The windage losses of such machines can be considerable. Fig. 4.19A–D illustrates how the field of a switched-reluctance machine changes as a function of the rotor position.

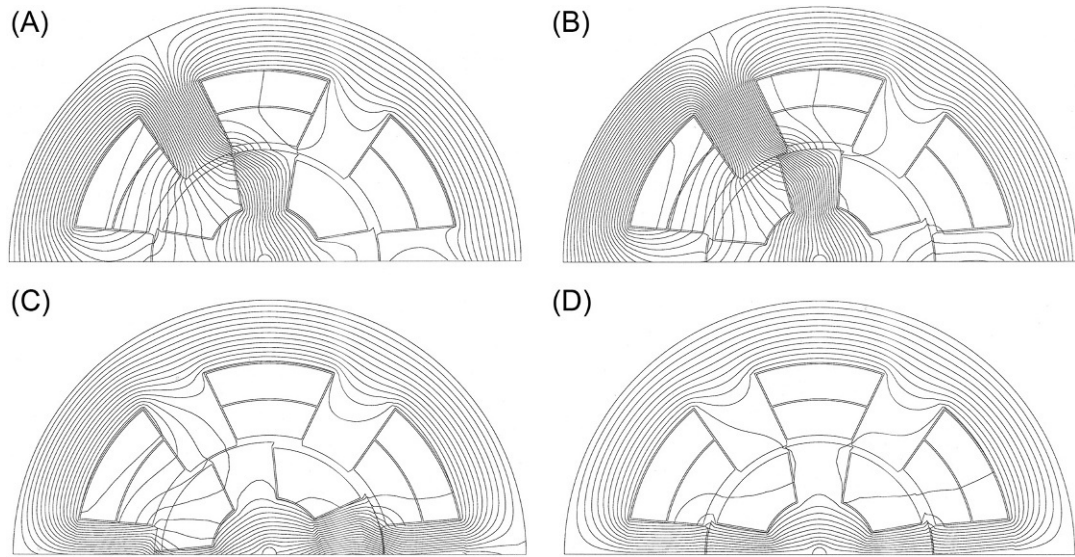


FIG. 4.19 Field of switched-reluctance machine for (A) rotor position #1 (0 mechanical degrees), (B) rotor position #2 (5 mechanical degrees), (C) rotor position #3 (15 mechanical degrees), and (D) rotor position #4 (30 mechanical degrees).

4.2.13 Some design guidelines for synchronous machines

In order for rotating machines to work properly and not to cause power quality problems, limits for maximum flux and current densities must be met so that neither excessive saturation nor heating occurs. These limits are somewhat different for induction (see Chapter 3) and synchronous machines.

4.2.13.1 Maximum flux densities

Table 4.1 lists recommended maximum flux densities within the stator and rotor of synchronous machines.

4.2.13.2 Recommended current densities

Table 4.2 lists recommended current densities within the stator and rotor windings of synchronous machines. These current densities depend on the cooling methods applied.

4.2.13.3 Relation between induced E_{phase} and terminal V_{phase} voltages

The relationship between induced voltage and terminal voltage is for motor operation approximately $E_{\text{phase}}/V_{\text{phase}} \approx 0.95$ and for generator operation $E_{\text{phase}}/V_{\text{phase}} \approx 1.05$.

4.2.13.4 Iron-core stacking factor and copper-fill factor

The iron-core stacking factor depends on the lamination thicknesses associated with lamination insulation. An approximate value for most commonly used designs is $k_{fe} \approx 0.95$.

The copper-fill factor depends on the winding cross section (e.g., round, square) and the wire diameter. An approximate value for most commonly used designs is $k_{cu} \approx 0.70$.

4.2.14 Winding forces during normal operation and faults

In power apparatus magnetic forces are often large enough to cause unwanted noise or disabling damage. For instance, in Ref. [59] the problem of stator bar vibrations causing mechanical wear in hydrogenerators is addressed. Useful methods for reducing the vibrations,

TABLE 4.1 Guidelines for maximum flux densities (measured in teslas) in synchronous machines

Stator back iron	Stator teeth, maximum value	Stator teeth, middle of tooth height	Solid rotor	Solid rotor teeth, near winding	Solid rotor teeth, not near winding	Solid rotor back iron, forged iron	Solid rotor back iron, cast iron
1–1.4	1.6–1.8	1.35–1.55	1.2–1.5	<2.4	1.4–1.6	1–1.4	0.7

TABLE 4.2 Guidelines for current densities (measured in A/mm²) in windings of synchronous machines

Without forced air cooling	With forced air cooling (e.g., ventilator)	Hydrogen or indirect water cooling	Direct water cooling
1–2	2–4	4–8	8–16

which are caused by magnetic forces, are suggested. Along with the suggestions a force calculation formula proposed in 1931 is given. The surface integral method recommended in this section is an improvement over such formulas since it uses magnetic field calculation, which accounts for magnetic saturation of the iron cores.

4.2.14.1 Theoretical basis

Several approaches may be taken to arrive at the expressions necessary for the surface integral force calculations. Using a stress of Maxwell and energy considerations, Stratton [60] formally derives this expression for the total force on a nonferromagnetic body:

$$\vec{F} = \int_{\text{surface}}^{S_1} \left[\mu \vec{H} (\vec{H} \cdot \vec{n}) - \frac{\mu}{2} H^2 \vec{n} \right] da. \quad (4.35)$$

In Eq. 4.35, S_1 is an arbitrary surface surrounding the body. Equivalent expressions are given by Carpenter [61]. He begins by assuming that “any distribution of poles or currents, or both, which, when put in place of a piece of magnetized iron, reproduces the magnetic-field condition at all points outside the iron, must experience the same total mechanical force as a part which it replaces.” One special distribution consists of poles and currents existing on a surface surrounding the body of interest. The force on the body is thus modeled by the force densities

$$F_t = \mu_0 H_n H_t, \quad (4.36a)$$

$$F_n = \frac{1}{2} \mu_0 (H_n^2 - H_t^2), \quad (4.36b)$$

in the tangential (t) and normal (n), respectively. Surface integrals of these densities then give the total force on the object.

A third treatment of the subject is made by Reichert [62]. He speaks of a quantity p , the surface stress. Integration of stress,

$$\vec{p} = \frac{1}{\mu_0} (\vec{n} \cdot \vec{B}) \vec{B} - \frac{1}{2\mu_0} B^2 \vec{n}, \quad (4.37)$$

is said to give the total force on the body. This force calculation is equivalent to Stratton's and Carpenter's. However, Reichert goes on to adapt the stress to numerical methods.

Required characteristics of the above integration surfaces, which are clarified by Reichert, turn out to limit the possible application of the method. The necessary characteristics are:

- Surface must be in air.
- An exception may be made to the above rule by creating an artificial air gap. This may be done if the artificial air gap does not cause a significant change in the magnetic field.
- Surface may be any that fully encloses the body and follows the above rules.

Especially note that only the total force or torque acting on the body is given by the integration. No information can be obtained about the actual distribution of the force within the body. Fig. 4.20 shows forces calculated with the above method.

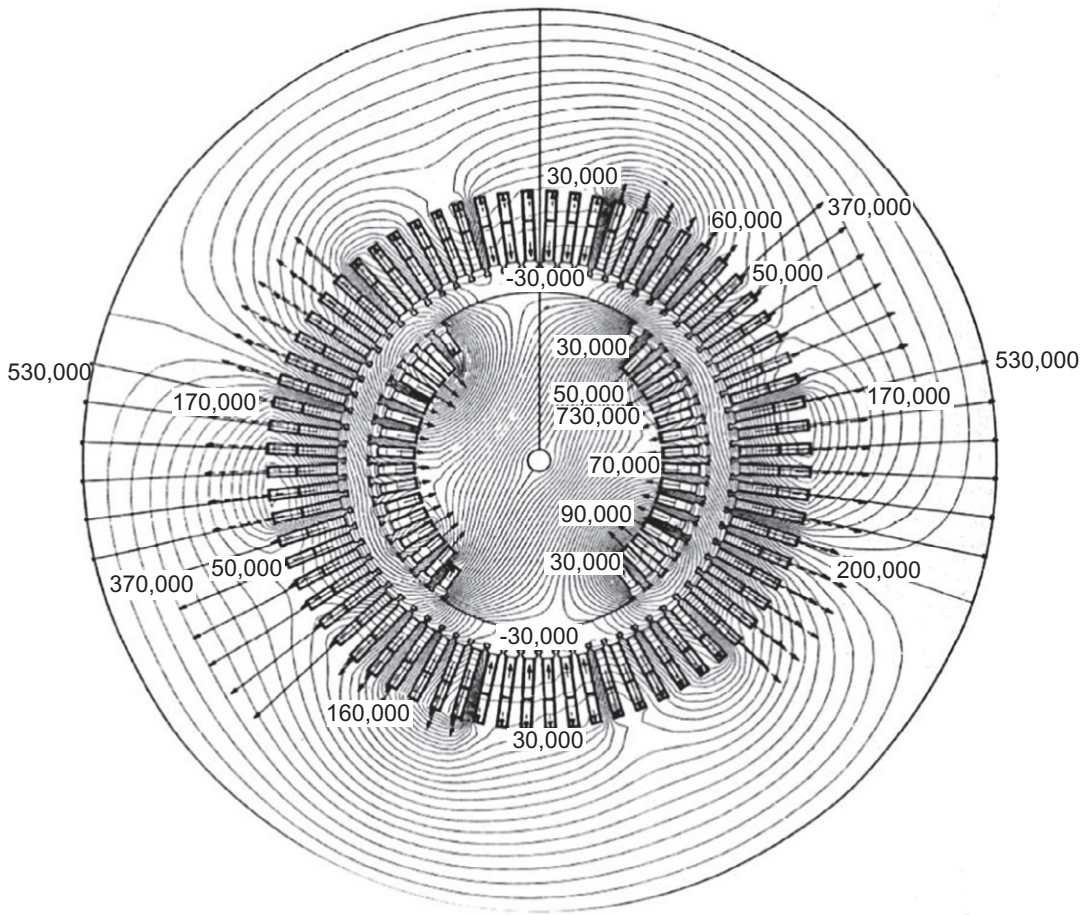


FIG. 4.20 Flux and force (measured in N/m) distribution in a two-pole turbogenerator during a sudden three-phase short circuit. The *arrows* indicate the direction and value (length of *arrow*) of the winding forces developed due to balanced subtransient, three-phase short circuit.

4.3 Harmonic modeling of a synchronous machine

Detailed nonlinear models of a synchronous machine in the frequency domain have been developed for harmonic analysis [11–13]. These models, however, cannot accurately describe the transient and steady-state unbalanced operation of a synchronous machine under nonsinusoidal voltage and current conditions. A machine model in phase (*abc*) coordinates can naturally reproduce these abnormal operation conditions because it is based on a realistic representation that can take into account the explicit time-varying nature of the stator and the mutual stator-rotor inductances, as well as the spatial (space) harmonic effects. Harmonic modeling of synchronous machines is complicated by the following factors:

- **Frequency-conversion process.** Synchronous machines may experience a negative-sequence current in their armature (stator), e.g., under unbalanced three-phase conditions.

This current may induce a second-order harmonic of this negative-sequence armature current in the rotor. The rotor harmonic in turn may induce a third-order harmonic of this negative-sequence current in the armature (mirror action), and so on. This frequency conversion causes the machine itself to internally generate harmonics, and therefore complicates the machine's reaction to external harmonics imposed by power sources.

- **Saturation effects.** Saturation affects the machine's operating point. Saturation effects interact with the frequency-conversion process and cause a cross-coupling between the d - and q -axes [23].
- **Machine load flow (or system) constraints.** Synchronous machine harmonic models are incorporated into harmonic load flow programs and must satisfy constraints imposed by the load flow program.
- **Inverter-fed or rectifier-loaded machines.** Examples are drives employed by the French railroad system, hybrid automobile drives that predominantly are based on brushless DC machines [25,26], wind-power applications [54], and rotating rectifiers for synchronous generators [52].

In one of the first models in the phase (abc) domain, the analysis of Ref. [14] discusses the advantages of this synchronous machine representation in abc coordinates with respect to the models based on $dq0$ and $\alpha\beta0$ coordinates. A model using abc coordinates is employed [15] for the dynamic analysis of a three-phase synchronous generator connected to a static converter for high-voltage DC (HVDC) transmission, where harmonic terms up to the fourth order are introduced in the stator-inductance matrix. In more recent contributions [16,17], phase-domain models of the synchronous machine are employed and nonlinear saturation effects are incorporated.

4.3.1 Model of a synchronous machine as applied to harmonic power flow

A well-known harmonic model of a synchronous machine is based on the negative-, positive-, and zero-sequence reactances [63–65].

$$X_1(h) = jhX_1, \quad X_2(h) = jhX_2, \quad X_0(h) = jhX_0, \quad (4.38)$$

where h is the order of harmonics and X_1 , X_2 , X_0 are positive-, negative-, and zero-sequence reactances of the machine at fundamental frequency, respectively.

Losses may be included by adding a resistor, as shown in Fig. 4.21. This model of a synchronous machine is used in harmonic (balanced) power flow analysis.

4.3.1.1 Definition of positive-, negative-, and zero-sequence impedances/reactances

Symmetrical components [10] rely on positive-, negative- and zero-sequence impedances. Fig. 4.22 gives a summary for the definition of these components [65]. Fig. 4.22A represents

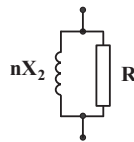


FIG. 4.21 Harmonic equivalent circuit of synchronous machine based on negative-sequence impedance.

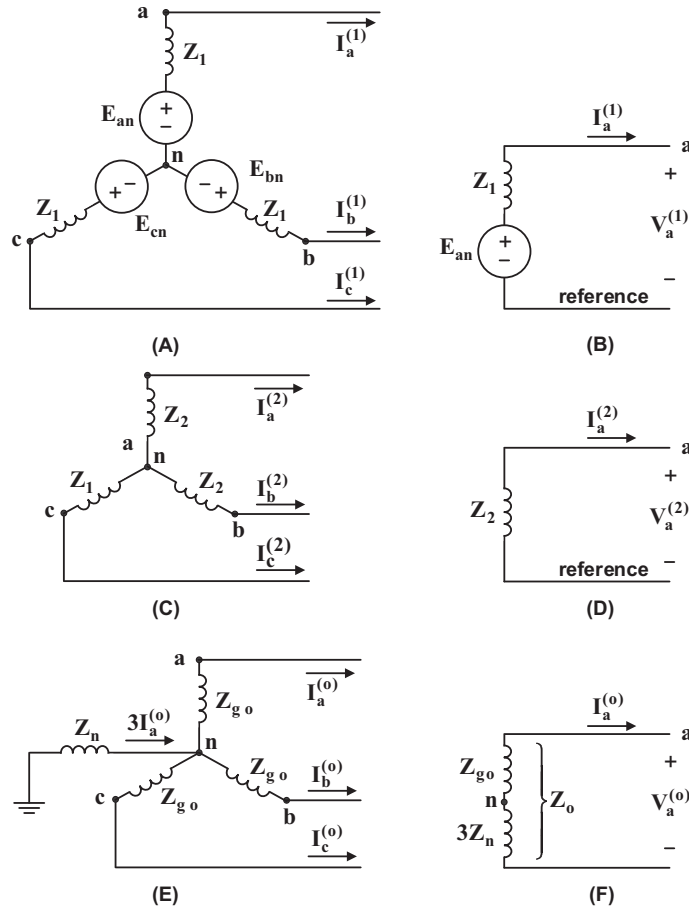


FIG. 4.22 Definition of symmetrical components: (A) positive-sequence voltages, currents, and impedances; (B) per-phase positive-sequence circuit; (C) negative-sequence voltages, currents, and impedances; (D) per-phase negative-sequence circuit; (E) zero-sequence voltages, currents, and impedances; (F) per-phase zero-sequence circuit.

the three-phase circuit and Fig. 4.22B shows the per-phase equivalent circuit for the positive sequence. Fig. 4.22C and D detail the circuits for the negative components, and Fig. 4.22E and F represent the circuits for the zero-sequence components.

4.3.1.2 Relations between positive-, negative-, and zero-sequence reactances and the synchronous, transient, and subtransient reactances

The following relations exist between sequence, transient, and subtransient reactances:

- The positive-sequence reactance X_1 is identical with the synchronous reactance X_s , which is $X_d = X_q$ for an (ideal) round-rotor turbogenerator.
- The negative-sequence reactance X_2 is identical with the subtransient reactance X_d'' .

- The zero-sequence reactance X_0 depends on the stator winding pitch and it varies from 0.1 to 0.7 of X_d'' .

Therefore,

$$\begin{cases} X_1 = X_s (= X_d = X_q \text{ for an ideal round-rotor turbogenerator}) \\ X_2 = X_d'' \\ X_0 = 0.1X_d'' \text{ to } 0.7X_d'' \end{cases} \quad (4.39)$$

4.3.2 Synchronous machine harmonic model based on transient inductances

The simple model of Fig. 4.21 is inappropriate for harmonic modeling of a synchronous machine when detailed information (e.g., harmonic torque) must be extracted. To improve this model three cases are considered, where the synchronous machine is fed by:

- harmonic currents,
- harmonic voltages, and
- combination of current and voltage harmonics (as expected in actual power systems).

Current-source (containing harmonics) fed synchronous machine

The stator voltages that result when balanced harmonic currents of order h are applied to a three-phase synchronous machine are determined. The synchronous machine has a field winding in the d -axis residing on the round rotor and no subtransient properties. In complex exponential notation, the applied currents are

$$\begin{cases} i_a = i_h \exp j[h\omega t + \angle i_h] \\ i_b = i_h \exp j[h\omega t + \angle i_h \mp 2\pi/3], \\ i_c = i_h \exp j[h\omega t + \angle i_h \pm 2\pi/3] \end{cases} \quad (4.40)$$

where the upper signs in Eq. (4.40) apply to the positive-phase sequence. Expressions for voltage, current, and flux may be obtained by taking the real part of each relevant complex equation. The a -phase stator voltage is according to Ref. [63].

$$v_a = i_h j h \omega \left(\frac{L_d' + L_q'}{2} \right) \exp j[h\omega t + \angle i_h] + i_h \left(\frac{L_d' - L_q'}{2} \right) j[(h \mp 2)\omega \exp j(h \mp 2)\omega t + \angle i_h \mp 2\alpha]. \quad (4.41)$$

Using a similar analysis the b -phase voltage is

$$\begin{aligned} v_b = i_h j h \omega \left(\frac{L_d' + L_q'}{2} \right) \exp j[h\omega t \mp 2\pi/3 + \angle i_h] \\ + i_h j (h \mp 2)\omega \left(\frac{L_d' - L_q'}{2} \right) \exp j[(h \mp 2)\omega t \mp 2\alpha \pm 2\pi/3 + \angle i_h]. \end{aligned} \quad (4.42)$$

Comparing Eqs. (4.40), (4.41), (4.42), it can be noted that the additional harmonic voltage term has the opposite phase sequence than that of the applied current. For example, if the applied current of order $h = 7$ has a positive-phase sequence, then the additional harmonic

voltage component has the order 5 with a negative-phase sequence. This is the usual situation for a balanced system. If, however, the applied current of order $h = 7$ has negative-phase sequence, then the additional harmonic voltage component has the order 9 with a positive-phase sequence, that is, not a zero-sequence as is commonly expected. Consequently, the phase voltage set will not be balanced. The analysis is also valid for the application of a negative-sequence current of fundamental frequency; in this case the additional component has the harmonic order 3 and has positive-phase sequence [66].

Voltage-source (containing harmonics) fed synchronous machine

If a balanced set of harmonic voltages is applied to a synchronous machine, an additional harmonic current with harmonic orders $(h \mp 2)$ —based on the results of the prior section—can be expected. The current solution is

$$\begin{cases} i_a = i_h \exp j[h\omega t + \angle i_h] + \bar{i}_h \exp j[(h \mp 2)\omega t + \angle \bar{i}_h] \\ i_b = i_h \exp j[h\omega t + \angle i_h \mp 2\pi/3] + \bar{i}_h \exp j[(h \mp 2)\omega t + \angle \bar{i}_h \pm 2\pi/3] \\ i_c = i_h \exp j[h\omega t + \angle i_h \pm 2\pi/3] + \bar{i}_h \exp j[(h \mp 2)\omega t + \angle \bar{i}_h \pm 2\pi/3] \end{cases} \quad (4.43)$$

The quantities with a bar ($\bar{}$) are the current components with the frequency $(h \mp 2)\omega$. The phase sequence of these components is the opposite of that of the applied voltage with frequency $h\omega$. Using the results of the prior section, the a -phase voltage is

$$\begin{aligned} v_a = i_h j h \omega \left(\frac{L'_d + L'_q}{2} \right) \exp j[h\omega t + \angle i_h] + i_h j (h \mp 2) \omega \left(\frac{L'_d - L'_q}{2} \right) \exp j[(h \mp 2)\omega t \mp 2\alpha + \angle i_h] \\ + \bar{i}_h j (h \mp 2) \omega \left(\frac{L'_d + L'_q}{2} \right) \exp j[(h \mp 2)\omega t + \angle \bar{i}_h] + \bar{i}_h j h \omega \left(\frac{L'_d - L'_q}{2} \right) \exp j[h\omega t \mp 2\alpha - \angle \bar{i}_h] \end{aligned} \quad (4.44)$$

for an applied voltage

$$v_a = v_h \exp j h \omega t. \quad (4.45)$$

Comparing Eqs. (4.44), (4.45) results in

$$v_h = i_h j h \omega \left(\frac{L'_d + L'_q}{2} \right) + \bar{i}_h j h \omega \left(\frac{L'_d - L'_q}{2} \right) \angle i_h = -\pi/2, \quad (4.46)$$

$$0 = i_h (h \mp 2) \omega \left(\frac{L'_d - L'_q}{2} \right) + \bar{i}_h (h \mp 2) \omega \left(\frac{L'_d + L'_q}{2} \right) \angle \bar{i}_h = \mp 2\alpha + \angle i_h, \quad (4.47)$$

Eqs. (4.46), (4.47) may be rearranged to give

$$v_h = j h \omega i_h \left(\frac{2L'_d L'_q}{L'_d + L'_q} \right). \quad (4.48)$$

Comparing Eqs. (4.42), (4.48), one notes that the effective inductance at the applied frequency is different for the voltage- and current-source-fed machines.

If harmonic voltages are applied at both frequencies $h\omega$ and $(h \mp 2)\omega$, then Eqs. (4.46), (4.47) can be modified by the inclusion of $\bar{v}_h$. The currents at both frequencies will be affected.

Synchronous machines fed by a combination of harmonic voltage and current sources

When a synchronous machine is subjected to a harmonic voltage disturbance at frequency $h\omega$, harmonic-current components are drawn at $h\omega$ and at the associated frequency $(h \mp 2)\omega$. The upper sign applies to the positive- and the lower sign to the negative-phase sequence. Current flow at the associated frequency occurs because the machine is a time-varying electrical system. In a similar manner, a synchronous machine fed by harmonic currents at frequency $h\omega$ develops a voltage across its terminal at both the applied and the associated frequency $(h \mp 2)\omega$. Consequently the machine cannot be modeled by impedances defined by a single harmonic frequency [63].

In the general case, a machine will be subjected to applied voltages v_h and $\bar{v}_h$ via system impedances z_h and $\bar{z}_h$ as shown in Fig. 4.23.

Now a linearized Thévenin model can be employed for the system (left-hand side of Fig. 4.23). The applied harmonic voltages v_h and $\bar{v}_h$ are assumed to have opposite phase sequences: one is of positive and the other of negative sequence. This is the condition that would apply if the distorting load responsible for the harmonic disturbance drew balanced currents. Consequently, a single-phase model may be used. Voltage equations for the general case are obtained by applying a voltage mesh equation at both frequencies $h\omega$ and $(h \mp 2)\omega$. The voltage components applying across the machine are those given by Eq. (4.44) in response to the currents given by Eq. (4.43). Voltage equations suggest the equivalent circuit shown in Fig. 4.24. The interaction between the two sides of the circuit is represented by a mutual inductance, which is a simplification. This mutual inductance is nonreciprocal, and the

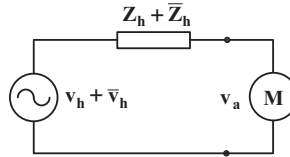


FIG. 4.23 System in general case: balanced representation.

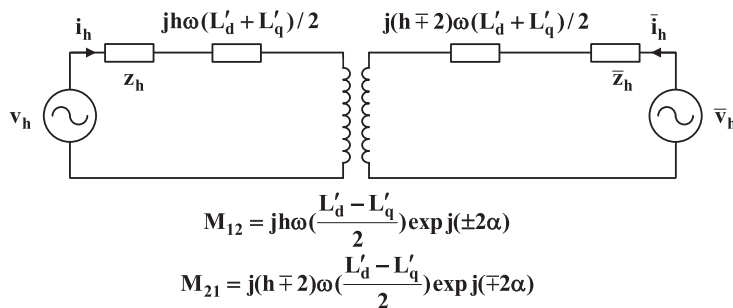


FIG. 4.24 Harmonic equivalent circuit of synchronous machine based on transient inductances [63].

frequency difference between the two sides is ignored. This model may be used to calculate harmonic current flow.

The results presented here show that a synchronous machine cannot be modeled by one impedance (Fig. 4.21) if voltage sources have voltage components with several frequencies. In the case where one harmonic voltage source is large and the other small then $v_h \approx 0$, and the apparent machine impedance to current flow is linear and time-varying:

$$Z_h = \frac{j h \omega (L'_d + L'_q)}{2} + \frac{(h \mp 2) h \omega^2 \left(\frac{L'_d - L'_q}{2} \right)^2}{\xi_h}. \quad (4.49)$$

If several harmonic frequency sources exist, the total current flow can be obtained by the principle of superposition when applied to each harmonic h and its associated harmonics $(h \mp 2)\omega$. Because of the variation of the flux-penetration depth with frequency the governing machine impedances will be a function of frequency.

4.3.2.1 Application Example 4.9: Measured current spectrum of a synchronous machine

To validate the preceding theory, a series of measurements is recorded for a 5 kVA, 415 V, four-pole synchronous machine [63]. A 350 Hz ($h = 7$) three-phase voltage is applied to the machine and the current spectrum is measured by a spectrum analyzer for both negative- and positive-phase sequence sources (Table E4.9.1). These results are in agreement with the above-outlined theory; that is, for $h = 7$ (positive-sequence voltage excitation) a large current signal is generated at the 5th current harmonic, and for the positive-sequence voltage excitation for $h = 7$ a strong signal occurs at the 9th current harmonic with negative sequence.

In addition, the spectrum shows a frequency range that is associated with the nonsinusoidal inductance variation. The flux waveforms arising from induced damper currents exhibit significant harmonic content, and the frequency range of the spectrum is broader than one would expect based on the nonsinusoidal inductance variation measured under static conditions.

TABLE E4.9.1 Measured current spectrum of a 5 kVA, four-pole synchronous machine excited by positive- and negative-sequence 350 Hz voltages

Positive-phase sequence			Negative-phase sequence		
Frequency (Hz)	Harmonic order	RMS current (mA)	Frequency (Hz)	Harmonic order	RMS current (mA)
50	1	19.7	50	1	26.3
250	5	143.1	250	5	6.6
350	7	324.0	350	7	329.2
450	9	0.8	450	9	141.4
550	11	8.2	550	11	0.1

4.3.3 Synchronous machine model with harmonic parameters

A synchronous machine model based on modified $dq0$ equations—frequently used in harmonic load flow studies—is presented next [64]. From the physical interpretation of this model one notices that this machine equivalent circuit is asymmetric. This model is then incorporated with the extended “decoupling-compensation” network used in harmonic power flow analysis, and it is now extended to problems including harmonics caused by the asymmetry of transmission lines, asymmetry of loads, and nonlinear elements like static VAR compensators (SVCs). This synchronous machine model has the form

$$\begin{cases} I_1(h) = y_{11}(h-1)V_1(h) + \Delta I_1(h) \text{ where } \Delta I_1(h) = y_{12}(h-1)V_2(h-2) \\ I_2(h) = y_{22}(h+1)V_2(h) + \Delta I_2(h) \text{ where } \Delta I_2(h) = y_{21}(h+1)V_1(h+2) \\ I_0(h) = y_{00}(h)V_0(h) \end{cases} \quad (4.50)$$

In these equations, the subscripts 1, 2, 0 identify positive-, negative-, and zero-sequence quantities, respectively; $y_{11}(h)$, $y_{12}(h)$, $y_{21}(h)$, $y_{22}(h)$, and $y_{00}(h)$ are harmonic parameters of the machine obtained from the $dq0$ -equation model. In accordance with Eq. (4.50), the equivalent circuits of the machine can be assembled based on the different sequence networks as depicted in Fig. 4.25. This is a decoupled harmonic model since $\Delta I_1(h)$ and $\Delta I_2(h)$ are decoupled-harmonic current sources. Equivalent circuits of different sequences and different harmonic orders are decoupled and can be incorporated separately with the corresponding power network models.

The physical interpretation of this harmonic-decoupled model is that:

- The h th order positive-sequence current flowing in the machine armature is not entirely caused by the h th order positive-sequence voltage, but will generate in addition a $(h-2)$ th order negative-sequence voltage at the machine terminal.
- The h th order negative-sequence current flowing in the machine armature is not only caused by the same order negative-sequence voltage, but will also generate a $(h+2)$ th order positive-sequence voltage at the machine terminal.
- The zero-sequence harmonic currents are relevant to the same order zero-sequence harmonic voltages only.

Such a phenomenon, stemming from the asymmetry of the machine rotor, is depicted in Fig. 4.26.

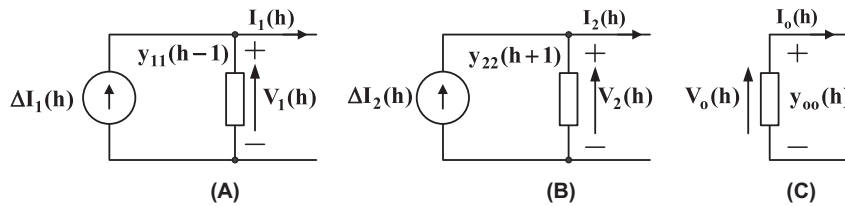


FIG. 4.25 Synchronous machine equivalent circuits with harmonic parameters; (A) positive sequence, (B) negative sequence, (C) zero sequence.

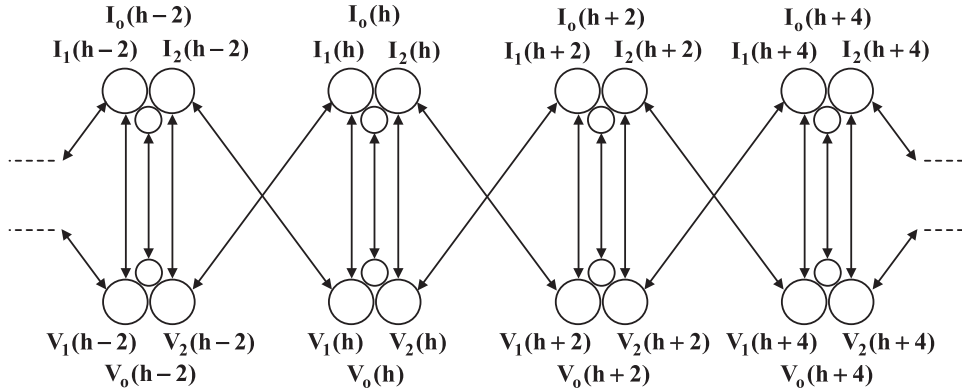


FIG. 4.26 Derivation of harmonic currents and voltages of synchronous machine in a symmetrical reference frame.

The reason why there is always a difference of the order between the positive- and negative-sequence harmonic current components and their corresponding admittances in Eq. (4.50) is because these admittances are transformed by the $dq0$ equations. The reference frame of the $dq0$ components is attached to the rotor, while the reference frame of symmetrical components remains stationary in space.

This mathematical model of a synchronous machine (Fig. 4.25) can be used in harmonic load flow studies to investigate the impact of a machine's asymmetry and nonlinearity. Moreover, decoupled equivalent circuits of different sequences and harmonics can be incorporated separately with the corresponding power network models.

4.3.3.1 Application Example 4.10: Harmonic modeling of a 24-bus power system with asymmetry in transmission lines

The 24-bus sample system shown in Fig. E4.10.1 is used in this example [64]. Parameters of the system and generators are provided in Refs. [64,67]. Simulation results will be compared for the simple harmonic model (Fig. 4.21, Eq. 4.38) and the model with harmonic parameters (Fig. 4.24, Eq. 4.50).

Two cases are investigated, that is, harmonics caused by the asymmetry of transmission lines (or loads) and by nonlinear SVC devices (see Application Example 4.11). Harmonic admittances of synchronous machines are computed and compared in Ref. [64]. They remain unchanged with the change of external network conditions. The imaginary components of admittances for the two models are very similar. This may be one of the reasons why the simple model is frequently employed.

All transmission lines (although transposed) are asymmetric, whereas all loads are symmetric. Decoupled positive- and negative-harmonic current sources of the equivalent circuit ($\Delta I_1(h)$ and $\Delta I_2(h)$ in Fig. 4.24 and Eq. 4.50) are computed and listed in Ref. [64] for generators 1, 6, and 8. The harmonic frequency voltage components at buses 1, 12, and 16 are also given in the same reference.

4.3.3.2 Application Example 4.11: Harmonic modeling of a 24-bus power system with a nonlinear static VAR compensator (SVC)

All transmission lines and loads in Fig. E4.10.1 are assumed to be symmetric. A static VAR compensator (SVC) device is connected at the additional bus 25 via a step-up transformer placed at bus 14. The thyristor-controlled reactor (TCR) part of this SVC is a six-pulse thyristor controlled Δ -connected reactor [64] that injects odd harmonics into the system (Table E4.11.1). Harmonic voltages at buses 1, 12, and 14 are given in Table E4.11.2. For comparison, the negative-sequence fifth harmonic voltages (computed with models of Figs. 4.21 and 4.25) are listed in Table E4.11.3. It can be seen that harmonic voltages at those buses near the harmonic source (bus 25) are higher than those of the others.

TABLE E4.11.1 Harmonic current injections of SVC

h	Positive-sequence voltage magnitude (pu)	Negative-sequence voltage magnitude (pu)
5	0	$0.9440 \cdot 10^{-2}$
7	$0.7897 \cdot 10^{-2}$	0
9	0	0
11	0	$0.4288 \cdot 10^{-2}$
13	$0.2581 \cdot 10^{-2}$	0

TABLE E4.11.2 Simulation results for the 24-bus system (Fig E4.10.1): harmonic voltage magnitudes at some buses.

h	Positive-sequence voltage magnitude (pu)			Negative-sequence voltage magnitude (pu)		
	Bus 1	Bus 12	Bus 14	Bus 1	Bus 12	Bus 14
5	0	0	0	$0.151 \cdot 10^{-3}$	$0.238 \cdot 10^{-3}$	$0.302 \cdot 10^{-3}$
7	$0.156 \cdot 10^{-3}$	$0.312 \cdot 10^{-3}$	$0.317 \cdot 10^{-3}$	0	0	0
9	0	0	0	0	0	0
11	0	0	0	$0.194 \cdot 10^{-3}$	$0.216 \cdot 10^{-3}$	$0.334 \cdot 10^{-3}$
13	$0.101 \cdot 10^{-3}$	$0.330 \cdot 10^{-4}$	$0.136 \cdot 10^{-3}$	0	0	0

TABLE E4.11.3 Simulation results for the 24-bus system (Fig E4.10.1): negative-sequence fifth harmonic voltages at different buses.

Negative-sequence 5th harmonic voltage magnitude (pu)		
Bus number	Simple model (Fig. 4.21)	New model (Fig. 4.25)
1	$0.161 \cdot 10^{-3}$	$0.151 \cdot 10^{-3}$
2	$0.161 \cdot 10^{-3}$	$0.151 \cdot 10^{-3}$
3	$0.161 \cdot 10^{-3}$	$0.151 \cdot 10^{-3}$
4	$0.184 \cdot 10^{-3}$	$0.184 \cdot 10^{-3}$
5	$0.184 \cdot 10^{-3}$	$0.184 \cdot 10^{-3}$
6	$0.185 \cdot 10^{-3}$	$0.179 \cdot 10^{-3}$
7	$0.185 \cdot 10^{-3}$	$0.179 \cdot 10^{-3}$
8	$0.141 \cdot 10^{-3}$	$0.147 \cdot 10^{-3}$
9	$0.259 \cdot 10^{-3}$	$0.257 \cdot 10^{-3}$
10	$0.269 \cdot 10^{-3}$	$0.268 \cdot 10^{-3}$
11	$0.281 \cdot 10^{-3}$	$0.279 \cdot 10^{-3}$
12	$0.229 \cdot 10^{-3}$	$0.238 \cdot 10^{-3}$
13	$0.268 \cdot 10^{-3}$	$0.268 \cdot 10^{-3}$
14	$0.302 \cdot 10^{-3}$	$0.302 \cdot 10^{-3}$
15	$0.247 \cdot 10^{-3}$	$0.246 \cdot 10^{-3}$
16	$0.292 \cdot 10^{-3}$	$0.296 \cdot 10^{-3}$
17	$0.279 \cdot 10^{-3}$	$0.279 \cdot 10^{-3}$
18	$0.265 \cdot 10^{-3}$	$0.269 \cdot 10^{-3}$
19	$0.276 \cdot 10^{-3}$	$0.276 \cdot 10^{-3}$
20	$0.224 \cdot 10^{-3}$	$0.224 \cdot 10^{-3}$
21	$0.200 \cdot 10^{-3}$	$0.208 \cdot 10^{-3}$
22	$0.237 \cdot 10^{-3}$	$0.246 \cdot 10^{-3}$
23	$0.233 \cdot 10^{-3}$	$0.241 \cdot 10^{-3}$
24	$0.194 \cdot 10^{-3}$	$0.201 \cdot 10^{-3}$
25	$0.119 \cdot 10^{-3}$	$0.119 \cdot 10^{-3}$

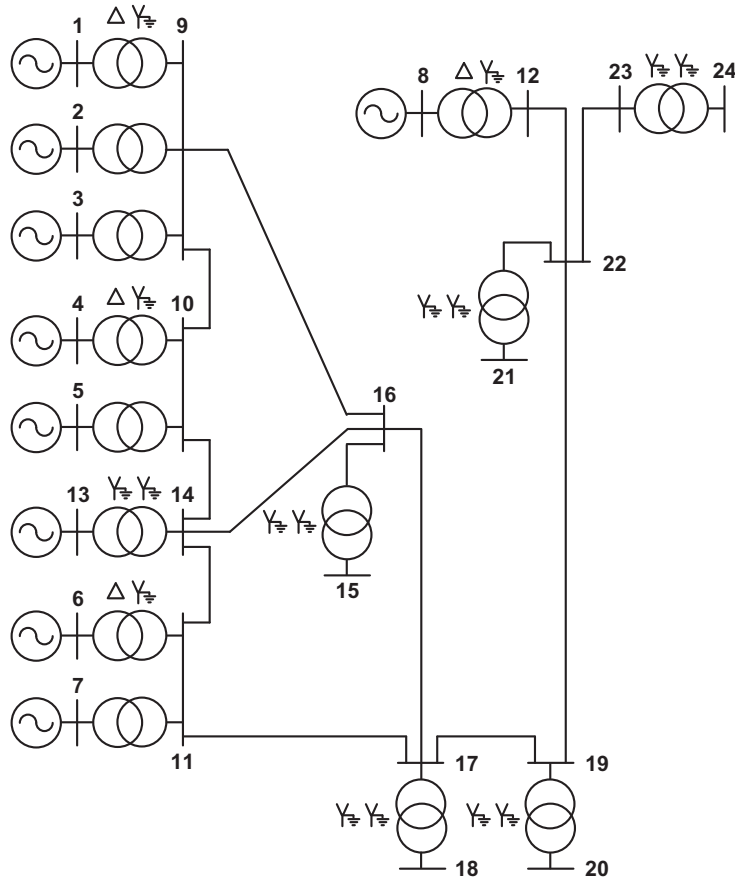


FIG. E4.10.1 Twenty-four-bus sample system used for harmonic simulation of synchronous machine.

4.3.4 Synchronous machine harmonic model with imbalance and saturation effects

This section introduces a synchronous machine harmonic model [12] that incorporates both frequency conversions and saturation effects under various machine load-flow constraints (e.g., unbalanced operation). The model resides in the frequency domain and can easily be incorporated into harmonic load-flow programs.

To model these effects and also to maintain an equivalent-circuit representation, a three-phase harmonic Norton equivalent circuit (Fig. 4.27) is developed with the following equations [12]:

$$\begin{aligned} [I_{km}(h)] &= [Y(h)][V_h(h)] - [V_m(h)] - [E(h)] + [I_{nl}(h)], \\ [E(h)] &= 0, \quad \text{if } h \neq 1 \end{aligned} \quad (4.51a)$$

$$\begin{cases} [I_{km}] = [I_{km-a} \ I_{km-b} \ I_{km-c}]^T \\ [V_k] = [V_{k-a} \ V_{k-b} \ V_{k-c}]^T \\ [V_m] = [V_{m-a} \ V_{m-b} \ V_{m-c}]^T \\ [E] = [E_p \ a^2 E_p \ a E_p]^T \\ [I_{nl}] = [I_{nl-a} \ I_{nl-b} \ I_{nl-c}]^T \\ a = \exp(-j2\pi/3) \end{cases}, \quad (4.51b)$$

where h is the harmonic order. In the model of Fig. 4.27, nonlinear effects are represented by a harmonic current source ($[I_{nl}(h)]$) that includes the harmonic effects stemming from frequency conversion ($[I_f(h)]$) and those from saturation ($[I_s(h)]$):

$$[I_{nl}(h)] = [I_f(h)] + [I_s(h)]. \quad (4.52)$$

This harmonic model reduces to the conventional, balanced three-phase equivalent circuit of a synchronous machine if $[I_{nl}(h)]$ is zero and $[Y(h)]$ is computed according to Ref. [68]. Since $[I_{nl}(h)]$ is a known current source (determined from the machine load-flow conditions), the model is linear and decoupled from a harmonic point of view. Therefore, it can be solved with network equations in a way similar to the traditional machine model.

To include the usual load-flow conditions, the following constraints are specified at the fundamental frequency ($h=1$):

- **Slack machine:** The constraints are the magnitude and the phase angle of positive-sequence voltage at the machine terminals:

$$\begin{cases} [T]([V_k] - [V_m]) = V_{\text{specified}} \\ [T] = (1/3)[1 \ a \ a^2] \end{cases}. \quad (4.53)$$

- **PV machine:** The constraints are the three-phase real power output and the magnitude of the positive-sequence voltage at machine terminals, where superscript H denotes conjugate transpose:

$$\text{Real}\left\{-[I_{km}]^H([V_k] - [V_m])\right\} = P_{\text{specified}}, \quad (4.54)$$

$$|[T]([V_k] - [V_m])| = V_{\text{specified}}. \quad (4.55)$$

- **PQ machine:** The constraints are the three-phase real and the three-phase reactive power outputs:

$$-[I_{km}]^H([V_k] - [V_m]) = (P + jQ)_{\text{specified}}. \quad (4.56)$$

These constraint equations and the machine structure equation (Eq. 4.51a) jointly define a three-phase machine model with nonlinear effects. Combining these equations with other network equations leads to multiphase load flow equations for the entire system [68]. The system is then solved by the Newton-Raphson method for each frequency. Detailed analysis and demonstration of Newton-Raphson based harmonic load flow is presented in Chapter 8.

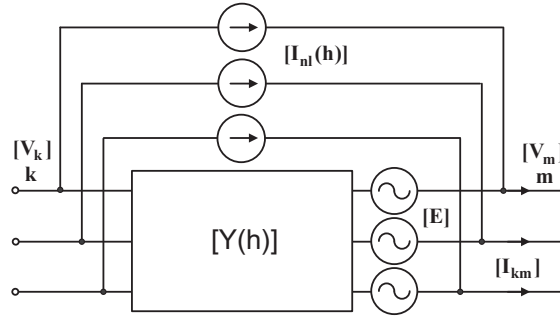


FIG. 4.27 Synchronous machine harmonic model with imbalance and saturation effects [12].

In the model of Fig. 4.27, $[I_{nl}(h)]$ is not known and will be computed using the following iterative procedure:

- **Step 1. Initialization**

Set the harmonic current source $[I_{nl}(h)]$ to zero.

- **Step 2. Network Load-Flow Solution**

Replace the synchronous machines with their harmonic Norton equivalent circuits (Fig. 4.27) and solve the network equations for the fundamental and harmonic frequencies.

- **Step 3. Harmonic Current-Source Computation.** Use the newly obtained network voltages and currents (from Step 2) to update $[I_{nl}(h)]$ for the machine equivalent circuit.

- **Step 4. Convergence**

If the computed $[I_{nl}(h)]$ values are sufficiently close to the previous ones stop; otherwise, go to Step 2.

The network load-flow solution and the harmonic iteration processes can be performed by any general purpose harmonic load-flow program as explained in Chapter 8 and Ref. [68]. Therefore, $[I_{nl}(h)]$ needs to be computed (Step 3). This will require the machine harmonic models in the $dq0$ and abc coordinates.

4.3.4.1 Synchronous machine harmonic model based on $dq0$ coordinates

To incorporate the synchronous machine model (Fig. 4.27) in a general purpose harmonic analysis program, reasonable assumptions and simplifications according to the general guidelines indicated in Refs. [69,70] are made. Under these assumptions, the following $dq0$ transformation is used to transfer the machine quantities from abc coordinates into rotating $dq0$ coordinates [12]:

$$\begin{bmatrix} v_d & v_q & v_0 \end{bmatrix}^T = [P]^{-1} \begin{bmatrix} v_a & v_b & v_c \end{bmatrix}^T, \quad (4.57)$$

where

$$[P]^{-1} = \sqrt{\frac{2}{3}} \begin{bmatrix} \cos \theta & \cos(\theta - 2\pi/3) & \cos(\theta + 2\pi/3) \\ -\sin \theta & -\sin(\theta - 2\pi/3) & -\sin(\theta + 2\pi/3) \\ \sqrt{1/2} & \sqrt{1/2} & \sqrt{1/2} \end{bmatrix}. \quad (4.58)$$

In this equation $\theta = (\omega t + \delta)$ and δ is the angle between d -axis and the real axis of the network phasor reference frame. Defining

$$\left\{ \begin{array}{l} [D] = \begin{bmatrix} 1 & e^{-\frac{j2\pi}{3}} & e^{-\frac{j4\pi}{3}} \\ -j & -je^{-\frac{j2\pi}{3}} & -je^{-\frac{j4\pi}{3}} \\ 0 & 0 & 0 \end{bmatrix} e^{j\delta} / \sqrt{6} \\ [D_0] = \begin{bmatrix} 0 & 0 & 0 \\ 0 & 0 & 0 \\ \sqrt{1/3} & \sqrt{1/3} & \sqrt{1/3} \end{bmatrix} \end{array} \right. , \quad (4.59)$$

matrix $[P]^{-1}$ can be simplified as

$$[P]^{-1} = [D]e^{j\omega t} + [D]^C e^{-j\omega t} + [D_0]. \quad (4.60)$$

Because the $dq0$ transformation is an orthogonal transformation, it follows that

$$[P] = \left([P]^{-1}\right)^T = [D]^T e^{j\omega t} + [D]^H e^{-j\omega t} + [D_0]^T, \quad (4.61)$$

where superscripts T , C , and H represent transpose, conjugate, and conjugate transpose, respectively.

Using these equations for the $dq0$ transformation and the generator reference convention, a synchronous machine is represented in the $dq0$ coordinates as

$$\left\{ \begin{array}{l} [v_{\text{park}}] = -[R][i_{\text{park}}] - \frac{d}{dt} [\Psi_{\text{park}}] + [F][\Psi_{\text{park}}], \\ [\Psi_{\text{park}}] = [L][i_{\text{park}}] \end{array} \right. , \quad (4.62)$$

where

$$[v_{\text{park}}] = [v_d \ v_q \ v_0 \ v_f \ v_g \ v_D \ v_Q]^T,$$

$$[i_{\text{park}}] = [i_d \ i_q \ i_0 \ i_f \ i_g \ i_D \ i_Q]^T,$$

$$[R] = [r_a \ r_a \ r_a \ r_f \ r_g \ r_D \ r_Q]^T,$$

$$[F] = \begin{bmatrix} 0 & -\omega & 0 & 0 & 0 & 0 & 0 \\ \omega & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 \end{bmatrix},$$

$$[L] = \begin{bmatrix} L_d & 0 & 0 & M_{fd} & 0 & M_{dD} & 0 \\ 0 & L_q & 0 & 0 & M_{gg} & 0 & M_{gQ} \\ 0 & 0 & L_0 & 0 & 0 & 0 & 0 \\ M_{df} & 0 & 0 & L_{ff} & 0 & M_{fD} & 0 \\ 0 & M_{qg} & 0 & 0 & L_{gg} & 0 & M_{gQ} \\ M_{dD} & 0 & 0 & M_{fD} & 0 & L_{DD} & 0 \\ 0 & M_{qQ} & 0 & 0 & M_{gQ} & 0 & L_{QQ} \end{bmatrix}.$$

In these equations, subscripts f and D represent the field and damping windings of the d -axis, respectively, and subscripts g and Q indicate the field and damper windings of the q -axis, respectively.

Substituting Eq. (4.62) into Eq. (4.61) and defining the differential operator $p = \frac{d}{dt}$:

$$\begin{cases} [v_{\text{park}}] = -[R][i_{\text{park}}] - p([L][i_{\text{park}}]) + [F][L][i_{\text{park}}] \\ [v_{\text{park}}] = (-[R] - p[L] + [F][L])[i_{\text{park}}] = [Z(p)][i_{\text{park}}] \end{cases} \quad (4.63)$$

where $[Z(p)] = -[R] - p[L] + [F][L]$ is the operation impedance matrix.

The rotor angular velocity (ω) is constant during steady-state operation; therefore, Eq. (4.63) represents a linear time-invariant system and can be written in the frequency domain for each harmonic $h\omega$, as follows:

$$[V_{\text{park}}(h)] = [Z(h)][I_{\text{park}}(h)]. \quad (4.64)$$

For the harmonic quantities $h \neq 0$ (e.g., excluding DC), the f , g , D , and Q windings are short-circuited; therefore, Eq. (4.64) can be rewritten as

$$\begin{bmatrix} V_d \\ V_q \\ V_0 \\ 0 \\ 0 \\ 0 \\ 0 \end{bmatrix} = \begin{bmatrix} Z_{11}(h) & \cdots & Z_{12}(h) \\ \vdots & \ddots & \vdots \\ Z_{21}(h) & \cdots & Z_{22}(h) \end{bmatrix} \begin{bmatrix} I_d \\ I_q \\ I_0 \\ I_f \\ I_g \\ I_D \\ I_Q \end{bmatrix}. \quad (4.65)$$

Solving for the $dq0$ currents as a function of the $dq0$ voltages, we have [12]:

$$[I_{dq0}(h)] = [Z_{11}(h) - Z_{12}(h)Z_{22}^{-1}(h)Z_{21}(h)]^{-1}[V_{dq0}(h)] = [Y_{dq0}(h)][V_{dq0}(h)], \quad (4.66)$$

where

$$[Y_{dq0}(h)] = [Z_{11}(h) - Z_{12}(h)Z_{22}^{-1}(h)Z_{21}(h)]^{-1},$$

$$[I_{dq0}(h)] = [I_d \quad I_q \quad I_0]^T,$$

$$[V_{dq0}(h)] = [V_d \quad V_q \quad V_0]^T.$$

Eq. (4.66) (consisting of a simple admittance matrix relating the $dq0$ components) defines the harmonic machine model in the $dq0$ coordinates.

For the DC components (e.g., $h = 0$), the voltage of the f -winding is no longer zero. Applying similar procedures, the results will be similar to Eq. (4.66), except that there is an equivalent DC voltage source (which is a function of the DC excitation voltage v_f) in series with the $[Y_{dq0}]$ matrix.

4.3.4.2 Synchronous machine harmonic model based on abc coordinates

To interconnect the synchronous machine model of Eq. (4.66) with the rest of the system, the $dq0$ voltages and currents must be converted to the corresponding phase abc quantities

using Park's transformation. Assume that the machine voltage $[v_{abc}(t)]$ vector consists of a single harmonic component of order h :

$$[v_{abc}(t)] = \text{Real}\left\{\sqrt{2}[V_{abc}(h)]e^{jh\omega t}\right\}. \quad (4.67)$$

The corresponding $dq0$ -voltage vector is obtained by Park's transformation (Eq. 4.58) as

$$\begin{aligned} [v_{dq0}(t)] &= [P]^{-1}[V_{abc}(t)] = \text{Real}\left\{[P]^{-1}\sqrt{2}[V_{abc}(h)]e^{jh\omega t}\right\} \\ &= \sqrt{2}\text{Real}\left\{[D][V_{abc}(h)]e^{j(h+1)\omega t} + [D]^C \cdot [V_{abc}(h)]e^{j(h-1)\omega t} + [D_0][V_{abc}(h)]e^{j\omega t}\right\}. \end{aligned} \quad (4.68)$$

Therefore, one harmonic abc voltage introduces three harmonics in terms of $dq0$ coordinates. The machine's $dq0$ model can now be used to obtain the $dq0$ currents. From Eq. (4.66):

$$\begin{aligned} [i_{dq0}(t)] &= \sqrt{2}\text{Real}\left\{[V_{dq0}(h+1)][D][V_{abc}(h)]e^{j(h+1)\omega t} + [Y_{dq0}(h-1)][D]^C \right. \\ &\quad \left. [V_{abc}(h)]e^{j(h-1)\omega t} + [Y_{dq0}(h)][D_0][V_{abc}(h)]e^{j\omega t}\right\}. \end{aligned} \quad (4.69)$$

Transferring Eq. (4.69) back into the abc coordinates (using the inverse Park transformation), and with the condition $[D]^T[D_0]=0$, we get

$$\begin{aligned} [i_{abc}(t)] &= [P][i_{dq0}(t)] = \sqrt{2}\text{Real}\left\{[D_0^T Y_{dq0}(h)D_0 + D^T Y_{dq0}(h-1)D^C + D^H Y_{dq0}(h+1)D] \right. \\ &\quad \left. [V_{abc}(h)]e^{jh\omega t} + [D^H Y_{dq0}(h-1)D^C][V_{abc}(h)]e^{j(h-2)\omega t} \right. \\ &\quad \left. + [D^T Y_{dq0}(h+1)D][V_{abc}(h)]e^{j(h+2)\omega t}\right\}. \end{aligned} \quad (4.70)$$

Based on this equation, the harmonic voltage of order h , $[V_{abc}(h)]$, can generate harmonic currents of order $(h-2)$ and $(h+2)$ in abc coordinates (Fig. 4.28). This is known as frequency conversion. Note that (Fig. 4.28):

- Negative-sequence voltage $[D][V_{abc}(h)]$ generates harmonic currents of order $(h+2)$ and h .
- Positive-sequence voltage $[D]^C[V_{abc}(h)]$ generates harmonic currents of order $(h-2)$ and h .
- Zero-sequence voltage $[D_0][V_{abc}(h)]$ generates only the harmonic current of the same order.
- There are three particular harmonic voltages that can generate harmonic currents of the same order.

All these observations are consistent with the revolving magnetic field theory [71].

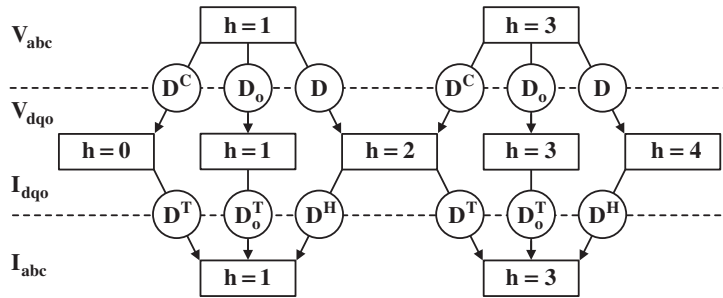


FIG. 4.28 Process of frequency conversion (Eq. 4.70) in a synchronous machine [12].

4.3.4.3 Computation of synchronous machine injected harmonic currents $[I_{nl}(h)]$

The current source $[I_{nl}(h)]$ of the synchronous machine harmonic model (Fig. 4.27) consists of two components: $[I_f(h)]$ due to the frequency-conversion phenomena and $[I_s(h)]$ due to the saturation effects. These currents will be computed separately.

Injected harmonic current due to frequency conversion $[I_f(h)]$

As mentioned before, Eq. (4.70) also indicates that there are three particular harmonic voltages that can generate harmonic currents of the same order. Assuming that the voltage vector $[v_{abc}(t)]$ includes all harmonic components, the harmonic terminal voltages that result in currents of the same harmonic order h can be grouped and described in phasor form as [12].

$$[I_{abc}(h)] = [D^T Y_{dq0}(h-1)D^C + D^H Y_{dq0}(h+1)D + D_0^T Y_{dq0}(h)D_0][V_{abc}(h)] \\ + [D^H Y_{dq0}(h+1)D^C][V_{abc}(h+2)] + [D^T Y_{dq0}(h-1)D][V_{abc}(h-2)]. \quad (4.71)$$

If we substitute

$$[Y(h)] = [D^T Y_{dq0}(h-1)D^C + D^H Y_{dq0}(h+1)D + D_0^T Y_{dq0}(h)D_0], \quad (4.72)$$

$$[I_f(h)] = [D^H Y_{dq0}(h+1)D^C][V_{abc}(h+2)] + [D^T Y_{dq0}(h-1)D][V_{abc}(h-2)], \quad (4.73)$$

then Eq. (4.71) can be rewritten as

$$[I_{abc}(h)] = [Y(h)][V_{abc}(h)] + [I_f(h)]. \quad (4.74)$$

This equation defines the machine model shown in Fig. 4.27, where:

- $[I_{abc}(h)] = [I_{km}(h)]$.
- $[V_{abc}(h)] = [V_k(h)] - [V_m(h)]$.
- $[Y(h)]$ correlates harmonic voltages to harmonic currents of the same order.
- $[I_f(h)]$ describes the harmonic coupling due to frequency-conversion effects. This current vector is generated from the conversion of voltages of different harmonic orders.

Following a similar approach, the equivalent DC voltage source of the $dq0$ -machine model at harmonic order $h=0$ becomes a set of positive-sequence fundamental frequency voltage sources in abc coordinates. As explained earlier, the values of these voltages are determined in conjunction with load-flow constraints.

Therefore, matrix operations are sufficient to compute the admittance matrix $[Y(h)]$ and the equivalent current source $[I_f(h)]$ needed for the harmonic machine model:

- Compute $[Y(h)]$ according to Eq. (4.72) whenever the machine admittance matrix needs to be added to the network admittance matrix in the frequency scan process.
- Compute $[I_f(h)]$ according to Eq. (4.73) where $[V_{abc}(h)]$ contains the machine voltages obtained from the load-flow solution of the previous iteration.

Injected Harmonic Currents Due to Saturation $[I_s(h)]$

Saturation of the stator and rotor cores of a synchronous machine has a significant impact on the machine's operation and the corresponding operating point [71]. Other saturation factors (e.g., cross-coupling between d - and q -axes) are assumed to be negligible and are not considered in the model of Fig. 4.27.

It is shown in Ref. [12] that the influence of saturation can be represented as a current source in parallel with the $dq0$ -machine model (Eq. 4.66):

$$[I_{dq0}(h)] = [Y_{dq0}(h)] [V_{dq0}(h)] + [I_{dq0-s}(h)], \quad (4.75)$$

where $[I_{dq0-s}(h)]$ is a known current vector representing the effect of saturation. For a given set of machine terminal voltages, vector $[I_{dq0-s}(h)]$ is obtained through a process of subiterations [12].

With saturation effects included in $dq0$ coordinates, Park's transformation can now be applied to obtain the machine's model in abc coordinates. The processing of the first part of Eq. (4.75) has been explained in the previous section. The second part (e.g., $[I_{dq0-s}(h)]$) will be discussed next.

Using Park transformation matrix (Eq. 4.61), the $dq0$ -harmonic currents of order h appear in abc coordinates as

$$\begin{aligned} [i_{abc-s}(t)] &= \text{Real} \left\{ [P] \sqrt{2} [I_{dq0-s}(h)] e^{j h \omega t} \right\} \\ &= \text{Real} \left\{ \sqrt{2} \left[D^T e^{j(h+1)\omega t} + D^H e^{j(h-1)\omega t} + D_0 e^{j h \omega t} \right] [I_{dq0-s}(h)] \right\}. \end{aligned} \quad (4.76)$$

It can be seen that the $dq0$ currents $[I_{dq0-s}(h)]$ also introduce three separate harmonic components of order $(h-1)$, h , and $(h+1)$ in the abc coordinates. Assuming that $[I_{dq0-s}(h)]$ includes harmonics of all orders, the particular $dq0$ harmonics that produce harmonic currents of the same order in abc coordinates can be grouped together in phasor form as

$$[I_s(h)] = [D]^T [I_{dq0-s}(h-1)] + [D]^H [I_{dq0-s}(h+1)] + [D_0] [I_{dq0-s}(h)]. \quad (4.77)$$

This is the current that is needed to represent the effects of saturation in abc coordinates.

The above equation defines the final machine model used for harmonic load-flow studies. The approach of computing $[I_s(h)]$ can be summarized as follows:

- Compute the saturation current $[I_{dq0-s}(h)]$ using the subiteration process described in Ref. [12] or any other desired approach; and
- Compute $[I_s(h)]$ according to Eq. 4.77 for all harmonics of interest.

Total injected harmonic current $[I_{nt}(h)]$

The complete machine model with both the frequency-conversion and saturation effects included can now be described by

$$[I_{abc}(h)] = [Y(h)] [V_{abc}(h)] + [I_f(h)] + [I_s(h)]. \quad (4.78)$$

4.3.4.4 Application Example 4.12: Effect of frequency conversion on synchronous machine negative-sequence impedance

The negative-sequence impedance of a synchronous machine is important for simulation under unbalanced conditions. Its value is different depending on whether negative-sequence currents or negative-sequence voltages are used to determine the impedance [71]. This inconsistency is caused by the frequency conversion process. In this example, the harmonic model of Fig. 4.27 (implemented in a multiphase harmonic load flow [68]) is used to run two test

conditions that are commonly accepted to define the machine's negative-sequence impedance:

- I-definition: synchronous machine is connected to a negative-sequence current source and the negative-sequence terminal voltage is recorded.
- V-definition: synchronous machine is connected to a negative-sequence voltage source and the negative-sequence terminal current is recorded.

The impedance resulting from these tests is the ratio of the fundamental frequency voltage to the fundamental frequency current obtained by harmonic analysis. The program was run for three different levels of harmonic truncation (Table E4.12.1).

The following observations can be derived from this table:

- The difference between the machine impedances calculated from the I- and V-definitions is caused by the 3rd harmonic. The contribution of the 5th harmonic is negligible.
- If harmonics are not included, the proposed machine model corresponds to the impedance of V-definition.
- In the general case of unbalanced machine operation, the machine's negative-sequence impedance is neither the one from the V-definition nor the one from the I-definition. The correct machine response can only be fully evaluated with harmonics included. The combination of the load-flow constraints with harmonic solutions is therefore the best approach in such situations.
- Agreement between simulation and exact results justifies the validity of the synchronous machine harmonic model (Fig. 4.27).

TABLE E4.12.1 Values of negative-sequence impedance for synchronous machine [12] where all impedance values are in ohms

Test type	Exact ^a	Harmonic truncation ^b		
		$h = 1$	$h = 1, 3$	$h = 1, 3, 5$
I-definition	$0.0655 + j0.3067$	$0.0857 + j0.2165$	$0.0655 + j0.3066$	$0.0655 + j0.3066$
V-definition	$0.0858 + j0.2165$	$0.0856 + j0.2166$	$0.0859 + j0.2164$	$0.0859 + j0.2164$

^a Based on analytical formulas.

^b $h = 1$: only the fundamental frequency component included; $h = 1, 3$: $h = 1$ modeling plus the third harmonic; $h = 1, 3, 5$: $h = 1, 3$ modeling plus the fifth harmonic.

4.3.4.5 Application Example 4.13: Effect of imbalance on power quality of synchronous machines

A profile of the harmonic content of the synchronous machine currents and voltages is calculated (using the harmonic model of Fig. 4.27) for two test machines. The voltage and current harmonics in a machine will be influenced by the conditions imposed by the external network. To simplify the interpretation of the results, a straightforward operating condition with grounded Y synchronous machines and unbalanced R , L , and C loads is considered (Fig. E4.13.1 without harmonic-current sources). The loads are adjusted so that the machine's current imbalance at fundamental frequency is around the normal tolerance of 10%.

The results (using two synchronous machines with different positive- and negative-sequence currents) are shown in Table E4.13.1 for the voltage harmonics and for the frequency-conversion-induced equivalent current source $I_f(h)$. Significant harmonics are observed even for cases when the machines are operated within an acceptable range of imbalance. The effects of these harmonics could easily be magnified if voltage resonance takes place. Note that the harmonic magnitudes decrease quickly for higher orders. From the results of Tables E4.12.1 and E4.13.1, it may be concluded that only 3rd and 5th harmonics need to be included in synchronous machine's representation for harmonic studies.

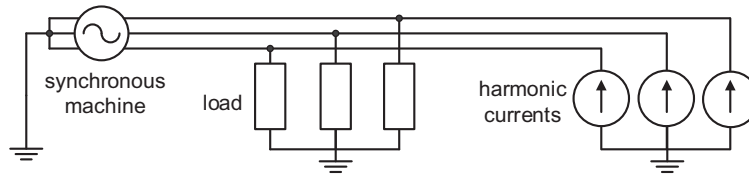


FIG. E4.13.1 Single machine test system used in application examples [12].

TABLE E4.13.1 Harmonic profiles of two synchronous machines (unbalanced operating conditions) [12] where all magnitudes are in (pu) and all angles are in ($^{\circ}$)

Machine	Item	$h = 1$		$h = 3$		$h = 5$		$h = 7$	
		Magnitude	Angle	Magnitude	Angle	Magnitude	Angle	Magnitude	Angle
No. 1	V_a	1.103	1.1	0.0148	88.3	0.0002	148.4	0	
$NP^a = 9.35\%$	V_b	1.025	-121.5	0.0131	-36.5	0.0002	23.8	0	
	V_c	1.022	120.2	0.0131	-151.5	0.0002	-90.2	0	
	I_{f-a}	0.027	167.3	0.0225	-152.5	0.0002	-99.5	0	
	I_{f-b}	0.027	-72.7	0.0225	87.4	0.0002	140.4	0	
	I_{f-c}	0.027	47.3	0.0225	-32.4	0.0002	20.4	0	
No. 2	V_a	1.080	1.3	0.0345	92.1	0.0011	157.2	0	
$NP^a = 12.41\%$	V_b	1.041	-121.6	0.0313	-33.0	0.0009	32.4	0	
	V_c	1.030	120.3	0.0315	-148.2	0.0010	-82.7	0	
	I_{f-a}	0.025	155.2	0.0704	-151.3	0.0016	-94.8	0	
	I_{f-b}	0.025	-84.7	0.0696	88.3	0.0016	145.2	0	
	I_{f-c}	0.025	35.2	0.0696	-30.9	0.0016	25.2	0	

^a NP: ratio of the negative- to positive-sequence current at fundamental frequency.

4.3.4.6 Application Example 4.14: Effect of Delta connection on power quality of synchronous machines

It is believed that the flow of the third harmonic in lines can be prevented by connecting the three-phase equipment in delta. This assumption is tested here by assuming that the winding of the first synchronous generator (Application Example 4.13) is to be connected in delta. The results of this test (third harmonic currents for the Δ and Y-connected machines) are presented in Table E4.14.1. Even though the third harmonic components are about 40% smaller in the Δ connection, they do not cancel completely. The reason is:

The third harmonic generated by the frequency-conversion process in a synchronous machine is of negative sequence and not of zero sequence, and therefore cannot be eliminated by a Δ connection.

TABLE E4.14.1 Third harmonic currents in grounded Y- and Δ -connected synchronous generators [12] where all magnitudes are in (pu) and all angles are in ($^\circ$), g stands for ground

		Phase A		Phase B		Phase C	
		Magnitude	Angle	Magnitude	Angle	Magnitude	Angle
V_3	Y-g	0.0148	88.3	0.0130	-36.5	0.0131	-151.5
	Δ	0.0091	81.7	0.0071	-40.7	0.0078	-168.4
I_3	Y-g	0.0090	48.3	0.0125	-71.7	0.0108	170.1
	Δ	0.0055	41.6	0.0068	-76.0	0.0065	153.3

4.3.4.7 Application Example 4.15: Effect of saturation on power quality of synchronous machines

In the model of Fig. 4.27, the saturation curve is approximated in a piecewise-linear manner between the data (MMF, λ) = (0.9 pu, 0.9 pu), (1.5 pu, 1.2 pu), (2.7 pu, 1.8 pu). Table E4.15.1 lists the harmonic profiles of the machine with and without saturation. There are large differences between the cases with and without saturation (the last column of Table E4.15.1). The differences in the phase angles are even more noticeable. These results suggest that

TABLE E4.15.1 Harmonic profiles of two synchronous machines with and without saturation (under unbalanced operating conditions) [12] where all magnitudes are in (pu) and all angles are in ($^\circ$)

		$h = 1$		$h = 3$		$h = 5$		Difference (%) ^a
		Magnitude	Phase	Magnitude	Phase	Magnitude	Phase	
NS ^b	V_a	1.103	1.1	0.0148	88.3	0.00020	148.4	
SAT	V_a	1.103	1.1	0.0120	76.3	0.00014	115.8	19.0
NS	V_b	1.025	-121.5	0.0130	-36.5	0.00017	23.8	
SAT	V_b	1.025	-121.5	0.0106	-48.4	0.00012	-8.8	18.6
NS	V_c	1.022	120.2	0.0131	-151.5	0.00017	-90.2	
SAT	V_c	1.022	120.2	0.0106	-163.7	0.00013	-122.9	18.6
NS	I_a	0.0027	167.3	0.0225	-152.5	0.00022	-99.5	

Saturation can have an important influence on harmonic power-flow analysis.

TABLE E4.15.1 Harmonic profiles of two synchronous machines with and without saturation (under unbalanced operating conditions) [12] where all magnitudes are in (pu) and all angles are in ($^{\circ}$)—Cont'd

		$h = 1$		$h = 3$		$h = 5$		Difference (%) ^a
		Magnitude	Phase	Magnitude	Phase	Magnitude	Phase	
SAT	I_a	0.0022	168.5	0.0182	−164.5	0.00014	−131.3	19.0
NS	I_b	0.0027	−72.7	0.0224	87.4	0.00022	140.4	
SAT	I_b	0.0022	−71.4	0.0182	75.5	0.00014	108.6	18.6
NS	I_c	0.0027	47.3	0.0225	−32.4	0.00022	20.4	
SAT	I_c	0.0022	48.5	0.0182	−44.6	0.00014	−11.3	18.7

^a Relative difference of the 3rd harmonic magnitude.

^b NS, without saturation; SAT, with saturation.

4.3.4.8 Application Example 4.16: Impact of nonlinear loads on power quality of synchronous machines

The effects of nonlinearities of synchronous machines are further investigated by including nonlinear loads, represented as 3rd and 5th current injections to the generator-load system (Fig. E4.13.1). Three case studies are performed:

- **Case 1:** with no machine nonlinearities.
- **Case 2:** with only frequency conversion.
- **Case 3:** with both frequency conversion and saturation.

The results (Table E4.16.1) further confirm the need for detailed modeling of machine's nonlinearities.

TABLE E4.16.1 Voltages of machine 1 (defined in Table E4.13.1) in the presence of nonlinear loads (Fig. E4.13.1) [12] where all magnitudes are in (pu) and all angles are in ($^{\circ}$).

		Phase A		Phase B		Phase C		Case study
		Magnitude	Phase	Magnitude	Phase	Magnitude	Phase	
$h = 1$		1.099	0.2	1.023	−120.8	1.028	120.5	1
		1.100	0.3	1.024	−120.9	1.026	120.5	2
		1.000	0.3	1.024	−120.8	1.026	120.5	3
$h = 3$		0.0607	69.4	0.0304	−171.5	0.0536	−68.4	1
		0.0777	67.3	0.0283	−155.3	0.0572	−82.9	2
		0.724	66.4	0.0295	−156.7	0.0526	−79.7	3
$h = 5$		0.0336	69.7	0.0450	−59.2	0.0379	−173.5	1
		0.0445	80.1	0.0539	−50.0	0.0458	−173.6	2
		0.0417	76.8	0.0517	−52.9	0.0439	−177.4	3

4.3.5 Static- and dynamic-rotor eccentricities generating current and voltage harmonics

Most synchronous machines have relatively large radial air-gap lengths, which range from a few millimeters to tens of centimeters. This is so because the synchronous reactances (X_d , X_q) must be small enough to guarantee a good dynamic (transient, subtransient) behavior. Although permanent-magnet machines have a mechanical air gap of less than 1 mm up to a few millimeters, their electrical air gap is always larger than 1 mm because the radial air-gap height (length) of the permanent magnet behaves magnetically like air with the permeability of free space μ_o because the recoil permeability μ_R of excellent permanent-magnetic material (e.g., NdFeB) is about $\mu_R \approx 1.05\mu_o$. Therefore, an imperfect mechanical mounting—resulting in a static-rotor eccentricity—or a bent shaft—resulting in dynamic-rotor eccentricity—will not significantly alter the magnetic coupling of the stator windings and the rotating magnetic flux will be about circular. Here one should mention that permanent-magnet machines cannot be easily assembled for ratings larger than a few tens of kilowatts because a mounting gear will be required, which maintains a uniform concentric air gap during the mounting of the rotor.

The modified winding-function approach (MWFA) accounting for all space harmonics has been used for the calculations of machine inductances under rotor eccentricities [72]. Machines can fail due to air-gap eccentricity caused by mechanical problems including the following:

- shaft deflection,
- inaccurate positioning of the rotor with respect to the stator,
- worn bearings,
- stator-core movement, and
- bent rotor shaft.

Electrical asymmetries contribute to harmonic generation such as:

- Damper windings (amortisseur) are incomplete, that is, the amortisseur has a different construction between poles (q -axis) as compared with that on the pole d -axis; or
- Eddy currents in the pole faces of salient-pole machines contribute to subtransient response;
- Heating of the rotor due to nonuniform amortisseur and nonuniform eddy-current generation around the rotor circumference may cause shaft bending/deflection; and
- Incomplete shielding of the field winding of a machine fitted with nonuniform amortisseurs and subjected to harmonic disturbance.

Nonsinusoidal air-gap flux wave effects—due to any of the above-listed reasons—can be accounted for by representing the mutual inductances between the field and stator windings, and those between the stator windings, by trigonometric series as a function of the rotor angle θ . It is found that the inclusion of nonsinusoidal inductance variation causes a broad spectrum such that injection of a single-harmonic current results in voltages containing all odd harmonic orders including the fundamental. The extent to which the energy is spread across the spectrum depends on the pole shape, the numbers of stator and rotor slots, and the amortisseur design. The spectral spread is a second-order effect compared to the generation

of the associated voltage at frequency $(h \pm 2)$. Harmonic behavior is also affected by nonsinusoidal inductance variation with rotor position and by the extent to which induced damper winding currents shield the field winding from the harmonic-gap flux waves. Rotor eccentricity in machines can be of two forms:

- static air gap eccentricity, and
- dynamic air gap eccentricity.

With the static air-gap eccentricity, the position of the minimum radial air-gap length is fixed in space and the center of rotation and that of the rotor are the same. Static eccentricity can be caused by oval stator cores or by the incorrect relative mounting of stator and rotor. In case of dynamic air-gap eccentricity, the center of rotation and that of the rotor are not the same and the minimum air gap rotates with the rotor. Therefore, dynamic eccentricity is both time and space dependent. Dynamic eccentricity can be caused by misalignment of bearings, mechanical resonance at critical speeds, a bent rotor shaft, and wear of bearings [72].

MATLAB/Simulink [73] can be used for the simulation of machine variables. All machine inductances employed for the simulation are expressed in their Fourier series based on the MWFA. Two different cases, namely, a noneccentric and an eccentric rotor case, for this analysis are investigated. In the first case, it is assumed that dynamic air-gap eccentricity is not present, and in the second one 50% dynamic air-gap eccentricity is introduced to investigate the effect of the eccentric rotor on stator-current signatures. To analyze the stator-current signatures of these two cases, FFT (fast Fourier transform) of the current signals are performed for all cases. The stator currents show the existence of the 5th (300 Hz), 7th (420 Hz), 11th (660 Hz), 13th (780 Hz), 17th (1020 Hz), and 19th (1140 Hz) harmonics even when the rotor is not eccentric. Implementing 50% eccentricity will cause the stator and rotor current induced harmonics to increase when compared to those generated without rotor eccentricity as is listed in Table 4.3.

The stator current harmonics exist because the interaction of the magnetic fields caused by both the stator and rotor windings will produce harmonic fluxes that move relative to the stator and they induce corresponding current harmonics in the stationary stator windings. These harmonic fluxes in the air gap will increase as the rotor dynamic eccentricity increases, and consequently the current harmonic content increases too. The 3rd harmonic and its multiples are assumed not to exist in the stator windings because it is a three-phase system with no neutral connection. However, third-harmonic components are induced in the rotor-field winding. Because the stator and rotor-current signatures of synchronous machines have changed, either or both signatures can be utilized for detecting dynamic eccentricity. However, it is more practical to implement the stator-current signature analysis for the condition monitoring than the rotor-current signature analysis because some synchronous machines have brushless excitation [52], which will make the rotor current inaccessible. In summary, one can conclude that synchronous machines are not very prone to the effects caused by rotor eccentricity due to their large air gaps.

TABLE 4.3 Relative percentage of stator harmonics due to 50% dynamic eccentricity

5th	7th	11th	13th	17th	19th
22.8%	12.4%	20.9%	28.4%	47.1%	36.9%

4.3.6 Shaft flux and bearing currents

The generation of shaft flux [74] due to mechanical and magnetic asymmetries as well as solid-state switching is an important issue for large synchronous generators. Bearing currents are predominantly experienced in PWM AC drives [75–79] due to the high-frequency switching ripples resulting in bearing electroerosion. Techniques for measurement of parameters related to inverter-induced bearing currents are presented in Ref. [80].

4.3.7 Conclusions

The most important conclusions of this section are:

- Synchronous machines generate harmonics due to
 1. frequency conversion,
 2. saturation, and
 3. unbalanced operation.
- Current harmonics due to nonlinear loads should be limited based on IEEE-519 [81].
- Unbalanced load-flow analysis without taking into account harmonics is not correct due to the ambiguous value of the negative-sequence impedance of synchronous machines. Correct results can only be obtained by including harmonics in a three-phase, load-flow approach.
- Only 3rd and 5th harmonics need to be included for the machine's representation in harmonic analysis. The 3rd harmonic is of the negative-sequence and not of the zero-sequence type. Hence, it cannot be eliminated by Δ transformer connections. The same is true for transformer applications with DC current bias [82].
- Machine saturation can have noticeable effects on the harmonic distribution. These effects are more significant with respect to the harmonic phase angles.
- Rotor eccentricity has a minor influence on harmonic generation due to the large air gap of synchronous machines.
- Shaft fluxes and bearing currents can have detrimental impacts.

4.4 Discretization errors of numerical solutions

Numerical solutions are based on approximating continuous nonlinear functions by linear time increments and spatial elements: this applies to all time-dependent (e.g., PSpice, Mathematica, MATLAB) and spatial-dependent (e.g., finite-difference and finite-element methods) functions approximating ordinary differential equations and space-dependent functions approximating partial differential equations, respectively.

In the following the discretization error of the finite-difference method (FD) applied to a two dimensional spatial array (one pole pitch, see Figs. 4.29 and 4.30) of an electric machine at no load governed by the Poisson partial differential equation [19,40,53]. Note that the polycentric-mesh approach yield symmetric flux distributions, as shown in Figs. 4.31 and 4.32, this is not the case when triangular meshes are used for the numerical solution [18,83–88] and asymmetric flux distributions result.

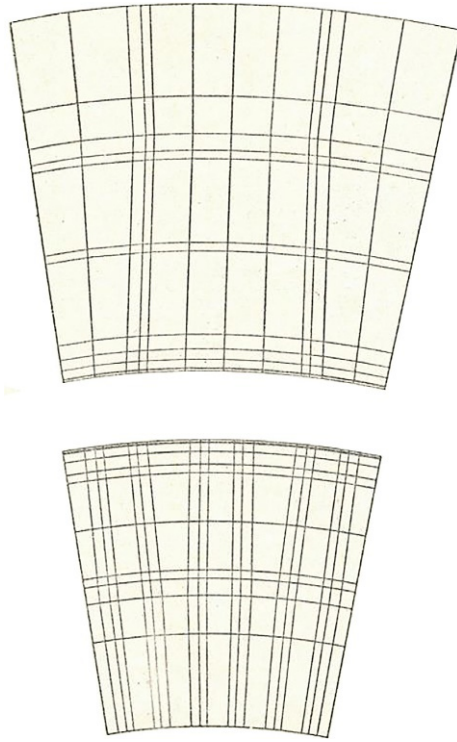


FIG. 4.29 Polycentric-mesh/grid system [18,24,83] for stator and rotor of one pole pitch of an electric machine, where the grids for the stator and rotor grids are displayed separately with a total of 409 grid points.

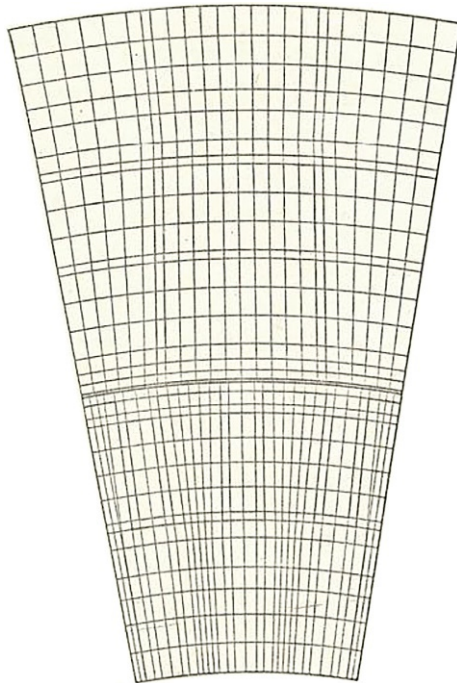


FIG. 4.30 Polycentric-mesh/grid system [18,24,83] for stator and rotor of one pole pitch of an electric machine, where the grids for the stator and rotor grids are displayed together with a total of 1061 grid points.

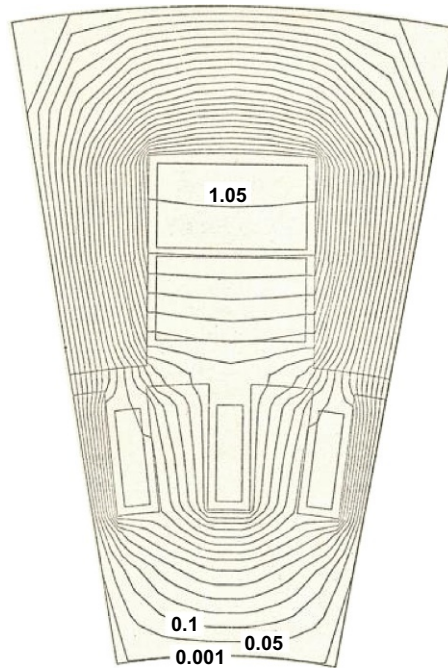


FIG. 4.31 Magnetic field solution of one pole pitch at no-load, based on a polycentric mesh/grid system [24,83] with a total of 409 grid points. Note that the magnetic field solution exhibits symmetry, and is expressed in vector potential A .

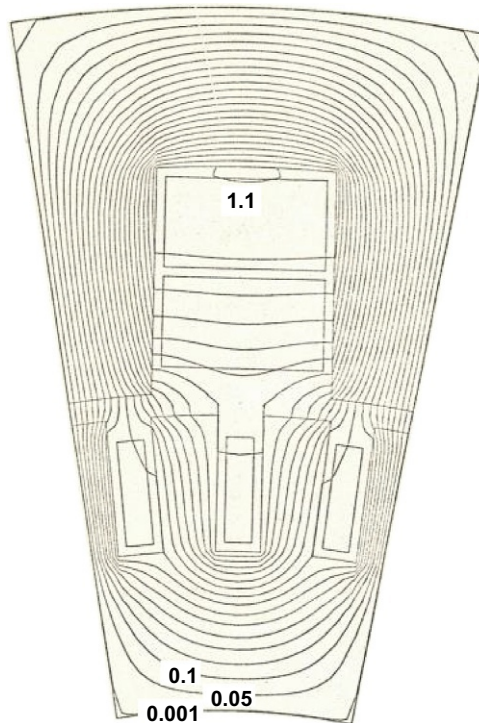


FIG. 4.32 Magnetic field solution of one pole pitch at no-load, based on a polycentric mesh/grid system [24,83] with a total of 1061 grid points. Note that the magnetic field solution exhibits symmetry, and is expressed in vector-potential A .

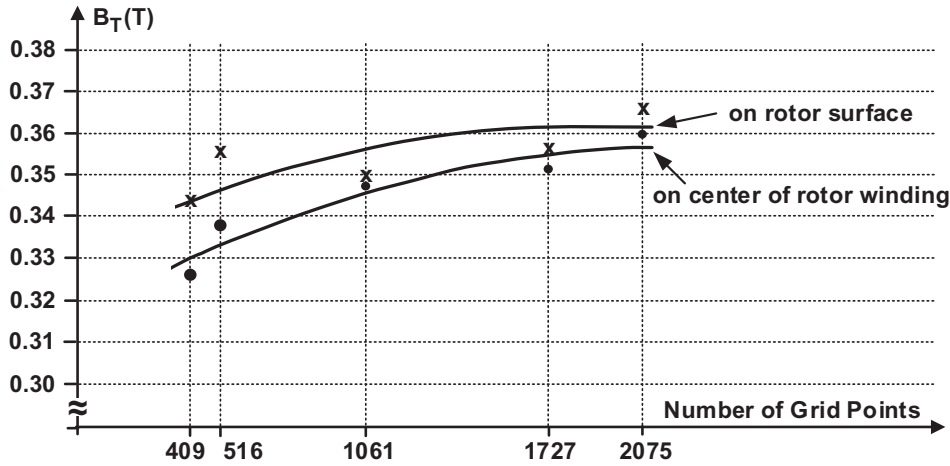


FIG. 4.33 Variation of the fundamental of the radial gap flux density B_r of one-pole pitch at no-load, based on a polycentric mesh/grid system, as a function of the number of grid points. The continuous functions are obtained from the discrete calculated points (x and ●) using the least-squares approximation method.

Fig. 4.33 clearly indicates that a reasonable accuracy for the magnetic field solution a sufficient number of grid points must be used, say in the range of 1727 to 2075, where the functions approach the solution asymptotically.

4.5 Operating point-dependent reactances under saturated magnetic field conditions

Magnetic fields as they occur in rotating electric machine are based on Laplace's and Poisson's partial differential equations [24,40,53]. The magnetic properties of the ferromagnetic material (electric steel) used in electromagnetic machines exhibit hysteresis and are nonlinear [85], that is at higher flux densities (e.g., 1.5 T) saturation occurs [85]. In the field calculation program [83] instead of permeability the inverse parameter reluctivity is used that is reluctivity = $1/(\text{permeability})$. Because of economic reasoning electric machines are designed to be operated in the saturation region of the flux {density (B)-magnetic field intensity (H)} function $B = f(H)$ [84,85]. As a consequence the reactance parameters of an electric machine (e.g., for a synchronous machine, X_d , X_q , X'_d , X''_d , and X_ℓ) are operating-point dependent [21,22,53,89]. One way to account for this dependency is to compute reactances whereby the magnetic field calculation is performed with the reluctivity distribution determined from the desired (rated) operating point. In other words, the calculation of the reactance is performed for a constant reluctivity distribution.

Fig. 4.5 shows the magnetic two-dimensional (vector potential A) field distribution for the calculation of the unsaturated direct-axis synchronous reactance $X_{d\text{-unsaturated}}$ of the machine cross section depicted in Fig. 4.34. Due to the unsaturated permeability distribution the magnetic field is ideally symmetric with respect to the q -axis: the slight asymmetry is caused by

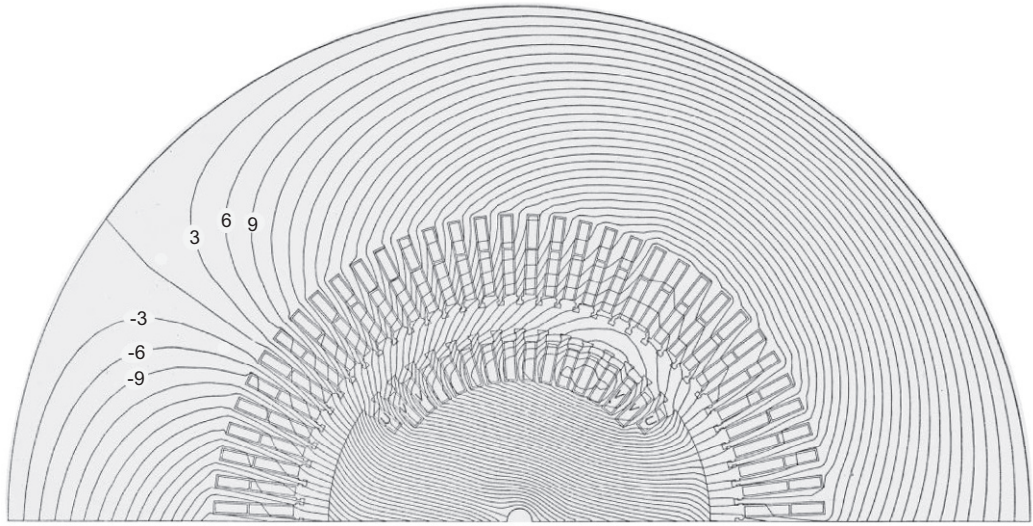


FIG. 4.34 Magnetic two-dimensional field distribution—based on the vector potential A —for saturated overexcited operating regime/point of a synchronous machine [83].

the short-pitched stator winding and to a lesser degree by the discretization error as described in Section 4.4.

Fig. 4.6 shows the magnetic two-dimensional (vector potential A) field distribution for the calculation of the unsaturated quadrature-axis synchronous reactance $X_{q\text{-unsaturated}}$ of the machine cross section depicted in Fig. 4.34. Due to the unsaturated permeability distribution the magnetic field is ideally symmetric with respect to the d -axis: the asymmetry is mainly caused by the short-pitched stator winding and to a lesser degree by the discretization error as described in Section 4.4.

Fig. 4.34 shows the magnetic two-dimensional field distribution—based on the vector potential A —for the rated, saturated overexcited operating regime/point of a synchronous machine.

Fig. 4.35 shows the magnetic two-dimensional (vector potential A) field distribution for the calculation of the saturated direct-axis synchronous reactance $X_{d\text{-saturated}}$ for the rated, saturated magnetic field solution depicted in Fig. 4.34. Due to the saturated permeability distribution, stemming from the rated but asymmetric reluctivity distribution, the magnetic field is highly asymmetric with respect to the q -axis. This asymmetry is also influenced by the short-pitched stator winding and to a lesser degree by the discretization error as described in Section 4.4.

Fig. 4.36 shows the magnetic two-dimensional (vector potential A) field distribution for the calculation of the saturated quadrature-axis synchronous reactance $X_{q\text{-saturated}}$ for the rated, saturated magnetic field solution depicted in Fig. 4.34. Due to the saturated permeability distribution, stemming from the rated but asymmetric reluctivity distribution, the magnetic field is highly asymmetric this respect to the d -axis. This asymmetry is also influenced by the short-

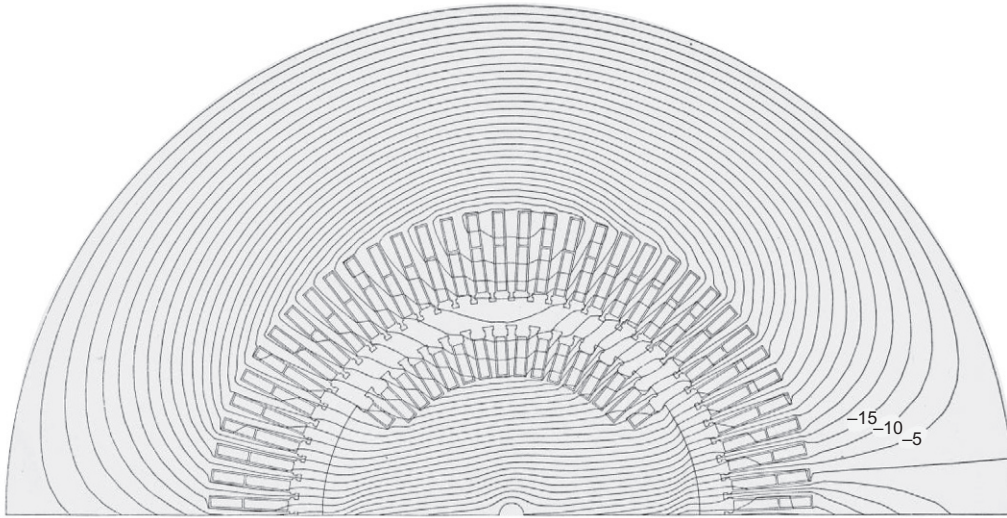


FIG. 4.35 Saturated, direct-axis synchronous reactance $X_{d-saturated}$ of the rated and saturated magnetic field as shown in Fig. 4.34. The two-dimensional magnetic field solution is based on the vector potential A [83].

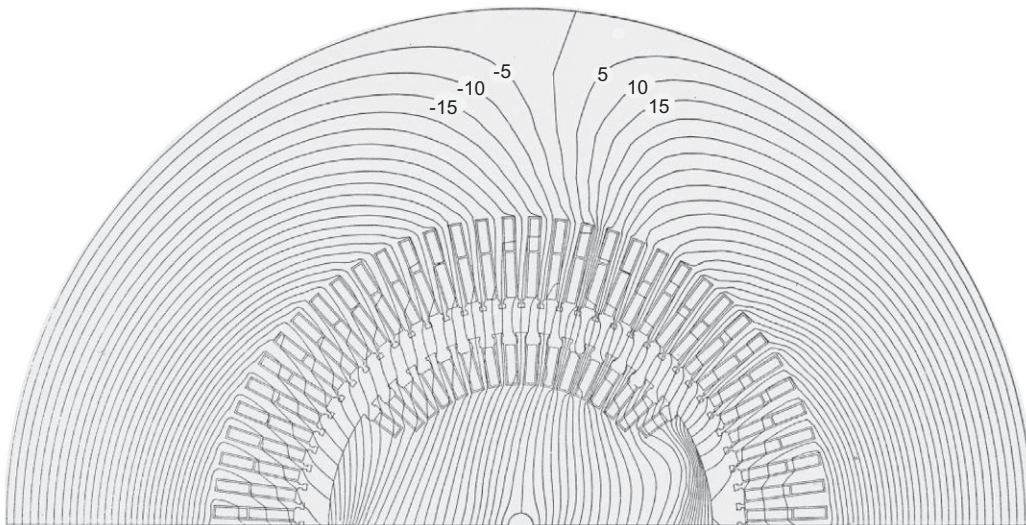


FIG. 4.36 Saturated, quadrature-axis synchronous reactance $X_{q-saturated}$ of the rated and saturated magnetic field as shown in Fig. 4.34. The two-dimensional magnetic field solution is based on the vector potential A [83].

pitched stator winding and to a lesser degree by the discretization error as described in [Section 4.4](#).

Conclusions

The error in the magnetic field solution is influenced by mainly two factors:

- (1) The number of meshes or grid points.
- (2) the choice of the approximating mesh/grid: polycentric or triangular, as it is described in Refs. [\[18, 20, 24, 53, 83–88\]](#).

Similar load dependent reactance calculations apply to induction machines and permanent-magnet machines [\[25,26,29,30,44,53\]](#).

4.6 Summary

In the past and at present synchronous generators represent an integral part of a power system. Although the tendency exists to move from a central power station approach to a distributed generation (DG) system with renewable energy sources in the megawatt range, there will be always the requirement of frequency control, which is best performed by a central power station that can absorb load-flow fluctuations, as the so-called frequency leader. Renewable PW and PV plants will be mostly operated at their maximum power output and therefore cannot provide additional (real or reactive) power if the load increases beyond their assigned output powers. In addition, such plants have an intermittent output, which cannot be controlled by dispatch and control centers. This is to say that also in future power systems the power quality will depend on the reliable operation of synchronous generators driven by bio-gas turbines as well as storage (e.g., hydro-, battery-) plants.

This chapter starts out with the introduction of the synchronous machine model based on $dq0$ coordinates. To visualize steady-state saturated magnetic fields, numerical solutions are presented for no-load, full-load, and short-circuit conditions. Fields for permanent-magnet machines and switched-reluctance machines are presented as well. Thereafter, the two possible reference systems (e.g., consumer and generator) are addressed. The application examples relate to the calculation of synchronous reactances, the investigation of various fault conditions including reclosing, and the calculation of the amortisseur current for subtransient faults such as line-to-line, line-to-neutral, and balanced three-phase short circuits. The design of synchronous machines and permanent-magnet machines for wind-power and hybrid drive applications, respectively, is discussed. Design guidelines for synchronous machines are presented, and the calculation of magnetic forces—based on the Maxwell stress—is included. The performance of synchronous machines under the influence of harmonics is explained based on models used in application examples. The employment of such models for harmonic power flow analyses is mandatory. Finally, approaches for analyzing static and dynamic eccentricities, shaft fluxes, and bearing currents are outlined. The discussion of the influences of discretization errors of the FD and FE methods and the operating-point dependent reactances due to saturation of magnetic fields concludes this chapter.

4.7 Problems

Problem 4.1: Steady-state analysis of a nonsalient-pole (round-rotor) synchronous machine using phasor diagrams

A nonsalient-pole synchronous machine has the following data: $X_s = (X_d = X_q) = 1.8 \text{ pu}$, $R_a = 0.01 \text{ pu}$, $I_{\text{phase}} = 1.0 \text{ pu}$ and $V_{L-N} = 1.0 \text{ pu}$.

- Sketch the equivalent circuit using the consumer reference system.
- Draw the phasor diagram (to scale) based on the consumer reference system for a lagging (underexcited) displacement power factor of $\cos \varphi = 0.90$.
- Sketch the equivalent circuit based on the generator reference system.
- Draw the phasor diagram (to scale) employing the generator reference system for a lagging (overexcited) displacement power factor of $\cos \varphi = 0.90$.

Problem 4.2: Steady-state analysis of a salient-pole synchronous machine using phasor diagram [7]

A salient-pole synchronous machine has the following data: $X_d = 1.8 \text{ pu}$, $X_q = 1.5 \text{ pu}$, $R_a = 0.01 \text{ pu}$, $I_{\text{phase}} = 1.0 \text{ pu}$, $V_{L-N} = 1.0 \text{ pu}$.

- Sketch the equivalent circuit based on the consumer reference system.
- Draw the phasor diagram (to scale) using the consumer reference system for a lagging (underexcited) displacement power factor of $\cos \varphi = 0.70$.
- Sketch the equivalent circuit based on the generator reference system.
- Draw the phasor diagram (to scale) employing the generator reference system for a lagging (overexcited) displacement power factor of $\cos \varphi = 0.70$.

Problem 4.3: Phasor diagram of a synchronous generator with two displaced stator windings [89]

Synchronous machines with two by 30° displaced stator windings (winding #1 and winding #2) are used to improve the voltage/current wave shapes so that the output voltages of a generator become more sinusoidal. This is similar to the employment of 12-pulse rectifiers versus 6-pulse rectifiers. To accomplish this, stator winding #1 feeds a $Y-Y$ connected transformer and stator winding #2 supplies a $\Delta-Y$ connected transformer as illustrated in Fig. P4.3.1. For a $S = 1200 \text{ MVA}$, $V_{L-L} = 24 \text{ kV}$, $f = 60 \text{ Hz}$, $p = 2$ turbogenerator the machine parameters are in per unit (pu): $X_d = 1.05$, $X_{12d} = 0.80$, $X_q = 0.95$, $X_{12q} = 0.73$, $X_{ffd} = 2.10$, $k_o = 0.5$, $k_1 = 0.638$, $r = R_a = 0.00146$, $r_f = R_f = 0.0007$.

Draw the phasor diagram (to scale) for rated operation and a displacement power factor of $\cos \varphi = 0.8$ lagging (overexcited, generator reference system).

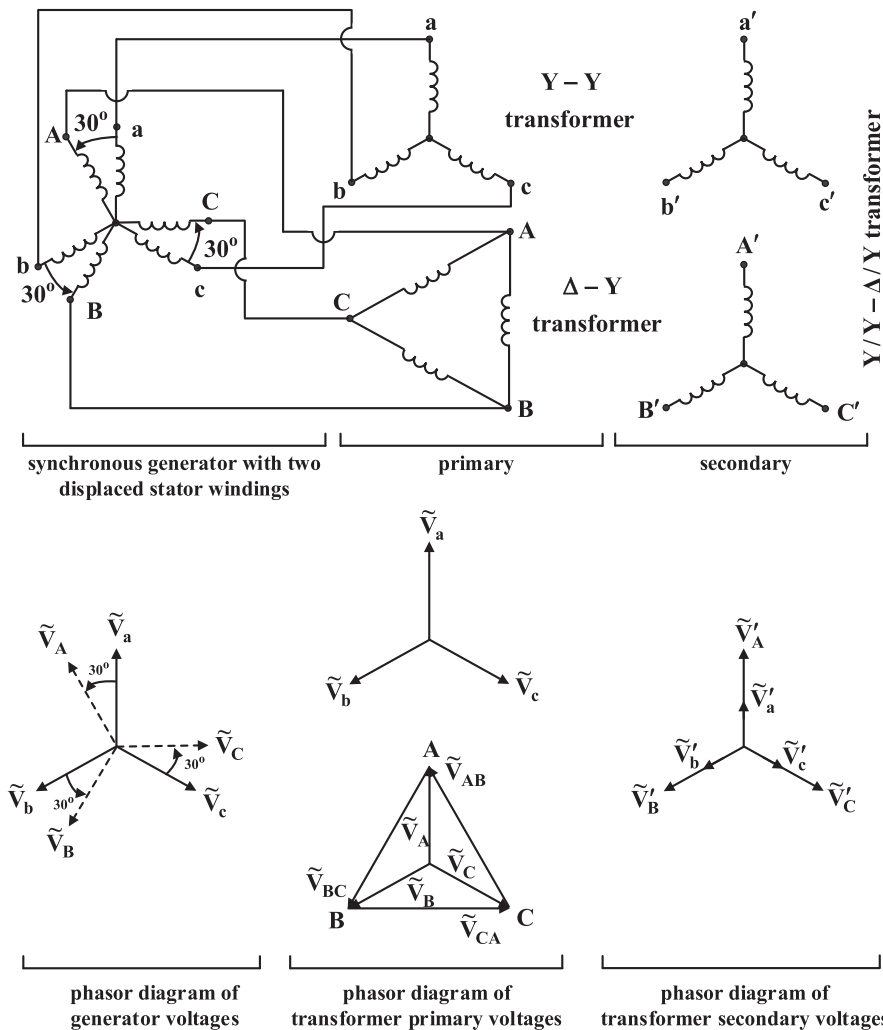


FIG. P4.3.1 Generator-transformer interconnection with two displaced stator windings and a $\Delta/Y-Y$ transformer.

Problem 4.4: Balanced three-phase short-circuit currents of a synchronous machine neglecting influence of amortisseur

A three-phase synchronous generator is initially unloaded and has a rated excitation so that $E_f = 1.0$ pu. At time $t = 0$, a three-phase short circuit is applied. The machine parameters are

direct (d) axis: $X_d = 1.2$ pu, $X_f = 1.1$ pu, $X_m = 1.0$ pu, $R_a = 0.005$ pu, $R_f = 0.0011$ pu;
 quadrature (q) axis: $X_q = 0.8$ pu, $X_m = 0.6$ pu, $R_a = 0.005$ pu.

- (a) Plot the first-half cycle of the torque $T_{3\text{phase_short-circuit}}$ due to the three-phase short circuit neglecting damping and assuming that there is no amortisseur.
- (b) At which angle $\varphi_{\max}$ (measured in degrees) occurs the maximum torque $T_{\max}$ (measured in per unit)?

Problem 4.5: Torque T_{L-L} and induced voltage e_a during the first-half cycle of a line (Line b)-to-line (Line c) short circuit of a synchronous machine neglecting influence of amortisseur

- (a) For the machine parameters of Problem 4.4 calculate and plot the line-to-line torque T_{L-L} for the first half-cycle when phases b and c are short-circuited, and determine at which angle $\varphi_{\max}$ (measured in degrees) the maximum torque (measured in per unit) occurs.
- (b) Plot the induced open-circuit voltage of phase a , that is, $e_a(t)$ (measured in per unit) as a function of the phase angle φ (measured in degrees) for the first half-cycle.

Problem 4.6: Line-to-neutral short-circuit current of a synchronous machine neglecting influence of amortisseur

- (a) For the machine parameters of Problem 4.4 calculate the total (fundamental and harmonics) line-to-neutral short-circuit current i_a for the first half-cycle when phase a and the neutral are short-circuited, and determine at which angle $\varphi_{\max}$ (measured in degrees) the maximum current $i_{L-N_{\max}}$ (measured in per unit) occurs.
- (b) Plot the fundamental short-circuit current of phase a i_{a1} (measured in per unit) for the first half-cycle as a function of the phase angle φ (measured in degrees).

Problem 4.7: Out-of-phase synchronization torque of a synchronous machine neglecting influence of amortisseur

- (a) For the machine parameters of Problem 4.4 calculate and plot for the first half-cycle the out-of-phase synchronizing torque.
- (b) Determine at which angle $\varphi_{\max}$ (measured in degrees) the maximum torque (measured in per unit) occurs.

Problem 4.8: Synchronizing and damping torques of a synchronous machine neglecting influence of amortisseur

For the machine parameters of Problem 4.4 calculate and plot for the first half-cycle the steady-state torque T_0 , the synchronizing torque T_S , and the damping torque T_D . The per-unit transient time constant of the d -axis is $T_d' = 242\text{pu}$ and the per unit voltages $V_{pu} = V_0 = V_{l-n} = V_{l-n0} = 1.0\text{pu}$ may be used.

Problem 4.9: Starting and accelerating torque of a synchronous machine developed by induction motor action neglecting influence of amortisseur

The starting of synchronous generators without amortisseur (damper) winding by induction-motor action is not advisable, as will be demonstrated in this problem. Calculate for a synchronous machine with the parameters $X_d = 1.2\text{pu}$, $X_q = 0.8\text{pu}$, $X_f = 1.1\text{pu}$, $X_m = 1.0\text{pu}$, $R_a = 0.005\text{pu}$, and $R_f = 0.0011\text{pu}$ the starting and accelerating torque T_{starting} as a function of the slip s . To do this, start out from the $dq0$ -coordinate system and transform

it to the fbo [90] coordinate system. Table P4.9.1 presents some of the results. It is the task of this problem to fill in the missing values of this table.

As can be seen from the few entries of this table, a synchronous machine cannot develop any significant induction motor torque without amortisseur winding. Most large synchronous generators have a very rudimentary amortisseur and must not be started by induction-motor action. Small synchronous machines with ratings of less than 1 MW can be equipped with a full amortisseur winding and can be started by induction-motor action.

TABLE P4.9.1 Starting and acceleration torque T_{starting} (pu) of a synchronous machine without amortisseur developed by induction-motor action as a function of slip s (pu)

s (pu)	1.0	0.9	0.8	0.7	0.6	0.5
T_{starting} (pu)	−0.0172				−0.0685	
s (pu)	0.4	0.3	0.25	0.2	0.1	0
T_{starting} (pu)						

Problem 4.10: Design of a brushless DC (permanent-magnet) motor drive [25]

For a hybrid automobile drive, a permanent-magnet motor—as a part of a brushless DC machine—is to be analyzed with the following data:

Motor rating	Stator
Output power $P = 50 \text{ kW}$	Axial length = 300 mm
Efficiency $\eta = 0.95$	Outer diameter $D_{s,\text{out}} = 244 \text{ mm}$
Indirect water cooling	Inner diameter $D_{s,\text{in}} = 170.4 \text{ mm}$
$V_{L-L} = 120 \text{ V}$, $f = 400 \text{ Hz}$	Number of slots in stator 120
$\cos \varphi = 0.9$ lagging (consumer system)	Number of poles 20
Rotor	
Outer diameter $D_{r,\text{out}} = 169.4 \text{ mm}$	
Inner diameter $D_{r,\text{in}} = 140.2 \text{ mm}$	

An encoder is used to sense the rotor speed. For your design it will be helpful to rely on the flux patterns and machine cross section of Fig. P4.10.1A and B. It is recommended to use as permanent-magnet material NdFeB.

- Design the stator winding.
- What is the rated synchronous speed $n_{s,\text{rat}}$?

- (c) Compute the (maximum) height (radial one-sided length) of the permanent magnets $h_{\text{mag_max}}$.
- (d) Calculate the maximum flux density of this machine.
- (e) Determine the leakage inductance L_ℓ (from stator phase a to fictitious rotor winding [permanent magnet]) and the winding resistance R_a of one stator phase.
- (f) Determine the current density J_{stator} , provided the stator winding copper fill factor is $k_{\text{cu}} = 0.7$, and the average stator-slot width is about the same as the average stator-tooth width.

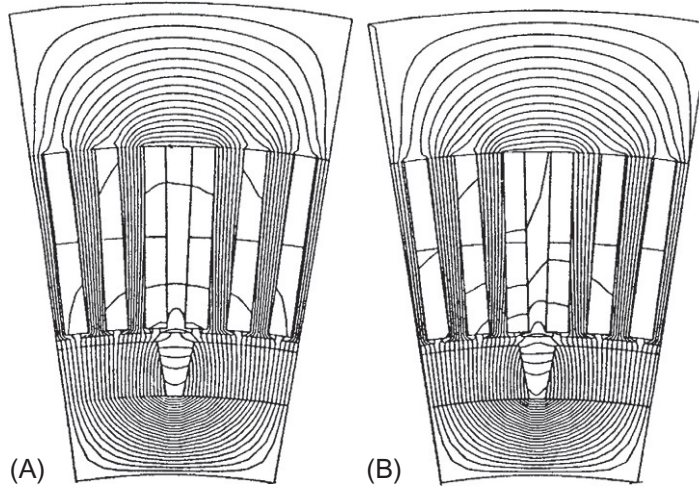


FIG. P4.10.1 No-load (A) and full-load (B) flux patterns of permanent-magnet DC motor where the flux within one tube is ΔA (change in vector potential) = 0.0002 Wb/m .

Problem 4.11: Fourier analyses of terminal currents of a brushless DC motor (permanent-magnet motor with inverter)

Fig. P4.11.1 represents the MOSFET current (upper wave shape) and the input current of a brushless DC motor (lower wave shape). Determine the Fourier coefficients of the motor current wave shape (lower wave shape). Select a certain sampling interval, e.g., $\Delta t = 0.0166 \text{ ms}$, and determine all harmonics including the maximum harmonic h_{max} for which the Nyquist criterion is satisfied. Taking all harmonics up to the maximum h_{max} into account results in the minimum approximation error.

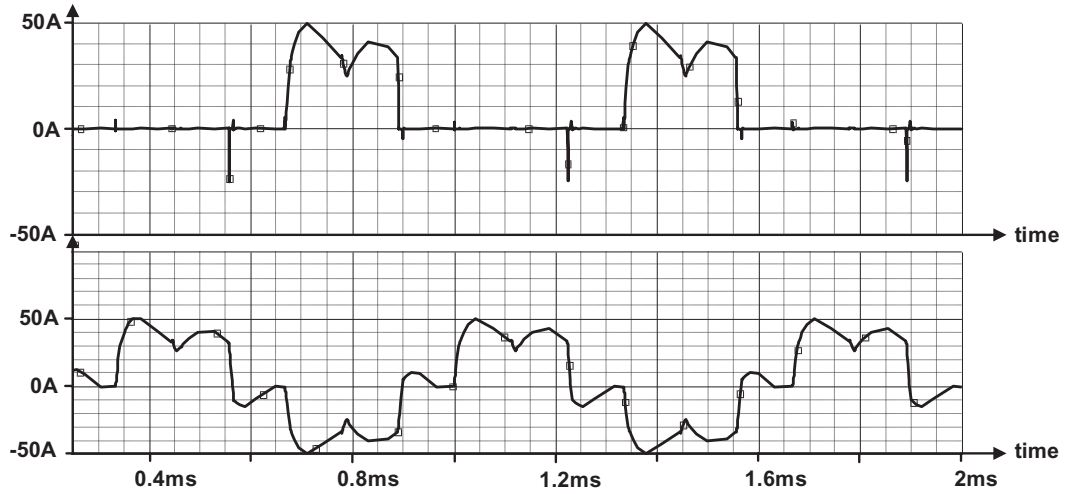


FIG. P4.11.1 Current wave shape of the MOSFET current (upper wave shape), and the input current of a brushless DC motor (lower wave shape).

Problem 4.12: Steady-state frequency variation within an interconnected power system as a result of two load changes [91]

A block diagram of two interconnected areas of a power system (e.g., area #1 and area #2) is shown in Fig. P4.12.1. The two areas are connected by a single transmission line. The power flow over the transmission line will appear as a positive load to one area and an equal but negative load to the other, or vice versa, depending on the direction of power flow.

- (a) For steady-state operation show that with $\Delta\omega_1 = \Delta\omega_2 = \Delta\omega$ the change in the angular velocity (which is proportional to the frequency f) is

$$\Delta\omega = \text{function of } (\Delta P_{L1}, \Delta P_{L2}, D_1, D_2, R_1, R_2) \quad (\text{P4.12.1})$$

and

$$\Delta P_{tie} = \text{function of the same parameters as in Eq. P4.12.1} \quad (\text{P4.12.2})$$

- (b) Determine values for $\Delta\omega$ (Eq. P4.12.1), ΔP_{tie} (Eq. P4.12.2), and the new frequency f_{new} , where the nominal (rated) frequency is $f_{rated} = 60\text{Hz}$, for these parameters: $R_1 = 0.05\text{pu}$, $R_2 = 0.1\text{pu}$, $D_1 = 0.8\text{pu}$, $D_2 = 1.0\text{pu}$, $\Delta P_{L1} = 0.2\text{pu}$, $\Delta P_{L2} = -0.3\text{pu}$.
- (c) For a base apparent power $S_{base} = 1000\text{MVA}$ compute the power flow across the transmission line.
- (d) How much is the load increase in area #1 (ΔP_{mech1}) and area #2 (ΔP_{mech2}) due to the two load steps?

- (e) How would you change R_1 and R_2 in case R_1 is either a wind or solar power plant operating at its maximum power point (and cannot accept any significant load increase due to the two load steps) and R_2 is a coal fired plant that can be overloaded, and serve as a frequency leader?

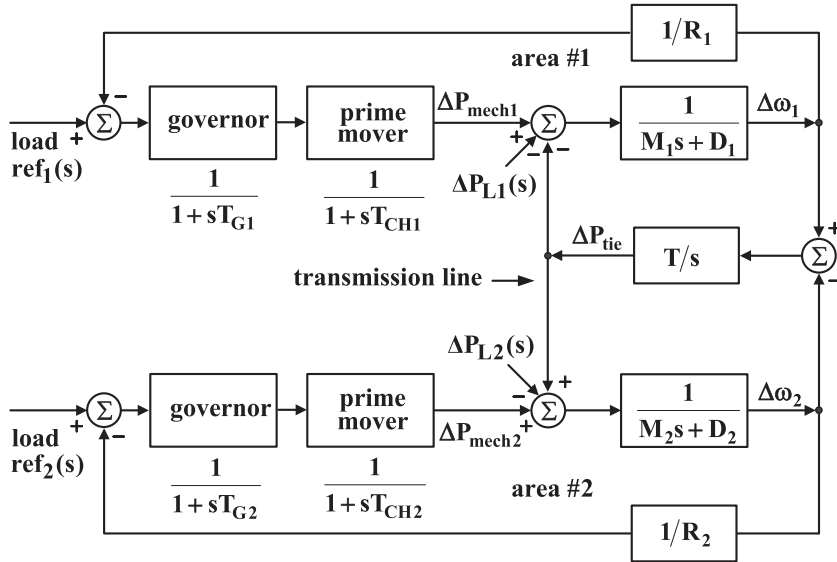


FIG. P4.12.1 Interconnected power system consisting of area #1 and area #2.

Problem 4.13: Frequency control of an isolated power plant (islanding operation)

Fig. P4.13.1 illustrates the block diagram of governor, prime mover (steam turbine), and rotating mass and load of a turbogenerator set. For the frequency change ($\Delta\omega$) per generator output power change (ΔP), $R = \frac{\Delta\omega}{\Delta P}$ pu = 0.01 pu, the load change (ΔP_L) per frequency change $D = \frac{\Delta P_L}{\Delta\omega}$ pu = 0.8 pu, step load change $\Delta P_L(s) = \frac{\Delta P_L}{s}$ pu = $\frac{0.2}{s}$ pu, angular momentum of steam turbine and generator set $M = 4.5$, base apparent power $S_{base} = 500$ MVA, governor time constant $T_G = 0.01$ s, valve charging time constant $T_{CH} = 1.0$ s, load reference set point = 1.0.

- Derive for Fig. P4.13.1 $\Delta\omega_{steady\ state}$ by applying the final-value theorem. You may assume the load reference set point(s) = 0 and $\Delta P_L(s) = \frac{\Delta P_L}{s}$ pu = $\frac{0.2}{s}$ pu, where s is the Laplace operator.
- List the ordinary differential equations and the algebraic equations of the block diagram of Fig. P4.13.1.
- Use either Mathematica or MATLAB to establish steady-state conditions by imposing a step function for load reference set point(s) = $\frac{1}{s}$ pu and run the program with a zero step-load change $\Delta P_L = 0$ for 5 s. After 5 s impose a step load change of $\Delta P_L(s) = \frac{\Delta P_L}{s}$ pu = $\frac{0.2}{s}$ pu to find the transient response of $\Delta\omega(t)$.

- (d) Use Mathematica or MATLAB to establish steady-state conditions by imposing a step function for load reference set point $(s) = \frac{1}{s}$ pu and run the program with a zero step-load change $\Delta P_L = 0$ for 5s. After 5s impose a step load change of $\Delta P_L(s) = \frac{\Delta P_L}{s}$ pu $= \frac{-0.2}{s}$ pu to find the transient response of $\Delta \omega(t)$.

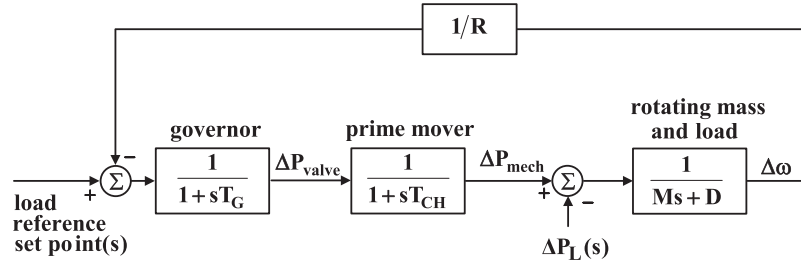


FIG. P4.13.1 Block diagram of governor, prime mover, rotating mass, and load.

Problem 4.14 Frequency control of an interconnected power system broken into two areas, each having one generator

Fig. P4.12.1 shows the block diagram of two generators interconnected by a tie line (transmission line). Data of generation set (steam turbine and generator) #1:

For frequency change $(\Delta \omega_1)$ per generator output power change (ΔP_1) : $R_1 = \frac{\Delta \omega_1}{\Delta P_1}$ pu = 0.01 pu.

The load change (ΔP_{L1}) per frequency change $(\Delta \omega_1)$: $D_1 = \frac{\Delta P_{L1}}{\Delta \omega_1}$ pu = 0.8 pu, step-load change: $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s}$ pu $= \frac{0.2}{s}$ pu, angular momentum of steam turbine and generator set: $M_1 = 4.5$.

Base apparent power: $S_{base} = 500$ MVA, governor time constant: $T_{G1} = 0.01$ s, valve charging time constant: $T_{CH1} = 1.0$ s, (load reference set point)₁ = load ref₁(s) = 0.8 pu.

Data of generation set (steam turbine and generator) #2: for frequency change $(\Delta \omega_2)$ per change in generator output power (ΔP_2) : $R_2 = \frac{\Delta \omega_2}{\Delta P_2}$ pu = 0.02 pu, the load change (ΔP_{L2}) per frequency change $(\Delta \omega_2)$: $D_2 = \frac{\Delta P_{L2}}{\Delta \omega_2}$ pu = 1 pu, step load change: $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s}$ pu $= \frac{-0.2}{s}$ pu, angular momentum of steam turbine and generator set: $M_2 = 6$, base apparent power: $S_{base} = 500$ MVA, governor time constant: $T_{G2} = 0.02$ s, valve charging time constant: $T_{CH2} = 1.5$ s, (load reference set point)₂ = load ref₂(s) = 0.8 pu. Data for tie line: $T = 377/X_{tie}$ with $X_{tie} = 0.2$ pu.

- List the ordinary differential equations and the algebraic equations of the block diagram of Fig. P4.12.1.
- Use either Mathematica or MATLAB to establish steady-state conditions by imposing a step function for load reference set point(s)₁ = load ref₁(s) = $\frac{0.8}{s}$ pu, load reference set point(s)₂ = load ref₂(s) = $\frac{0.8}{s}$ pu and run the program with a zero step-load changes $\Delta P_{L1} = 0$, $\Delta P_{L2} = 0$ for 10s. After additional 5s impose step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s}$ pu $= \frac{0.2}{s}$ pu, and after additional 2s impose $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s}$ pu $= \frac{-0.2}{s}$ pu to find the transient responses $\Delta \omega_1(t)$ and $\Delta \omega_2(t)$.
- Replace in program for part (b) $R1 = 0.01$ by $R1 = 0.5$; replace $DPL1[t_]$: = If[t<5,0,0.2] by $DPL1[t_]$: = 0.1; replace $R2 = 0.02$ by $R2 = 0.01$; replace $DPL2[t_]$: = If[t<7,0,-0.2] by $DPL2[t_]$: = -0.1.

Problem 4.15: Determination of the sequence-component equivalent circuits and matrices $Z_{bus}^{(1)}$, $Z_{bus}^{(2)}$, $Z_{bus}^{(0)}$ line-to-ground (neutral), and line-to-line fault currents at bus 2 of Fig. P4.15.1 [92]

Two synchronous generators are connected through three-phase transformers to a transmission line, as shown in Fig. P4.15.1. The ratings and reactances of the generators and transformers are.

1. Generators 1 and 2: 600MVA, 34.5kV.

$$X_d'' = X_{1,gen} = X_{2,gen} = 25\% = 0.25 \text{ pu}, \quad X_{0,gen} = 10\% = 0.10 \text{ pu},$$

and

$$X_{n_grounding_coil} = 8\% = 0.08 \text{ pu}.$$

2. Transformer T_1 rating is 600MVA, (34.5kV connected in Δ)/(345kV connected in Y).

$X_{\text{transformer leakage}} = 10\% = 0.10 \text{ pu}$. Note that the Y of transformer T_1 is grounded.

3. Transformer T_2 rating is 600MVA, (34.5kV connected in Δ)/(345kV connected in Y).

$X_{\text{transformer leakage}} = 20\% = 0.20 \text{ pu}$. Note that the Y of transformer T_2 is not grounded.

4. On a chosen base of $S_{\text{base}} = 600 \text{ MVA}$, $V_{L-L \text{ base}} = 345 \text{ kV}$ in the transmission-line circuit, the line reactances are $X_{1_line} = X_{2_line} = 10\% = 0.10 \text{ pu}$ and $X_{0_line} = 30\% = 0.30 \text{ pu}$.

- (a) Draw each of the three (positive-, negative-, zero-) sequence networks.
- (b) Determine the zero-, positive-, and negative-sequence bus impedance (reactance) matrices by means of the Z_{bus} building algorithm, as described in Chapter 8 of Ref. [92].
- (c) Apply the matrix reduction technique by Kron, as outlined in Chapter 7 of Ref. [92].
- (d) Determine numerical value (subtransient) for the line-to-ground fault current when the fault occurs at bus 2 of Fig. P4.15.1.
- (e) Determine numerical value (subtransient) for the line-to-line fault current when the fault occurs at bus 2 of Fig. P4.15.1.

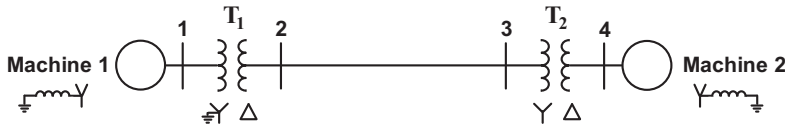


FIG. P4.15.1 Single-line diagram of a two-machine system connected via transformers and transmission line.

Problem 4.16 Analysis of a synchronous machine feeding a rectifier charging a supercapacitor bank and supplying a three-phase power system via current-controlled voltage-source inverter

One of the major problems in using wind and solar energy is energy storage. Wind or solar energy may not be available when it is needed. A report from a wind farm in New Mexico states that the wind farm could lose as much as 60MW within a minute. For example, there

are several scenarios of how the power change of 60 MW per minute can be mitigated through complementary albeit more expensive power sources: one of them is the combination of a compressed-air power plant with a supercapacitor plant for bridging the time from when the wind power plant output decreases (60 MW per minute) to when the compressed-air energy storage (CAES) plant can take over. A CAES plant requires a start-up time of about 6 min. To bridge this 6 min start-up time required for a 100 MW compressed-air power plant, supercapacitors or ultra-capacitors are proposed to provide up to 100 MW during a 6 min interval amounting to a required energy storage of 10 MWh. Inverters fed from supercapacitors can deliver power within milliseconds to the power system replacing the lost power of 60 MW per minute almost instantaneously. This combination of compressed-air power plant and supercapacitors or ultra-capacitors as bridging energy sources can be employed for peak-power operation as well as for improving power quality by preventing short brownouts or blackouts.

Fig. P4.16.1 depicts the block diagram of such a supercapacitor plant consisting of wind turbine, mechanical gear, synchronous generator, three-phase rectifier, supercapacitor bank, three-phase inverter, transformer, and power system.

- (a) Design a controlled three-phase rectifier in the tens of kilowatts range. Fig. P4.16.2 shows the three-phase rectifier of Fig. P4.16.1 with six diodes and one self-commutated switch, an insulated-gate bipolar transistor (IGBT). The nominal phase voltages of the generator can be assumed to be $v_{an} = 1200 V \sin \omega t$, $v_{bn} = 1200 V \sin(\omega t - 120^\circ)$, and $v_{cn} = 1200 V \sin(\omega t - 240^\circ)$ at $f = 60 \text{ Hz}$. The IGBT is gated with a switching frequency of 1 kHz and you may assume a duty cycle of $\delta = 50\%$. $C_{f1} = 200 \mu\text{F}$, $L_{f1} = 10 \text{ mH}$, $C_{f2} = 50 \mu\text{F}$, ideal diodes D_1 to D_6 and D_f , $v_{gs} = 40 \text{ V}$ magnitude, $R_{sd} = 10 \Omega$, $R_{ss} = 1 \text{ k}\Omega$, $C_{sd} = 10 \text{ pF}$, $C_{ss} = 10 \text{ pF}$, $C_f = 1000 \mu\text{F}$, $L_f = 1 \text{ mH}$, and $R_{load} = 10 \Omega$.
 - (1) Perform a PSpice analysis and plot rectifier output voltage $v_{load}(t)$, generator phase current i_{aphase} , and the generator phase voltage $v_a(t)$.
 - (2) Subject the generator phase voltage and current as well as the rectifier output voltage to a Fourier analysis.
 - (3) Determine the displacement power factor of the generator.
 - (4) Determine the efficiency of the rectifier.
- (b) Design PWM (pulse-width-modulated) three-phase current-controlled, voltage-source inverter feeding power into the utility system via $Y_{\text{grounded}}/\Delta$ transformer in the tens of kilowatts range. The inverter circuit of Fig. P4.16.3 is to be analyzed with PSpice where the DC voltage is $V_{DC} = 1290.6 \text{ V}$, AC output line-to-line (amplitude) voltage of the inverter is $V_{acL-L} = 633.91 \text{ V}$, and the switching frequency of the IGBTs is $f_{\text{switch}} = 7.2 \text{ kHz}$. $C_{\text{filter}} = 1000 \mu\text{F}$, $L_w = 1 \text{ mH}$, $R_w = 10 \text{ m}\Omega$, $L_f = 45 \mu\text{H}$, $C_f = 10.3 \mu\text{F}$, $R_f = 10 \text{ m}\Omega$, $L_{\text{syst}} = 265 \mu\text{H}$, $R_{\text{syst}} = 50 \text{ m}\Omega$. The power system phase voltages are $v_{\text{agrid}}(t) = 7200 \text{ V} \sin(\omega t + 36^\circ)$, $v_{\text{bgrid}}(t) = 7200 \text{ V} \sin(\omega t - 84^\circ)$, and $v_{\text{cgrid}}(t) = 7200 \text{ V} \sin(\omega t - 204^\circ)$. The modulation index is $m = V_{\text{ph}} \cdot 2 \sqrt{2} / V_{DC} = [(366 / \sqrt{2}) \cdot 2 \cdot \sqrt{2}] / 1290.6 = 0.567$; such a low value makes that a leading power factor possible. The currents delivered to the power system lead the respective voltages and a leading fundamental (displacement) power factor $\cos \phi = 0.809$ exists resulting in the inverter three-phase voltages $v_{\text{asyst}}(t) = 366 \text{ V} \sin(\omega t + 36^\circ)$, $v_{\text{bsyst}}(t) = 366 \text{ V} \sin(\omega t - 84^\circ)$, and $v_{\text{csyst}}(t) = 366 \text{ V} \sin(\omega t - 204^\circ)$. The power system voltages $v_{\text{agrid}}(t)$, $v_{\text{bgrid}}(t)$, and $v_{\text{cgrid}}(t)$ are referred to the Δ of the Y/Δ transformer.

- (1) Using PSpice calculate and plot input and output voltages and currents of the inverter, provided the output voltage is a sinusoid as given by the power system.
- (2) Subject the output current of the inverter to a Fourier analysis.
- (3) Determine input real power and output real power of inverter and its efficiency.
- (4) Determine the transformation ratio of the Y/Δ transformer between inverter and power system; you may assume ideal transformer conditions.
- (5) Determine the overall costs of this power plant if a specific cost of \$4000/kW installed capacity is assumed. Note that a coal-fired plant has a specific cost of \$2000/kW installed capacity.

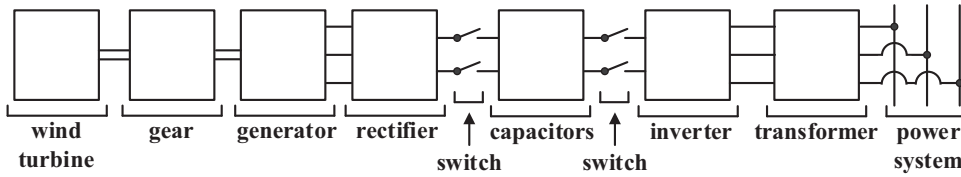


FIG. P4.16.1 Block diagram for charging and discharging supercapacitor bank.

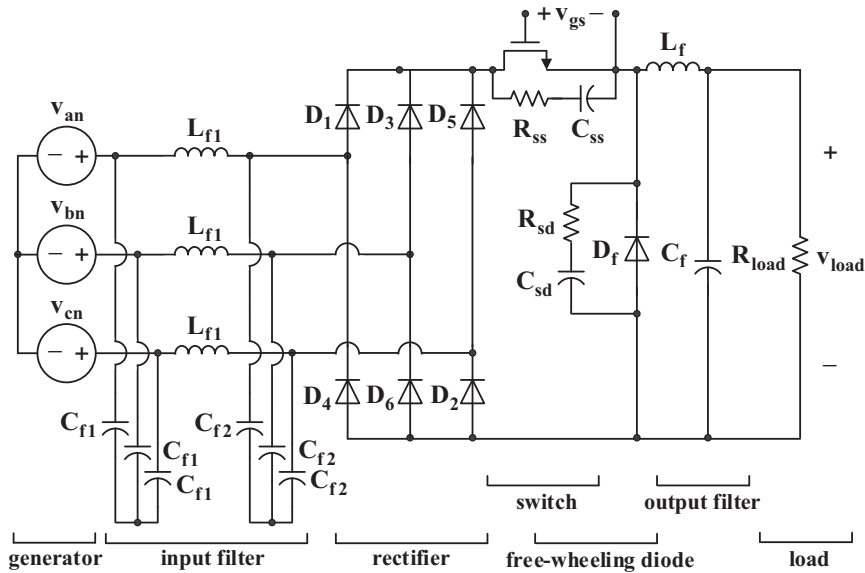


FIG. P4.16.2 Controlled three-phase rectifier.

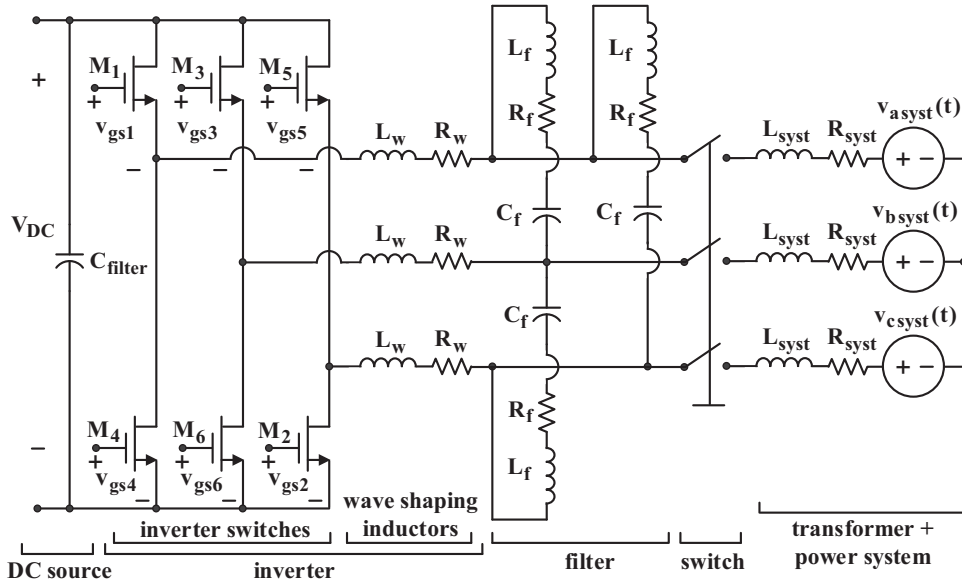


FIG. P4.16.3 PWM (pulse-width-modulated) three-phase current-controlled, voltage-source inverter.

Problem 4.17 Voltage stress in a synchronous motor winding fed through a cable of 2m length by a PWM current-source inverter

Voltage and current ripples due to PWM current-source inverters cause voltage stress in windings of machines. The configuration of Fig. E3.14.1 represents the first two turns of the winding of an induction motor, which is assumed to be identical to the winding of a synchronous motor. Each turn can be represented by four segments having an inductance L_i , a resistance R_i , a capacitance to ground (frame) C_i , and some interturn capacitances C_{ij} and inductances L_{ij} . Fig. E3.14.2 represents a detailed equivalent circuit for the configuration of Fig. E3.14.1.

To simplify the analysis neglect the capacitances C_{ij} and the inductances L_{ij} . This leads to the circuit Fig. E3.14.3, where the winding is fed by a PWM current source. One obtains the 15 differential equations as listed below.

$$\frac{dv_1}{dt} = \frac{i_s}{C_1} - \frac{G_1}{C_1} v_1 - \frac{i_2}{C_1}, \quad (\text{P4.17.1})$$

$$\frac{di_2}{dt} = -\frac{R_2}{L_2} i_2 - \frac{v_2}{L_2} + \frac{v_1}{L_2}, \quad (\text{P4.17.2})$$

$$\frac{dv_2}{dt} = \frac{i_2}{C_2} - \frac{G_2}{C_2} v_2 - \frac{i_3}{C_2}, \quad (\text{P4.17.3})$$

$$\frac{di_3}{dt} = -\frac{R_3}{L_3} i_3 - \frac{v_3}{L_3} + \frac{v_2}{L_3}, \quad (\text{P4.17.4})$$

$$\frac{dv_3}{dt} = \frac{i_3}{C_3} - \frac{G_3}{C_3}v_3 - \frac{i_4}{C_3}, \quad (\text{P4.17.5})$$

$$\frac{di_4}{dt} = -\frac{R_4}{L_4}i_4 - \frac{v_4}{L_4} + \frac{v_3}{L_4}, \quad (\text{P4.17.6})$$

$$\frac{dv_4}{dt} = \frac{i_4}{C_4} - \frac{G_4}{C_4}v_4 - \frac{i_5}{C_4}, \quad (\text{P4.17.7})$$

$$\frac{di_5}{dt} = -\frac{R_5}{L_5}i_5 - \frac{v_5}{L_5} + \frac{v_4}{L_5}, \quad (\text{P4.17.8})$$

$$\frac{dv_5}{dt} = \frac{i_5}{C_5} - \frac{G_5}{C_5}v_5 - \frac{i_6}{C_5}, \quad (\text{P4.17.9})$$

$$\frac{di_6}{dt} = -\frac{R_6}{L_6}i_6 - \frac{v_6}{L_6} + \frac{v_5}{L_6}, \quad (\text{P4.17.10})$$

$$\frac{dv_6}{dt} = \frac{i_6}{C_6} - \frac{G_6}{C_6}v_6 - \frac{i_7}{C_6}, \quad (\text{P4.17.11})$$

$$\frac{di_7}{dt} = -\frac{R_7}{L_7}i_7 - \frac{v_7}{L_7} + \frac{v_6}{L_7}, \quad (\text{P4.17.12})$$

$$\frac{dv_7}{dt} = \frac{i_7}{C_7} - \frac{G_7}{C_7}v_7 - \frac{i_8}{C_7}, \quad (\text{P4.17.13})$$

$$\frac{di_8}{dt} = -\frac{R_8}{L_8}i_8 - \frac{v_8}{L_8} + \frac{v_7}{L_8}, \quad (\text{P4.17.14})$$

$$\frac{dv_8}{dt} = \frac{i_8}{C_8} - v_8 \left(\frac{1}{ZC_8} + \frac{G_8}{C_8} \right). \quad (\text{P4.17.15})$$

The parameters are

$$R_1 = R_2 = R_3 = R_4 = R_5 = R_6 = R_7 = R_8 = 25 \mu\Omega.$$

$$L_1 = L_3 = L_5 = L_7 = 1 \text{ mH}, \text{ and } L_2 = L_4 = L_6 = L_8 = 10 \text{ mH}.$$

$$C_1 = 0.2 \mu\text{F} \text{ for the cable of 2 m length.}$$

$$C_3 = C_5 = C_7 = 0.7 \text{ pF}, C_2 = C_4 = C_6 = C_8 = 7 \text{ pF}, C_{15} = C_{37} = 0.35 \text{ pF}, C_{26} = C_{48} = 3.5 \text{ pF}.$$

$$G_1 = G_3 = G_5 = G_7 = 1/(5000 \Omega), G_2 = G_4 = G_6 = G_8 = 1/(500 \Omega).$$

$$L_{15} = L_{37} = 0.005 \text{ mH}, L_{26} = L_{48} = 0.01 \text{ mH}.$$

$$Z \text{ is either } 1 \mu\Omega \text{ (short circuit) or } 1 \text{ M}\Omega \text{ (open circuit).}$$

Assume a PWM triangular current-step function $i_s(t)$, as indicated in Fig. E3.14.4. Using Mathematica or MATLAB compute all state variables for the time period from $t = t_{\text{calculate}} = 0$ to 2.1 ms. Plot the voltages $(v_1 - v_5)$, $(v_2 - v_6)$, $(v_3 - v_7)$, and $(v_4 - v_8)$ from $t = 0$ to $t_{\text{plot}} = 2 \text{ ms}$. Note that the computing time $t = t_{\text{calculate}} = 2.1 \text{ ms}$ must be larger than the plot time $t = t_{\text{plot}} = 2 \text{ ms}$.

References

- [1] A. Blondel, Application de la methode des deux reactions a l'etude de phenomenes oscillatoires des alternateurs couples, *Rev. Gen. Electr.* 13 (1923). pp. 235, 275, 331, 387, 515.
- [2] R.E. Doherty, C.A. Nickle, Synchronous machines I and II, an extension of Blondel's two-reaction theory, *Trans. AIEE* 45 (1926) 912–927.
- [3] R.E. Doherty, C.A. Nickle, Synchronous machines III, *Trans. AIEE* 46 (1927) 1.
- [4] R.H. Park, Two-reaction theory of synchronous machines, generalized method of analysis, part I, *Trans. AIEE* 48 (1929) 716–730.
- [5] R.H. Park, Two-reaction theory of synchronous machines II, *Trans. AIEE* 52 (1933) 352–355.
- [6] L.A. Kilgore, Effects of saturation on machine reactances, *Trans. AIEE* 54 (1930) 545–550.
- [7] C. Concordia, *Synchronous Machines Theory and Performance*, John Wiley & Sons, New York, 1951.
- [8] W.V. Lyon, *Transient Analysis of Alternating Current Machinery*, John Wiley & Sons, New York, 1954.
- [9] <http://www.fes-muenchen.de/rund/herbst.99/walchsee>.
- [10] E. Clarke, *Circuit Analysis of AC Power Systems*, vol. II, John Wiley & Sons, 1950.
- [11] J.D. Roark, C.A. Fross, Unbalanced synchronous machine analysis using frequency domain methods, in: *Proceeding IEEE Power Engineering Society Summer Meeting*, Los Angeles, CA, 1978. paper 78SM S24-1.
- [12] W.W. Xu, H.W. Dommel, J.R. Marti, A synchronous machine model for three-phase harmonic analysis and EMTP initialization, *IEEE Trans. Power Syst.* 6 (4) (1991) 1530–1538.
- [13] A. Medina, J. Arrillaga, J.F. Eggleston, A synchronous machine model in the harmonic domain, in: *Proceeding International Conference on Electrical Machines*, Manchester, UK, September 1992, pp. 647–651.
- [14] P. Subramaniam, P.P. Malik, Digital simulation of a synchronous generator in direct-phase coordinates, *Proc. Inst. Electr. Eng.* 118 (1) (1971) 153–160.
- [15] J. Arrillaga, J.G. Campos-Barros, H.J. Al-Kashali, Dynamic modeling of single generators connected to HVDC converters, *IEEE Trans. Power Appar. Syst.* 97 (4) (1978) 1018–1029.
- [16] J.R. Marti, K.W. Louie, A phase-domain synchronous generator model including saturation effects, *IEEE Trans. Power Appar. Syst.* 12 (1) (1997) 222–229.
- [17] O. Rodriguez, A. Medina, Fast periodic steady-state solution of a synchronous machine model incorporating the effects of magnetic saturation and hysteresis, in: *Presented at IEEE PES Winter Meeting*, 28 January–1 February, Columbus, OH, vol. 3, 2001, pp. 1431–1436.
- [18] E.F. Fuchs, G.A. McNaughton, Comparison of first-order finite difference and finite element algorithms for the analysis of magnetic fields, part I: theoretical analysis, *IEEE Trans. Power Appar. Syst.* PAS-101 (5) (1982) 1170–1180. Comparison of first-order finite difference and finite element algorithms for the analysis of magnetic fields, part II: numerical results, *IEEE Trans. Power Appar. Syst.* PAS-101(5) (1982) 1181–1201.
- [19] E.F. Fuchs, K. Senske, Comparison of iterative solutions of the finite difference method with measurements as applied to Poisson's and the diffusion equations, *IEEE Trans. Power Appar. Syst.* PAS-100 (8) (1981) 3983–3992.
- [20] E.A. Erdelyi, E.F. Fuchs, Non-linear electrical generator study final report on phase "B", part II non-linear synchronous alternators, Contract No. N00014-67-A-405-0003, Project No. 097-374/5-19-70, Code 473, University of Colorado, July 1972.
- [21] E.F. Fuchs, E.A. Erdelyi, Nonlinear theory of turbogenerators, part I: magnetic fields at no-load and balanced loads, *IEEE Trans. Power Appar. Syst.* PAS-92 (2) (1973) 583–591. Nonlinear theory of turbogenerators, part II: load-dependent synchronous reactances, *IEEE Trans. Power Appar. Syst.* PAS-92(2) (1973) 592–599.
- [22] E.F. Fuchs, Lastabhängige transiente Reaktanzen von gesättigten Turbogeneratoren, *Arch. Elektrotechn.* 55 (1973) 263–273.
- [23] A.M. El-Serafi, A.S. Abdallah, M.K. El-Sherbiny, E.H. Badawy, Experimental study of the saturation and the cross-magnetizing phenomenon in saturated synchronous machines, *IEEE Trans. Energy Convers.* 3 (4) (1988) 815–823.
- [24] E.F. Fuchs, G. Pohl, Computer generated polycentric grid design and a novel dynamic acceleration of convergence for the iterative solution of magnetic fields based on the finite difference method, *IEEE Trans. Power Appa. Syst.* PAS-100 (8) (1981) 3911–3920.
- [25] E.F. Fuchs, A.A. Fardoun, Simulation of controller-motor drive system using PSpice, Final Report prepared for Unique Mobility, Inc., Englewood, Colorado, University of Colorado, January 1991.
- [26] A.A. Fardoun, E.F. Fuchs, H. Huang, Modeling and simulation of an electronically commutated permanent-magnet machine drive system using SPICE, *IEEE Trans. Ind. Appl.* 30 (4) (1994) 927–937.

- [27] E. Muljadi, J. Green, Cogging torque reduction in a permanent magnet wind turbine generator, in: Proceedings of the 21st American Society of Mechanical Engineers Wind Energy Symposium, Reno, Nevada, January 14–17, 2002.
- [28] G.K. Dubey, *Power Semiconductor Controlled Drives*, Prentice Hall, Englewood Cliffs, New Jersey, 1989.
- [29] D. Yildirim (Ed.), *Commissioning of a 30 kVA Variablespeed, Direct-Drive Wind Power Plant*, University of Colorado, Boulder, Colorado, 1999 (Ph.D. Thesis).
- [30] D. Yildirim, E.F. Fuchs, T. Batan, Test results of a 20 kW, direct-drive, variable-speed wind power plant, in: Proceedings of the International Conference on Electrical Machines, Istanbul, Turkey, September 2–4, 1998, pp. 2039–2044.
- [31] H. Palmer, EE 673, *Advanced synchronous machinery*, Class Notes, University of Colorado, 1967.
- [32] E.F. Fuchs, *Parallelschalteneinrichtungen (Diplomarbeit)*, Technical University of Stuttgart, Germany, 1967.
- [33] E.F. Fuchs, Automatic paralleling of power systems, in: Proceedings of the 1969 Midwest Power Symposium, University of Minnesota, October 1969.
- [34] E.F. Fuchs, Automatic paralleling of power systems, in: Proceedings of the Third Pan American Congress of Mechanical, Electrical, and Allied Engineering Branches, San Juan, Puerto Rico, September 6–13, 1969. Paper 30.
- [35] J.S. Joyce, T. Kulig, D. Lambrecht, Torsional fatigue of turbine-generator shafts caused by different electrical system faults and switching operations, *IEEE Trans. Power Appar. Syst.* PAS-97 (1978) 1965–1977.
- [36] J.S. Joyce, T. Kulig, D. Lambrecht, The impact of high-speed reclosure of single and multiphase system faults on turbine-generator shaft torsional fatigue, *IEEE Trans. Power Appar. Syst.* PAS-99 (1980) 1764–1779.
- [37] A.M. El-Serafi, S.O. Faried, Effect of sequential reclosure of multi-phase system faults on turbine-generator shaft torsional torques, *IEEE Trans. Power Syst.* 6 (4) (1991) 1380–1388.
- [38] T.J. Hammons, C.K. Lim, Probability assessment of turbine-generator shaft torque following severe disturbances on the system supply, *IEEE Trans. Energy Convers.* 14 (4) (1999) 1115–1123.
- [39] P. Ledesma, J. Usaola, Minimum voltage protections in variable speed wind farms, in: 2001 IEEE Porto Power Tech Proceedings, vol. 4, 10–13 Sept, 2001. 6 pp.
- [40] E.F. Fuchs, Industrial experience with the relaxation solutions of the quasi-Poissonian differential equation, in: Proceedings of International Conference on Electrical Machines, Vienna, Austria, September 1315, 1976. pp. D20-1 to 10.
- [41] T.S. Kulig, G.W. Buckley, D. Lambrecht, M. Liese, A new approach to determine transient generator winding and damper currents in case of internal and external faults and abnormal operation, part 1: fundamentals, in: Paper presented at IEEE Winter Meeting, New Orleans, 1986.
- [42] T.S. Kulig, G.W. Buckley, D. Lambrecht, M. Liese, A new approach to determine transient generator winding and damper currents in case of internal and external faults and abnormal operation, part 2: analysis, in: Paper Presented at IEEE Winter Meeting, New Orleans, 1986.
- [43] T.S. Kulig, G.W. Buckley, D. Lambrecht, M. Liese, A new approach to determine transient generator winding and damper currents in case of internal and external faults and abnormal operation, part 3: results, *IEEE Trans. Energy Convers.* 5 (1) (1990) 70–78.
- [44] L.J. Fingersh, *The Testing of a Low-Speed, Permanent-Magnet Generator for Wind Power Applications* (M.S. Thesis), University of Colorado, Boulder, 1995.
- [45] K.H. Bergey, The Lanchester-Betz limit, *J. Energy* 3 (6) (1979) 382–384.
- [46] G.A.M. van Kuik, *The Lanchester-Betz-Joukowski Limit*, Wiley Interscience, February 14, 2007. www.interscience.wiley.com. <https://doi.org/10.1002/we.218>.
- [47] N.E. Joukowski, Windmill of the NEJ type, Transactions of the Central Institute for Aero-Hydrodynamics of Moscow. Also published in N.E. Joukowski, *Collected Papers*, vol. VI. The Joukowski Institute for Aero-Hydrodynamics, Moscow, vol. VI, 1937, pp. 405–409 (in Russian). Also published in Gautier-Villars et Cie (Eds.), *Theorie Tourbillonnaire de l'Helice Propulsive*, Quatrieme Memoire, 1929, pp. 123–146, Paris (in French), 1920.
- [48] N.E. Joukowski, Fourth Paper Published in the Transactions of the Office for Aerodynamic Calculations and Essays of the Superior Technical School of Moscow (in Russian), 1918.
- [49] P.W. Franklin, Theory of the three-phase, salient-pole type generator with bridge rectified output, parts I and II, *IEEE Trans. Power Appar. Syst.* PAS-91 (1972) 1960–1975.
- [50] J. Jatskevich, S.D. Pekarek, A. Davoudi, Parametric average-value model of synchronous machine-rectifier systems, *IEEE Trans. Energy Convers.* 21 (1) (2006) 9–18.

- [51] I. Jadric, D. Borojevic, M. Jadric, Modeling and control of a synchronous generator with an active DC load, *IEEE Trans. Power Electron.* 15 (2) (2000) 303–311.
- [52] A. Abolins, H. Achenbach, D. Lambrecht, Design and performance of large four-pole turbogenerators with semiconductor excitation for nuclear power stations, 1972. Cigre-Report, Session, August 28–September, Paper No 11-04.
- [53] E.F. Fuchs, Numerical Determination of Synchronous, Transient, and Subtransient Reactances of a Synchronous Machine (Ph.D. Thesis), University of Colorado, Boulder, Colorado, 1970.
- [54] <http://www.enercon.de/de-de/66.htm>.
- [55] T. Batan, Real-Time Monitoring and Calculation of the Derating of Single-Phase Transformers Under Non-Sinusoidal Operation (Ph.D. Thesis), University of Colorado, Boulder, 1999.
- [56] G. Gallegos-Lopez, P.C. Kjaer, T.J.E. Miller, A new sensorless method for switched reluctance motor drives, *IEEE Trans. Ind. Appl.* 34 (4) (1998) 832–840.
- [57] D.A. Staton, W.L. Soong, T.J.E. Miller, Unified theory of torque production in switched reluctance and synchronous reluctance motors, *IEEE Trans. Ind. Appl.* 31 (2) (1995) 329–337.
- [58] T.J.E. Miller, Faults and unbalance forces in the switched reluctance machine, *IEEE Trans. Ind. Appl.* 31 (2) (1995) 319–328.
- [59] J.A. Forster, L.F. Klataske, IEEE working group report of problems with hydrogenerator thermoset stator windings, *IEEE Trans. Power Appar. Syst.* PAS-100 (7) (1981) 3292–3300.
- [60] J.A. Stratton, *Electromagnetic Theory*, McGraw-Hill Book Company, New York and London, 1941, pp. 153–155.
- [61] C.J. Carpenter, Surface-integral methods of calculating forces on magnetized iron parts, *Proc. IEEE* 106C (1960) 19–28.
- [62] K. Reichert, H. Freundl, W. Vogt, The calculation of forces and torques within numerical magnetic field calculation methods, in: *Proceedings of Compumag Conference*, London, 1976.
- [63] P.M. Hart, W.J. Bonwick, Harmonic modeling of synchronous machine, *IEE Proc. Electr. Power Appl.* 135 (2) (1988) 5258.
- [64] H. Chen, Y. Long, X.P. Zhang, More sophisticated synchronous machine model and the relevant harmonic power flow study, *IEE Proc. Trans. Distrib.* 146 (3) (1999).
- [65] J.J. Grainger, W.D. Stevenson, *Power System Analysis*, McGraw-Hill, New York, 1994.
- [66] E.W. Kimbark, *Direct Current Transmission*, vol. 1, Wiley–Interscience, New York, 1971.
- [67] X.-P. Zhang, H. Chen, Asymmetrical three-phase load-flow study based on symmetrical component theory, *IEEE Proc. C* 141 (3) (1994) 248–252.
- [68] W. Xu, J.R. Marti, H.W. Dommel, A multiphase harmonic load flow solution technique, *IEEE Trans. Power Syst.* 6 (1) (1991) 174–182.
- [69] CIGRE–Working Group 36–05, Harmonics, Characteristic Parameters, Methods of Study, Estimates of Existing Values in the Network, *Electra*, No. 77, 1981, pp. 35–54.
- [70] H.W. Dommel, *Electromagnetic Transients Program Reference Manual (EMTP Theory Book)*, Prepared for Bonneville Power Administration by the Dept. of Electrical Engineering, University of British Columbia, Canada, 1986.
- [71] R.T. Smith, *Analysis of Electrical Machines*, Pergamon Press, New York, 1982.
- [72] N.A. Al-Nuaim, H.A. Toliyat, A novel method for modeling dynamic air-gap eccentricity in synchronous machines based on modified winding function theory, *IEEE Trans. Energy Convers.* 13 (1998) 156–162.
- [73] MATLAB, Version 4.2c.1, and Simulink, Version 1.3c, Mathematical packages by the MathWorks, Inc., Natick, MA.
- [74] C. Ammann, K. Reichert, R. Joho, Z. Posedel, Shaft voltages in generators with static excitation systems – problems and solution, *IEEE Trans. Energy Convers.* 3 (2) (1988) 409–419.
- [75] D. Busse, J. Erdman, R.J. Kerkman, D. Schlegel, G. Skibinski, System electrical parameters and their effects on bearing currents, *IEEE Trans. Ind. Appl.* 33 (2) (1997) 577–584.
- [76] A. Muetze, A. Binder, Calculation of circulating bearing currents in machines of inverter-based drive systems, in: *Conference Record of the 2004 IEEE Industry Applications Conference, 2004, 39th IAS Annual Meeting*, vol. 2, 3–7 Oct, 2004, pp. 720–726.
- [77] P. Maki-Ontto, J. Luomi, Bearing current prevention of converter-fed ac machines with a conductive shielding in stator slots, in: *Proceedings of the IEEE International Electric Machines and Drives Conference*, 1–4 June 2003, vol. 1, 2003, pp. 274–278.

- [78] D. Busse, J. Erdman, R.J. Kerkman, D. Schlegel, G. Skibinski, Bearing currents and their relationship to PWM drives, *IEEE Trans. Power Electron.* 12 (2) (1997) 243–252.
- [79] D. Hyppio, Mitigation of bearing electro-erosion of inverter-fed motors through passive common-mode voltage suppression, *IEEE Trans. Ind. Appl.* 41 (2) (2005) 576–583.
- [80] A. Muetze, A. Binder, Techniques for measurement of parameters related to inverter-induced bearing currents, in: *Industry Applications Conference, 2005, 40th IAS Annual Meeting, Conference Record of the 2–6 Oct. 2005*, vol. 2, 2005, pp. 1390–1397.
- [81] IEEE Standard 519, IEEE Recommended Practices and Requirements for Harmonic Control in Electric Power Systems, IEEE-519, 1992.
- [82] E.F. Fuchs, Y. You, D.J. Roesler, Modeling, simulation and their validation of three-phase transformers with three legs under DC bias, *IEEE Trans. Power Deliv.* 14 (2) (1999) 443–449.
- [83] B.L. Younglove, S.D. Johnson, User's Manual for Program Fields, Vol. 1, Department of Electrical Engineering, University of Colorado, Boulder, Colorado, January 6 1983.
- [84] E.F. Fuchs, H.A. Fuchs, *Introduction to Energy, Renewable Energy and Electrical Engineering: Essentials for Engineering Science (STEM) Professionals and Students*, 2021. Hardcover, 730 pages, expected publication: February, 2021 by John Wiley & Sons, 605 Third Avenue, New York, NY.
- [85] E.F. Fuchs, M.A.S. Masoum, *Power Conversion of Renewable Energy Systems*, first ed., Springer, USA, 2012, p. 692, ISBN: 978-1-4419-7978-0. 2nd Printing. Library of Congress Number: 2011921349.
- [86] E.F. Fuchs, G.A. McNaughton, Properties of orthogonal and triangular grids for the analysis of magnetic fields based on the finite difference and finite element methods, part I: theoretical analysis, *Acta Tech.* (2) (1982) 168–205. Library of Congress Catalog Card Number: 59-5874.
- [87] G.A. McNaughton, E.F. Fuchs, M. Siegl, Properties of orthogonal and triangular grids for the analysis of magnetic fields based on the finite difference and finite element methods, part II: numerical results based on gaussian elimination, *Acta Tech.* (2) (1982) 206–238 (ISBN: 8126508388, 9788126508389).
- [88] E.F. Fuchs, M. Siegl, Properties of orthogonal and triangular grids for the analysis of magnetic fields based on the finite difference and finite element methods, part III: comparison of iterative solutions, *Acta Tech.* (3) (1982) 261–290.
- [89] E.F. Fuchs, L.T. Rosenberg, Analysis of an alternator with two displaced stator windings, *IEEE Trans. Power Appar. Syst.* PAS-93 (6) (1974) 1776–1786.
- [90] D.C. White, H.H. Woodson, *Electrical Energy Conversion*, John Wiley & Sons, New York, 1959.
- [91] A.J. Wood, B.F. Wollenberg, *Power Generation Operation and Control*, John Wiley & Sons, 1984.
- [92] J.J. Grainger, W.D. Stevenson Jr., *Power System Analysis*, McGraw-Hill, 1994.

Additional bibliography

- [93] M.S. Sarma, *Electric Machines – Steady-State and Dynamic Performance*, second ed., West Publishing Company, Minneapolis/St. Paul, 1994.
- [94] E.F. Fuchs, A.A. Fardoun, Architecture of a variable-speed, direct-transmission wind power plant of wind-farm size, *Invention Disclosure*, University of Colorado, Boulder, February 1994.
- [95] E.F. Fuchs, B. Gregory, Control of a wind power plant with variable displacement (or power factor) angle and waveshape of AC current fed into the power system, *Invention Disclosure*, University of Colorado, Boulder, February 1994.
- [96] E.F. Fuchs, D. Yildirim, Transverse electric flux machines with phase numbers higher than two, *Invention Disclosure*, University of Colorado, Boulder, January 1995.
- [97] E.F. Fuchs, D. Yildirim, Permanent-magnet reluctance machine for high torques at low rated speeds and low weight based on alternating magnetic field theory, *Invention Disclosure*, University of Colorado, Boulder, April 1997.
- [98] E.F. Fuchs, D. Yildirim, Pulse-width-modulated (PWM) current-controlled inverter with reduced switching and filtering losses, *Invention Disclosure*, University of Colorado, Boulder, July 1999.

This page intentionally left blank

Performance of power-electronic drives with respect to speed and torque

5.1 Closed-form and numerical-solution techniques for variable-speed, variable-torque drives, and review of circuit approximations suitable for numerical solutions

Variable-speed and torque drives are important for windpower plants, buses, and automobiles as well as train drives. In Germany, the trains are equipped with induction machine (IM) drives, while in France, synchronous machines (SM) are used. Pump storage hydropower plants have variable-speed, variable-torque drives. In all these cases—except for windpower plants—motoring and regeneration are important operating regimes for an efficient use of energy by power-electronic drives provided by wind, solar, hydro, and other types of storage plants. Drives installed on vehicles rely on batteries and fuel cells which provide electric energy. For example, as an average value 14kWh must be provided for traveling 100 km in an automobile with up to five passengers. Besides lithium-ion batteries, solid-state batteries are considered for automobiles, fuel cells for automobiles and buses, and fuel ammonia (NH_3) is considered for maritime shipping applications because for ships the space requirements are not as stringent as for ground transportation vehicles. The performance of charging and discharging of nonideal batteries and fuel cells will be important when variable-speed, variable-torque drives are analyzed. It is impossible to investigate all types of batteries within the scope of this textbook and therefore only lithium-ion, lead-acid batteries, and fuel cells are investigated with respect to their charging and discharging performance. Various types of heat pumps [1] will be important to reduce the fossil-fuel energy consumption in residences and commercial buildings.

As a first attempt, one always uses ideal components of circuit and electronic components such as inductors, capacitors, diodes and switches as well as batteries and fuel-cells without any nonlinearities (e.g., saturation), internal impedances and voltage variations; this simplifies the closed-form analysis greatly. Numerical methods lend themselves to model nonideal circuit properties caused by losses, mechanical friction, saturation, internal voltage

variations, recovering of braking energy, parasitic inductances and capacitances, temperature-variation influences, discretization errors, influences of wave-shaping inductances, aging, flux-weakening effects for drives, compensation of flux weakening (CFW) for machines either permitting flux increase or decrease, harmonics, and control of power-quality effects.

The circuits amenable for numerical-solution approaches will be reviewed for variable-speed drives based on synchronous, permanent-magnet, and induction (asynchronous) machines (either motor or generator) described in [1,2]. Charging and discharging of batteries and discharging of fuel cells will be investigated as well, including their exposure to current and voltage harmonics.

5.1.1 Performance of ideal and nonideal storage elements

5.1.1.1 Nonideal equivalent circuits of batteries and PEM fuel cell

Parameter studies and their performance for different load levels of lead-acid batteries [2,3], lithium-ion batteries [4] or proton-exchange membrane (PEM) fuel cells [1,2,5,6] as storage elements will be performed with respect to internal resistances, capacitances and periodically changing DC output voltages and currents. As can be seen the equivalent circuits of batteries and fuel cells are very similar consisting of a series resistance and small-time constant and/or long time constant networks. Battery equivalent circuits are shown in Figs. 5.1 and 5.2 [2–4] and the fuel cell equivalent circuit is given in Fig. 5.3 [5–7]. The influences of the nonideal components of batteries and fuel cells can be significant with respect to their

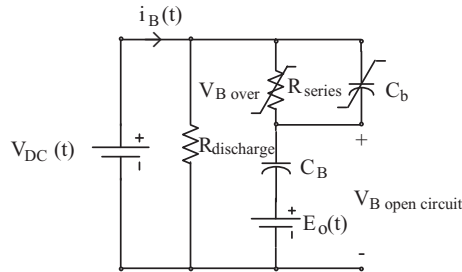


FIG. 5.1 Equivalent circuit of **nonideal** lead-acid battery [2,3]; **ideal** battery is modeled by $V_{DC}(t)$ only.

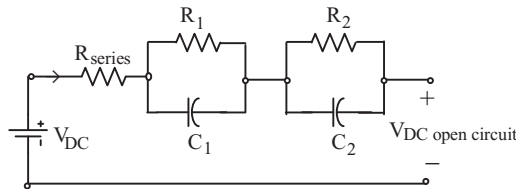


FIG. 5.2 Equivalent circuit of **nonideal** lithium-ion battery [4,5]; **ideal** battery is modeled by V_{DC} only.

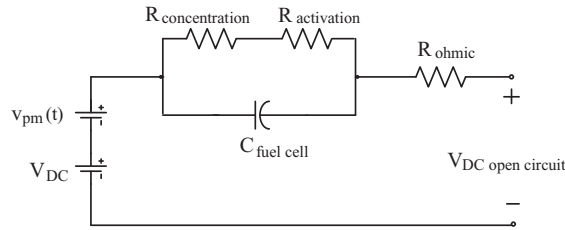


FIG. 5.3 Equivalent circuit of **nonideal** PEM fuel cell [6,7]; **ideal** fuel cell is modeled by V_{DC} only.

operating performance. It is well known that batteries have problems of delivering endowed [1,2,8] electrons to the drive unit during cold-weather conditions. Heating the passenger compartment requires battery/fuel cell energy—depleting them—in addition to the drive energy function.

The battery or fuel cell must be protected so that only small amplitude switching harmonics enter them either from the inverter or charger; this can be accomplished to some extent by connecting high-frequency filters across their terminals. Drive units permit regeneration when slowing down or braking the car, storing the braking energy on the battery (note that fuel cells are not able to store braking energy) and therefore a large enough battery or capacitance will be additionally required. On highways the braking occurs only occasionally and therefore recovered braking energy is rather small (e.g., 5%) [2].

Analyses of the three types of rotating machines (IM, brushless-DC machine, SM) together with the above-mentioned, nonideal storage devices are important because they have different characteristics and advantages/disadvantages due to their different equivalent-circuit parameters.

5.1.1.2 Nonideal battery parameters

Depending upon the type and construction of batteries the nonideal parameters will be different. In order to get some information how these parameters influence battery performance, a parameter study is enclosed for lithium-ion batteries. For this reason the changed parameters are indicated in bold font, such as $R_{series}=0.15\Omega$, $R_1=1\Omega$, $R_2=0.02\Omega$, $C_1=200\text{ F}$, and $C_2=300\text{ F}$.

5.1.1.3 Performance of batteries under low temperature conditions

Influences of the nonideal properties of batteries and fuel cells can be significant with respect to performance: it is well known that batteries have problems of delivering endowed [2,8] electrons at low temperature. Heating of the passenger compartment stems from the battery/fuel cell—depleting the battery/fuel cell in addition to the drive energy required. Grounding of the electric components plays an important role for passenger safety (Chapter 2). The charging of the batteries must be done in a manner so that their lifetime is not degraded by avoiding excessive harmonic current amplitudes. Some batteries exhibit memory effects [2] and must not be discharged completely (e.g., down to 20%).

5.1.2 Numerical solution approaches

5.1.2.1 Discretization errors of numerical methods

Closed-form solution techniques are very important for understanding electric and electronic systems. For very complicated nonlinear circuits of electric systems—incorporating diodes and electronic switches—numerical methods for the solution of ordinary differential equations (e.g., PSpice, Mathematica, MATLAB) [9–11] can be used, and for the solution of partial differential equations finite element (FE) and finite difference (FD) methods [12–16], which exhibit discretization errors, must be relied on.

5.1.2.2 Operating-point-dependent equivalent circuits of synchronous machines

Synchronous machines are relied on for very large power generation (e.g., hydropower plants) and electric drives (e.g., French railroad), and therefore their steady-state ($X_d \leq 2.0$ pu, $X_q \leq 1.5$ pu, X_m), transient ($X'_d \leq 0.4$ pu), and subtransient ($X''_d \leq 0.3$ pu) reactances are important. Such machines exhibit operating-point-dependent (saturated) reactances [17–25]. For calculation of such reactances the reluctivity distribution is “frozen” or assumed constant for calculation of the various reactances of a given operating point from flux linkages.

5.1.2.3 Operating-point-dependent equivalent circuits of induction (asynchronous) machines

Induction machines permit the change of pole (p) numbers and therefore are suitable for variable-speed operation at low speed (e.g., for starting) and at very high speed (e.g., flux-weakening compensation [26,27]). Operating-point-dependent (saturated) reactances (e.g., leakage reactance of stator $X_{s\ell}$, leakage reactance of rotor $X'_{r\ell}$, and mutual reactance X_m) can be determined from flux linkages [28]. The only disadvantage of asynchronous machines is the somewhat lower efficiencies than those of permanent-magnet machines. Selection of the slot numbers of the stator and rotor is important [29,30] as well as current densities in stator and rotor (Chapter 4) and the cooling method depending upon the temperature distribution caused by the fundamental and harmonic currents (Chapter 4).

5.1.2.4 Operating-point-dependent equivalent circuits of permanent-magnet machines

Permanent-magnet machines (as used in brushless DC machines) are very suitable for drives as used in automobiles [1,2] and windpower plants [1,2]. The only drawbacks are their temperature dependency of the permanent-magnet materials and their costs [1,2,31,32]. Their operation demands a synchronization of the stator field provided by the inverter with the rotating rotor, accomplished either by speed sensors [33] or by computational methods [34,35]. Stator leakage reactance (e.g., $X_{s\ell}$) is not well understood. Usually, the leakage reactances of the primary windings are defined with respect to their linkage with the secondary windings. In a permanent-magnet machine, where the magnets reside on the rotor, there is no secondary winding. However, the permanent magnet can be modeled with a fictitious secondary winding excitation [1,2] and therefore the stator leakage inductance can be defined. Care must be

taken that permanent magnets do not get demagnetized due to excessive temperatures; that means sufficient cooling must be provided and harmonic currents must be minimized.

5.1.2.5 Six-step and current-controlled, pulse-width-modulated, voltage-source inverters, and the choice of the modulation index m for PSpice solutions

Six-step inverters combined with permanent-magnet machines have the highest drive efficiency achievable (e.g., 95% and higher) [36]. A negative performance aspect is their current control which must be relied on, in addition to the six-step operation (Chapter 1).

The pulse-width-modulated (PWM) current-controlled, voltage-source inverter has an inherent current control which relies on the modulation index $m = \frac{2\sqrt{2} \cdot V_{rms}}{V_{DC}}$, where V_{rms} is the rms output phase voltage of a three-phase inverter and V_{DC} is the applied DC voltage at the inverter input. Due to the nonideal properties of batteries and fuel cells the modulation index changes and one defines an ideal modulation index $m_{ideal} = \frac{2\sqrt{2} \cdot V_{rms}}{V_{DC_ideal}}$ and an actual modulation index $m_{actual} = \frac{2\sqrt{2} \cdot V_{rms}}{V_{DC_actual}}$, where $m_{actual} \leq m_{ideal}$, and both indices are smaller than 1.0. This aspect is important for the operation of a drive because large (e.g., $m=0.9$) modulation indices permit lagging power factor (consumer power factor definition [1,2]) and small (e.g., $m=0.5$) values allow leading power factor operation, which might not be desirable from an energy conversion or power-production point of view because of the high DC voltage required: $m_{leading_power\ factor_consumer\ definition} < m_{lagging_power\ factor_consumer\ definition}$. To prevent switching harmonics entering either drive or power system, resonant RCL filters are installed between the three inverter phases. Six-step and PWM inverters can be operated within a wide fundamental frequency range (e.g., $f=6\text{--}1500\text{ Hz}$) and therefore no mechanical gear for the drive is required.

5.1.3 Energy considerations

5.1.3.1 The influence of wave-shaping inductance L_w with resistance R_w

The design of wave-shaping inductors for PWM inverters and the choice of switching harmonics (e.g., 5.76–28.9 kHz) are important: wave-shaping inductance L_w is greatly affecting the harmonic content and its associated power quality of associated circuits. Unfortunately, no closed-form approach exists to predict the value of L_w , thus numerical trial and error approaches are in order. Resistance R_w decreases the efficiency of the drive.

5.1.3.2 Recovering of braking energy

Predicting the recoverable braking energy of an automobile or train depends upon the speed of the vehicle, the type and slope of the road/rail bed, and the load transported by the vehicle. Also, driving habits and road conditions play a major role for the recovered energy: in town the recoverable braking energy is larger than on a flat highway where not much braking action is required. However, even on a highway the braking energy can be considerable for stop-and-go traffic. Recoverable braking energy will be between 0% and 15% depending upon the driving conditions [2]. Three-phase inverters, operated as rectifiers, assist in recovering braking energy and store it on the battery.

5.1.3.3 Energy savings based on heat pumps

The use of heat pump installations [1,2] for buildings is desirable to reduce their energy consumption: on the average a groundwater-to-water heat pump has energy savings [1,2] of about (40%–60%) for heating and cooling—depending upon outdoor groundwater and indoor temperatures. Air-to-water heat pumps fail to be effective below zero degrees (e.g., -10°C).

5.1.3.4 Renewable power plants

Wind and photovoltaic power plants are useful for usually occurring wind and sunlight conditions. To be effective, such renewable plants should be combined with energy storage devices [37–43] to provide sustainable energy during “Dunkelflaute” [1] when no wind and light conditions prevail. This applies also to storm (too much wind) and snow conditions, as was recently experienced in Texas [44,45]. The reliance of synchrophasors [46] mitigated the complete shutdown of the ERCOT (Electric Reliability Council of Texas) power system and out of 40 GW only 9.5 GW had to be removed from service leaving a few million people without electric service for some time.

5.1.3.5 Need for nuclear plants

This begs the question whether nuclear power generation plants can be dispensed with, as recommended by the German government [47,48]. To reduce the output of greenhouse gases affecting climate on a worldwide basis it is believed that a certain base-load generation [48] stemming from nuclear generation should be available.

5.1.3.6 Figure of merit, low and high-speed operation of electric automobiles

The ideal performance of an electric automobile can be defined by the figure of merit (FM) [1,2]

$$\text{FM} = \frac{(\text{weight in tons} - \text{force}) \cdot (\text{distance in miles})}{(\text{energy used at the wheel from battery in kWh})} = 4 - 10.$$

For example, an automobile of 2 tons-force weight traveling a distance of 500 miles with a 100 kWh battery has a figure of merit $\text{FM} = 10$. This is an ideal number; if heating the automobile compartment is taken into account and the battery cannot be completely discharged (down to 20%) then a battery of 120 kWh is required leading to a figure of merit $\text{FM} = 8.33$. The weight of an automobile can be reduced by employing carbon for structural components—to assure safety for passengers—combined with either aluminum or plastic for the remaining parts such as chassis and frame.

5.1.3.7 CFW [26,27] at high-speed operation

High automobile speed can be obtained by increasing the current/voltage frequency of the motor power supply. Because of the induced voltage E is a function of frequency f and the maximum flux density B_{max} (Section 3.3.3)

$$E_{\text{rat}} = 4.44 \cdot B_{\text{max_rat}} \cdot f_{\text{rat}} \cdot N_{\text{rat}} \cdot 4 \cdot R \cdot L / p_{\text{rat}}$$

one obtains for a constant induced voltage E_{rat} a reduced flux density B_{max} if the frequency increases from f_{rat} to $f=3f_{\text{rat}}$ resulting in decreased torque. This reduction of torque can be prevented to some extent if the number of turns is decreased by replacing N_{rat} by $N=N_{\text{rat}}/2$ at high speed and increasing the number of poles (e.g., for induction machines) by a factor of two $p=2 \cdot p_{\text{rat}}$ at low speed. CFW is explained in detail in [Section 3.3.3](#) which results in increased torques at the wheels of an electric drive.

5.1.3.8 Manufacturing of electric energy within interconnected and smart power systems

To date interconnected power systems consist of individual power plants and transmission/distribution lines supplying electric energy to customers. With the advent of renewable energy (photovoltaics, windpower, biogas, etc.) control of voltage, current and frequency f relies on the interaction of all energy sources and loads to maintain that any electron generated is consumed at the very same time, as pointed out in Appendix 1.B of [1]. This requires that control plays a very important role and is not limited to the power plant located within a fenced-in area. Synchrophasors discussed next play an important role in monitoring and control of an interconnected and smart power system.

5.1.3.9 Synchrophasors for monitoring and control of interconnected smart power system

Synchrophasors were invented in 1988 by A. Phadke and associates [46]. During the February 2021 winter storm in Texas the application of synchrophasors helped prevent—through monitoring of the power system frequency—a complete shutdown of the ERCOT power system. Nano and micro grids [48,49] represent a new development for improving the performance of interconnected power systems.

5.2 Three-phase distribution system supplying energy to lithium-ion batteries via rectifiers

Public and private charging stations are required to charge lithium-ion batteries. In each case safety is assured by separating the power system and battery grounding via Δ -Y three-phase transformers, where the Y winding is grounded. Due to the many charging stations required minimization of manufacturing costs is mandatory. Control of the charging mechanism—preventing overcharging ([2], Section 3.3.2), trickle charging [50]—is important, in other words the charging circuit provides a controllable output current which is a function of time as measured in Fig. 3.10 of [2] showing the charging of a lead-acid battery where the battery current is controlled and exponentially decreases while the battery voltage exponentially increases up to a maximum permissible value of $V_{\text{bat_max}} = 1.10 \cdot V_{\text{bat_rat}}$. Similar issues arise for the rectification of the AC voltages/currents of windpower and photovoltaic plants to transmit DC voltages/currents to inverter stations serving far-away distribution systems. The idea of using automobile batteries as storage devices for smart distribution systems is another unresolved issue. To achieve such AC-DC and DC-AC energy transmissions three-phase rectifiers [51] and inverters [35,52] will be used.

5.2.1 Application Example 5.1: Delta-wye, three-phase transformer supplying diode-bridge rectifier in series with one thyristor and $L_f C_f$ output filter charging lithium-ion battery

The rated phase voltage provided by the distribution system to residences in Germany is $V_{\text{ph_rat}} = 230 \text{ V}$ at rated frequency $f_{\text{rat}} = 50 \text{ Hz}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36 \text{ V}$. Charging DC voltages for car batteries are assumed to be in the range $V_{\text{DC}} = (300\text{--}900 \text{ V})$. The higher voltage of 900 V, associated with a large battery rating (e.g., 100 kWh), has the advantage of allowing an automobile to travel a farther distance as compared with 300 V batteries associated with a small battery rating (e.g., 50 kWh). The disadvantage of the higher voltage is the increased danger level of either a battery failure or a car accident. Lithium-ion batteries of electric automobiles have energy contents ranging from $E_{\text{battery}} = 50\text{--}100 \text{ kWh}$ for small and large cars, respectively. In the following example, a rated battery of 100 kWh is assumed, where the charging current ranges from 100 A, 65 A, 37 A to 12.5 A when the lithium-ion battery has charging voltages ranging from 565 V, 610 V, 640 V to 660 V for high-current at low-voltage charging (nearly empty battery) to low-current and high-voltage (about fully charged battery) charging conditions, respectively, whereby harmonic voltages and currents are minimized through a high-frequency filter across the terminals of the charging cable.

Note that during the charging process the charging current is controlled through the thyristor, and the DC charging voltage is dictated by the lithium-ion battery. Fig. E5.1.1 shows the circuit diagram of the charger whereby a Δ - $Y_{\text{ungrounded}}$ three-phase transformer prevents triplen harmonics entering the distribution system; in addition the output $C_f L_f$ filter is used to minimize integer and noninteger harmonics at the feeding and supplying end of the charging network. The diode-bridge rectifier and series-connected thyristor results in an inexpensive charging circuit.

The three-phase distribution system has the per-phase parameters $R_{\text{sys}} = 100 \text{ m}\Omega$, and $L_{\text{sys}} = 1.3263 \text{ mH}$ with a step-up Δ/Y transformer having primary inductance PSpice parameters $L_1 = L_2 = L_3 = 180$, secondary inductance PSpice parameters $L_4 = L_5 = L_6 = 2000$, coupling factors $K_{15} = K_{24} = K_{36} = 0.999999$, inductance of output filter $L_f = 100 \text{ mH}$, capacitance of output filter $C_f = 50,000 \text{ }\mu\text{F}$, lithium-battery parameters $V_{\text{DC}} = 600 \text{ V}$, $I_{\text{DC}} = 55.56 \text{ A}$, $R_{\text{series}} = 0.15 \text{ }\Omega$, $R_1 = 1 \text{ }\Omega$, $R_2 = 0.02 \text{ }\Omega$, $C_1 = 200 \text{ F}$, and $C_2 = 300 \text{ F}$. The two time constants are $R_1 C_1$ and $R_2 C_2$. It should be noted that the charging response of the battery somewhat depends upon the above-mentioned R_i and C_i values for $i = 1, 2$.

Fig. E5.1.1 shows the circuit diagram of the charger for a lithium-ion battery using a step-up Δ/Y three-phase transformer supplying power to a diode bridge in series with a thyristor and an output filter $L_f C_f$. In Fig. E5.1.2 the charging of a nearly empty battery is assumed. It shows the charging voltages $V_{\text{bat}} = V(15)\text{--}V(14)$, $V_{\text{DCop}} = V(153)\text{--}V(14)$ as well as the charging current $I_{\text{DC}}(t)$ for the above-mentioned time constant components R_1, R_2, C_1, C_2 of the lithium-ion battery. Fig. E5.1.3 illustrates the charging of the nearly fully charged battery. Note that in both cases the charging current has small ripples due to the thyristor switching action controlling the current $I_{\text{DC battery}}(t) = I(\text{VDCop})$. Fig. E5.1.4 illustrates the exponential changes of the battery voltage $V_{\text{DC battery}}(t)$ and the battery current $I_{\text{DC battery}}(t) = I(\text{VDCop})$ as a function of time during the charging time of $t_{\text{charging}} = 3 \text{ h}$.

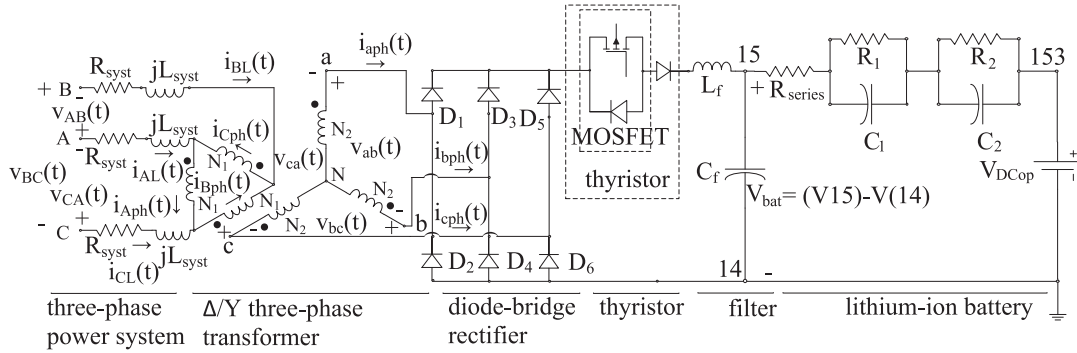


FIG. E5.1.1 Diode-bridge and series-connected thyristor (see model of Fig. 9.10, Chapter 9 [1]) for a rated battery voltage of a lithium-ion battery with $V_{battery_rat} = 600$ V connected to the three-phase distribution system in Germany at rated phase voltage $V_{ph_rat} = 230$ V or corresponding rated line-to-line voltage $V_{L-L_rat} = \sqrt{3} \cdot V_{ph_rat} = 398.36$ V. $f_{rat} = 50$ Hz.

Fig. E5.1.2 shows the voltages and current based on the results of Table E5.1.1.

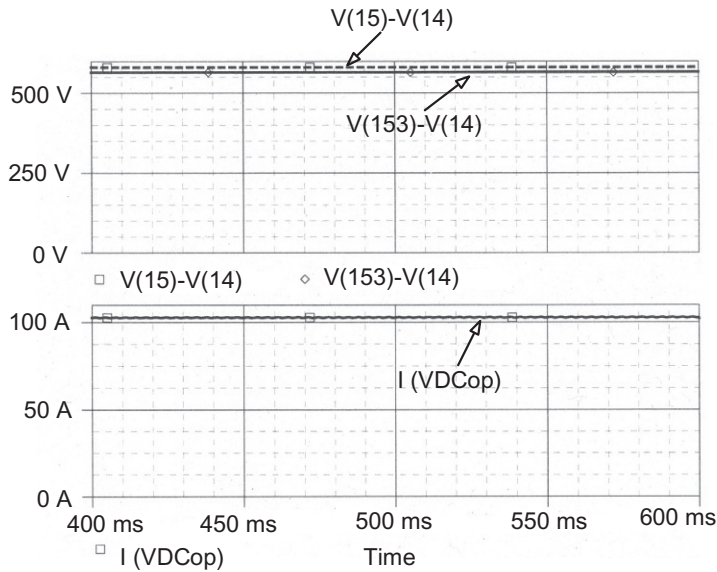


FIG. E5.1.2 Lithium-ion battery charging voltage $V_{bat} = V(15) - V(14)$, and battery charging current as a function of time t for diode-bridge and series-connected thyristor for a battery voltage of $V_{bat_open-circuit} = 565$ V = $V_{DCop} = V(153) - V(14)$, battery charging $I_{bat} = 100$ A = $I(VDCop)$ (nearly empty battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{ph_rat} = 230$ V or corresponding rated line-to-line voltage $V_{L-L_rat} = \sqrt{3} \cdot V_{ph_rat} = 398.36$ V, $f_{rat} = 50$ Hz. $R_{series} = 0.15 \Omega$, $R_1 = 1 \Omega$, $R_2 = 0.02 \Omega$, $C_1 = 200$ F, $C_2 = 300$ F.

TABLE E5.1.1 PSpice program for Application Example 5.1, Figs. E5.1.1 and E5.1.2.

```

*Table E5.1.1
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a diode-
*bridge rectifier in series with thyristor with LC filter
*primary line-to-line voltages at f=50 Hz, almost empty battery
VAB 1 2 sin(0 563.28 50 0 0 -30)
VBC 2 3 sin(0 563.28 50 0 0 -150)
VCA 33 1 sin(0 563.28 50 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
L4 11 10 2000
L5 12 10 2000
L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 155 pulse(0 300 0 1u 1u 20m 20m)
mosfet 156 157 155 155 qfet
Dmosfet 155 154 Dideal
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 1
*C1 for time constant R1C1
C1 151 152 200
*R2 for time constant R2C2
R2 152 153 0.02
*C2 for time constant R2C2
C2 152 153 300
*VDCopen circuit
VDCop 153 14 565
*auxiliary parameters

```

Continued

TABLE E5.1.1 PSpice program for Application Example 5.1, Figs. E5.1.1 and E5.1.2—Cont'd

```

Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 600m 400m 100u uic
.four 50 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued statements must be preceded with a plus sign (+).*

Table E5.1.1 shows the PSpice program for Fig. E5.1.1. Table E5.1.2 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.1.2.

TABLE E5.1.2 Harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.1.2.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)
DC COMPONENT = 1.0275E+02
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
6 3.0000E+02 1.7918E-01 5.8197E+02 -3.1960E+01 -7.8807E+01
TOTAL HARMONIC DISTORTION = 5.8615E+04 PERCENT

```

Fig. E5.1.3 illustrates the charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$, and charging current $I_{\text{battery}} = I(\text{VDCop})$ as a function of time t for diode-bridge and series-connected thyristor for a battery voltage of at $V_{\text{DC battery_open-circuit}} = 660 \text{ V}$ (about fully charged battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{\text{ph_rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36 \text{ V}$, $f_{\text{rat}} = 50 \text{ Hz}$. See Table E5.1.3.

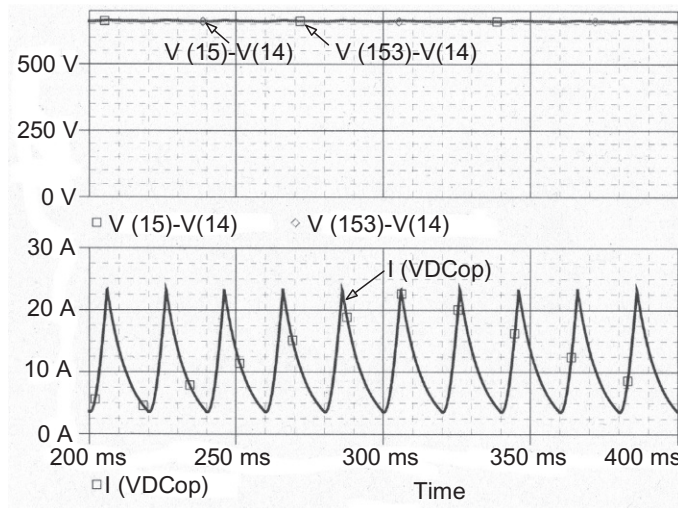


FIG. E5.1.3 Lithium-ion battery charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$, and battery charging current $I_{\text{battery}} = I(\text{VDCop})$ as a function of time t for diode-bridge and series-connected thyristor for a battery voltage of $V_{\text{DC battery_open-circuit}} = 660 \text{ V}$ (about fully charged battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{\text{ph_rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36 \text{ V}$, $f_{\text{rat}} = 50 \text{ Hz}$. $R_{\text{series}} = 0.15 \Omega$, $R_1 = 1 \Omega$, $R_2 = 0.02 \Omega$, $C_1 = 200 \text{ F}$, $C_2 = 300 \text{ F}$.

TABLE E5.1.3 PSpice program for Application Example 5.1 and Fig. E5.1.3.

```

*Table E5.1.3
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a diode-
*bridge rectifier in series with thyristor with LC filter
*primary line-to-line voltages at f=50 Hz, almost fully charged battery
VAB 1 2 sin(0 563.28 50 0 0 -30)
VBC 2 3 sin(0 563.28 50 0 0 -150)
VCA 3 3 1 sin(0 563.28 50 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
L4 11 10 2000
L5 12 10 2000

```

Continued

TABLE E5.1.3 PSpice program for Application Example 5.1 and Fig. E5.1.3—Cont'd

```

L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 155 pulse(0 300 0 1u 1u 6m 20m)
mosfet 156 157 155 155 qfet
Dmosfet 155 154 Dideal
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 1
*C1 for time constant R1C1
C1 151 152 200
*R2 for time constant R2C2
R2 152 153 0.02
*C2 for time constant R2C2
C2 152 153 300
*VDCopen circuit
VDCop 153 14 660
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mqj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 400m 200m 100u uic
.four 50 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

Table E5.1.3 shows the PSpice program for Fig. E5.1.3. Table E5.1.4 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.1.3.

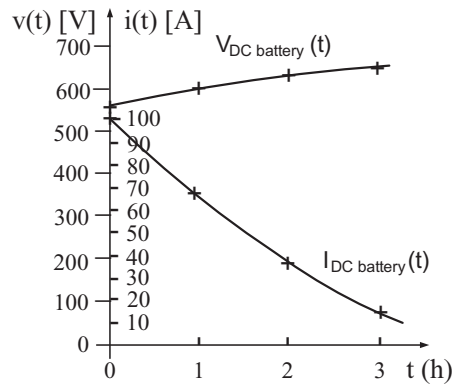


FIG. E5.1.4 Charging of a 100 kWh ($\approx 600 \text{ V} \cdot 56.25 \text{ A} \cdot 3 \text{ h}$) lithium-ion battery as a function of time t where the rated battery current is $I_{\text{DCbattery_rat}} = 56.25 \text{ A}$. Note, linearity of the above graphs was assumed, therefore the approximate sign.

TABLE E5.1.4 Harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.1.3.

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)					
DC COMPONENT = 1.0508E+01					
HARMONIC NO (HZ)	COMPONENT	FREQUENCY (HZ)	FOURIER COMPONENT (DEG)	PHASE (DEG)	NORMALIZED
1	5.0000E+01	7.4256E+00	1.0000E+00	-4.8862E+01	0.0000E+00
2	1.0000E+02	2.8775E+00	3.8751E-01	-1.3515E+02	-3.7424E+01
3	1.5000E+02	1.1198E+00	1.5080E-01	1.3472E+02	2.8131E+02
TOTAL HARMONIC DISTORTION = 4.2695E+01 PERCENT					

Voltages and current of Fig. E5.1.5 are for the following nonideal battery parameters $R_{\text{series}} = 0.15$, $R_1 = 10 \Omega$, $R_2 = 0.2 \Omega$, $C_1 = 20 \text{ F}$, $C_2 = 30 \text{ F}$, see Table E5.1.5.

TABLE E5.1.5 PSpice program for Application Example 5.1 and Fig. E5.1.5.

```

*Table E5.1.5
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a diode-
*bridge rectifier in series with thyristor with LC filter
*primary line-to-line voltages at f=50 Hz, charging about empty battery
VAB 1 2 sin(0 563.28 50 0 0 -30)
VBC 2 3 sin(0 563.28 50 0 0 -150)
VCA 3 1 sin(0 563.28 50 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u

```

Continued

TABLE E5.1.5 PSpice program for Application Example 5.1 and Fig. E5.1.5—Cont'd

```
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
L4 11 10 2000
L5 12 10 2000
L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 155 pulse(0 300 0 1u 1u 20m 20m)
mosfet 156 157 155 155 qfet
Dmosfet 155 154 Dideal
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 10
*C1 for time constant R1C1
C1 151 152 20
*R2 for time constant R2C2
R2 152 153 0.2
*C2 for time constant R2C2
C2 152 153 30
*VDCopen circuit
VDCop 153 14 565
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 2000m 160m 100u uic
.four 50 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end
```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

Table E5.1.5 shows the PSpice program for Fig. E5.1.5. Table E5.1.6 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.1.5.

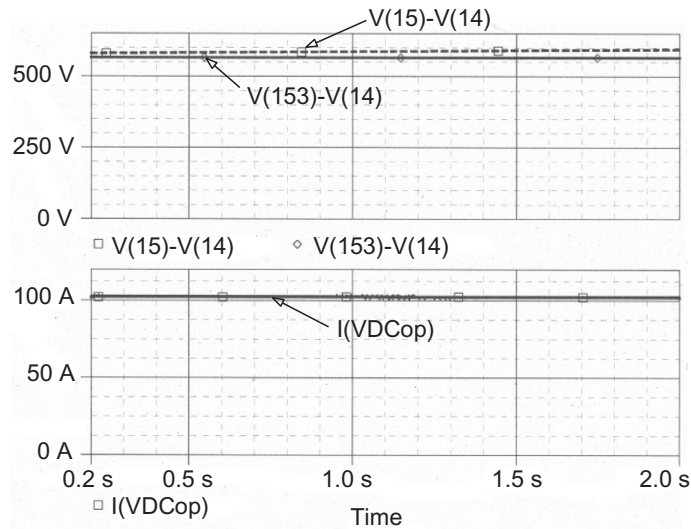


FIG. E5.1.5 Lithium-ion battery charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$, and battery charging current $I_{\text{battery}} = I(\text{VDCop})$ as a function of time t for diode-bridge and series-connected thyristor for a battery voltage of $V_{\text{B open-circuit}} = 565 \text{ V}$, battery charging $I_{\text{bat}} = 100 \text{ A}$ (nearly empty charged battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{\text{ph_rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36 \text{ V}$, $f_{\text{rat}} = 50 \text{ Hz}$.

TABLE E5.1.6 Harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.1.5.

FOURIER COMPONENTS OF TRANSIENT RESPONSE $I(\text{VDCop})$					
DC COMPONENT = 1.0212E+02					
NO	(HZ)	COMPONENT	COMPONENT (DEG)	PHASE (DEG)	
1	5.0000E+01	1.2061E-03	1.0000E+00	3.0935E+00	0.0000E+00
6	3.0000E+02	1.7934E-01	1.4870E+02	-3.0270E+01	-4.8831E+01
TOTAL HARMONIC DISTORTION = 1.4978E+04 PERCENT					

Fig. E5.1.6 shows the lithium-ion battery charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$, and battery charging current $I_{\text{battery}} = I(\text{VDCop})$ as a function of time t for diode-bridge and series-connected thyristor for a battery voltage of at $V_{\text{B open-circuit}} = 565 \text{ V}$, battery charging $I_{\text{bat}} = 100 \text{ A}$ (nearly empty battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{\text{ph_rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36 \text{ V}$, $f_{\text{rat}} = 50 \text{ Hz}$.

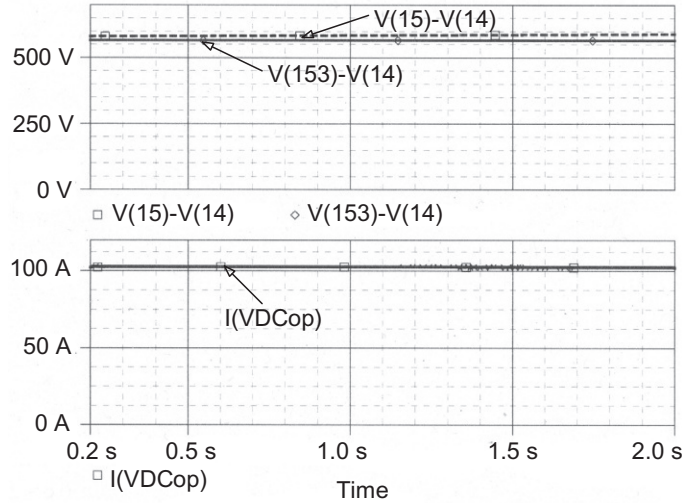


FIG. E5.1.6 Lithium-ion battery charging voltages $V_{bat} = V(15)-V(14)$, $V_{DCop} = V(153)-V(14)$, and battery charging current $I_{battery} = I(VDCop)$ as a function of time t for diode-bridge and series-connected thyristor for a battery voltage of $V_{B \text{ open-circuit}} = 565 \text{ V}$, battery charging $I_{bat} = 100 \text{ A}$ (nearly empty battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{ph_rat} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{L-L_rat} = \sqrt{3} \cdot V_{ph_rat} = 398.36 \text{ V}$, $f_{rat} = 50 \text{ Hz}$. $R_{series} = 0.15 \Omega$, $R_1 = 10 \Omega$, $R_2 = 0.2 \Omega$, $C_1 = 20 \text{ F}$, $C_2 = 3000 \text{ F}$.

Table E5.1.7 lists the PSpice program for Fig. E5.1.6. Table E5.1.8 shows the harmonics for battery currents, see $I(VDCop)$ of Fig. E5.1.6.

TABLE E5.1.7 PSpice program for Application Example 5.1 and Fig. E5.1.6.

```
*Table E5.1.7
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a diode-
*bridge rectifier in series with thyristor with LC filter
*primary line-to-line voltages at f=50 Hz, battery
*charged at almost empty state
VAB 1 2 sin(0 563.28 50 0 0 -30)
VBC 2 3 sin(0 563.28 50 0 0 -150)
VCA 3 1 sin(0 563.28 50 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
```

Continued

TABLE E5.1.7 PSpice program for Application Example 5.1 and Fig. E5.1.6—Cont'd

```

L4 11 10 2000
L5 12 10 2000
L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 155 pulse(0 300 0 1u 1u 20m 20m)
mosfet 156 157 155 155 qfet
Dmosfet 155 154 Dideal
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 10
*C1 for time constant R1C1
C1 151 152 20
*R2 for time constant R2C2
R2 152 153 0.2
*C2 for time constant R2C2
C2 152 153 3000
*VDCopen circuit
VDCop 153 14 565
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 2000m 160m 100u uic
.four 50 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.1.8 Harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.1.6.

FOURIER COMPONENTS OF TRANSIENT RESPONSE $I(\text{VDCop})$					
DC COMPONENT = 1.0236E+02					
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED					
NO	(HZ)	COMPONENT	COMPONENT (DEG)	PHASE (DEG)	
1	5.0000E+01	8.4650E-04	1.0000E+00	1.0330E+01	0.0000E+00
6	3.0000E+02	1.7936E-01	2.1188E+02	-3.0889E+01	-9.2866E+01
TOTAL HARMONIC DISTORTION = 2.1341E+04 PERCENT					

Fig. E5.1.7 shows the lithium-ion battery charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$, and battery charging current $I_{\text{battery}} = I(\text{VDCop})$ as a function of time t for diode-bridge and series-connected thyristor for a battery voltage of at $V_{\text{B open-circuit}} = 660 \text{ V}$, battery charging $I_{\text{bat}} = 10.51 \text{ A}$ (nearly fully charged battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{\text{ph_rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36 \text{ V}$, $f_{\text{rat}} = 50 \text{ Hz}$. $R_{\text{series}} = 0.15 \Omega$, $R_1 = 10 \Omega$, $R_2 = 0.2 \Omega$, $C_1 = 20 \text{ F}$, $C_2 = 3000 \text{ F}$. Graph from (0.2–2.0) s.

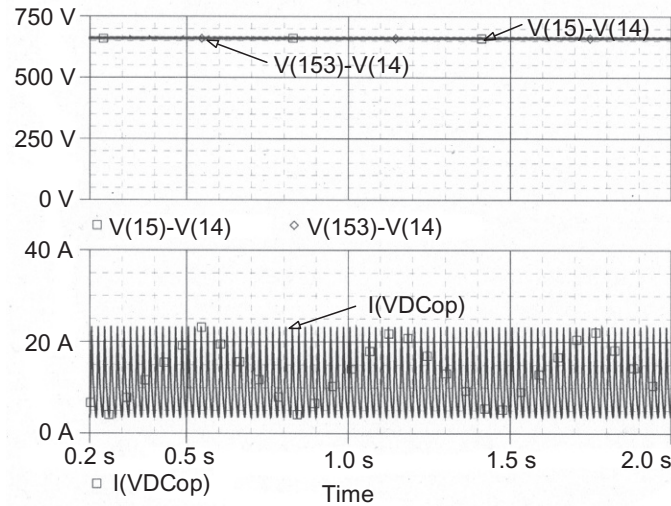


FIG. E5.1.7 Lithium-ion battery charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$, and charging current $I_{\text{battery}} = I(\text{VDCop})$ as a function of time t for diode-bridge and series-connected thyristor for a battery voltage of $V_{\text{B open-circuit}} = 660 \text{ V}$, battery charging $I_{\text{bat}} = 10.5 \text{ A}$ (nearly fully charged battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{\text{ph_rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36 \text{ V}$, $f_{\text{rat}} = 50 \text{ Hz}$.

Table E5.1.9 lists the PSpice program for Fig. E5.1.7. Table E5.1.10 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.1.7.

TABLE E5.1.9 PSpice program for Application Example 5.1 and Fig. E5.1.7.

```

*Table E5.1.9
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a diode-
*bridge rectifier in series with thyristor with LC filter
*primary line-to-line voltages at f=50 Hz,
*battery almost fully charged
VAB 1 2 sin(0 563.28 50 0 0 -30)
VBC 2 3 sin(0 563.28 50 0 0 -150)
VCA 33 1 sin(0 563.28 50 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
L4 11 10 2000
L5 12 10 2000
L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 155 pulse(0 300 0 1u 1u 6m 20m)
mosfet 156 157 155 155 qfet
Dmosfet 155 154 Dideal
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 10
*C1 for time constant R1C1
C1 151 152 20
*R2 for time constant R2C2
R2 152 153 0.2
*C2 for time constant R2C2
C2 152 153 3000
*VDCopen circuit

```

Continued

TABLE E5.1.9 PSpice program for Application Example 5.1 and Fig. E5.1.7—Cont'd

```

VDCop 153 14 660
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 2000m 160m 100u uic
.four 50 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.1.10 Harmonics for battery currents, see $I(VDCop)$ of Fig. E5.1.7.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)
DC COMPONENT = 1.0511E+01
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 5.0000E+01 7.4390E+00 1.0000E+00 -4.8927E+01 0.0000E+00
2 1.0000E+02 2.8818E+00 3.8739E-01 -1.3533E+02 -3.7477E+01
3 1.5000E+02 1.1196E+00 1.5050E-01 1.3443E+02 2.8121E+02
TOTAL HARMONIC DISTORTION = 4.2666E+01 PERCENT

```

5.2.1.1 Conclusions

When the nearly empty lithium-ion, nonideal battery is charged with about 102 A the charging current has a small 300 Hz component of about 0.175% while the nearly fully charged battery is absorbing a charging current of about 10.51 A with a 50 Hz component of 70.85%, a 100 Hz component of 27.4%, and a 150 Hz component of 10.67%. Depending upon the sensitivity of the lithium-ion battery to current harmonics it is advisable to replace the thyristor of Fig. E5.1.1 by a MOSFET as proposed in Application Example 5.2. The charging of the lithium-ion battery at almost empty and almost fully charged states results in current harmonics which could result in either reduction of the lifetime or failure of the battery due to exceeding rated temperature. The reduction of harmonics during the charging appears to be worthwhile and could be accomplished by choosing a variable switching frequency of the MOSFET.

5.2.2 Application Example 5.2: Delta-wye, three-phase transformer supplying one MOSFET in series with diode-bridge rectifier and $L_f C_f$ output filter charging lithium-ion battery

The rated phase voltage of the three-phase distribution system in Germany is $V_{ph_rat}=230$ V at the rated frequency of $f_{rat}=50$ Hz or the corresponding rated line-to-line voltage is $V_{L-L_rat}=\sqrt{3}\cdot V_{ph_rat}=398.36$ V. In the following example, a rated battery of 100 kWh is assumed, where the charging current ranges from 100 A, 65 A, 37 A to 12.5 A (see Fig. E5.1.4) when the lithium-ion battery has charging voltages ranging from 565 V, 610 V, 640 V to 660 V for high-current at low-voltage charging (nearly empty battery) to low-current and high-voltage (about fully charged battery) charging conditions, respectively, whereby the harmonic voltages are minimized through an output $L_f C_f$ filter across the terminals of the charging cable.

Note that during the charging process the charging current is controlled through the MOSFET, and the charging voltage is dictated by the lithium-ion battery. Fig. E5.2.1 shows the circuit diagram of the charger whereby a Δ -Y_{ungrounded} three-phase transformer prevents triplen harmonics entering the distribution system; in addition the output $L_f C_f$ filter is used to minimize integer and noninteger harmonics at the feeding and supplying ends of the charging network. The diode-bridge rectifier with the series-connected MOSFET results in a more expensive charging circuit which reduces the harmonic current generation significantly as compared with the circuit of Application Example 5.1 employing a thyristor in series with a diode-bridge. The charging circuit is designed for a three-phase system with the line-to-line voltage $V_{L-L_rat}=398.36$ V.

The distribution system has the per-phase parameters $R_{sys}=100$ m Ω , and $L_{sys}=1.3263$ mH with a step-up Δ/Y transformer primary inductance PSpice parameters $L_1=L_2=L_3=180$, secondary inductance PSpice parameters $L_4=L_5=L_6=2000$, coupling factors $K_{15}=K_{24}=K_{36}=0.999999$, inductance of output filter $L_f=100$ mH, capacitance of output filter $C_f=50,000$ μ F. Lithium-battery parameters are $V_{DC}=600$ V, $I_{DC}=55.56$ A, $R_{series}=0.15$ Ω , $R_1=1$ Ω , $R_2=0.02$ Ω , $C_1=200$ F, $C_2=300$ Ω . The two time constants are $R_1 C_1$ and $R_2 C_2$. It should be noted that the charging response of the battery somewhat depends upon the above-mentioned R_i and C_i values for $i=1, 2$.

Fig. E5.2.1 shows the circuit diagram of the charger for a lithium-ion battery using a step-up Δ/Y three-phase transformer supplying power to a diode bridge in series with a MOSFET and an output filter $L_f C_f$. In Fig. E5.2.2 the charging of a nearly empty battery is assumed. It shows the charging voltages $V_{bat}=V(15)-V(14)$, $V_{DCop}=V(153)-V(14)$, and the charging current for the above mentioned time constant components R_1 , R_2 , C_1 , C_2 . Fig. E5.2.3 illustrates the charging of the nearly fully charged battery. Note that in both cases the charging current is about constant due to the MOSFET switching action controlling the current $I(VDCop)$.

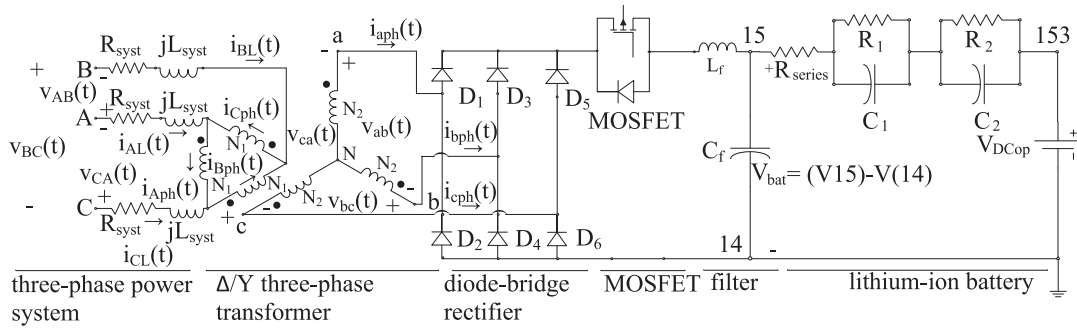


FIG. E5.2.1 Diode-bridge and series-connected MOSFET for a rated battery voltage of at a lithium-ion battery with voltage $V_{bat_rat}=600\text{ V}$ connected to the three-phase distribution system in Germany at rated phase voltage $V_{ph_rat}=230\text{ V}$ or corresponding rated line-to-line voltage $V_{L-L_rat}=\sqrt{3}\cdot V_{ph_rat}=398.36\text{ V}$, $f_{rat}=50\text{ Hz}$. The switching frequency of the MOSFET is 6 kHz .

Fig. E5.2.2 shows the lithium-ion, nonideal battery charging voltages and charging current.

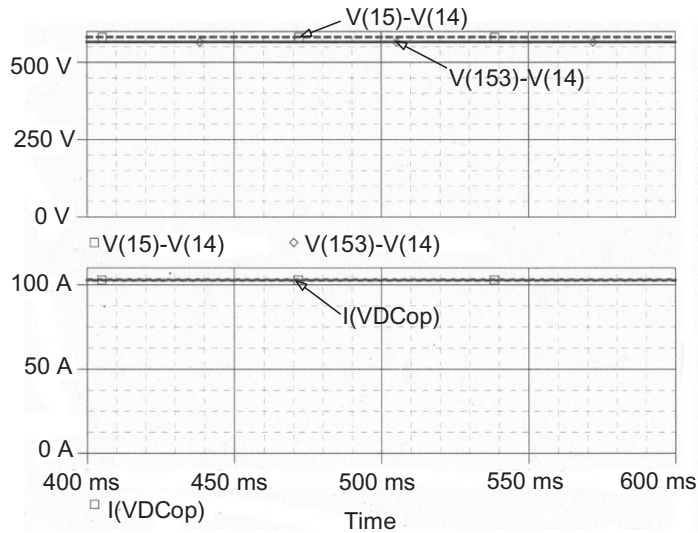


FIG. E5.2.2 Lithium-ion battery charging voltages $V_{bat}=V(15)-V(14)$, $V_{DCop}=V(153)-V(14)$ and battery charging current $I_{battery}=I(VDCop)$ as a function of time t for diode-bridge and series-connected MOSFET for a battery voltage of V_B open-circuit $=565\text{ V}$, battery charging $I_{bat}=100\text{ A}$ (nearly empty battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{ph_rat}=230\text{ V}$ or corresponding rated line-to-line voltage $V_{L-L_rat}=\sqrt{3}\cdot V_{ph_rat}=398.36\text{ V}$, $f_{rat}=50\text{ Hz}$. $R_{series}=0.15\ \Omega$, $R_1=1\ \Omega$, $R_2=0.02\ \Omega$, $C_1=200\text{ F}$, $C_2=300\text{ F}$. The switching frequency of the MOSFET is 6 kHz .

Table E5.2.1 lists the PSpice program for Fig. E5.2.2. Table E5.2.2 shows the harmonics for battery currents, see $I(VDCop)$ of Fig. E5.2.2.

TABLE E5.2.1 PSpice program for Application Example 5.2, and Fig. E5.2.2.

```

*Table E5.2.1
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a diode-
*bridge rectifier in series with Mosfet with LC filter
*primary line-to-line voltages at f=50 Hz,
*charging of almost empty battery
VAB 1 2 sin(0 563.28 50 0 0 -30)
VBC 2 3 sin(0 563.28 50 0 0 -150)
VCA 33 1 sin(0 563.28 50 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
L4 11 10 2000
L5 12 10 2000
L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 154 pulse(0 300 0 1u 1u 0.16667m 0.16667m)
mosfet 156 157 154 154 qfet
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 1
*C1 for time constant R1C1
C1 151 152 200
*R2 for time constant R2C2
R2 152 153 0.02
*C2 for time constant R2C2
C2 152 153 300
*VDCopen circuit
VDCop 153 14 565
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u

```

Continued

TABLE E5.2.1 PSpice program for Application Example 5.2, and Fig. E5.2.2—Cont'd

```

R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 600m 160m 100u uic
.four 50 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

TABLE E5.2.2 Harmonics for battery currents, see $I(VDCop)$ of Fig. E5.2.2.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)
DC COMPONENT = 1.0275E+02
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 5.0000E+01 6.4389E-04 1.0000E+00 2.8533E+01 0.0000E+00
6 3.0000E+02 1.8021E-01 2.7987E+02 -3.1742E+01 -2.0294E+02
TOTAL HARMONIC DISTORTION = 2.8196E+04 PERCENT

```

Fig. E5.2.3 shows the lithium-ion battery charging voltages $V_{bat} = V(15) - V(14)$, $V_{DCop} = V(153) - V(14)$ and battery charging current $I_{battery} = I(VDCop)$.

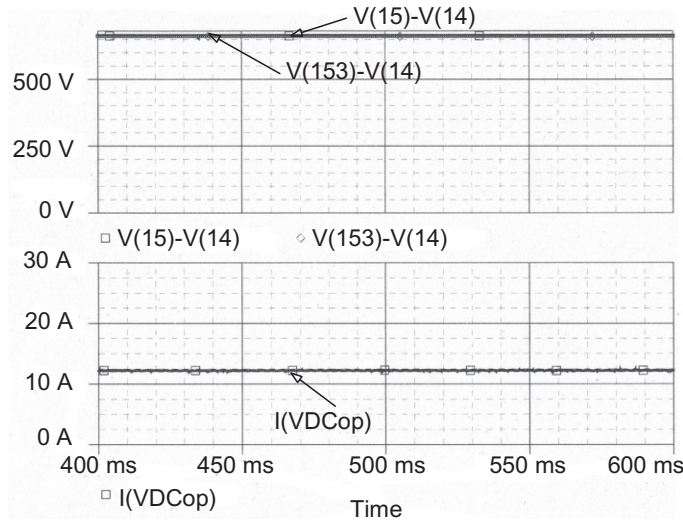


FIG. E5.2.3 Lithium-ion battery charging voltage $V_{bat} = V(15) - V(14)$, $V_{DCop} = V(153) - V(14)$ and battery charging current $I_{battery} = I(VDCop)$ as a function of time t for diode-bridge and series-connected MOSFET for a battery voltage of V_{DC} battery open-circuit = 660 V (about fully charged battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{ph_rat} = 230$ V or corresponding rated line-to-line voltage $V_{L-L_rat} = \sqrt{3} \cdot V_{ph_rat} = 398.36$ V, $f_{rat} = 50$ Hz, $R_{series} = 0.15 \Omega$, $R_1 = 1 \Omega$, $R_2 = 0.02 \Omega$, $C_1 = 200$ F, $C_2 = 300$ F. The switching frequency of the MOSFET is 6 kHz.

Table E5.2.3 lists the PSpice program for Fig. E5.2.3. Table E5.2.4 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.2.3.

TABLE E5.2.3 PSpice program for Application Example 5.2 and Fig. E5.2.3.

```
*Table E5.2.3
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a diode-
*bridge rectifier in series with MOSFET with LC filter
*primary line-to-line voltages at f=50 Hz,
*almost fully charged battery
VAB 1 2 sin(0 563.28 50 0 0 -30)
VBC 2 3 sin(0 563.28 50 0 0 -150)
VCA 3 1 sin(0 563.28 50 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
L4 11 10 2000
L5 12 10 2000
L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 154 pulse(0 300 0 1u 1u 0.154m 0.16667m)
mosfet 156 157 154 154 qfet
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 1
*C1 for time constant R1C1
C1 151 152 200
*R2 for time constant R2C2
R2 152 153 0.02
```

Continued

TABLE E5.2.3 PSpice program for Application Example 5.2 and Fig. E5.2.3—Cont'd

```

*C2 for time constant R2C2
C2 152 153 300
*VDCopen circuit
VDCop 153 14 660
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 600m 160m 100u uic
.four 50 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.2.4 Harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.2.3.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)
DC COMPONENT = 1.2117E+01
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 5.0000E+01 6.9862E-03 1.0000E+00 2.9824E+01 0.0000E+00
6 3.0000E+02 4.1304E-02 5.9123E+00 6.5657E+01 -1.1329E+02
TOTAL HARMONIC DISTORTION = 6.0177E+02 PERCENT

```

The following results (Fig. E5.2.4) pertain to the battery voltages and currents for the following changed battery parameters $R_{\text{series}} = 0.15 \Omega$, $R_1 = 10 \Omega$, $R_2 = 0.2 \Omega$, $C_1 = 20 \text{ F}$, $C_2 = 30 \text{ F}$.

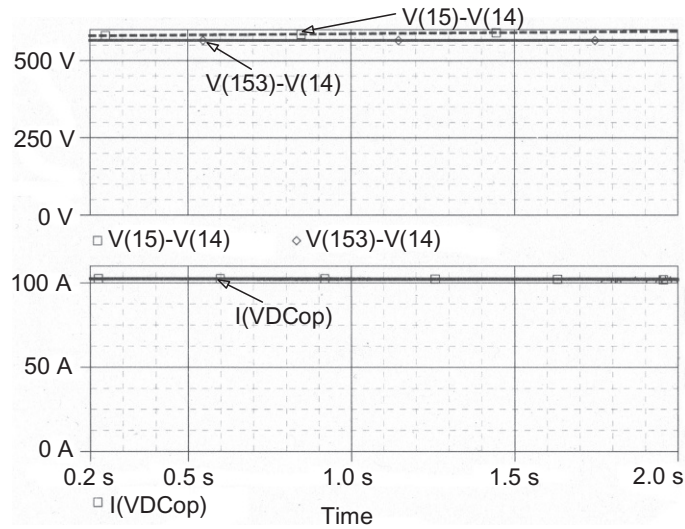


FIG. E5.2.4 Lithium-ion battery charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$ and battery charging current $I_{\text{battery}} = I(\text{VDCop})$ as a function of time t for diode-bridge and series-connected MOSFET for a battery voltage of $V_{\text{B open-circuit}} = 565 \text{ V}$, battery charging $I_{\text{bat}} = 100 \text{ A}$ (nearly empty battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{\text{ph_rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36 \text{ V}$, $f_{\text{rat}} = 50 \text{ Hz}$. The switching frequency of the MOSFET is 6 kHz .

Table E5.2.5 lists the PSpice program for Fig. E5.2.4. Table E5.2.6 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.2.4.

TABLE E5.2.5 PSpice program for Application Example 5.2 and Fig. E5.2.4.

```
*Table E5.2.5
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a diode-
*bridge rectifier in series with MOSFET with LC filter
*primary line-to-line voltages at f=50 Hz,
*charging of almost empty battery
VAB 1 2 sin(0 563.28 50 0 0 -30)
VBC 2 3 sin(0 563.28 50 0 0 -150)
VCA 3 1 sin(0 563.28 50 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
```

Continued

TABLE E5.2.5 PSpice program for Application Example 5.2 and Fig. E5.2.4—Cont'd

```

L4 11 10 2000
L5 12 10 2000
L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 154 pulse(0 300 0 1u 1u 0.16667m 0.16667m)
mosfet 156 157 154 154 qfet
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 10
*C1 for time constant R1C1
C1 151 152 20
*R2 for time constant R2C2
R2 152 153 0.2
*C2 for time constant R2C2
C2 152 153 30
*VDCopen circuit
VDCop 153 14 565
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 2000m 160m 100u uic
.four 50 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.2.6 Harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.2.4.

FOURIER COMPONENTS OF TRANSIENT RESPONSE $I(\text{VDCop})$					
DC COMPONENT = 1.0212E+02					
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED					
NO (HZ)	COMPONENT	COMPONENT (DEG)	PHASE (DEG)		
1	5.0000E+01	1.4649E-03	1.0000E+00	-3.4325E+00	0.0000E+00
6	3.0000E+02	1.8002E-01	1.2289E+02	-3.0515E+01	-9.9204E+00
TOTAL HARMONIC DISTORTION = 1.2380E+04 PERCENT					

The following results (Fig. E5.2.5) pertain to the battery voltages and currents for the following changed nonideal battery parameters: $R_{\text{series}} = 0.15 \Omega$, $R_1 = 10 \Omega$, $R_2 = 0.2 \Omega$, $C_1 = 20 \text{ F}$, $C_2 = 3000 \text{ F}$.

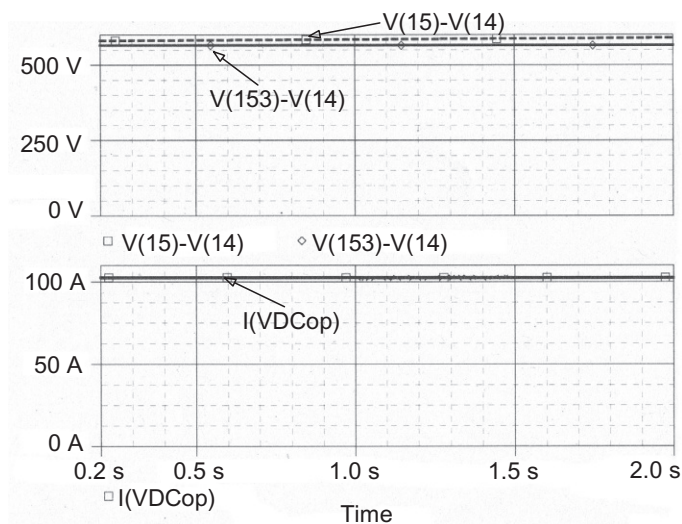


FIG. E5.2.5 Lithium-ion battery charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$ and battery charging current $I_{\text{battery}} = I(\text{VDCop})$ as a function of time t for diode-bridge and series-connected MOSFET for a battery voltage of $V_{\text{B open-circuit}} = 565 \text{ V}$, battery charging $I_{\text{bat}} = 100 \text{ A}$ (nearly empty battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{\text{ph, rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L, rat}} = \sqrt{3} \cdot V_{\text{ph, rat}} = 398.36 \text{ V}$, $f_{\text{rat}} = 50 \text{ Hz}$. The switching frequency of the MOSFET is 6 kHz .

Table E5.2.7 lists the PSpice program for Fig. E5.2.5. Table E5.2.8 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.2.5.

TABLE E5.2.7 PSpice program for Application Example 5.2 and Fig. E5.2.5.

```

*Table E5.2.7
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a diode-
*bridge rectifier in series with MOSFET with LC filter
*primary line-to-line voltages at f=50 Hz
*charging of almost empty battery
VAB 1 2 sin(0 563.28 50 0 0 -30)
VBC 2 3 sin(0 563.28 50 0 0 -150)
VCA 33 1 sin(0 563.28 50 0 0 -270)

```

Continued

TABLE E5.2.7 PSpice program for Application Example 5.2 and Fig. E5.2.5—Cont'd

```

R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
L4 11 10 2000
L5 12 10 2000
L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 154 pulse(0 300 0 1u 1u 0.16667m 0.16667m)
mosfet 156 157 154 154 qfet
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 10
*C1 for time constant R1C1
C1 151 152 20
*R2 for time constant R2C2
R2 152 153 0.2
*C2 for time constant R2C2
C2 152 153 3000
*VDCopen circuit
VDCop 153 14 565
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6

```

Continued

TABLE E5.2.7 PSpice program for Application Example 5.2 and Fig. E5.2.5—Cont'd

```

+vt0=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 2000m 160m 100u uic
.four 50 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.2.8 Harmonics for battery currents, see $I(VDCop)$ of Fig. E5.2.5.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)
DC COMPONENT = 1.0236E+02
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 5.0000E+01 1.0212E-03 1.0000E+00 6.4517E+00 0.0000E+00
6 3.0000E+02 1.7999E-01 1.7625E+02 -3.1147E+01 -6.9857E+01
TOTAL HARMONIC DISTORTION = 1.7755E+04 PERCENT

```

The following results (Fig. E5.2.6) pertain to the battery voltages and currents for the following changed nonideal battery parameters: $R_{\text{series}} = 0.15 \Omega$, $R_1 = 10 \Omega$, $R_2 = 0.2 \Omega$, $C_1 = 20 \text{ F}$, $C_2 = 3000 \text{ F}$.

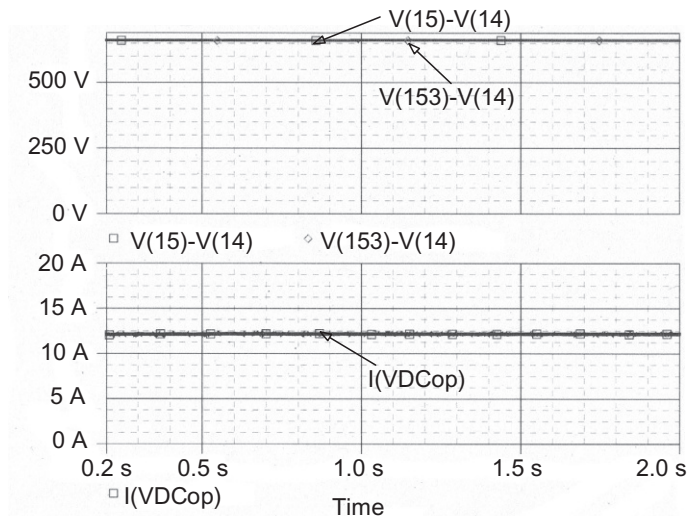


FIG. E5.2.6 Lithium-ion battery charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$ and battery charging current $I_{\text{battery}} = I(VDCop)$ as a function of time t for diode-bridge and series-connected MOSFET for a battery voltage of $V_{\text{B open-circuit}} = 660 \text{ V}$, battery charging $I_{\text{bat}} = 13 \text{ A}$ (nearly fully charged battery) connected to the three-phase distribution system in Germany at rated phase voltage $V_{\text{ph, rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L, rat}} = \sqrt{3} \cdot V_{\text{ph, rat}} = 398.36 \text{ V}$, $f_{\text{rat}} = 50 \text{ Hz}$. The switching frequency of the MOSFET is 6 kHz.

Table E5.2.9 lists the PSpice program for Fig. E5.2.6. Table E5.2.10 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.2.6.

TABLE E5.2.9 PSpice program for Application Example 5.2 and Fig. E5.2.6.

```
*Table E5.2.9
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a diode-
*bridge rectifier in series with MOSFET with LC filter
*primary line-to-line voltages at f=50 Hz,
*nearly fully charged battery
VAB 1 2 sin(0 563.28 50 0 0 -30)
VBC 2 3 sin(0 563.28 50 0 0 -150)
VCA 3 1 sin(0 563.28 50 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
L4 11 10 2000
L5 12 10 2000
L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 154 pulse(0 300 0 1u 1u 0.154m 0.16667m)
mosfet 156 157 154 154 qfet
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 10
*C1 for time constant R1C1
C1 151 152 20
```

Continued

TABLE E5.2.9 PSpice program for Application Example 5.2 and Fig. E5.2.6—Cont'd

```

*R2 for time constant R2C2
R2 152 153 0.2
*C2 for time constant R2C2
C2 152 153 3000
*VDCopen circuit
VDCop 153 14 660
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 2000m 160m 100u uic
.four 50 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.2.10 Harmonics for battery currents, see $I(VDCop)$ of Fig. E5.2.6.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)
DC COMPONENT = 1.2121E+01
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 5.0000E+01 3.1565E-03 1.0000E+00 -4.3586E+01 0.0000E+00
2 1.0000E+02 3.9057E-03 1.2373E+00 1.6571E+01 1.0374E+02
3 1.5000E+02 4.0607E-03 1.2865E+00 9.7595E+00 1.4052E+02
4 2.0000E+02 4.0895E-04 1.2956E-01 -1.5738E+02 1.6965E+01
5 2.5000E+02 5.8437E-04 1.8513E-01 -2.3318E+01 1.9461E+02
6 3.0000E+02 4.3367E-02 1.3739E+01 6.2450E+01 3.2396E+02
TOTAL HARMONIC DISTORTION = 1.3962E+03 PERCENT

```

5.2.2.1 Conclusion

For the nearly empty or fully charged nonideal lithium-ion battery the harmonic currents are maxima for the 6th harmonic and in all cases less than 1%. This means the use of a MOSFET as compared with a thyristor as a nonlinear switch is preferable from a harmonic current suppression point of view—although it is the more expensive circuit. The switching frequency of the MOSFET is 6 kHz.

5.2.3 Application Example 5.3: Delta-wye, three-phase transformer supplying half-controlled thyristor bridge with $L_f C_f$ output filter charging lithium-ion battery

The rated phase voltage of the three-phase distribution system is $V_{ph_rat} = 230$ V at the rated frequency of $f_{rat} = 60$ Hz or the corresponding rated line-to-line voltage is $V_{L-L_rat} = \sqrt{3} \cdot V_{ph_rat} = 398.36$ V. In the following example a rated battery of 100 kWh is assumed, where the charging (see Fig. E5.1.4) current ranges from 100 A, 65 A, 37 A to 12.5 A when the lithium-ion battery has charging voltages ranging from 565 V, 610 V, 640 V to 660 V for high current at low voltage charging (nearly empty battery) to low current and high voltage (about fully charged battery) charging conditions, respectively, whereby the harmonic voltages are minimized through an output $L_f C_f$ filter across the terminals of the charging cable.

Note that during the charging process the current is controlled through the half-controlled thyristor bridge, and the voltage is dictated by the lithium-ion battery. Fig. E5.3.1 shows the circuit diagram of the charger whereby a Δ - $Y_{ungrounded}$ three-phase transformer prevents triplen harmonics entering the distribution system; in addition, the output $L_f C_f$ filter is used to minimize integer and noninteger harmonics at the feeding and supplying end of the charging network. The half-controlled thyristor bridge rectifier results in a charging circuit which has about the same harmonic current generation as compared with the circuit of Application Example 5.1 which employs a thyristor in series with a diode-bridge.

The three-phase distribution system has the per-phase parameters $R_{sys} = 100$ m Ω , and $L_{sys} = 1.3263$ mH with a step-up Δ/Y transformer primary inductance PSpice parameters $L_1 = L_2 = L_3 = 180$, secondary inductance PSpice parameters $L_4 = L_5 = L_6 = 1500$ (for nearly empty battery) or 2000 (for nearly fully charged battery), coupling factors $K15 = 0.999999$, $K24 = 0.999999$, $K36 = 0.999999$, output filter $C_f = 50,000$ μ F, $L_f = 100$ mH.

Lithium-battery parameters $V_{DC} = 600$ V, $I_{DC} = 55.56$ A, $R_{series} = 0.15$ Ω , $R_1 = 0.1$ Ω , $R_2 = 0.002$ Ω , $C_1 = 2000$ F, $C_2 = 3000$ F. The two time constants are $R_1 C_1$ and $R_2 C_2$. It should be noted that the charging response of the battery somewhat depends upon the above-mentioned R_i and C_i values for $i = 1, 2$.

Fig. E5.3.1 shows the circuit diagram of the charger for a lithium-ion battery using a step-up Δ/Y three-phase transformer supplying power to a half-controlled thyristor bridge and an output filter $L_f C_f$. The inductances $L_{S2} = L_{S4} = L_{S6} = 10$ nH limit the very high frequency signals due to thyristor switching. In Fig. E5.3.2 the charging of a nearly empty battery is assumed. It shows the charging voltages V_{bat} and V_{DCop} for the above-mentioned time constant components R_1, R_2, C_1, C_2 . Fig. E5.3.3 illustrates the charging of the nearly fully charged battery. Note that in both cases the charging current is about constant due to the thyristor switching action controlling the current $I_{DC \text{ battery}}(t) = I(V_{DCop})$.

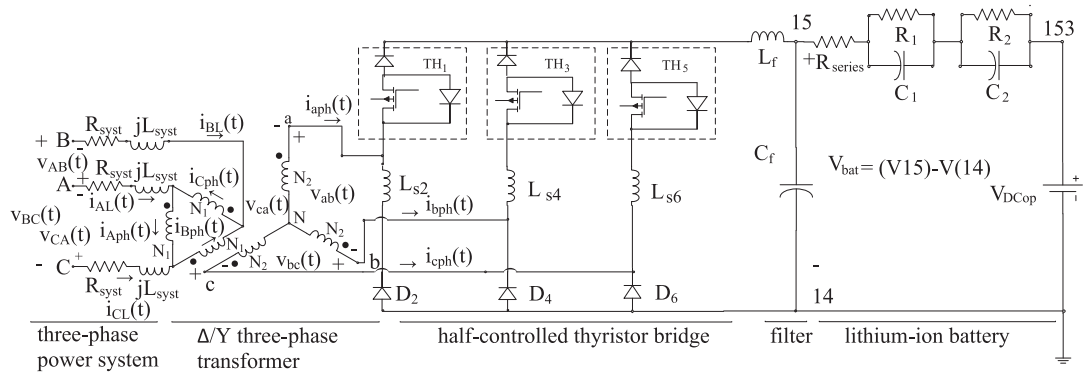


FIG. E5.3.1 Half-controlled thyristor bridge for a rated battery voltage of a lithium-ion battery with voltage $V_{\text{battery_rat}} = 600 \text{ V}$ connected to the three-phase distribution system at rated phase voltage $V_{\text{ph_rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36 \text{ V}$ at $f_{\text{rat}} = 60 \text{ Hz}$.

The following results (Fig. E5.3.2) pertain to the battery voltages and currents for the changed nonideal battery parameters: $R_{\text{series}} = 0.15 \Omega$, $R_1 = 0.1 \Omega$, $R_2 = 0.002 \Omega$, $C_1 = 2000 \text{ F}$, $C_2 = 3000 \text{ F}$.

Table E5.3.1 lists the PSpice program for Fig. E5.3.2. Table E5.3.2 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.3.2.

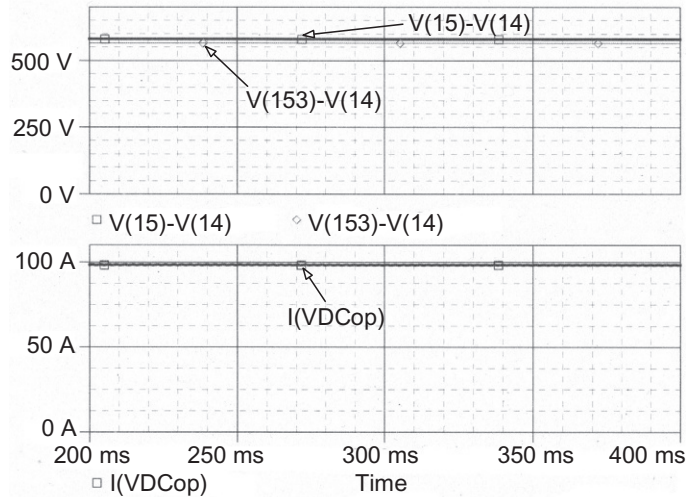


FIG. E5.3.2 Lithium-ion battery charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$ and battery charging current $I_{\text{battery}} = I(\text{VDCop})$ as a function of time t for half-controlled thyristor bridge for a battery voltage of $V_{\text{B open-circuit}} = 565 \text{ V}$, battery charging $I_{\text{bat}} = 100 \text{ A}$ (nearly empty battery) connected to the three-phase distribution system at rated phase voltage $V_{\text{ph_rat}} = 230 \text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36 \text{ V}$ at $f_{\text{rat}} = 60 \text{ Hz}$.

TABLE E5.3.1 PSpice program for Application Example 5.3 and Fig. E5.3.2.

```

*Table E5.3.1
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a half-controlled
*thyristor bridge rectifier in series with LC filter
*primary line-to-line voltages at f=60 Hz,
*charging nearly empty battery
VAB 1 2 sin(0 563.28 60 0 0 -30)
VBC 2 3 sin(0 563.28 60 0 0 -150)
VCA 33 1 sin(0 563.28 60 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
L3 8 40 180
L4 11 10 1500
L5 12 10 1500
L6 13 10 1500
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*half-controlled thyristor bridge
D1 11b 154 Dideal
mosfet1 11 11a 11b 11b qfet
vmosfet1 11a 11b pulse(0 300 0 1u 1u 16.667m 16.667m)
D2 14 110 Dideal
LS2 11 110 10n
D3 12b 154 Dideal
mosfet3 12 12a 12b 12b qfet
vmosfet3 12a 12b pulse(0 300 5.555m 1u 1u 16.667m 16.667m)
D4 14 120 Dideal
LS4 12 120 10n
D5 13b 154 Dideal
mosfet5 13 13a 13b 13b qfet
vmosfet5 13a 13b pulse(0 300 11.11m 1u 1u 16.667m 16.667m)
D6 14 130 Dideal
LS6 13 130 10n
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries

```

Continued

TABLE E5.3.1 PSpice program for Application Example 5.3 and Fig. E5.3.2—Cont'd

```

Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 0.1
*C1 for time constant R1C1
C1 151 152 2000
*R2 for time constant R2C2
R2 152 153 0.002
*C2 for time constant R2C2
C2 152 153 3000
*VDCopen circuit
VDCop 153 14 565
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 400m 160m 100u uic
.four 60 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.3.2 Harmonics for battery currents, see $I(VDCop)$ of Fig. E5.3.2.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)
DC COMPONENT = 9.8401E+01
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 6.0000E+01 3.2226E-04 1.0000E+00 1.4181E+02 0.0000E+00
6 3.6000E+02 1.2027E-01 3.7322E+02 -3.3371E+01 -8.8425E+02
TOTAL HARMONIC DISTORTION = 3.7619E+04 PERCENT

```

The following results (Fig. E5.3.3) pertain to the battery voltages and currents for the following changed nonideal battery parameters: $R_{\text{series}} = 0.15 \Omega$, $R_1 = 0.1 \Omega$, $R_2 = 0.002 \Omega$, $C_1 = 2000 \text{ F}$, $C_2 = 3000 \text{ F}$.

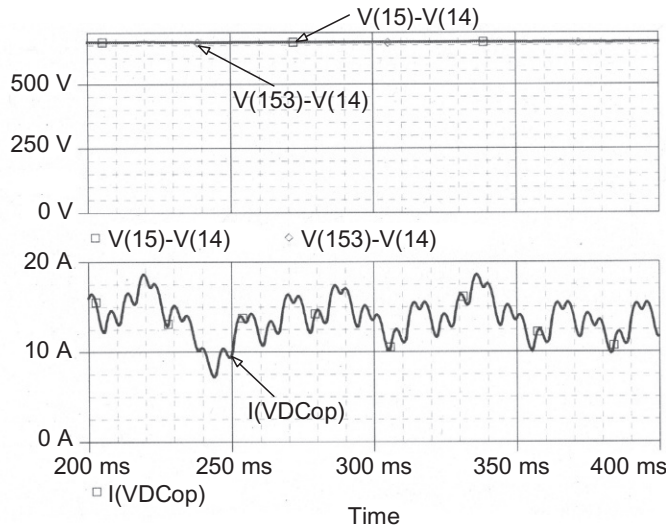


FIG. E5.3.3 Lithium-ion battery charging voltages $V_{\text{bat}} = V(15) - V(14)$, $V_{\text{DCop}} = V(153) - V(14)$ and battery charging current $I_{\text{battery}} = I(\text{VDCop})$ as a function of time t for diode-bridge for half-controlled thyristor bridge for a battery voltage of $V_{\text{DC battery open-circuit}} = 660\text{ V}$ (about fully charged battery at $f_{\text{rat}} = 60\text{ Hz}$) connected to the three-phase distribution system at rated phase voltage $V_{\text{ph_rat}} = 230\text{ V}$ or corresponding rated line-to-line voltage $V_{\text{L-L_rat}} = \sqrt{3} \cdot V_{\text{ph_rat}} = 398.36\text{ V}$.

Table E5.3.3 lists the PSpice program for Fig. E5.3.3. Table E5.3.4 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.3.3.

TABLE E5.3.3 PSpice program for Application Example 5.3 and Fig. E5.3.3.

```
*Table E5.3.3
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lithium-ion battery via a half-controlled
*thyristor bridge rectifier in series with LC filter
*primary line-to-line voltages at f=60 Hz,
*nearly fully charged battery
VAB 1 2 sin(0 563.28 60 0 0 -30)
VBC 2 3 sin(0 563.28 60 0 0 -150)
VCA 3 3 1 sin(0 563.28 60 0 0 -270)
R33 3 33 0.1u
*grid impedances
RsysA 6 1 100m
RsysB 4 2 100m
RsysC 5 3 100m
LsysA 7 6 1326.3u
LsysB 9 4 1326.3u
LsysC 8 5 1326.3u
*step-up transformer of primary to secondary line-to-line voltages
L2 7 8 180
L1 9 7 180
```

Continued

TABLE E5.3.3 PSpice program for Application Example 5.3 and Fig. E5.3.3—Cont'd

```

L3 8 40 180
L4 11 10 2000
L5 12 10 2000
L6 13 10 2000
K15 L1 L5 0.999999
K24 L2 L4 0.999999
K36 L3 L6 0.999999
*R8 8 0 10meg
*half-controlled thyristor bridge
D1 11b 154 Dideal
mosfet1 11 11a 11b 11b qfet
vmosfet1 11a 11b pulse(0 300 0 1u 1u 5.7m 16.667m)
D2 14 110 Dideal
LS2 11 110 10n
D3 12b 154 Dideal
mosfet3 12 12a 12b 12b qfet
vmosfet3 12a 12b pulse(0 300 5.555m 1u 1u 5.7m 16.667m)
D4 14 120 Dideal
LS4 12 120 10n
D5 13b 154 Dideal
mosfet5 13 13a 13b 13b qfet
vmosfet5 13a 13b pulse(0 300 11.11m 1u 1u 5.7m 16.667m)
D6 14 130 Dideal
LS6 13 130 10n
*filter
Lf 154 15 100m
Cf 15 14 50000u
*lithium-ion battery
*Rseries
Rs 15 151 0.15
*R1 for time constant R1C1
R1 151 152 0.1
*C1 for time constant R1C1
C1 151 152 2000
*R2 for time constant R2C2
R2 152 153 0.002
*C2 for time constant R2C2
C2 152 153 3000
*VDCopen circuit
VDCop 153 14 660
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)

```

Continued

TABLE E5.3.3 PSpice program for Application Example 5.3 and Fig. E5.3.3—Cont'd

```
.tran 100u 400m 160m 100u uic
.four 60 21 V(15,14) V(153,14) I(VDCop)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end
```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.3.4 Harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.3.3.

```
FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)
DC COMPONENT = 1.4067E+01
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 6.0000E+01 1.5758E+00 1.0000E+00 1.1939E+02 0.0000E+00
2 1.2000E+02 4.9418E-01 3.1360E-01 1.0804E+02 -1.3074E+02
3 1.8000E+02 1.0092E+00 6.4044E-01 -5.2026E+01 -4.1020E+02
TOTAL HARMONIC DISTORTION = 7.1935E+01 PERCENT
```

5.2.3.1 Conclusions

When the nearly empty lithium-ion battery is charged with about 102 A the charging current has a small 420 Hz component of about 0.115% while the nearly fully charged battery is absorbing a charging current of about 14.07 A with a 60 Hz component of 11.16%, 120 Hz component of 3.51%, 180 Hz component of 7.105%, and 240 Hz component of 0.59%. Depending upon the sensitivity of the lithium-ion battery to current harmonics it is advisable to replace the half-controlled thyristor bridge of Fig. E5.3.1 by a MOSFET as done in Application Example 5.2. The charging of the lithium-ion battery at almost empty and almost fully charged states results in current harmonics which could result in either reduction of the lifetime or failure of the battery due to exceeding rated temperature. The reduction of harmonics during the charging appears to be worthwhile and could be accomplished by choosing a variable switching frequency of the thyristor.

5.2.4 Application Example 5.4: Current-controlled discharging a lithium-ion to support three-phase distribution system's operation [53]

A fully charged lithium-ion battery with $V_{\text{DC battery_open_circuit}} = 660 \text{ V}$ discharges into the three-phase power system at rated phase voltage $V_{\text{ph_rat}} = 230 \text{ V}$ at $f_{\text{rat}} = 50 \text{ Hz}$ delivering real and reactive power. Nonideal lithium-ion battery parameters are $R_{\text{series}} = 0.15 \Omega$, $R_1 = 0.1 \Omega$, $R_2 = 0.002 \Omega$, $C_1 = 2000 \text{ F}$, $C_2 = 3000 \text{ F}$. The per-phase system impedance of the distribution system (sys) is $Z_{\text{sys}} = (R_{\text{sys}} + j\omega L_{\text{sys}})$ with $R_{\text{sys}} = R_M = 0.59 \Omega$ and $L_{\text{sys}} = L_M = 1.838 \text{ mH}$, where M stands for main power system and m for milli. The turns ratio of the wye/wye transformer [2] is given by the

caption of Fig. E5.4.1 for the Y/Y three-phase transformer of Fig. E5.4.2, where $N_1/N_2=400\text{ V}/140\text{ V}=2.857$ and $L_1=180$ and $L_4=18$ in PSpice program. Note that the high-frequency harmonic can be eliminated by appropriate filters which could not be included because PSpice can accommodate 64 nodes only.

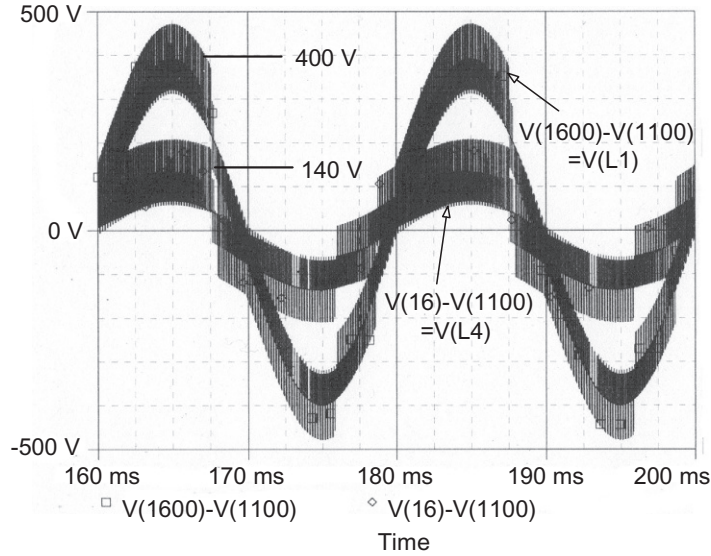


FIG. E5.4.1 Determination of turns ratio $N_1/N_2=400\text{ V}/140\text{ V}=2.857$ of wye/wye three-phase transformer.

The nonideal lithium-ion battery and the full-wave three-phase PWM current-controlled, voltage-source inverter supplying real and reactive power to the power system is presented in Fig. E5.4.2. The displacement (fundamental) power factor is in Fig. E5.4.3 $\cos \theta = 0.80$ leading, where the phase current leads the phase voltage by $\theta = 36.87^\circ$ (i.e., based on consumer definition of current reactive power Q [1,2,54,55] is supplied to grid). The current fed into the grid is controlled, but the voltage is given by the grid. Note there must be a phase-lock loop [54,55] for the control/gating of the inverter, where the frequency of the distribution system is sensed and applied to the inverter gating circuit. The waveshaping (w) inductors have the impedance $Z_w = (R_w + j\omega L_w)$, where $R_{wa} = R_{wb} = R_{wc} = 10\text{ m}\Omega$ and $L_{wa} = L_{wb} = L_{wc} = 1\text{ mH}$. The battery voltage is $V_{\text{DC_bat}} = 660\text{ V}$.

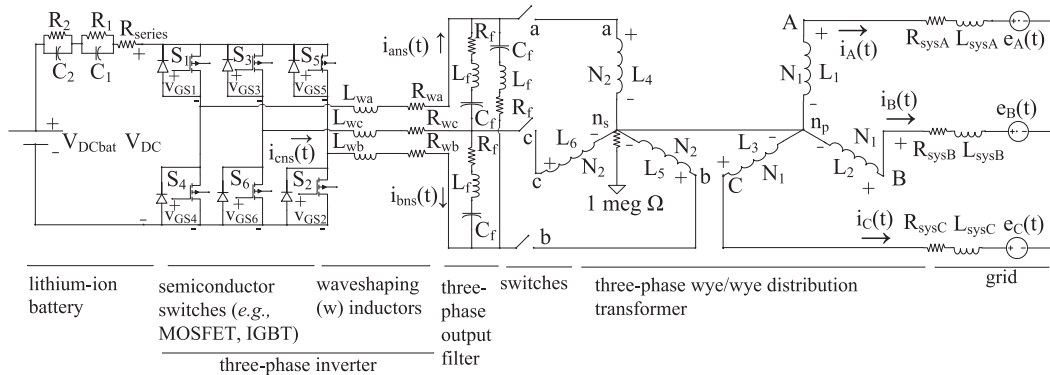


FIG. E5.4.2 Discharge circuit of **nonideal** lithium-ion battery supplying energy to distribution power system via current-controlled, voltage source inverter, waveshaping network, and Y/Y transformer.

PSpice analysis generates for the battery voltage V_{DC_bat} , the battery current $I(VDC_bat) = I(Vbat)$, the phase voltages $e_A(t) = V(19) - V(123)$, $e_B(t) = V(29) - V(123)$, $e_C(t) = V(39) - V(123)$ and phase currents $i_{ans}(t) = I(Rwa)$, $i_{bns}(t) = I(Rwb)$, $i_{cns}(t) = I(Rwc)$ as shown in Fig. E5.4.3. The modulation index [1,2,54,55] is $m_{existing} = V_{ph} \cdot 2 \sqrt{2} / V_{DC_bat} = 230 \cdot 2 \sqrt{2} / 660 = 0.985$ which is too high and must be for leading power factors $m_{desirable} \approx 0.5$. This means the battery voltage must be either increased by a direct current (DC) or DC-DC step-up converter, or a step-up transformer must be relied on, as shown in Fig. E5.4.2. It turns out that controlled grid currents and voltages are identical for ideal and nonideal lithium-ion batteries as shown in Fig. E5.4.3 because the PWM current-controlled, voltage-source inverter determines the waveshape of the current. The currents through the inverter-side windings of the transformer, that is, the low-voltage high-current windings, are plotted. The distribution-side winding of the transformer contains, as indicated in Fig. E5.4.1, a fairly high amount of inverter switching harmonics which can be reduced through a three-phase high frequency filter.

Due to the current-controlled, voltage-source inverter the circuit of Fig. E5.4.2 can be used for voltage control by selecting a current-voltage phase shift of $\theta = 90^\circ$ acting as a capacitor, as shown in Fig. E5.4.4. Alternatively, one can impose the phase shift between current and voltage as $\theta = -90^\circ$ acting as an inductor, as presented in Fig. E5.4.5. Of course, any phase shift in the range $-90^\circ \leq \theta \leq 90^\circ$ can be chosen, which permits a local voltage control for the distribution feeder to which the battery is connected through the network of Fig. E5.4.2.

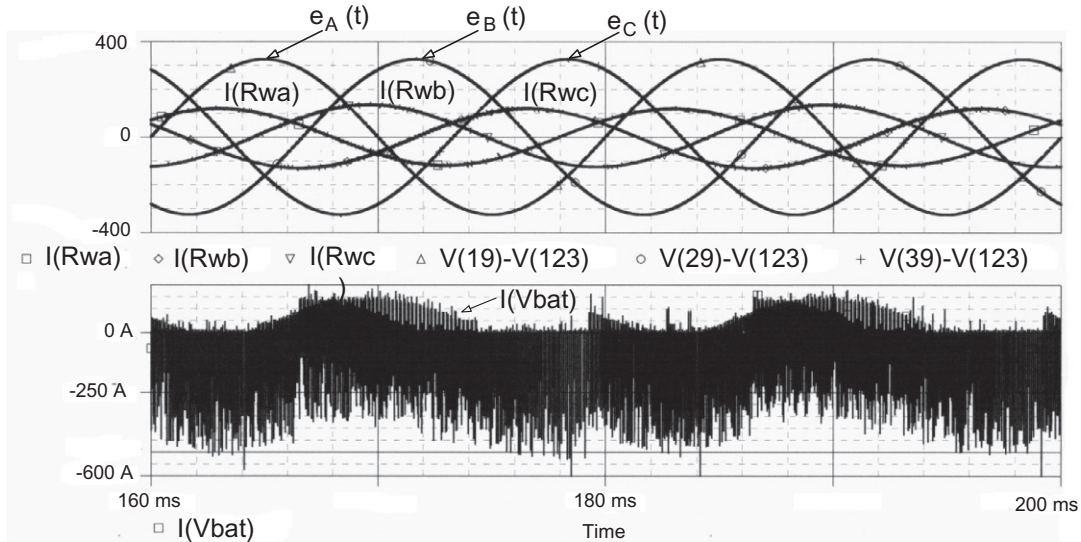


FIG. E5.4.3 Distribution phase voltages $e_A(t) = V(19) - V(123)$, $e_B(t) = V(29) - V(123)$, $e_C(t) = V(39) - V(123)$ and waveshaping currents $i_{ans}(t) = I(Rwa)$, $i_{bns}(t) = I(Rwb)$, $i_{cns}(t) = I(Rwc)$ and $I(VDCbat) = I(Vbat)$ whereby the phase currents lead the phase voltages by $\theta = 36.87^\circ$ $V_{DCbat} = 660$ V, $f_{rat} = 50$ Hz with nonideal battery parameters $R_{series} = 0.15 \Omega$, $R_1 = 0.1 \Omega$, $R_2 = 0.002 \Omega$, $C_1 = 2000$ F, $C_2 = 3000$ F.

Table E5.4.1 lists the PSpice program for Fig. E5.4.3.

TABLE E5.4.1 PSpice program for Application Example 5.4 and Fig. E5.4.3.

```

*Table E5.4.1
*Non-ideal lithium-ion battery at leading power factor
*(PWM) current-controlled voltage-source inverter
*supplying from an non-ideal lithium-ion battery energy into
*the distribution system
Vbat 2 0 660
*non-ideal lithium-ion battery parameters
R1 2000 20000 0.1
R2 200 2000 0.002
C1 2000 20000 2000
C2 200 2000 3000
Rseries 20000 2 0.15
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
lwa 10 15 1m
lwb 20 25 1m
lwc 30 35 1m
Rwa 15 16 10m
Rwb 25 26 10m
Rwc 35 36 10m
*step-up transformer of secondary (we) to primary (delta)
*line-to-line voltages
L1 1600 1100 180
L2 3600 1100 180
L3 2600 1100 180
L4 16 1100 18
L5 36 1100 18
L6 26 1100 18
R6 1100 11001 0.1
K14 L1 L4 0.99999
K25 L2 L5 0.99999
K36 L3 L6 0.99999
*current references in terms of voltages

```

Continued

TABLE E5.4.1 PSpice program for Application Example 5.4 and Fig. E5.4.3—Cont'd

```

vref1 12 0 sin(0 125 50 0 0 36.87)
vref2 22 0 sin(0 125 50 0 0 -203.13)
vref3 32 0 sin(0 125 50 0 0 -83.13)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 5 0 pulse(-20 20 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
*as result of comparison between
*triangular waveform and error signal
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*Gating for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*Filter is deleted because PSpice is limited to 64 nodes
*Parameters of power system with line-to-
*neutral induced (phase) voltages ea, eb, ec
RM1 1600 18 0.59
LM1 18 19 1.838m
Vout1 19 123 sin(0 325 50 0 0 0)
RM2 2600 28 0.59
LM2 28 29 1.838m
Vout2 29 123 sin(0 325 50 0 0 -120)
RM3 3600 38 0.59
LM3 38 39 1.838m
Vout3 39 123 sin(0 325 50 0 0 -240)
Rground 123 11001 0.1
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k

```

Continued

TABLE E5.4.1 PSpice program for Application Example 5.4 and Fig. E5.4.3—Cont'd

```
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.001m chgtol=0.001m
+reltol=5m vntol=1m itl5=0 itl4=400
*transient analysis
.tran 5u 200m 160m 5u
*plotting of traces
.probe
*Fourier analysis
.four 50 12 I(Rwa)
.end
```

Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

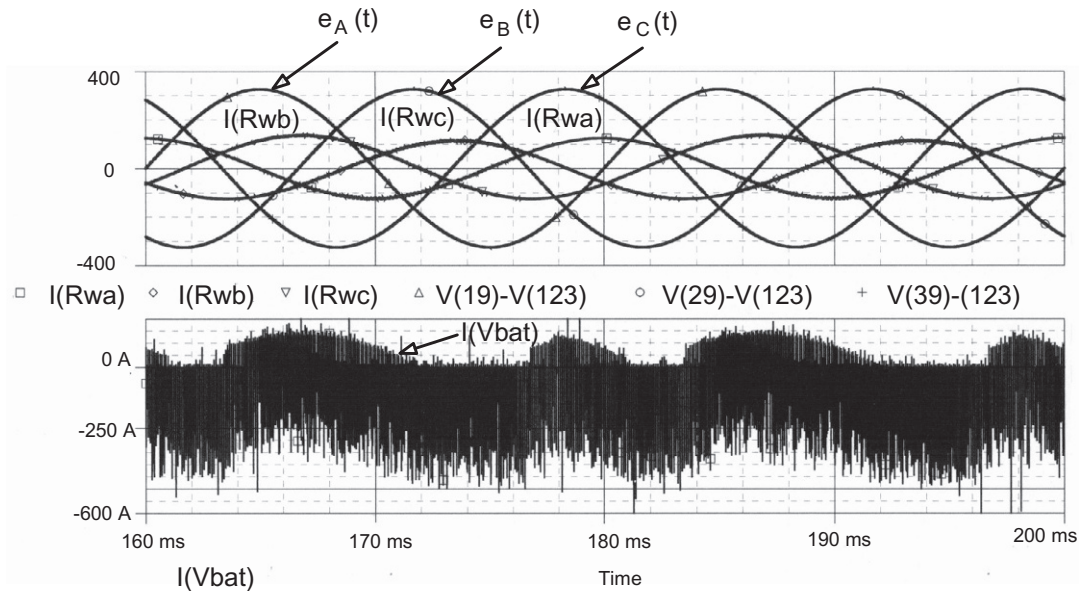


FIG. E5.4.4 Distribution phase voltages $e_A(t) = V(19) - V(123)$, $e_B(t) = V(29) - V(123)$, $e_C(t) = V(39) - V(123)$, and waveshaping currents $i_{ans}(t) = I(Rwa)$, $i_{bns}(t) = I(Rwb)$, $i_{cns}(t) = I(Rwc)$, and $I(VDCbat) = I(Vbat)$ whereby the phase currents lead the phase voltages by $\theta = 90^\circ$, the battery acts like capacitor with **nonideal** battery parameters $R_{series} = 0.15 \Omega$, $R_1 = 0.1 \Omega$, $R_2 = 0.002 \Omega$, $C_1 = 2000 \text{ F}$, $C_2 = 3000 \text{ F}$.

Table E5.4.2 lists the PSpice program for Fig. E5.4.4.

TABLE E5.4.2 PSpice program for Application Example 5.4 and Fig. E5.4.4.

```

*Table E5.4.2
*non-ideal lithium-ion battery behaves like a capacitor
*Current-controlled pulse-width-modulated
*(PWM) current-controlled voltage-source inverter
*supplying from a non-ideal lithium-ion battery reactive power
*into distribution system
Vbat 200 0 660
*non-ideal lithium-ion battery parameters
R1 2000 20000 0.1
R2 200 2000 0.002
C1 2000 20000 2000
C2 200 2000 3000
Rseries 20000 2 0.15
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
lwa 10 15 1m
lwb 20 25 1m
lwc 30 35 1m
Rwa 15 16 10m
Rwb 25 26 10m
Rwc 35 36 10m
*step-up transformer of secondary (wye) to primary (delta)
*line-to-line voltages
L1 1600 2600 240
L3 2600 260 240
R3 260 3600 0.0001m
L2 3600 1600 240
L4 16 110 18
L5 36 110 18
L6 26 110 18
R6 110 0 1meg
K14 L1 L4 1.0
K36 L3 L6 1.0

```

Continued

TABLE E5.4.2 PSpice program for Application Example 5.4 and Fig. E5.4.4—Cont'd

```

K25 L2 L5 1.0
*current references in terms of voltages
vref1 12 0 sin(0 125.0 50 0 0 90)
vref2 22 0 sin(0 125.0 50 0 0 -30)
vref3 32 0 sin(0 125.0 50 0 0 -150)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 5 0 pulse(-10 10 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
*as result of comparison between
*triangular waveform and error signal
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*Gating for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*Filter is deleted because PSpice is limited to 64 nodes
*Parameters of power system with line-to-
*neutral induced (phase) voltages ea, eb, ec
RM1 1600 18 0.59
LM1 18 19 1.838m
Vout1 19 123 sin(0 325.22 50 0 0 0)
RM2 2600 28 0.59
LM2 28 29 1.838m
Vout2 29 123 sin(0 325.22 50 0 0 -120)
RM3 3600 38 0.59
LM3 38 39 1.838m
Vout3 39 123 sin(0 325.22 50 0 0 -240)
Rmeg 123 0 1
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10

```

Continued

TABLE E5.4.2 PSpice program for Application Example 5.4 and Fig. E5.4.4—Cont'd

```

c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.001m chgtol=0.001m
+reltol=5m vntol=1m itl5=0 itl4=400
*transient analysis
.tran 5u 200m 160m 5u
*plotting of traces
.probe
*Fourier analysis
.four 50 12 I(Rwa)
.end

```

Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

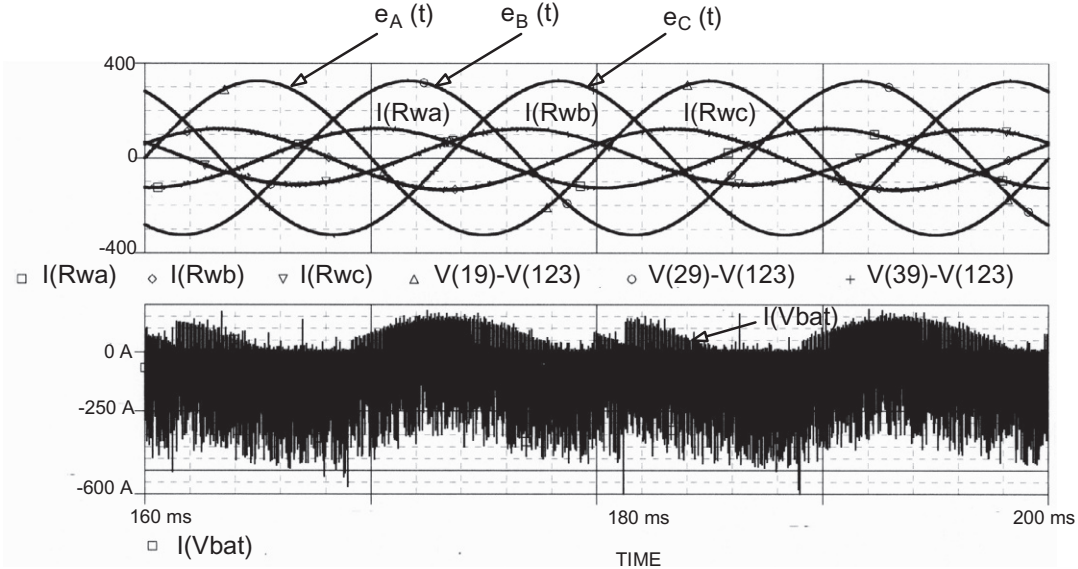


FIG. E5.4.5 Distribution phase voltages $e_A(t) = V(19) - V(123)$, $e_B(t) = V(29) - V(123)$, $e_C(t) = V(39) - V(123)$, and waveshaping currents $i_{ans}(t) = I(Rwa)$, $i_{bns}(t) = I(Rwb)$, $i_{cns}(t) = I(Rwc)$, and $I(VDCbat) = I(Vbat)$ whereby the phase currents lag the phase voltages by $\theta = -90^\circ$, the battery acts like inductor with **nonideal** battery parameters $R_{series} = 0.15 \Omega$, $R_1 = 0.1 \Omega$, $R_2 = 0.002 \Omega$, $C_1 = 2000 \text{ F}$, $C_2 = 3000 \text{ F}$.

Table E5.4.3 lists the PSpice program for Fig. E5.4.5.

TABLE E5.4.3 PSpice program for Application Example 5.4 and Fig. E5.4.5.

```

*Table E5.4.3
*non-ideal lithium-ion battery as inductor
*(PWM) current-controlled voltage-source inverter
*distribution system is absorbing from an non-ideal lithium-ion battery
*reactive power
Vbat 2 0 660
*non-ideal lithium-ion battery parameters
R1 2000 20000 0.1
R2 200 2000 0.002
C1 2000 20000 2000
C2 200 2000 3000
Rseries 20000 2 0.15
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
lwa 10 15 1m
lwb 20 25 1m
lwc 30 35 1m
Rwa 15 16 10m
Rwb 25 26 10m
Rwc 35 36 10m
*step-up transformer of secondary (weye) to primary (delta)
*line-to-line voltages
L1 1600 1100 180
L2 3600 1100 180
L3 2600 1100 180
L4 16 1100 18
L5 36 1100 18
L6 26 1100 18
R6 1100 11001 0.1
K14 L1 L4 0.99999
K25 L2 L5 0.99999
K36 L3 L6 0.99999
*current references in terms of voltages

```

Continued

TABLE E5.4.3 PSpice program for Application Example 5.4 and Fig. E5.4.5—Cont'd

```

vref1 12 0 sin(0 125 50 0 0 -90)
vref2 22 0 sin(0 125 50 0 0 -330)
vref3 32 0 sin(0 125 50 0 0 -210)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 5 0 pulse(-20 20 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
*as result of comparison between
*triangular waveform and error signal
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*Gating for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*Filter is deleted because PSpice is limited to 64 nodes
*Parameters of power system with line-to-
*neutral induced (phase) voltages ea, eb, ec
RM1 1600 18 0.59
LM1 18 19 1.838m
Vout1 19 123 sin(0 325 50 0 0 0)
RM2 2600 28 0.59
LM2 28 29 1.838m
Vout2 29 123 sin(0 325 50 0 0 -120)
RM3 3600 38 0.59
LM3 38 39 1.838m
Vout3 39 123 sin(0 325 50 0 0 -240)
Rground 123 11001 0.1
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1

```

Continued

TABLE E5.4.3 PSpice program for Application Example 5.4 and Fig. E5.4.5—Cont'd

```

d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.001m chgtol=0.001m
+reltol=5m vntol=1m itl5=0 itl4=400
*transient analysis
.tran 5u 200m 160m 5u
*plotting of traces
.probe
*Fourier analysis
.four 50 12 I(Rwa)
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

5.2.4.1 Electric automobiles face a few important problems

- Battery size and weight limit travel range and cause long charging time
- Lifetime reduced due to power quality problems such as harmonic currents
- Reduced performance at low temperature
- Batteries cannot be completely discharged
- Heating of passenger compartment and auxiliary power demands also draw down battery energy
- Limited number of charging and discharging cycles
- Battery performance appears to be dependent upon its nonideal parameters
- Insufficient torque at high speed due to flux weakening (FW), though torque can be increased through CFW [1,2,26,27,54,55].

5.2.4.2 Alternative storage methods

The charging and discharging of automobile batteries if they are not in use appears to be an attractive method of storing excessive PV energy. As known in some German states

(e.g., Bayern), the peak power of residential PV is limited to 70% of the rated output power. This does not appear reasonable—however, on a very sunny day not all generated PV power can be accepted by the utility because any electron generated must be used at the very moment in a load circuit [1]. Unfortunately the large power generation during summer cannot be stored on a long-term basis in a battery for use during wintertime.

The disastrous shutdown/outage in mid-February 2021 of the US State of Texas' electric grid (Electric Reliability Council of Texas, or ERCOT)—during which nearly half a million homes and businesses in Texas remained without heat and electricity—shows that there is great need to store surplus electric energy so that it can be used during ice, snow, and windstorms as well as floods and fires. From a later report, on April 11, 2021, the total average ERCOT power generation was 50 GW, of which 60% was generated by PV and WP plants. From April 11 to 15, the PV and WP generation was reduced by 30%, that is, the ERCOT power generation was only 40 GW [44]. In view of such large power reductions (e.g., 10 GW) it is recommended to rely also on large-scale hydro plants (e.g., planned pump-storage plants in Bayern at Jochberg and in Baden-Württemberg at Hotzenwald). In addition biogas and hydrogen storage plants could be harnessed. One promising storage for electro-mobility, be it bus, train or cars and distribution systems, is the fuel cell. Its discharging performance depends upon its nonideal parameters such as capacitances, resistances and time-dependent, low-frequency pulsations modeled by a voltage source $v_{pm}(t)$ as discussed in this chapter and flow batteries [2].

5.2.4.3 Conclusion

PV and WP plants do not always generate electricity. Surplus energy is stored in automobile lithium-ion batteries and these could be discharged to the grid when automobiles are not used and need arises. The discharging of lithium-ion batteries is investigated for three-phase distribution systems with line-to-line voltage of $V_{L-L} = 398.36$ V in Germany and other European countries. Care must be taken to reduce the harmonics of discharging circuits through electric filters, which also decrease somewhat the efficiency of electro-mobility. In addition, high-frequency switching in the 6 kHz range is desirable, but also relies on MOSFETs.

5.2.5 Application Example 5.5: Single-phase transformer supplying diode bridge in series with MOSFET with two filters $L_{f1}C_{f1}$ and $L_{f2}C_{f2}$ charging lithium-ion battery

The rated single-phase voltage of the US distribution system is $V_{s_rat} = 120$ V / 240 V at rated frequency of $f_{rat} = 60$ Hz: the low voltage energizes lighting and control equipment while the high voltage is used for appliances such as dryers within a residence. In contrast to some European countries, US residences are supplied by single-phase power via a 25 kVA pole transformer which supplies power to about 10–15 residences. Although the electric power available at a US residence is low, the charging DC voltages of electric car batteries are assumed in the range $V_{DC} = (300–900)$ V. The higher voltage of 900 V has the advantage of allowing an automobile to travel a farther distance as compared with 300 V batteries. The disadvantage of the higher voltage is the increased danger level in case either a battery failure or a car accident occurs. Lithium-ion batteries of electric automobiles have energy content

ranging from $E_{\text{battery}} = 50\text{--}130\text{ kWh}$ for small and large automobiles, respectively. In the following example, a rated battery of 75 kWh is assumed, where the charging (Fig. E5.5.4) current ranges from 25 A , 16 A , 18 A to 3 A when the lithium-ion battery has charging voltages ranging from 565 V , 610 V , 640 V to 660 V for high current at low voltage charging (nearly empty battery) to low current and high voltage (about fully charged battery) charging conditions, respectively, whereby the harmonic voltages are minimized through an output $L_{f2}C_{f2}$ (Fig. E5.5.1) filter across the terminals of the charging cable.

Note that during the charging process the charging current is controlled through a single-phase diode bridge in series with a MOSFET, and the charging voltage is dictated by the lithium-ion battery. Fig. E5.5.1 shows the circuit diagram of the charging circuit is in series with the output $L_{f2}C_{f2}$ filter to minimize integer and noninteger harmonics in the charging network. An electric automobile is assumed to be charged in the garage overnight.

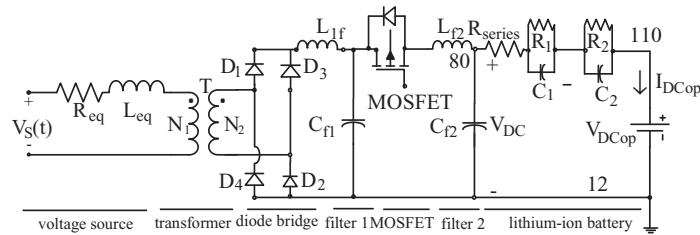


FIG. E5.5.1 Charging circuit consisting of diode bridge in series with MOSFET for a rated battery voltage of a nonideal lithium-ion battery with voltage $V_{\text{battery_rat}} = 600\text{ V}$ connected to the single-phase distribution system at rated phase voltage $V_{s_rat} = 240\text{ V}$, $f_{\text{rat}} = 60\text{ Hz}$.

The single-phase $120\text{ V}/240\text{ V}$, $f_{\text{rat}} = 60\text{ Hz}$ distribution system has the parameters $R_{\text{sys}} = 10\text{ m}\Omega$, $L_{\text{sys}} = 132.63\text{ }\mu\text{H}$ with a step-up single-phase transformer primary. The inductance PSpice primary parameters are $L_1 = 200$, secondary inductance PSpice parameters $L_2 = 1600$, coupling factor $K_{12} = 0.999999999$, inductance of output filter $L_{f1} = 100\text{ mH}$, capacitance of output filter $C_{f1} = 5000\text{ }\mu\text{F}$, and $L_{f2} = 10\text{ mH}$, $C_{f2} = 500\text{ }\mu\text{F}$, lithium-battery parameters $V_{\text{DC}} = 600\text{ V}$, $I_{\text{DCbattery_rat}} = 14\text{ A}$, $R_{\text{series}} = 0.15\text{ }\Omega$, $R_1 = 1\text{ }\Omega$, $R_2 = 0.02\text{ }\Omega$, $C_1 = 200\text{ F}$, $C_2 = 300\text{ F}$. The two time constants are R_1C_1 and R_2C_2 . It should be noted that the charging response of the battery somewhat depends upon the above-mentioned R_i and C_i values for $i = 1, 2$.

In Fig. E5.5.2 the charging of a nearly empty battery is assumed. It shows the charging voltages $V_{\text{DC}}(t)$ and V_{DCop} as well as the charging current $I_{\text{DC}}(t)$ for the above-mentioned time constant components R_1 , R_2 , C_1 , C_2 . Fig. E5.5.3 illustrates the charging of the nearly fully charged battery. Note that in both cases the charging current is about constant due to the MOSFET switching action controlling the current $I_{\text{DC battery}}(t) = I(\text{VDCop})$. Fig. E5.5.4 illustrates the exponential changes of the battery voltage $V_{\text{DC battery}}(t)$ and the battery current $I_{\text{DC battery}}(t) = I(\text{VDCop})$ as a function of time during the charging time of $t_{\text{charging}} = 9\text{ h}$.

The following results (Fig. E5.5.2) pertain to the battery voltages and currents for the following changed nonideal battery lithium-ion parameters: $R_{\text{series}} = 0.15\text{ }\Omega$, $R_1 = 1\text{ }\Omega$, $R_2 = 0.02\text{ }\Omega$, $C_1 = 200\text{ F}$, $C_2 = 300\text{ F}$.

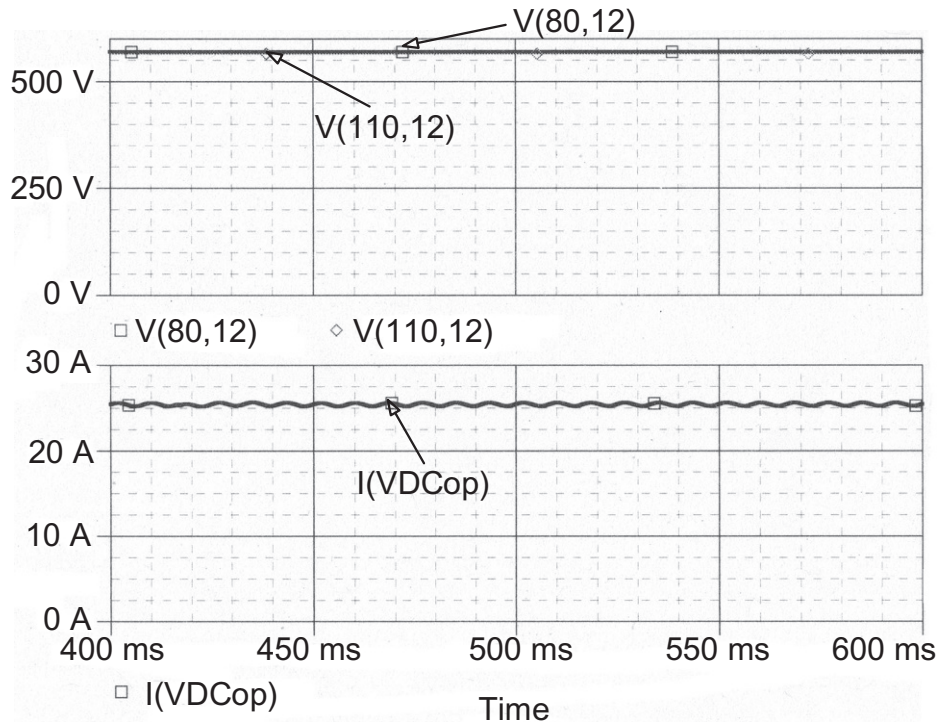


FIG. E5.5.2 Lithium-ion battery charging voltages $V_{\text{bat}}=V(80,12)$, $V_{\text{DCop}}=V(110,12)$ and battery charging current $I_{\text{battery}}=I(\text{VDCop})$ as a function of time t for diode bridge in series with MOSFET for a battery voltage of $V_{\text{B open-circuit}}=565\text{ V}$, battery charging $I_{\text{bat}}=25\text{ A}$ (nearly empty battery) connected to the single-phase distribution system at rated phase voltage $V_{\text{s, rat}}=240\text{ V}$ at $f_{\text{rat}}=60\text{ Hz}$.

Table E5.5.1 lists the PSpice program for Fig. E5.5.2. Table E5.5.2 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.5.2.

TABLE E5.5.1 PSpice program for Application Example 5.5 and Fig. E5.5.2.

```
*Table E5.5.1
*AC source
Vs 1 0 sin(0V 339.36V 60 0 0 0)
*single-phase transformer energizing a diode bridge
*rectifier with MOSFET in series supplying DC power
*to lithium-ion battery,
*transformer
Req 1 2 10m
Leq 2 50 132.6u
L1 50 0 200
L2 4 11 1600
Rground1 11 0 1Meg
Rground2 12 0 1Meg
K12 L1 L2 0.999999999
```

Continued

TABLE E5.5.1 PSpice program for Application Example 5.5 and Fig. E5.5.2—Cont'd

```

D1 4 5 D1N4001
D3 11 5 D1N4001
D2 12 11 D1N4001
D4 12 4 D1N4001
*Model
.model D1N4001 D(IS=1.0E-12)
Lf1 5 6 100m
Cf1 6 12 5000u
vmosfet 7 8 pulse(0 200 0 1u 1u 1.6667ms 1.6667ms)
mosfet 6 7 8 8 qfet
Lf2 8 80 10m
Cf2 80 12 500u
Rs 80 9 0.15
R1 9 10 1
C1 9 10 200
R2 10 110 0.02
C2 10 110 300
VDCop 110 12 565
*Model
.model qfet NMOS(level 3 gamma=0 delta=0 eta=0
+theta=0 kappa=0.2 vmax=0 xj=0 tox=100n uo=600
+phi=0.6 rs=42.69m kp=20.87u l=2u w=500u vto=0.3
+rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+cgdo=3.5n rg=0.2 is=10f)
*Analysis request
.tran 1u 600m 200m 1u uic
*Output request
.Probe
.FOUR 60 21 V(8,12) V(110,12) I(VDCop)
.options abstol=0.1m chgtol=0.1m reltol=0.1m vntol=0.1m
.options itl4=200 itl5=0
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.5.2 Harmonics for battery currents, see $I(VDCop)$ of Fig. E5.5.2.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)
DC COMPONENT = 2.5414E+01
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 6.0000E+01 5.4133E-04 1.0000E+00 -1.5481E+02 0.0000E+00
2 1.2000E+02 1.9707E-01 3.6406E+02 8.0546E+00 3.1767E+02
3 1.8000E+02 1.0719E-04 1.9802E-01 1.1823E+02 5.8266E+02
TOTAL HARMONIC DISTORTION = 3.6419E+04 PERCENT

```

The following results (Fig. E5.5.3) pertain to the battery voltages and currents for the following changed battery parameters $R_{\text{series}}=0.15\ \Omega$, $R_1=1\ \Omega$, $R_2=0.02\ \Omega$, $C_1=200\ \text{F}$, $C_2=300\ \text{F}$.

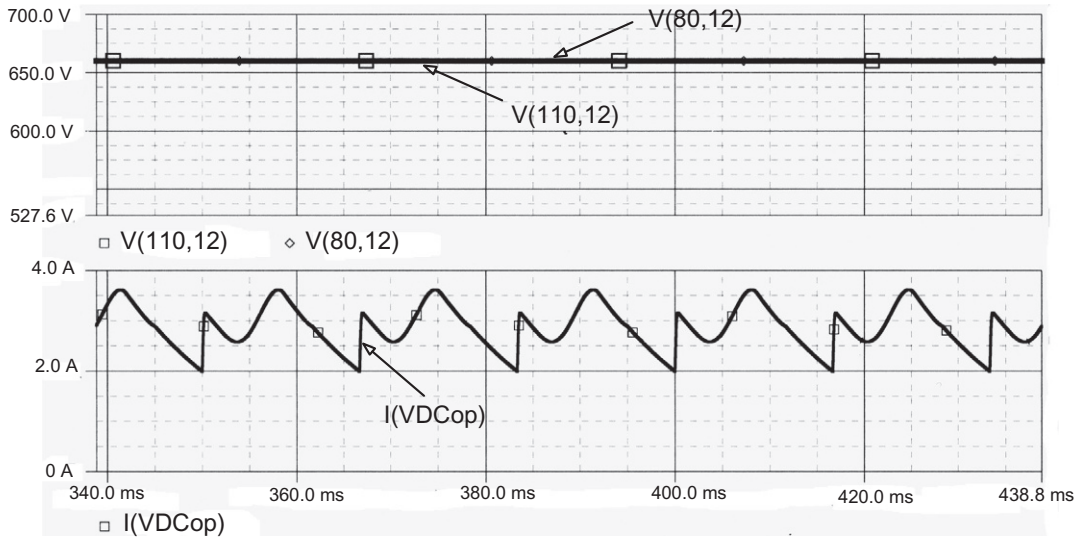


FIG. E5.5.3 Lithium-ion battery charging voltages $V_{\text{bat}}=V(80,12)$, $V_{\text{DCop}}=V(110,12)$ and battery charging current $I_{\text{battery}}=I(\text{VDCop})$ $V_{\text{DC}}(t)$, as a function of time t for diode bridge in series with MOSFET for a battery voltage of $V_{\text{B open-circuit}}=660\ \text{V}$, battery charging $I_{\text{bat}}=3\ \text{A}$ (about fully charged battery) connected to the single-phase distribution system at rated phase voltage $V_{\text{s, rat}}=240\ \text{V}$ at $f_{\text{rat}}=60\ \text{Hz}$.

Table E5.5.3 lists the PSpice program for Fig. E5.5.3. Table E5.5.4 shows the harmonics for battery currents, see $I(\text{VDCop})$ of Fig. E5.5.3.

TABLE E5.5.3 PSpice program for Application Example 5.5 and Fig. E5.5.3.

```
*Table E5.5.3
*AC source
Vs 1 0 sin(0V 339.36V 60 0 0 0)
*single-phase transformer energizing a diode bridge
*rectifier with MOSFET in series supplying DC power
*to lithium-ion battery,
*transformer
Req 1 2 10m
Leq 2 50 132.6u
L1 50 0 200
L2 4 11 1600
Rground1 11 0 1Meg
Rground2 12 0 1Meg
K12 L1 L2 0.9999999999
D1 4 5 D1N4001
```

Continued

TABLE E5.5.3 PSpice program for Application Example 5.5 and Fig. E5.5.3—Cont'd

```

D3 11 5 D1N4001
D2 12 11 D1N4001
D4 12 4 D1N4001
*Model
.model D1N4001 D(IS=1.0E-12)
Lf1 5 6 100m
Cf1 6 12 50u
vmosfet 7 8 pulse(0 200 0 1u 1u 11.667ms 16.667ms)
mosfet 6 7 8 8 qfet
Lf2 8 80 0.01m
Cf2 80 12 90m
Rs 80 9 0.15
R1 9 10 1
C1 9 10 200
R2 10 110 0.02
C2 10 110 300
VDCop 110 12 660
*Model
.model qfet NMOS(level 3 gamma=0 delta=0 eta=0
+theta=0 kappa=0.2 vmax=0 xj=0 tox=100n uo=600
+phi=0.6 rs=42.69m kp=20.87u l=2u w=500u vto=0.3
+rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+cgdo=3.5n rg=0.2 is=10f)
*Analysis request
.tran 1u 600m 200m 1u uic
*Output request
.Probe
.FOUR 60 21 V(8,12) V(110,12) I(VDCop)
.options abstol=0.1m chgtol=0.1m reltol=0.1m vntol=0.1m
.options itl4=200 itl5=0
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.5.4 Harmonics for battery currents, see $I(VDCop)$ of Fig. E5.5.3.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(VDCop)
DC COMPONENT = 2.8511E+00
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 6.0000E+01 4.7694E-01 1.0000E+00 -8.0217E+01 0.0000E+00
2 1.2000E+02 2.4118E-01 5.0568E-01 5.5615E+01 2.1605E+02
3 1.8000E+02 1.9592E-01 4.1077E-01 -1.4392E+01 2.2626E+02
TOTAL HARMONIC DISTORTION = 7.5414E+01 PERCENT

```

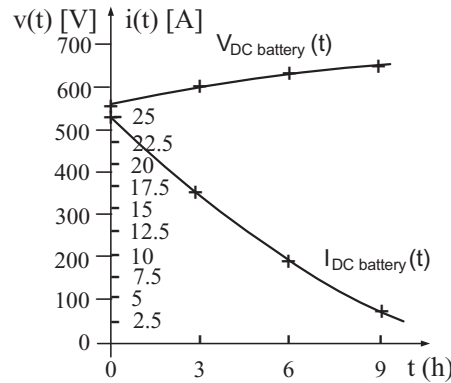


FIG. E5.5.4 Charging of a 75 kWh ($\approx 600 \text{ V} \cdot 14 \text{ A} \cdot 9 \text{ h}$) lithium-ion battery as a function of time t where the rated battery current is $I_{DC \text{ battery_rat}} = 14 \text{ A}$. Note linearity of the above graphs was assumed, therefore the approximate sign.

5.2.5.1 Conclusions

When the nearly empty lithium-ion battery is charged with about 25 A the charging current has a small 120 Hz component of about 0.775% while the nearly fully charged battery is absorbing a charging current of about 3 A with a 60 Hz component of 16.73%, 120 Hz component of 8.46%, and 180 Hz component of 6.87%. Depending upon the sensitivity of the nonideal lithium-ion battery to current harmonics it is advisable to modify the two output filters to minimize current harmonics. The charging of the lithium-ion battery at almost empty and almost fully charged states results in current harmonics which could result in either reduction of the lifetime or failure of the battery due to exceeding rated temperature. The reduction of harmonics during the charging appears to be worthwhile and could be accomplished by choosing a variable switching frequency of the MOSFET.

5.3 Three-phase permanent-magnet generator supplying energy to lead-acid battery via rectifier

Based on Application Examples 5.1 and 5.2 it is advisable to use a MOSFET as an electronic switch in series with a diode bridge in order to minimize the current harmonics especially at low DC charging currents.

5.3.1 Application Example 5.6: MOSFET switch in series with diode-bridge rectifier and two filters $L_{f1}C_{f1}$, $L_{f2}C_{f2}$ supplying wind energy to a lead-acid battery

In this example the windpower generated energy is stored in a lead-acid battery. The three-phase permanent-magnet generator has the phase voltage $V_{ph} = 277 \text{ V}$ and the line-to-line voltage $V_{L-L} = 480 \text{ V}$ at 60 Hz.

The per-phase leakage inductance and the per-phase resistance of the generator are $L_s = 5 \mu\text{H}$ and $R_s = 0.05 \Omega$, respectively. The generator supplies power to a Δ -Y transformer

for separating the ground and eliminating triplen harmonics in the generator with the parameters $R_{trans}=0.001\Omega$, and $L_{trans}=0.01\mu\text{H}$. A diode bridge is connected to the filter $L_{f1}=10\text{mH}$, $C_{f1}=5000\mu\text{F}$ feeding a MOSFET and the series-connected $L_{f2}=10\text{mH}$, $C_{f2}=5000\mu\text{F}$ filter is connected at the terminals of the lead-acid battery with a rated DC voltage of $V_{\text{battery_rat}}=4.32\text{ kV}$ as shown in Figs. E5.6.1A and E5.6.1B. The nonideal battery parameters are $R_{\text{discharge}}=5\text{ k}\Omega$, $R_{\text{series}}=0.05\Omega$, $C_b=20\text{ F}$, $C_B=10,000\text{ F}$. $V_{\text{open circuit}}=3890\text{ V}$ for empty battery and 4800 V for fully charged battery.

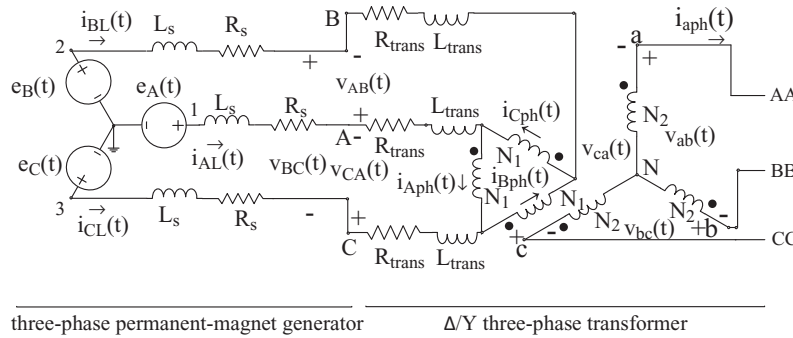


FIG. E5.6.1A Diode-bridge and series-connected MOSFET for a rated battery voltage of a **nonideal** lead-acid battery with voltage $V_{\text{battery_rat}}=4320\text{ V}$. Battery is grounded. The switching frequency of the MOSFET is 600 Hz . See Fig. E5.6.1B for continuation.

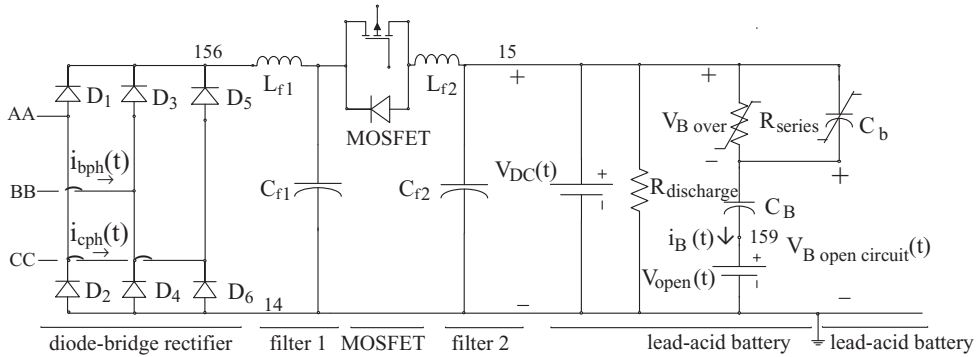


FIG. E5.6.1B Diode-bridge and series-connected MOSFET for a rated battery voltage of a **nonideal** lead-acid battery with voltage $V_{\text{battery_rat}}=4320\text{ V}$. Battery is grounded. The switching frequency of the MOSFET is $f_{\text{switch}}=600\text{ Hz}$. See Fig. E5.6.1A for continuation.

The following results (Fig. E5.6.2) pertain to the battery voltages and currents for the following changed nonideal lead-acid battery parameters: $R_{\text{discharge}}=5\text{ k}\Omega$, $R_{\text{series}}=0.05\Omega$, $C_b=20\text{ F}$, $C_B=10,000\text{ F}$.

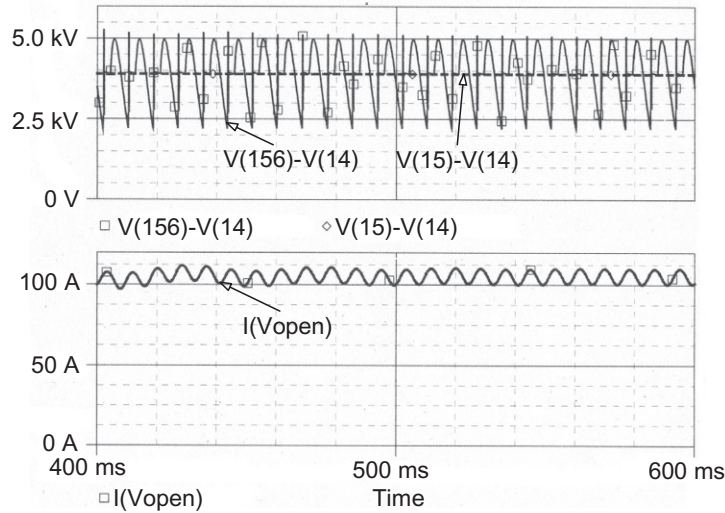


FIG. E5.6.2 Lead-acid battery charging voltages of permanent-magnet generator $e_A(t)$, $e_B(t)$, $e_C(t)$, output voltage of the diode bridge $V(156)-V(14)$, output voltage of the second filter $V_{DC}(t) = V(15)-V(14)$, open-circuit voltage of battery $V_{open}(t) = V(159)-V(14)$ and battery charging current $i_B(t) = I(Vopen)$ as a function of time t for diode bridge and series-connected MOSFET for a battery voltage of $V_{open} = 3890$ V for initial charging state. The battery charging is initially $i_B(t) = I(V_{open}) = 100$ A (nearly empty battery).

Table E5.6.1 shows the PSpice program for nearly empty charging. Table E5.6.2 presents dominant Fourier coefficients of the nearly empty lead-acid battery charging current.

TABLE E5.6.1 PSpice program for nearly empty charging, Application Example 5.6 and Fig. E5.6.2.

```
*Table E5.6.1
*permanent-magnet generator supplying energy to
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lead-acid battery via a diode-
*bridge rectifier in series with MOSFET with Lf1Cf1, Lf2Cf2 filters
*primary line-to-line voltages at f=60 Hz
*nearly empty lead-acid battery
VAB 1 2 sin(0 678.72 60 0 0 -30)
VBC 2 3 sin(0 678.72 60 0 0 -150)
VCA 33 1 sin(0 678.72 60 0 0 -270)
R33 3 33 0.01u
*permanent-magnet winding impedances
RsA 60 1 0.05
RsB 40 2 0.05
RsC 50 3 0.05
LsA 70 60 5u
LsB 90 40 5u
LsC 80 50 5u
```

Continued

TABLE E5.6.1 PSpice program for nearly empty charging, Application Example 5.6 and Fig. E5.6.2—Cont'd

```

*transformer impedances
RtransB 90 91 0.001
LtransB 91 8 0.01u
RtransA 70 71 0.001
LtransA 71 7 0.01u
RtransC 80 81 0.001
LtransC 81 9 0.01u
*step-up transformer of primary to secondary line-to-line voltages
L1 9 7 150
L2 7 8 150
L3 8 40 150
L4 10 12 5500
L5 10 11 5500
L6 10 13 5500
K15 L1 L5 1.00
K24 L2 L4 1.00
K36 L3 L6 1.00
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 154 pulse(0 200 0 1u 1u 1.6667m 1.6667m)
mosfet 1560 157 154 154 qfet
*two LC filters
Lf1 156 1560 10m
Cf1 1560 14 5000u
Lf2 154 15 10m
Cf2 15 14 5000u
*lead-acid battery parameters
*Rdischarge
Rdischarge 15 14 5k
*Rseries
Rseries 15 158 0.05
*Cbatt
Cbat 15 158 20
*CBattery
CBattery 158 159 10000
*Vopen open circuit voltage
Vopen 159 14 3890
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n

```

Continued

TABLE E5.6.1 PSpice program for nearly empty charging, Application Example 5.6 and Fig. E5.6.2—Cont'd

```

+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 600m 400m 100u uic
.four 60 21 V(15,14) V(159,14) I(Vopen)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.6.2 Dominant Fourier coefficients of the nearly empty **nonideal** lead-acid battery charging current.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(Vopen)
DC COMPONENT = 1.0505E+02
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 6.0000E+01 7.2149E-02 1.0000E+00 1.6448E+02 0.0000E+00
2 1.2000E+02 4.8411E+00 6.7099E+01 -5.9663E+01 -3.8862E+02
3 1.8000E+02 1.9729E-02 2.7344E-01 1.7707E+02 -3.1637E+02
4 2.4000E+02 1.4273E-01 1.9782E+00 -5.9255E+01 -7.1718E+02
5 3.0000E+02 1.1637E-02 1.6130E-01 -1.7872E+02 -1.0011E+03
6 3.6000E+02 5.7601E-02 7.9836E-01 -1.7409E+02 -1.1610E+03
7 4.2000E+02 8.2782E-03 1.1474E-01 -1.7569E+02 -1.3271E+03
8 4.8000E+02 1.0038E-02 1.3913E-01 1.1591E+02 -1.1999E+03
9 5.4000E+02 6.4283E-03 8.9098E-02 -1.7305E+02 -1.6534E+03
TOTAL HARMONIC DISTORTION = 6.7134E+03 PERCENT

```

The following results (Fig. E5.6.3) pertain to the battery voltages and currents for the changed nonideal lead-acid battery parameters: $R_{\text{discharge}} = 5\text{k}\Omega$, $R_{\text{series}} = 0.05\Omega$, $C_b = 20\text{F}$, $C_B = 10,000\text{F}$.

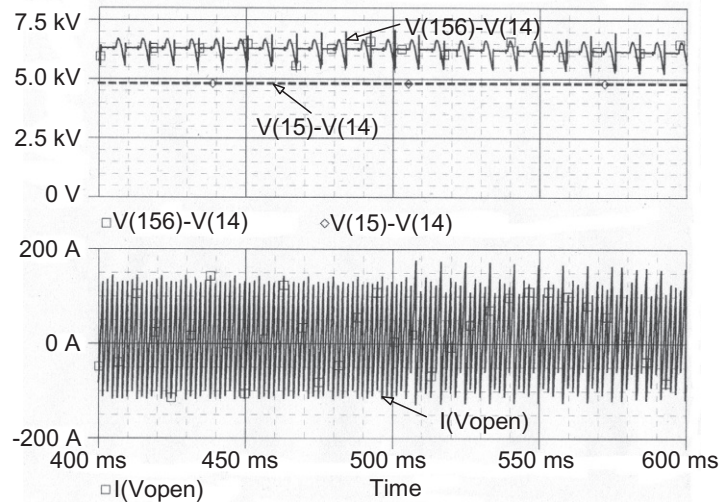


FIG. E5.6.3 Lead-acid battery charging voltages of permanent-magnet generator $e_A(t)$, $e_B(t)$, $e_C(t)$, output voltage of diode bridge $V(156)-V(14)$, output voltage of second filter $V_{DC}(t) = V(15)-V(14)$, open-circuit voltage of battery $V_{open}(t) = V(159)-V(14)$ and battery charging current $i_B(t) = I(V_{open})$ as a function of time t for diode bridge and series-connected MOSFET for a battery voltage of $V_{open} = 4800$ V at final charging state. The battery charging is initially $i_B(t) = I(V_{open}) = 18$ A (nearly fully charged battery).

Table E5.6.3 shows the PSpice program for charging nearly fully charged nonideal lead-acid battery. Table E5.6.4 presents dominant Fourier coefficients of the nearly fully charged nonideal lead-acid battery charging current (Fig. E5.6.4).

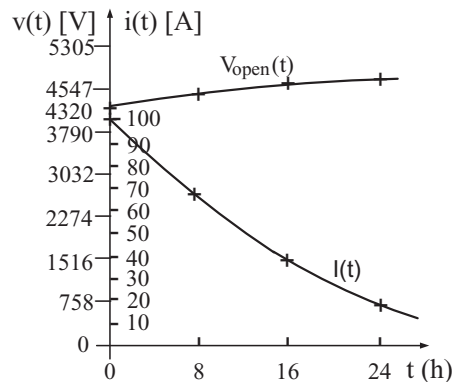


FIG. E5.6.4 Charging of a 6 MWh (≈ 4320 V $\cdot$ 59 A $\cdot$ 24 h) lead-acid battery as a function of time t where the rated battery current is $I_{battery_rat} = 59$ A. Note linearity of the above graphs is assumed, therefore the approximate sign.

TABLE E5.6.3 PSpice program for charging nearly fully charged **nonideal** lead-acid battery, Application Example 5.6 and Fig. E5.6.3.

```

*Table E5.6.3
*permanent-magnet generator supplying energy to
*three-phase delta/(ungrounded Y) step-up
*transformer charging a lead-acid battery via a diode-
*bridge rectifier in series with MOSFET with Lf1Cf1, Lf2Cf2 filters
*primary line-to-line voltages at f=60 Hz
*nearly fully charged lead-acid battery
VAB 1 2 sin(0 678.72 60 0 0 -30)
VBC 2 3 sin(0 678.72 60 0 0 -150)
VCA 3 1 sin(0 678.72 60 0 0 -270)
R33 3 33 0.01u
*permanent-magnet winding impedances
RsA 60 1 0.05
RsB 40 2 0.05
RsC 50 3 0.05
LsA 70 60 5u
LsB 90 40 5u
LsC 80 50 5u
*transformer impedances
RtransB 90 91 0.001
LtransB 91 8 0.01u
RtransA 70 71 0.001
LtransA 71 7 0.01u
RtransC 80 81 0.001
LtransC 81 9 0.01u
*step-up transformer of primary to secondary line-to-line voltages
L1 9 7 150
L2 7 8 150
L3 8 40 150
L4 10 12 5500
L5 10 11 5500
L6 10 13 5500
K15 L1 L5 1.00
K24 L2 L4 1.00
K36 L3 L6 1.00
*diode bridge
D1 11 156 Dideal
D2 14 11 Dideal
D3 12 156 Dideal
D4 14 12 Dideal
D5 13 156 Dideal
D6 14 13 Dideal
vmosfet 157 154 pulse(0 200 0 1u 1u 1.4m 1.6667m)
mosfet 1560 157 154 154 qfet
*two LC filters
Lf1 156 1560 10m
Cf1 1560 14 5000u
Lf2 154 15 10m

```

Continued

TABLE E5.6.3 PSpice program for charging nearly fully charged **nonideal** lead-acid battery, Application Example 5.6 and Fig. E5.6.3—Cont'd

```

Cf2 15 14 5000u
*lead-acid battery parameters
*Rdischarge
Rdischarge 15 14 5k
*Rseries
Rseries 15 158 0.05
*CBat
Cbat 15 158 20
*CBattery
CBattery 158 159 10000
*Vopen open circuit voltage
Vopen 159 14 4800
*auxiliary parameters
Rn 10 0 10meg
R3 40 9 1u
R100 1 0 1meg
*model of diodes
.model Dideal d(is=1m)
.model qfet nmos(level 3 gamma=0 kappa=0 tox=100n
+rs=42.69m kp=20.87u l=2u w=2.9 delta=0 eta=0 theta=0
+vmax=0 xj=0 uo=600 phi=0.6
+vto=3.487 rd=0.19 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
.tran 100u 600m 400m 100u uic
.four 60 21 V(15,14) V(159,14) I(Vopen)
.options abstol=1m chgtol=0.1m reltol=0.1 vntol=0.1m
.options itl4=200 itl5=0
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.6.4 Dominant Fourier coefficients of the nearly fully charged lead-acid battery charging current.

```

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(Vopen)
DC COMPONENT = 1.8230E+01
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 6.0000E+01 4.3590E+00 1.0000E+00 4.5367E+01 0.0000E+00
2 1.2000E+02 8.7212E+00 2.0007E+00 1.2397E+02 3.3235E+01
3 1.8000E+02 6.0553E+00 1.3892E+00 -1.3476E+01 -1.4958E+02
4 2.4000E+02 1.8076E+01 4.1469E+00 -1.3138E+02 -3.1285E+02
5 3.0000E+02 8.7873E+00 2.0159E+00 -1.5234E+02 -3.7918E+02
6 3.6000E+02 1.6703E+01 3.8318E+00 -1.5644E+02 -4.2864E+02
7 4.2000E+02 2.6116E+00 5.9913E-01 6.8694E+01 -2.4887E+02
8 4.8000E+02 2.1713E+00 4.9812E-01 -8.9681E+01 -4.5261E+02
9 5.4000E+02 8.9228E-01 2.0470E-01 5.3104E+00 -4.0299E+02

```

Continued

TABLE E5.6.4 Dominant Fourier coefficients of the nearly fully charged lead-acid battery charging current—Cont'd

10	6.0000E+02	7.1374E+01	1.6374E+01	-1.2659E+02	-5.8026E+02
11	6.6000E+02	1.9148E-01	4.3927E-02	1.5027E+02	-3.4876E+02
12	7.2000E+02	2.0489E+00	4.7005E-01	1.5641E+02	-3.8799E+02
13	7.8000E+02	1.3191E+00	3.0262E-01	4.2502E+01	-5.4726E+02
14	8.4000E+02	4.0876E+00	9.3775E-01	-5.4656E+01	-6.8979E+02
15	9.0000E+02	2.9114E+00	6.6791E-01	-9.9860E+01	-7.8036E+02
16	9.6000E+02	8.6346E+00	1.9809E+00	-9.3683E+01	-8.1955E+02
17	1.0200E+03	1.1200E+00	2.5694E-01	1.2400E+02	-6.4723E+02
18	1.0800E+03	1.0659E+00	2.4453E-01	-6.2295E+01	-8.7889E+02
19	1.1400E+03	5.7489E-01	1.3189E-01	6.1974E+01	-7.9999E+02
20	1.2000E+03	3.5625E+01	8.1728E+00	-7.3651E+01	-9.8098E+02
21	1.2600E+03	1.7578E-01	4.0326E-02	-7.4326E+01	-1.0270E+03
TOTAL HARMONIC DISTORTION = 1.9574E+03 PERCENT					

5.3.1.1 Conclusions

Charging of the lead-acid battery at almost empty and almost fully charged state results in current harmonics which could lead to either reduction of the lifetime or failure of the battery due to exceeding rated temperature. Reduction of harmonics during charging appears to be worthwhile and could be accomplished by choosing a variable switching frequency of the MOSFET.

5.4 Speed and torque control of drives consisting of three-phase induction machine connected to current-controlled, voltage-source inverter

In any drive application the speed and torque must be changed independently from one another: speed control is achieved by changing frequency f and pole numbers p , and torque is altered through a change of current I and the number of winding-turns (N) [1,26,27,54,55]. If induction (IM) and synchronous machines (SM) are supplied by current-controlled, voltage-source inverters the required DC voltage of the inverter is approximately governed by the relation $V_{DC} = 2\sqrt{2}V_1/m$, where m is the modulation index $m \leq 1.0$ and V_1 is the phase rms voltage of the IM. If the current leads the voltage of SM then the modulation index must be smaller than for lagging operation (consumer definition of phase shift between voltage and current). Similar considerations apply to IM, where the terminal current always lags the terminal voltage. In addition the nonideal properties of batteries and fuel cells are approximated by resistances and capacitances—including voltage variations $v_{pm}(t)$ for fuel cells (FC)—requiring increased DC battery voltage. In summary, the DC battery output voltage V_{DC} must be matched—via the selection of an appropriate modulation index m —with the machine input phase rms voltage V_1 .

5.4.1 Application Example 5.7: Three-phase IM operating regimes are analyzed when supplied by either a lithium-ion or a lead-acid battery, or a fuel cell via a current-controlled, voltage-source inverter

(a) Three-phase IM operating regimes supplied by a nonideal lithium-ion battery

For a three-phase Y-connected IM with the rated data $V_{L-L} = 440 \text{ V}$, $f_{\text{rat}} = 60 \text{ Hz}$, $p = 8$ poles, $P_{\text{rat}} = 126 \text{ hp}$, $R_s = 0.06 \Omega$, $X_{s\ell} = X'_{r\ell} = 0.26 \Omega$, $R'_r = 0.048 \Omega$, $R_m \rightarrow \infty$, $X_m = 8.47 \Omega$, $s_{\text{rat}} = 0.03$ and starting ($s = 1$) determine the following operating conditions: Compute at no-load the line-to-neutral (L - N) voltage $\tilde{V}_s = \tilde{V}_{L-N}$ and the stator (s) current $\tilde{I}_s$, that is $\tilde{I}'_r = 0$, and draw the phasor diagram for voltage $\tilde{V}_{L-N}$ and current $\tilde{I}_s$.

Determine the following parameters and data for rated operation:

- (1) *Thévenin* (TH) voltage V_{TH} and *Thévenin* impedance $\tilde{Z}_{\text{TH}} = R_{\text{TH}} + jX_{\text{TH}}$
- (2) Compute the rotor current $\tilde{I}'_r$ for rated slip $s_{\text{rat}} = 0.03 = 3\%$, the developed (d) output power P_d in kW and horsepower hp (note $1 \text{ hp} = 0.746 \text{ kW}$), the (fundamental) displacement power factor $\cos \theta_{\text{rat}}$ as well as the efficiency η_{rat} if the rotational (rot) losses are $P_{\text{rot}} = 1600 \text{ W}$, and the magnetizing (m) losses are neglected.
- (3) Calculate the developed torque $\tau_{d-\text{rat}}$ at rated operation.
- (4) Calculate the starting torque $\tau_{d-\text{start}}$.
- (5) Draw the not-to-scale phasor diagram for rated operation.
- (6) Compute the induced voltage $\tilde{E}$ and the rotor voltage $\tilde{V}_{R'_r(1-s)/s}$; perform a PSpice analysis for rated operating conditions by supplying the current-controlled, voltage-source inverter with a lithium-ion battery.
- (7) Determine for starting at rated voltage and frequency the rotor current $\tilde{I}'_r$ and induced voltage $\tilde{E}$; perform a PSpice analysis for starting at rated voltage by supplying the current-controlled, voltage-source inverter with energy provided by a lithium-ion battery.
- (8) Investigate at increased frequency $f_1 = 360 \text{ Hz}$ with FW the pertinent resistances and reactances, *Thévenin* voltage $\tilde{V}_{\text{TH}}|_{360 \text{ Hz}}$, rotor current $\tilde{I}'_r|_{360 \text{ Hz}}$, induced voltage $\tilde{E}|_{360 \text{ Hz}}$, and rotor voltage $\tilde{V}_{R'_r(1-s)/s}|_{360 \text{ Hz}}$; perform a PSpice analysis for operation at $f_1 = 360 \text{ Hz}$ with FW.
- (9) Investigate at frequency $f_1 = 360 \text{ Hz}$ with CFW the pertinent resistances and reactances, *Thévenin* voltage $\tilde{V}_{\text{TH}}|_{\text{CFW}}$, rotor current $\tilde{I}'_r|_{\text{CFW}}$, induced voltage $\tilde{E}|_{\text{CFW}}$, and rotor voltage $\tilde{V}_{R'_r(1-s)/s}|_{\text{CFW}}$; perform a PSpice analysis for operation at $f_1 = 360 \text{ Hz}$ with CFW.
- (b) Perform a PSpice analysis for rated and starting conditions by supplying the current-controlled, voltage-source inverter with energy provided by a **lead-acid battery**.
- (c) Perform a PSpice analysis for rated and starting conditions by supplying the current-controlled voltage source inverter with energy provided by a **fuel cell**.

Solution if IM is supplied by nonideal lithium-ion battery

No-load operation:

$$\tilde{V}_s = \tilde{V}_{L-N} = \left(\frac{V_{L-L}}{\sqrt{3}} \right) \angle 0^\circ = \left(\frac{440}{\sqrt{3}} \right) \angle 0^\circ \text{ V} = 254.04 \angle 0^\circ \text{ V}.$$

Fig. E5.7.1 shows the per-phase equivalent circuit of a three-phase IM which can be either operated as motor ($s > 0$) or generator ($s < 0$). Both operating modes are important for electric automobiles when either motoring during driving or regeneration during braking occurs.

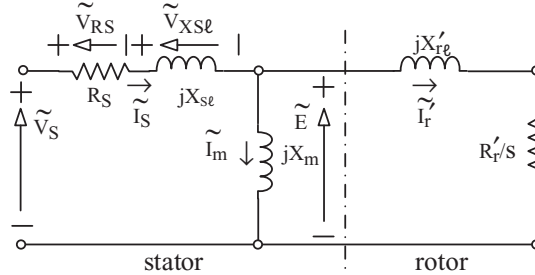


FIG. E5.7.1 Per-phase equivalent circuit of three-phase IM.

At no-load one obtains

$$\tilde{V}_s = \tilde{V}_{L-N} = \tilde{I}_s(R_s + jX_{s\ell} + jX_m) \quad (\text{E5.7.1})$$

$$\begin{aligned} \tilde{I}_s &= \frac{\tilde{V}_s}{R_s + jX_{s\ell} + jX_m} = \frac{254.04 \angle 0^\circ \text{ V}}{(0.06 \Omega + j0.26 \Omega + j8.47 \Omega)} = \frac{254.04 \angle 0^\circ \text{ V}}{\sqrt{(0.06)^2 + (8.73)^2} \angle 89.61^\circ} \\ &= |\tilde{I}_s| \angle \theta = 29.1 \angle (0^\circ - 89.61^\circ) \text{ A} = 29.1 \angle -89.61^\circ \text{ A}. \end{aligned} \quad (\text{E5.7.2})$$

Fig. E5.7.2 presents the per-phase phasor diagram at no-load condition.

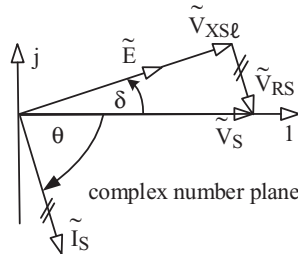


FIG. E5.7.2 Per-phase phasor diagram in the $(j, 1)$ complex number Gaussian plane (not-to-scale) at no load, where the current $I_r = 0$. The two phasors $\tilde{I}_s$ and $\tilde{V}_{RS}$ are collinear or parallel as indicated by the symbol //.

For *rated operation* calculate the *Thévenin* voltage $\tilde{V}_{TH}$ and impedance $\tilde{Z}_{TH} = R_{TH} + jX_{TH} = Z_{TH}$, where $\tilde{Z}_{TH}$ is a complex number sometimes displayed without a tilde ($\sim$). All other complex numbers are identified with a tilde. The *Thévenin* voltage is obtained by applying the voltage divider rule:

$$\begin{aligned}
 (1) \quad \tilde{V}_{TH} &= \tilde{V}_s \frac{jX_m}{R_s + jX_{s\ell} + jX_m} = 254.04 \angle 0^\circ \text{ V} \cdot \frac{j8.47}{0.06 + j0.26 + j8.47} \\
 &= \frac{254.04 \angle 0^\circ \text{ V} \cdot 8.47 \angle 90^\circ}{\sqrt{(0.06)^2 + (8.73)^2} \angle 89.606^\circ} = 246.47 \angle 0.394^\circ \text{ V},
 \end{aligned} \tag{E5.7.3}$$

and the *Thévenin* impedance $\tilde{Z}_{TH} = R_{TH} + jX_{TH}$ is found by the parallel connection of the two impedances jX_m and $(R_s + jX_{s\ell})$:

$$\begin{aligned}
 \tilde{Z}_{TH} &= jX_m \cdot \frac{R_s + jX_{s\ell}}{R_s + jX_{s\ell} + jX_m} = j8.47 \cdot \frac{0.06 + j0.26}{0.06 + j0.26 + j8.47} \\
 &= 8.47 \angle 90^\circ \frac{\sqrt{(0.06)^2 + (0.26)^2} \angle 77.005^\circ}{\sqrt{(0.06)^2 + (8.73)^2} \angle 89.606^\circ} = 8.47 \cdot \frac{0.2668 \angle (77.005^\circ + 90^\circ)}{8.730 \angle 89.806^\circ} \\
 &= 0.2588 \angle 77.12^\circ \Omega = 0.2588 \cos(77.12) + j0.2588 \sin(77.12) = (0.05769 + j0.25229) \Omega,
 \end{aligned}$$

or

$$R_{TH} = 0.05769 \Omega, \text{ and } X_{TH} = 0.25229 \Omega. \tag{E5.7.4}$$

- (2) To simplify the closed-form analysis one may transform the per-phase stator equivalent circuit by employing *Thévenin's* theorem as shown in Fig. E5.7.3AB. The original stator circuit (Fig. E5.7.3A) is replaced by its *Thévenin* equivalent, resulting in Fig. E5.7.3B. In Fig. E5.7.3C no cross-branch is present.

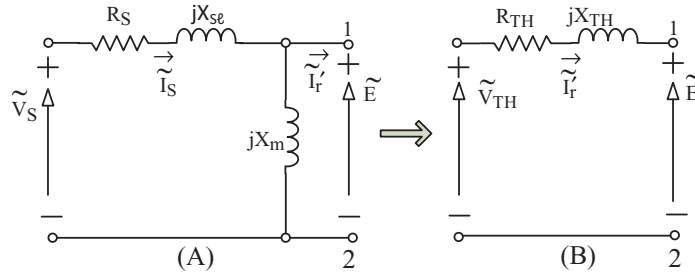


FIG. E5.7.3AB (A) Original per-phase stator equivalent circuit of three-phase induction machine replaced by (B) *Thévenin's* equivalent circuit.

Fig. E5.7.3C represents the total per-phase equivalent circuit for stator and rotor of a three-phase IM, where no cross-branch is present.

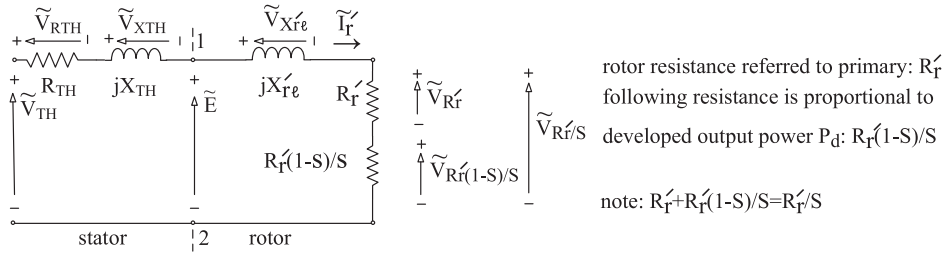


FIG. E5.7.3C Simplified per-phase equivalent circuit considering *Thévenin's* equivalent circuit for the stator. Note, $R'_r + \frac{R'_r(1-s)}{s} = R'_r/s$.

The rotor current is now for rated slip $s_{\text{rat}} = 0.03$

$$\tilde{I}'_r = \tilde{V}_{\text{TH}} / \left[\left(R_{\text{TH}} + \frac{R'_r}{s_{\text{rat}}} \right) + j(X_{\text{TH}} + X'_{r\ell}) \right], \quad (\text{E5.7.5})$$

$$\begin{aligned} \tilde{I}'_r &= \frac{246.47 \angle 0.394^\circ \text{ V}}{\left[(0.05769 + \frac{0.048}{0.03}) + j(0.2526 + 0.26) \right] \Omega} = \frac{246.47 \angle 0.394^\circ \text{ V}}{(1.6577 + j0.5126) \Omega} \\ &= \frac{246.47 \angle 0.394^\circ \text{ V}}{\sqrt{2.748 + 0.26276} \angle 17.183^\circ \Omega} = 142.05 \angle -16.789^\circ \text{ A} \end{aligned} \quad (\text{E5.7.6})$$

$$\text{With } \tilde{V}_s = |\tilde{V}_s| \angle 0^\circ, \quad (\text{E5.7.7})$$

$$\tilde{V}_{\text{TH}} = \tilde{V}_s \angle 0.394^\circ, \quad (\text{E5.7.8})$$

the rated displacement power factor angle is

$$\theta_{\text{rat}} = -16.789^\circ - 0.394^\circ = -17.183^\circ, \quad (\text{E5.7.9a})$$

$$\text{or the displacement power factor is } \cos \theta_{\text{rat}} = 0.9554. \quad (\text{E5.7.9b})$$

The developed (d) output power P_d in kW and horsepower hp is

$$P_d = 3 \cdot |\tilde{I}'_r|^2 R'_r \frac{(1-s)}{s} = 3 \cdot (142.05)^2 \cdot 0.048 \frac{(1-0.03)}{0.03} = 93.95 \text{ kW} \equiv 125.94 \text{ hp}. \quad (\text{E5.7.10})$$

The input power P_{in} is

$$P_{\text{in}} = P_d + P_s + P_r + P_{\text{rot}}, \quad (\text{E5.7.11a})$$

when the stator losses

$$P_s = 3 \cdot |\tilde{I}'_r|^2 R_{\text{TH}} = 3 \cdot (142.05)^2 \cdot 0.05769 = 3.4922 \text{ kW}, \quad (\text{E5.7.11b})$$

and the rotor losses

$$P_r = 3 \cdot |\tilde{I}'_r|^2 R'_r = 3 \cdot (142.05)^2 \cdot 0.048 = 2.9057 \text{ kW}, \quad (\text{E5.7.11c})$$

follow the input power

$$P_{in} = 93.95 \text{ kW} + 3.4922 \text{ kW} + 2.9057 \text{ kW} + 1.600 \text{ kW} = 101.95 \text{ kW}. \quad (\text{E5.7.11d})$$

The IM rated efficiency is

$$\eta_{rat} = \frac{P_d}{P_{in}} = \frac{93.95}{101.95} = 0.92155 \text{ or } 92.1555\%. \quad (\text{E5.7.11e})$$

- (3) The developed rated torque τ_{d_rat} for $p=8$ and $n_s=900$ rpm resulting in the angular velocity (or frequency) $\omega_s = (900/60) \cdot 2\pi = 94.245 \text{ rad/s}$ is

$$\tau_d = \frac{\left[3 \cdot |\tilde{I}_r|^2 \cdot \left(\frac{R'_l}{s} \right) \right]}{\omega_s} = \frac{\left[3 \cdot (142.05)^2 \cdot \left(\frac{0.048}{0.03} \right) \right]}{94.245} = 1027.7 \text{ Nm}. \quad (\text{E5.7.12})$$

- (4) At $s=1.0$ one obtains the starting current

$$\begin{aligned} \tilde{I}_{r_start} &= \frac{\tilde{V}_{TH}}{\left[\left(R_{TH} + \frac{R'_l}{s} \right) + j(X_{TH} + X'_{rl}) \right]} = \frac{246.47 \angle 0.394^\circ \text{ V}}{\left[(0.05769 + \frac{0.048}{1.0}) + j(0.25229 + 0.26) \right] \Omega} \\ &= \frac{246.47 \angle 0.394^\circ \text{ V}}{(0.10569 + j0.51229) \Omega} = \frac{246.47 \angle 0.394^\circ \text{ V}}{\sqrt{(0.01117 + 0.2644)} \angle 78.343^\circ \Omega} = \frac{246.47 \angle 0.394^\circ \text{ V}}{0.52308 \angle 78.343^\circ \Omega} \\ &= 471.19 \text{ A} \angle -77.949^\circ. \end{aligned} \quad (\text{E5.7.13})$$

The starting torque τ_{d_start} is

$$\tau_{d_start} = \frac{\left[3 \cdot |\tilde{I}_r|^2 \cdot \left(\frac{R'_l}{s} \right) \right]}{\omega_s} = \frac{\left[3 \cdot (471.19)^2 \cdot \left(\frac{0.048}{1.0} \right) \right]}{94.245} = 339.23 \text{ Nm}. \quad (\text{E5.7.14})$$

- (5) Fig. E5.7.4 shows the not-to-scale phasor diagram at rated operation, where the voltage/current phasors are defined in Fig. E5.7.3C.

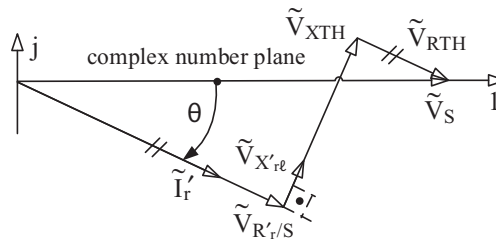


FIG. E5.7.4 Per-phase phasor diagram (not-to-scale) for rated operation based on *Thévenin's* equivalent circuit, Fig. E5.7.3C. The three phasors $\tilde{I}_r$, $\tilde{V}_{RTH}$, and $\tilde{V}_{R'_l/s}$ are collinear or parallel, indicated by the symbol //.

- (6) Compute the induced voltage $\tilde{E}$ and the rotor voltage $V_{R'_r(1-s)/s}$; perform a PSpice analysis for rated operating conditions.

$$\begin{aligned}
 \tilde{E} &= \tilde{V}_{TH} - \tilde{I}_r(R_{TH} + jX_{TH}) = 246.47 \angle 0.394^\circ \text{ V} - 142.05 \angle -16.789^\circ \text{ A} (0.05769 + j0.25229) \Omega \\
 &= 246.47 \angle 0.394^\circ \text{ V} - 142.05 \angle -16.789^\circ \text{ A} \sqrt{0.0033281 + 0.06365} \angle 77.12^\circ \Omega \\
 &= 246.47 \angle 0.394^\circ \text{ V} - 142.05 \angle -16.789^\circ \text{ A} \cdot 0.2588 \angle 77.12^\circ \Omega \\
 &= 246.47 \angle 0.394^\circ \text{ V} - 36.763 \angle 60.331^\circ \text{ V} \\
 &= 246.47 (\cos 0.394 + j \sin 0.394) - 36.763 (\cos 60.331 + j \sin 60.331) \text{ V} \\
 &= (246.46 + j1.6949 - 18.197 - j31.943) \text{ V} = (228.26 - j30.248) \text{ V} = 230.26 \angle -7.5486^\circ \text{ V}.
 \end{aligned} \tag{E5.7.15}$$

$$\tilde{V}_{R'_r(1-s)/s} = \frac{\tilde{I}_r R'_r (1 - s_{rat})}{s_{rat}} = 142.05 \angle -16.789^\circ \text{ A} \cdot 0.048 \Omega \frac{(1 - 0.03)}{0.03} = 220.46 \angle -16.789^\circ \text{ V}. \tag{E5.7.16}$$

The instantaneous phase voltages of the load in Fig. E5.7.3C are now with the rated amplitude $\sqrt{2} \cdot 220.46 \text{ V} = 311.93 \text{ V}$:

$$v_{R'_r(1-s)/s^a}(t) = 311.93 \text{ V} \cos(\omega t - 16.789^\circ), \tag{E5.7.17a}$$

$$v_{R'_r(1-s)/s^b}(t) = 311.93 \text{ V} \cos(\omega t - 136.789^\circ), \tag{E5.7.17b}$$

$$v_{R'_r(1-s)/s^c}(t) = 311.93 \text{ V} \cos(\omega t - 256.789^\circ). \tag{E5.7.17c}$$

The required DC voltage of the inverter is approximately governed by the relation

$$V_{DC} = \frac{2\sqrt{2}V_1}{m}, \tag{E5.7.18}$$

and the chosen modulation index $m = 0.6925$ results in

$$V_{DC} = V_{bat} = 2\sqrt{2} \cdot \frac{220.46}{0.6925} \text{ V} = 900 \text{ V}. \tag{E5.7.19}$$

The instantaneous Thévenin-adjusted (reference) currents are with the amplitude

$$\sqrt{2} \cdot 142.05 \text{ A} = 200.86 \text{ A}$$

$$i_a(t) = 200.86 \text{ A} \cos(\omega t - 16.789^\circ), \tag{E5.7.20a}$$

$$i_b(t) = 200.86 \text{ A} \cos(\omega t - 136.789^\circ), \tag{E5.7.20b}$$

$$i_c(t) = 200.86 \text{ A} \cos(\omega t - 256.789^\circ). \tag{E5.7.20c}$$

To study the influence of nonideal battery properties Fig. E5.7.5A represents the total circuit, where the three-phase IM is supplied from a lithium-ion battery via a current-controlled, voltage-source inverter. The parameters of the nonideal lithium-ion battery are:

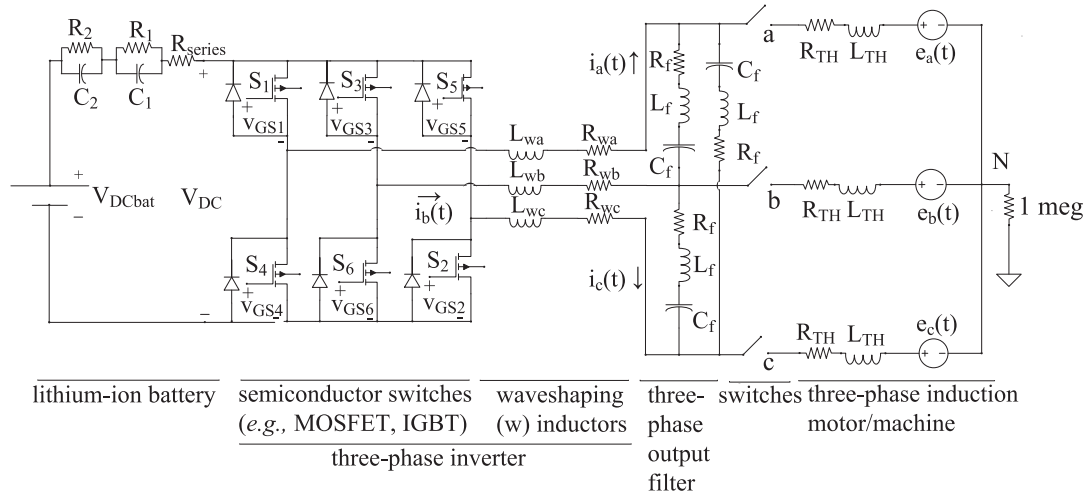


FIG. E5.7.5A Equivalent circuit of 94.07 kW = 126.1 hp three-phase IM supplied through a current-controlled, voltage-source inverter by a **nonideal** lithium-ion battery, where voltage ranges from $V_{DCbat} = (975\text{--}842)$ V, and current ranges from $I_{DCbat} = (34.19\text{--}39.60)$ A, depending upon charging status and driving conditions.

$$V_{DCbat} = 900 \text{ V}, \quad R_{series} = 0.15 \, \Omega, \quad R_1 = 10 \, \Omega, \quad C_1 = 20 \text{ F}, \quad R_2 = 0.2 \, \Omega, \quad C_2 = 3000 \text{ F}. \quad (\text{E5.7.21})$$

The parameters of the lithium-ion battery consist of a short (R_1, C_1) time constant and a long (R_2, C_2) time constant. It is desirable to add at the output of the battery—across the voltage V_{DC} —a high-frequency filter; however, due to the limited number of PSpice nodes (e.g., 64) such a filter could not be programmed.

The discharge characteristic of a battery (Fig. E5.7.5B) differs from the charging characteristics of Fig. E5.1.4, where in Fig. E5.7.5B it is assumed that total energy content of 100 kWh can be used to propel the automobile during a period of $t = 3$ h. A battery must not be completely discharged, and therefore actual battery energy content is assumed to be about 120 kWh. The discharge characteristic consists of decreasing voltage and increasing current so that the power drawn from the battery is about constant. The complete discharge of the 100 kWh battery during 3 h results in the initial current (at $t = 0$) of $I_{\text{discharge}@t=0} = (100,000 \text{ Wh}/3 \text{ h})/975 \text{ V} = 34.19 \text{ A}$ and at $t = 3$ h the discharge current is $I_{\text{discharge}@t=3 \text{ h}} = (100,000 \text{ Wh}/3 \text{ h})/842 \text{ V} = 39.60 \text{ A}$.

Note that the power drawn at $t = 0$ and at $t = 3$ h is about the same $P_{\text{discharge}} = 975 \cdot 34.19 \text{ W} \approx 842 \cdot 39.60 \text{ W} = 33.34 \text{ kW}$. These values are average numbers, and the actual values depend upon driving conditions (e.g., acceleration, regeneration through braking, weather such as snow and temperature, etc.).

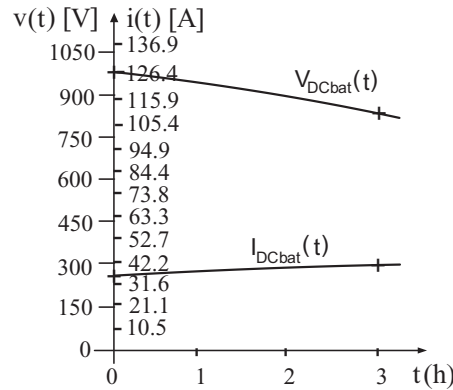


FIG. E5.7.5B Discharge characteristic of **nonideal** 100kWh lithium-ion battery.

Table E5.7.1 represents the PSpice program for a three-phase inverter-IM drive, where a nonideal lithium-ion battery supplies current-controlled PWM, voltage-source inverter feeding an induction motor at rated operation with $s_{\text{rated}} = 0.03$, $f = 60 \text{ Hz}$, $v_{\text{supply}} = 900 \text{ V}$.

TABLE E5.7.1 PSpice input program, Application Example 5.7 for PWM current-controlled, voltage-source inverter at a gating voltage (v_{trial}) frequency of 5.76 kHz supplying a three-phase inverter-IM drive with power at lagging displacement (power) factor of angle $\theta_{\text{rat}} = -17.183^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power).

```
*Table E5.7.1
*lithium-ion battery supplies current-controlled PWM voltage-source inverter feeding
*an induction motor at rated operation with srated=0.03, f=60 Hz.
vsuppl 1000 0 900
R2 1000 4000 0.20
C2 1000 4000 3000
*R1 1000 5000 10
*C1 1000 5000 20
Rseries 4000 2 0.15
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
l_w1 10 15 0.1m
```

Continued

TABLE E5.7.1 PSpice input program, Application Example 5.7 for PWM current-controlled, voltage-source inverter at a gating voltage (vtrial) frequency of 5.76kHz supplying a three-phase inverter-IM drive with power at lagging displacement (power) factor of angle $\theta_{\text{rat}} = -17.183^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power)—Cont'd

```

l_w2 20 25 0.1m
l_w3 30 35 0.1m
R_w1 15 16 10m
R_w2 25 26 10m
R_w3 35 36 10m
*current references in terms of voltages
vref1 12 0 sin(0 200.86 60 0 0 -16.789)
vref2 22 0 sin(0 200.86 60 0 0 -136.789)
vref3 32 0 sin(0 200.86 60 0 0 -256.789)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 50 pulse(-50 50 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*gating signals for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*filter is deleted because PSpice is limited to 64 nodes
*parameters of power system with L-N induced voltages ea, eb, ec
RM1 16 18 0.05769
LM1 18 19 0.669m
Vout1 19 123 sin(0 311.93 60 0 0 -16.789)
RM2 26 28 0.05769
LM2 28 29 0.669m
Vout2 29 123 sin(0 328.76 60 0 0 -136.789)
RM3 36 38 0.05769
LM3 38 39 0.669m
Vout3 39 123 sin(0 328.76 60 0 0 -256.789)
Rground 123 0 1Meg
*subcircuit for comparator
.subckt comp 1 2 9 10

```

Continued

TABLE E5.7.1 PSpice input program, Application Example 5.7 for PWM current-controlled, voltage-source inverter at a gating voltage (vtrial) frequency of 5.76 kHz supplying a three-phase inverter-IM drive with power at lagging displacement (power) factor of angle $\theta_{\text{rat}} = -17.183^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power)—Cont'd

```

rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2
+is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.001m chgtol=0.001m
+reltol=5m vntol=1m itl5=0 itl4=200
*transient analysis
.tran 5u 360m 300m 5u
*plotting of traces
.probe
*Fourier analysis
.four 60 22 I(l_w1) I(Rseries) I(LM1)
.end

```

See Eqs. (E5.7.1)–(E5.7.21). The small-time constant ($R_1 \cdot C_1 = 200\text{s}$) is ignored. Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

Fig. E5.7.6 represents the phase input voltage $v_{R'(1-s)/s^a}(t) = v_{\text{out}1}(t) = V(19) - V(123)$ and phase input Thévenin-adjusted (reference) current $i_a(t) = I(\text{RM1})$ of three-phase squirrel-cage IM for rated operation in phase with the above-cited voltage. However, the displacement power factor angle at the input of IM is $\theta_{\text{rat}} = -17.183^\circ$ (consumer notation, underexcited, delivering real power to three-phase IM and absorbing reactive power). The current amplitude is smaller ($\approx 160\text{ A}$) than that of the analysis (200.86 A) because the inverter operation is based on P-control, causing steady-state error. The short-time constant ($R_1 \cdot C_1 = 200\text{s}$ with $R_1 = 10\ \Omega$, $C_1 = 20\text{ F}$) is ignored and the long-time constant ($R_2 \cdot C_2 = 600\text{s}$ with $R_2 = 0.2\ \Omega$, $C_1 = 3000\text{ F}$) is considered. Fig. E5.7.7 illustrates the same voltage and current, but with the long-time constant ignored.

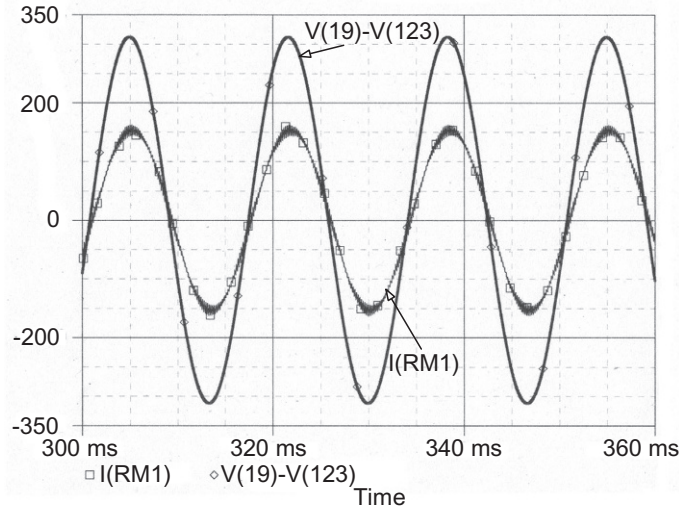


FIG. E5.7.6 Phase input voltage $v_{R'_s(1-s)/s^a}(t) = v_{out1}(t) = V(19) - V(123)$ and phase input Thévenin-adjusted (reference) current $i_a(t) = I(RM1)$ of three-phase squirrel-cage IM for rated operation. The long-time constant ($R_2 \cdot C_2 = 600$ s with $R_2 = 0.2 \Omega$, $C_2 = 3000$ F) is considered and the short-time constant ($R_1 \cdot C_1 = 200$ s with $R_1 = 10 \Omega$, $C_1 = 20$ F) is ignored, that is, R_1 and C_1 are not in the program.

In Fig. E5.7.7 the result for the current is not correct. The long-time constant ($R_2 \cdot C_2 = 600$ s with $R_2 = 0.2 \Omega$, $C_2 = 3000$ F) is ignored and is not in the program. The short-time constant ($R_1 \cdot C_1 = 200$ s with $R_1 = 10 \Omega$, $C_1 = 20$ F) is considered.

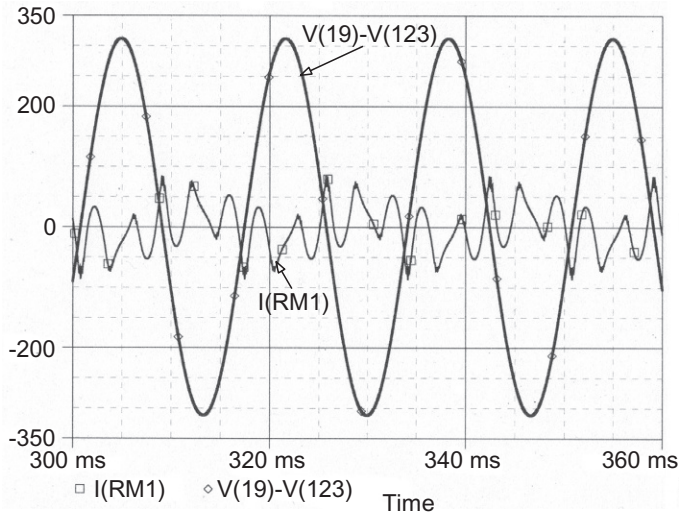


FIG. E5.7.7 Phase input voltage $v_{R'_s(1-s)/s^a}(t) = v_{out1}(t) = V(19) - V(123)$ and phase input Thévenin-adjusted (reference) current $i_a(t) = I(RM1)$ of three-phase squirrel-cage IM for rated operation. The result for the current is not correct. The long-time constant ($R_2 \cdot C_2 = 600$ s with $R_2 = 0.2 \Omega$, $C_2 = 3000$ F) is ignored and is not in the program. The short-time constant ($R_1 \cdot C_1 = 200$ s with $R_1 = 10 \Omega$, $C_1 = 20$ F) is considered.

Table E5.7.2 represents the PSpice program for a three-phase inverter-IM drive, where a nonideal lithium-ion battery supplies current-controlled PWM, voltage-source inverter feeding an induction motor at rated operation with $s_{\text{rated}} = 0.03$, $f = 60 \text{ Hz}$, $v_{\text{supply}} = 900 \text{ V}$, and **both time constants are considered.**

TABLE E5.7.2 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (v_{trial}) frequency of 5.76 kHz supplying a three-phase IM with power at $f = 60 \text{ Hz}$ at lagging displacement (power) factor angle of $\theta_{\text{rat}} = -17.183^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power).

```

*Table E5.7.2
*lithium-ion battery supplies current-controlled PWM voltage-source inverter
*feeding an induction motor at rated operation with srated=0.03, f=60 Hz.
vsuppl 1000 0 900
R2 1000 4000 0.20
C2 1000 4000 3000
R1 4000 5000 0.5
C1 4000 5000 400
Rseries 5000 2 0.15
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
l_w1 10 15 0.1m
l_w2 20 25 0.1m
l_w3 30 35 0.1m
R_w1 15 16 10m
R_w2 25 26 10m
R_w3 35 36 10m
*current references in terms of voltages
vref1 12 0 sin(0 200.86 60 0 0 -16.789)
vref2 22 0 sin(0 200.86 60 0 0 -136.789)
vref3 32 0 sin(0 200.86 60 0 0 -256.789)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u

```

Continued

TABLE E5.7.2 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (vtrial) frequency of 5.76kHz supplying a three-phase IM with power at $f=60\text{Hz}$ at lagging displacement (power) factor angle of $\theta_{\text{rat}} = -17.183^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power)—Cont'd

```

cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 50 pulse(-50 50 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*gating signals for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*filter is deleted because PSpice is limited to 64 nodes
*parameters of power system with L-N induced voltages ea, eb, ec
RM1 16 18 0.05769
LM1 18 19 0.669m
Vout1 19 123 sin(0 311.93 60 0 0 -16.789)
RM2 26 28 0.05769
LM2 28 29 0.669m
Vout2 29 123 sin(0 328.76 60 0 0 -136.789)
RM3 36 38 0.05769
LM3 38 39 0.669m
Vout3 39 123 sin(0 328.76 60 0 0 -256.789)
Rground 123 0 1Meg
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2

```

Continued

TABLE E5.7.2 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (vtrial) frequency of 5.76kHz supplying a three-phase IM with power at $f=60\text{Hz}$ at lagging displacement (power) factor angle of $\theta_{\text{rat}} = -17.183^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power)—Cont'd

```
+is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.001m chgtol=0.001m
+reltol=5m vntol=1m itl5=0 itl4=200
*transient analysis
.tran 5u 360m 300m 5u
*plotting of traces
.probe
*Fourier analysis
.four 60 22 I(l_w1) I(Rseries) I(LM1)
.end
```

Both the long-time (600s) and short-time (200s) constants are taken into account. See Eqs. (E5.7.1)–(E5.7.21). However, the short-time constant parameters are modified as $R_1 = 0.5 \Omega$, $C_1 = 400 \text{ F}$. Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

In Fig. E5.7.8 the result for the current is not quite correct. The long-time constant ($R_2 \cdot C_2 = 600 \text{ s}$ with $R_2 = 0.2 \Omega$, $C_2 = 3000 \text{ F}$) and short-time constant ($R_1 \cdot C_1 = 200 \text{ s}$ with $R_1 = 0.5 \Omega$, $C_1 = 400 \text{ F}$) are taken into account.

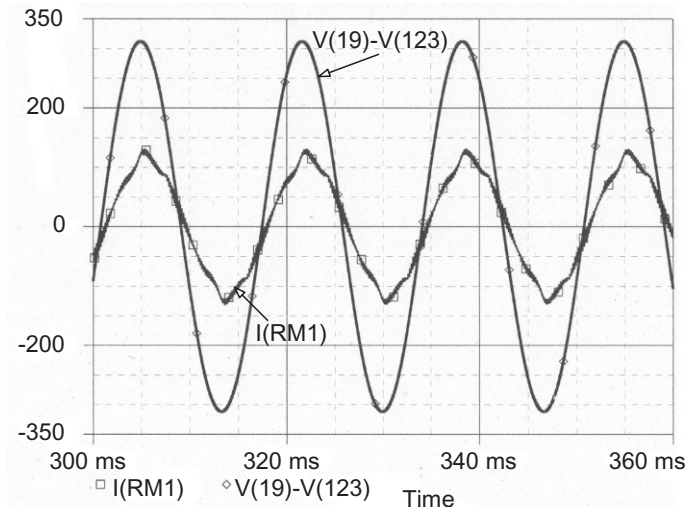


FIG. E5.7.8 Phase input voltage $v_{R(1-s)/s^a}(t) = v_{\text{out1}}(t) = V(19) - V(123)$ and phase input Thévenin-adjusted (reference) current $i_a(t) = I(\text{RM1})$ of three-phase squirrel-cage IM for rated operation. The result for the current is not quite correct. The long-time constant ($R_2 \cdot C_2 = 600 \text{ s}$ with $R_2 = 0.2 \Omega$, $C_2 = 3000 \text{ F}$) and short-time constant ($R_1 \cdot C_1 = 200 \text{ s}$ with $R_1 = 0.5 \Omega$, $C_1 = 400 \text{ F}$) are considered.

Conclusions: Figs. E5.7.6–E5.7.8 show that the current waveshape of the IM for certain nonideal lithium-ion battery parameters is not sinusoidal/cosinusoidal. It appears that depending upon choice of battery parameters a power quality problem exists in operating such a variable-speed, variable-torque IM drive.

(7) Starting at rated voltage and frequency. At standstill (starting) the slip is $s=1.0$, and with the frequency $f=60\text{ Hz}$ one obtains

$$\begin{aligned}\tilde{I}_r' &= \frac{\tilde{V}_{TH}}{\left(R_{TH} + \frac{R_r'}{s}\right) + j(X_{TH} + X_{r\ell})} = \frac{246.47 \angle 0.394^\circ \text{ V}}{[(0.05769 + 0.048) + j(0.25229 + 0.26)] \Omega} \\ &= \frac{246.47 \angle 0.394^\circ \text{ V}}{(0.10569 + j0.51229) \Omega} = \frac{246.47 \angle 0.394^\circ \text{ V}}{\sqrt{0.01117 + 0.26244 \angle 78.343^\circ} \Omega} = \frac{246.47 \angle -77.949^\circ}{0.52308} \\ &= 471.19 \angle -77.949^\circ \text{ A.}\end{aligned}\quad (\text{E5.7.22})$$

The induced voltage $\tilde{E}$ is

$$\begin{aligned}\tilde{E} &= \tilde{V}_{TH} - \tilde{I}_r'(R_{TH} + jX_{TH}) \\ &= 246.47[\cos(0.394) + j\sin(0.394)] \\ &\quad - [471.19\{\cos(77.949) - j\sin(77.949)\}][0.05769 + j0.25229] \\ &= 246.46 + j1.6949 - [98.376 - j460.81][0.05769 + j0.25229] \\ &= 246.46 + j1.6949 - 5.6753 - j24.819 + j26.584 - 116.26 = 124.52 + j3.4599 \\ &= \sqrt{15505 + 11.971 \angle 1.5916^\circ} = 124.57 \text{ V} \angle 1.5916^\circ.\end{aligned}\quad (\text{E5.7.23})$$

The voltage drop across the resistive component referred to the primary and proportional to the developed output power P_d is

$$\tilde{V}_{R_r'(1-s)/s} = \frac{\tilde{I}_r' R_r'(1-s)}{s} = 471.19 \angle -77.949^\circ \text{ A} \cdot 0.048 \Omega \frac{(1-1)}{1} = 0 \text{ V.}\quad (\text{E5.7.24})$$

The instantaneous load phase voltages in Fig. E6.7.9 are now with the amplitude $\sqrt{2} \cdot 0 = 0 \text{ V}$:

$$v_{R_r'(1-s)/s^a} = 0 \text{ V} \cdot \cos(\omega t - 77.95^\circ) = 0, \quad (\text{E5.7.25a})$$

$$v_{R_r'(1-s)/s^b} = 0 \text{ V} \cdot \cos(\omega t - 197.95^\circ) = 0, \quad (\text{E5.7.25b})$$

$$v_{R_r'(1-s)/s^c} = 0 \text{ V} \cdot \cos(\omega t - 317.95^\circ) = 0. \quad (\text{E5.7.25c})$$

The required DC voltage of the inverter is approximately governed by the relation

$$V_{DC} = \frac{2\sqrt{2}V_1}{m}, \quad (\text{E5.7.26})$$

where $V_1 = V_{R_r'(1-s)/s} = 0 \text{ V}$, and the chosen modulation index $m=0.693$ results in $V_{DC}=0$. As default value one chooses the battery voltage value used for rated slip $s=0.03$, that is, $V_{DC}=900 \text{ V}$, which results in a nonsinusoidal current waveshape and $V_{DC}=1300 \text{ V}$ is chosen. Such a large value might too high for an automobile battery because of safety concerns.

The instantaneous *Thévenin* adjusted currents are with the amplitude $\sqrt{2} \cdot 471.19 = 666.26$ A,

$$i_a(t) = 666.26 \text{ A} \cos(\omega t - 77.95^\circ), \quad (\text{E5.7.27a})$$

$$i_b(t) = 666.26 \text{ A} \cos(\omega t - 197.95^\circ), \quad (\text{E5.7.27b})$$

$$i_c(t) = 666.26 \text{ A} \cos(\omega t - 317.95^\circ). \quad (\text{E5.7.27c})$$

Table E5.7.3 represents the PSpice program for a three-phase inverter-IM drive, where a nonideal lithium-ion battery supplies current-controlled PWM, voltage-source inverter feeding an induction motor at starting operation with $s_{\text{start}} = 1.0$, $f = 60$ Hz, $v_{\text{supply}} = 1300$ V, and both time constants are considered.

TABLE E5.7.3 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (v_{trial}) frequency of 5.76 kHz at starting with $s = 1.0$ at $f = 60$ Hz.

```
*Table E5.7.3
*three-phase inverter-IM drive with lithium-ion battery supplies
*current-controlled
* PWM voltage-source inverter feeding an induction motor at
*starting operation with s=1,f=60 Hz.
vsuppl 1000 0 1300
R2 1000 4000 0.20
C2 1000 4000 3000
R1 4000 5000 0.5
C1 4000 5000 400
Rseries 5000 2 0.15
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
l_w1 10 15 0.1m
l_w2 20 25 0.1m
l_w3 30 35 0.1m
R_w1 15 16 10m
R_w2 25 26 10m
R_w3 35 36 10m
*current references in terms of voltages
vref1 12 0 sin(0 666.26 60 0 0 -77.95)
vref2 22 0 sin(0 666.26 60 0 0 -197.95)
vref3 32 0 sin(0 666.26 60 0 0 -317.95)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
```

Continued

TABLE E5.7.3 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (vtrial) frequency of 5.76kHz at starting with $s=1.0$ at $f=60\text{Hz}$ —Cont'd

```

*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 50 pulse(-10 10 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*gating signals for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*filter is deleted because PSpice is limited to 64 nodes
*parameters of power system with L-N induced voltages ea, eb, ec
RM1 16 18 0.05769
LM1 18 19 0.669m
Vout1 19 123 sin(0 0.0 60 0 0 -77.95)
RM2 26 28 0.05769
LM2 28 29 0.669m
Vout2 29 123 sin(0 0.0 60 0 0 -197.95)
RM3 36 38 0.05769
LM3 38 39 0.669m
Vout3 39 123 sin(0 0.0 60 0 0 -317.95)
Rground 123 0 1Meg
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0

```

Continued

TABLE E5.7.3 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (vtrial) frequency of 5.76 kHz at starting with $s=1.0$ at $f=60$ Hz—Cont'd

```
+tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2
+is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.001m chgtol=0.001m
+reltol=5m vntol=1m itl5=0 itl4=200
*transient analysis
.tran 5u 360m 300m 5u
*plotting of traces
.probe
*Fourier analysis
.four 60 22 I(l_w1) I(Rseries) I(LM1)
.end
```

Both the long-time (600s) and short-time (200s) constants are considered. See Eqs. (E5.7.3), (E5.7.4), and Eqs. (E5.7.22)–(E5.7.27a), (E5.7.27b), (E5.7.27c). The short-time constant parameters are $R_1=0.5\ \Omega$, $C_1=400\text{ F}$. Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

Fig. E5.7.9 represents the short-circuit current.

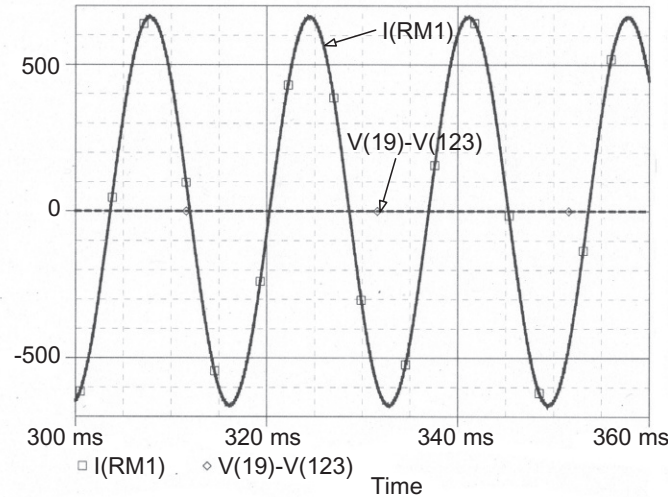


FIG. E5.7.9 Phase input voltage $v_{R_1(1-s)/s^a}(t) = v_{out1}(t) = V(19) - V(123)$ and phase input Thévenin-adjusted reference current $i_o(t) = I(RM1)$ of three-phase squirrel-cage IM for short-circuit operation at slip $s=1.0$. The long-time constant ($R_2 \cdot C_2 = 600\text{ s}$ with $R_2 = 0.2\ \Omega$, $C_2 = 3000\text{ F}$) and short-time constant ($R_1 \cdot C_1 = 200\text{ s}$ with $R_1 = 0.5\ \Omega$, $C_1 = 400\text{ F}$) are considered.

- (8) Perform a PSpice analysis for operation at $f_1 = 360$ Hz with FW, and compute the pertinent resistances and reactances valid for operation at increased frequency $f_1 = 360$ Hz with FW. The resistance increase due to the skin effect is neglected: $R_s = 0.06 \Omega$, $X_{s\ell} = X'_{r\ell} = 0.26 \Omega$, $R'_r = 0.048 \Omega$, $V_{L-L} = 440$ V, $f = f_{\text{rat}} = 60$ Hz, $\tilde{V}_s = \tilde{V}_{L-N} = \frac{V_{L-L}}{\sqrt{3}} \angle 0^\circ = \frac{440}{\sqrt{3}} \angle 0^\circ$ V = 254.04 V $\angle 0^\circ$.

At $f_{\text{rat}} = 60$ Hz the inductances are:

$$\begin{aligned} L_{s\ell} &= \frac{X_{s\ell}}{2\pi f_{\text{rat}}} = \frac{0.26}{377} = 0.6897 \text{ mH}, \quad L'_{r\ell} = \frac{X'_{r\ell}}{2\pi f_{\text{rat}}} = \frac{0.26}{377} = 0.6897 \text{ mH}, \\ L_m &= \frac{X_m}{2\pi f_{\text{rat}}} = \frac{8.47}{377} = 22.467 \text{ mH}. \end{aligned} \quad (\text{E5.7.28})$$

At $f_1 = 360$ Hz the reactances are:

$$\begin{aligned} X_{s\ell}|_{360 \text{ Hz}} &= L_{s\ell} \cdot 2\pi f_1 = 0.6897 \text{ mH} \cdot 2\pi \cdot 360 = 1.560 \Omega, \\ X'_{r\ell}|_{360 \text{ Hz}} &= L'_{r\ell} \cdot 2\pi f_1 = 0.6897 \text{ mH} \cdot 2\pi \cdot 360 = 1.560 \Omega, \\ X_m|_{360 \text{ Hz}} &= L_m \cdot 2\pi f_1 = 22.467 \text{ mH} \cdot 2\pi \cdot 360 = 50.818 \Omega. \end{aligned} \quad (\text{E5.7.29})$$

Compute Thévenin impedance $\tilde{Z}_{\text{TH}}|_{360 \text{ Hz}}$, Thévenin voltage $\tilde{V}_{\text{TH}}|_{360 \text{ Hz}}$, rotor current $\tilde{I}_r|_{360 \text{ Hz}}$, induced voltage $\tilde{E}|_{360 \text{ Hz}}$, and rotor voltage $\tilde{V}_{R'_r(1-s)/s}|_{360 \text{ Hz}}$.

$$\begin{aligned} \tilde{Z}_{\text{TH}}|_{360 \text{ Hz}} &= \frac{jX_m|_{360 \text{ Hz}}(R_s + jX_{s\ell}|_{360 \text{ Hz}})}{R_s + jX_{s\ell}|_{360 \text{ Hz}} + jX_m|_{360 \text{ Hz}}} = R_{\text{TH}}|_{360 \text{ Hz}} + jX_{\text{TH}}|_{360 \text{ Hz}} \\ &= \frac{j50.818(0.06 + j1.560)}{0.06 + j1.560 + j50.818} = \frac{50.818\sqrt{0.0036 + 2.4336} \angle (90^\circ + 87.797^\circ)}{\sqrt{0.0036 + 2743.5} \angle 89.934^\circ} \\ &= \frac{79.335}{52.378} \angle 87.863^\circ \Omega = 1.5147 \angle 87.863^\circ \Omega = 1.5147 [\cos(87.863^\circ) \\ &\quad + j \sin(87.863^\circ)] = (0.056482 + j1.5136) \Omega. \end{aligned}$$

$$R_{\text{TH}}|_{360 \text{ Hz}} = 0.056482 \Omega, \quad X_{\text{TH}}|_{360 \text{ Hz}} = 1.5136 \Omega \quad \text{or} \quad L_{\text{TH}}|_{360 \text{ Hz}} = 0.66918 \text{ mH}. \quad (\text{E5.7.30})$$

$$\begin{aligned} \tilde{V}_{\text{TH}}|_{360 \text{ Hz}} &= \frac{jX_m|_{360 \text{ Hz}} \cdot \tilde{V}_s}{R_s + jX_{s\ell}|_{360 \text{ Hz}} + jX_m|_{360 \text{ Hz}}} = \frac{j50.818 \cdot 254.04}{0.06 + j1.560 + j50.818} \\ &= \frac{12910 \angle 90^\circ}{\sqrt{0.0036 + 2743.5} \angle 89.934^\circ} = 246.48 \angle 0.066^\circ \text{ V}. \end{aligned} \quad (\text{E5.7.31})$$

$$\begin{aligned} \tilde{I}_r|_{360 \text{ Hz}} &= \frac{\tilde{V}_{\text{TH}}|_{360 \text{ Hz}}}{\left(R_{\text{TH}}|_{360 \text{ Hz}} + \frac{R'_r}{s_{\text{rat}}}\right) + j(X_{\text{TH}}|_{360 \text{ Hz}} + X'_{r\ell}|_{360 \text{ Hz}})} \\ &= \frac{246.48 \angle 0.066^\circ \text{ V}}{\left\{ \left(0.056482 + \frac{0.048}{0.03}\right) + j(1.5136 + 1.560) \right\} \Omega} = \frac{246.48 \angle 0.066^\circ \text{ V}}{\{1.6565 + j3.0736\} \Omega} \\ &= \frac{246.48 \angle 0.066^\circ \text{ V}}{\sqrt{2.7440 + 9.4470} \angle 61.678^\circ \Omega} = 70.593 \angle -61.612^\circ \text{ A}. \end{aligned}$$

$$\begin{aligned}
\tilde{E}\Big|_{360 \text{ Hz}} &= \tilde{V}_{\text{TH}}\Big|_{360 \text{ Hz}} - \tilde{I}_r(R_{\text{TH}}\Big|_{360 \text{ Hz}} + jX_{\text{TH}}\Big|_{360 \text{ Hz}}) \\
&= 246.48\angle 0.066^\circ \text{ V} - 70.593\angle -61.612^\circ \text{ A} \cdot (0.056482 + j1.5136) \Omega \\
&= 246.48[\cos(0.066^\circ) + j\sin(0.066^\circ)] - 70.593\angle -61.612^\circ \\
&\quad \left[\sqrt{0.0031902 + 2.291}\right]\angle 87.863^\circ \\
&= 246.48 + j0.28392 - 70.593\angle -61.612^\circ \cdot 1.5147\angle 87.863^\circ \\
&= 246.48 + j0.2839 - 106.93\angle 26.251^\circ \\
&= 246.48 + j0.28392 - 106.93[\cos(26.251^\circ) + j\sin(26.251^\circ)] \\
&= 246.48 + j0.28392 - 95.902 - j47.296 = 150.58 - j47.012 \\
&= 157.75\angle -17.339^\circ \text{ V}.
\end{aligned}$$

$$\begin{aligned}
\tilde{V}_{R'_r(1-s)/s}\Big|_{360 \text{ Hz}} &= \tilde{I}_r\Big|_{360 \text{ Hz}} R'_r(1-s_{\text{rat}})/s_{\text{rat}} = 70.593\angle -61.612^\circ \cdot \frac{0.048(1-0.03)}{0.03} \\
&= 109.56\angle -61.612^\circ \text{ V}.
\end{aligned}$$

The instantaneous load phase voltages in Fig. E5.7.3C are now with the amplitude $\sqrt{2} \cdot 109.56 \text{ V} = 154.92 \text{ V}$:

$$v_{R'_r(1-s)/s^a}(t) = 154.92 \cos(\omega t - 61.612^\circ), \quad (\text{E5.7.32a})$$

$$v_{R'_r(1-s)/s^b}(t) = 154.92 \cos(\omega t - 181.612^\circ), \quad (\text{E5.7.32b})$$

$$v_{R'_r(1-s)/s^c}(t) = 154.92 \cos(\omega t - 301.612^\circ). \quad (\text{E5.7.32c})$$

The required DC voltage of the inverter is approximately governed by the relation $V_{\text{DC}} = 2\sqrt{2} \cdot V_1/m$ where $V_1 = V_{R'_r(1-s)/s} = 109.56 \text{ V}$ and the chosen modulation index $m=0.7$ results in $V_{\text{DC}} = V_{\text{DCbat}} = 2\sqrt{2} \cdot \frac{109.56}{0.7} = 442.62 \text{ V}$, this value generated fundamental and harmonic components, therefore 900 V are used instead. See Table E5.7.4 and Fig. E5.7.10.

TABLE E5.7.4 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (vtrial) frequency of 5.76 kHz supplying a three-phase IM with power at $f_1=360\text{Hz}$ at lagging displacement (power) factor angle (consumer notation, underexcited, delivering real power to IM and absorbing reactive power) at rated slip $s_{\text{rat}}=0.03$ at $f_1=360\text{Hz}$ with FW.

```

*Table E5.7.4
*three-phase inverter-IM drive with lithium-ion battery feeding an
*induction motor at rated operation.
vsuppl 1000 0 900
R2 1000 4000 0.20
C2 1000 4000 3000
R1 4000 5000 0.5
C1 4000 5000 400
Rseries 5000 2 0.15
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode

```

Continued

TABLE E5.7.4 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (vtrial) frequency of 5.76 kHz supplying a three-phase IM with power at $f_1 = 360$ Hz at lagging displacement (power) factor angle (consumer notation, underexcited, delivering real power to IM and absorbing reactive power) at rated slip $s_{rat} = 0.03$ at $f_1 = 360$ Hz with FW—Cont'd

```

msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
l_w1 10 15 0.01m
l_w2 20 25 0.01m
l_w3 30 35 0.01m
R_w1 15 16 10m
R_w2 25 26 10m
R_w3 35 36 10m
*current references in terms of voltages
vref1 12 0 sin(0 99.819 360 0 0 -61.612)
vref2 22 0 sin(0 99.819 360 0 0 -181.612)
vref3 32 0 sin(0 99.819 360 0 0 -301.612)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 50 pulse(-10 10 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*gating signals for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*Filter is deleted because PSpice is limited to 64 nodes
*parameters of power system with L-N induced voltages ea, eb, ec

```

Continued

TABLE E5.7.4 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (vtrial) frequency of 5.76 kHz supplying a three-phase IM with power at $f_1 = 360$ Hz at lagging displacement (power) factor angle (consumer notation, underexcited, delivering real power to IM and absorbing reactive power) at rated slip $s_{\text{rat}} = 0.03$ at $f_1 = 360$ Hz with FW—Cont'd

```

RM1 16 18 0.056482
LM1 18 19 0.66918m
Vout1 19 123 sin(0 154.92 360 0 0 -61.612)
RM2 26 28 0.056482
LM2 28 29 0.66918m
Vout2 29 123 sin(0 154.92 360 0 0 -181.612)
RM3 36 38 0.056482
LM3 38 39 0.66918m
Vout3 39 123 sin(0 154.92 360 0 0 -301.612)
Rground 123 0 1Meg
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2
+is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.001m chgtol=0.001m
+reltol=5m vntol=1m itl5=0 itl4=200
*transient analysis
.tran 5u 360m 350m 5u
*plotting of traces
.probe
*Fourier analysis
.four 360 22 I(l_w1) I(Rseries) I(LM1)
.end

```

Both the long-time (600s) and short-time (200s) constants are considered. See Eqs. (E5.7.3), (E5.7.4) and Eqs. (E5.7.28)–(E5.7.33a), (E5.7.33b), (E5.7.33c). However, the short-time constant parameters are modified as $R_1 = 0.5 \Omega$, $C_1 = 400$ F. Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

The instantaneous *Thévenin* adjusted currents are with the amplitude $\sqrt{2} \cdot 70.593 = 99.819$ A:

$$i_a(t) = 99.819 \cos(\omega t - 61.612^\circ), \quad (\text{E5.7.33a})$$

$$i_b(t) = 99.819 \cos(\omega t - 181.612^\circ), \quad (\text{E5.7.33b})$$

$$i_c(t) = 99.819 \cos(\omega t - 301.612^\circ). \quad (\text{E5.7.33c})$$

The developed (*d*) output power is

$P_d|_{360 \text{ Hz}} = 3 \frac{(70.593)^2 \cdot 0.048(1 - 0.03)}{0.03} = 23.203 \text{ kW} \approx 31.103 \text{ hp}$, and the developed output torque is

$$\tau_d|_{360 \text{ Hz}} = 3 \frac{(70.593)^2 \cdot 0.048}{0.03 \cdot 565.47} = 42.301 \text{ Nm}.$$

Table E5.7.4 represents the PSpice program for a three-phase inverter-IM drive, where a nonideal lithium-ion battery supplies current-controlled PWM, voltage-source inverter feeding an induction motor at starting operation at rated slip $s_{\text{rat}} = 0.03$ at $f_1 = 360$ Hz. Both the long-time (600 s) and short-time (200 s) constants are taken into account. However, the short-time constant parameters are modified as $R_1 = 0.5 \Omega$, $C_1 = 400$ F, $v_{\text{supply}} = 900$ V.

In this case (Fig. E5.7.10), the IM is supplied by the current-controlled PWM voltage-source inverter of Fig. E5.7.5A at lagging displacement (power) factor. Using consumer notation of current, the two graphs (Fig. E5.7.10) correspond to underexcited operation, delivering real power P to three-phase IM and absorbing reactive power Q at increased frequency of $f_1 = 360$ Hz and rated slip $s_{\text{rat}} = 0.03$ with FW.

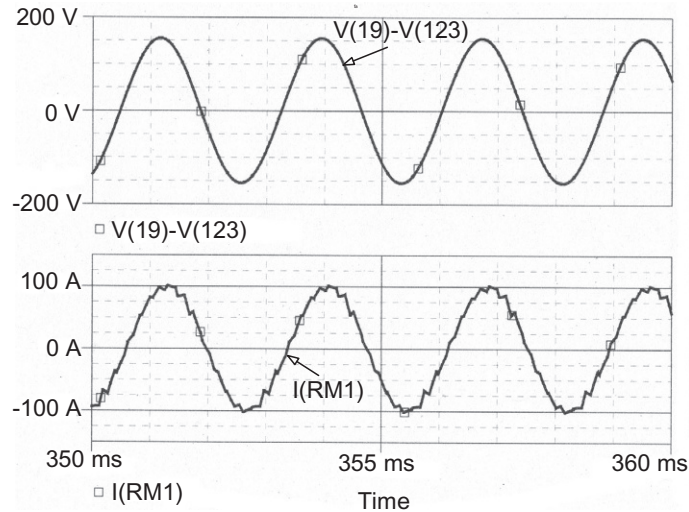


FIG. E5.7.10 Phase input voltage $v_{R_1/(1-s)/s^d}(t) = v_{\text{out}1}(t) = V(19) - V(123)$ and phase input *Thévenin*-adjusted (reference) current $i_a(t) = I(RM1)$ of three-phase squirrel-cage IM for FW operation at slip $s_{\text{rat}} = 0.03$ and $f_1 = 360$ Hz. The long-time constant ($R_2 \cdot C_2 = 600$ s with $R_2 = 0.2 \Omega$, $C_2 = 3000$ F) and short-time constant ($R_1 \cdot C_1 = 200$ s with $R_1 = 0.5 \Omega$, $C_1 = 400$ F) are considered.

The output power $P_d = 23.203 \text{ kW}$ at $f_1 = 360 \text{ Hz}$ is rather small, and therefore the same case with CFW will be analyzed next.

- (9) Operation of IM at increased frequency $f_1 = 360 \text{ Hz}$ with CFW [1,26,27,54,55]. The reconfiguration of the stator three-phase winding from N_{rat} to $(N_{\text{rat}}/2)$ leads to the CFW when operating at higher frequencies. The analysis is performed for $f_1 = 360 \text{ Hz}$ and rated slip $s_{\text{rat}} = 0.03$, which requires that the phase inductances {proportional to $[(N_{\text{rat}}/2)/N_{\text{rat}}]^2$ } and resistances {proportional to $[(N_{\text{rat}}/2)/N_{\text{rat}}]}$ of the stator and rotor are reduced—resistance increase due to skin effect is neglected, the pertinent resistances and reactances are

$$R_s|_{\text{CFW}} = \frac{R_s}{2} = \frac{0.06}{2} = 0.03 \, \Omega, \quad (\text{E5.7.34a})$$

$$X_{s\ell}|_{\text{CFW}} = \frac{X_{s\ell}|_{360 \text{ Hz}}}{4} = \frac{1.560}{4} = 0.390 \, \Omega, \quad (\text{E5.7.34b})$$

$$R'_r|_{\text{CFW}} = \frac{R'_r}{2} = \frac{0.048}{2} = 0.024 \, \Omega, \quad (\text{E5.7.34c})$$

$$X'_{r\ell}|_{\text{CFW}} = \frac{X'_{r\ell}|_{360 \text{ Hz}}}{4} = \frac{1.560}{4} = 0.390 \, \Omega, \quad (\text{E5.7.34d})$$

$$X_m|_{\text{CFW}} = \frac{X_m|_{360 \text{ Hz}}}{4} = \frac{50.818}{4} = 12.705 \, \Omega. \quad (\text{E5.7.34e})$$

Thévenin voltage $\tilde{V}_{\text{TH}}|_{\text{CFW}}$, Thévenin impedance $\tilde{Z}_{\text{TH}}|_{\text{CFW}}$ rotor current $\tilde{I}_r|_{\text{CFW}}$, induced voltage $\tilde{E}|_{\text{CFW}}$, and rotor voltage $\tilde{V}_{R'(1-s)/s}|_{\text{CFW}}$ are with $V_{L-L}|_{\text{CFW}} = V_{L-L} = 440 \text{ V}$ or $\tilde{V}_s|_{\text{CFW}} = \tilde{V}_{L-N}|_{\text{CFW}} = \tilde{V}_{L-N} = 254.04 \angle 0^\circ \text{ V}$,

$$\begin{aligned} \tilde{V}_{\text{TH}}|_{\text{CFW}} &= \frac{254.04 \angle 0^\circ \cdot j12.705}{0.03 + j0.390 + j12.705} = \frac{3227.6 \angle 90^\circ}{0.03 + j13.095} = \frac{3227.6 \angle 90^\circ}{\sqrt{0.0009 + 171.48 \angle 89.869^\circ}} \\ &= 246.47 \angle 0.131^\circ \text{ V}, \end{aligned} \quad (\text{E5.7.35})$$

$$\begin{aligned} \tilde{Z}_{\text{TH}}|_{\text{CFW}} &= \frac{j12.705(0.03 + j0.390)}{0.03 + j0.390 + j12.705} \, \Omega = \frac{12.705 \sqrt{0.0009 + 0.1521 \angle 90^\circ} + 85.601^\circ}{\sqrt{0.0009 + 171.48 \angle 89.869^\circ}} \, \Omega \\ &= \frac{4.9696}{13.095} \angle 85.732^\circ \, \Omega = 0.3795 \angle 85.732^\circ \, \Omega = 0.3795 (\cos 85.732^\circ + j \sin 85.732^\circ) \\ &= (0.028243 + j0.37845) \, \Omega, \end{aligned}$$

or

$$\begin{aligned} R_{\text{TH}}|_{\text{CFW}} &= 0.028243 \, \Omega, \quad X_{\text{TH}}|_{\text{CFW}} = 0.37845 \, \Omega, \quad \text{and } L_{\text{TH}}|_{\text{CFW}} = \frac{X_{\text{TH}}|_{\text{CFW}}}{2\pi \cdot f_1} = \frac{0.37845}{2\pi \cdot 360} \\ &= 0.16732 \text{ mH}. \end{aligned} \quad (\text{E5.7.36})$$

Corresponding to the above analysis one can write

$$\begin{aligned}
 \tilde{I}_r|_{\text{CFW}} &= \frac{246.47 \angle 0.131^\circ \text{ V}}{(0.028243 + \frac{0.024}{0.03}) + j(0.37845 + 0.390) \Omega} = \frac{246.47 \angle 0.131^\circ \text{ V}}{(0.82824 + j0.76845) \Omega} \\
 &= \frac{246.47 \angle 0.131^\circ \text{ V}}{\sqrt{0.68598 + 0.59052} \angle 42.855^\circ \Omega} = 218.15 \angle -42.724^\circ \text{ A}, \\
 \tilde{E}|_{\text{CFW}} &= \tilde{V}_{\text{TH}}|_{\text{CFW}} - \tilde{I}_r|_{\text{CFW}} (R_{\text{TH}}|_{\text{CFW}} + jX_{\text{TH}}|_{\text{CFW}}) \\
 &= 246.47 \angle 0.131^\circ \text{ V} - 218.15 \angle -42.724^\circ \text{ A} \cdot (0.028243 + j0.37845) \Omega \\
 &= 246.47 \angle 0.131^\circ \text{ V} - 218.15 \angle -42.724^\circ \text{ A} \sqrt{0.00079767 + 0.14322} \angle 85.732^\circ \Omega \\
 &= 246.47 \angle 0.131^\circ \text{ V} - 82.787 \angle 43.008^\circ \text{ V} \\
 &= 246.47 (\cos 0.131^\circ + j \sin 0.131^\circ) - 82.787 (\cos 43.008^\circ + j \sin 43.008^\circ) \\
 &= (246.47 + j0.56352 - 60.539 - j56.469) \text{ V} = (185.93 - j55.905) \text{ V} \\
 &= 194.15 \angle -16.735^\circ \text{ V}, \\
 \tilde{V}_{R'_r(1-s)/s}|_{\text{CFW}} &= \tilde{I}_r|_{\text{CFW}} R'_r|_{\text{CFW}} \frac{(1 - s_{\text{rat}})}{s_{\text{rat}}} = 218.15 \angle -42.724^\circ \cdot 0.024 \cdot \frac{(1 - 0.03)}{0.03} \\
 &= 169.28 \angle -42.724^\circ \text{ V}.
 \end{aligned}$$

The instantaneous load phase voltages in Fig. E5.7.3c are now with the amplitude $\sqrt{2} \cdot 169.28 = 239.37 \text{ V}$:

$$v_{R'_r(1-s)s^a}(t) = 239.37 \text{ V} \cos(\omega t - 42.724^\circ), \quad (\text{E5.7.37a})$$

$$v_{R'_r(1-s)s^b}(t) = 239.37 \text{ V} \cos(\omega t - 162.724^\circ), \quad (\text{E5.7.37b})$$

$$v_{R'_r(1-s)s^c}(t) = 239.37 \text{ V} \cos(\omega t - 282.724^\circ). \quad (\text{E5.7.37c})$$

The required DC voltage of the inverter is approximately governed by the relation $V_{\text{DC}} = \frac{2\sqrt{2}V_1}{m}$ where $V_1 = V_{R'_r(1-s)/s} = 169.28 \text{ V}$ and the chosen modulation index $m = 0.7$ results in $V_{\text{DC}} = V_{\text{DCbat}} = \frac{2\sqrt{2}V_1}{m} = \frac{2\sqrt{2} \cdot 2169.28}{m} = 683.89 \text{ V}$, this voltage results in fundamental and large harmonic currents and therefore a voltage of 1600 V is chosen. The instantaneous Thévenin adjusted currents are with the amplitude

$$\sqrt{2} \cdot 218.15 \text{ A} = 308.46 \text{ A} :$$

$$i_a(t) = 308.46 \text{ A} \cos(\omega t - 42.724^\circ), \quad (\text{E5.7.38a})$$

$$i_b(t) = 308.46 \text{ A} \cos(\omega t - 162.724^\circ), \quad (\text{E5.7.38b})$$

$$i_c(t) = 308.46 \text{ A} \cos(\omega t - 282.724^\circ). \quad (\text{E5.7.38c})$$

The developed output power is

$$P_d|_{\text{CFW}} = 3 \frac{(218.15)^2 \cdot 0.024(1 - 0.03)}{0.03} = 110.79 \text{ kW} \equiv 148.51 \text{ hp},$$

and the developed output torque is

$$\tau_d|_{\text{CFW}} = 3 \frac{(218.15)^2 \cdot 0.024}{0.03 \cdot 565.47} = 201.98 \text{ Nm}.$$

Table E5.7.5 lists the PSpice analysis program for operation at $f_1 = 360\text{Hz}$ with CFW.

TABLE E5.7.5 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (v_{trial}) frequency of 5.76kHz supplying a three-phase IM with power at $f_1 = 360\text{Hz}$ at lagging displacement (power) factor angle (consumer notation, underexcited, delivering real power to IM and absorbing reactive) at rated slip $= 0.03$ at $f_1 = 360\text{Hz}$ with CFW.

```

*Table E5.7.5
*three-phase inverter-IM drive with lithium-ion battery supplies
*current-controlled PWM voltage-source inverter feeding an IM
*at rated operation.
vsuppl 1000 0 1600
R2 1000 4000 0.20
C2 1000 4000 3000
R1 4000 5000 0.5
C1 4000 5000 400
Rseries 5000 2 0.15
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
l_w1 10 15 0.01m
l_w2 20 25 0.01m
l_w3 30 35 0.01m
R_w1 15 16 10m
R_w2 25 26 10m
R_w3 35 36 10m
*current references in terms of voltages
vref1 12 0 sin(0 308.46 360 0 0 -42.724)
vref2 22 0 sin(0 308.46 360 0 0 -162.724)
vref3 32 0 sin(0 308.46 360 0 0 -282.724)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k

```

Continued

TABLE E5.7.5 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (vtrial) frequency of 5.76 kHz supplying a three-phase IM with power at $f_1 = 360$ Hz at lagging displacement (power) factor angle (consumer notation, underexcited, delivering real power to IM and absorbing reactive) at rated slip = 0.03 at $f_1 = 360$ Hz with CFW—Cont'd

```

rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 50 pulse(-10 10 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*gating signals for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*filter is deleted because PSpice is limited to 64 nodes

*parameters of power system with L-N induced voltages ea, eb, ec
RM1 16 18 0.02823
LM1 18 19 0.37845m
Vout1 19 123 sin(0 154.92 360 0 0 -42.724)
RM2 26 28 0.028243
LM2 28 29 0.37845m
Vout2 29 123 sin(0 154.92 360 0 0 -162.724)
RM3 36 38 0.028243
LM3 38 39 0.37845m
Vout3 39 123 sin(0 154.92 360 0 0 -282.724)
Rground 123 0 1Meg
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n

```

Continued

TABLE E5.7.5 PSpice input program, Application Example 5.7 for PWM current-controlled voltage-source inverter at a gating voltage (v_{trial}) frequency of 5.76 kHz supplying a three-phase IM with power at $f_1 = 360$ Hz at lagging displacement (power) factor angle (consumer notation, underexcited, delivering real power to IM and absorbing reactive) at rated slip $= 0.03$ at $f_1 = 360$ Hz with CFW—Cont'd

```
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2
+is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.001m chgtol=0.001m
+reftol=5m vntol=1m itl5=0 itl4=200
*transient analysis
.tran 5u 360m 350m 5u
*plotting of traces
.probe
*Fourier analysis
.four 360 22 I(l_w1) I(Rseries) I(LM1)
.end
```

Both the long-time (600s) and short-time (200s) constants are considered. See Eqs. (E5.7.3), (E5.7.4), and Eqs. (E5.7.34a)–(E5.7.34e) to (E5.7.37a), (E5.7.37b), (E5.7.37c). However, the short-time constant parameters are modified as $R_1 = 0.5 \Omega$, $C_1 = 400$ F. Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

In this case, the IM is supplied by the current-controlled PWM voltage-source inverter of Fig. E5.7.3C at lagging displacement (power) factor. Using consumer notation of current, the two graphs (Fig. E5.7.11) correspond to underexcited operation, delivering real power P to three-phase IM and absorbing reactive power Q at increased frequency of $f_1 = 360$ Hz and rated slip $s_{rat} = 0.03$ with CFW.

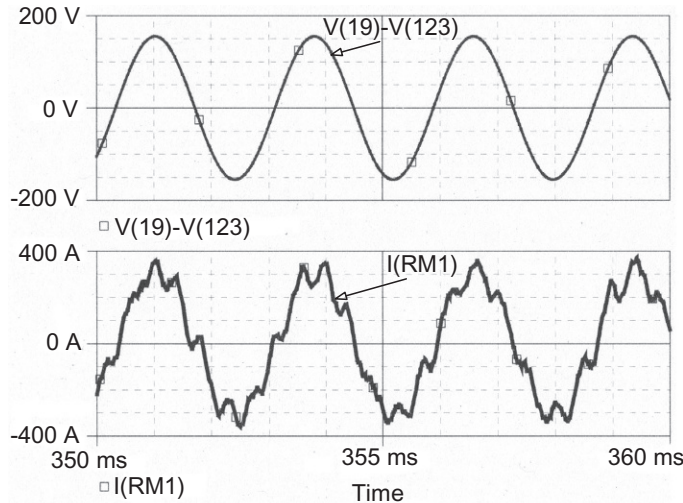


FIG. E5.7.11 Phase input voltage $v_{R'(1-s)/s}(t) = v_{out1}(t) = V(19) - V(123)$ and phase input Thévenin-adjusted (reference) current $i_a(t) = I(RM1)$ of three-phase squirrel-cage IM for CFW operation at slip $s = 0.03$ and $f_1 = 360$ Hz. The long-time constant ($R_2 \cdot C_2 = 600$ s with $R_2 = 0.2 \Omega$, $C_2 = 3000$ F) and short-time constant ($R_1 \cdot C_1 = 200$ s with $R_1 = 0.5 \Omega$, $C_1 = 400$ F) are considered.

(b) Rated operating regime of three-phase IM when supplied by a **nonideal lead-acid battery**

To study the influence of the nonideal properties of lead-acid batteries Fig. E5.7.12 represents the total circuit, where the three-phase IM is supplied from a lead-acid battery via a current-controlled voltage-source inverter. The nonideal parameters of the lead-acid battery are:

$$V_{\text{DCbat}} = 900 \text{ V}, \quad R_{\text{series}} = 0.05 \, \Omega, \quad R_{\text{discharge}} = 5 \text{ k}\Omega, \quad C_b = 200 \text{ F}, \quad C_B = 10,000 \text{ F}. \quad (\text{E5.7.39})$$

It is desirable to add at the output of the battery—across the voltage V_{DC} —a high-frequency filter to protect the battery, however, due to the limited number of PSpice nodes (e.g., 64) such a filter was not added.

The discharge of a battery as shown in Fig. E5.7.5B differs from that of the charging characteristic of Fig. E5.1.4, where it is assumed that the total energy content of 100 kWh can be used to propel the automobile during a period of $t=3\text{h}$. Of course, a battery cannot be completely discharged and therefore the actual battery energy content is assumed to be about 120 kWh. The discharge characteristic consists of decreasing voltage and increasing current so that the power drawn from the battery is about constant. The complete discharge of the 100 kWh battery during 3h results in the initial current (at $t=0$) of $I_{\text{discharge}@t=0} = (100,000 \text{ Wh}/3\text{h})/975 \text{ V} = 34.19 \text{ A}$ and at $t=3\text{h}$ the discharge current is $I_{\text{discharge}@t=3\text{h}} = (100,000 \text{ Wh}/3\text{h})/842 \text{ V} = 39.60 \text{ A}$.

Note that the power drawn at $t=0$ and at $t=3\text{h}$ is about the same $P_{\text{discharge}} = 975 \cdot 34.19 \text{ W} \approx 842 \cdot 39.60 \text{ W} = 33.34 \text{ kW}$. Of course, these are average values, and the actual ones depend upon driving conditions (e.g., acceleration, regeneration through braking) and environmental conditions such as snow and temperature, etc.

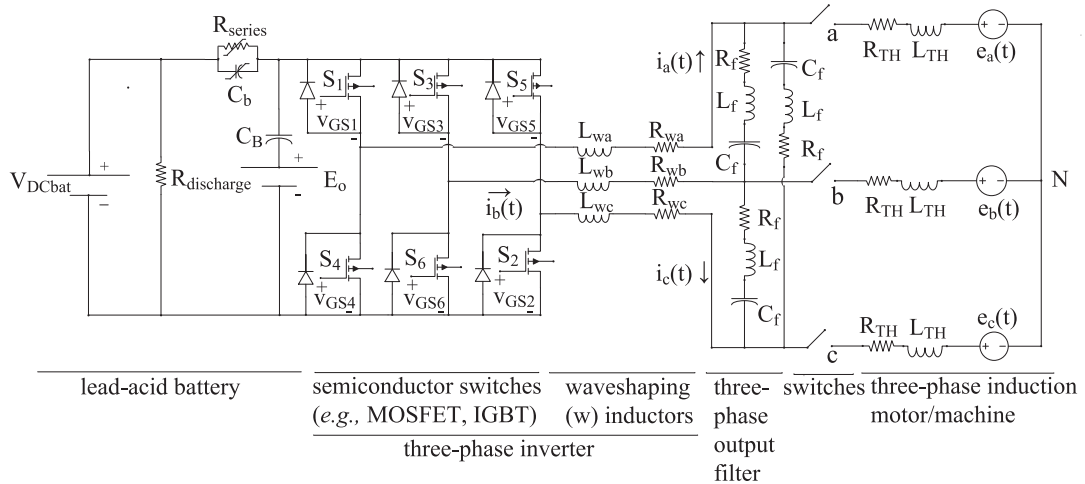


FIG. E5.7.12 Equivalent circuit of 94.07 kW = 126.1 hp three-phase IM supplied through a current-controlled, voltage-source inverter by a **nonideal** lead-acid battery, where the battery voltage ranges from $V_{\text{DCbat}} = (975\text{--}842) \text{ V}$, and the battery current ranges from $I_{\text{DCbat}} = (34.19\text{--}39.60) \text{ A}$, depending upon charging status and driving conditions. The battery voltage is $V_{\text{DCbat}} = 900 \text{ V}$, and the **nonideal** parameters are $R_{\text{discharge}} = 5 \text{ k}\Omega$, $R_{\text{series}} = 0.05 \, \Omega$, $C_b = 200 \text{ F}$, $C_B = \text{CBAT} = 10,000 \text{ F}$ and $E_o = V_{\text{open}} = 900 \text{ V}$.

Table E5.7.6 lists the PSpice analysis program for operation at $f_{\text{rat}} = 60\text{Hz}$ with lead-acid battery.

TABLE E5.7.6 PSpice input program, Application Example 5.7 for PWM current-controlled-source inverter at a gating voltage (v_{tria1}) frequency of 5.76kHz supplying a three-phase IM with power at lagging displacement (power) factor of angle $\theta_{\text{rat}} = -16.789^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power) at rated slip $= 0.03$ at $f = 60\text{Hz}$. See Eqs. (E5.7.1)–(E5.7.21).

```

*Table E5.7.6
*three-phase inverter-IM drive with lead-acid battery supplies
*current-controlled
* PWM voltage-source inverter feeding an induction motor at rated operation.
VDCbat 200 0 900
Rseries 2 200 0.05
Cb 2 200 200
Rdischarge 200 0 5k
CBAT 2 2000 10000
Vopen 2000 0 900
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
l_w1 10 15 0.1m
l_w2 20 25 0.1m
l_w3 30 35 0.1m
R_w1 15 16 10m
R_w2 25 26 10m
R_w3 35 36 10m
*current references in terms of voltages
vref1 12 0 sin(0 200.86 60 0 0 -16.789)
vref2 22 0 sin(0 200.86 60 0 0 -136.789)
vref3 32 0 sin(0 200.86 60 0 0 -256.789)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u

```

Continued

TABLE E5.7.6 PSpice input program, Application Example 5.7 for PWM current-controlled-source inverter at a gating voltage (vtrial) frequency of 5.76kHz supplying a three-phase IM with power at lagging displacement (power) factor of angle $\theta_{\text{rat}} = -16.789^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power) at rated slip=0.03 at $f=60\text{Hz}$. See Eqs. (E5.7.1)–(E5.7.21)—Cont'd

```

cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 50 pulse(-10 10 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*gating signals for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*Filter is deleted because PSpice is limited to 64 nodes
*parameters of power system with L-N induced voltages ea, eb, ec
RM1 16 18 0.05769
LM1 18 19 0.669m
Vout1 19 123 sin(0 311.93 60 0 0 -16.789)
RM2 26 28 0.05769
LM2 28 29 0.669m
Vout2 29 123 sin(0 328.76 60 0 0 -136.789)
RM3 36 38 0.05769
LM3 38 39 0.669m
Vout3 39 123 sin(0 328.76 60 0 0 -256.789)
Rground 123 0 1Meg
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)

```

Continued

TABLE E5.7.6 PSpice input program, Application Example 5.7 for PWM current-controlled-source inverter at a gating voltage (vtrial) frequency of 5.76 kHz supplying a three-phase IM with power at lagging displacement (power) factor of angle $\theta_{\text{rat}} = -16.789^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power) at rated slip = 0.03 at $f = 60$ Hz. See Eqs. (E5.7.1)–(E5.7.21)—Cont'd

```
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2
+is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.001m chgtol=0.001m
+reltol=5m vntol=1m itl5=0 itl4=200
*transient analysis
.tran 5u 360m 300m 5u
*plotting of traces
.probe
*Fourier analysis
.four 60 22 I(l_w1) I(LM1)
.end
```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

Fig. E5.7.13 represents the phase input voltage $v_{R'(1-s)/sa}(t) = v_{\text{out1}}(t) = V(19) - V(123)$ and phase input Thévenin-adjusted (reference) current $i_a(t) = I(\text{RM1})$ of three-phase squirrel-cage IM for rated operation in phase with the above-cited voltage. However, the displacement power factor angle at the input of IM is $\theta_{\text{rat}} = -16.789^\circ$ (consumer notation, underexcited, delivering real power to three-phase IM and absorbing reactive power). Fig. E5.7.13 shows the results for the nonideal and ideal lead-acid batteries with internal impedances (e.g., $R_{\text{discharge}} = 5 \text{ k}\Omega$, $R_{\text{series}} = 0.05 \text{ }\Omega$, $C_b = 200 \text{ F}$, and $C_B = \text{CBAT} = 10,000 \text{ F}$, $E_o = V_{\text{open}} = 900 \text{ V}$) and battery voltage of $V_{\text{DCbat}} = 900 \text{ V}$.

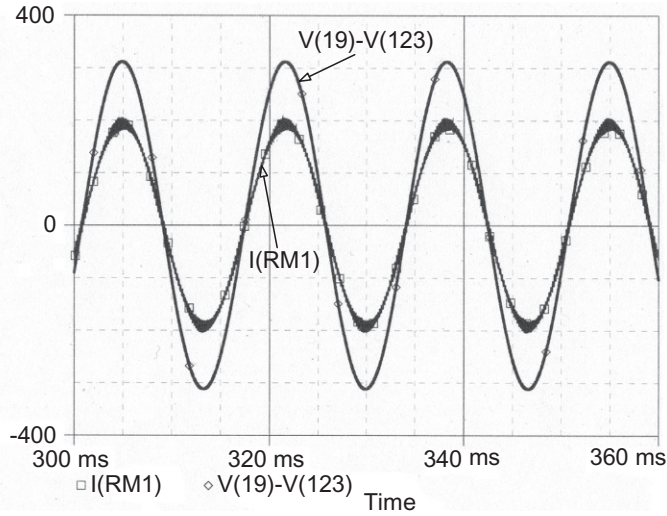


FIG. E5.7.13 Phase input voltage $v_{R/(1-s)/s\theta}(t) = v_{out1}(t) = V(19) - V(123)$ and phase input *Thévenin*-adjusted (reference) current $i_a(t) = I(RM1)$ of three-phase squirrel-cage IM for rated operation in phase with the above-cited voltage. However, the displacement power factor angle at the input of IM is $\theta_{rat} = -16.789^\circ$ (consumer notation, underexcited, delivering real power to three-phase IM and absorbing reactive power). **Nonideal** and **ideal** lead-acid batteries.

Conclusion

The nonideal internal impedances of the lead-acid battery do not appear to influence in this case the performance of the IM due to the assumption $V_{DCbat} = V_{open} = E_o = 900\text{ V}$. More investigations to explore this behavior is recommended.

(c) Rated operating regime of three-phase IM when supplied by a **fuel cell**.

To study the influence of the nonideal properties of fuel cells [Fig. E5.7.14](#) represents the total circuit, where the three-phase IM is supplied from a fuel cell via a current-controlled voltage-source inverter. The parameters of the fuel cell are:

$$V_{DCbat} = 900\text{ V},$$

$$\mathbf{v}_{pm}(t) = \sin(0.151000) \text{ that is an AC voltage of } 1\text{ Hz}$$

$$\text{with } 15\text{ V amplitude, } R_{activation} = 1.5\ \Omega,$$

(E5.7.40)

$$R_{concentration} = 0.2\ \Omega \text{ with } R_{activation+concentration} = 1.7\ \Omega, \quad R_{ohmic} = 0.3\ \Omega, \quad \text{and}$$

$$C_{fuel\ cell} = 10,000\text{ F}.$$

It is desirable to add at the output of the fuel cell a high-frequency filter to protect the fuel cell, however, due to the limited number of PSpice nodes (e.g., 64) such a filter was not added.

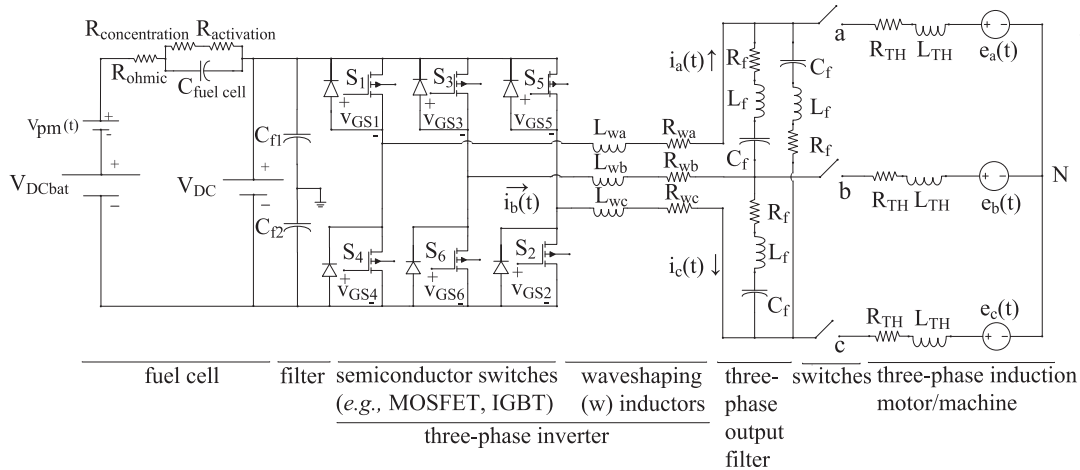


FIG. E5.7.14 Equivalent circuit of 94.07kW=126.1hp three-phase IM supplied through a current-controlled, voltage-source inverter by a **nonideal** fuel cell, where the fuel cell voltage ranges from $V_{DCfuel\ cell} = (975\text{--}842)$ V, and the fuel cell current ranges from $I_{DCfuel\ cell} = (34.19\text{--}39.60)$ A, depending upon charging status and driving conditions.

Table E5.7.7 lists the PSpice analysis program for operation at $f_{rat} = 60$ Hz with fuel cell.

TABLE E5.7.7 PSpice input program, Application Example 5.7 for PWM current-controlled, voltage-source inverter at a gating voltage (v_{trial}) frequency of 5.76 kHz supplying a three-phase IM with power at lagging displacement (power) factor of angle $\theta_{rat} = -16.789^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power) at rated slip = 0.03 at $f = 60$ Hz. See Eqs. (E5.7.1)–(E5.7.21).

```
*Table E5.7.7
*three-phase inverter-IM drive with fuel cell supplies current-controlled
* PWM voltage-source inverter feeding an induction motor at rated operation.
VDCbat 20000 0 900
RactRcon 2 200 1.7
Rohm 200 2000 0.3
vpm 2000 20000 sin(0 15 1 0 0 0)
CFC 2 200 10000
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
```

Continued

TABLE E5.7.7 PSpice input program, Application Example 5.7 for PWM current-controlled, voltage-source inverter at a gating voltage (vtrial) frequency of 5.76kHz supplying a three-phase IM with power at lagging displacement (power) factor of angle $\theta_{\text{rat}} = -16.789^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power) at rated slip = 0.03 at $f = 60\text{Hz}$. See Eqs. (E5.7.1)–(E5.7.21)—Cont'd

```

dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
l_w1 10 15 0.1m
l_w2 20 25 0.1m
l_w3 30 35 0.1m
R_w1 15 16 10m
R_w2 25 26 10m
R_w3 35 36 10m
*current references in terms of voltages
vref1 12 0 sin(0 200.86 60 0 0 -16.789)
vref2 22 0 sin(0 200.86 60 0 0 -136.789)
vref3 32 0 sin(0 200.86 60 0 0 -256.789)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 50 pulse(-50 50 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*gating signals for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*Filter is deleted because PSpice is limited to 64 nodes
*parameters of power system with L-N induced voltages ea, eb, ec
RM1 16 18 0.05769
LM1 18 19 0.669m

```

Continued

TABLE E5.7.7 PSpice input program, Application Example 5.7 for PWM current-controlled, voltage-source inverter at a gating voltage (vtrial) frequency of 5.76kHz supplying a three-phase IM with power at lagging displacement (power) factor of angle $\theta_{\text{rat}} = -16.789^\circ$ (consumer notation, underexcited, delivering real power to IM and absorbing reactive power) at rated slip=0.03 at $f=60\text{Hz}$. See Eqs. (E5.7.1)–(E5.7.21)—Cont'd

```
Vout1 19 123 sin(0 311.93 60 0 0 -16.789)
RM2 26 28 0.05769
LM2 28 29 0.669m
Vout2 29 123 sin(0 328.76 60 0 0 -136.789)
RM3 36 38 0.05769
LM3 38 39 0.669m
Vout3 39 123 sin(0 328.76 60 0 0 -256.789)
Rground 123 0 1Meg
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2
+is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.001m chgtol=0.001m
+reltol=5m vntol=1m itl5=0 itl4=200
*transient analysis
.tran 5u 2300m 2000m 5u
*plotting of traces
.probe
*Fourier analysis
.four 60 22 I(l_w1) I(LM1)
.end
```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

Fig. E5.7.15 shows the phase input voltage $v_{R'_i(1-s)/s^a}(t) = v_{out1}(t) = V(19) - V(123)$ and phase input *Thévenin*-adjusted (reference) current $i_a(t) = I(RM1)$ of three-phase squirrel-cage IM for rated operation with ideal fuel cell. Figs. E5.7.16A and E5.7.16B illustrate the performance of the IM when the fuel cell is not ideal.

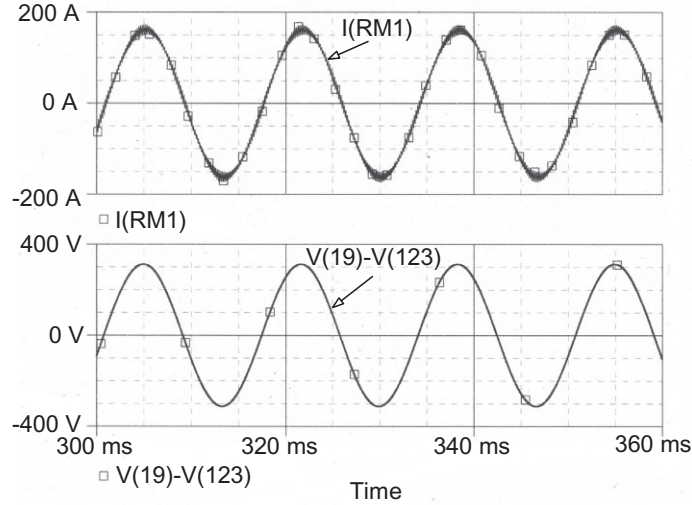


FIG. E5.7.15 Phase input voltage $v_{R'_i(1-s)/s^a}(t) = v_{out1}(t) = V(19) - V(123)$ and phase input *Thévenin*-adjusted (reference) current $i_a(t) = I(RM1)$ of three-phase squirrel-cage IM for rated operation in phase with the above-cited voltage. However, the displacement power factor angle at the input of IM is $\theta_{rat} = -16.789^\circ$ (consumer notation, underexcited, delivering real power to three-phase IM and absorbing reactive power). The fuel cell is assumed to be **ideal** with no internal voltage and impedances (e.g., $v_{pm}(t)$, $R_{activation}$, $R_{concentration}$, R_{ohmic} , $C_{fuel\ cell}$).

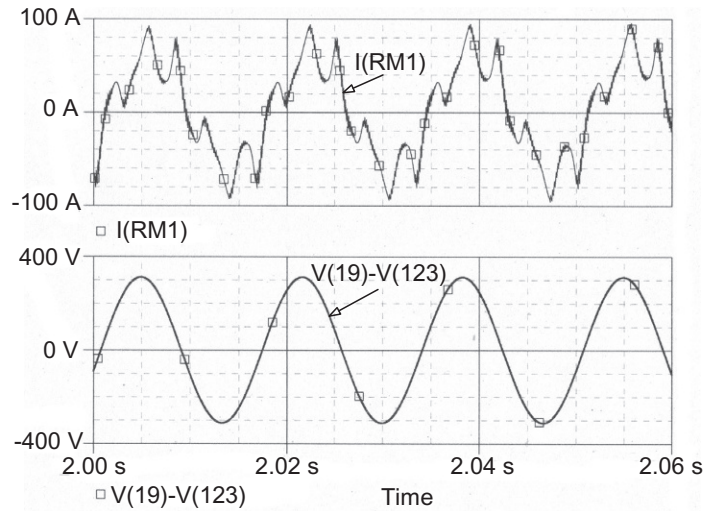


FIG. E5.7.16A Phase input voltage $v_{R'_i(1-s)/s^a}(t) = v_{out1}(t) = V(19) - V(123)$ and phase input *Thévenin*-adjusted (reference) current $i_a(t) = I(RM1)$ of three-phase squirrel-cage IM for rated operation in phase with the above-cited voltage. However, the displacement power factor angle at the input of IM is $\theta_{rat} = -16.789^\circ$ (consumer notation, underexcited, delivering real power to three-phase IM and absorbing reactive power). The fuel cell is assumed to be **nonideal** with internal voltage and impedances $v_{pm}(t) = \sin(0.151000t)$, $R_{activation} = 1.5\ \Omega$, $R_{concentration} = 0.2\ \Omega$, $R_{ohmic} = 0.3\ \Omega$, and $C_{fuel\ cell} = 10,000\ F$, from (2.00–2.06) s.

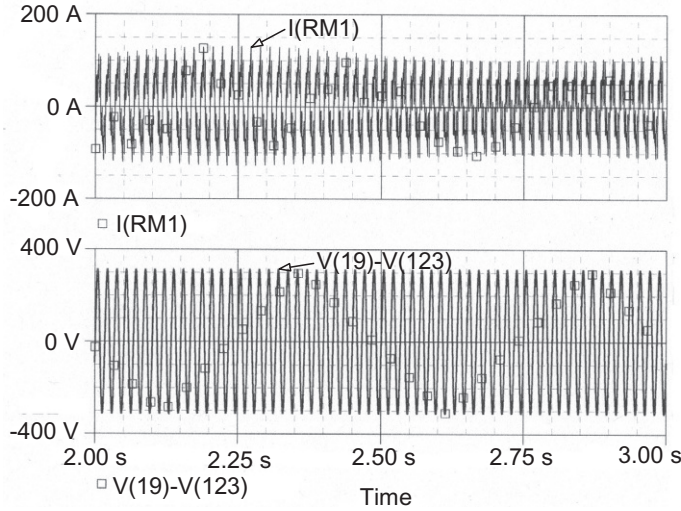


FIG. E5.7.16B Phase input voltage $v_{R'(1-s)/s\alpha}(t) = v_{out1}(t) = V(19) - V(123)$ and phase input Thévenin-adjusted (reference) current $i_a(t) = I(RM1)$ of three-phase squirrel-cage IM for rated operation in phase with the above-cited voltage. However, the displacement power factor angle at the input of IM is $\theta_{rat} = -17.183^\circ$ (consumer notation, underexcited, delivering real power to three-phase IM and absorbing reactive power). The fuel cell is assumed to be **nonideal** with internal voltage and impedances $\mathbf{v}_{pm}(t) = \sin(0 \ 15 \ 1 \ 0 \ 0 \ 0)$, $R_{activation} = 1.5 \ \Omega$, $R_{concentration} = 0.2 \ \Omega$, $R_{ohmic} = 0.3 \ \Omega$, and $C_{fuel \ cell} = 10,000 \text{ F}$, from (2.00–3.00) s.

Conclusion

The internal impedances of the fuel cell lead to a motor current which is not sinusoidal and is modulated with 1 Hz (see Fig. E5.7.16B). It is recommended to further explore this modulated current response by changing the nonideal fuel cell parameters.

5.5 Speed and torque control of brushless-DC machine or permanent-magnet machine fed/supplied by inverter for either motor or generator operation

The three-phase permanent-magnet machine which is part of a brushless DC drive has the following rated data:

$v_a(t) = 420 \text{ V} \sin(\omega t - 30^\circ)$, $v_b(t) = 420 \text{ V} \sin(\omega t + 90^\circ)$, $v_c(t) = 420 \text{ V} \sin(\omega t + 210^\circ)$, with the phase angle of the induced voltages $\theta = -30^\circ$, $L_a = L_b = L_c = 100 \ \mu\text{H}$, $R_a = R_b = R_c = 0.05 \ \Omega$, $f_{rat} = 750 \text{ Hz}$, DC voltage $V_{DC} = 900 \text{ V}$. The circuit is shown in Fig. 5.4 and sequence of the gating signals is given in Fig. 5.5 with the gating pulse voltage of $v_{pulse} = 20 \text{ V}$.

Speed control: Brushless DC machines are controlled with full-on switching (six-step mode) by varying the frequency f [1].

Torque control: Torque can be controlled in the six-step mode by either changing the phase-shift angle θ or by CFW by switching the stator number of turns [1] as well as by changing the currents through pulse-width modulation (PWM) [36]. The variation of the torque based on changing the phase-shift angle θ is discussed in [1].

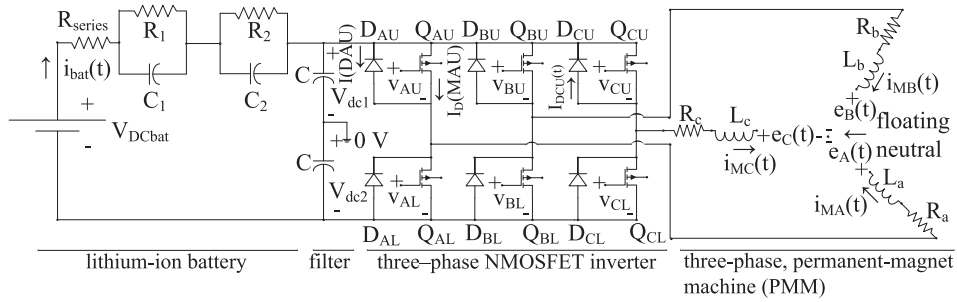


FIG. 5.4 Brushless DC machine operation in full-on (six-step) mode with **nonideal** lithium-ion battery.

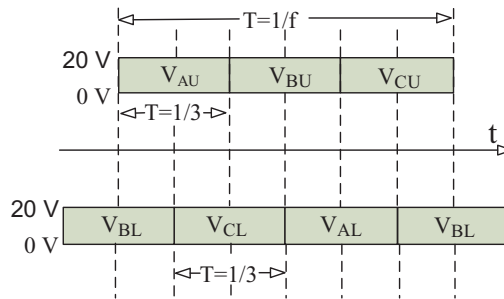


FIG. 5.5 Sequence of gating signals for brushless DC machine in six-step (six-pulse) operation with gating pulses of 20 V.

Investigate the following operating modes:

Rated operation at $f_{\text{rat}} = 750 \text{ Hz}$; starting operation with $f_1 = 6 \text{ Hz}$; operation with field weakening (FW) at rated phase voltage and increased frequency $f_2 = 1500 \text{ Hz}$; operation with CFW at rated phase voltage and increased frequency $f_2 = 1500 \text{ Hz}$ with decreased inductance and resistance values.

5.5.1 Application Example 5.8: Brushless DC motor-inverter performance for rated speed and rated torque supplied by ideal and nonideal lithium-ion batteries

Table E5.8.1A lists the PSpice program for rated operation with $v_a(t) = 420 \text{ Vsin}(\omega t - 30^\circ)$, $v_b(t) = 420 \text{ Vsin}(\omega t + 90^\circ)$, $v_c(t) = 420 \text{ Vsin}(\omega t + 210^\circ)$, phase angle of the induced voltages $\theta = -30^\circ$, $L_a = L_b = L_c = 100 \mu\text{H}$, $R_a = R_b = R_c = 0.05 \Omega$, $f_{\text{rat}} = 750 \text{ Hz}$, DC voltage $V_{\text{DC}} = 900 \text{ V}$ ($V_{\text{DC1}} = 450 \text{ V}$, $V_{\text{DC2}} = -450 \text{ V}$), and $p = 8$ or mechanical angular velocity $\omega_s = 1178.1 \text{ rad/s}$. **Nonideal** lithium-ion battery has the parameters $R_{\text{series}} = 0.15 \Omega$, $R_1 = 1 \Omega$, $R_2 = 0.02 \Omega$, $C_1 = 200 \text{ F}$, $C_2 = 300 \text{ F}$. See discharging characteristic Fig. E5.7.5B. Table E5.8.1B shows the Fourier components for $i_a(t)$ at rated operation with **ideal** lithium-ion battery, $\theta = -30^\circ$.

TABLE E5.8.1A PSpice input program, Application Example 5.8 for rated operation with ideal lithium-ion battery, brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 420V amplitude, $f_{rat} = 750\text{Hz}$, $L_a = L_b = L_c = 100\mu\text{H}$.

```

*Table E5.8.1A
Va 1a st SIN(0 420V 750Hz 0 0 -30)
Vb 3a st SIN(0 420V 750Hz 0 0 90)
Vc 5a st SIN(0 420V 750Hz 0 0 210)
VDC 7 8 900
*Rseries 70000 7000 0.15
*R1 7000 700 1
*R2 700 7 0.02
*C1lithium 7000 700 200
*C2lithium 700 7 300
Rshunt st 0 10Meg
Vfet1 sp1 2 pulse(0 20 0 1u 1u 444.444us 1.3333ms)
Vfet2 sp2 6 pulse(0 20 444.444us 1u 1u 444.444us 1.3333ms)
Vfet3 sp3 4 pulse(0 20 888.888us 1u 1u 444.444us 1.3333ms)
Vfet4 sp4 8 pulse(0 20 666.666us 1u 1u 444.444us 1.3333ms)
Vfet5 sp5 8 pulse(0 20 1.111ms 1u 1u 444.444us 1.3333ms)
Vfet6 sp6 8 pulse(0 20 222.222us 1u 1u 444.444us 1.3333ms)
Mau 7 sp1 2 2 SMM
Mbu 7 sp2 6 6 SMM
Mcu 7 sp3 4 4 SMM
Ma1 2 sp4 8 8 SMM
Mb1 6 sp5 8 8 SMM
Mc1 4 sp6 8 8 SMM
La 1a 1 100u
Ra 1 2 0.05
Lb 3a 3 100u
Rb 3 4 0.05
Lc 5a 5 100u
Rc 5 6 0.05
C1 7 0 100u
C2 0 8 100u
Dau 2 7 D1N4001
Dbu 6 7 D1N4001
Da1 8 2 D1N4001
Db1 8 6 D1N4001
Dcu 4 7 D1N4001
Dc1 8 4 D1N4001
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+ kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69m kp=20.87u
+ l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+ cgdo=100p rg=1.2 is=10f)
.tran 5u 4m 1ms 5u uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m
.four 750 I(Ra) v(Va)
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

TABLE E5.8.1B Fourier components for $i_a(t)$ for Application Example 5.8 at rated operation with **ideal** lithium-ion battery, $\theta = -30^\circ$.

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(Ra)					
DC COMPONENT = -3.5063E-04					
NO	(HZ)	COMPONENT	COMPONENT	(DEG)	PHASE (DEG)
1	7.5000E+02	3.1293E+02	1.0000E+00	-1.5536E+02	0.0000E+00
2	1.5000E+03	3.7247E-02	1.1903E-04	-1.5927E+01	2.9480E+02
3	2.2500E+03	6.2604E-02	2.0006E-04	5.0039E+01	5.1613E+02
4	3.0000E+03	2.8139E-02	8.9920E-05	1.0421E+02	7.2567E+02
5	3.7500E+03	6.1634E+01	1.9696E-01	1.2283E+02	8.9965E+02
6	4.5000E+03	2.1106E-02	6.7445E-05	7.4900E+01	1.0071E+03
7	5.2500E+03	4.1220E+01	1.3172E-01	1.7292E+02	1.2605E+03
TOTAL HARMONIC DISTORTION = 2.3694E+01 PERCENT					

Fig. E5.8.1A shows the phase a MOSFET current $i_D(t) = ID(Mau)$, the three-phase voltages $e_a(t)$, $e_b(t)$, $e_c(t)$ and phase a brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{rat} = 750$ Hz operation at $\theta = -30^\circ$ with **ideal** lithium-ion battery.

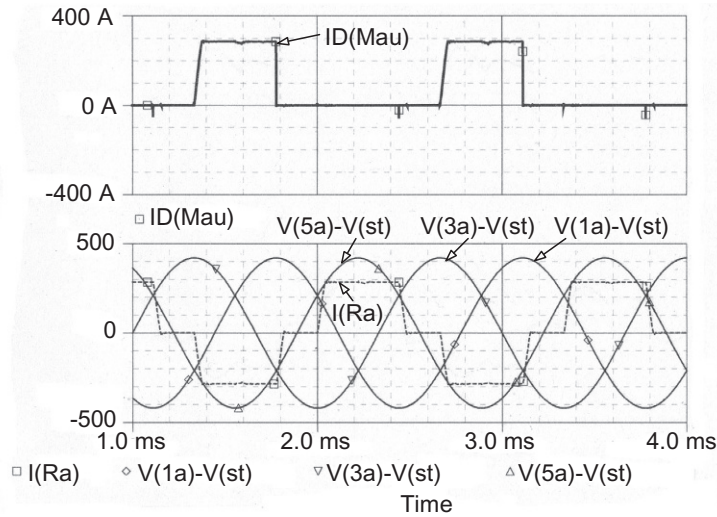


FIG. E5.8.1A MOSFET current $i_D(t) = ID(Mau)$, the three-phase voltages $e_a(t)$, $e_b(t)$, $e_c(t)$ and a-phase brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{rat} = 750$ Hz operation at $V_{a1} = 420/\sqrt{2}V = 297.03$ V and $\theta = -30^\circ$ with **ideal** lithium-ion battery.

The power absorbed by the brushless DC motor is with the data of Table E5.8.1B $P_{absorbed} = 3 \cdot V_{a1} \cdot I_{a1} \cos \theta = 3 \cdot 297.03 \cdot (312.93/\sqrt{2}) \cos(155.36^\circ - 30^\circ) = 114,130$ W with **ideal** lithium-ion battery.

Ohmic loss is $P_{ohm} \approx 3(I_1)^2 R_a = 3 \cdot (221.31)^2 \cdot 0.05 = 7346.6$ W, $P_{iron} \approx 2449$ W, $P_{rot} \approx 1000$ W.

Developed (d) output power is $P_d = P_{absorbed} - P_{ohm} - P_{iron} - P_{rot} = 114,130 - 7346.6 - 2449 - 1000 = 103,330$ W. Efficiency is $\eta_{rat} = 103,330/114,130 = 90.54\%$. Rated angular velocity is $\omega_s = (2/p) \cdot 2\pi f = (2/8) \cdot 2\pi \cdot 750 = 1178.1$ rad/s. Rated torque is $\tau_d = P_d/1178.1$ Nm $= 103,330/1178.1 = 87.71$ Nm.

Table E5.8.1C lists the PSpice program for rated operation with $v_a(t) = 420 \text{ Vsin}(\omega t - 30^\circ)$, $v_b(t) = 420 \text{ Vsin}(\omega t + 90^\circ)$, $v_c(t) = 420 \text{ Vsin}(\omega t + 210^\circ)$, phase angle of the induced voltages $\theta = -30^\circ$, $f_{\text{rat}} = 750 \text{ Hz}$. **Nonideal** lithium battery. Table E5.8.1D shows the Fourier components for $i_a(t)$ at rated operation with nonideal lithium-ion battery, $\theta = -30^\circ$.

TABLE E5.8.1C PSpice input program, Application Example 5.8 for rated operation with **nonideal** lithium-ion battery. Brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 420V amplitude, $f_{\text{rat}} = 750 \text{ Hz}$, $L_a = L_b = L_c = 100 \mu\text{H}$.

```
*Table E5.8.1C
Va 1a st SIN(0 420V 750Hz 0 0 -30)
Vb 3a st SIN(0 420V 750Hz 0 0 90)
Vc 5a st SIN(0 420V 750Hz 0 0 210)
VDC 70000 8 900
Rseries 70000 7000 0.15
R1 7000 700 1
R2 700 7 0.02
C1lithium 7000 700 200
C2lithium 700 7 300
Rshunt st 0 10Meg
Vfet1 sp1 2 pulse(0 20 0 1u 1u 444.444us 1.3333ms)
Vfet2 sp2 6 pulse(0 20 444.444us 1u 1u 444.444us 1.3333ms)
Vfet3 sp3 4 pulse(0 20 888.888us 1u 1u 444.444us 1.3333ms)
Vfet4 sp4 8 pulse(0 20 666.666us 1u 1u 444.444us 1.3333ms)
Vfet5 sp5 8 pulse(0 20 1.1111ms 1u 1u 444.444us 1.3333ms)
Vfet6 sp6 8 pulse(0 20 222.222us 1u 1u 444.444us 1.3333ms)
Mau 7 sp1 2 2 SMM
Mbu 7 sp2 6 6 SMM
Mcu 7 sp3 4 4 SMM
Ma1 2 sp4 8 8 SMM
Mb1 6 sp5 8 8 SMM
Mc1 4 sp6 8 8 SMM
La 1a 1 100u
Ra 1 2 0.05
Lb 3a 3 100u
Rb 3 4 0.05
Lc 5a 5 100u
Rc 5 6 0.05
C1 7 0 100u
C2 0 8 100u
Dau 2 7 D1N4001
Dbu 6 7 D1N4001
Da1 8 2 D1N4001
Db1 8 6 D1N4001
Dcu 4 7 D1N4001
Dc1 8 4 D1N4001
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+ kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69m kp=20.87u
+ l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+ cgdo=100p rg=1.2 is=10f)
.tran 5u 4m 1ms 5u uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m
.four 750 I(Ra) v(Va)
.probe
.end
```

Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

TABLE E5.8.1D Fourier components for $i_a(t)$ for Application Example 5.8 at rated operation with **nonideal** lithium-ion battery, $\theta = -30^\circ$.

FOURIER COMPONENTS OF TRANSIENT RESPONSE I(Ra)					
DC COMPONENT = -1.1988E-01					
NO	(HZ)	COMPONENT	COMPONENT (DEG)	PHASE (DEG)	NORMALIZED
1	7.5000E+02	3.1243E+02	1.0000E+00	-1.5541E+02	0.0000E+00
2	1.5000E+03	2.8570E-01	9.1445E-04	1.1982E+02	4.3064E+02
3	2.2500E+03	2.4714E-01	7.9102E-04	-1.3622E+02	3.3001E+02
4	3.0000E+03	2.6763E-01	8.5661E-04	-2.7759E+01	5.9388E+02
5	3.7500E+03	6.2035E+01	1.9856E-01	1.2224E+02	8.9928E+02
6	4.5000E+03	2.3611E-01	7.5573E-04	-1.7379E+02	7.5867E+02
7	5.2500E+03	4.0938E+01	1.3103E-01	1.7297E+02	1.2608E+03
8	6.0000E+03	2.7920E-01	8.9364E-04	3.5628E+01	1.2789E+03
9	6.7500E+03	2.2759E-01	7.2845E-04	1.3280E+02	1.5315E+03
TOTAL HARMONIC DISTORTION = 2.3790E+01 PERCENT					

Fig. E5.8.1B shows the phase a MOSFET current $i_D(t) = ID(Mau)$, the three-phase voltages $e_a(t)$, $e_b(t)$, $e_c(t)$ and phase a brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{rat} = 750$ Hz operation at $\theta = -30^\circ$ with **nonideal** lithium-ion battery.

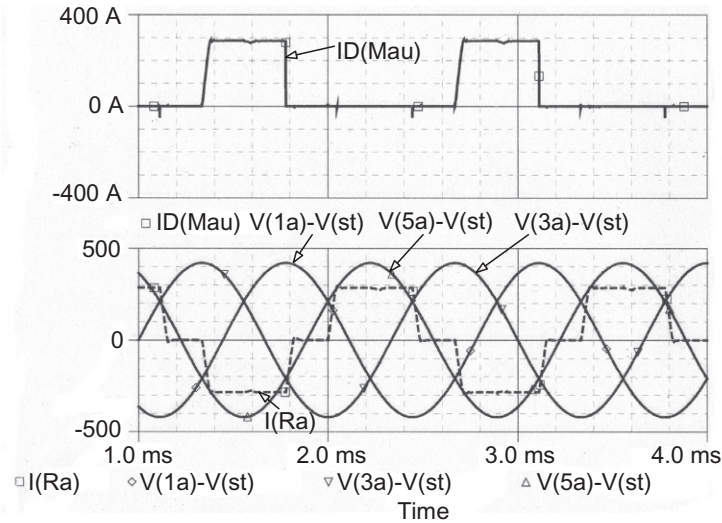


FIG. E5.8.1B MOSFET current $i_D(t) = ID(Mau)$, the three-phase voltages $e_a(t)$, $e_b(t)$, $e_c(t)$ and a-phase brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{rat} = 750$ Hz operation at $V_{a1} = 420/\sqrt{2} V = 297.03$ V and $\theta = -30^\circ$ with **nonideal** lithium-ion battery.

The power absorbed by the brushless DC motor is with the data of Table E5.8.1D $P_{absorbed} = 3 \cdot V_{a1} \cdot I_{a1} \cos \theta = 3 \cdot 297.03 \cdot (312.43/\sqrt{2}) \cos(155.41^\circ - 30^\circ) = 114,080$ W with **nonideal** lithium-ion battery.

Ohmic loss is $P_{\text{ohm}} \approx 3(I_1)^2 R_a = 3 \cdot (220.95)^2 \cdot 0.05 = 7322.8 \text{ W}$, $P_{\text{iron}} \approx 2449 \text{ W}$, $P_{\text{rot}} \approx 1000 \text{ W}$.

Developed (d) output power is $P_d = P_{\text{absorbed}} - P_{\text{ohm}} - P_{\text{iron}} - P_{\text{rot}} = 114,080 \text{ W} - 2449 \text{ W} - 1000 = 110,630 \text{ W}$. Efficiency is $\eta_{\text{rat}} = 110,630 / 114,080 = 96.98\%$. Rated angular velocity is $\omega_s = (2/p) \cdot 2\pi f = (2/8) \cdot 2\pi \cdot 750 = 1178.1 \text{ rad/s}$. Rated torque is $\tau_d = P_d / 1178.1 \text{ Nm} = 110,630 \text{ W} / 1178.1 \text{ rad/s} = 93.91 \text{ Nm}$.

Table E5.8.1E lists the PSpice program for rated operation with $v_a(t) = 420 \text{ Vsin}(\omega t)$, $v_b(t) = 420 \text{ Vsin}(\omega t + 120^\circ)$, $v_c(t) = 420 \text{ Vsin}(\omega t + 240^\circ)$, phase angle of the induced voltages $\theta = 0^\circ$, $f_{\text{rat}} = 750 \text{ Hz}$. Table E5.8.1F shows the Fourier components for $i_a(t)$ at rated operation with **nonideal** lithium-ion battery, $\theta = 0^\circ$.

TABLE E5.8.1E PSpice input program, Application Example 5.8 for rated operation with **nonideal** lithium-ion battery, brushless DC motor drive for $\theta = 0^\circ$, ea, eb, ec with 420 V amplitude, $f_{\text{rat}} = 750 \text{ Hz}$, $L_a = L_b = L_c = 100 \mu\text{H}$.

```
*Table E5.8.1E
Va 1a st SIN(0 420V 750Hz 0 0 0)
Vb 3a st SIN(0 420V 750Hz 0 0 120)
Vc 5a st SIN(0 420V 750Hz 0 0 240)
VDC 70000 8 900
Rseries 70000 7000 0.15
R1 7000 700 1
R2 700 7 0.02
C1lithium 7000 700 200
C2lithium 700 7 300
Rshunt st 0 10Meg
Vfet1 sp1 2 pulse(0 20 0 1u 1u 444.444us 1.3333ms)
Vfet2 sp2 6 pulse(0 20 444.444us 1u 1u 444.444us 1.3333ms)
Vfet3 sp3 4 pulse(0 20 888.888us 1u 1u 444.444us 1.3333ms)
Vfet4 sp4 8 pulse(0 20 666.666us 1u 1u 444.444us 1.3333ms)
Vfet5 sp5 8 pulse(0 20 1.1111ms 1u 1u 444.444us 1.3333ms)
Vfet6 sp6 8 pulse(0 20 222.222us 1u 1u 444.444us 1.3333ms)
Mau 7 sp1 2 2 SMM
Mbu 7 sp2 6 6 SMM
McU 7 sp3 4 4 SMM
Ma1 2 sp4 8 8 SMM
Mb1 6 sp5 8 8 SMM
Mc1 4 sp6 8 8 SMM
La 1a 1 100u
Ra 1 2 0.05
Lb 3a 3 100u
Rb 3 4 0.05
Lc 5a 5 100u
Rc 5 6 0.05
C1 7 0 100u
C2 0 8 100u
Dau 2 7 D1N4001
Dbu 6 7 D1N4001
Da1 8 2 D1N4001
Db1 8 6 D1N4001
Dcu 4 7 D1N4001
Dc1 8 4 D1N4001
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+ kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69m kp=20.87u
+ l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+ cgdo=100p rg=1.2 is=10f)
```

Continued

TABLE E5.8.1E PSpice input program, Application Example 5.8 for rated operation with **nonideal** lithium-ion battery, brushless DC motor drive for $\theta = 0^\circ$, e_a , e_b , e_c with 420 V amplitude, $f_{\text{rat}} = 750 \text{ Hz}$, $L_a = L_b = L_c = 100 \mu\text{H}$ —Cont'd

```
.tran 5u 4m 1ms 5u uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m
.four 750 I(Ra) v(Va)
.probe
.end
```

Note: All comment lines must be preceded an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

TABLE E5.8.1F Fourier components for $i_a(t)$ for Application Example 5.8 at rated operation with **nonideal** lithium-ion battery, $\theta = 0^\circ$.

```
FOURIER COMPONENTS OF TRANSIENT RESPONSE I(Ra)
DC COMPONENT = 5.7798E-02
HARMONIC FREQUENCY FOURIER NORMALIZED PHASE NORMALIZED
NO (HZ) COMPONENT COMPONENT (DEG) PHASE (DEG)
1 7.5000E+02 2.8276E+02 1.0000E+00 -1.5648E+02 0.0000E+00
2 1.5000E+03 4.3991E-01 1.5558E-03 -5.0453E+00 3.0791E+02
3 2.2500E+03 2.2698E-01 8.0272E-04 2.6785E+01 4.9622E+02
4 3.0000E+03 3.7424E-01 1.3235E-03 7.4255E+01 7.0017E+02
5 3.7500E+03 6.6713E+01 2.3593E-01 1.0918E+02 8.9157E+02
6 4.5000E+03 1.2617E-01 4.4619E-04 -5.4923E+01 8.8395E+02
7 5.2500E+03 3.0926E+01 1.0937E-01 -1.7624E+02 9.1911E+02
8 6.0000E+03 3.2403E-01 1.1459E-03 -1.1312E+02 1.1387E+03
9 6.7500E+03 1.7701E-01 6.2600E-04 -8.1781E+01 1.3265E+03
TOTAL HARMONIC DISTORTION = 2.6006E+01 PERCENT
```

Fig. E5.8.1C shows the phase a MOSFET current $i_D(t) = I_D(\text{Mau})$, the three-phase voltages $e_a(t)$, $e_b(t)$, $e_c(t)$ and phase a brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{\text{rat}} = 750 \text{ Hz}$ operation at $\theta = 0^\circ$ with **nonideal** lithium-ion battery.

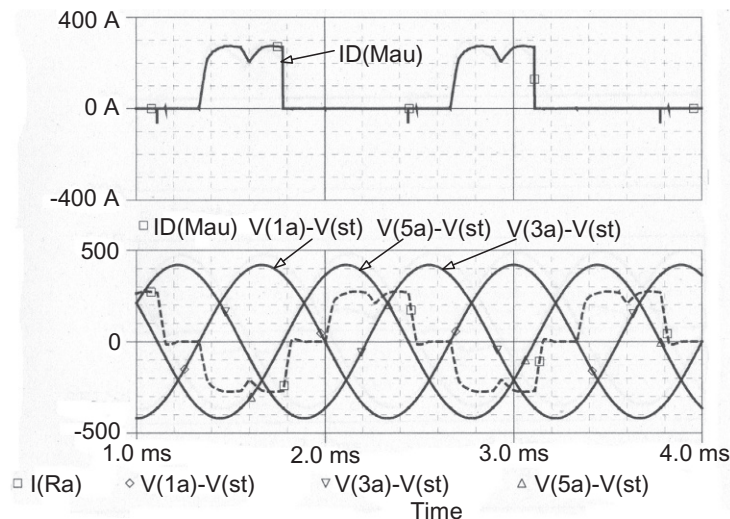


FIG. E5.8.1C MOSFET current $i_D(t) = I_D(\text{Mau})$, the three-phase voltages $e_a(t)$, $e_b(t)$, $e_c(t)$ and a-phase brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{\text{rat}} = 750 \text{ Hz}$ operation at $V_{a1} = 420/\sqrt{2} \text{ V} = 297.03 \text{ V}$ and $\theta = 0^\circ$ with **nonideal** lithium-ion battery.

The power absorbed by the brushless DC motor is with the data of Table E5.8.1F $P_{\text{absorbed}} = 3 \cdot V_{a1} \cdot I_{a1} \cos \theta = 3 \cdot 297.03 \cdot (282.76 / \sqrt{2}) \cos(156.48^\circ) = 163,390 \text{ W}$ with **nonideal** lithium-ion battery.

Ohmic loss is $P_{\text{ohm}} \approx 3(I_1)^2 R_a = 3 \cdot (200)^2 \cdot 0.05 = 5998.3 \text{ W}$, $P_{\text{iron}} \approx 2449 \text{ W}$, $P_{\text{rot}} \approx 1000 \text{ W}$.

Developed (d) output power is $P_d = P_{\text{absorbed}} - P_{\text{ohm}} - P_{\text{iron}} - P_{\text{rot}} = 163,390 - 5998.3 - 2449 - 1000 = 153,940 \text{ W}$. Efficiency is $\eta_{\text{rat}} = 153,940 / 163,390 = 94.22\%$. Rated angular velocity is $\omega_s = (2/p) \cdot 2\pi f = (2/8) \cdot 2\pi \cdot 750 = 1178.1 \text{ rad/s}$. Rated torque is $\tau_d = P_d / 1178.1 \text{ Nm} = 153,940 \text{ W} / 1178.1 \text{ rad/s} = 130.68 \text{ Nm}$.

Fig. E5.8.1D shows the MOSFET current $i_D(t) = ID(\text{Mau})$, and phase a brushless DC motor current $i_a(t) = I(\text{Ra})$ for rated $f_{\text{rat}} = 750 \text{ Hz}$ operation at $V_{a1} = 420 / \sqrt{2} \text{ V} = 297.03 \text{ V}$ and $\theta = -30^\circ$ with **ideal** lithium-ion battery.

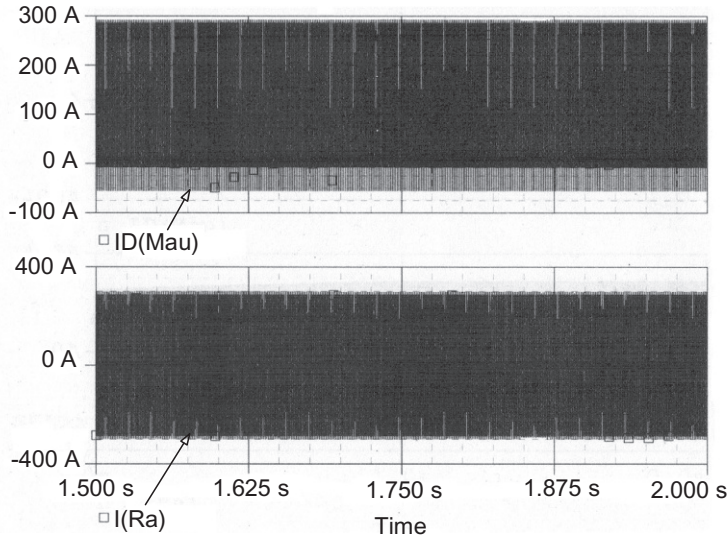


FIG. E5.8.1D MOSFET current $i_D(t) = ID(\text{Mau})$ and a-phase brushless DC motor current $i_a(t) = I(\text{Ra})$ for rated $f_{\text{rat}} = 750 \text{ Hz}$ operation at $V_{a1} = 420 / \sqrt{2} \text{ V} = 297.03 \text{ V}$ and $\theta = -30^\circ$ with **ideal** lithium-ion battery. Plot from (1.5–2.0) s.

Fig. E5.8.1E shows the MOSFET current $i_D(t) = ID(\text{Mau})$, and phase a brushless DC motor current $i_a(t) = I(\text{Ra})$ for rated $f_{\text{rat}} = 750 \text{ Hz}$ operation at $V_{a1} = 420 / \sqrt{2} \text{ V} = 297.03 \text{ V}$ and $\theta = 0^\circ$ with **ideal** lithium-ion battery.

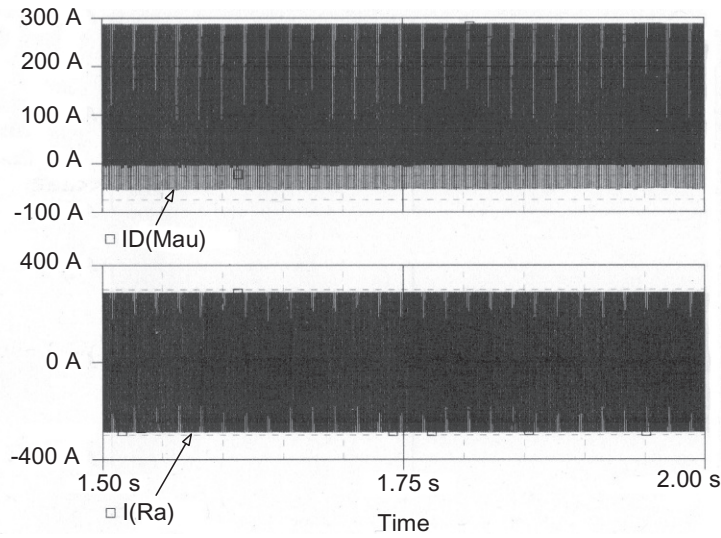


FIG. E5.8.1E MOSFET current $i_D(t) = ID(Mau)$ and a-phase brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{rat} = 750$ Hz operation at $V_{a1} = 420/\sqrt{2} V = 297.03$ V and $\theta = 0^\circ$ with **ideal** lithium-ion battery. Plot from (1.5–2.0) s.

Fig. E5.8.1F shows the MOSFET current $i_D(t) = ID(Mau)$, and phase a brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{rat} = 750$ Hz operation at $V_{a1} = 420/\sqrt{2} V = 297.03$ V and $\theta = 0^\circ$ with **nonideal** lithium-ion battery.

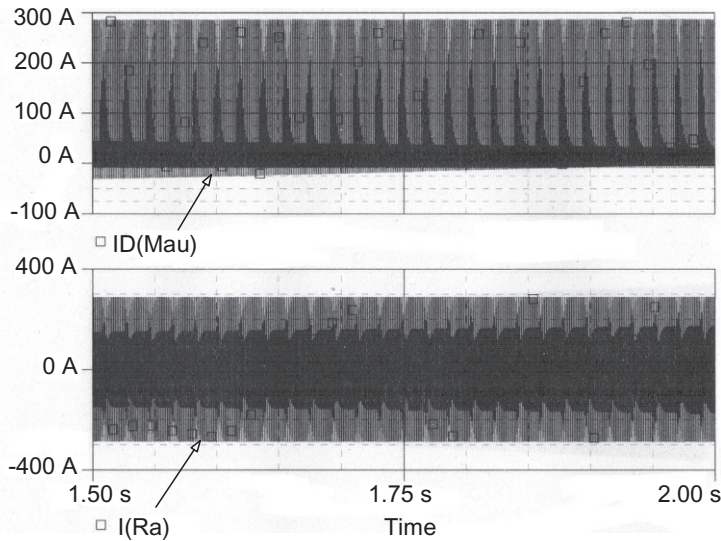


FIG. E5.8.1F MOSFET current $i_D(t) = ID(Mau)$ and a-phase brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{rat} = 750$ Hz operation at $V_{a1} = 420/\sqrt{2} V = 297.03$ V and $\theta = 0^\circ$ with **nonideal** lithium-ion battery. Plot from (1.5–2.0) s.

5.5.1.1 Conclusions

The output (developed) power P_d and the torque τ_d can be controlled by changing the phase angle θ of the stator voltages. From Fig. E5.8.1F note that the MOSFET current $I_D(\text{Mau})$ is not quite constant while the phase current $i_a(t) = I(\text{Ra})$ is quite constant. Should the current need to be controlled, then instead of full-on mode the PWM approach can be used [36].

5.5.2 Application Example 5.9: Brushless DC motor-inverter performance at low speed corresponding to $f_{\text{start1}} = 6 \text{ Hz}$ and $f_{\text{start2}} = 60 \text{ Hz}$ with lithium-ion battery and fuel cell

Table E5.9.1A lists the PSpice program for a **nonideal** lithium-ion battery at $f_{\text{start1}} = 6 \text{ Hz}$.

TABLE E5.9.1A PSpice input program, Application Example 5.9 for starting operation with **nonideal** lithium-ion battery, and $f_{\text{start1}} = 6 \text{ Hz}$, brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 3.36 V, amplitude, $f_1 = 6 \text{ Hz}$, $L_a = L_b = L_c = 100 \mu\text{H}$.

```
*Table E5.9.1A
Va 1a st SIN(0 3.36V 6Hz 0 0 -30)
Vb 3a st SIN(0 3.36V 6Hz 0 0 90)
Vc 5a st SIN(0 3.36V 6Hz 0 0 210)
VDC 70000 8 900
Rseries 70000 7000 0.15
R1 7000 700 1
R2 700 7 0.02
C1lithium 7000 700 200
C2lithium 700 7 300
Rshunt st 0 10Meg
Vfet1 sp1 2 pulse(0 50 0 1u 1u 55.555ms 166.77ms)
Vfet2 sp2 6 pulse(0 50 55.555ms 1u 1u 55.555ms 166.77ms)
Vfet3 sp3 4 pulse(0 50 111.111ms 1u 1u 55.555ms 166.77ms)
Vfet4 sp4 8 pulse(0 50 83.333ms 1u 1u 55.555ms 166.77ms)
Vfet5 sp5 8 pulse(0 50 138.888ms 1u 1u 55.555ms 166.77ms)
Vfet6 sp6 8 pulse(0 50 27.7777ms 1u 1u 55.555ms 166.77ms)
Mau 7 sp1 2 2 SMM
Mbu 7 sp2 6 6 SMM
McU 7 sp3 4 4 SMM
Ma1 2 sp4 8 8 SMM
Mb1 6 sp5 8 8 SMM
Mc1 4 sp6 8 8 SMM
La 1a 1 100u
Ra 1 2 0.05
Lb 3a 3 100u
Rb 3 4 0.05
Lc 5a 5 100u
Rc 5 6 0.05
C1 7 0 100u
C2 0 8 100u
Dau 2 7 D1N4001
Dbu 6 7 D1N4001
```

Continued

TABLE E5.9.1A PSpice input program, Application Example 5.9 for starting operation with **nonideal** lithium-ion battery, and $f_{\text{start1}} = 6 \text{ Hz}$, brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 3.36 V, amplitude, $f_1 = 6 \text{ Hz}$, $L_a = L_b = L_c = 100 \mu\text{H}$ —
Cont'd

```

Da1 8 2 D1N4001
Db1 8 6 D1N4001
Dcu 4 7 D1N4001
Dc1 8 4 D1N4001
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+ kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69m kp=20.87u
+ l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+ cgdo=100p rg=1.2 is=10f)
.tran 5u 4s 3.95ms 5u uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m
.four 6 I(Ra) v(Va)
.probe
.end

```

Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

Fig. E5.9.1A shows the voltages and current for a **nonideal** lithium-ion battery at $f_{\text{start1}} = 6 \text{ Hz}$.

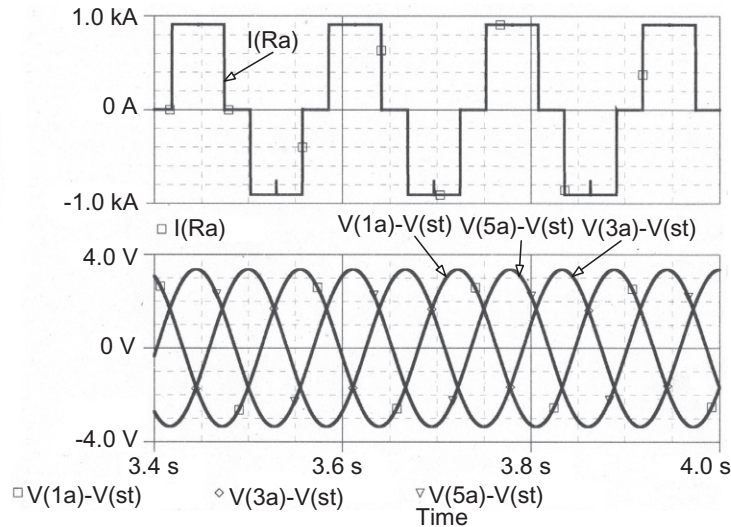


FIG. E5.9.1A Brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{\text{start1}} = 6 \text{ Hz}$ operation at $V_{a1} = 3.36 / \sqrt{2} = 2.376 \text{ V}$ and $\theta = -30^\circ$ with **nonideal** lithium-ion battery.

The power absorbed by the brushless DC motor is for $f_{\text{start}} = 6 \text{ Hz}$ (Fig. E5.9.1A) $P_{\text{absorbed}} = 3 \cdot V_{a1} \cdot I_{a1} \cos \theta = 3 \cdot 2.376 \cdot (1001 / \sqrt{2}) \cos(125.39) = 2922.4 \text{ W}$ with **nonideal** lithium-ion battery.

Ohmic loss is $P_{\text{ohm}} \approx 3(I_1)^2 R_a = 3 \cdot (707.92)^2 \cdot 0.05 = 75,173 \text{ W}$. Note that $P_{\text{ohm}} > P_{\text{absorbed}}$ and $f_{\text{start1}} = 6 \text{ Hz}$ is not feasible. P_{absorbed} is low, use either higher frequency or voltage, and possibly different θ .

Table E5.9.1B lists the PSpice program for a **nonideal** lithium-ion battery at $f_{\text{start2}} = 60 \text{ Hz}$.

TABLE E5.9.1B PSpice input program, Application Example 5.9 for starting operation with **nonideal** lithium-ion battery, $f_{\text{start2}} = 60 \text{ Hz}$, brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 33.6 V amplitude, $f_{\text{start}} = 60 \text{ Hz}$, $L_a = L_b = L_c = 100 \text{ mH}$, $R_a = R_b = R_c = 0.05 \text{ ohm}$.

```
*Table E5.9.1B
Va 1a st SIN(0 33.6V 60Hz 0 0 -30)
Vb 3a st SIN(0 33.6V 60Hz 0 0 90)
Vc 5a st SIN(0 33.6V 60Hz 0 0 210)
VDC 70000 8 900
Rseries 70000 7000 0.15
R1 7000 700 1
R2 700 7 0.02
C1lithium 7000 700 200
C2lithium 700 7 300
Rshunt st 0 1Meg
Vfet1 sp1 2 pulse(0 15 0 1u 1u 5.5555ms 16.666ms)
Vfet2 sp2 6 pulse(0 15 5.555ms 1u 1u 5.555ms 16.666ms)
Vfet3 sp3 4 pulse(0 15 11.1111ms 1u 1u 5.555ms 16.666ms)
Vfet4 sp4 8 pulse(0 15 8.3333ms 1u 1u 5.555ms 16.666ms)
Vfet5 sp5 8 pulse(0 15 13.889ms 1u 1u 5.555ms 16.666ms)
Vfet6 sp6 8 pulse(0 15 2.7777ms 1u 1u 5.555ms 16.666ms)
Mau 7 sp1 2 2 SMM
Mbu 7 sp2 6 6 SMM
McU 7 sp3 4 4 SMM
Ma1 2 sp4 8 8 SMM
Mb1 6 sp5 8 8 SMM
Mc1 4 sp6 8 8 SMM
La 1a 1 100u
Ra 1 2 0.05
Lb 3a 3 100u
Rb 3 4 0.05
Lc 5a 5 100u
Rc 5 6 0.05
C1 7 0 100u
C2 0 8 100u
Dau 2 7 D1N4001
Dbu 6 7 D1N4001
Da1 8 2 D1N4001
Db1 8 6 D1N4001
Dcu 4 7 D1N4001
Dc1 8 4 D1N4001
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+ kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69m kp=20.87u
+ l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
```

Continued

TABLE E5.9.1B PSpice input program, Application Example 5.9 for starting operation with **nonideal** lithium-ion battery, $f_{\text{start2}} = 60\text{ Hz}$, brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 33.6 V amplitude, $f_{\text{start}} = 60\text{ Hz}$, $L_a = L_b = L_c = 100\text{ mH}$, $R_a = R_b = R_c = 0.05\text{ ohm}$ —Cont'd

```
+ cgdo=100p rg=1.2 is=10f)
.tran 5u 4s 1s 5u uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m
.four 60 I(Ra) v(Va)
.probe
.end
```

Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

Fig. E5.9.1B shows the voltages and current for a **nonideal** lithium-ion battery at $f_{\text{start2}} = 60\text{ Hz}$.

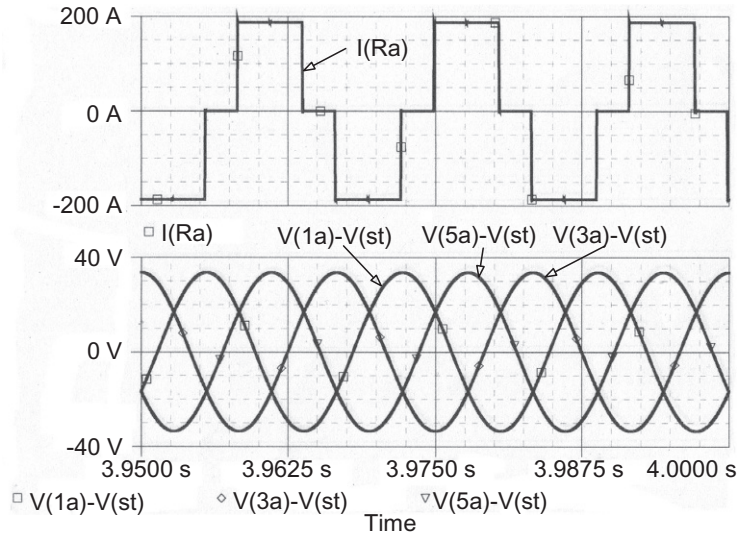


FIG. E5.9.1B Brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{\text{start2}} = 60\text{ Hz}$ operation at $V_{a1} = 33.6/\sqrt{2} = 23.762\text{ V}$ and $\theta = -30^\circ$ with **nonideal** lithium-ion battery.

The power absorbed by the brushless DC motor is for $f_{\text{start}} = 60\text{ Hz}$ (Fig. E5.9.1B) $P_{\text{absorbed}} = 3 \cdot V_{a1} \cdot I_{a1} \cos \theta = 3 \cdot 23.762 \cdot (206.48/\sqrt{2}) \cos(147.07^\circ - 30^\circ) = 4737.2\text{ W}$ with **nonideal** lithium-ion battery.

Ohmic loss is $P_{\text{ohm}} \approx 3(I_1)^2 R_a = 3 \cdot (146.03)^2 \cdot 0.05 = 3198.5\text{ W}$, $P_{\text{iron}} \approx 2449\text{ W}$, $P_{\text{rot}} \approx 0\text{ W}$.

Developed (d) output power is $P_d = P_{\text{absorbed}} - P_{\text{ohm}} - P_{\text{iron}} - P_{\text{rot}} = 4737.2 - 3198.5 - 2449 = -910.3\text{ W}$. Efficiency is negative $\eta_{\text{start}} = -910.3/4737.2 = -19.22\%$. Angular velocity at starting is $\omega_s = (2/p) \cdot 2\pi f = (2/8) \cdot 2\pi \cdot 60 = 94.25\text{ rad/s}$. Starting torque is negative $\tau_d = P_d/94.25\text{ Nm} = -910.3\text{ W}/94.25\text{ rad/s} = -9.66\text{ Nm}$. τ_d is negative, use either higher voltage or different θ .

The circuit with a **nonideal** fuel cell is shown in Fig. E5.9.1c.

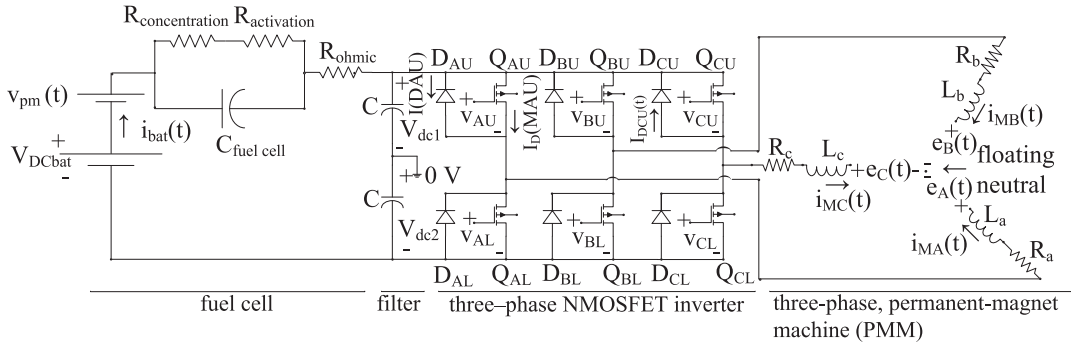


FIG. E5.9.1C Brushless DC machine operation in full-on (six-step) mode with **nonideal** fuel cell.

The **nonideal** parameters of the fuel cell are:

$$V_{DCbat} = 900 \text{ V},$$

$$v_{pm}(t) = \sin(0.15100) \quad \text{that is an AC voltage of 1 Hz with 15V amplitude,}$$

$$R_{activation} = 1.5 \Omega, \quad R_{concentration} = 0.2 \Omega \quad \text{with } R_{concentration+activation} = 1.7 \Omega,$$

$$R_{ohmic} = 0.3 \Omega, \quad \text{and } C_{fuel \text{ cell}} = 10,000 \text{ F.} \quad (E5.9.1.1)$$

Table E5.9.1C lists the PSpice program for a **nonideal** fuel cell at $f_{start2} = 60 \text{ Hz}$.

TABLE E5.9.1C PSpice input program, Application Example 5.9 for starting operation with **nonideal** fuel cell, $f_{start2} = 60 \text{ Hz}$, brushless DC motor drive for $\theta = -30^\circ$, e_a, e_b, e_c with 33.6V amplitude, $f_{start} = 60 \text{ Hz}$, $L_a = L_b = L_c = 100 \text{ mH}$, $R_a = R_b = R_c = 0.05 \text{ ohm}$.

```
*Table E5.9.1C
Va 1a st SIN(0 33.6V 60Hz 0 0 -30)
Vb 3a st SIN(0 33.6V 60Hz 0 0 90)
Vc 5a st SIN(0 33.6V 60Hz 0 0 210)
VDC 70000 8 900
vpm 7000 70000 sin(0 15 1 0)
Rcon+act 7000 700 1.7
Rohmic 700 7 0.3
Cfuelcell 700 7000 10000
Rshunt st 0 1Meg
Vfet1 sp1 2 pulse(0 15 0 1u 1u 5.555ms 16.666ms)
Vfet2 sp2 6 pulse(0 15 5.555ms 1u 1u 5.555ms 16.666ms)
Vfet3 sp3 4 pulse(0 15 11.111ms 1u 1u 5.555ms 16.666ms)
Vfet4 sp4 8 pulse(0 15 8.333ms 1u 1u 5.555ms 16.666ms)
Vfet5 sp5 8 pulse(0 15 13.889ms 1u 1u 5.555ms 16.666ms)
Vfet6 sp6 8 pulse(0 15 2.777ms 1u 1u 5.555ms 16.666ms)
Mau 7 sp1 2 2 SMM
Mbu 7 sp2 6 6 SMM
McU 7 sp3 4 4 SMM
```

Continued

TABLE E5.9.1C PSpice input program, Application Example 5.9 for starting operation with **nonideal** fuel cell, $f_{\text{start2}} = 60 \text{ Hz}$, brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 33.6 V amplitude, $f_{\text{start}} = 60 \text{ Hz}$, $L_a = L_b = L_c = 100 \text{ mH}$, $R_a = R_b = R_c = 0.05 \text{ ohm}$ —Cont'd

```

Ma1 2 sp4 8 8 SMM
Mb1 6 sp5 8 8 SMM
Mc1 4 sp6 8 8 SMM
La 1a 1 100u
Ra 1 2 0.05
Lb 3a 3 100u
Rb 3 4 0.05
Lc 5a 5 100u
Rc 5 6 0.05
C1 7 0 100u
C2 0 8 100u
Dau 2 7 D1N4001
Dbu 6 7 D1N4001
Dal 8 2 D1N4001
Db1 8 6 D1N4001
Dcu 4 7 D1N4001
Dcl 8 4 D1N4001
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+ kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69m kp=20.87u
+ l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+ cgdo=100p rg=1.2 is=10f)
.tran 5u 60ms 20ms 5u uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m
.four 60 I(Ra) v(Va)
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

Fig. E5.9.1D shows the voltages and current for a **nonideal** fuel cell at $f_{\text{start2}} = 60 \text{ Hz}$.

The power absorbed by the brushless DC motor is for $f_{\text{start2}} = 60 \text{ Hz}$ (**Fig. E5.9.1D**) $P_{\text{absorbed}} = 3 \cdot V_{a1} \cdot I_{a1} \cos \theta = 3 \cdot (33.6 / \sqrt{2}) \cdot (206.48 / \sqrt{2}) \cos(125.58^\circ - 30^\circ) = 1012 \text{ W}$ with **nonideal** fuel cell. P_{absorbed} is small, use either higher voltage or different θ .

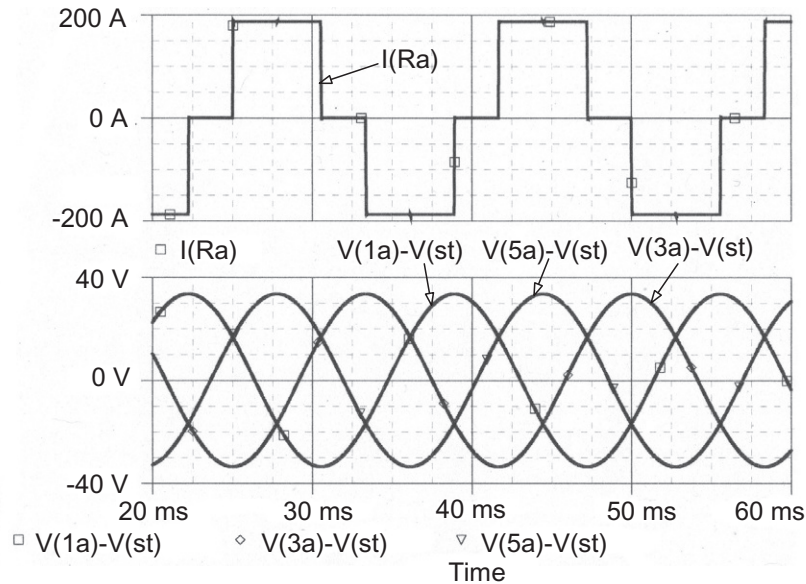


FIG. E5.9.1D Brushless DC motor current $i_a(t) = I(Ra)$ for rated $f_{start2} = 60\text{ Hz}$ operation at $V_{a1} = 33.6/\sqrt{2}\text{ V} = 23.762\text{ V}$ and $\theta = -30^\circ$ with **nonideal** fuel cell.

5.5.2.1 Conclusion

Starting of the gearless drive at low frequencies of either 6 or 60 Hz is not feasible and the current must be controlled by changing the current phase shift θ . A higher voltage than 33.6 V appears to be in order. Another possibility is to use a mechanical gear, which decreases the efficiency of the drive.

Table E5.9.1D lists the PSpice program for a **nonideal** fuel cell at $f_{rat} = 750\text{ Hz}$.

TABLE E5.9.1D PSpice input program, Application Example 5.9 for rated operation with **nonideal** fuel cell at rated operation, $f_{rat} = 750\text{ Hz}$, brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 420 V amplitude, $f_{rat} = 750\text{ Hz}$, $L_a = L_b = L_c = 100\text{ uH}$.

```
*Table E5.9.1D
Va 1a st SIN(0 420V 750Hz 0 0 -30)
Vb 3a st SIN(0 420V 750Hz 0 0 90)
Vc 5a st SIN(0 420V 750Hz 0 0 210)
VDC 70000 8 900
vpm 7000 70000 sin(0 15 1 0)
Rcon+act 7000 700 1.7
Rohmic 700 7 0.3
Cfuelcell 7000 700 10000
Rshunt st 0 10Meg
Vfet1 sp1 2 pulse(0 20 0 1u 1u 444.444us 1.3333ms)
Vfet2 sp2 6 pulse(0 20 444.444us 1u 1u 444.444us 1.3333ms)
Vfet3 sp3 4 pulse(0 20 888.888us 1u 1u 444.444us 1.3333ms)
```

Continued

TABLE E5.9.1D PSpice input program, Application Example 5.9 for rated operation with **nonideal** fuel cell at rated operation, $f_{\text{rat}} = 750\text{Hz}$, brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 420V amplitude, $f_{\text{rat}} = 750\text{Hz}$, $L_a = L_b = L_c = 100\mu\text{H}$ —Cont'd

```
Vfet4 sp4 8 pulse(0 20 666.666us 1u 1u 444.444us 1.3333ms)
Vfet5 sp5 8 pulse(0 20 1.1111ms 1u 1u 444.444us 1.3333ms)
Vfet6 sp6 8 pulse(0 20 222.222us 1u 1u 444.444us 1.3333ms)
Mau 7 sp1 2 2 SMM
Mbu 7 sp2 6 6 SMM
McU 7 sp3 4 4 SMM
Ma1 2 sp4 8 8 SMM
Mb1 6 sp5 8 8 SMM
Mc1 4 sp6 8 8 SMM
La 1a 1 100u
Ra 1 2 0.05
Lb 3a 3 100u
Rb 3 4 0.05
Lc 5a 5 100u
Rc 5 6 0.05
C1 7 0 100u
C2 0 8 100u
Dau 2 7 D1N4001
Dbu 6 7 D1N4001
Da1 8 2 D1N4001
Db1 8 6 D1N4001
Dcu 4 7 D1N4001
Dcl 8 4 D1N4001
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+ kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69m kp=20.87u
+ l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+ cgdo=100p rg=1.2 is=10f)
.tran 5u 4ms 1ms 5u uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m
.four 750 I(Ra) v(Va)
.probe
.end
```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

Fig. E5.9.1E shows the three-phase currents of motor $I(Ra)$, and the three-phase voltages $e_a(t) = V(1a) - V(st)$, $e_b(t) = V(3a) - V(st)$, $e_c(t) = V(5a) - V(st)$ for rated $f_{\text{rat}} = 750\text{Hz}$ operation at $\theta = -30^\circ$ with **nonideal** fuel cell.

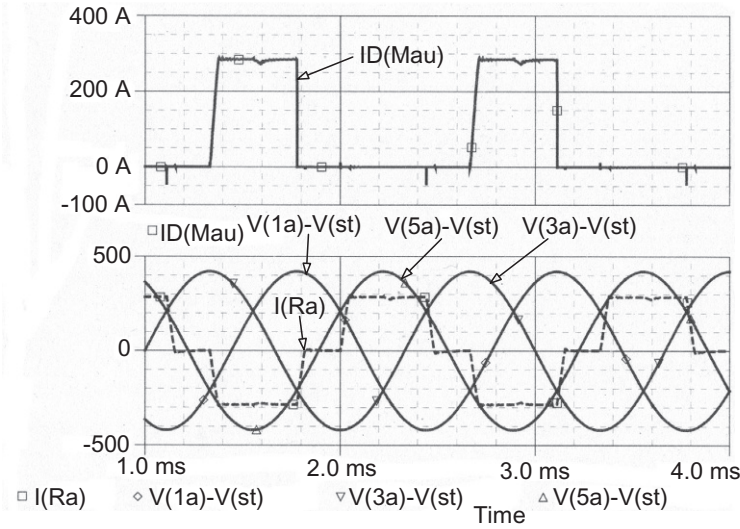


FIG. E5.9.1E Three-phase currents of motor $I(Ra)$, $I(Rb)$, $I(Rc)$ and three-phase voltages $e_a(t) = V(1a) - V(st)$, $e_b(t) = V(3a) - V(st)$, $e_c(t) = V(5a) - V(st)$ for rated $f_{rat} = 750$ Hz operation at $\theta = -30^\circ$ with **nonideal** fuel cell.

The power absorbed by the brushless DC motor is $P_{absorbed} = 3 \cdot V_{a1} \cdot I_{a1} \cos \theta = 3 \cdot 297.03 \cdot (311.76 / \sqrt{2}) \cos(155.34^\circ - 30^\circ) = 113,640$ W with fuel cell.

Ohmic loss is $P_{ohm} \approx 3(I_1)^2 R_a = 3 \cdot (220.48)^2 \cdot 0.05 = 7291.8$ W, $P_{iron} \approx 2449$ W, $P_{rot} \approx 1000$ W.

Developed (d) output power is $P_d = P_{absorbed} - P_{ohm} - P_{iron} - P_{rot} = 113,640 - 7291.8 - 2449 - 1000 = 102,900$ W. Efficiency is $\eta_{rat} = 102,900 / 113,640 = 90.55\%$. Rated angular velocity is $\omega_s = (2/p) \cdot 2\pi f = (2/8) \cdot 2\pi \cdot 750 = 1178.1$ rad/s. Rated torque is $\tau_d = P_d / 1178.1$ Nm = $102,900$ W / 1178.1 rad/s = 87.344 Nm.

5.5.3 Application Example 5.10: Brushless DC motor-inverter performance for high speed corresponding to $f_2 = 1500$ Hz employing FW and CFW supplied either by lithium-ion battery or fuel cell

Operation at high speed with $f_2 = 1500$ Hz causing FW as applied with **nonideal** lithium-ion battery:

Table E5.10.1A shows the PSpice program at $f_2 = 1500$ Hz operation with FW.

TABLE E5.10.1A PSpice input program, Application Example 5.10 for FW with **nonideal** lithium-ion battery, brushless DC motor drive for $\theta = -30^\circ$, e_a , e_b , e_c with 420 V amplitude, $f_2 = 1500$ Hz, $L_a = L_b = L_c = 100$ μ H, FW operation.

```
*Table E5.10.1A
Va 1a st SIN(0 420V 1500Hz 0 0 -30)
Vb 3a st SIN(0 420V 1500Hz 0 0 90)
Vc 5a st SIN(0 420V 1500Hz 0 0 210)
VDC 70000 8 900
Rseries 70000 7000 0.15
R1 7000 700 1
```

Continued

TABLE E5.10.1A PSpice input program, Application Example 5.10 for FW with **nonideal** lithium-ion battery, brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 420V amplitude, $f_2 = 1500\text{Hz}$, $L_a = L_b = L_c = 100\mu\text{H}$, FW operation—Cont'd

```

R2 700 7 0.02
C1lithium 7000 700 200
C2lithium 700 7 300
Rshunt st 0 10Meg
Vfet1 sp1 2 pulse(0 20 0 1u 1u 222.222us 0.66666ms)
Vfet2 sp2 6 pulse(0 20 222.222us 1u 1u 222.222us 0.66666ms)
Vfet3 sp3 4 pulse(0 20 444.444us 1u 1u 222.222us 0.66666ms)
Vfet4 sp4 8 pulse(0 20 333.333us 1u 1u 222.222us 0.66666ms)
Vfet5 sp5 8 pulse(0 20 555.555us 1u 1u 222.222us 0.66666ms)
Vfet6 sp6 8 pulse(0 20 111.111us 1u 1u 222.222us 0.66666ms)
Mau 7 sp1 2 2 SMM
Mbu 7 sp2 6 6 SMM
McU 7 sp3 4 4 SMM
Ma1 2 sp4 8 8 SMM
Mb1 6 sp5 8 8 SMM
Mc1 4 sp6 8 8 SMM
La 1a 1 100u
Ra 1 2 0.05
Lb 3a 3 100u
Rb 3 4 0.05
Lc 5a 5 100u
Rc 5 6 0.05
C1 7 0 100u
C2 0 8 100u
Da1 2 7 D1N4001
Db1 6 7 D1N4001
Da1 8 2 D1N4001
Db1 8 6 D1N4001
Dcu 4 7 D1N4001
Dc1 8 4 D1N4001
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+ kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69m kp=20.87u
+ l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+ cgdo=100p rg=1.2 is=10f)
.tran 5u 4m 1ms 5u uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m
.four 1500 I(Ra) v(Va)
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

Fig. E5.10.1A shows the three-phase currents of motor $I(Ra)$, and the three-phase voltages $e_a(t) = V(1a) - V(st)$, $e_b(t) = V(3a) - V(st)$, $e_c(t) = V(5a) - V(st)$ for rated $f_{rat} = 750\text{Hz}$ operation at $\theta = -30^\circ$ with **nonideal** lithium-ion battery.

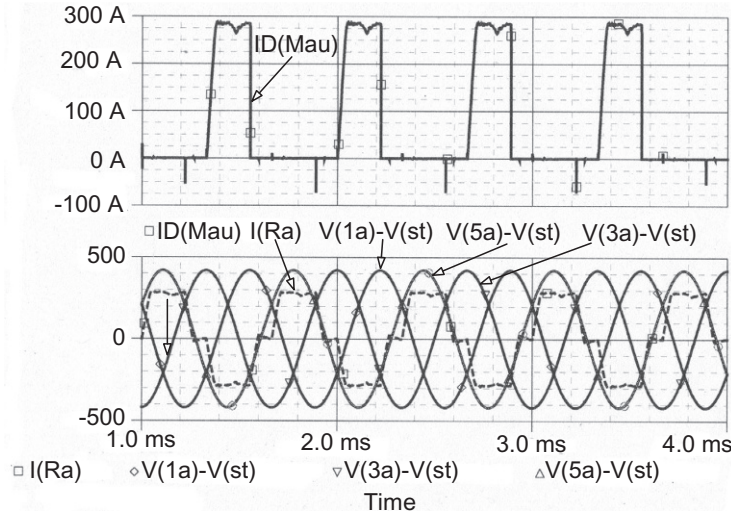


FIG. E5.10.1A Phase a MOSFET current $ID(Mau)$, phase currents of motor $I(Ra)$, and three-phase voltages $e_a(t) = V(1a) - V(st)$, $e_b(t) = V(3a) - V(st)$, $e_c(t) = V(5a) - V(st)$ for operation with FW at $f_2 = 1500\text{ Hz}$ operation and $\theta = -30^\circ$ with **nonideal** lithium-ion battery.

The power absorbed by the brushless DC motor is $P_{\text{absorbed}} = 3 \cdot V_{a1} \cdot I_{a1} \cos \theta = 3 \cdot 297.03 \cdot (305.63 / \sqrt{2}) \cos(160.56^\circ - 30^\circ) = 125,240\text{ W}$ with **nonideal** lithium-ion battery.

Ohmic loss is $P_{\text{ohm}} \approx 3(I_1)^2 R_a = 3 \cdot (216.15)^2 \cdot 0.05 = 7007.81\text{ W}$, $P_{\text{iron}} \approx 4898\text{ W}$, $P_{\text{rot}} \approx 2000\text{ W}$.

Developed (d) output power is $P_d = P_{\text{absorbed}} - P_{\text{ohm}} - P_{\text{iron}} - P_{\text{rot}} = 125,240 - 7007.81 - 4898 - 2000 = 111,330\text{ W}$. Efficiency is $\eta_{\text{flux weakenig}} = 111,330 / 125,240 = 88.89\%$. Angular velocity is $\omega_s = (2/p) \cdot 2\pi f = (2/8) \cdot 2\pi \cdot 1500 = 2356.2\text{ rad/s}$. Torque at FW is $\tau_d = P_d / 2356.2\text{ Nm} = 111,330\text{ W} / 2356.2\text{ rad/s} = 47.25\text{ Nm}$.

Operation at high speed with $f_2 = 1500\text{ Hz}$ with **nonideal** fuel cell causing FW.

Table E5.10.1B shows the PSpice program at $f_2 = 1500\text{ Hz}$ operation with **nonideal** fuel cell at FW.

TABLE E5.10.1B PSpice input program, Application Example 5.10 for FW with **nonideal** fuel cell, brushless DC motor drive for $\theta = -30^\circ$, e_a , e_b , e_c with 420 V amplitude, $f_2 = 1500\text{ Hz}$, $L_a = L_b = L_c = 100\text{ uH}$, FW operation.

```
*Table E5.10.1B
Va 1a st SIN(0 420V 1500Hz 0 0 -30)
Vb 3a st SIN(0 420V 1500Hz 0 0 90)
Vc 5a st SIN(0 420V 1500Hz 0 0 210)
VDC 70000 8 900
vpm 7000 70000 sin(0 15 1 0)
Rcon+act 7000 700 1.7
Rohmic 700 7 0.3
Cfuelcell 700 7000 10000
Rshunt st 0 10Meg
Vfet1 sp1 2 pulse(0 25 0 1u 1u 222.222us 0.66666ms)
```

Continued

TABLE E5.10.1B PSpice input program, Application Example 5.10 for FW with **nonideal** fuel cell, brushless DC motor drive for $\theta = -30^\circ$, ea, eb, ec with 420V amplitude, $f_2 = 1500\text{Hz}$, $L_a = L_b = L_c = 100\mu\text{H}$, FW operation—Cont'd

```

Vfet2 sp2 6 pulse(0 25 222.222us 1u 1u 222.222us 0.66666ms)
Vfet3 sp3 4 pulse(0 25 444.444us 1u 1u 222.222us 0.66666ms)
Vfet4 sp4 8 pulse(0 25 333.333us 1u 1u 222.222us 0.66666ms)
Vfet5 sp5 8 pulse(0 25 555.555us 1u 1u 222.222us 0.66666ms)
Vfet6 sp6 8 pulse(0 25 111.111us 1u 1u 222.222us 0.66666ms)
Mau 7 sp1 2 2 SMM
Mbu 7 sp2 6 6 SMM
McU 7 sp3 4 4 SMM
Ma1 2 sp4 8 8 SMM
Mb1 6 sp5 8 8 SMM
Mc1 4 sp6 8 8 SMM
La 1a 1 100u
Ra 1 2 0.05
Lb 3a 3 100u
Rb 3 4 0.05
Lc 5a 5 100u
Rc 5 6 0.05
C1 7 0 100u
C2 0 8 100u
Dau 2 7 D1N4001
Dbu 6 7 D1N4001
Da1 8 2 D1N4001
Db1 8 6 D1N4001
Dcu 4 7 D1N4001
Dc1 8 4 D1N4001
.model D1N4001 D(IS=1E-12)
.model SMM nmos(level=3 gamma=0 delta=0 eta=0 theta=0
+ kappa=0 vmax=0 xj=0 tox=100n uo=600 phi=0.6 rs=42.69m kp=20.87u
+ l=2u w=2.9 vto=3.487 rd=0.19 cbd=200n pb=0.8 mj=0.5 cgso=3.5n
+ cgdo=100p rg=1.2 is=10f)
.tran 5u 4ms 1ms 5u uic
.options abstol=1m chgtol=1m reltol=10m vntol=10m
.four 1500 I(Ra) v(Va)
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

Fig. E5.10.1B shows the MOSFET current $I(\text{Mau})$, phase a motor current $I(\text{Ra})$, and the three-phase voltages $e_a(t) = V(1a) - V(\text{st})$, $e_b(t) = V(3a) - V(\text{st})$, $e_c(t) = V(5a) - V(\text{st})$ for FW operation at $f_2 = 1500\text{Hz}$ operation at $\theta = -30^\circ$ with **nonideal** fuel cell.

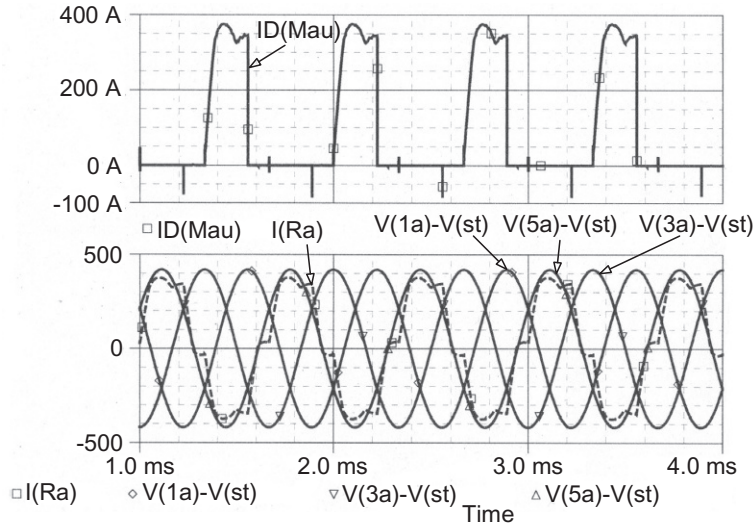


FIG. E5.10.1B MOSFET current $I(\text{Mau})$, a-phase motor current $I(\text{Ra})$, and the three-phase voltages $e_a(t) = V(1a) - V(\text{st})$, $e_b(t) = V(3a) - V(\text{st})$, $e_c(t) = V(5a) - V(\text{st})$ for FW operation at $f_2 = 1500 \text{ Hz}$ operation and $\theta = -30^\circ$ with **nonideal** fuel cell.

The power absorbed by the brushless DC motor is $P_{\text{absorbed}} = 3 \cdot V_{a1} \cdot I_{a1} \cos \theta = 3 \cdot 297.03 \cdot (386.97 / \sqrt{2}) \cos(160.74^\circ - 30^\circ) = 159,150 \text{ W}$ with **nonideal** fuel cell.

Ohmic loss is $P_{\text{ohm}} \approx 3(I_1)^2 R_a = 3 \cdot (273.67)^2 \cdot 0.05 = 11,234 \text{ W}$, $P_{\text{iron}} \approx 4898 \text{ W}$, $P_{\text{rot}} \approx 2000 \text{ W}$.

Developed (d) output power is $P_d = P_{\text{absorbed}} - P_{\text{ohm}} - P_{\text{iron}} - P_{\text{rot}} = 159,150 - 11,234 - 4898 - 2000 = 141,020 \text{ W}$. Efficiency is $\eta_{\text{rat}} = 141,020 / 159,150 = 88.607\%$. Angular velocity is $\omega_s = (2/p) \cdot 2\pi f = (2/8) \cdot 2\pi \cdot 1500 = 2356.2 \text{ rad/s}$. Rated torque is $\tau_d = P_d / 2356.2 / \text{Nm} = 141,020 \text{ W} / 2356.2 \text{ rad/s} = 59.85 \text{ Nm}$.

5.6 Control of speed and torque for three-phase synchronous motor/machine fed/ supplied by either lithium-ion battery or fuel cell via inverter for either motor or generator operation

A nonsalient pole synchronous machine has an apparent power of $S = 100 \text{ kVA}$, $L-L$ voltage $V_{L-L} = 450 \text{ V}$, rated frequency $f_{\text{rat}} = 60 \text{ Hz}$, rated displacement power factor $\cos \theta = 0.8$ lagging (under-excited operation, consumer reference system), Y-connected, synchronous reactance $X_s = X_d = X_q = 2.0 \Omega$, and an armature (stator) resistance $R_a = 0.2 \Omega$ whereby the friction, windage, and iron-core losses can be neglected.

- Sketch the phasor diagram of this motor.
- Calculate the values $\tilde{V}_a$, $\tilde{I}_a$, real output power P , and reactive absorbed power Q .
- Calculate the induced voltage $\tilde{E}_a$.
- Determine the base impedance Z_{base} and the per unit values of $R_{a\text{-pu}}$ and $X_{s\text{-pu}}$.

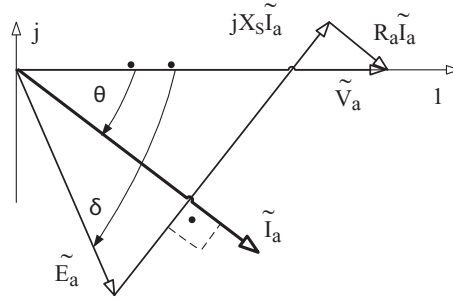


FIG. 5.6 Phasor diagram for nonsalient pole synchronous motor at lagging (under-excited operation, consumer reference system) power factor.

This machine has flexible excitation including a permanent-magnet per pole, see Fig. E12.6.1 of [1].

Solution

(a) Fig. 5.6 shows the not-to-scale phasor diagram.

(b) $V_a = |\tilde{V}_a| = |\tilde{V}_{L-N}| = \frac{V_{L-L}}{\sqrt{3}} = \frac{450 \text{ V}}{\sqrt{3}} = 259.82 \text{ V}$, $S = 3 |\tilde{V}_a| |\tilde{I}_a| = 100,000 \text{ VA}$, or
 $|\tilde{I}_a| = \frac{100000 \text{ VA}}{3 \cdot 259.82} = 128.29 \text{ A}$ or $\tilde{I}_a = 128.29 \angle -36.87^\circ \text{ A}$, $P = S \cdot \cos \theta = 100000 \cdot 0.8 = 80 \text{ kW}$,
 $Q = S \sin \theta = S \cdot \sin(-36.87^\circ) = -60 \text{ kVar}$.

(c) Accordingly in Chapter 4, Fig. 4.14A of Section 4.2.2.1 Kirchhoff's voltage relation is

$$\tilde{E}_a = \tilde{V}_a - (R_a + jX_s)\tilde{I}_a = 259.82 \angle 0^\circ - (0.2 + j2.0) \cdot 128.29 \angle -36.87^\circ = (85.35 - j189.87) \text{ V} = 208.17 \angle -65.568^\circ \text{ V}.$$

(d) $Z_{\text{base}} = \frac{|\tilde{V}_a|}{|\tilde{I}_a|} = \frac{259.82}{128.29} = 2.0253 \Omega$, $R_{a\text{-pu}} = R_a/Z_{\text{base}} = 0.2/2.0253 = 0.099 \text{ pu}$,
 $X_{s\text{-pu}} = X_s/Z_{\text{base}} = 2/2.0253 = 0.988 \text{ pu}$.

5.6.1 Application Example 5.11: Synchronous motor-inverter performance for rated operation supplied by lithium-ion battery

For the above-detailed, nonsalient pole synchronous machine determine the performance at rated frequency $f_{\text{rat}} = 60 \text{ Hz}$ operation, at $f_1 = 360 \text{ Hz}$ FW operation, and at $f_1 = 360 \text{ Hz}$ with CFW where the permanent-magnet flux can be increased by the rotor winding flux, see Fig. E12.6.1 of [1]. Determine the required DC voltage V_{DCbat} of the **nonideal** lithium-ion battery.

Solution

Rated operation at $f_{\text{rat}} = 60 \text{ Hz}$: Fig. E5.11.1 shows the **nonideal** lithium-ion battery supplying power to a current-controlled PWM voltage-source inverter feeding a three-phase nonsalient pole synchronous motor. With the modulation index $m = 0.816$ one obtains a battery voltage of $V_{\text{DCbat}} = (2\sqrt{2} \cdot 259.82)/0.816 = 900 \text{ V}$ and $L_s = L_{M1} = X_s/(2\pi f_{\text{rat}}) = 2/377 = 5.305 \text{ mH}$. The instantaneous induced voltages are $e_a(t) = 294.35 \text{ V} \sin(\omega t - 65.568^\circ)$, $e_b(t) =$

$294.35 \text{ Vsin}(\omega t - 185.568^\circ)$, $e_c(t) = 294.35 \text{ Vsin}(\omega t - 305.568^\circ)$, and the instantaneous input currents are $i_a(t) = 181.40 \text{ Asin}(\omega t - 36.87^\circ)$, $i_b(t) = 181.40 \text{ Asin}(\omega t - 156.87^\circ)$, $i_c(t) = 181.40 \text{ Asin}(\omega t - 276.87^\circ)$. See Fig. E5.11.2B. Neglecting losses, the output power is

$$P = \frac{(3 \cdot E_a \cdot V_a \cdot \sin \delta)}{X_s}. \quad (\text{E5.11.1})$$

For $\delta = -65.568^\circ < 90^\circ$ means the motor is operating in a stable manner. $P = 3 \cdot 208.17 \cdot 259.82 \cdot (-0.91045)/2 = -73.865 \text{ kW}$, $S = 3V_a I_a = 3 \cdot 259.82 \cdot 128.29 = 100 \text{ kVA}$, $Q = S \sin \theta = S \sin(-36.87^\circ) = -60 \text{ kVAr}$.

Table E5.11.1 lists the PSpice program for the **nonideal** lithium-ion battery supplying power to the PWM inverter feeding the nonsalient pole synchronous motor. The gating signal voltage (vtrial) has the frequency of 5.76 kHz at lagging displacement (power) factor. For the power factor, consumer notation is used, which means the machine is under-excited: the current lags the input terminal voltage by -36.87° .

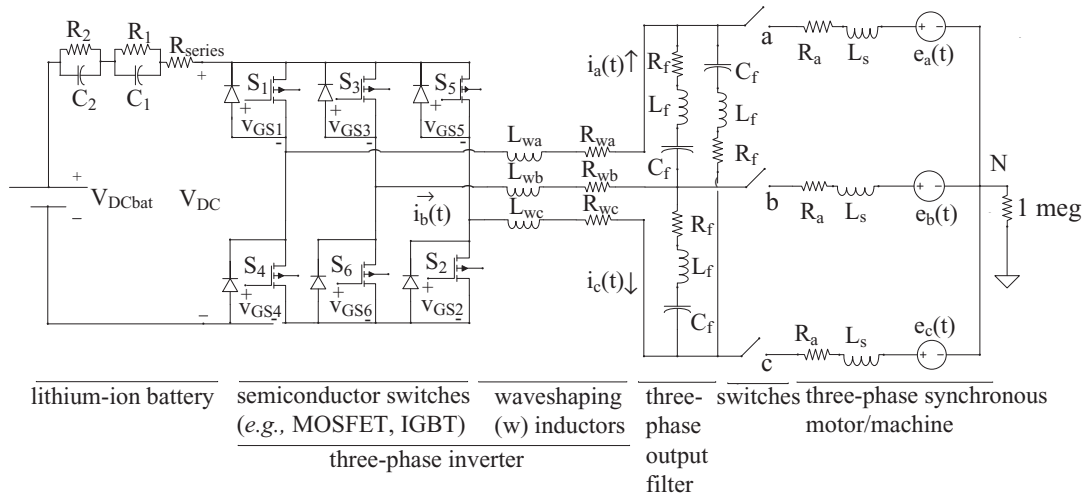


FIG. E5.11.1 Current-controlled PWM voltage-source inverter [52] supplied by **nonideal** lithium-ion battery feeding a three-phase nonsalient pole synchronous motor/machine.

TABLE E5.11.1 PSpice input program, Application Example 5.11 for the **nonideal** lithium-ion battery supplying power to the PWM inverter feeding the nonsalient pole synchronous motor.

```
*Table E5.11.1
* data represent comments and operation at 60 Hz,
*(**) represents operation at 360 Hz with FW
*(***) represents operation at 360 Hz with CFW
*ideal lithium-ion battery at 60 Hz
*vDCbat 2 0 900
*non-ideal lithium battery at 60 Hz
*vDCbat 2000 0 1200
*non-ideal lithium battery at 360 Hz, FW
*vDCbat 2000 0 1700
```

Continued

TABLE E5.11.1 PSpice input program, Application Example 5.11 for the **nonideal** lithium-ion battery supplying power to the PWM inverter feeding the nonsalient pole synchronous motor—Cont'd

```

*non-ideal lithium battery at 360 Hz, CFW
*vDCbat 2000 0 1700
Rseries 7000 2 0.15
R1 700 7000 1
R2 2000 700 0.02
C1lithium 700 7000 200
C2lithium 2000 700 300
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
l_w1 10 15 0.1m
l_w2 20 25 0.1m
l_w3 30 35 0.1m
R_w1 15 16 10m
R_w2 25 26 10m
R_w3 35 36 10m
*current references in terms of voltages
*vref1 12 0 sin(0 181.40 60 0 0 -36.87)
*vref2 22 0 sin(0 181.40 60 0 0 -156.87)
*vref3 32 0 sin(0 181.40 60 0 0 -276.87)
vref1 12 0 sin(0 30.234 360 0 0 -36.87)
vref2 22 0 sin(0 30.234 360 0 0 -156.87)
vref3 32 0 sin(0 30.234 360 0 0 -276.87)
***vref1 12 0 sin(0 118.78 360 0 0 -36.87)
***vref2 22 0 sin(0 118.78 360 0 0 -156.87)
***vref3 32 0 sin(0 118.78 360 0 0 -276.87)
*voltages represent load currents, measured with shunts
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k

```

Continued

TABLE E5.11.1 PSpice input program, Application Example 5.11 for the **nonideal** lithium-ion battery supplying power to the PWM inverter feeding the nonsalient pole synchronous motor—Cont'd

```

rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
*vtrial 5 0 pulse(-10 10 0 86.5u 86.5u 0.6u 173.6u)
vtrial 5 0 pulse(-10 10 0 17.0u 17.0u 0.6u 34.6u)
***vtrial 5 0 pulse(-10 10 0 17.0u 17.0u 0.6u 34.6u)
*gating signals for upper switches
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*gating signals for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*Filter is deleted because PSPICE is limited to 64 nodes
*parameters of power system with L-N induced voltages ea, eb, ec
RM1 16 18 0.2
***RM1 16 18 0.1
*LM1 18 19 5.305m
LM1 18 19 5.305m
***LM1 18 19 1.326m
*Vout1 19 123 sin(0 294.35 60 0 0 -65.568)
Vout1 19 123 sin(0 321.15 360 0 0 -63.187)
***Vout1 19 123 sin(0 322.25 360 0 0 -59.60)
RM2 26 28 0.2
***RM2 26 28 0.1
*LM2 28 29 5.305m
LM2 28 29 5.305m
***LM2 28 29 1.326m
*Vout2 29 123 sin(0 294.35 60 0 0 -185.568)
Vout2 29 123 sin(0 321.15 360 0 0 -183.187)
***Vout2 29 123 sin(0 322.25 360 0 0 -179.60)
RM3 36 38 0.2
***RM3 36 38 0.1
*LM3 38 39 5.305m
LM3 38 39 5.305m
***LM3 38 39 1.326m
*Vout3 39 123 sin(0 294.35 60 0 0 -305.568)
Vout3 39 123 sin(0 321.15 360 0 0 -303.187)
***Vout3 39 123 sin(0 322.25 360 0 0 -299.6)
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10

```

Continued

TABLE E5.11.1 PSpice input program, Application Example 5.11 for the **nonideal** lithium-ion battery supplying power to the PWM inverter feeding the nonsalient pole synchronous motor—Cont'd

```

c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+ w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2
+is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.01m chgtol=0.01m
+reltol=50m vntol=1m itl5=0 itl4=200
*transient analysis
.tran 5u 350m 340m 5u
*plotting of traces
.probe
*Fourier analysis
.four 360 12 I(RM1)
.end

```

Note: All comment lines must be preceded with an asterisk (*) while continued calculation statements must be preceded with a plus sign (+).

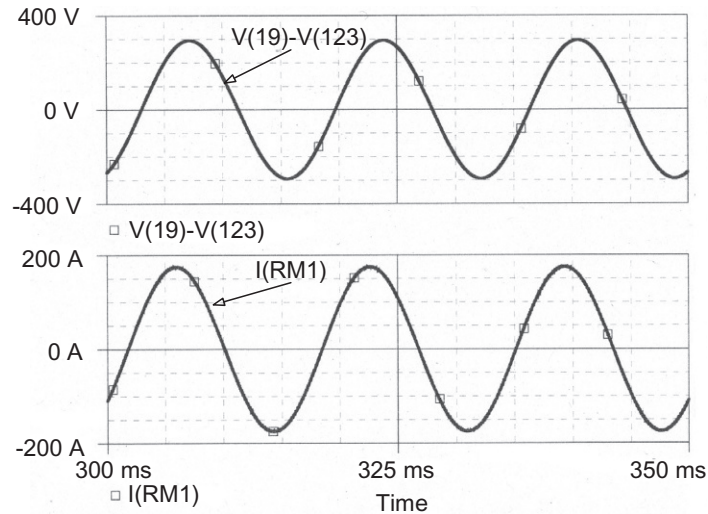


FIG. E5.11.2A Input induced phase voltage $e_a(t) = V(19) - V(123)$ and input phase current $i_a(t) = I(RM1) = I_a(R_{TH})$ of three-phase, nonsalient pole synchronous motor at rated operation ($f_{rat} = 60\text{ Hz}$) with **ideal** lithium-ion battery. The current amplitude is smaller than that of the analysis because the inverter impedance is neglected in the analysis and the inverter operation is based on P-control causing a steady-state error. $V_{DCbat} = 900\text{ V}$ for obtaining sinusoidal AC current response. The real power absorbed is $P_{absorbed} = 3 \cdot (300/\sqrt{2}) \cdot (175/\sqrt{2}) \cos(23^\circ) = 72.49\text{ kW}$.

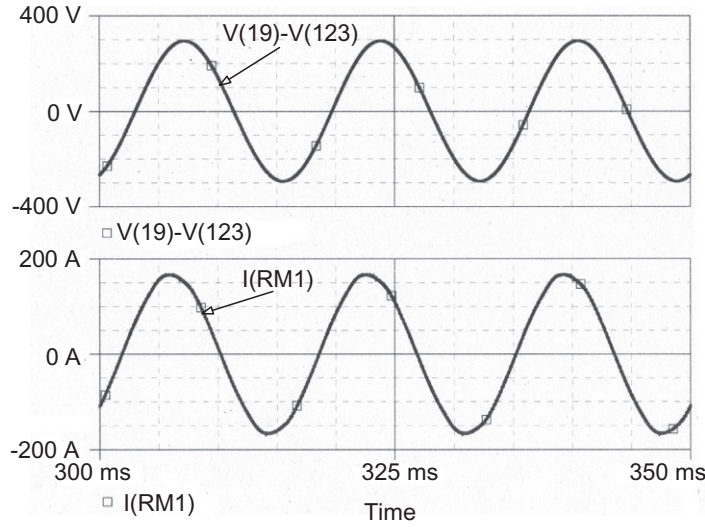


FIG. E5.11.2B Input induced phase voltage $e_a(t) = V(19) - V(123)$ and input phase current $i_a(t) = I(RM1) = I_a(R_a)$ of three-phase, nonsalient pole synchronous motor at rated operation ($f_{\text{rat}} = 60 \text{ Hz}$) with **nonideal** lithium-ion battery. The current amplitude is smaller than that of the analysis because the inverter impedance is neglected in the analysis and the inverter operation is based on P-control causing a steady-state error. $V_{\text{DCbat}} = 1200 \text{ V}$ to obtain sinusoidal AC current response. The real power absorbed is $P_{\text{absorbed}} = 3 \cdot (300/\sqrt{2}) \cdot (165/\sqrt{2}) \cos(23^\circ) = 68.35 \text{ kW}$.

Real power P is delivered to synchronous motor at absorbing reactive power Q at rated frequency $f_{\text{rat}} = 60 \text{ Hz}$ (*comments), with FW (**comments and changes) and with CFW (**comments and changes). In Figs. E5.11.2A and E5.11.2B the synchronous motor is supplied by current-controlled PWM voltage-source inverter at lagging displacement (power) factor. Using consumer notation of current, the two graphs of Figs. E5.11.2A and E5.11.2B correspond to under-excited operation, delivering real power P to three-phase synchronous motor and absorbing reactive power Q at rated frequency $f_{\text{rat}} = 60 \text{ Hz}$.

Operation at increased frequency $f_1 = 360 \text{ Hz}$ with FW: Determine the required DC voltage of the **nonideal** lithium-battery, V_{DCbat} , as well as the three-phase motor voltages to obtain sinusoidal AC currents.

Solution

For operation in FW motoring mode, a current $\tilde{I}_a|_{360 \text{ Hz}}$ is chosen so that the torque angle is about $\delta = -65.568^\circ$ as shown above and indicated below.

$$V_a = |\tilde{V}_a| = |\tilde{V}_{L-N}| = \frac{V_{L-L}}{\sqrt{3}} = \frac{450 \text{ V}}{\sqrt{3}} = 259.82 \text{ V}, X_s|_{360 \text{ Hz}} = 6 \cdot X_s|_{60 \text{ Hz}} = 6 \cdot 2 = 12 \Omega$$

$$\text{and } L_s|_{360 \text{ Hz}} = \frac{X_s|_{360 \text{ Hz}}}{2\pi \cdot 360} = \frac{12}{2\pi \cdot 360} = 5.305 \text{ mH at } 360 \text{ Hz, neglecting skin effect } R_a = 0.2 \Omega.$$

For reduced armature current

$$\tilde{I}_a|_{360 \text{ Hz}} = \frac{128.29}{6} \angle -36.870^\circ \text{ A} = 21.382 \angle -36.870^\circ \text{ A},$$

one obtains the induced voltage

$$\begin{aligned}
\tilde{E}_a|_{360 \text{ Hz}} &= \tilde{V}_a - (R_a + jX_s|_{360 \text{ Hz}})\tilde{I}_a|_{360 \text{ Hz}} \\
&= 259.82\angle 0^\circ - (0.2 + j12)21.382\angle -36.87^\circ \\
&= 259.82 - (0.2 + j12)21.382\{\cos(-36.87^\circ) - j\sin(36.87^\circ)\} \\
&= 259.82 - (0.2 + j12)21.382(0.8 - j0.6) = 259.82 - 21.382(0.16 - j0.12 + j9.6 + 7.2) \\
&= 259.82 - 21.382(7.36 + j9.48) = 259.82 - 157.37 - j202.70 \\
&= 102.45 - j202.70 = 227.12\angle -63.187^\circ \text{ V.}
\end{aligned}$$

With $V_1 = V_a = 259.82 \text{ V}$ the required **nonideal** lithium-ion battery voltage is $V_{\text{DCbat}} = 2\sqrt{2}V_1/m = 2\sqrt{2} \cdot 259.82/0.816 = 900 \text{ V}$. This value appears not to be large enough due to the large voltage drop across the synchronous inductance $L_s|_{360 \text{ Hz}} = 5.305 \text{ mH}$ at 360 Hz and $V_{\text{DCbat}} = 1700 \text{ V}$ is chosen. The time-instantaneous induced voltages are

$$\begin{aligned}
e_a(t)|_{360 \text{ Hz}} &= 312.15 \text{ V} \sin(\omega t - 63.187^\circ), \quad e_b(t)|_{360 \text{ Hz}} = 312.15 \text{ V} \sin(\omega t - 183.187^\circ), \\
e_c(t)|_{360 \text{ Hz}} &= 312.15 \text{ V} \sin(\omega t - 303.187^\circ),
\end{aligned}$$

and the time-instantaneous input currents are

$$\begin{aligned}
i_a(t)|_{360 \text{ Hz}} &= 30.234 \text{ A} \sin(\omega t - 36.87^\circ), \\
i_b(t)|_{360 \text{ Hz}} &= 30.234 \text{ A} \sin(\omega t - 156.87^\circ), \\
i_c(t)|_{360 \text{ Hz}} &= 30.234 \text{ A} \sin(\omega t - 276.87^\circ).
\end{aligned}$$

The input real power is

$$P|_{360 \text{ Hz}} = 3V_a I_a \cos \theta = 3 \cdot 259.82 \cdot 21.382 \cdot 0.8 = 13.333 \text{ kW.} \quad (\text{E5.11.2})$$

and the reactive input power is

$$Q|_{360 \text{ Hz}} = 3V_a I_a \sin \theta = 3 \cdot 259.82 \cdot 21.382 \cdot (-0.6) = -10 \text{ kVar.} \quad (\text{E5.11.3})$$

Fig. E5.11.3 shows the voltage and current for **nonideal** lithium-ion battery at FW.

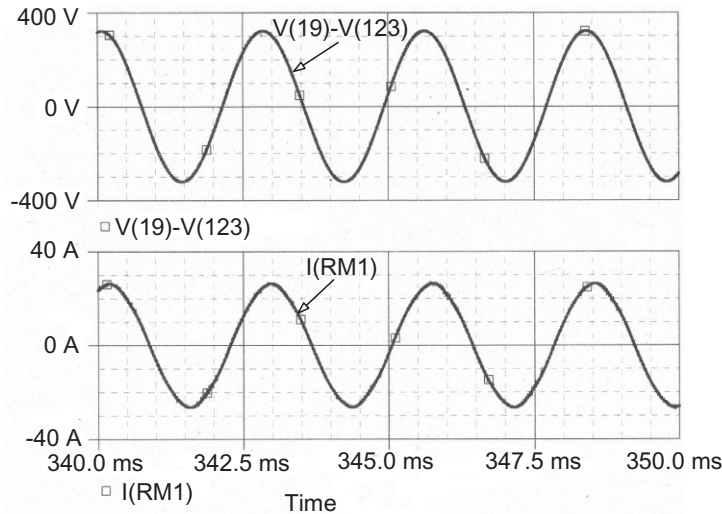


FIG. E5.11.3 Input induced phase voltage $e_a(t) = V(19) - V(123)$ and input phase current $i_a(t) = I(RM1) = I_a(R_a)$ of three-phase, nonsalient pole synchronous motor at FW operation ($f_1 = 360 \text{ Hz}$) with **nonideal** lithium-ion battery. The current amplitude is smaller than that of the analysis because the inverter impedance is neglected in the analysis and the inverter operation is based on P-control causing a steady-state error. $V_{\text{DCbat}} = 1700 \text{ V}$ to obtain sinusoidal AC current response. The real power absorbed is $P_{\text{absorbed}} = 3 \cdot (320/\sqrt{2}) \cdot (26.5/\sqrt{2}) \cos(13.9^\circ) = 12.35 \text{ kW}$.

Operation at increased frequency $f_1 = 360 \text{ Hz}$ with CFW: Determine the required DC voltage of the **nonideal** lithium-ion battery, V_{DCbat} , as well as the three-phase motor voltages to obtain sinusoidal AC currents.

Solution

For operation in CFW motoring mode, a current $\tilde{I}_a|_{360 \text{ Hz}} = 84 \text{ A} \angle -36.87^\circ$ is chosen so that the torque angle is about $\delta = -65.568^\circ$ as shown above and indicated below.

$R_a|_{\text{CFW}} = 0.2 \text{ } \Omega / 2 = 0.1 \text{ } \Omega$, $X_s|_{\text{CFW}} = \frac{X_s|_{360 \text{ Hz}}}{4} = \frac{12}{4} \text{ } \Omega = 3 \text{ } \Omega$, resulting in a synchronous inductance of $L_s|_{\text{CFW}} = L_{M1}|_{\text{CFW}} = \frac{3}{2\pi f_1} = \frac{3}{2\pi \cdot 360} = 1.326 \text{ mH}$, and the induced voltage

$$\begin{aligned} \tilde{E}_a|_{\text{CFW}} &= 259.82 \angle 0^\circ \text{ V} - (0.1 + j3)84 \text{ V} \angle -36.87^\circ = 259.82 \angle 0^\circ - 84(0.1 + j3)(0.8 - j0.6) \\ &= 259.82 \angle 0^\circ - 84(0.08 - j0.06 + j2.4 + 1.8) = 259.82 \angle 0^\circ - 84(1.72 + j2.34) \\ &= 259.82 \angle 0^\circ - 144.48 - j196.56 = 115.34 \text{ V} - j196.56 \text{ V} = 227.90 \text{ V} \angle -59.596^\circ \end{aligned}$$

The time-instantaneous induced voltages are

$$\begin{aligned} e_a(t)|_{\text{CFW}} &= 322.25 \text{ V} \sin(\omega t - 59.60^\circ), \quad e_b(t)|_{\text{CFW}} = 322.25 \text{ V} \sin(\omega t - 179.60^\circ), \\ e_c(t)|_{\text{CFW}} &= 322.25 \text{ V} \sin(\omega t - 299.60^\circ), \end{aligned}$$

and the time-instantaneous input currents are

$$\begin{aligned} i_a(t)|_{\text{CFW}} &= 118.78 \text{ V} \sin(\omega t - 36.87^\circ), \\ i_b(t)|_{\text{CFW}} &= 118.78 \text{ V} \sin(\omega t - 156.87^\circ), \\ i_c(t)|_{\text{CFW}} &= 118.78 \text{ V} \sin(\omega t - 276.87^\circ). \end{aligned}$$

The real input power is $P = 3 \cdot V_a \cdot I_a \cos \theta = 3 \cdot 259.82 \cdot 84 \cdot 0.8 = 52.38 \text{ kW}$, and the reactive input power is $Q = 3 \cdot V_a \cdot I_a \sin \theta = 3 \cdot 259.82 \cdot 84 \cdot (-0.6) = -39.285 \text{ kVAR}$.

As expected, CFW results in increased input power compared with FW. With $V_1 = V_a = 259.82 \text{ V}$, the required battery voltage is $V_{\text{DCbat}} = 2\sqrt{2} V_1 / m = 2\sqrt{2} \cdot 259.82 / 0.8 \text{ V} = 918.46 \text{ V}$. To obtain a sinusoidal current the value $V_{\text{DCbat}} = 1700 \text{ V}$ is chosen.

Fig. E5.11.4 shows the voltage and current for **nonideal** lithium-ion battery at CFW.

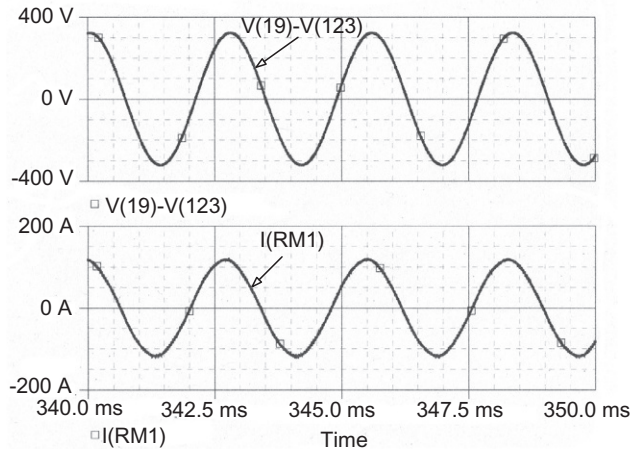


FIG. E5.11.4 Input induced phase voltage $e_a(t) = V(19) - V(123)$ and input phase current $i_a(t) = I(RM1) = I_a(R_a)$ of three-phase, nonsalient pole synchronous motor at CFW operation ($f_1 = 360 \text{ Hz}$) with **nonideal** lithium-ion battery. The current amplitude is smaller than that of the analysis because the inverter impedance is neglected in the analysis and the inverter operation is based on P-control causing a steady-state error. $V_{\text{DCbat}} = 1700 \text{ V}$ to obtain sinusoidal AC current response. The real power absorbed is $P_{\text{absorbed}} = 3 \cdot (320 / \sqrt{2}) \cdot (120 / \sqrt{2}) \cos(13.846^\circ) = 55.926 \text{ kW}$.

Conclusion

These absorbed real power values show that CFW at $f_1 = 360$ Hz significantly increases (by about a factor of 4) the power output at high speed compared with FW at $f_1 = 360$ Hz.

In Table E5.11.1 the statements characterizing the **nonideal** lithium-ion battery

```
Rseries 7000 2 0.15
R1 700 7000 1
R2 2000 700 0.02
C1lithium 700 7000 200
C2lithium 2000 700 300
```

are replaced by the statements for the **nonideal** proton-exchange membrane (PEM) fuel cell

```
vpm 7000 70000 sin(0 15 1 0)
Rcon+act 7000 700 1.7
Rohmic 700 7 0.3
Cfuelcell 700 7000 10000
```

Solution

Rated operation at $f_{rat} = 60$ Hz: Fig. E5.11.5 shows the **nonideal** PEM fuel cell supplying power to a current-controlled PWM voltage-source inverter feeding a three-phase nonsalient pole synchronous motor. With the modulation index $m = 0.816$ one obtains a battery voltage of $V_{DCbat} = (2 \sqrt{2 \cdot 259.82}) / 0.816 = 900$ V and $L_s = L_{M1} = X_s / (2\pi f_{rat}) = 2 / 377 = 5.305$ mH. The instantaneous induced voltages are $e_a(t) = 294.35 \text{ V} \sin(\omega t - 65.568^\circ)$, $e_b(t) = 294.35 \text{ V} \sin(\omega t - 185.568^\circ)$, $e_c(t) = 294.35 \text{ V} \sin(\omega t - 305.568^\circ)$, and the instantaneous input currents are $i_a(t) = 181.40 \text{ A} \sin(\omega t - 36.87^\circ)$, $i_b(t) = 181.40 \text{ A} \sin(\omega t - 156.87^\circ)$, $i_c(t) = 181.40 \text{ A} \sin(\omega t - 276.87^\circ)$. See Fig. E5.11.2B. Neglecting losses, the output power is

$$P = \frac{(3 \cdot E_a \cdot V_a \cdot \sin \delta)}{X_s} \quad (\text{E5.11.4})$$

For $\delta = -65.568^\circ < 90^\circ$ means the motor is operating in a stable manner. $P = 3 \cdot 208.17 \cdot 259.82 \cdot (-0.91045) / 2 = -73.865$ kW, $S = 3 V_a I_a = 3 \cdot 259.82 \cdot 128.29 = 100$ kVA, $Q = S \sin \theta = S \cdot \sin(-36.87^\circ) = -60$ kVAR.

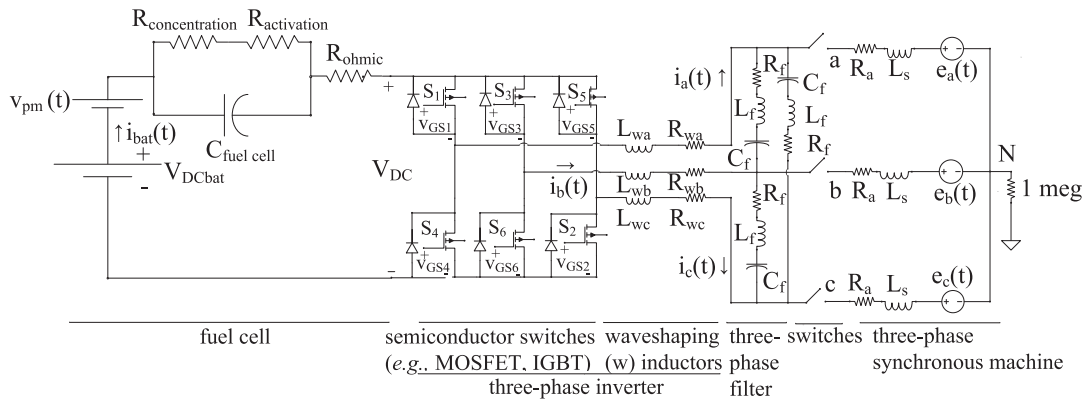


FIG. E5.11.5 Current-controlled PWM voltage-source inverter [52] supplied by **nonideal** PEM fuel cell feeding a three-phase nonsalient pole synchronous motor/machine.

Table E5.11.2 lists the PSpice program for the **nonideal** PEM fuel cell supplying power to the PWM inverter feeding the nonsalient pole synchronous motor. The gating signal voltage (v_{trial}) has the frequency of 5.76 kHz at lagging displacement (power) factor. For the power factor, consumer notation is used, which means the machine is under-excited: the current lags the input terminal voltage by -36.87° .

TABLE E5.11.2 Lists PSpice input program, Application Example 5.11 for the **nonideal** PEM fuel cell supplying power to the PWM inverter feeding the nonsalient pole synchronous motor.

```

*Table E5.11.2
* data represents comments and operation at 60 Hz,
*(**) represents operation at 360 Hz with FW
*(***) represents operation at 360 Hz with CFW
*ideal fuel cell at 60 Hz
*vDCbat 2 0 900
*non-ideal fuel cell at 60 Hz
*vDCbat 70000 0 1500
*non-ideal fuel cell at 360 Hz, FW
**vDCbat 70000 0 2100
*non-ideal fuel cell at 360 Hz, CFW
vDCbat 70000 0 2100
vpm 7000 70000 sin(0 15 1 0)
Rcontact 7000 700 1.7
Rohmic 700 2 0.3
Cfuelcell 7000 700 10000
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
l_w1 10 15 0.1m
l_w2 20 25 0.1m
l_w3 30 35 0.1m
R_w1 15 16 10m
R_w2 25 26 10m
R_w3 35 36 10m
*current references in terms of voltages
*vref1 12 0 sin(0 181.40 60 0 0 -36.87)
*vref2 22 0 sin(0 181.40 60 0 0 -156.87)
*vref3 32 0 sin(0 181.40 60 0 0 -276.87)
**vref1 12 0 sin(0 30.234 360 0 0 -36.87)
**vref2 22 0 sin(0 30.234 360 0 0 -156.87)
**vref3 32 0 sin(0 30.234 360 0 0 -276.87)

```

Continued

TABLE E5.11.2 Lists PSpice input program, Application Example 5.11 for the **nonideal PEM** fuel cell supplying power to the PWM inverter feeding the nonsalient pole synchronous motor—Cont'd

```

vref1 12 0 sin(0 118.78 360 0 0 -36.87)
vref2 22 0 sin(0 118.78 360 0 0 -156.87)
vref3 32 0 sin(0 118.78 360 0 0 -276.87)
*voltages represent load currents, measured with shunts
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*error signals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
*vtrial 5 0 pulse(-10 10 0 86.5u 86.5u 0.6u 173.6u)
**vtrial 5 0 pulse(-10 10 0 17.0u 17.0u 0.6u 34.6u)
vtrial 5 0 pulse(-10 10 0 17.0u 17.0u 0.6u 34.6u)
*gating signals for upper switches
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp
xgs3 34 5 31 30 comp
*gating signals for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*Filter is deleted because PSPICE is limited to 64 nodes
*parameters of power system with L-N induced voltages ea, eb, ec
**RM1 16 18 0.2
RM1 16 18 0.1
*LM1 18 19 5.305m
**LM1 18 19 5.305m
LM1 18 19 1.326m
*Vout1 19 123 sin(0 294.35 60 0 0 -65.568)
**Vout1 19 123 sin(0 321.15 360 0 0 -63.187)
Vout1 19 123 sin(0 322.25 360 0 0 -59.60)
**RM2 26 28 0.2
RM2 26 28 0.1
*LM2 28 29 5.305m
**LM2 28 29 5.305m
LM2 28 29 1.326m
*Vout2 29 123 sin(0 294.35 60 0 0 -185.568)
**Vout2 29 123 sin(0 321.15 360 0 0 -183.187)

```

Continued

TABLE E5.11.2 Lists PSpice input program, Application Example 5.11 for the **nonideal** PEM fuel cell supplying power to the PWM inverter feeding the nonsalient pole synchronous motor—Cont'd

```

*Table E5.11.2
Vout2 29 123 sin(0 322.25 360 0 0 -179.60)
**RM3 36 38 0.2
RM3 36 38 0.1
*LM3 38 39 5.305m
**LM3 38 39 5.305m
LM3 38 39 1.326m
*Vout3 39 123 sin(0 294.35 60 0 0 -305.568)
**Vout3 39 123 sin(0 321.15 360 0 0 -303.187)
Vout3 39 123 sin(0 322.25 360 0 0 -299.6)
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0
+tox=100n rs=42.69m kp=20.87u l=2u
+ w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0
+uo=600 phi=0.6 vto=3.487 rd=0.19 cbd=200n
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2
+is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.01m chgtol=0.01m
+reltol=50m vntol=1m itl5=0 itl4=200
*transient analysis
.tran 5u 350m 340m 5u
*plotting of traces
.probe
*Fourier analysis
.four 360 12 I(RM1)
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

The input induced phase voltages {e.g., $e_a(t) = V(19) - V(123)$ } and input phase currents {e.g., $i_a(t) = I(RM1) = I_a(R_{TH})$ } of the three-phase, nonsalient pole synchronous motor at rated operation ($f_{rat} = 60$ Hz) with **ideal** PEM fuel cell are the same as those of the **ideal** lithium-ion battery for $V_{DCbat} = 900$ V (Fig. E5.11.2A). The real power absorbed is $P = 3 \cdot (300/\sqrt{2}) \cdot (175/\sqrt{2}) \cos(23^\circ) = 72.49$ kW.

Fig. E5.11.6A shows the synchronous motor voltage and current of one phase when supplied by an **ideal** PEM fuel cell.

Fig. E5.11.6B shows the synchronous motor voltage and current of one phase when supplied by a **nonideal** PEM fuel cell.

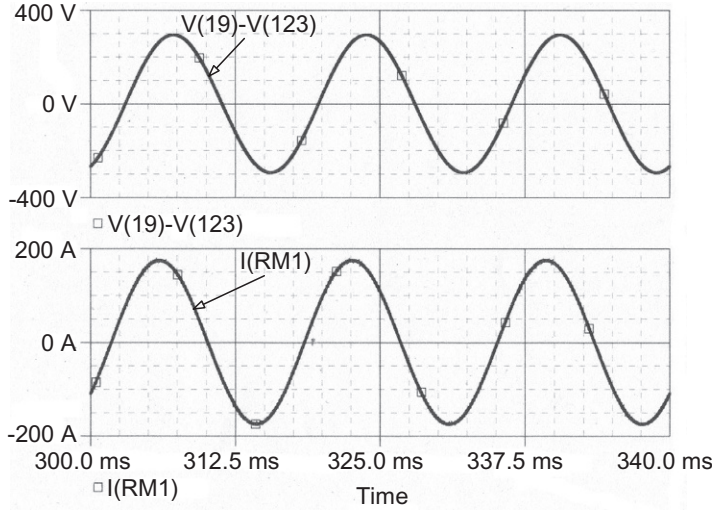


FIG. E5.11.6A Input induced phase voltage $e_a(t) = V(19) - V(123)$ and input phase current $i_a(t) = I(RM1) = I_a(R_a)$ of three-phase, nonsalient pole synchronous motor at rated operation ($f_{rat} = 60$ Hz) with **ideal** PEM fuel cell. The current amplitude is smaller than that of the analysis because the inverter impedance is neglected in the analysis and the inverter operation is based on P-control causing a steady-state error. $V_{DCbat} = 900$ V to obtain sinusoidal AC current response. The real power absorbed is $P_{absorbed} = 3 \cdot (300/\sqrt{2}) \cdot (175/\sqrt{2}) \cos(14.4^\circ) = 76.28$ kW.

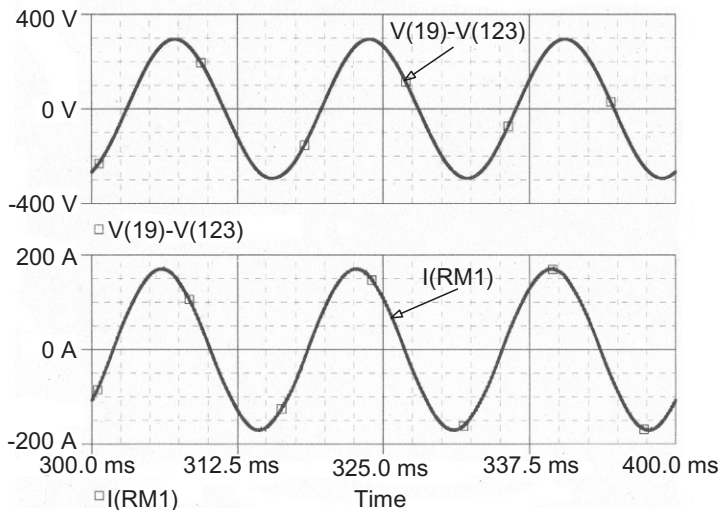


FIG. E5.11.6B Input induced phase voltage $e_a(t) = V(19) - V(123)$ and input phase current $i_a(t) = I(RM1) = I_a(R_a)$ of three-phase, nonsalient pole synchronous motor at rated operation ($f_{rat} = 60$ Hz) with **nonideal** PEM fuel cell. The current amplitude is smaller than that of the analysis because the inverter impedance is neglected in the analysis and the inverter operation is based on P-control causing a steady-state error. $V_{DCbat} = 1500$ V to obtain sinusoidal AC current response. The real power absorbed is $P_{absorbed} = 3 \cdot (300/\sqrt{2}) \cdot (174/\sqrt{2}) \cos(34.839^\circ) = 64.27$ kW.

Figs. E5.11.7 and E5.11.8 show the synchronous motor when supplied by a **nonideal** PEM fuel cell with FW and **nonideal** PEM fuel cell with CFW, respectively.

FIG. E5.11.7 Input induced phase voltage $e_a(t) = V(19) - V(123)$ and input phase current $i_a(t) = I(RM1) = I_a(R_a)$ of three-phase, nonsalient pole synchronous motor at FW operation ($f_1 = 360\text{Hz}$) with **nonideal** fuel cell. The current amplitude is smaller than that of the analysis because the inverter impedance is neglected in the analysis and the inverter operation is based on P-control causing a steady-state error. $V_{\text{DCbat}} = 2100\text{ V}$ to obtain sinusoidal AC current response. The real power absorbed is $P_{\text{absorbed}} = 3 \cdot (320/\sqrt{2}) \cdot (19/\sqrt{2}) \cos(83.077) = 1.1\text{ kW}$.


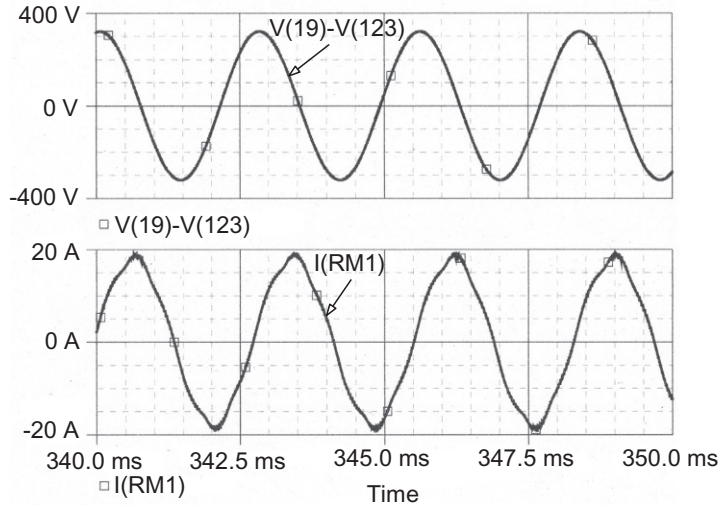


FIG. E5.11.8 Input induced phase voltage $e_a(t) = V(19) - V(123)$ and input phase current $i_a(t) = I(RM1) = I_a(R_a)$ of three-phase, nonsalient pole synchronous motor at CFW operation ($f_1 = 360\text{Hz}$) with **nonideal** PEM fuel cell. The current amplitude is smaller than that of the analysis because the inverter impedance is neglected in the analysis and the inverter operation is based on P-control causing a steady-state error. $V_{\text{DCbat}} = 2100\text{ V}$ to obtain sinusoidal AC current response. The real power absorbed is $P_{\text{absorbed}} = 3 \cdot (320/\sqrt{2}) \cdot (120/\sqrt{2}) \cos(13.33) = 56.05\text{ kW}$.

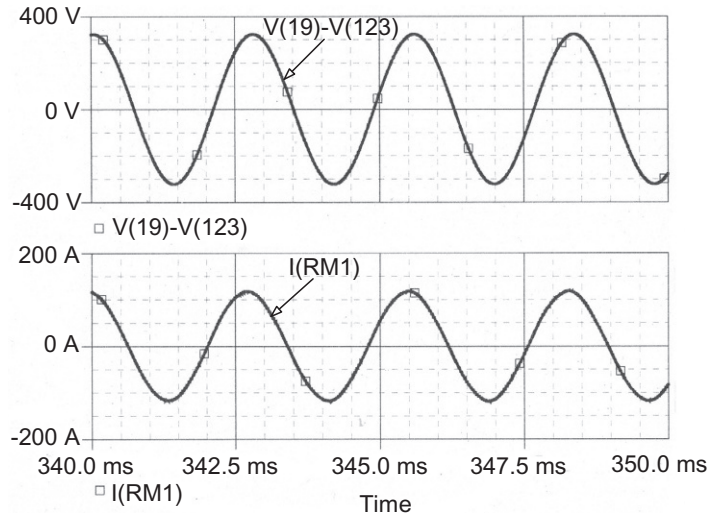

Conclusion

For the chosen **nonideal** lithium battery and **nonideal** PEM fuel cell parameters the latter requires a somewhat larger DC voltage for the PWM inverter. A parameter study is required to explain this behavior, which is beyond the scope of this book.

5.7 Performance issues with batteries, fuel cells, and combustion engines

Batteries store energy on the surface of material and similar considerations apply to fuel cells where the hydrogen H_2 and oxygen O_2 combine, releasing energy and water H_2O . Unfortunately there is no ideal solution because hydrogen is very explosive and must be handled with care. The use of combustion engines based on hydrogen and its derivatives such as the methanation process appears to be suitable for some applications—in particular, for air travel.

5.8 Summary

Variable-speed, variable-torque drives based on induction, brushless DC and synchronous machines used in private and public vehicles are analyzed: these drives are supplied by storage elements such as **nonideal** lithium-ion and lead-acid batteries as well as fuel cells. The charging of lithium-ion and lead-acid batteries in the energy range of 100 kWh are investigated. This battery/fuel cell size permits an automobile with a weight of two tons-force (including five passengers and luggage) to travel about 400 miles (~ 640 km) with one battery charge. All three types of machines are supplied by either current-controlled, voltage-source PWM inverters or six-step type inverters. The starting, rated speed and FW at six times the rated speed as well as CFW are investigated. It turns out that power and torque can be increased by changing the pole numbers at low speed and relying on CFW at high speed [26,27]. These principles are explained based on application examples, together with analytical and PSpice studies. Depending on the stored hydrogen, fuel cells permit a large traveling range.

Automobile manufacturers may consider using in one automobile two different variable-speed drives such as brushless DC machine (also called inverter-fed, permanent-magnet machine) and an inverter-fed asynchronous/induction machine. Reliable operation of electric cars is important and thus mixed-drives for automobiles could be desirable: one rear axle drive, e.g., brushless DC machine, and one front axle drive, e.g., asynchronous machine supplied by current-controlled, voltage-source inverter. The equipment of an automobile with two different drive units permits a “limp-home” possibility: for example, if the brushless DC machine fails because of high temperature—degrading the permanent-magnets—the asynchronous machine would function at high temperatures which might exist under the hood of the car on a summer day. Study of the influences of equivalent impedance (resistance, inductances) per phase, change of pole numbers for different operating regions (e.g., start-up, rated speed, high speed), and change of the number of turns from series to parallel for CFW might be easier for asynchronous/induction machines. To make regeneration in private (e.g., cars) and public vehicles (e.g., buses, trains) possible, batteries are required in addition to fuel cells because the regenerated electricity cannot be stored in the fuel cell—one such disadvantage. In public transportation vehicles the weight is not of much concern and fuel cells will be very suitable because refilling the on-board hydrogen tank takes just a few minutes as compared to batteries.

Modeling of **nonideal** (lithium-ion) batteries and fuel cells reveals that the internal impedances of batteries and fuel cells—as well as the time-varying voltage variations of fuel cells—

greatly affect the charging of batteries due to power quality problems (e.g., harmonics) and the increase of DC supply voltage by more than 50%, for example, 900–1500 V. This is a big concern for passenger safety. Lower voltages are not advisable for batteries/fuel cells in the 100kWh range because of the required increased supply currents and associated conductor cross-sections; of course two drives on one car could somewhat alleviate these voltage/current problems. In addition it is recommended to match the **nonideal** batteries/fuel cells with the inverter drive to decrease the voltage/current.

By comparing the charging mechanisms of the batteries via thyristors and MOSFETs for three-phase and single-phase distribution systems it is evident that single-phase 120/240 V as it occurs in the United States requires about three times as long to charge a battery in the garage of a family home than when a three-phase 230/398 V system is available in Germany and other European countries. The power quality of charging and discharging of automobile batteries used as power system energy storage is addressed in Ref. [53].

References

- [1] E.F. Fuchs, H.A. Fuchs, *Introduction to Energy, Renewable Energy and Electrical Engineering: Essentials for Engineering Science (STEM) Professionals and Students*, John Wiley & Sons, New York, NY, 2021, p. 10158.
- [2] E.F. Fuchs, M.A.S. Masoum, *Power Conversion of Renewable Energy Systems*, first ed., Springer, USA, 2012. 2nd Printing. ISBN: 978-1-4419-7978-0, Library of Congress Number: 2011921349.
- [3] R. Weiss, J. Appelbaum, Battery state of charge determination in photovoltaic system, *J. Electrochem. Soc.* 129 (9) (1982) 1928–1933.
- [4] J.C. Hall, T. Lin, G. Brown, P. Biesan Li, F. Bonhomme, Decay processes and life predictions for lithium ion satellite cells, in: 4th International Energy Conversion Engineering Conference and Exhibit (IECEC), 26–29 June 2006, San Diego, CA, 2006. Paper No. AIAA 206-4078, 11 pp. see: <https://arc.aiaa.org/doi/10.2514/6.2006-4078>.
- [5] <https://www.diva-portal.org/smash/get/diva2:946064/FULLTEXT01.pdf>.
- [6] C. Wang, M.H. Nehrir, S.R. Shaw, Dynamic models and model validation for PEM fuel cells using electrical circuits, *IEEE Trans. Energy Convers.* 20 (2) (2005) 442–451.
- [7] <https://www.ballard.com>.
- [8] J. Franck, Transformation of Kinetic Energy of Free Electrons Into Excitation Energy of Atoms by Impacts, Nobel Price Lecture, 1925, pp. 79–108. <https://www.nobelprize.org/prizes/physics/1925/franck/biographical>.
- [9] P.W. Tuinenga, SPICE, a Guide to Circuit Simulation & Analysis Using PSPICE, 2e, Prentice Hall, Englewood Cliffs, NJ, 1992.
- [10] <https://www.wolfram.com/mathematica>.
- [11] <https://www.mathworks.com/products/matlab.html>.
- [12] E.F. Fuchs, G.A. McNaughton, Comparison of first-order finite difference and finite element algorithms for the analysis of magnetic fields, part I: theoretical analysis, *IEEE Trans. Power Syst.* PAS-101 (5) (1982) 1170–1180.
- [13] G.A. McNaughton, E.F. Fuchs, Comparison of first-order finite difference and finite element algorithms for the analysis of magnetic fields, part II: numerical results, *IEEE Trans. Power Syst.* PAS-101 (5) (1982) 1181–1201.
- [14] E.F. Fuchs, G.A. McNaughton, Properties of orthogonal and triangular grids for the analysis of magnetic fields based on the finite difference and finite element methods, part I: theoretical analysis, *Acta Technica* (2) (1982) 168–205.
- [15] G.A. McNaughton, E.F. Fuchs, M. Siegl, Properties of orthogonal and triangular grids for the analysis of magnetic fields based on the finite difference and finite element methods, part II: numerical results based on Gaussian elimination, *Acta Technica* (2) (1982) 206–238.
- [16] E.F. Fuchs, M. Siegl, Properties of orthogonal and triangular grids for the analysis of magnetic fields based on the finite difference and finite element methods, part III: comparison of iterative solutions, *Acta Technica* (3) (1982) 261–290.
- [17] E.F. Fuchs, G. Pohl, Computer generated polycentric grid design and a novel dynamic acceleration of convergence for the iterative solution of magnetic fields based on the finite difference method, *IEEE Trans. Power Syst.* PAS-100 (8) (1981) 3911–3920.

- [18] E.F. Fuchs, K. Senske, Comparison of iterative solutions of the finite difference method with measurements as applied to Poisson's and the diffusion equations, *IEEE Trans. Power Syst.* PAS-100 (8) (1981) 3983–3992.
- [19] E.F. Fuchs, Numerical Determination of Synchronous, Transient, and Subtransient Reactances of a Synchronous Machine (Ph.D. thesis), University of Colorado, Boulder, Colorado, 1970.
- [20] E.F. Fuchs, E.A. Erdelyi, Nonlinear theory of turbogenerators, part I: magnetic fields at no-load and balanced loads, *IEEE Trans. Power Syst.* PAS-92 (2) (1973) 583–591.
- [21] E.F. Fuchs, E.A. Erdelyi, Nonlinear theory of turbogenerators, part II: Load dependent synchronous reactances, *IEEE Trans. Power Syst.* PAS-92 (2) (1973) 592–599.
- [22] E.F. Fuchs, Lastabhängige transiente Reaktanzen von gesättigten Turbogeneratoren, *Arch. Electrotech.* 55 (1973) 263–273.
- [23] E.F. Fuchs, E.A. Erdelyi, Determination of waterwheel alternator transient reactances from flux plots, *IEEE Trans. Power Syst.* PAS-91 (5) (1972) 1795–1802.
- [24] E.F. Fuchs, E.A. Erdelyi, Determination of waterwheel alternator steady-state reactances from flux plots, *IEEE Trans. Power Syst.* PAS-91 (6) (1972) 2510–2527.
- [25] E.F. Fuchs, E.A. Erdelyi, Nonlinear salient pole alternator subtransient reactances and damper winding currents, *IEEE Trans. Power Syst.* PAS-93 (6) (1974) 1871–1892.
- [26] E.F. Fuchs, Alternating Current Machine With Increased Torque Above and Below Rated Speed for Hybrid/Electric Propulsion Systems, U.S. Patent No. 8,183,814 B2, May 22, 2012.
- [27] E.F. Fuchs, Alternating Current Machine With Increased Torque Above and Below Rated Speed for Hybrid/Electric Propulsion Systems, U.S. Patent No. 8,436,569 B2, May 7, 2013.
- [28] E.F. Fuchs, M. Poloujadoff, G.W. Neal, Starting performance of saturable three-phase induction motors, *IEEE Trans. Energy Conv.* EC-3 (3) (1988) 624–635.
- [29] K. Oberretl, New facts about parasitic torques in squirrel-cage induction motors, *Bull. Oerlikon* (389/390) (1969) 130–155. in English, French, German.
- [30] K. Oberretl, 13 Rules to minimize stray load losses in induction motors, *Bull. Oerlikon* (389/390) (1969) 1–11. in English, French, German.
- [31] IBS Magnet. https://www.ibsmagnet.de/about_us/index.php.
- [32] SHIN-ETSU Magnetics, Inc. NdFeB, SmCo. <https://shinetsu-rare-earth-magnet.jp/e/products>.
- [33] https://www.infineon.com/dgdl/ap1611710_speed_control_bldc_hall%EC%85%A4davedrive.pdf?fileId=db3a3043139a1bac0113aacbc6ab02e6.
- [34] <https://www.ncbi.nlm.nih.gov/pmc/articles/PMC3231115>.
- [35] mca-25-00057.pdf.
- [36] A.A. Fardoun, E.F. Fuchs, H. Huang, Modeling and simulation of an electronically commutated permanent-magnet machine drive system using SPICE, *IEEE Trans. Ind. Appl.* 30 (4) (1994) 927–937.
- [37] <https://www.tva.com/Energy/Our-Power-System/Hydroelectric/Raccoon-Mountain>.
- [38] K.G. Vosburgh, Compressed air energy storage, *J. Energy* 2 (2) (1978) 106–112.
- [39] <https://www.energydigital.com/smart-energy/worlds-largest-flywheel-energy-storage-system>.
- [40] <https://www.adb.org/sites/default/files/publication/479891/handbook-battery-energy-storage-system.pdf>.
- [41] S. Kuldeep, B. Dwivedi, Supercapacitors energy storage system for power quality improvement: an overview, *J. Electr. Syst.* 5 (4) (2009). 8 pp. see https://www.researchgate.net/publication/289714785_Supercapacitors_Energy_Storage_System_for_Power_Quality_Improvement_An_Overview.
- [42] <https://www.marquard-bahls.com/en/news-info/glossary/detail/term/biogas-biomethane.html>.
- [43] <https://pubs.acs.org/doi/10.1021/acs.energyfuels.0c00580>.
- [44] W.M. Grady, A. Mattei, The Big Event, ERCOT, February 15, 2021. Monday Morning, 01:45 AM CST, Private Communication.
- [45] https://cms-cdn.selinc.com/assets/Literature/Publications/Technical%20Papers/6413_ImplementationApplication_DC_20100106_Web.pdf?v=20160303-161415.
- [46] <https://www.springer.com/gp/book/9783319505824>.
- [47] Germany Rejected Nuclear Power and Deadly Emissions Spiked, to decommission its nuclear reactors. The country's remaining six nuclear plants will go dark by 2022. <https://www.wired.com/story/germany-rejected-nuclear-power-and-deadly-emissions-spiked/#:~:text=03%3A58%20PM>.
- [48] <https://medium.com/energimine-news/what-is-peak-and-base-load-7dffd707fb71>.

- [49] https://spectrum.ieee.org/energy/renewables/nanogrids-microgrids-and-big-data-the-future-of-the-power-grid?utm_source=techalert&utm_medium=email&utm_campaign=techalert,03-12-20&utm_content=httpspectrumieeorgenergyrenewablesnanogridsmicrogridsandbigdatathefutureofthepowergrid&mkt_tok=eyJpLjoiTVdaalkyUTBNemRfTXpKbCIzInQiOi0NjRfelphR2lnTnVnZzErK0FuR2NGY29pbXozRjFpeDBtZ3pTcElCVmo1RGhTSFY4QW9OOURLUTFEUIBGblhCck1hQ21VcVpqTzIzFTXU0c3FLUjJseitlTjh5alk2S0lBeVwvWUFGa0dUTlA4dG9RU0w5c3ZsN1NGV0doWWxjY3kifQ%3D%3D.
- [50] <https://www.examveda.com/trickle-charging-of-a-storage-battery-helps-to-61295>.
- [51] Edison Tech Center, Mercury Arc Rectifiers. <https://edisontechcenter.org/MercArcRectifiers.html>.
- [52] M. Teltsch, Adjustable-Speed Drive for an Electric Car with Large Rated Torque at Low Rated Speed (MS thesis), University of Colorado at Boulder, 1997.
- [53] E.F. Fuchs, Power quality of charging and discharging of automobile batteries used as power system energy storage, in: E-Mobility Integration Symposium 2021, Berlin, 2021.
- [54] E.F. Fuchs, M.A.S. Masoum, Power Quality in Power Systems and Electrical Machines, first ed., Elsevier/Academic Press, 2008. 638 pp.
- [55] M.A.S. Masoum, E.F. Fuchs, Power Quality in Power Systems and Electrical Machines, second ed., Elsevier/Academic Press, 2015. 1123 pp.

This page intentionally left blank

Interaction of harmonics with capacitors

Capacitors are extensively used in power systems for voltage control, power-factor correction, filtering, and reactive power compensation. With the proliferation of nonlinear loads and the propagation of harmonics, the possibility of parallel/series resonances between system and capacitors at harmonic frequencies has become a concern for many power system engineers.

Since the 1990s, there has been an increase of nonlinear loads, devices, and control equipment in electric power systems, including electronic loads fed by residential and commercial feeders, adjustable-speed drives, and arc furnaces in industrial networks, as well as the newly developing distributed generation (DG) sources in transmission and distribution systems. This has led to a growing presence of harmonic disturbances and has deteriorated the quality of electric power. Moreover, some nonlinear loads and power electronic control equipment tend to operate at relatively low power factors, causing poor voltage regulation, increasing line losses, and forcing power plants to supply more apparent/reactive power. The conventional and practical procedures for overcoming these problems, as well as compensating reactive power, are to install (fixed and/or switching) shunt capacitor banks on either the customer or the utility side of a power system. Capacitor banks are also used in power systems as reactive power compensators and tuned filters. Recent applications are power system stabilizers (PSS), flexible AC transmission systems (FACTS), and custom power devices, as well as high-voltage DC (HVDC) systems.

Misapplications of power capacitors in today's modern and complicated industrial distribution systems could have negative impacts on both the customers (sensitive linear and nonlinear loads) and the utility (equipment), including these:

- amplification and propagation of harmonics resulting in equipment overheating, as well as failures of capacitor banks themselves,
- harmonic parallel resonances (between installed capacitors and system inductance) close to the frequencies of nearby harmonic sources,
- unbalanced system conditions which may cause maloperation of (ground) relays, and
- additional power quality problems such as capacitor in-rush currents and transient overvoltages due to capacitor-switching actions.

Capacitor or frequency scanning is usually the first step in harmonic analysis for studying the impact of capacitors on system response at fundamental and harmonic frequencies. Problems with harmonics often show up at capacitor banks first, resulting in fuse blowing and/or capacitor failure. The main reason is that capacitors form either series or parallel resonant circuits, which magnify and distort their currents and voltages. There are a number of solutions to capacitor related problems:

- altering the system frequency response by changing capacitor sizes and/or locations,
- altering source characteristics, and
- designing harmonic filters.

The last technique is probably the most effective one, because properly tuned filters can maintain the primary objective of capacitor application (e.g., power-factor correction, voltage control, and reactive power compensation) at the fundamental frequency, as well as low impedance paths at dominant harmonics.

This chapter starts with the main applications of capacitors in power systems and continues by introducing some power quality issues associated with capacitors. A section is provided for capacitor and frequency scanning techniques. Feasible operating regions for safe operation of capacitors in the presence of voltage and current harmonics are presented. The last section of this chapter discusses equivalent circuits of capacitors.

6.1 Application of capacitors to power-factor correction

The application of capacitor banks in transmission and distribution systems has long been accepted as a necessary step in the design of utility power systems. Design considerations often include traditional factors such as voltage and reactive power (VAR) control, power-factor correction, and released capacity. More recent applications concern passive and active filtering, as well as parallel and series (active and reactive) power compensation. Capacitors are also incorporated in many PSS, FACTS, and custom power devices, as well as HVDC systems.

An important application of capacitors in power systems is for power-factor correction. Poor power factor has many disadvantages:

- degraded efficiency of distribution power systems,
- decreased capacity of transmission, substation, and distribution systems,
- poor voltage regulation, and
- increased system losses.

Many utility companies reward customers who improve their power factor (PF) and penalize those who do not meet the prescribed PF requirements. There are a number of approaches for power factor improvement:

- Synchronous condensers (e.g., overexcited synchronous machines with leading power factor) are used in transmission systems to provide stepless (continuous) reactive power compensation for optimum transmission line performance under changing load conditions. This technique is mostly recommended when a large load (e.g., a drive) is added to the system.

- Shunt-connected capacitor banks are used for stepwise (discrete) full or partial compensation of system inductive power demands [1,2].
- Static VAr compensators and power converter-based reactive power compensation systems are employed for active power-factor correction (PFC). These configurations use power electronic switching devices to implement variable capacitive or inductive impedances for optimal power-factor correction. Many PFC configurations have been proposed [3–5] for residential and commercial loads, including passive, single-stage, and double-stage topologies for low (below 300 W), medium (300–600 W), and high (above 600 W) power ratings, respectively.

The capacitor-bank approach is most widely used owing to its low installation cost and large capacity [2]. Active power-factor circuits are relied on for relatively small power rating applications and are not a subject of this chapter.

6.1.1 Definition of displacement power factor

Displacement power factor (DPF) is the ratio of the active or real fundamental power P (measured in W or kW) to the fundamental apparent power S (measured in VA or kVA). The reactive power Q (measured in VAr or kVAr) supplied to inductive devices is the phasor difference between the real and apparent powers. The DPF is the cosine of the angle between these two quantities. It reflects how efficiently a facility uses electricity by comparing the amount of useful work that is extracted from the electrical apparent power supplied. Of course, there are many other measures of energy efficiency. The relationship between S , P , and Q is defined by the power triangle of Fig. 6.1.

$$S = \sqrt{P^2 + Q^2} \quad (6.1)$$

The displacement power factor, determined from $\varphi = \tan^{-1}(Q/P)$, measures the displacement angle between the fundamental components of the phase voltage and phase current:

$$\text{displacement power factor} = \text{DPF} = \cos \varphi = P/S. \quad (6.2)$$

The DPF varies between zero and one. A value of zero means that all power is supplied as reactive power and no useful work is accomplished. Unity DPF means that all of the power consumed by a facility goes to produce useful work, such as resistive heating and incandescent lighting.

Electric power systems usually experience lagging displacement power factors (DPFs)—based on the consumer notation of current—because a significant part consists of reactive devices that employ coils and requires reactive power to energize their magnetic circuits.

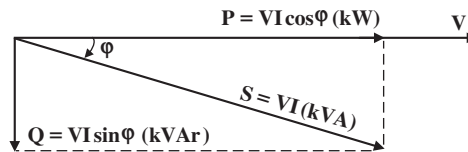


FIG. 6.1 Definition of lagging displacement power factor (consumer notation).

Generally, motors that are operated at or near full nameplate ratings will have high DPFs (e.g., 0.90–0.95) whereas the same motor under no-load and/or light load conditions may exhibit a DPF in the range of 0.30. For example, motors in large hydraulic machines such as plastic molding machines mostly operate under lightly loaded conditions, contributing to an overall power factor of about 0.60.

The reactive power absorbed by electrical equipment such as transformers, electric motors, welding units, and static converters increases the currents of generators, transmission lines, utility transformers, switchgear, and cables. Electric utility companies must supply the entire apparent power demand. Because a customer only extracts useful work from the real power component, a high displacement power factor is important. Therefore, in most power systems lagging (underexcited) DPFs (larger than 0.8) are acceptable, and leading (overexcited) power factors should be avoided because they may cause resonance conditions within the power system.

Inductive loads with low DPFs require the generators and transmission or distribution systems to supply reactive current with the associated power losses and increased voltage drops. If a shunt capacitor bank is connected across the load, its (capacitive) reactive current component I_C can cancel the load (inductive) reactive current component I_L . If the bank is sufficiently large (e.g., $I_C = I_L$), it will supply all reactive power, and there will be no reactive current flow entering the power system as is indicated in Fig. 6.2.

The DPF can be measured either by a direct-reading $\cos\phi$ meter indicating an instantaneous value or by a recording VAr meter, which allows recording of current, voltage, and power factor over time. Readings taken over an extended period of time (e.g., seconds, minutes) provide a useful means of estimating an average value of power factor for an installation.

6.1.2 Total power factor in the presence of harmonics

Eqs. (6.1) and (6.2) assume that system loads have linear voltage–current characteristics and harmonic distortions are not significant. Harmonic voltage and current distortions will change the expression for the total apparent power and the total power factor (TPF). Consider a voltage $v(t)$ and a current $i(t)$ expressed in terms of their rms harmonic components:

$$v(t) = V_0 + \sum_{h=1}^{\infty} \sqrt{2} V_h \sin(h\omega_1 t + \theta_h^v), \quad (6.3a)$$

$$i(t) = I_0 + \sum_{h=1}^{\infty} \sqrt{2} I_h \sin(h\omega_1 t + \theta_h^i). \quad (6.3b)$$

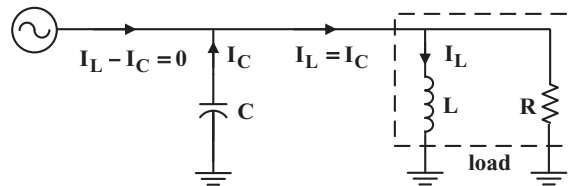


FIG. 6.2 Current paths demonstrating the essential features of power-factor correction.

The active (real, average) and reactive power are given by

$$P_{\text{total}} = V_0 I_0 + \sum_{h=1}^{\infty} V_h I_h \cos(\theta_h^v - \theta_h^i), \quad (6.4a)$$

$$Q_{\text{total}} = \sum_{h=1}^{\infty} V_h I_h \sin(\theta_h^v - \theta_h^i), \quad (6.4b)$$

and the apparent (voltampere) power is

$$S_{\text{total}} = \sqrt{\left(\sum_{h=0}^{\infty} I_h^2 \right) \left(\sum_{h=0}^{\infty} V_h^2 \right)}. \quad (6.4c)$$

Therefore, for nonsinusoidal cases, Eq. (6.1) does not hold and must be replaced by

$$D = \sqrt{S_{\text{total}}^2 - P_{\text{total}}^2 - Q_{\text{total}}^2}, \quad (6.5)$$

where D is called the distortion power.

According to Eq. (6.5), the total power factor is lower than the DPF (Eq. 6.2) in the presence of harmonic distortion of nonlinear devices such as solid-state or switched power supplies, variable-speed AC drives, and DC drives. Harmonic distortion essentially converts a portion of the useful energy into high-frequency energy that is no longer useful to most devices and is ultimately lost as heat. In this way, harmonic distortion further reduces the power factor. In the presence of harmonics, the total power factor is defined as

$$\text{total power factor} = \text{TPF} = \cos \theta = \frac{P_{\text{total}}}{S_{\text{total}}}, \quad (6.6)$$

where P_{total} and S_{total} are defined in Eqs. (6.4a)–(6.4c). Since capacitors only provide reactive power at the fundamental frequency, they cannot correct the power factor in the presence of harmonics. In fact, improper capacitor sizing and placements can decrease the power factor by generating harmonic resonances, which increase the harmonic content of system voltage and current. $\text{DPF} = \cos \varphi$ (with $\varphi = \tan^{-1}(Q/P)$) is always greater than $\text{TPF} = \cos \theta$ (with $\theta = \cos^{-1}(P_{\text{total}}/S_{\text{total}})$) when harmonics are present. Displacement power factor is still very important to most industrial customers because utility billing with respect to power factor is almost universally based on the displacement power factor.

6.1.3 Application Example 6.1: Computation of displacement power factor (DPF) and total harmonic distortion (THD) for a thyristor-bridge rectifier, supplied by a three-phase system via Y/Y transformer

Strong power systems have very small system impedances (e.g., $R_{\text{sys}} = 0.001 \Omega$, and $X_{\text{sys}} = 0.005 \Omega$) whereas weak power systems have fairly large system impedances (e.g., $R_{\text{sys}} = 0.1 \Omega$, and $X_{\text{sys}} = 0.5 \Omega$). Power quality problems are mostly associated with weak systems. Unfortunately, distributed generation (DG) inherently leads to weak systems

because the source impedances of small generators are large, that is, they cannot supply a large current (ideally infinitely large) during transient operation. This application example studies the power-factor correction for a relatively weak power system where the difference between the displacement power factor and the total power factor is large due to the relatively large amplitudes of voltage and current harmonics.

- Perform a PSpice analysis for the circuit of Fig. E6.1.1, where a three-phase bridge-thyristor rectifier—fed by a Y/Y transformer with turns ratio $N_p/N_s = 1$ ($L1A = 0.5 \text{ mH}$, $L1B = 0.5 \text{ mH}$, $L1C = 0.5 \text{ mH}$, $L2a = 0.5 \text{ mH}$, $L2b = 0.5 \text{ mH}$, $L2c = 0.5 \text{ mH}$)—via a filter (e.g., capacitor C_f) serves a load (R_{load}). You may assume $R_{\text{sys}} = 0.1 \Omega$, $X_{\text{sys}} = 0.5 \Omega$, $f = 60 \text{ Hz}$, $v_{AN}(t) = \sqrt{2} \cdot 346 \text{ V} \cos \omega t$, $v_{BN}(t) = \sqrt{2} \cdot 346 \text{ V} \cos(\omega t - 120^\circ)$, and $v_{CN}(t) = \sqrt{2} \cdot 346 \text{ V} \cos(\omega t - 240^\circ)$. Thyristors T_1 to T_6 can be modeled by MOSFETs in series with diodes, $C_f = 500 \mu\text{F}$, Y/Y connected capacitor bank with $C_{\text{bank}} = 115 \mu\text{F}$, $R_{\text{load}} = 10 \Omega$, and a firing angle of $\alpha = 30$ degree. Plot about one period of voltage and current after-steady state has been reached.
- Plot and subject the line-to-neutral voltages $v_{AN}(t)$, $i_A(t)$ and currents $v_{an}(t)$, $i_a(t)$ to Fourier analysis.
- Plot and subject the rectifier voltage $v_{\text{load}}(t) = v_{\text{out}}(t)$ to Fourier analysis.
- List the displacement power factor (DPF) and the total harmonic voltage and current distortions (THD_v and THD_i) based on the phase shifts of the fundamental and amplitudes of harmonics between $v_{AN}(t)$, $v_{an}(t)$ as well as $i_A(t)$, $i_a(t)$ for the firing angle $\alpha = 30$ degree, respectively.
- List the displacement power factor (DPF) and the total harmonic distortions (THD_v and THD_i) $v_{an}(t)$ and $i_a(t)$, respectively.
- List the significant voltage harmonic distortion (THD_v) for $v_{\text{out}}(t) = v_{\text{load}}(t) = V(R_{\text{load}})$.

Explain whether the total power factor (TPF) can be significantly increased by the Y/Y capacitor bank. Would the replacement of the capacitor bank by a three-phase tuned (R_{fbank} , L_{fbank} , and C_{fbank}) filter be a better solution?

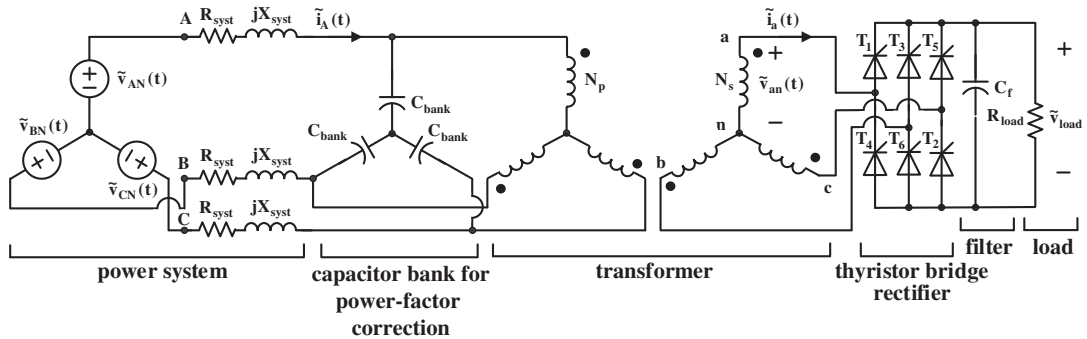


FIG. E6.1.1 Connection of a wye/wye three-phase transformer with a thyristor rectifier, filter, load, and a bank of power-factor correction capacitors.

Solution to Application Example 6.1: *Computation of displacement power factor (DPF) and total harmonic distortion (THD) for a thyristor-bridge rectifier, supplied by a three-phase system via Y/Y transformer*

- a) The PSpice program is listed in [Table E6.1.1](#) for the computation of the DPF and THD of a thyristor-bridge rectifier with $\alpha=30$ degree.

TABLE E6.1.1 PSpice program for thyristor rectifier with firing angle $\alpha=30$ degree.

*[Table E6.1.1](#). Computation of DPF and THD for thyristor-bridge rectifier, alpha=30 degrees.

```

VAN 2p 1p SIN(0V 489.3V 60Hz 0 0 0)
VBN 3p 1p SIN(0V 489.3V 60Hz 0 0 -120)
VCN 4p 1p SIN(0V 489.3V 60Hz 0 0 -240)
Rgnd 1p 0 1u
RsysA 2p 5p 0.1
RsysB 3p 6p 0.1
RsysC 4p 7p 0.1
LsysA 5p 1 1.33m
LsysB 6p 2 1.33m
LsysC 7p 3 1.33m
CbankA 1 60 115u
CbankB 2 60 115u
CbankC 3 60 115u
Rc 60 0 1Meg
L1A 1 50 0.5m
L1B 2 50 0.5m
L1C 3 50 0.5m
L2a 210 901 0.5m
R2a 901 90 1u
L2b 2new 90 0.5m
L2c 3new 900 0.5m
R2c 900 90 1u
K1A L1A L2a 0.9999
K1B L1B L2b 0.9999
K1C L1C L2c 0.9999
D1a 250 210 D1N4001
D1b 250 6 D1N4001
M1 210 700 250 250 SMM
R1 6 23 1u
V1 700 250 PULSE(0 40V 1.3889ms 0 0 10.4167ms 16.66667ms)
D2a 280 24 D1N4001
D2b 280 9 D1N4001
M2 24 100 280 280 SMM

```

Continued

TABLE E6.1.1 PSpice program for thyristor rectifier with firing angle $\alpha=30$ degree—Cont'd

```

R2 9 210 1u
V2 100 280 PULSE(0 40V 9.7218ms 0 0 10.4167ms 16.66667ms)
D3a 11 2new D1N4001
D3b 11 12 D1N4001
M3 2new 13 11 11 SMM
R3 12 23 1u
V3 13 11 PULSE(0 40V 6.9442ms 0 0 10.4167ms 16.66667ms)
D4a 14 24 D1N4001
D4b 14 15 D1N4001
M4 24 16 14 14 SMM
R4 15 2new 1u
V4 16 14 PULSE(0 40V 15.277ms 0 0 10.4167ms 16.66667ms)
D5a 17 3new D1N4001
D5b 17 18 D1N4001
M5 3new 19 17 17 SMM
R5 18 23 1u
V5 19 17 PULSE(0 40V 12.500ms 0 0 10.4167ms 16.66667ms)
D6a 20 24 D1N4001
D6b 20 21 D1N4001
M6 24 22 20 20 SMM
R6 21 3new 1u
V6 22 20 PULSE(0 40V 4.1665ms 0 0 10.4167ms 16.66667ms)
Cf 23 24 500u
Rload 23 24 10
Rgnd2 24 0 1Meg
.model SMM NMOS(Level=3 Gamma=0 Delta=0 Eta=0 Theta=0 Kappa=0 Vmax=0 Xj=0
+ Tox=100n Uo=600 Phi=0.6 Rs=42.69m Kp=20.87u L=20u W=2.9 Vto=3.487
+ Rd=0.19 Cbd=200n Pb=0.8 Mj=0.5 Cgso=3.5n Cgdo=100p Rg=1.2 Is=10f)
.model D1N4001 D(Is=1e-12)
.options list node opts
.options abstol=0.01 chgtol=0.01 reltol=0.1 vntol=100m trtol=20
.options itl1=500 itl2=500 itl4=100 itl5=0
.tran 0.1u 128ms 100ms 1u UIC
.four 60Hz 17 V(VAN) I(LsysA) V(L2a) I(R2a) V(Rload)
.probe
.end

```

Note: All comment lines must be preceded with an asterisk () while continued calculation statements must be preceded with a plus sign (+).*

- b) Plot and subject the line-to-neutral voltages $v_{AN}(t)$, $i_A(t)$, as well as currents $v_a(t)$, $i_a(t)$ to Fourier analysis (Fig. E6.1.2).

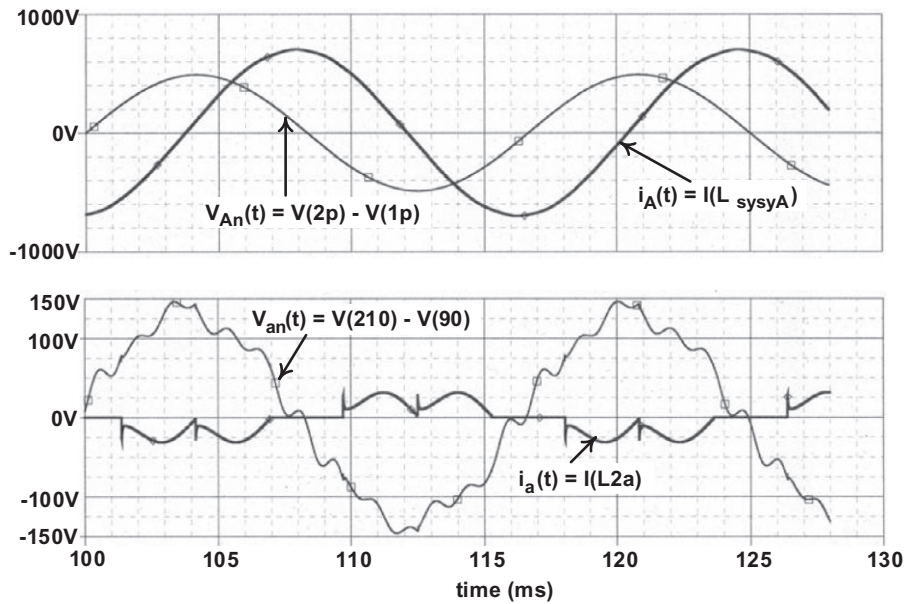


FIG. E6.1.2 Input line-to-neutral voltage $v_{AN}(t) = V(2p) - V(1p)$ (thin trace) and input current $i_A(t) = I(L_{sys}A)$ (thick trace) as well as transformer secondary line-to-neutral voltage $v_{an}(t) = V(210) - V(90)$ (thin trace) and its associated current $i_a(t) = I(L_{2a})$ (thick trace) to the thyristor-bridge rectifier.

Table E6.1.2 represents the Fourier components of line-to-neutral input voltage $v_{AN}(t)$.

TABLE E6.1.2 Fourier components of line-to-neutral input voltage $v_{AN}(t)$.

Harmonic no.	Frequency (Hz)	Fourier component	Normalized component (deg)	Phase (deg)	Normalized
Fourier components of transient response $V(V_{AN})$ DC component = 6.3914E-06					
1	6.0000E+01	4.8930E+02	1.0000E+00	-1.1521E+02	0.0000E+00
2	1.2000E+02	2.9577E-05	6.0448E-08	-1.7311E+02	5.7307E+01
3	1.8000E+02	1.9634E-05	4.0127E-08	1.1159E+02	4.5722E+02
4	2.4000E+02	4.8021E-05	9.8142E-08	-1.1586E+02	3.4498E+02
5	3.0000E+02	4.0542E-05	8.2858E-08	6.7116E+01	6.4317E+02
6	3.6000E+02	8.9948E-05	1.8383E-07	-2.3860E+00	6.8888E+02
7	4.2000E+02	8.8180E-05	1.8022E-07	-1.3664E+02	6.6983E+02
8	4.8000E+02	8.7280E-05	1.7838E-07	1.7240E+02	1.0941E+03

Continued

TABLE E6.1.2 Fourier components of line-to-neutral input voltage $v_{AN}(t)$ —Cont'd

Harmonic no.	Frequency (Hz)	Fourier component	Normalized component (deg)	Phase (deg)	Normalized
9	5.4000E+02	6.4919E−05	1.3268E−07	−3.0017E+01	1.0069E+03
10	6.0000E+02	2.7863E−05	5.6945E−08	−1.2314E+02	1.0290E+03
11	6.6000E+02	2.9612E−05	6.0520E−08	1.3193E+02	1.3992E+03
12	7.2000E+02	1.6313E−04	3.3339E−07	−1.0200E+02	1.2805E+03
13	7.8000E+02	7.9015E−06	1.6149E−08	8.3243E+01	1.5810E+03
14	8.4000E+02	1.7300E−04	3.5356E−07	2.0327E+01	1.6333E+03
15	9.0000E+02	2.4232E−04	4.9523E−07	−1.6082E+02	1.5673E+03
16	9.6000E+02	8.1621E−05	1.6681E−07	1.5447E+02	1.9978E+03
17	1.0200E+03	1.9973E−04	4.0820E−07	5.5603E+00	1.9641E+03

Total harmonic distortion = 9.0580E−05%.

Table E6.1.3 represents the Fourier components of the input current $i_A(t)$.

TABLE E6.1.3 Fourier components of input current $i_A(t)$.

Harmonic no.	Frequency (Hz)	Fourier component	Normalized component (deg)	Phase (deg)	Normalized
Fourier components of transient response $I(L_{sysA})$ DC component = 1.0428E+00					
1	6.0000E+01	7.0011E+02	1.0000E+00	1.6353E+02	0.0000E+00
2	1.2000E+02	1.5124E−01	2.1602E−04	3.7579E+00	−3.2329E+02
3	1.8000E+02	1.0055E−01	1.4362E−04	2.9493E+00	−4.8763E+02
4	2.4000E+02	7.6977E−02	1.0995E−04	1.6574E+00	−6.5244E+02
5	3.0000E+02	3.3181E+00	4.7394E−03	−3.7473E+01	−8.5510E+02
6	3.6000E+02	5.1107E−02	7.2999E−05	1.5882E+00	−9.7956E+02
7	4.2000E+02	1.3273E+00	1.8958E−03	−1.0517E+02	−1.2498E+03
8	4.8000E+02	3.8774E−02	5.5382E−05	2.0666E+00	−1.3061E+03
9	5.4000E+02	3.3840E−02	4.8335E−05	1.2864E+00	−1.4704E+03
10	6.0000E+02	3.0705E−02	4.3857E−05	−3.1729E+01	−1.6356E+03
11	6.6000E+02	1.3346E+00	1.9063E−03	−1.4460E+02	−1.9434E+03
12	7.2000E+02	2.5450E−02	3.6352E−05	−2.6713E+00	−1.9650E+03
13	7.8000E+02	1.2324E+00	1.7603E−03	−1.9783E−01	−2.1260E+03

TABLE E6.1.3 Fourier components of input current $i_A(t)$ —Cont'd

Harmonic no.	Frequency (Hz)	Fourier component	Normalized component (deg)	Phase (deg)	Normalized
14	8.4000E+02	2.2322E−02	3.1884E−05	3.3607E+00	−2.2860E+03
15	9.0000E+02	2.0387E−02	2.9120E−05	−4.3672E−01	−2.4533E+03
16	9.6000E+02	1.9371E−02	2.7669E−05	−2.4259E−01	−2.6166E+03
17	1.0200E+03	3.2222E−01	4.6025E−04	−9.8529E+01	−2.8785E+03

Total harmonic distortion = 5.7529E−01%.

Table E6.1.4 represents the Fourier components of the secondary transformer line-to-neutral output voltage $v_a(t)$.

TABLE E6.1.4 Fourier components of the secondary transformer line-to-neutral output voltage $v_{an}(t)$.

Harmonic no.	Frequency (Hz)	Fourier component	Normalized component (deg)	Phase (deg)	Normalized
Fourier components of transient response V(L2a) DC component = −2.8873E−02					
1	6.0000E+01	1.3250E+02	1.0000E+00	−1.0836E+02	0.0000E+00
2	1.2000E+02	5.2853E−03	3.9888E−05	−1.6518E+02	5.1536E+01
3	1.8000E+02	2.2279E−03	1.6814E−05	−1.6735E+02	1.5771E+02
4	2.4000E+02	4.6319E−03	3.4957E−05	−1.3412E+02	2.9930E+02
5	3.0000E+02	8.2110E+00	6.1969E−02	−1.3043E+02	4.1135E+02
6	3.6000E+02	2.7820E−03	2.0996E−05	−1.1256E+02	5.3758E+02
7	4.2000E+02	4.7066E+00	3.5521E−02	1.6144E+02	9.1993E+02
8	4.8000E+02	4.3440E−03	3.2784E−05	−6.9010E+01	7.9783E+02
9	5.4000E+02	1.4548E−03	1.0979E−05	−1.0726E+02	8.6794E+02
10	6.0000E+02	4.4195E−03	3.3354E−05	−1.3568E+02	9.4787E+02
11	6.6000E+02	7.4884E+00	5.6515E−02	1.2371E+02	1.3156E+03
12	7.2000E+02	8.5558E−03	6.4571E−05	−1.7094E+02	1.1293E+03
13	7.8000E+02	7.8815E+00	5.9481E−02	−9.1097E+01	1.3175E+03
14	8.4000E+02	9.6354E−03	7.2718E−05	−3.5284E+01	1.4817E+03
15	9.0000E+02	2.3304E−03	1.7588E−05	−9.4510E+01	1.5308E+03
16	9.6000E+02	5.9947E−03	4.5242E−05	−1.2546E+02	1.6082E+03
17	1.0200E+03	2.7706E+00	2.0910E−02	1.6779E+02	2.0098E+03

Total harmonic distortion = 1.1077E+01%.

Table E6.1.5 represents the Fourier components of the secondary transformer output phase current $i_a(t)$.

TABLE E6.1.5 Fourier components of the secondary transformer output phase current $i_a(t)$.

Harmonic no	Frequency (Hz)	Fourier component	Normalized component (deg)	Phase (deg)	Normalized
Fourier components of transient response I(R2a) DC component = 3.3420E-03					
1	6.0000E+01	2.3235E+01	1.0000E+00	6.4871E+01	0.0000E+00
2	1.2000E+02	3.7461E-03	1.6123E-04	1.1155E+02	-1.8196E+01
3	1.8000E+02	1.0398E-03	4.4753E-05	-6.5983E+01	-2.6060E+02
4	2.4000E+02	5.5265E-03	2.3785E-04	1.4879E+02	-1.1069E+02
5	3.0000E+02	1.0197E+01	4.3889E-01	1.4032E+02	-1.8404E+02
6	3.6000E+02	2.9277E-03	1.2600E-04	1.5599E+02	-2.3324E+02
7	4.2000E+02	3.4764E+00	1.4962E-01	7.2003E+01	-3.8209E+02
8	4.8000E+02	2.6164E-03	1.1261E-04	-1.6440E+02	-6.8336E+02
9	5.4000E+02	3.1245E-04	1.3447E-05	1.4382E+02	-4.4002E+02
10	6.0000E+02	6.0882E-04	2.6203E-05	1.1301E+02	-5.3569E+02
11	6.6000E+02	1.3972E+00	6.0136E-02	3.4881E+01	-6.7870E+02
12	7.2000E+02	1.3337E-03	5.7402E-05	2.0407E+01	-7.5804E+02
13	7.8000E+02	2.1080E-02	9.0727E-04	-5.1926E+01	-8.9524E+02
14	8.4000E+02	1.8135E-03	7.8052E-05	3.8256E+01	-8.6993E+02
15	9.0000E+02	9.0012E-04	3.8740E-05	4.2751E+01	-9.3031E+02
16	9.6000E+02	7.7787E-04	3.3479E-05	1.2752E+01	-1.0252E+03
17	1.0200E+03	8.5208E-01	3.6673E-02	-1.0219E+02	-1.2050E+03

Total harmonic distortion = 4.6901E+01%.

c) Fig. E6.1.3 illustrates the output voltage of the thyristor-bridge rectifier $v_{out}(t) = v_{load}(t) = V(R_{load})$.

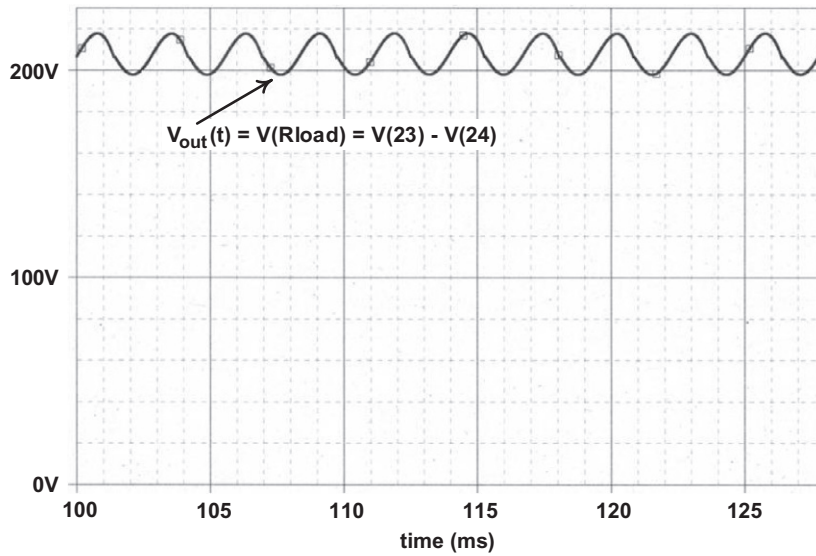


FIG. E6.1.3 Output voltage of the thyristor-bridge rectifier $v_{\text{out}}(t) = V(R_{\text{load}})$.

Table E6.1.6 represents the Fourier components of the output voltage $v_{\text{out}}(t)$.

TABLE E6.1.6 Fourier components of the output voltage $v_{\text{out}}(t) = v_{\text{load}}(t) = V(R_{\text{load}})$.

Harmonic no.	Frequency (Hz)	Fourier component	Normalized component (deg)	Phase (deg)	Normalized
Fourier components of transient response $V(R_{\text{load}})$ DC component = 2.0746E+02					
1	6.0000E+01	5.6015E-02	1.0000E+00	5.3150E+01	0.0000E+00
2	1.2000E+02	7.6819E-03	1.3714E-01	-1.7940E+01	-1.2424E+02
3	1.8000E+02	1.7730E-03	3.1653E-02	3.1569E+01	-1.2788E+02
4	2.4000E+02	3.7456E-03	6.6868E-02	3.7034E+01	-1.7557E+02
5	3.0000E+02	1.0972E-02	1.9587E-01	2.4292E+01	-2.4146E+02
6	3.6000E+02	9.8858E+00	1.7649E+02	2.5060E+01	-2.9384E+02
7	4.2000E+02	3.6761E-03	6.5627E-02	1.0831E+02	-2.6374E+02
8	4.8000E+02	2.4921E-03	4.4490E-02	6.8614E+00	-4.1834E+02
9	5.4000E+02	1.8127E-03	3.2360E-02	1.2510E+00	-4.7710E+02
10	6.0000E+02	1.5911E-03	2.8405E-02	4.7520E+00	-5.2675E+02
11	6.6000E+02	1.6849E-03	3.0079E-02	1.9590E+00	-5.8269E+02
12	7.2000E+02	5.8661E-01	1.0472E+01	-8.0756E+01	-7.1856E+02
13	7.8000E+02	2.1446E-03	3.8287E-02	-6.7013E+00	-6.9765E+02
14	8.4000E+02	1.2655E-03	2.2592E-02	-1.0080E+01	-7.5418E+02
15	9.0000E+02	1.0921E-03	1.9497E-02	-9.0884E+00	-8.0634E+02
16	9.6000E+02	1.0047E-03	1.7936E-02	-4.8815E+00	-8.5528E+02
17	1.0200E+03	8.4575E-04	1.5099E-02	-1.7040E+01	-9.2059E+02

Total harmonic distortion = 1.7680E+04%.

- d) List the DPF and the total harmonic THD based on the phase shifts of the fundamental and harmonics between $v_{AN}(t)$ and $i_A(t)$:
 $i_{A1}(t)$ lags $v_{AN1}(t)$ by 48.53 degree resulting $DPF = \cos(115.2^\circ - 163.53^\circ) = 0.662$ lagging, for $v_{AN}(t)$ $THD_v = 0.00009\%$, for $i_A(t)$ $THD_i = 0.575\%$.
- e) List the DPF and the total harmonic THD based on the phase shifts of the fundamental and harmonics between $v_{an}(t)$ and $i_a(t)$:
 $i_{a1}(t)$ lags $v_{an1}(t)$ by 43.49 degree resulting $DPF = \cos(108.36^\circ - 64.87^\circ) = 0.725$ lagging, for $v_{an}(t)$ $THD_v = 11.08\%$, for $i_a(t)$ $THD_i = 46.90\%$.
- f) List the total harmonic distortion THD based on the harmonics of $v_{out}(t) = v_{load}(t) = V(R_{load})$:
 DC component = 207.46 V, $v_{out6}(t) = 9.89$ V, $v_{out12}(t) = 0.58$ V.

The displacement power factor can be increased by larger values for C_{bank} and C_f . The total harmonic distortion (THD) cannot be significantly decreased by the Y/Y capacitor bank, therefore the addition of a three-phase tuned (R_{fbank} , L_{fbank} and C_{fbank}) filter to suppress the switching harmonics in voltages and currents is required, see [Chapter 10](#) to choose an appropriate tuned filter, and Ref. [14] explains the sequence of thyristor gating.

6.1.4 Benefits of power-factor correction

Improving a facility's power factor (either DPF or TPF) not only reduces utility power factor surcharges, but it can also provide lower power consumption and offer other advantages such as reduced demand charges, increased load-carrying capabilities in existing lines and circuits, improved voltage profiles, and reduced power system losses. The overall results are lower costs to consumers and the utility alike, as summarized below:

- *Increased load-carrying capabilities in existing circuits.* Installing a capacitor bank at the end of a feeder (near inductive loads) improves the power factor and reduces the current carried by the feeder. This may allow the circuit to carry additional loads and save costs for upgrading the network when extra capacity is required. In addition, the lower current flow reduces resistive losses in the circuit.
- *Improved voltage profile.* A lower power factor requires a higher current flow for a given load. As the line current increases, the voltage drop in the conductor increases, which may result in a lower voltage at the load. With an improved power factor, the voltage drop in the conductor is reduced.
- *Reduced power-system losses.* In industrial distribution systems, active losses vary from 2.5% to 7.5% of the total load measured in kWh, depending on hours of full-load and no-load plant operation, wire size, and length of the feeders. Although the financial return from conductor loss reduction alone is seldom sufficient to justify the installation of capacitors, it is an attractive additional benefit, especially in older plants with long feeders. Conductor losses are proportional to the current squared, whereas the current is reduced in direct proportion to the power-factor improvement; therefore, losses are inversely proportional to the square of the power factor.
- *Release of power-system capacity.* When capacitor banks are in operation, they furnish magnetizing current for electromagnetic devices (e.g., motors, transformers), thus

reducing the current demand from the power plant. Less current means less apparent power, or less loading of transformers and feeders. This means capacitors can be used to reduce system overloading and permit additional load to be added to existing facilities. Release of system capacity by power-factor improvement and especially with capacitors has become an important practice for distribution engineers.

- *Reducing electricity bills.* To encourage more efficient use of electricity and to allow the utility to recoup the higher costs of providing service to customers with low power factor demanding a high amount of current, many utilities require that the consumers improve the power factors of their installations. This may be in the form of power-factor penalty (e.g., adjusted demand charges or an overall adjustment to the bill) or a rate structure (e.g., the demand charges or power rates are based on current or apparent power). Power-factor penalties are usually imposed on larger commercial and industrial customers when their power factors fall below a certain value (e.g., 0.90 or 0.95). Customers with current or apparent power-based demand charges in effect pay more whenever their power factor is less than about unity. More and more utilities are introducing power-factor penalties (or apparent power-based demand charges) into their rate structures, in part to comply with provisions of the Clean Air Act and deregulation, and to some extent in response to growing competition in a newly deregulated power market. Without these surcharges there would be no motivation for consumers to install power-factor correction facilities. Against the financial advantages of reduced billing, the consumer must balance the cost of purchasing, installing, and maintaining the power-factor-improvement capacitors. The overall result of enforcing incentives is lower costs to consumers and the utility companies. A high power factor avoids penalties imposed by utilities and makes better use of the available capacity of a power system.

Therefore, power-factor correction capacitors are usually installed in power systems to improve the efficiency at which electrical energy is delivered and to avoid penalties imposed by utilities, making better use of the available capacity of a power system.

6.2 Application of capacitors to reactive power compensation

Reactive power compensation plays an important role in the planning and improvement of power systems. Its aim is predominantly to provide an appropriate placement of the compensation devices, which ensures a satisfactory voltage profile and a reduction in power and energy losses within the system. It also maximizes the real power transmission capability of transmission lines, while minimizing the cost of compensation.

The increase of real power transmission in a particular system is restricted by a certain critical voltage level. This critical voltage depends on the reactive power support available in the system to meet the additional load at a given operating condition. Use of series and shunt compensation is one of the corrective measures suggested by various researchers. This is performed by implementing power capacitor banks or FACTS devices. Shunt-connected capacitor banks and shunt FACTS devices are implemented to produce an acceptable voltage profile, minimize the loss of the investment, and enhance the power transmission capability. Series-connected capacitors and series FACTS devices are incorporated in transmission lines

to reduce losses and improve transient behavior as well as the stability of power systems. Simultaneous compensation of losses and reactive powers is performed by series and shunt-connected FACTS devices to improve the static and dynamic performances of power systems.

Shunt capacitors applied at the receiving end of a power system supplying a load of lagging power factor have several benefits, which are the reason for their extensive applications:

- reduce the lagging component of circuit current,
- increase the voltage level at the load,
- improve voltage regulation if the capacitor units are properly switched,
- reduce I^2R real power loss (measured in W) in the system due to the reduction of current,
- reduce I^2X reactive power loss (measured in VAr) in the system due to the reduction of current,
- increase power factor of the source generators,
- decrease reactive power loading on source generators and circuits to relieve an overloaded condition or release capacity for additional load growth,
- by reducing reactive power load on the source generators, additional real power may be placed on the generators if turbine capacity is available, and
- to reduce demand apparent power where power is purchased. Correction to about 1 pu power factor may be economical in some cases.

6.3 Application of capacitors to harmonic filtering

Capacitors are widely used in passive and active harmonic filters. In addition, many static and converter-based power system components such as static VAr compensators, FACTS, and power quality and custom devices use capacitors as storage and compensation components.

Filters are the most frequently used devices for harmonic compensation. Passive and active filters are the main types of filters. Passive filters are composed of passive elements such as resistors (R), inductors (L), and capacitors (C). Passive harmonic filters are the most popular and effective mitigation method for harmonic problems. The passive filter is generally designed to provide a low-impedance path to prevent the harmonic current to enter the power system. They are usually tuned to a specific harmonic such as the 5th, 7th, 11th, etc. In addition, they provide displacement power-factor correction.

Filters are generally divided into passive, active, and hybrid filters. The hybrid structure uses a combination of active filters with passive filters. The passive part is used to reduce the overall filter rating and improve its performance. Classifications of passive and active filters are provided in [Chapter 10](#).

6.3.1 Application Example 6.2: Design of a tuned harmonic filter

A harmonic LC filter (consisting of a capacitor C in series with an inductor L) is to be designed in parallel to a power-factor correction (PFC) capacitor C_{bank} to improve the power quality (as recommended by IEEE-519 [8]) and to improve the displacement power factor (DPF) from $\cos\phi_{\text{load}} = 0.42$ lagging to 0.97 lagging (consumer notation). Data obtained from a harmonic analyzer at 30% loading are 6.35 kV/phase, 618 kW/phase, DPF = 0.42 lag, THD_i = 30.47%, fundamental frequency $f = 50$ Hz, and fifth harmonic (250 Hz) current $I_5 = 39.25$ A.

Solution to Application Example 6.2: *Design of a tuned harmonic filter*

Fig. E6.2.1 shows the per-phase equivalent circuit of the nonlinear load generating 5th harmonic current whereby a tuned series LC filter and a displacement power factor (DPF) correcting capacitor bank are not connected. Note that $\cos\varphi_{\text{load}}=0.42$ lagging, $\varphi_{\text{load}}=\cos^{-1}(0.42)=-1.13735\text{ rad}\equiv-66.1673^\circ$. Fig. E6.2.2 illustrates the phasor diagram for real (P), reactive (Q), and complex ($\tilde{S}$) powers. At 30% loading the data are $|\tilde{V}_{\text{phase}}|=6.35\text{ kV}$ per phase, $P_{\text{load}_30\%}=618\text{ kW}$ per phase, displacement power factor (DPF)=0.42 lagging, $\text{THD}_i=30.47\%$, $f=50\text{ Hz}$, $|\tilde{I}_5|=I_5=39.5\text{ A}$. Fig. E6.2.3 illustrates the circuit per phase when a tuned LC filter and a displacement power factor (DPF) correcting capacitor bank are present.

- Calculation of the required reactive power Q_{required} for improving DPF to the desired value:

$$\cos\varphi_{\text{compensated}}=0.97\text{ lagging}, \quad \varphi_{\text{compensated}}=\cos^{-1}(0.97)=-0.245566\text{ rad}\equiv-14.0703^\circ.$$

$$P=P_{\text{load}_30\%}=P_{\text{compensated}_30\%}=\text{constant}=618\text{ kW/phase}.$$

From the phasor diagram Fig. E6.2.2 one obtains

$$\begin{aligned} Q_{\text{load}_30\%} &= P_{\text{load}_30\%} \cdot \tan\varphi_{\text{load}} < 0, \\ Q_{\text{compensated}_30\%} &= P_{\text{load}_30\%} \cdot \tan\varphi_{\text{compensated}} < 0, \\ Q_{\text{required}_30\%} &= P_{\text{load}_30\%} (\tan\varphi_{\text{compensated}_30\%} - \tan\varphi_{\text{load}}) > 0, \\ Q_{\text{required}_30\%} &= 618\text{ kW} [\tan(-14.0703^\circ) - \tan(-66.1673^\circ)] > 0, \\ Q_{\text{required}_30\%} &= 618\text{ kW} [-0.250624 - (-2.16077)] = 1180.47\text{ kVAr/phase} > 0. \end{aligned} \quad (\text{E6.2.1})$$

- According to IEEE-519 [8], THD_i should drop from 30.47% to 4.0%. We employ about 30% of the required Q_{required} for filtering (tuned) and the remaining for (untuned) displacement power factor compensation (DPFC). Select filter capacitance to supply 30% of $Q_{\text{required}_30\%}$:

$$Q_{\text{filter}_30\%}=0.3 Q_{\text{required}_30\%}=0.3 \cdot 1180.47\text{ kVAr/phase}=354.141\text{ kVAr/phase} > 0. \quad (\text{E6.2.2})$$

- Assuming Y-connected (filter) capacitor banks one obtains with $Q=VI=V^2/X_C$ or $X_C=V^2/Q$.

From this follows for the fundamental (1) reactance and the 5th harmonic (5) reactance

$$\begin{aligned} X_C^{(1)} &= \frac{(6.35\text{ k})^2 V^2}{354.14\text{ kVAr}} = 113.86\text{ }\Omega/\text{phase} = 1/(\omega C), \text{ or } C = \frac{1}{2\pi \cdot 50 \cdot 113.86} = 27.9571\text{ }\mu\text{F}. \\ X_C^{(5)} &= \frac{X_C^{(1)}}{5} = (113.86/5)\text{ }\Omega/\text{phase} = 22.772\text{ }\Omega/\text{phase}. \end{aligned}$$

The tuned filter requires: $X_L^{(5)}=X_C^{(5)}=22.772\text{ }\Omega/\text{phase}$.

$$X_L^{(1)} = \frac{X_L^{(5)}}{5} = (22.772/5) = 4.5544\text{ }\Omega/\text{phase} \text{ or } L = \frac{X_L^{(5)}}{2\pi \cdot 50 \cdot 5} = \frac{22.772}{2\pi \cdot 50 \cdot 5} = 14.4975\text{ mH/phase}.$$

Fig. E6.2.4 shows the phasor diagram for current and voltages where the magnitude of voltage $\tilde{V}_L^{(1)}$ is very small as compared with $\tilde{V}_C^{(1)}$ and $\tilde{V}_{\text{phase}} = \tilde{V}_{\text{phase}}^{(1)}$.

For $X_C^{(1)} \gg X_L^{(1)}$ or $|\tilde{V}_C^{(1)}| \gg |\tilde{V}_L^{(1)}|$ or $|\tilde{V}_C^{(1)}| \approx |\tilde{V}_{\text{phase}}|$, one obtains

$$|\tilde{I}_C^{(1)}| \approx \frac{|\tilde{V}_{\text{phase}}|}{X_C^{(1)}} = 6.35 \text{ kV} / 113.86 \Omega = 55.77 \text{ A} = |\tilde{I}_L^{(1)}|, \quad \text{and} \quad |\tilde{I}_C^{(5)}| = 39.25 \text{ A} = |\tilde{I}_L^{(5)}|.$$

Without tuned LC filter:

$$\text{THD}_i = 0.3047 = \frac{|\tilde{I}_C^{(5)}|}{|\tilde{I}_{\text{phase}}|} \quad \text{and} \quad |\tilde{I}_{\text{phase}}| = \frac{618 \text{ kW}}{6.35 \text{ kV} \cdot 0.42} = 231.7 \text{ A, thus}$$

$$|\tilde{I}_C^{(1)}| = 0.3047 \cdot 231.7 \text{ A} = 70.61 \text{ A}.$$

With tuned LC filter:

$$\text{THD}_i = 0 = \frac{|\tilde{I}_C^{(5)}|}{|\tilde{I}_{\text{phase}}|} \quad \text{and} \quad |\tilde{I}_{\text{phase}}| = \frac{618 \text{ kW}}{6.35 \text{ kV} \cdot 0.97} = 100.3 \text{ A,} \quad \text{thus} \quad |\tilde{I}_C^{(5)}| = 0 \cdot 100.3 \text{ A} = 0 \text{ A,}$$

that is no harmonic current enters the supply system. Tuned filters have a resistive component and cannot be exactly tuned, because of temperature and manufacturing tolerances.

Although the fundamental and the fifth harmonic are not necessarily in phase, we assume the worst-case condition where both signals are in phase.

- Reactive power rating of inductor L of LC filter is with

$$|\tilde{V}_L| = |\tilde{V}_L^{(1)}| + |\tilde{V}_L^{(5)}| = |\tilde{I}_L^{(1)}| X_L^{(1)} + |\tilde{I}_L^{(5)}| X_L^{(5)} = 55.77 \cdot 4.5544 + 39.25 \cdot 22.772 = 1.1478 \text{ kV,}$$

$$Q_{\text{rating}}^{\text{inductor}} = |\tilde{V}_L| I_{\text{rms}} = 1.1478 \text{ kV} \cdot 39.25 \text{ A} = 45.05 \text{ kVAr}.$$

- Reactive power rating of capacitor C of LC filter is with

$$|\tilde{V}_C| = |\tilde{V}_C^{(1)}| + |\tilde{V}_C^{(5)}| = |\tilde{I}_C^{(1)}| X_C^{(1)} + |\tilde{I}_C^{(5)}| X_C^{(5)} = 55.77 \cdot 113.86 + 39.25 \cdot 22.772 = 7.24377 \text{ kV,}$$

$$Q_{\text{rating}}^{\text{capacitor}} = |\tilde{V}_C| I_{\text{rms}} = 7.24377 \text{ kV} \cdot 39.25 \text{ A} = 284.32 \text{ kVAr}.$$

- Current rating of capacitor bank C_{bank} at $f=50\text{Hz}$ is

$$I_C^{(1)} = \frac{V_{\text{phase}}}{X_C^{(1)}} = \frac{6.35 \text{ kV}}{113.86 \Omega} = 55.77 \text{ A,} \quad |\tilde{I}_C^{(5)}| = 39.25 \text{ A}.$$

Select based on Pythagorean theorem $I_{\text{rms}} = 68 \text{ A}$, resulting in $Q_{\text{rating_final}}^{\text{inductor}} = |\tilde{V}_L| I_{\text{rms}} = 1.1478 \text{ kV} \cdot 68 \text{ A} = 78.05 \text{ kVAr}$, and $Q_{\text{rating_final}}^{\text{capacitor}} = |\tilde{V}_C| I_{\text{rms}} = 7.24377 \text{ kV} \cdot 68 \text{ A} = 492.58 \text{ kVAr}$.

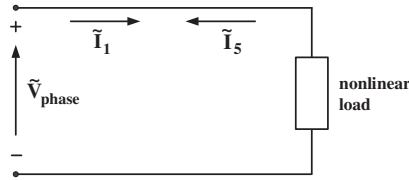
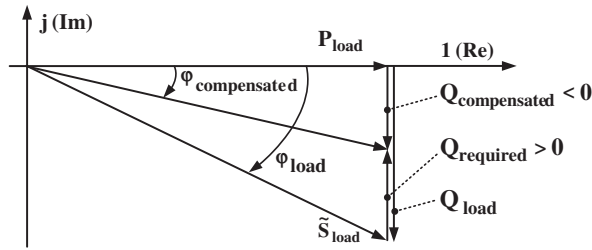
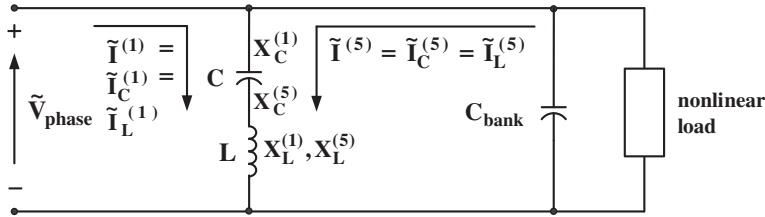
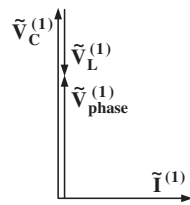


FIG. E6.2.1 Uncompensated per-phase equivalent circuit.

FIG. E6.2.2 Phasor diagram for real (P), reactive (Q), and complex ($\tilde{S}$) powers.FIG. E6.2.3 Compensated per-phase equivalent circuit with tuned LC filter and capacitor bank C_{bank} .FIG. E6.2.4 Phasor diagram for current $\tilde{I}^{(1)}$ and voltages $\tilde{V}_C^{(1)}$, $\tilde{V}_L^{(1)}$, and $\tilde{V}_{\text{phase}}^{(1)}$.

6.4 Power quality problems associated with capacitors

There are resonance effects and harmonic generation associated with capacitor installation and switching. Series and parallel resonance excitations lead to increases of voltages and currents, effects which can result in unacceptable stresses with respect to equipment installation or thermal degradation. Using joint capacitor banks for power-factor correction and reactive

power compensation is a very well-established approach. However, there are power quality problems associated with using capacitors for such a purpose, especially in the presence of harmonics.

6.4.1 Transients associated with capacitor switching

Transients associated with capacitor switching are generally not a problem for utility equipment. However, they could cause a number of problems for the customers, including

- voltage increases (overvoltages due to capacitor switching),
- transients can be magnified in a customer facility (e.g., if the customer has low-voltage, power-factor correction capacitors) resulting in equipment damage or failure (due to excessive overvoltages),
- nuisance tripping or shutdown (due to DC bus overvoltage) of adjustable-speed drives or other process equipment, even if the customer circuit does not employ any capacitors,
- computer network problems, and
- telephone and communication interference.

Because capacitor voltage cannot change instantaneously, energizing a capacitor bank results in an immediate drop in system voltage toward zero, followed by a fast voltage recovery (overshoot), and finally an oscillating transient voltage superimposed with the fundamental waveform (Fig. 6.3). The peak-voltage magnitude (up to 2pu with transient frequencies of 300–1000Hz) depends on the instantaneous system voltage at the moment of capacitor connection.

Voltage increase occurs when the transient oscillation—caused by the energization of a capacitor bank—excites a series resonance formed by the leakage inductances of a low-voltage system. The result is an overvoltage at the low-voltage bus. The worst voltage transients occur when the following conditions are met:

- The size of the switched capacitor bank is significantly larger (>10) than the low-voltage power-factor correction bank;
- The source frequency is close to the series-resonant frequency formed by the step-down transformer and the power-factor correction-capacitor bank; and
- There is relatively small damping provided by the low-voltage load (e.g., for typical industrial plant configuration or primarily motor load with high efficiency).

Solutions to the voltage increase usually involve:

- Detune the circuit by changing capacitor bank sizes;
- Switch large banks in more than one section of the system;
- Use an overvoltage control method. For example, use switching devices that do not prestrike or restrike, employ synchronous switching of capacitors, and install high-energy metal-oxide surge arrestors to limit overvoltage and protect critical equipment;
- Apply surge arresters at locations where overvoltages occur;
- Convert low-voltage power-factor correction banks into harmonic filters (e.g., detune the circuit);
- Use properly designed and tuned filters instead of capacitors;

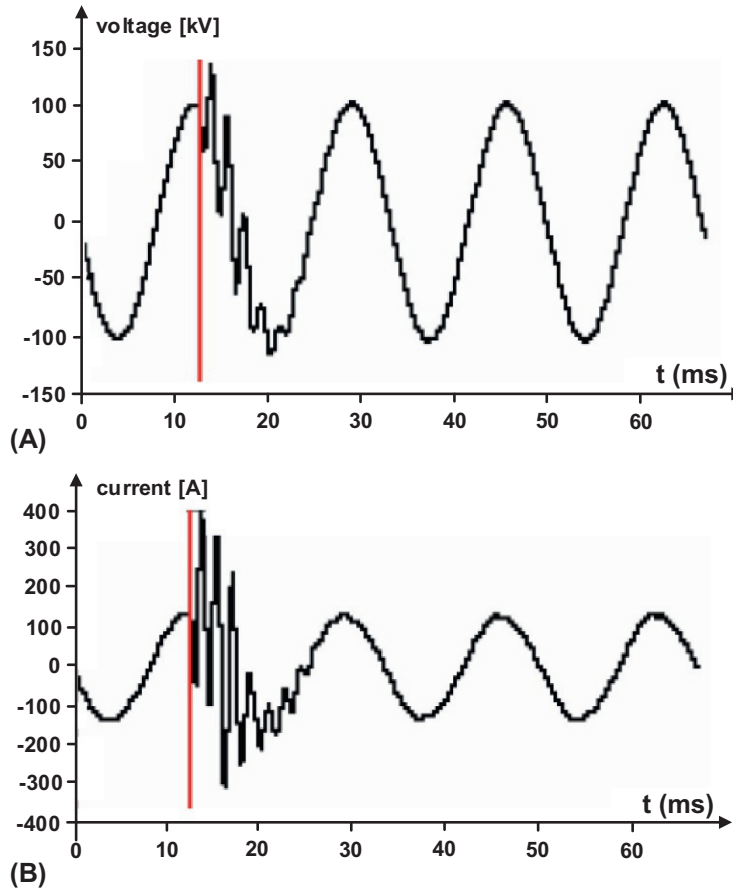


FIG. 6.3 Typical distribution capacitor closing transient voltage (A) and current (B) waveforms [6].

- Install isolation or dedicated transformers or series reactors for areas of sensitive loads; and
- Rely on transient-voltage-surge suppressors.

6.4.2 Harmonic resonances

Improper placement and sizing of capacitors could cause parallel and/or series resonances and tune the system to a frequency that is excited by a harmonic source [7]. In industrial power systems, capacitor banks are normally specified for PFC, filtering, or reactive-power compensation without regard to resonances and other harmonic concerns. High overvoltages could result if the system is tuned to one harmonic only that is being supplied by a nonlinear load or saturated electromagnetic device such as a transformer (e.g., second, third, fourth, and fifth harmonics result from transformer inrush currents). Moreover, the capacitive reactance is inversely proportional to frequency; therefore, harmonic currents may overload capacitors

beyond their limits. Thus, capacitor banks themselves may be affected by resonance, and may fail prematurely. This may even lead to plant or feeder shutdowns.

Resonance is a condition where the capacitive reactance of a system offsets its inductive reactance, leaving the small resistive elements in the network as the only means of limiting resonant currents. Depending on how the reactive elements are arranged throughout the system, the resonance can be of a series or a parallel type. The frequency at which this offsetting effect takes place is called the resonant frequency of the system.

6.4.2.1 Parallel resonance

In a parallel-resonant circuit the inductive and the capacitive reactance impedance components are in parallel to a source of harmonic current and the resistive components of the impedances are small compared to the reactive components. The presence of a capacitor (e.g., for PFC) and harmonics may create such conditions and subject the system to failure. From the perspective of harmonic sources, shunt capacitor banks appear to be in parallel with the system short-circuit reactance. The resonant frequency of this parallel combination is

$$f_r = \frac{1}{2\pi \cdot \sqrt{LC}} = f_1 \cdot \sqrt{\frac{1000 \cdot S_{sc}}{Q_{cap}}}, \quad (6.7)$$

where f_r and f_1 are the resonant and the fundamental frequencies, respectively. S_{sc} and Q_{cap} are the system short-circuit apparent power—measured in MVA—at the bus and the reactive power rating—measured in kVAr—of the capacitor, respectively. Installation of capacitors in power systems modifies the resonance frequency. If this frequency happens to coincide with one generated by the harmonic source, then excessive voltages and currents will appear, causing damage to capacitors and other electrical equipment.

6.4.2.2 Series resonance

In a series-resonance circuit the inductive impedance of the system and the capacitive reactance of a capacitor bank are in series to a source of harmonic current. Series resonance usually occurs when capacitors are located toward the end of a feeder branch. From the harmonic source perspective, the line impedance appears in series with the capacitor. At, or close to, the resonant frequency of this series combination, its impedance will be very low. If any harmonic source generates currents near this resonant frequency, they will flow through the low-impedance path, causing interference in communication circuits along the resonant path, as well as excessive voltage distortion at the capacitor.

6.4.2.3 Capacitor bank behaves as a harmonic source

There are many capacitor banks installed in industrial and overhead distribution systems. Each capacitor bank is a source of harmonic currents of order h , which is determined by the system short-circuit impedance (X_{sc} at the capacitor location) and the capacitor size (X_C). This order of harmonic current is given by

$$h = \sqrt{\frac{X_C}{X_{sc}}}. \quad (6.8)$$

Power system operation involves many switching functions that may inject currents with different harmonic resonance frequencies. Mitigation of such harmonic sources is vital. There

is no safe rule to avoid such resonant currents, but resonances above 1000 Hz will probably not cause problems except interference with telephone circuits. This means the capacitive reactive power $Q_{\text{capacitor}}$ should not exceed roughly 0.3% of the system short-circuit apparent power S_{sc} at the point of connection unless control measures are taken to deal with these current harmonics. In some cases, converting the capacitor bank into a harmonic filter might solve the entire problem without sacrificing the desired power-factor improvement.

6.4.3 Application Example 6.3: Harmonic resonance in a distorted industrial power system with nonlinear loads

Fig. E6.3.1A shows a simplified industrial power system ($R_{\text{sys}} = 0.06 \Omega$, $L_{\text{sys}} = 0.11 \text{ mH}$) with a power-factor correction capacitor ($C_{\text{pf}} = 1300 \mu\text{F}$). Industrial loads may have nonlinear ($v-i$) characteristics that can be approximately modeled as (constant) decoupled harmonic current sources. The utility voltages of industrial distribution systems are often distorted due to the neighboring loads and can be approximately modeled as decoupled harmonic voltage sources (as shown in the equivalent circuit of Fig. E6.3.1B):

$$v_{\text{sys}}(t) = \sum_{h=1}^{\infty} v_{\text{sys},h}(t) = \sum_{h=1}^{\infty} \sqrt{2} V_{\text{sys},h} \sin(h\omega_1 t + \theta_{\text{sys},h}^v), \quad (\text{E6.3.1a})$$

$$i_{\text{NL}}(t) = \sum_{h=1}^{\infty} i_{\text{NL},h}(t) = \sum_{h=1}^{\infty} \sqrt{2} I_{\text{NL},h} \sin(h\omega_1 t + \theta_{\text{NL},h}^i). \quad (\text{E6.3.1b})$$

Fourier analyses of measured voltage and current waveforms of the utility system and the nonlinear loads can be used to estimate the values of $V_{\text{sys},h}$, $\theta_{\text{sys},h}^v$, $I_{\text{NL},h}$, and $\theta_{\text{NL},h}^i$. This is a practical approach because most industrial loads consist of a number of in-house nonlinear loads, and their harmonic models are not usually available.

For this example, assume

$$v_{\text{sys}}(t) = \sqrt{2} \cdot 110 \sin(\omega_1 t) + \sqrt{2} \cdot 3 \sin(5\omega_1 t) + \sqrt{2} \cdot 2 \sin(7\omega_1 t) [\text{V}], \quad (\text{E6.3.2a})$$

$$i_{\text{NL}}(t) = \sqrt{2} \cdot 1.0 \sin(\omega_1 t) + \sqrt{2} \cdot 0.3 \sin(5\omega_1 t) + \sqrt{2} \cdot 0.2 \sin(7\omega_1 t) [\text{A}]. \quad (\text{E6.3.2b})$$

Compute frequencies of the series and parallel resonances and the harmonic currents injected into the capacitor, and plot its frequency response.

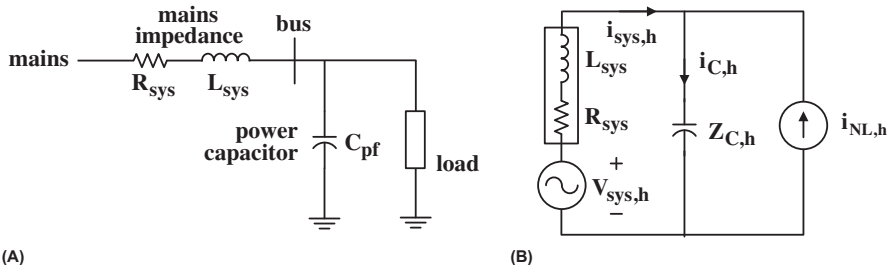


FIG. E6.3.1 A simplified industrial power system with capacitor and nonlinear load: (A) configuration and (B) the harmonic equivalent circuit [2] with $Z_{\text{sys},h} = R_{\text{sys}} + jh\omega L_{\text{sys}}$.

Solution to Application Example 6.3: *Harmonic resonance in a distorted industrial power system with nonlinear loads*

- i) To observe the effect of the nonlinear load, the harmonic voltage source (representing the distorted utility voltage) is assumed to be short-circuited. The harmonic current injected into the capacitor due to the nonlinear load is

$$\tilde{I}_{C,h}^{\text{due to NL}} = \frac{Z_{\text{sys},h}}{Z_{\text{sys},h} + Z_{C,h}} \tilde{I}_{\text{NL},h}. \quad (\text{E6.3.3})$$

A parallel resonance occurs when the denominator approaches zero. The frequency of the parallel resonance is

$$f_{\text{parallel}} = \frac{1}{2\pi\sqrt{L_{\text{sys}}C}} = \frac{1}{2\pi\sqrt{0.11\text{m} \cdot 1300\mu}} \approx 420 \text{ Hz}. \quad (\text{E6.3.4})$$

This condition will result in a large harmonic current being injected into the capacitor bank. The magnitude of the injected harmonic current can be several times the rated capacitor current, and may result in extensive harmonic voltages across the capacitor. Therefore, parallel resonance may result in the destruction of the capacitor due to over-voltage or over-current conditions.

- ii) To investigate the effect of the distorted utility voltage on the capacitor, the harmonic current source (approximating the nonlinear load) is assumed to be ideal, that is, its impedance approaches infinity and behaves like an open circuit. The harmonic current injected into the capacitor due to the distorted utility source is

$$\tilde{I}_{C,h}^{\text{due to sys}} = \frac{1}{Z_{\text{sys},h} + Z_{C,h}} \tilde{V}_{\text{sys},h}. \quad (\text{E6.3.5})$$

A series resonance occurs when the denominator approaches zero. Therefore, for this system the frequencies of the series and parallel resonances are identical:

$$f_{\text{series}} = f_{\text{parallel}} = \frac{1}{2\pi\sqrt{L_{\text{sys}}C}} = \frac{1}{2\pi\sqrt{0.11\text{m} \cdot 1300\mu}} \approx 420 \text{ Hz}. \quad (\text{E6.3.6})$$

The harmonic current injection into the capacitor will be increased if the utility voltage contains harmonic components near resonance frequencies.

- iii) The total harmonic current injected into the power capacitor is

$$\tilde{I}_{C,h} = \tilde{I}_{C,h}^{\text{due to NL}} + \tilde{I}_{C,h}^{\text{due to sys}} = \frac{Z_{\text{sys},h}}{Z_{\text{sys},h} + Z_{C,h}} \tilde{I}_{\text{NL},h} + \frac{1}{Z_{\text{sys},h} + Z_{C,h}} \tilde{V}_{\text{sys},h}. \quad (\text{E6.3.7})$$

Therefore, the 5th harmonic component of the injected current into the capacitor is

$$\begin{aligned} \tilde{I}_{C,5} &= \tilde{I}_{C,5}^{\text{due to NL}} + \tilde{I}_{C,5}^{\text{due to sys}}, \\ \tilde{I}_{C,5}^{\text{due to NL}} &= \frac{Z_{\text{sys},5}}{Z_{\text{sys},5} + Z_{C,5}} \tilde{I}_{\text{NL},5} \\ &= \frac{[0.06 + j5(2\pi \cdot 60 \cdot 0.11 \cdot 10^{-3})] \tilde{I}_{\text{NL},5}}{[0.06 + j5(2\pi \cdot 60 \cdot 0.11 \cdot 10^{-3})] - [j/5(2\pi \cdot 60 \cdot 1300 \cdot 10^{-6})]} \end{aligned}$$

$$\begin{aligned}
&= \frac{(0.06 + j0.2074)}{(0.06 + j0.2074 - j0.408)} \tilde{I}_{NL,5} \\
&= \frac{(0.06 + j0.2074)}{(0.06 - j0.2)} \tilde{I}_{NL,5} = \frac{0.2159 \angle 73.87^\circ}{0.2 \angle -73.3^\circ} \tilde{I}_{NL,5} \\
&= (1.08 \angle 147.17^\circ) \tilde{I}_{NL,5} \\
&= 1.08 \angle 147.17^\circ (\sqrt{2} \cdot 0.3 \angle 0^\circ) A \\
&= \sqrt{2}(0.324) \angle 147.17^\circ A. \\
\tilde{I}_{C,5}^{\text{due to sys}} &= \frac{1}{Z_{\text{sys},5} + Z_{C,5}} \tilde{V}_{\text{sys},5} = \frac{\tilde{V}_{\text{sys},5}}{0.2 \angle -73.3^\circ} \\
&= (5 \angle 73.3^\circ) \tilde{V}_{\text{sys},5} = (5 \angle 73.3^\circ) (\sqrt{2}(3) \angle 0^\circ) A \\
&= \sqrt{2}(15) \angle 73.3^\circ A. \\
\Rightarrow \Rightarrow \tilde{I}_{C,5} &= \tilde{I}_{C,5}^{\text{due to NL}} + \tilde{I}_{C,5}^{\text{due to sys}} \\
&= \sqrt{2}(0.324) \angle 147.17^\circ A + \sqrt{2}(15) \angle 73.3^\circ A \\
&= \sqrt{2}(4.04 + j14.54) A = \sqrt{2}(15.1) \angle 74.47^\circ A. \tag{E6.3.8}
\end{aligned}$$

The 7th harmonic component of the injected current into the power capacitor is

$$\begin{aligned}
\tilde{I}_{C,7} &= \tilde{I}_{C,7}^{\text{due to NL}} + \tilde{I}_{C,7}^{\text{due to sys}}, \\
\tilde{I}_{C,7}^{\text{due to NL}} &= \frac{Z_{\text{sys},7}}{Z_{\text{sys},7} + Z_{C,7}} \tilde{I}_{NL,7} \\
&= \frac{[0.06 + j7(2\pi \cdot 60 \cdot 0.11 \cdot 10^{-3})] \tilde{I}_{NL,7}}{[0.06 + j7(2\pi \cdot 60 \cdot 0.11 \cdot 10^{-3})] - [j/7(2\pi \cdot 60 \cdot 1300 \cdot 10^{-6})]} \\
&= \frac{(0.06 + j7 \cdot 0.04147)}{(0.06 + j0.29027 - j0.2915)} \tilde{I}_{NL,7} \\
&= \frac{0.06 + j0.29029}{0.06 - j0.0012} \tilde{I}_{NL,7} = \frac{0.2964 \angle 78.32^\circ}{0.06 \angle -1.05^\circ} \tilde{I}_{NL,7} \\
&= (4.964 \angle 79.37^\circ) \tilde{I}_{NL,7} \\
&= (4.964 \angle 79.37^\circ) (\sqrt{2} \cdot 0.2 \angle 0^\circ) A \\
&= \sqrt{2}(0.993) \angle 79.39^\circ A. \\
\tilde{I}_{C,7}^{\text{due to sys}} &= \frac{1}{Z_{\text{sys},7} + Z_{C,7}} \tilde{V}_{\text{sys},7} = \frac{\tilde{V}_{\text{sys},7}}{0.06 \angle -1.05^\circ}
\end{aligned}$$

$$\begin{aligned}
&= (16.7 \angle 1.05^\circ) \tilde{V}_{\text{sys},7} \\
&= (16.7 \angle 1.05^\circ) \left(\sqrt{2}(2) \angle 0^\circ \right) A \\
&= \sqrt{2}(33.4) \angle 1.05^\circ A. \\
\Rightarrow \Rightarrow \quad \tilde{I}_{C,7} &= \tilde{I}_{C,7}^{\text{due to NL}} + \tilde{I}_{C,7}^{\text{due to sys}} \\
&= \left[\sqrt{2}(0.993) \right] \angle 79.37^\circ + \left[\sqrt{2}(33.4) \right] \angle 1.05^\circ A \\
&= \sqrt{2}(33.58 + j1.59) A \\
&= \sqrt{2}(33.62) \angle 2.7^\circ A.
\end{aligned} \tag{E6.3.9}$$

- iv) As expected, the 7th harmonic current of the nonlinear load and the distorted utility voltage are magnified (it is a relatively weak system; $R_{\text{sys}} = 0.06 \Omega$ and $X_{\text{sys}} = 2\pi(60)(0.11 \cdot 10^{-3}) = 0.042 \Omega$) due to the parallel and series resonances at $f = 420 \text{ Hz}$.
- v) The frequency responses of the capacitor current divided by the load harmonic current and divided by the utility harmonic voltage are shown in Fig. E6.3.2.

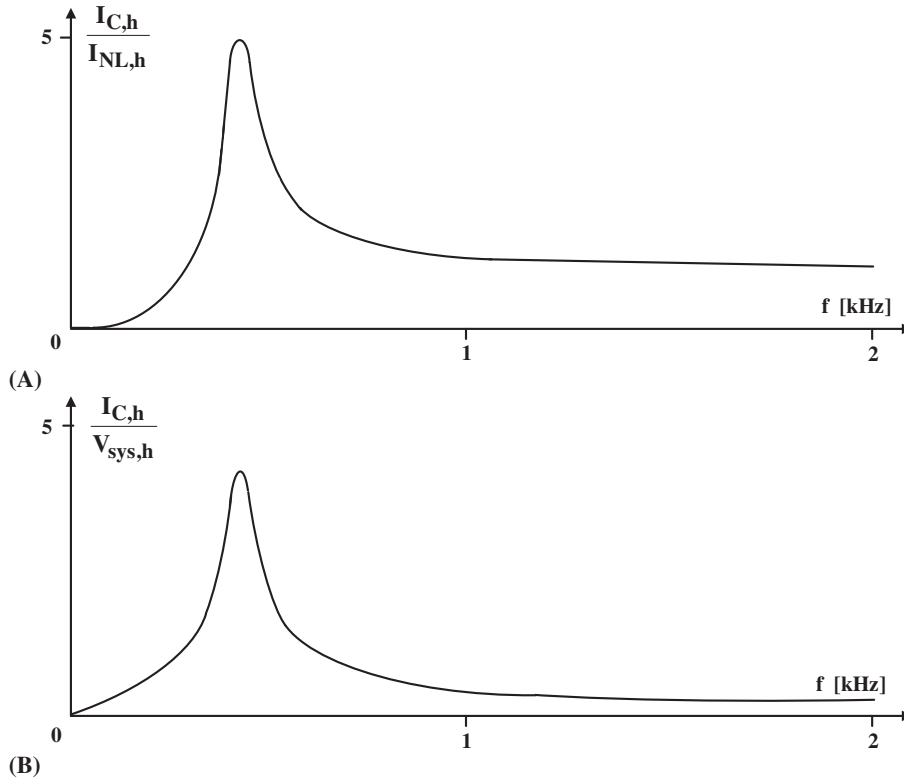


FIG. E6.3.2 Frequency response of capacitor current (A) divided by the nonlinear load harmonic current and (B) divided by the utility harmonic voltage [2].

6.4.4 Application Example 6.4: Parallel resonance caused by capacitors

The single-phase diagram and the equivalent circuit (neglecting resistances) are shown in Fig. E6.4.1A and B. In the system of Fig. E6.4.1A, the source has the ratio $X/R=10$. Assume $X/R=4000$ (losses 0.25 W/kVAr) and $X/R=5000$ (losses 0.2 W/kVAr) for low-voltage and medium-voltage high-efficiency capacitors, respectively. The harmonic current source is a six-pulse converter injecting harmonic currents of the order [8]

$$h = n(k + 1) \quad (\text{E6.4.1})$$

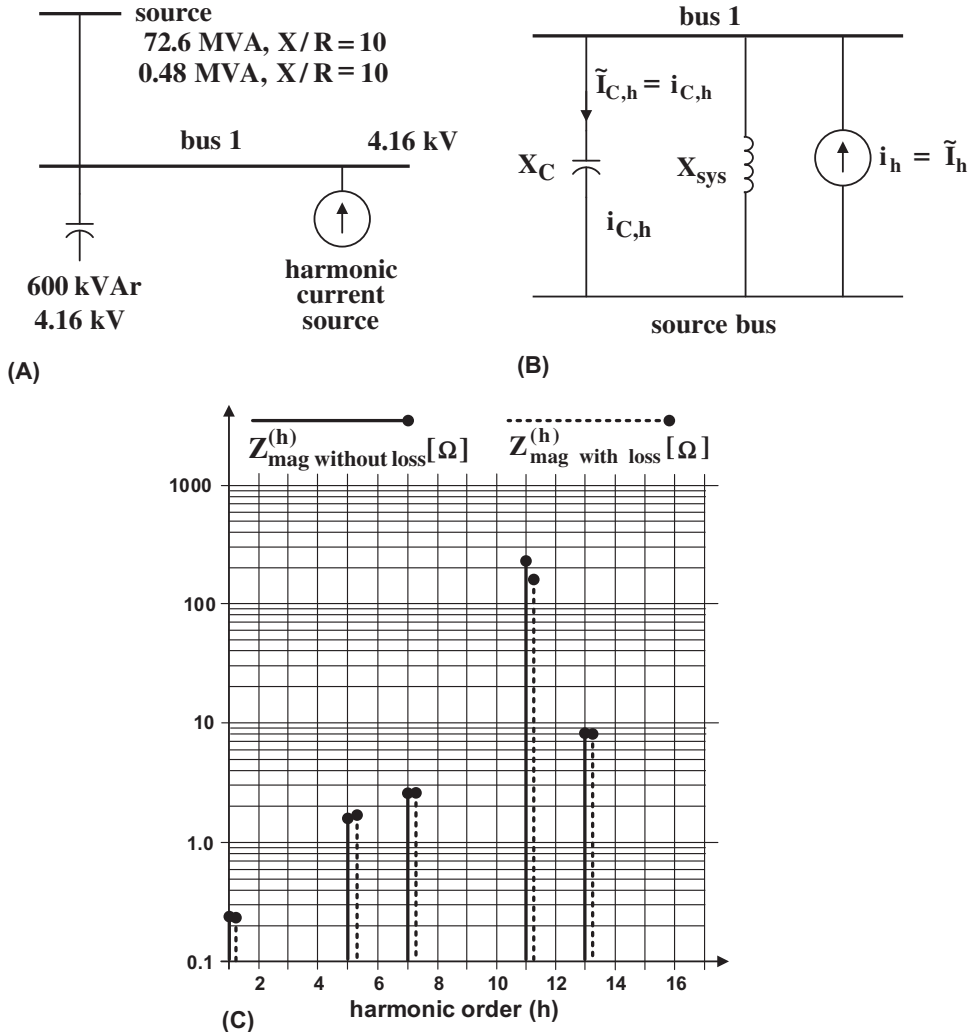


FIG. E6.4.1 (A) Example of single-line diagram for parallel resonance at bus 1 and (B) equivalent circuit for parallel resonance. The harmonic-current source is a six-pulse converter. (C) $Z_{\text{mag}}^{(h)}$ without loss[pu], $Z_{\text{mag}}^{(h)}$ with loss[pu] for $h=1$ –13 without and with resistive damping (loss). Note that only at resonance the loss plays a significant role.

where n is an integer (typically from 1 to 4) and k is the number of pulses (e.g., equal to 6 for a six-pulse converter). Find the resonance frequency of this circuit. Plot the frequency response and current amplification at bus 1.

Solution to Application Example 6.4: *Parallel resonance caused by capacitors*

The resonance frequency is with $S_{sc} = MVA_{sc}$ and $Q_{cap} = MVA_{cap}$

$$h = \sqrt{\frac{MVA_{sc}}{MVA_{cap}}}. \quad (E6.4.2)$$

This is a characteristic frequency of the six-pulse nonlinear load.

From $h = \sqrt{\frac{MVA_{sc}}{MVA_{cap}}}$, with $MVA_{sc} = 72.6 \text{ MVA}$ per phase, $MVA_{cap} = 0.6 \text{ MVA}$ per phase follows $h = \sqrt{\frac{72.6}{0.6}} = 11$.

Calculation of system inductance L_{sys} per phase:

$$S_{sc} = MVA_{sc} = V_{ph} \cdot I_{ph} = V_{ph}^2 / \sqrt{R_{sys}^2 + (\omega L_{sys})^2}, \quad R_{sys} = X_{sys}/10, \quad \text{therefore}$$

$$S_{sc} = \frac{V_{ph}^2}{\sqrt{(\omega L_{sys}/10)^2 + (\omega L_{sys})^2}} = \frac{V_{ph}^2}{\omega L_{sys} \sqrt{(1/10)^2 + (1)^2}},$$

with $S_{sc} = (72.6 + 0.48) \text{ MVA} = 73.08 \text{ MVA}$, $V_{ph} = 4.16 \text{ kV}$ follows:

$$73.08 \cdot 10^6 = \left[(4.16)^2 \cdot 10^6 \right] / [377 \cdot L_{sys} \cdot 1.005] \quad \text{or} \quad L_{sys} = 0.625 \text{ mH}, \quad \text{where } \omega = 2\pi f = 2\pi 60 \approx 377 \text{ rad/s}.$$

Calculation of capacitance C of capacitor bank:

$$Q = V_{ph}^2 / [1/\omega C] \quad \text{or} \quad C = 0.6 \cdot \frac{10^6}{[377 \cdot (4.16)^2 \cdot 10^6]} = 91.96 \text{ } \mu\text{F}.$$

Equivalent system impedance neglecting resistances:

$$Z^h = \frac{(1/jh\omega C) \cdot jh\omega L_{sys}}{(1/jh\omega C) + jh\omega L_{sys}} = \frac{0.625m/91.97\mu}{j[h \cdot 377 \cdot 0.625m - 1/(h \cdot 377 \cdot 91.97\mu)]}.$$

For $h = 1$,

$$Z^{h=1} = \frac{6.796}{j[377 \cdot 0.625m - 1/(377 \cdot 91.97\mu)]} = j0.2376 \text{ } \Omega.$$

For $h = 13$,

$$Z^{h=13} = \frac{6.796}{j[13 \cdot 377 \cdot 0.625m - 1/(13 \cdot 377 \cdot 91.97\mu)]} = -j8.048 \text{ } \Omega.$$

Fig. E6.4.1C illustrates for $h=1-13$ the $Z_{mag_without_loss}^h = |Z_{without_loss}^h| = f(h)$ without resistive damping (loss), which is a plot of the equivalent system impedance magnitude as seen from bus 1. This plot is known as a frequency scan.

One determines the ratio $\frac{i_{C,h}}{i_h} = \frac{h\omega L_{\text{sys}}}{h\omega L_{\text{sys}} - 1/h\omega C}$, and correspondingly, $\frac{i_{\text{sys},h}}{i_h} = \frac{-1/h\omega C}{h\omega L_{\text{sys}} - 1/h\omega C}$.

For $h=1$,

$$\frac{i_{C,1}}{i_1} = \frac{377 \cdot 0.625m}{377 \cdot 0.625m - 1/(377 \cdot 91.97 \cdot 10^{-6})} = -0.00824 \text{ pu},$$

$$\frac{i_{\text{sys},1}}{i_1} = \frac{-28.84}{0.2356 - 28.84} = 1.008 \text{ pu}.$$

For $h=13$,

$$\frac{i_{C,13}}{i_{13}} = \frac{13 \cdot 377 \cdot 0.625m}{13 \cdot 377 \cdot 0.625m - 1/(13 \cdot 377 \cdot 91.97 \cdot 10^{-6})} = 3.627 \text{ pu},$$

$$\frac{i_{\text{sys},13}}{i_{13}} = \frac{-2.219}{3.063 - 2.219} = -2.629 \text{ pu}.$$

The absolute values of $i_{C,h}/i_h$ and $i_{\text{sys},h}/i_h$ for $h=1-13$ are depicted in Fig. E6.4.2A and B, respectively, as a function of h with and without resistive damping (loss), which is the current amplification.

Taking the resistive components into account yields the following relations and values:
 $X_{\text{sys}} = 10R_{\text{sys}}$ or $R_{\text{sys}} = \omega L_{\text{sys}}/10 = (377 \cdot 0.625m)/10 = 0.02356\Omega$. For low-voltage capacitors

$$X_C/R_C = 4000 \text{ or } R_C = X_C/4000 = \frac{\left[\frac{1}{(377 \cdot 91.97 \cdot 10^{-6})} \right]}{(4000)} = 0.00721 \Omega.$$

The impedances are:

$$Z_{\text{sys}}^h = R_{\text{sys}} + jh\omega L_{\text{sys}} \quad \text{and} \quad Z_C^h = R_C + 1/jh\omega C,$$

$$Z^h = \frac{(R_{\text{sys}} + jh\omega L_{\text{sys}})[R_C + 1/jh\omega C]}{R_{\text{sys}} + jh\omega L_{\text{sys}} + R_C + 1/jh\omega C},$$

where R_{sys} and R_C are assumed to be independent of h .

For $h=1$,

$$Z^{h=1} = \frac{(0.02356 + j377 \cdot 0.625m)[0.00721 - j/(377 \cdot 91.97 \cdot 10^{-6})]}{0.02356 + j377 \cdot 0.625m + 0.00721 - j/(377 \cdot 91.97 \cdot 10^{-6})} = 0.2388 \angle 1.470 \text{ rad } \Omega.$$

For $h=13$,

$$Z^{h=13} = \frac{(0.02356 + j13 \cdot 377 \cdot 0.625m)[0.00721 - j/(13 \cdot 377 \cdot 91.97 \cdot 10^{-6})]}{0.02356 + j13 \cdot 377 \cdot 0.625m + 0.00721 - j/(13 \cdot 377 \cdot 91.97 \cdot 10^{-6})}$$

$$= 8.048 \angle -1.539 \text{ rad } \Omega.$$

The magnitudes $|Z^h| = Z_{\text{mag}}^h$ as a function of h are plotted in Fig. E6.4.1C for $h=1-13$ taking into account damping by resistances R_{sys} and R_C .

The ratio $i_{C,h}/i_h$ is taking into account damping $\frac{i_{C,h}}{i_h} = \frac{R_{\text{sys}} + jh\omega L_{\text{sys}}}{R_{\text{sys}} + jh\omega L_{\text{sys}} + R_C - j/h\omega C}$, correspondingly

$$\frac{i_{\text{sys},h}}{i_h} = \frac{R_C - j/h\omega C}{R_{\text{sys}} + jh\omega L_{\text{sys}} + R_C - j/h\omega C}.$$

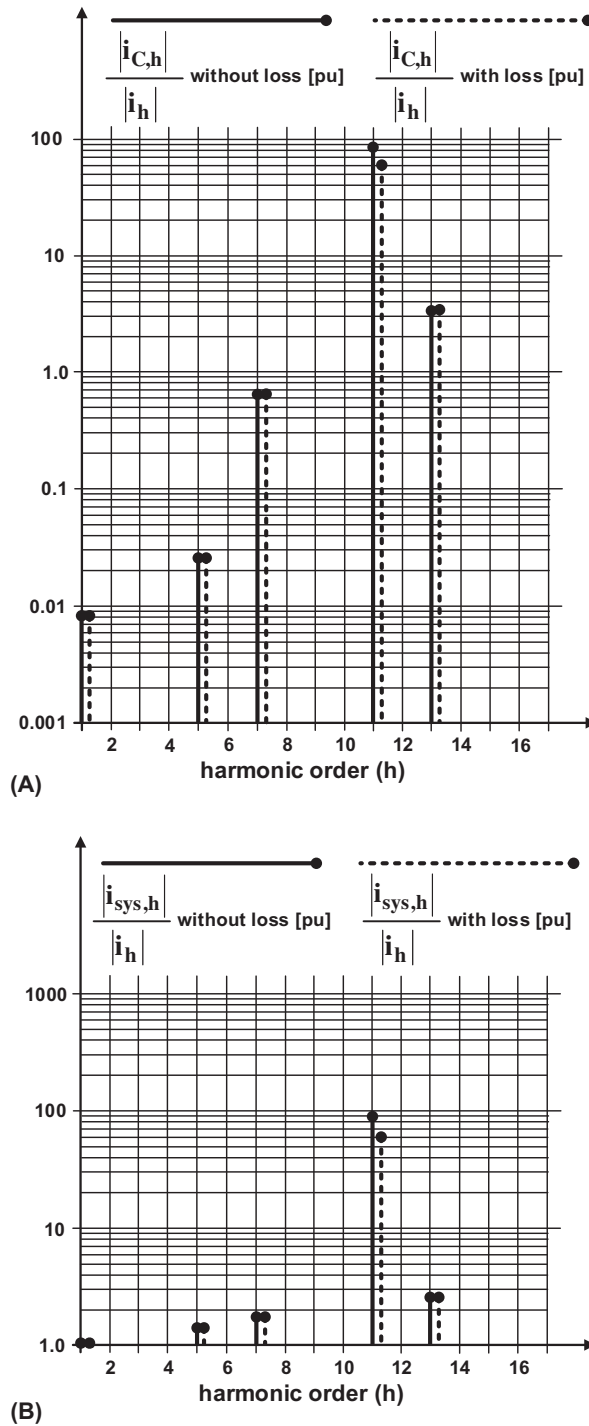


FIG. E6.4.2 The ratios (A) $\frac{|i_{C,h}|}{|i_h|}$ without loss [pu] and (B) $\frac{|i_{sys,h}|}{|i_h|}$ with loss [pu] for $h=1-13$ are depicted as a function of h without and with resistive damping (loss). Note that only at resonance the loss plays a significant role.

For $h=1$,

$$\frac{i_{C,1}}{i_1} = \frac{(0.02356 + j377 \cdot 0.625m)}{0.02356 + j377 \cdot 0.625m + 0.00721 - j/(377 \cdot 91.97 \cdot 10^{-6})} = 0.008279 \angle 3.091 \text{ rad pu.}$$

$$\frac{i_{\text{sys},1}}{i_1} = \frac{(0.00721 - j28.84)}{0.02356 + j377 \cdot 0.625m + 0.00721 - j/(377 \cdot 91.97 \cdot 10^{-6})} = 1.008 \angle -0.00128 \text{ rad pu.}$$

For $h=13$,

$$\begin{aligned} \frac{i_{C,13}}{i_{13}} &= \frac{(0.02356 + j13 \cdot 377 \cdot 0.625m)}{0.02356 + j13 \cdot 377 \cdot 0.625m + 0.00721 - j/(13 \cdot 377 \cdot 91.97 \cdot 10^{-6})} \\ &= 3.627 \angle 0.02864 \text{ rad pu.} \end{aligned}$$

$$\begin{aligned} \frac{i_{\text{sys},13}}{i_{13}} &= \frac{(0.00721 - j2.219)}{0.02356 + j13 \cdot 377 \cdot 0.625m + 0.00721 - j/(13 \cdot 377 \cdot 91.97 \cdot 10^{-6})} \\ &= 2.628 \angle -3.102 \text{ rad pu.} \end{aligned}$$

The absolute values of $i_{C,h}/i_h$ and $i_{\text{sys},h}/i_h$ for $h=1-13$ are depicted in Fig. E6.4.2A and B, respectively, as a function of h without and with resistive damping (loss).

6.4.5 Application Example 6.5: Series resonance caused by capacitors

An example of a series resonance system is demonstrated in Fig. E6.5.1A. The equivalent circuit (neglecting resistances) is shown in Fig. E6.5.1B. Find the resonance frequency of this circuit. Plot the frequency response of bus 1 equivalent impedance, and the current amplification across the tuning reactor. This circuit produces a low-frequency path for the 5th harmonic current. The absolute value of $Z = (R + j0.049) \text{ pu}$ is $|Z| = 0.049 \text{ pu}$ at $h=5$ is known, and the phase angle (crossing the zero axis at $h=5$) is not given.

Solution to Application Example 6.5: Series resonance caused by capacitors

The series resonance frequency is

$$h = \sqrt{\frac{X_C}{X_L}} = \sqrt{\frac{28.843}{1.154}} = 5. \quad (\text{E6.5.1})$$

With

$$h = \sqrt{\frac{X_C}{X_L}}, \quad X_L = 1.154 \, \Omega = \omega L = 377 \cdot L \quad \text{or} \quad L = 1.154/377 = 3.061 \text{ mH.}$$

$$\text{From } Q = V_{ph} I_{ph} = \frac{V_{ph}^2}{1/\omega C} = 0.6 \text{ MVar} \quad \text{or} \quad C = \frac{0.6 \cdot 10^6}{(4.16)^2 \cdot 10^6 \cdot 377} = 91.97 \, \mu\text{F} \text{ and}$$

$$X_C = 1/\omega C = \frac{1}{377 \cdot 91.97 \cdot 10^{-6}} = 28.84 \, \Omega; \quad \text{therefore,} \quad h = \sqrt{\frac{28.843}{1.154}} = 5.$$

$$\text{Based on } MVA_{sc} = V_{ph} I_{ph} = \frac{V_{ph}^2}{\sqrt{R_{\text{sys}}^2 + (\omega L_{\text{sys}})^2}}, \quad X_{\text{sys}}/R_{\text{sys}} = 10 \text{ or } R_{\text{sys}} = X_{\text{sys}}/10 = \omega L_{\text{sys}}/10,$$

$$MVA_{sc} = \frac{V_{ph}^2}{\sqrt{(\omega L_{sys}/10)^2 + (\omega L_{sys})^2}} = \frac{V_{ph}^2}{\omega L_{sys} \sqrt{(1/10)^2 + (1)^2}} = 72.6 \text{ MVA, or}$$

$$L_{sys} = \frac{(4.16)^2 10^6}{377 \cdot 1.005 \cdot 72.6 \cdot 10^6} = 0.6291 \text{ mH.}$$

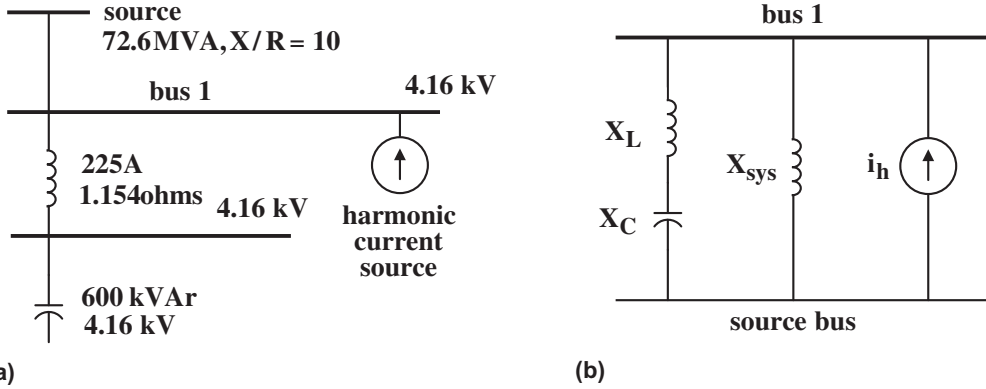


FIG. E6.5.1 (A) Example of single-line diagram for series resonance at bus 1 of power system and (B) equivalent circuit for series resonance-tuned filter. The harmonic-current source is a six-pulse converter.

Analysis without R_{sys} , R_L , and R_C :

Impedance of resonant circuit is $Z^h = j\omega L - j/(h\omega C)$; therefore:

$$Z^{h=1} = j377 \cdot 3.061m - \frac{j}{(377 \cdot 91.97\mu)} = -j27.69 \Omega,$$

$$Z^{h=4.6} = j4.6 \cdot 377 \cdot 3.061m - \frac{j}{(4.6 \cdot 377 \cdot 91.97\mu)} = -j0.9614 \Omega,$$

$$Z^{h=5} = j5 \cdot 377 \cdot 3.061m - \frac{j}{(5 \cdot 377 \cdot 91.97\mu)} = j0.00177 \Omega,$$

$$Z^{h=13} = j13 \cdot 377 \cdot 3.061m - \frac{j}{(13 \cdot 377 \cdot 91.97\mu)} = j12.78 \Omega.$$

Also, $Z_{parallel}^h = \frac{[j\omega L - j/(h\omega C)](j\omega L_{sys})}{j\omega L - \frac{j}{(h\omega C)} + j\omega L_{sys}}$; therefore

$$Z_{parallel}^{h=1} = j \frac{[377 \cdot 3.061m - 1/(377 \cdot 91.97\mu)](377 \cdot 0.6291m)}{377 \cdot 3.061m - \frac{1}{(377 \cdot 91.97\mu)} + 377 \cdot 0.6291m} = j0.2392 \Omega,$$

$$Z_{\text{parallel}}^{h=4.6} = j \frac{[4.6 \cdot 377 \cdot 3.061m - 1/(4.6 \cdot 377 \cdot 91.97\mu)](4.6 \cdot 377 \cdot 0.6291m)}{4.6 \cdot 377 \cdot 3.061m - \frac{1}{(4.6 \cdot 377 \cdot 91.97\mu)} + 4.6 \cdot 377 \cdot 0.6291m} = -j8.14 \Omega,$$

$$Z_{\text{parallel}}^{h=5} = j \frac{[5 \cdot 377 \cdot 3.061m - 1/(5 \cdot 377 \cdot 91.97\mu)](5 \cdot 377 \cdot 0.6291m)}{5 \cdot 377 \cdot 3.061m - \frac{1}{(5 \cdot 377 \cdot 91.97\mu)} + 5 \cdot 377 \cdot 0.6291m} = -j0.00199 \Omega,$$

$$Z_{\text{parallel}}^{h=13} = j \frac{[13 \cdot 377 \cdot 3.061m - 1/(13 \cdot 377 \cdot 91.97\mu)](13 \cdot 377 \cdot 0.6291m)}{13 \cdot 377 \cdot 3.061m - \frac{1}{(13 \cdot 377 \cdot 91.97\mu)} + 13 \cdot 377 \cdot 0.6291m} = j2.486 \Omega.$$

Fig. E6.5.2A illustrates the magnitude $Z_{\text{mag_without_loss}}^h$ of the parallel impedance $Z_{\text{parallel_without_loss}}^h$ for $h=1-13$ without loss. Note that this circuit also has a parallel resonance at $h=4.6$: this is the frequency at which the series-resonant circuit has a capacitive reactance equal in magnitude to the inductive reactance of the source.

Using $\frac{i_{\text{series}}^h}{i_h} = \frac{h\omega L_{\text{sys}}}{(h\omega L_{\text{sys}} + h\omega L - 1)/(h\omega C)}$ and $\frac{i_{\text{sys}}^h}{i_h} = \frac{[h\omega L - 1/(h\omega C)]}{[(h\omega L_{\text{sys}} + h\omega L - 1)/(h\omega C)]}$, one gets:

$$\frac{i_{\text{series}}^{h=1}}{i_1} = \frac{377 \cdot 0.6291m}{377 \cdot 0.6291m + 377 \cdot 3.061m - 1/(377 \cdot 91.97\mu)} = -0.008641 \text{ pu},$$

$$\frac{i_{\text{sys}}^{h=1}}{i_1} = \frac{[1.154 - 28.84]}{[-27.45]} = 1.009 \text{ pu}.$$

$$\frac{i_{\text{series}}^{h=4.6}}{i_{4.6}} = \frac{4.6 \cdot 377 \cdot 0.6291m}{4.6 \cdot 377 \cdot 0.6291m + 4.6 \cdot 377 \cdot 3.061m - 1/(4.6 \cdot 377 \cdot 91.97\mu)} = 8.445 \text{ pu},$$

$$\frac{i_{\text{sys}}^{h=4.6}}{i_{4.6}} = \frac{[5.308 - 6.27]}{[0.1292]} = -7.446 \text{ pu}.$$

$$\frac{i_{\text{series}}^{h=5}}{i_5} = \frac{5 \cdot 377 \cdot 0.6291m}{5 \cdot 377 \cdot 0.6291m + 5 \cdot 377 \cdot 3.061m - 1/(5 \cdot 377 \cdot 91.97\mu)} = 0.9985 \text{ pu},$$

$$\frac{i_{\text{sys}}^{h=5}}{i_5} = \frac{[5.77 - 5.768]}{[1.188]} = 0.001684 \text{ pu}.$$

$$\frac{i_{\text{series}}^{h=13}}{i_{13}} = \frac{13 \cdot 377 \cdot 0.6291m}{13 \cdot 377 \cdot 0.6291m + 13 \cdot 377 \cdot 3.061m - 1/(13 \cdot 377 \cdot 91.97\mu)} = 0.1943 \text{ pu},$$

$$\frac{i_{\text{sys}}^{h=13}}{i_{13}} = \frac{[15 - 2.219]}{[15.86]} = 0.8059 \text{ pu}.$$

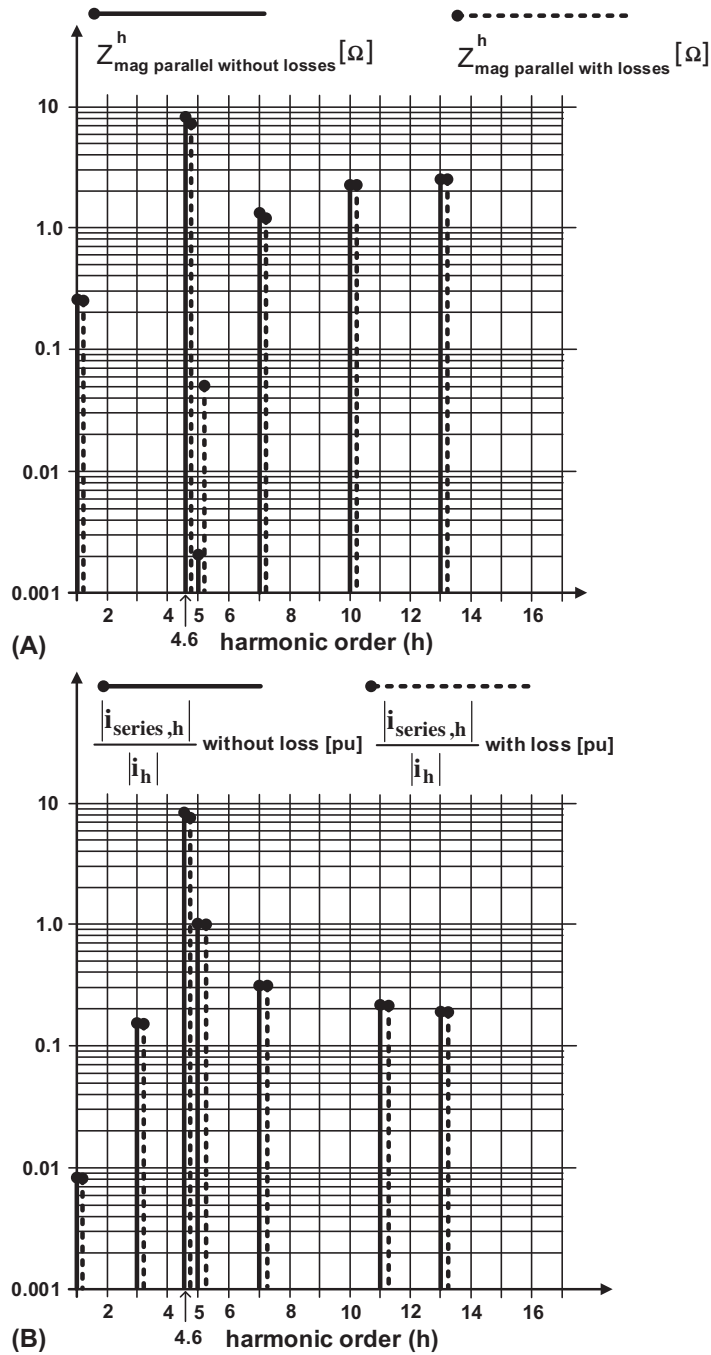


FIG. E6.5.2 (A) Magnitude of parallel impedance $Z_{mag_parallel}^h$ shown for $h=1-13$ with and without loss. Note that only at resonance the loss plays a significant role. (B) Series current $|i_{series,h}|/|i_h|$ for $h=1-13$ without and with loss.

Fig. E6.5.2B illustrates the series current $|i_{\text{series},h}|/|i_h|$ for $h=1-13$ without loss. Taking into account the resistances of the inductors and capacitors, one obtains: $R_{\text{sys}} = X_{\text{sys}}/10 = \omega L_{\text{sys}}/10 = 377 \cdot 0.6250\text{m}/10 = 0.02356 \Omega$.

$$X_L = 1.154 \Omega = \omega L, \quad \text{or} \quad L = 1.154/377 = 3.061 \text{ mH}.$$

$$R_C = X_C/4000 = \frac{\left[\frac{1}{(377 \cdot 91.97\mu)} \right]}{4000} = 0.00721 \Omega.$$

At $h=5$ the inductor-capacitor series connection has the impedance $Z_h = 0.049 \Omega$ or

$$Z^h = R_L + jh\omega L + R_C - j/h\omega C = 0.049 \Omega$$

resulting in $R_L = 0.049 - j5 \cdot 377 \cdot 3.061\text{m} - 0.00721 + j/(5 \cdot 377 \cdot 91.97\mu) = 0.049 - j5.77 \cdot 0.00721 + j5.77 = 0.04179 \Omega$.

Therefore:

$$\begin{aligned} Z^{h=1} &= 0.04179 + j377 \cdot 3.061\text{m} + 0.00721 - j/(377 \cdot 91.97\mu) = 0.049 - j27.69 \\ &= 27.69\angle -1.569 \text{ rad } \Omega, \end{aligned}$$

$$\begin{aligned} Z^{h=4.6} &= 0.04179 + j4.6 \cdot 377 \cdot 3.061\text{m} + 0.00721 - j/(4.6 \cdot 377 \cdot 91.97\mu) = 0.049 - j0.9618 \\ &= 0.9631\angle -1.520 \text{ rad } \Omega, \end{aligned}$$

$$\begin{aligned} Z^{h=5} &= 0.04179 + j5 \cdot 377 \cdot 3.061\text{m} + 0.00721 - j/(5 \cdot 377 \cdot 91.97\mu) = 0.049 + j0.002 \\ &= 0.049\angle 0.04079 \text{ rad } \Omega, \end{aligned}$$

$$\begin{aligned} Z^{h=13} &= 0.04179 + j13 \cdot 377 \cdot 3.061\text{m} + 0.00721 - j/(13 \cdot 377 \cdot 91.97\mu) = 0.049 + j12.78 \\ &= 12.78\angle 1.567 \text{ rad } \Omega. \end{aligned}$$

Also, $Z_{\text{parallel}}^h = \frac{[R_L + jh\omega L + R_C - j/(h\omega C)](R_{\text{sys}} + jh\omega L_{\text{sys}})}{\left[R_L + jh\omega L + R_C - \frac{j}{(h\omega C)} + R_{\text{sys}} + jh\omega L_{\text{sys}} \right]}$; therefore

$$\begin{aligned} Z_{\text{parallel}}^{h=1} &= \frac{[0.04179 + j377 \cdot 3.061\text{m} + 0.00721 - j/(377 \cdot 91.97\mu)](0.02356 + j377 \cdot 0.6250\text{m})}{0.04179 + j377 \cdot 3.061\text{m} + 0.00721 - \frac{j}{(377 \cdot 91.97\mu)} + 0.02356 + j377 \cdot 0.6250\text{m}} \\ &= 0.2389\angle 1.470 \text{ rad } \Omega, \end{aligned}$$

$$\begin{aligned} Z_{\text{parallel}}^{h=4.6} &= \frac{[0.04179 + j4.6 \cdot 377 \cdot 3.061\text{m} + 0.00721 - j/(4.6 \cdot 377 \cdot 91.97\mu)](0.02356 + j4.6 \cdot 377 \cdot 0.6250\text{m})}{0.04179 + j4.6 \cdot 377 \cdot 3.061\text{m} + 0.00721 - \frac{j}{(4.6 \cdot 377 \cdot 91.97\mu)} + 0.02356 + j4.6 \cdot 377 \cdot 0.6250\text{m}} \\ &= 7.355\angle -1.005 \text{ rad } \Omega, \end{aligned}$$

$$\begin{aligned} Z_{\text{parallel}}^{h=5} &= \frac{[0.04179 + j5 \cdot 377 \cdot 3.061\text{m} + 0.00721 - j/(5 \cdot 377 \cdot 91.97\mu)](0.02356 + j5 \cdot 377 \cdot 0.6250\text{m})}{0.04179 + j5 \cdot 377 \cdot 3.061\text{m} + 0.00721 - \frac{j}{(5 \cdot 377 \cdot 91.97\mu)} + 0.02356 + j5 \cdot 377 \cdot 0.6250\text{m}} \\ &= 0.04887\angle -6.201 \text{ rad } \Omega, \end{aligned}$$

$$\begin{aligned} Z_{\text{parallel}}^{h=13} &= \frac{[0.04179 + j13 \cdot 377 \cdot 3.061\text{m} + 0.00721 - j/(13 \cdot 377 \cdot 91.97\mu)](0.02356 + j13 \cdot 377 \cdot 0.6250\text{m})}{0.04179 + j13 \cdot 377 \cdot 3.061\text{m} + 0.00721 - \frac{j}{(13 \cdot 377 \cdot 91.97\mu)} + 0.02356 + j13 \cdot 377 \cdot 0.6250\text{m}} \\ &= 2.471\angle -4.719 \text{ rad } \Omega. \end{aligned}$$

Fig. E6.5.2A illustrates the parallel impedance $Z_{\text{mag_with_loss}}^h$ for $h=1-13$ with loss.

Using $\frac{i_{\text{series}}^h}{i_h} = \frac{[R_{\text{sys}} + jh\omega L_{\text{sys}}]}{[R_{\text{sys}} + jh\omega L_{\text{sys}} + R_L + jh\omega L + R_C - j/(h\omega C)]}$ and

$$\frac{i_{\text{sys}}^h}{i_h} = \frac{[R_L + jh\omega L + R_C - j/(h\omega C)]}{[R_{\text{sys}} + jh\omega L_{\text{sys}} + R_L + jh\omega L + R_C - j/(h\omega C)]}, \text{ one gets}$$

$$\frac{i_{\text{series}}^{h=1}}{i_1} = \frac{[0.02356 + j377 \cdot 0.625m]}{[0.02356 + j377 \cdot 0.625m + 0.04179 + j377 \cdot 3.061m + 0.00721 - j/(377 \cdot 91.97\mu)]}$$

$$= 0.008626 \angle 3.039 \text{ rad pu},$$

$$\frac{i_{\text{sys}}^{h=1}}{i_1} = \frac{[0.04179 + j1.154 + 0.00721 - j28.84]}{27.45 \angle -1.568} = 1.009 \angle -0.000847 \text{ rad pu}.$$

$$\frac{i_{\text{series}}^{h=4.6}}{i_{4.6}} = \frac{[0.02356 + j4.6 \cdot 377 \cdot 0.625m]}{[0.02356 + j4.6 \cdot 377 \cdot 0.625m + 0.04179 + j4.6 \cdot 377 \cdot 3.061m + 0.00721 - j/(4.6 \cdot 377 \cdot 91.97\mu)]}$$

$$= 7.639 \angle 0.5148 \text{ rad pu},$$

$$\frac{i_{\text{sys}}^{h=4.6}}{i_{4.6}} = \frac{[0.04179 + j5.308 + 0.00721 - j6.27]}{0.1419 \angle 1.034} = 6.788 \angle -2.553 \text{ rad pu},$$

$$\frac{i_{\text{series}}^{h=5}}{i_5} = \frac{[0.02356 + j5 \cdot 377 \cdot 0.625m]}{[0.02356 + j5 \cdot 377 \cdot 0.625m + 0.04179 + j5 \cdot 377 \cdot 3.061m + 0.00721 - j/(5 \cdot 377 \cdot 91.97\mu)]}$$

$$= 0.9978 \angle 0.04167 \text{ rad pu},$$

$$\frac{i_{\text{sys}}^{h=5}}{i_5} = \frac{[0.04179 + j5.77 + 0.00721 - j5.768]}{1.181 \angle 1.509} = 0.04152 \angle -1.468 \text{ rad pu},$$

$$\frac{i_{\text{series}}^{h=13}}{i_{13}} = \frac{[0.02356 + j13 \cdot 377 \cdot 0.625m]}{[0.02356 + j13 \cdot 377 \cdot 0.625m + 0.04179 + j13 \cdot 377 \cdot 3.061m + 0.00721 - j/(13 \cdot 377 \cdot 91.97\mu)]}$$

$$= 0.1934 \angle -0.00321 \text{ rad pu},$$

$$\frac{i_{\text{sys}}^{h=13}}{i_{13}} = \frac{[0.04179 + j15 + 0.00721 - j2.219]}{15.84 \angle 1.566} = 0.807 \angle 0.0009622 \text{ rad pu}.$$

Fig. E6.5.2B illustrates the series current $|i_{\text{series},h}|/|i_h|$ as a function of h with loss.

The plot of the current amplification through the series-resonant circuit is given in Fig. E6.5.2B, pertaining to the tuned point, $h=5$, and $I_{\text{pu}} = 0.9985-0.9978$ pu. The current amplification should be near unity at the tuned frequency. Note that this circuit also has a parallel resonance at $h=4.6$, where the amplification factor (AF) is $I_{\text{pu}} = 8.445-7.639$ pu. This is the frequency at which the series-resonant circuit has a capacitive reactance equal in magnitude to the inductive reactance of the source.

6.4.6 Application Example 6.6: Protecting capacitors by virtual harmonic resistors

Repeat Application Example 6.3 assuming a power converter is used to include a virtual harmonic resistor $R_{\text{vir}} = 0.5 \Omega$ in series with the capacitor.

Solution to Application Example 6.6: *Protecting capacitors by virtual harmonic resistors*

- i) The virtual resistor is only activated at harmonic frequencies; therefore, the 5th harmonic component of the injected current in the capacitor is

$$\begin{aligned}
 \tilde{I}_{C,5} &= \tilde{I}_{C,5}^{\text{due to NL}} + \tilde{I}_{C,5}^{\text{due to sys}}, \\
 \tilde{I}_{C,5}^{\text{due to NL}} &= \frac{Z_{\text{sys},5}}{Z_{\text{sys},5} + Z_{C,5} + R_{\text{vir}}} \tilde{I}_{NL,5} \\
 &= \frac{0.06 + j0.2074}{0.06 + j0.2074 - j0.408 + 0.5} \tilde{I}_{NL,5} \\
 &= \frac{0.06 + j0.2074}{0.56 - j0.2} \tilde{I}_{NL,5} = \frac{0.2159 \angle 73.87^\circ}{0.595 \angle -19.65^\circ} \tilde{I}_{NL,5} \\
 &= (0.363 \angle 93.52^\circ) \tilde{I}_{NL,5} \\
 &= (0.363 \angle 93.52^\circ) (\sqrt{2}(0.3) \angle 0^\circ) A \\
 &= \sqrt{2}(0.109) \angle 93.52^\circ A. \\
 \tilde{I}_{C,5}^{\text{due to sys}} &= \frac{\tilde{V}_{\text{sys},5}}{Z_{\text{sys},5} + Z_{C,5} + R_{\text{vir}}} = \frac{\tilde{V}_{\text{sys},5}}{0.595 \angle -19.65^\circ} = (1.68 \angle 19.65^\circ) \tilde{V}_{\text{sys},5} \\
 &= (1.68 \angle 19.65^\circ) [\sqrt{2}(3) \angle 0^\circ] A \\
 &= \sqrt{2}(5.4) \angle 19.65^\circ A. \\
 \Rightarrow \Rightarrow \tilde{I}_{C,5} &= \tilde{I}_{C,5}^{\text{due to NL}} + \tilde{I}_{C,5}^{\text{due to sys}} \\
 &= [\sqrt{2}(0.109) \angle 93.52^\circ] A + [\sqrt{2}(5.4) \angle 19.65^\circ] A \\
 &= \sqrt{2}(5.09 + j1.93) A = \sqrt{2}(5.44) \angle 20.77^\circ A. \tag{E6.6.1}
 \end{aligned}$$

Note that the magnitude of the 5th harmonic capacitor current is decreased by 64% (e.g., from $\sqrt{2} \cdot 15.1 A$, without the virtual resistor, to $\sqrt{2} \cdot 5.44 A$).

- ii) Similarly, the 7th harmonic component of the injected current in the capacitor is

$$\begin{aligned}
 \tilde{I}_{C,7} &= \tilde{I}_{C,7}^{\text{due to NL}} + \tilde{I}_{C,7}^{\text{due to sys}}, \\
 \tilde{I}_{C,7}^{\text{due to NL}} &= \frac{Z_{\text{sys},7}}{Z_{\text{sys},7} + Z_{C,7} + R_{\text{vir}}} \tilde{I}_{NL,7} \\
 &= \frac{0.06 + j0.29029}{0.06 - j0.0011 + 0.5} \tilde{I}_{NL,7} \\
 &= \frac{0.2964 \angle 78.32^\circ}{0.56 \angle -0.11^\circ} \tilde{I}_{NL,7} \\
 &= (0.53 \angle 78.43^\circ) \tilde{I}_{NL,7} \\
 &= (0.53 \angle 78.43^\circ) (\sqrt{2}(0.2) \angle 0^\circ) A \\
 &= \sqrt{2}(0.106) \angle 78.43^\circ A.
 \end{aligned}$$

$$\begin{aligned}
\tilde{I}_{C,7}^{\text{due to sys}} &= \frac{\tilde{V}_{\text{sys},7}}{Z_{\text{sys},7} + Z_{C,7} + R_{\text{vir}}} \\
&= \frac{\tilde{V}_{\text{sys},7}}{0.56\angle -0.11^\circ} = (1.79\angle 0.11^\circ) \tilde{V}_{\text{sys},7} \\
&= (1.79\angle 0.11^\circ) [\sqrt{2}(2)\angle 0^\circ] A \\
&= \sqrt{2}(3.58)\angle 0.11^\circ A. \\
\Rightarrow \Rightarrow \tilde{I}_{C,7} &= \tilde{I}_{C,7}^{\text{due to NL}} + \tilde{I}_{C,7}^{\text{due to sys}} \\
&= [\sqrt{2}(0.106)\angle 78.43^\circ] A + (\sqrt{2}(3.58)\angle 0.11^\circ) A \\
&= \sqrt{2}(3.60 + j0.11) A = \sqrt{2}(3.60)\angle 1.75^\circ A. \tag{E6.6.2}
\end{aligned}$$

Note that the magnitude of the 7th harmonic capacitor current is decreased by about 90% (e.g., from $\sqrt{2} \cdot 33.62$ A, without the virtual resistor, to $\sqrt{2} \cdot 3.60$ A).

- iii) The improved frequency responses of power capacitor current for virtual harmonic resistors of $R_{\text{vir}} = 0.5\Omega$ and 1Ω as a function of load harmonic current and utility harmonic voltage are shown in Fig. E6.6.1.

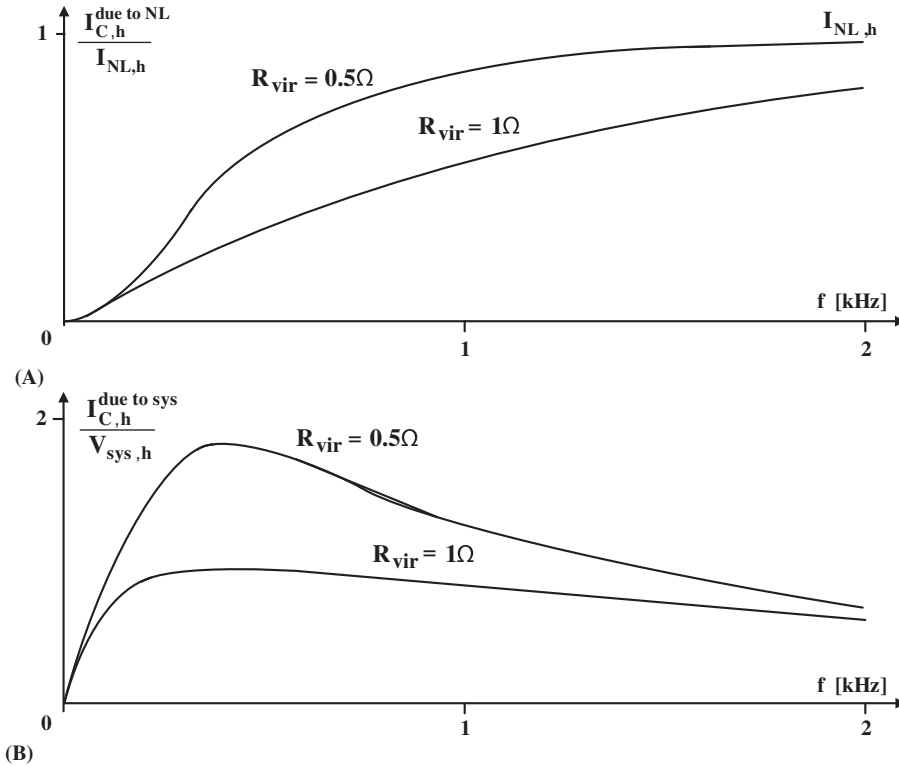


FIG. E6.6.1 Frequency response of capacitor bank as a function of (A) nonlinear load harmonic current and (B) utility harmonic voltage [2].

6.4.6.1 Suggested solutions to resonance problems

As demonstrated in the above examples, harmonic currents and voltages that resonate with power system impedance are usually amplified and result in grave power quality problems such as destruction of capacitors, saturation of electromagnetic devices, and high losses and reduced lifetimes of appliances. It is difficult to come up with a single remedy for all resonance problems, as they highly depend on system configuration and load conditions. Some recommendations are

- move resonance frequencies away from system harmonics;
- perform system analysis and harmonic simulations before installing new capacitor banks. Optimal placement and sizing of capacitor banks in the presence of harmonic sources and nonlinear loads are highly recommended for all newly installed capacitor banks;
- protect capacitors from harmonic destruction using damping circuits (e.g., passive or active resistors in series with the resonance circuit); and
- use a power converter to include a virtual harmonic resistor in series with the power capacitor [2]. The active resistor only operates at harmonic frequencies to protect the capacitor. To increase system efficiency, the harmonic real power absorption of the virtual resistor can be stored on the DC capacitor of the converter, converted into fundamental real power, and regenerated back to the utility system.

6.5 Frequency and capacitance scanning

Resonances occur when the magnitude of the system impedance is extreme. Parallel resonance occurs when inductive and capacitive elements are in shunt and the impedance magnitude is a maximum. For a series-resonant condition, inductive and capacitive elements are in series and the impedance magnitude is a minimum. Therefore, the search for a resonant condition at a bus amounts to searching for extremes of the magnitude of its driving-point impedance $Z(\omega)$. There are two basic techniques to determine these extremes and the corresponding (resonant) frequencies for power systems: frequency scan and capacitive scan.

6.5.1.1 Frequency scan

The procedures for analyzing power quality problems can be classified into those in the frequency domain and those in the time domain. Frequency-domain techniques are widely used for harmonic modeling and for formulations [9]. They are basically a reformulation of the fundamental load flow to include nonlinear loads and system response at harmonic frequencies.

Frequency scanning is the simplest and a commonly used approach for performing harmonic analysis, determining system resonance frequencies, and designing tuned filters. It is the computation (and plotting) of the driving-point impedance magnitude at a bus ($|Z(\omega)|$) for a range of frequencies and simply scanning the values for either a minimum or a maximum. One could also examine the phase of the driving-point impedance $\angle Z(\omega)$ and search for its zero crossings (e.g., where the impedance is purely resistive). The frequency characteristic of impedance is called a frequency scan and the resonance frequencies are those that cause minimum and/or maximum values of the magnitude of impedance.

6.5.1.2 Capacitance scan

In most power systems, the frequency is nominally fixed, but the capacitance (and/or the inductance) might change. Resonance conditions occur for values of C where the magnitude of impedance is either a minimum or a maximum. Therefore, instead of sweeping the frequency, the impedance is considered as a function of C , and the capacitance is swept over a wide range of values to determine the resonance points. This type of analysis is called a capacitance scan.

It is important to note that frequency and capacitance scanning of the driving-point impedance at a bus may not reveal all resonance problems of the system. The plot of $Z(\omega)$ vs ω will only illustrate resonant conditions related to the bus under consideration. It will not detect resonances related to capacitor banks placed at locations relatively remote from the bus under study since it is not usually possible to check the driving-point impedances of all buses.

It is recommended to perform scanning and to check driving-point impedances of buses near harmonic sources (e.g., six- and twelve-pulse converters and adjustable drives) and to examine the transfer impedances between the harmonic sources and a few nearby buses.

6.5.2 Application Example 6.7: Frequency and capacitance scanning [9]

Perform frequency and capacitance scans at bus 3 of the three-bus system shown in Fig. E6.7.1. The equivalent circuit of the external power system is represented as $j(0.99 \cdot h)$ at bus 1 (h is the order of harmonics). The nominal design value of the shunt capacitor at bus 3 is $0.001/\omega_0$ farads and its reactance at harmonic h is $(-1000/h)$.


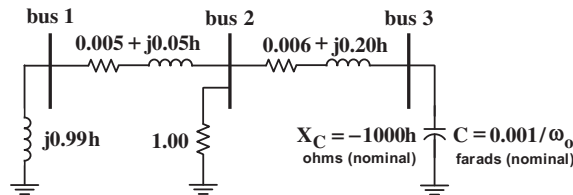



FIG. E6.7.1 The three-bus example system [9].

Solution to Application Example 6.7: Frequency and capacitance scanning [9]

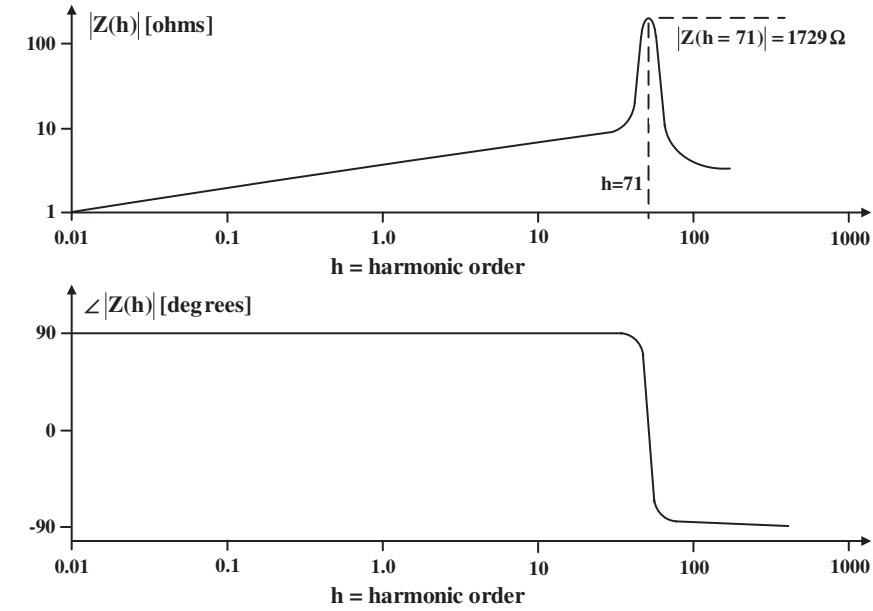The frequency scan can be done by calculating and inverting the admittance matrix of the network. Magnitude and phase angle plots of the driving-point impedance at bus 3 (Fig. E6.7.2A) indicate a resonance at the 71st harmonic, where the magnitude rises to about 1729Ω . This is also evident from the zero crossing of the phase plot. A capacitance scan is performed in a similar manner by computing the driving-point impedance at bus 3 for different capacitance values of the capacitor. The result is shown in Fig. E6.7.2B for several values of h . Note that resonances at the 5th and the 7th harmonics occur for a capacitance in the range of $0.1/\omega_0$ farad. These resonances should be avoided in the presence of six-pulse rectifiers.



(A)

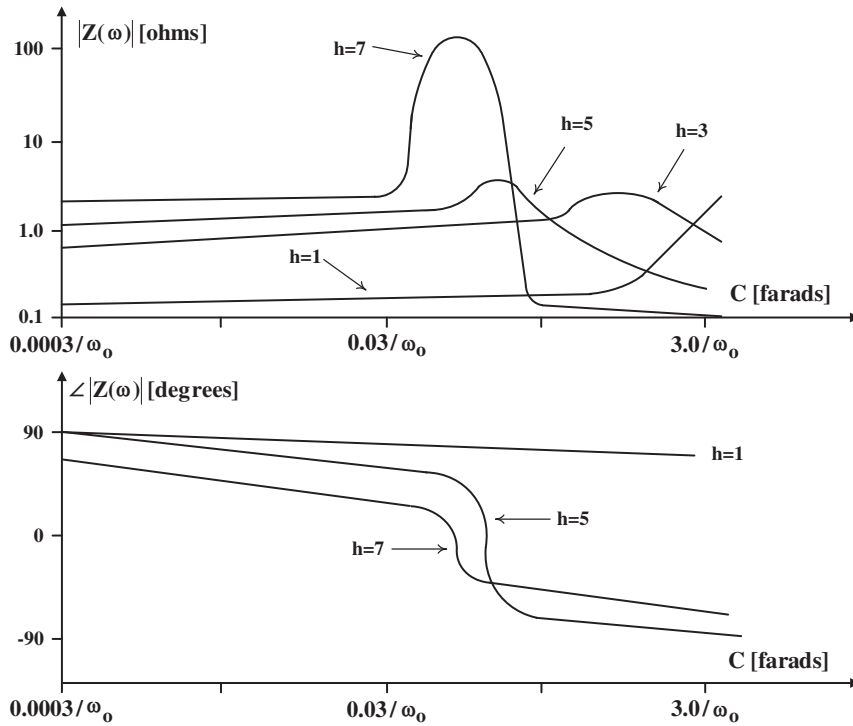

(B)

FIG. E6.7.2 Simulation results for the three bus system of Fig. E6.7.1: (A) frequency scan as seen at bus 3 and (B) capacitance scan for impedance at bus 3 [9].

6.6 Harmonic constraints for capacitors

Nonlinear loads and power electronic-based switching equipment are being extensively used in modern power systems. These have nonlinear input characteristics and emit high harmonic currents, which may result in waveform distortion, resonance problems, and amplification of voltage and current harmonics of power capacitors. Therefore, the installation of any capacitor at the design and/or operating stages should also include harmonic and power quality analyses. Some techniques have been proposed for solving harmonic problems of capacitors. Most approaches disconnect capacitor banks when their current harmonics are high. Other techniques include harmonic filters, blocking devices, and active protection circuits. These approaches use the total harmonic distortion of capacitor voltage (THD_v) and current (THD_i) as a measure of distortion level and require harmonic voltage, current, and reactive power constraints for the safe operation of capacitor banks.

The reactive power of a capacitor is given by its capacitance C , the rms terminal voltage V_{rms} , and the line frequency f . This reactive power is valid for sinusoidal operating conditions with rated rms terminal voltage $V_{\text{rms_rat}}$ and rated line frequency f_{rat} . If the terminal voltage and the line frequency deviate from their rated values, that is, if the capacitor contains voltage and current harmonics (V_h and I_h for $h = 2, 3, 4, 5, \dots$), then appropriate constraints for voltage V_{rms} , current I_{rms} , and reactive power Q must be satisfied, as indicated by IEEE [10], IEC, and European (e.g., [11,12]) standards. These constraints are examined in the following sections.

6.6.1 Harmonic voltage constraint for capacitors

Assume harmonic voltages (Eq. 6.3a) across the terminals of a capacitor. In the following relations V_{rms} is the terminal voltage, h is the harmonic order of the voltage, current, and reactive power: $h = 3^a, 5, 7, 9^a, 11, 13, 15^a, 17, \dots$. We have

$$V_{\text{rms}}^2 = V_1^2 + \sum_{h=2}^{\infty} V_h^2, \quad (6.9a)$$

or

$$V_{\text{rms}} = \sqrt{V_1^2 + \sum_{h=2}^{\infty} V_h^2}. \quad (6.9b)$$

Normalized to $V_{\text{rms_rat}}$,

$$\frac{V_{\text{rms}}}{V_{\text{rms_rat}}} = \sqrt{\left(V_1^2 + \sum_{h=2}^{\infty} V_h^2\right) / V_{\text{rms_rat}}^2} \leq 1.10 \text{ or } 1.15.^b \quad (6.9c)$$

^aThe triplen harmonics (which in most cases are of the zero-sequence type) are neglected for three-phase capacitor banks—these harmonics might not be zero but are usually very small. Note that not all triplen harmonics are necessarily of the zero-sequence type. All even harmonics are usually small in three- or single-phase power systems, and therefore they are neglected.

^bThe value of 1.15 for voltages and the value of 1.45 for reactive power are acceptable if the harmonic load is limited to 6 hours during a 24-hour period at a maximum ambient temperature of $T_{\text{amb}} = 35^\circ\text{C}$ [13].

6.6.2 Harmonic current constraint for capacitors

Assume harmonic currents (Eq. 6.3b) through the terminals of a capacitor, where I_{rms} is the total current:

$$I_{\text{rms}}^2 = I_1^2 + I_2^2 + I_3^2 + \dots \quad (6.10a)$$

For sinusoidal current components $I_1, I_2, I_3, \dots$, one obtains with $\omega_1 = 2\pi f_1$

$$I_{\text{rms}}^2 = (\omega_1 C V_1)^2 + (2\omega_1 C V_2)^2 + (3\omega_1 C V_3)^2 + \dots, \quad (6.10b)$$

or

$$I_{\text{rms}}^2 = \omega_1^2 C^2 (V_1^2 + 4V_2^2 + 9V_3^2 + \dots), \quad V_1^2 = V_{\text{rms}}^2 - V_2^2 - V_3^2 - \dots$$

$$I_{\text{rms}}^2 = \omega_1^2 C^2 (V_{\text{rms}}^2 + 3V_2^2 + 8V_3^2 + \dots),$$

or

$$I_{\text{rms}}^2 = \omega_1^2 C^2 \left[V_{\text{rms}}^2 + \sum_{h=2}^{\infty} (h^2 - 1) V_h^2 \right], \quad (6.10c)$$

$$I_{\text{rms}}^2 = \omega_1^2 C^2 V_{\text{rms}}^2 \left[1 + \sum_{h=2}^{\infty} (h^2 - 1) \left(\frac{V_h}{V_{\text{rms}}} \right)^2 \right]. \quad (6.10d)$$

With $I_{\text{rms_rat}} = \omega_{\text{rat}} \cdot C \cdot V_{\text{rms_rat}}$ one can write ($\omega_{\text{rat}} = 2\pi f_{\text{rat}}$)

$$\frac{I_{\text{rms}}}{I_{\text{rms_rat}}} = \frac{f_1}{f_{\text{rat}}} \cdot \frac{V_{\text{rms}}}{V_{\text{rms_rat}}} \sqrt{1 + \sum_{h=2}^{\infty} (h^2 - 1) \left[\frac{V_h}{V_{\text{rms}}} \right]^2} \leq 1.5 \text{ or } 1.8.^c \quad (6.10e)$$

6.6.3 Harmonic reactive-power constraint for capacitors

In the presence of both voltage and current harmonics, the reactive power will also contain harmonics (Eq. 6.4b):

$$\begin{aligned} Q &= Q_1 + Q_2 + Q_3 + \dots = I_1 V_1 + I_2 V_2 + I_3 V_3 + \dots = \omega_1 C V_1^2 + 2\omega_1 C V_2^2 + 3\omega_1 C V_3^2 + \dots \\ &= \omega_1 C [(V_{\text{rms}}^2 - V_2^2 - V_3^2 - \dots) + 2V_2^2 + 3V_3^2 + \dots] = \omega_1 C [V_{\text{rms}}^2 + V_2^2 + 2V_3^2 + \dots] \\ &= \omega_1 C \left[V_{\text{rms}}^2 + \sum_{h=2}^{\infty} (h-1) V_h^2 \right] \end{aligned} \quad (6.11a)$$

and with $Q_{\text{rat}} = \omega_{\text{rat}} C V_{\text{rms_rat}}^2$ one obtains

$$\frac{Q}{Q_{\text{rat}}} = \frac{f_1}{f_{\text{rat}}} \cdot \frac{V_{\text{rms}}^2}{V_{\text{rms_rat}}^2} \left[1 + \sum_{h=2}^{\infty} (h-1) \left[\frac{V_h}{V_{\text{rms}}} \right]^2 \right] \leq 1.35 \text{ or } 1.45.^b \quad (6.11b)$$

^cThe value 1.8 for harmonic currents is permissible if it is explicitly stated on the nameplate of the capacitor [13].

6.6.4 Permissible operating region for capacitors in the presence of harmonics

The safe operating region for capacitors in a harmonic environment can be obtained by plotting of the corresponding constraints for voltage, current, and reactive power.

6.6.4.1 Safe operating region for the capacitor voltage

$$\frac{V_{\text{rms}}}{V_{\text{rms_rat}}} = \frac{\sqrt{V_1^2 + \sum_{h=2}^{\infty} V_h^2}}{V_{\text{rms_rat}}} \leq 1.10 \text{ or } 1.15,^b \quad (6.12a)$$

or^c

$$\frac{V_1}{V_{\text{rms_rat}}} \sqrt{1 + \left(\frac{\sum_{h=2}^{\infty} V_h^2}{V_1^2} \right)} = 1.10 \text{ or } 1.15,^b \quad (6.12b)$$

with $V_1 \approx V_{\text{rms}} = V_{\text{rms_rat}}$ and relying on the lower limit in Eq. (6.12b) (e.g., 1.10) one obtains

$$\sum_{h=2}^{\infty} \left(\frac{V_h^2}{V_{\text{rms}}^2} \right) = (1.1)^2 - 1 = 0.21, \quad (6.12c)$$

or the voltage constraint becomes

$$\sum_{h=2}^{\infty} \frac{V_h}{V_{\text{rms}}} = 0.458, \quad (6.12d)$$

which is independent of the harmonic order h .

6.6.4.2 Safe operating region for the capacitor current

$$\frac{I_{\text{rms}}}{I_{\text{rms_rat}}} = \frac{f_1}{f_{\text{rat}}} \cdot \frac{V_{\text{rms}}}{V_{\text{rms_rat}}} \sqrt{1 + \sum_{h=2}^{\infty} (h^2 - 1) \left[\frac{V_h}{V_{\text{rms}}} \right]^2}, \quad (6.13a)$$

for $f_1 = f_{\text{rat}}$ and $V_{\text{rms}} = V_{\text{rms_rat}}$. Relying on the lower limit in Eq. (6.13a) (e.g., 1.5 of Eq. 6.10e), one obtains

$$(1.5)^2 - 1 = \sum_{h=2}^{\infty} (h^2 - 1) \left[\frac{V_h}{V_{\text{rms}}} \right]^2, \quad (6.13b)$$

or

$$\sum_{h=2}^{\infty} \left(\frac{V_h}{V_{\text{rms}}} \right) = \sqrt{\frac{1.25}{(h^2 - 1)}}, \quad (6.13c)$$

which is a hyperbola.

6.6.4.3 Safe operating region for the capacitor reactive power

$$\frac{Q}{Q_{\text{rated}}} = \frac{f_1}{f_{\text{rated}}} \cdot \frac{V_{\text{rms}}^2}{V_{\text{rms_rated}}^2} \left\{ 1 + \sum_{h=2}^{\infty} (h-1) \left[\frac{V_h}{V_{\text{rms}}} \right]^2 \right\} \leq 1.35 \text{ or } 1.45.^b \quad (6.14a)$$

for $f_1 = f_{\text{rated}}$ and $V_{\text{rms}} = V_{\text{rms_rated}}$. Relying on the lower limit in Eq. (6.14a) (e.g., 1.35), one obtains

$$\sum_{h=2}^{\infty} \left(\frac{V_h}{V_{\text{rms}}} \right) = \sqrt{\frac{0.35}{(h-1)}}, \quad (6.14b)$$

which is also a hyperbola.

If the above listed limits are exceeded for a capacitor with the rated voltage $V_{\text{rms_rat1}}$ then one has to select a capacitor with a higher rated voltage $V_{\text{rms_rat2}}$ and a higher rated reactive power satisfying the relation

$$Q_{\text{rat2}} = Q_{\text{rat1}} \left(\frac{V_{\text{rms_rat2}}}{V_{\text{rms_rat1}}} \right)^2. \quad (6.15)$$

Note all triplen and all even harmonics are small in three-phase power systems. However, triplen harmonics can be dominant in single-phase systems.

6.6.4.4 Feasible operating region for the capacitor reactive power

Based on Eqs. (6.12d), (6.13c), and (6.14b), the safe operating region for capacitors in the presence of voltage and current harmonics is shown in Fig. 6.4.

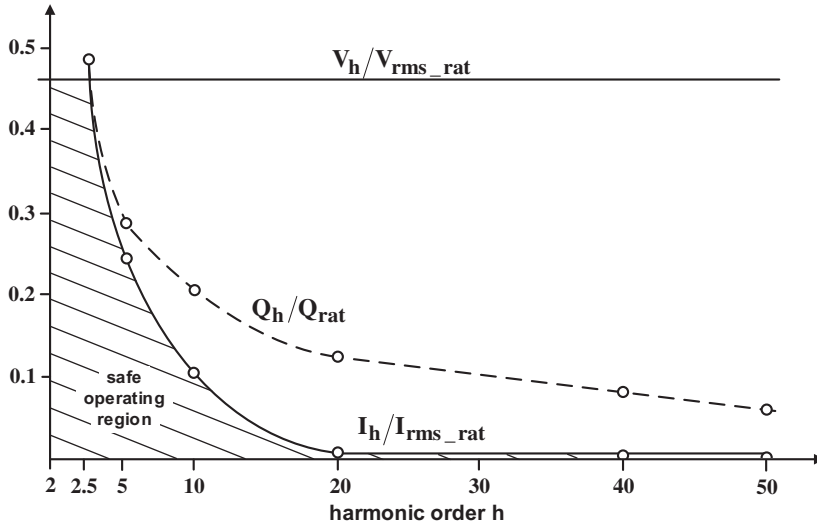


FIG. 6.4 Feasible operating region of capacitors with voltage, current, and reactive power harmonics (only one harmonic is present at any time).

6.6.5 Application Example 6.8: Harmonic limits for capacitors when used in a three-phase system

The reactance of a capacitor decreases with frequency, and therefore the capacitor acts as a sink for higher harmonic currents. The effect is to increase the heating and dielectric stresses. ANSI/IEEE [10], IEC, and European (e.g., [11–13]) standards list limits for voltage, currents, and reactive power of capacitor banks. These limits can be used to determine the maximum allowable harmonic levels. The result of the increased heating and voltage stress brought about by harmonics is a shortened capacitor life due to premature aging.

The following constraints must be satisfied:

$$\frac{V_{\text{rms}}}{V_{\text{rms_rated}}} = \sqrt{\left(V_1^2 + \sum_{h=2}^{h_{\text{max}}} V_h^2\right) / V_{\text{rms_rated}}^2} \leq 1.10, \quad (\text{E6.8.1})$$

$$\frac{I_{\text{rms}}}{I_{\text{rms_rated}}} = \frac{f_1}{f_{\text{rated}}} \cdot \frac{V_{\text{rms}}}{V_{\text{rms_rated}}} \sqrt{1 + \sum_{h=2}^{h_{\text{max}}} (h^2 - 1) \left[\frac{V_h}{V_{\text{rms}}}\right]^2} \leq 1.3, \quad (\text{E6.8.2})$$

$$\frac{Q}{Q_{\text{rated}}} = \frac{f_1}{f_{\text{rated}}} \cdot \frac{V_{\text{rms}}^2}{V_{\text{rms_rated}}^2} \left\{ 1 + \sum_{h=2}^{h_{\text{max}}} (h - 1) \left[\frac{V_h}{V_{\text{rms}}}\right]^2 \right\} \leq 1.35, \quad (\text{E6.8.3})$$

where $V_{\text{rms_rated}}$ is the rated terminal voltage, V_{rms} is the applied effective (rms) terminal voltage, f_1 is the line frequency, and V_1 is the fundamental (rms) voltage.

Plot for $V_1 = V_{\text{rms}} = V_{\text{rms_rated}}$ and $f_1 = f_{\text{rated}}$ the loci for $V_h/V_{\text{rms_rated}}$, where $(V_{\text{rms}}/V_{\text{rms_rated}}) = 1.10$, $(I_{\text{rms}}/I_{\text{rms_rated}}) = 1.3$, and $(Q/Q_{\text{rated}}) = 1.35$, as a function of the harmonic order h for $5 \leq h \leq 49$ (only one harmonic is present at any time within a three-phase system).

Solution to Application Example 6.8: *Harmonic limits for capacitors when used in a three-phase system*

The feasible operating region is shown in Fig. E6.8.1.

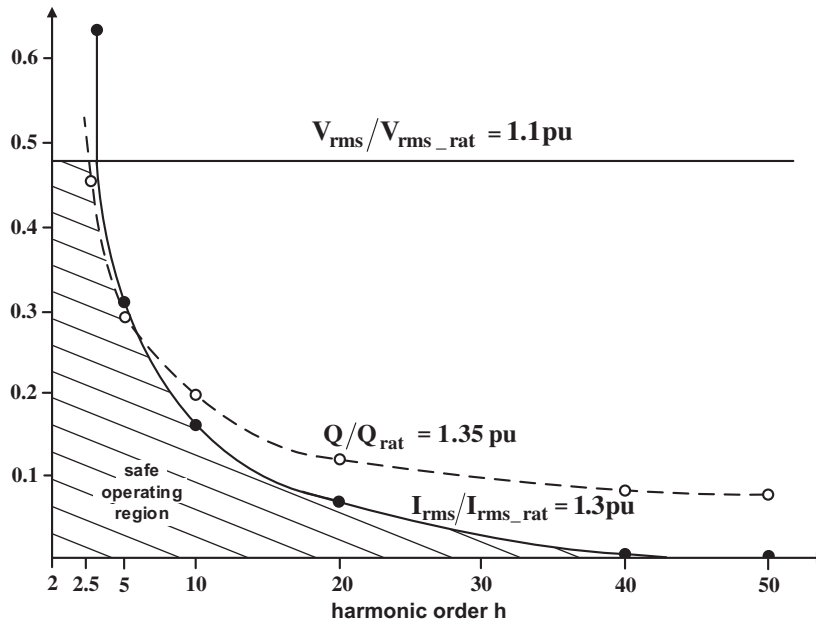


FIG. E6.8.1 Feasible operating region of capacitors with voltage, current, and reactive power harmonics (only one harmonic is present at any time).

6.7 Equivalent circuits of capacitors

The impedance of a capacitor with conduction and dielectric losses can be represented by the two equivalent circuits of Fig. 6.5A (representing a parallel connection of capacitance C and conductance G_p) and Fig. 6.5B (representing a series connection of capacitance C and resistance R_s). The phasor diagrams for the admittance ($G_p + j\omega C$) and the impedance ($R_s - j/\omega C$) are depicted in Fig. 6.6A and B.

The loss factor $\tan\delta$ or the dissipation factor $DF = \tan\delta$ —which is frequency dependent—is defined for the parallel connection

$$\tan\delta = \frac{G_p}{\omega C}, \quad (6.16)$$

and for the series connection

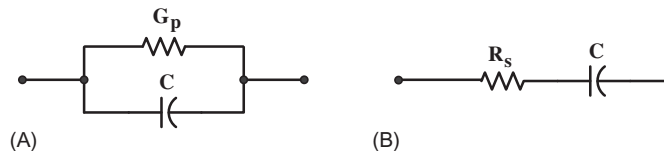


FIG. 6.5 Equivalent circuits of a capacitor with losses: (A) parallel connection and (B) series connection.

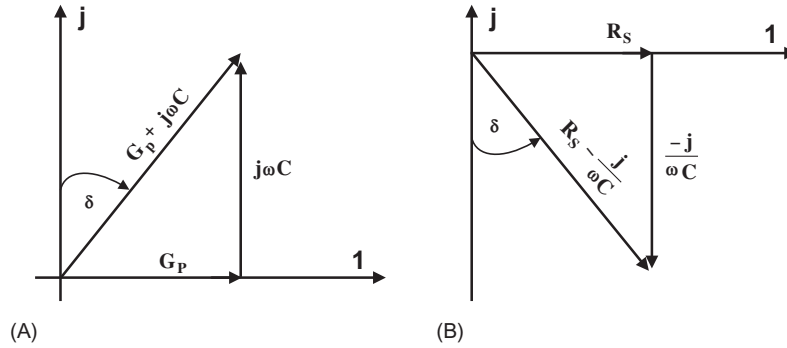


FIG. 6.6 Phasor diagrams for admittance $G_p + j\omega C$ and impedance $R_s - (j/\omega C)$: (A) parallel connection and (B) series connection.

$$\tan \delta = R_s \omega C. \quad (6.17)$$

Most AC capacitors have two types of losses:

- conduction loss caused by the flow of the actual charge through the dielectric and
- dielectric loss due to the movement or rotation of the atoms or molecules of the dielectric in an alternating electric field.

The two equivalent circuits can be combined and expanded to the single equivalent circuit of Fig. 6.7, where $L_s = ESL$ = equivalent series inductance, $R_s = ESR$ = equivalent series resistance, and $R_p = EPR$ = equivalent parallel resistance. For most power system applications such a detailed equivalent circuit is not required. This circuit indicates that every capacitor has a self-resonant frequency, above which it becomes an inductor. R_s is readily measured by applying this frequency to a capacitor, measuring voltage and current, and calculating their ratio. The resistance R_p will always be much larger than the capacitive reactance at the resonant frequency and therefore this parallel resistance can be neglected at this resonant frequency.

The presence of voltage distortion increases the dielectric loss of capacitors; the total loss is for the frequency-dependent loss factor $\tan \delta_h = R_{sh} \omega_h C$ at $h_{\max}$ harmonic voltages:

$$P_{C_total} = \sum_{h=1}^{h=h_{\max}} C \cdot (\tan \delta_h) \omega_h V_h^2, \quad (6.18)$$

where $\omega_h = 2 \cdot \pi \cdot f_h$ and V_h is the rms voltage of the h th harmonic. For capacitors used for low-frequency applications the relation becomes

$$P_{C_total} \approx \sum_{h=1}^{h=h_{\max}} C^2 \cdot R_{sh} \cdot \omega_h^2 \cdot V_h^2. \quad (6.19)$$

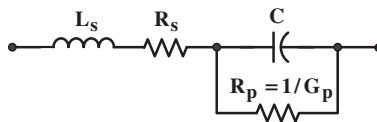


FIG. 6.7 Detailed equivalent circuit for a capacitor.

For 60 Hz applications inexpensive AC capacitors can be used, whereas for power electronics applications and filters low-loss (e.g., ceramic or polypropylene) capacitors must be relied on.

6.7.1 Application Example 6.9: Harmonic losses of capacitors

For a capacitor with $C = 100 \mu\text{F}$, $V_{\text{rat}} = 460 \text{ V}$, $R_{s1} = 0.01 \Omega$ (where R_{s1} is the series resistance of the capacitor at fundamental ($h = 1$) frequency of $f_{\text{rat}} = 60 \text{ Hz}$), compute the total harmonic losses for the harmonic spectra of Table E6.9.1 (up to and including the 19th harmonic) for the following conditions:

- a) R_{sh} is constant, that is, $R_{sh} = R_{s1} = 0.01 \Omega$.
- b) R_{sh} is proportional to frequency, that is, $R_{sh} = R_{s1}(f/f_{\text{rat}}) = 0.01 h \Omega$.
- c) R_{sh} is proportional to the square of frequency, $R_{sh} = R_{s1}(f/f_{\text{rat}})^2 = 0.01 h^2 \Omega$.

TABLE E6.9.1 Possible voltage spectra and associated capacitor losses.

h	$\left(\frac{V_h}{V_{60 \text{ Hz}}}\right)_{1\phi}$ (%)	P_h for part a (mW)	P_h for part b (mW)	P_h for part c (mW)	$\left(\frac{V_h}{V_{60 \text{ Hz}}}\right)_{3\phi}$ (%)	P_h for part a (mW)	P_h for part b (mW)	P_h for part c (mW)
1	100	3005	3005	3005	100	3005	3005	3005
2	0.5	0.3	0.6	1.2	0.5	0.3	0.6	1.2
3	4.0	40	120	360	2.0 ^a	10.8	32.4	97.2
4	0.3	0.4	1.6	6.4	0.5	1.2	4.8	19.2
5	3.0	67.7	339	1695	5.0	188	940	4700
6	0.2	0.43	2.6	15.6	0.2	0.43	2.6	15.6
7	2.0	58.9	412	2880	3.5	181	1267	8869
8	0.2	0.77	6.16	49.3	0.2	0.77	6.16	49.3
9	1.0	24.4	220	1980	0.3	2.19	19.71	177.4
10	0.1	0.3	3	30	0.1	0.3	3	30
11	1.5	81.9	900	9900	1.5	81.9	900	9900
12	0.1	0.433	5.2	62.4	0.1	0.433	5.2	62.4
13	1.5	114	1480	19240	1.0	114	1482	19270
14	0.1	0.59	8.26	115.6	0.05	0.15	2.58	28.81
15	0.5	16.9	254	3810	0.1	0.68	10.2	153.0
16	0.05	0.192	3.07	49.1	0.05	0.192	3.07	49.1
17	1.0	87	1480	25140	0.5	22	374	6358
18	0.05	0.244	4.4	79.2	0.01	0.0097	0.175	3.143
19	1.0	109	2070	39200	0.5	27.1	513	9750

^a Under certain conditions (e.g., DC bias of transformers as discussed in Chapter 2, and the harmonic generation of synchronous generators as outlined in Chapter 4) triplen harmonics are not of the zero-sequence type and can therefore exist in a three-phase system. All higher voltage harmonics < 0.5%.

Solution to Application Example 6.9: Harmonic losses of capacitors

Single-phase system. The application of Eq. (6.19) for $h = 1$ yields the fundamental loss for the single-phase system at $R_{s1} = 0.01 \Omega$,

$$P_1 = (100 \cdot 10^{-6})^2 (0.01) [(377)(1)]^2 (460)^2 = 3005 \text{ mW.}$$

For $h = h_{\max} = 19$, Eq. (6.19) results for the single-phase system and $R_{s1} = 0.01 \Omega$ in the loss $P_{19} = (100 \cdot 10^{-6})^2 (0.01) [(377)(19)]^2 (4.6)^2 = 109 \text{ mW.}$

- The total harmonic losses including the fundamental loss is for the single-phase system at $R_{sh} = 0.01 \Omega$, $P_{\text{total_single-phase}} = 3.608 \text{ W.}$
- The total harmonic losses including the fundamental loss is for the single-phase system at $R_{sh} = 0.01 h \Omega$, $P_{\text{total_single-phase}} = 10.035 \text{ W.}$
- The total harmonic losses including the fundamental loss is for the single-phase system at $R_{sh} = 0.01 h^2 \Omega$, $P_{\text{total_single-phase}} = 107.62 \text{ W.}$

Fundamental and harmonic losses for the single-phase system are listed in columns 3–5 of Table E6.9.1.

Three-phase system. The application of Eq. (6.19) for $h = 1$ yields the fundamental loss for the three-phase system provided the capacitor bank is in Δ -connection at $R_{s1} = 0.01 \Omega$,

$$P_1 = (100 \cdot 10^{-6})^2 (0.01) [(377)(1)]^2 (460)^2 = 3005 \text{ mW.}$$

For $h = h_{\max} = 19$ Eq. (6.19) results for the three-phase system at $R_{s1} = 0.01 \Omega$, $P_{19} = (100 \cdot 10^{-6})^2 (0.01) [(377)(19)]^2 (2.3)^2 = 27.1 \text{ mW.}$

- The total harmonic losses including the fundamental loss is for the three-phase system at

$$R_{sh} = 0.01 \Omega, P_{\text{total_three-phase}} = 3.636 \text{ W.}$$

- The total harmonic losses including the fundamental loss is for the three-phase system at

$$R_{sh} = 0.01(h) \Omega, P_{\text{total_three-phase}} = 8.571 \text{ W.}$$

- The total harmonic losses including the fundamental loss is for the three-phase system at

$$R_{sh} = 0.01(h^2) \Omega, P_{\text{total_three-phase}} = 62.54 \text{ W.}$$

Fundamental and harmonic losses for the three-phase system are listed in columns 7–9 of Table E6.9.1.

Conclusion. The results of this application example stress that the harmonic losses of capacitors are indeed one of the reasons why the higher order harmonic voltage amplitudes must be limited as recommended in Table E6.9.1.

6.8 Summary

Capacitors are important components within a power system: they are indispensable for voltage control, power-factor correction, and the design of filters. Their deployment may cause problems associated with capacitor switching and series resonance. Capacitor failures

are induced by too large voltage, current, and reactive power harmonics. In most cases, triplen (multiples of 3) and even harmonics do not exist in a three-phase system. However, there are conditions where triplen harmonics are not of the zero-sequence type and they can occur within three-phase systems. Triplen harmonics are mostly dominant in single-phase systems, whereas even harmonics are mostly negligibly small within single- and three-phase systems. In this chapter, the difference between displacement power factor (DPF)—pertaining to fundamental quantities only—and the concept of the total power factor (TPF)—pertaining to fundamental and harmonic quantities—is explained. For the special case when there are no harmonics present these two factors will be identical; otherwise, the TPF is always smaller than the DPF. The TPF concept is related to the distortion power D and the DPF and TPF must be in power systems of the lagging type if consumer notation for the current is assumed. Leading power factors tend to cause oscillations and instabilities within power systems.

The losses of capacitors can be characterized by the loss factor or dissipation factor (DF) $\tan\delta$, which is a function of the harmonic frequency. AC capacitor losses are computed for possible single- and three-phase voltage spectra.

6.9 Problems


Problem 6.1: Calculation of displacement power factor (DPF) and its correction

A $V_{L-L} = 460\text{ V}$, $f = 60\text{ Hz}$, $p = 6$ pole, $n_m = 1180\text{ rpm}$, Y-connected squirrel-cage induction motor has the following parameters per phase referred to the stator:

$$R_s = 0.19\ \Omega, \quad X_s = 0.75\ \Omega, \quad X_m = 20\ \Omega, \quad R'_r = 0.070\ \Omega, \quad X'_r = 0.380\ \Omega, \quad \text{and } R_{fe} \rightarrow \infty.$$

- Calculate the full-load current $\tilde{I}_s$ and the displacement power factor $\cos\phi$ of the motor (without capacitor bank).
- In Fig. P6.1.1 the reactive current component of the motor is corrected by a capacitor bank C_{bank} . Find C_{bank} such that the displacement power factor as seen at the input of the capacitor is $\cos\phi = 0.98$ lagging based on the consumer notation of current flow.

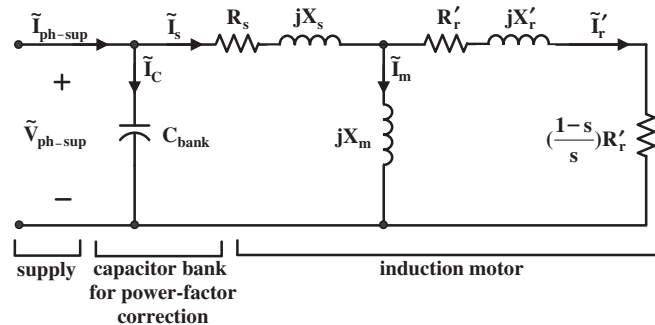FIG. P6.1.1 Per-phase equivalent circuit of induction motor with displacement power-factor correction capacitor bank.



Problem 6.2: Calculation of the displacement power factor (DPF) and total harmonic distortion of voltage (THD_v) and current (THD_i)

The following problem studies the power-factor correction for a relatively weak three-phase power system, where the displacement power factor (DPF) and the total harmonic distortion (THD) are relatively large due to the relatively large amplitudes of voltage and current harmonics. In this problem the THD_v and THD_i are used instead of the total power factor (TPF).

- (a) Perform a PSpice analysis for the circuit of Fig. P6.2.1, where a three-phase diode rectifier—fed by a Y/Y transformer with turns ratio $N_p/N_s < 1$ (e.g., $L_1 = 0.5\text{ mH}$, $L_2 = 1\text{ mH}$)—is combined with a self-commutated switch (e.g., MOSFET or IGBT) and a filter (e.g., capacitor C_f) serving a load (R_{load}). You may assume $R_{\text{syst}} = 0.05\ \Omega$, $X_{\text{syst}} = 0.0999\ \Omega$, $f = 60\text{ Hz}$, $v_{\text{AN}}(t) = \sqrt{2} \cdot 346\text{ V} \cos \omega t$, $v_{\text{BN}}(t) = \sqrt{2} \cdot 346\text{ V} \cos(\omega t - 120^\circ)$, $v_{\text{CN}}(t) = \sqrt{2} \cdot 346\text{ V} \cos(\omega t - 240^\circ)$, ideal diodes D_1 – D_6 , $C_f = 500\ \mu\text{F}$, three-phase capacitor bank has the capacitance Y/Y bank $C_{\text{bank}} = 50\ \mu\text{F}$, $R_{\text{load}} = 10\ \Omega$, and a switching frequency of $f_{\text{sw}} = 600\text{ Hz}$ at a duty cycle of $\delta = 50\%$ of a self-commutated switch.

List the PSpice program and plot one period of the input voltage $v_{\text{AN}}(t)$ and input current $i_{\text{A}}(t)$ after steady state has been reached.

- (b) Plot and subject the input line-to-neutral voltage $v_{\text{AN}}(t)$ and the input current $i_{\text{A}}(t)$ to Fourier analysis. Plot and subject the line-to-neutral voltage of the transformer secondary $v_{\text{an}}(t)$ and the phase current of the secondary of the transformer $i_{\text{a}}(t)$ to Fourier analysis.
- (c) Plot and subject the output voltage of the rectifier $v_{\text{out}}(t) = V(R_{\text{load}})$ to Fourier analysis.
- (d) List the displacement power factor (DPF) and the total harmonic distortions (THD_v and THD_i) for $v_{\text{AN}}(t)$ and $i_{\text{A}}(t)$, respectively.
- (e) List the displacement power factor (DPF) and the total harmonic distortions (THD_v and THD_i) for $v_{\text{an}}(t)$ and $i_{\text{a}}(t)$, respectively.
- (f) List the significant voltage harmonic distortion (THD_v) for $v_{\text{out}}(t) = V(R_{\text{load}})$.

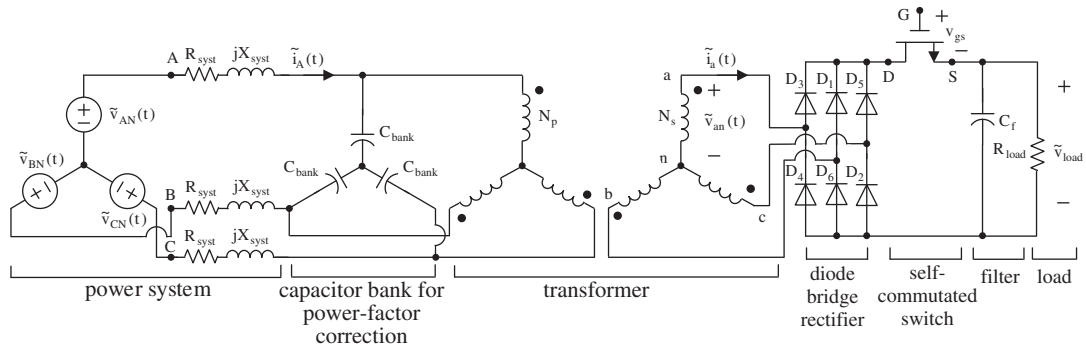


FIG. P6.2.1 Connection of a Y/Y three-phase transformer with a diode-bridge rectifier combined with a self-commutated switch, filter, load, and a Y/Y bank of power-factor correction capacitors.

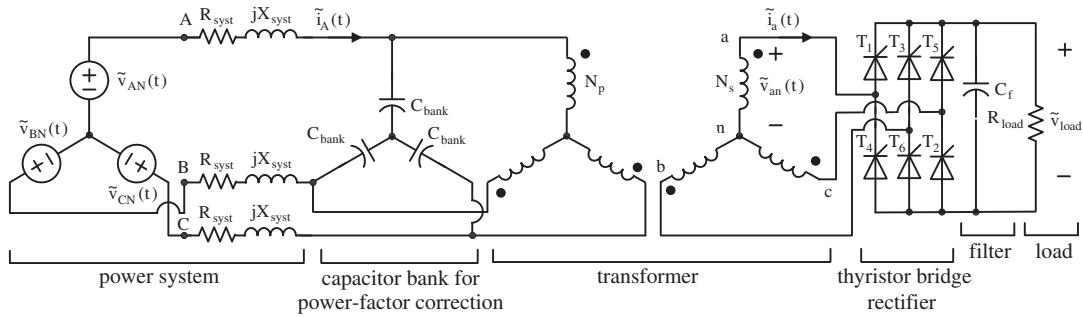


FIG. P6.2.2 Connection of a Y/Y three-phase transformer with a thyristor-bridge rectifier, filter, load, and a Y/Y bank of power-factor correction capacitors.

- (g) Perform a PSpice analysis for the circuit of Fig. P6.2.2, where a three-phase thyristor rectifier—fed by a Y/Y transformer with turns ratio $N_p/N_s < 1$ (e.g., $L_1 = 0.5 \text{ mH}$, $L_2 = 1 \text{ mH}$)—via a filter (e.g., capacitor C_f) serves a load (R_{load}). You may assume $R_{syst} = 0.05 \Omega$, $X_{syst} = 0.0999 \Omega$, $f = 60 \text{ Hz}$, $\tilde{v}_{AN}(t) = \sqrt{2} \cdot 346 \text{ V} \cos \omega t$, $\tilde{v}_{BN}(t) = \sqrt{2} \cdot 346 \text{ V} \cos(\omega t - 120^\circ)$, and $\tilde{v}_{CN}(t) = \sqrt{2} \cdot 346 \text{ V} \cos(\omega t - 240^\circ)$. Thyristors T_1 to T_6 can be modeled by MOSFETs in series with diodes, $C_f = 500 \mu\text{F}$, three-phase capacitor bank has the capacitance Y/Y bank $C_{bank} = 50 \mu\text{F}$, $R_{load} = 10 \Omega$, and a firing angle of $\alpha = 60^\circ$. Plot one period of voltage and current after steady state has been reached.
- (h) Plot and subject the input line-to-neutral voltage $\tilde{v}_{AN}(t)$ and the input current $\tilde{i}_A(t)$ to a Fourier analysis. Plot and subject the secondary transformer line-to-neutral voltage $\tilde{v}_{an}(t)$ and the associated current $\tilde{i}_a(t)$ to a Fourier analysis.
- (i) Plot and subject the output voltage of the rectifier $\tilde{v}_{out}(t) = V(R_{load})$ to Fourier analysis.
- (j) List the displacement power factor DPF and the total harmonic distortions (THD_v and THD_i) for $\tilde{v}_{AN}(t)$ and $\tilde{i}_A(t)$, respectively.
- (k) List the displacement power factor (DPF) and the total harmonic distortions (THD_v and THD_i) for $\tilde{v}_{an}(t)$ and $\tilde{i}_a(t)$, respectively.
- (l) List the significant voltage harmonic distortion (THD_v) for $\tilde{v}_{out}(t) = V(R_{load})$.
- (m) Explain why the total displacement power factor cannot be significantly increased by the capacitor bank. Would the replacement of the capacitor bank by a three-phase tuned (R_{fbank} , L_{fbank} , and C_{fbank}) filter be desirable?
- (n) Compare the two circuits with respect to their harmonic component contents.

Problem 6.3: Relation between displacement power factor (DPF) and total power factor (TPF)

For the circuit of Fig. P6.2.2, neglecting power-factor correction capacitors and fed by a Y/Y transformer with turns ratio $N_p/N_s = 1$ (e.g., $L_1 = 0.5 \text{ mH}$, $L_2 = 0.5 \text{ mH}$), calculate with PSpice the Fourier components (magnitude and phase) of the phase voltage $\tilde{v}_{an}(t)$ and the phase current $\tilde{i}_a(t)$ up to the 17th harmonic. Compute the ratio TPF/DPF for the firing angle $\alpha = 45^\circ$ degree.

Problem 6.4: Design of a tuned passive filter

A harmonic LC filter (consisting of a capacitor and a tuning reactor) is to be designed in parallel to a power-factor correction (PFC) capacitor to improve the power quality (as recommended by IEEE-519 [8]) and to improve the displacement power factor DPF from 0.5 lag to 0.95 lag (consumer notation). Data obtained from a harmonic analyzer at 100% loading are 6.35 kV/phase, 600 kW/phase, $THD_i = 26.46\%$, fundamental frequency $f = 60$ Hz, and fifth harmonic (300 Hz) current is $I_5 = 50$ A. It is desirable to reduce the THD_i to 10% for $Z_{\text{system}}^{(5)} = j0.1 \Omega$. Select filter capacitance to supply 30% of Q_{required} .

Problem 6.5: Harmonic resonance

Fig. E6.3.1A shows a simplified industrial power system ($R_{\text{sys}} = 0.01 \Omega$, $L_{\text{sys}} = 0.05$ mH) with a power-factor correction capacitor ($C_{\text{pf}} = 2000 \mu\text{F}$). Industrial loads may have nonlinear ($v-i$) characteristics that can be approximately modeled as (constant) decoupled harmonic current sources. The utility voltages in industrial distribution systems are often distorted due to the neighboring loads and can be approximately modeled as decoupled harmonic voltage sources:

$$\begin{aligned} v_{\text{sys}}(t) &= \sqrt{2} \cdot 460 \sin(\omega_1 t) + \sqrt{2} \cdot 25 \sin(5\omega_1 t) + \sqrt{2} \cdot 15 \sin(7\omega_1 t), \\ i_{\text{NL}}(t) &= \sqrt{2} \cdot 10 \sin(\omega_1 t) + \sqrt{2} \cdot 2 \sin(5\omega_1 t) + \sqrt{2} \cdot 1 \sin(7\omega_1 t). \end{aligned} \quad (\text{P6.5.1})$$

Compute frequencies of the series and parallel resonances and the harmonic currents injected into the capacitor and plot its frequency response.

Problem 6.6: Parallel harmonic resonance

In the system of Fig. E6.4.1A, the source has the ratio $X/R = 20$. Assume $X/R = 2000$ (losses 0.5 W/kVAr) and $X/R = 10,000$ (losses 0.1 W/kVAr) for low-voltage and medium-voltage high-efficiency capacitors, respectively. The harmonic current source is a six-pulse converter injecting harmonic currents of the order

$$h = n(k + 1), \quad (\text{P6.6.1})$$

where n is an integer (typically from 1 to 4) and k is the number of pulses (e.g., equal to 6 for a six-pulse converter). Find the resonance frequency of this circuit. Plot the frequency response and current amplification at bus 1.

Problem 6.7: Series harmonic resonance

An example of a series resonance system is demonstrated in Fig. E6.5.1A, where $S = 200$ MVA, $X/R = 20$, $V_{\text{bus-rms}} = 7.2$ kV, $X_L = 1 \Omega$, $Q_C = 900$ kVAr, $V_{\text{Crms}} = 7.2$ kV, $I_{\text{Lrms}} = 100$ A, and $Z = (R + j0.049 \Omega)$ with $R = 0$ and magnitude $Z_{\text{mag}} = 0.049 \Omega$ at $h = 7.59$. The equivalent circuit (neglecting resistances) is shown in Fig. E6.5.1B. Find the resonance frequency of this circuit. Plot the frequency response of the bus 1 equivalent impedance, and the current amplification across the tuning reactor.

Problem 6.8: Protection of capacitors by virtual harmonic resistors

Repeat Application Example 6.3 assuming a power converter is used to include a virtual harmonic resistor $R_{\text{vir}} = 1.0 \Omega$ in series with the capacitor.

Problem 6.9: Harmonic current, voltage, and reactive power limits for capacitors when used in a single-phase system

The reactance of a capacitor decreases with frequency and therefore the capacitor acts as a sink for higher harmonic currents. The effect is to increase the heating and dielectric stress. ANSI/IEEE [10], IEC, and European (e.g., [11,12]) standards provide limits for voltage, currents, and reactive power of capacitor banks. This can be used to determine the maximum allowable harmonic levels. The result of the increased heating and voltage stress brought about by harmonics is a shortened capacitor life due to premature aging.

According to the nameplate of the capacitors the following constraints must be satisfied:

$$\frac{V_{\text{rms}}}{V_{\text{rms_rated}}} = \sqrt{\left(V_1^2 + \sum_{h=2}^{h_{\text{max}}} V_h^2\right) / V_{\text{rms_rated}}^2} \leq 1.15, \quad (\text{P6.9.1})$$

$$\frac{I_{\text{rms}}}{I_{\text{rms_rated}}} = \frac{f_1}{f_{\text{rated}}} \cdot \frac{V_{\text{rms}}}{V_{\text{rms_rated}}} \sqrt{1 + \sum_{h=2}^{h_{\text{max}}} (h^2 - 1) \left[\frac{V_h}{V_{\text{rms}}}\right]^2} \leq 1.3, \quad (\text{P6.9.2})$$

$$\frac{Q}{Q_{\text{rated}}} = \frac{f_1}{f_{\text{rated}}} \cdot \frac{V_{\text{rms}}^2}{V_{\text{rms_rated}}^2} \left\{ 1 + \sum_{h=2}^{h_{\text{max}}} (h - 1) \left[\frac{V_h}{V_{\text{rms}}}\right]^2 \right\} \leq 1.45, \quad (\text{P6.9.3})$$

where $V_{\text{rms_rat}}$ is the rated terminal voltage, V_{rms} is the applied effective (rms) terminal voltage, f_1 is the line frequency, and V_1 is the fundamental (rms) voltage.

Plot for $V_1 \approx V_{\text{rms}} = V_{\text{rms_rat}}$ and $f_1 = f_{\text{rat}}$ the loci for V_h/V_{rms} , where $(V_{\text{rms}}/V_{\text{rms_rat}}) = 1.15$, $(I_{\text{rms}}/I_{\text{rms_rat}}) = 1.3$, and $(Q/Q_{\text{rat}}) = 1.45$ as a function of the harmonic order h for $3 \leq h \leq 49$ (only one harmonic is present at any time).

Problem 6.10: Harmonic losses of capacitors

For a capacitor with $C = 100 \mu\text{F}$, $V_{\text{rat}} = 1000 \text{ V}$, $R_{s1} = 0.005 \Omega$ (where R_{s1} is the series resistance of the capacitor at fundamental ($h = 1$) frequency of $f_{\text{rat}} = 60 \text{ Hz}$), compute the total harmonic losses for the harmonic spectra of Table P6.10.1 (up to and including the 19th harmonic) for the following conditions:

- (a) R_{sh} is constant, that is, $R_{sh} = R_{s1} = 0.005 \Omega$.
 (b) R_{sh} is proportional to frequency, that is, $R_{sh} = R_{s1} \left(\frac{f}{f_{\text{rat}}}\right) = 0.005 \cdot h \Omega$.

TABLE P6.10.1 Possible voltage spectra with high harmonic penetration.

h	$\left(\frac{V_h}{V_{60 \text{ Hz}}}\right)_{1\phi} (\%)$	$\left(\frac{V_h}{V_{60 \text{ Hz}}}\right)_{3\phi} (\%)$
1	100	100
2	2.5	0.5
3	5.71	1.0 ^a
4	1.6	0.5

Continued

TABLE P6.10.1 Possible voltage spectra with high harmonic penetration—
Cont'd

h	$\left(\frac{V_h}{V_{60\text{ Hz}}}\right)_{1\phi} (\%)$	$\left(\frac{V_h}{V_{60\text{ Hz}}}\right)_{3\phi} (\%)$
5	1.25	7.0
6	0.88	0.2
7	1.25	5.0
8	0.62	0.2
9	0.96	0.3
10	0.66	0.1
11	0.30	2.5
12	0.18	0.1
13	0.57	2.0
14	0.10	0.05
15	0.10	0.1
16	0.13	0.05
17	0.23	1.5
18	0.22	0.01
19	1.03	1.0

^a Under certain conditions (e.g., DC bias of transformers as discussed in [Chapter 2](#), and the harmonic generation of synchronous generators as outlined in [Chapter 4](#)) triplen harmonics are not of the zero-sequence type, and they can therefore exist in a three-phase system.
All higher harmonics < 0.2%.

(c) R_{sh} is proportional to the square of frequency, $R_{sh} = R_{s1} \left(\frac{f}{f_{rat}}\right)^2 = 0.005 \cdot h^2 \Omega$.

(d) Plot the calculated losses of parts *a* to *c* as a function of the harmonic order *h*.

References

- [1] C. Wang, T.C. Cheng, G. Zheng, Y.D.L. Mu, B. Palk, M. Moon, Failure analysis of composite dielectric of power capacitors in distribution systems, *IEEE Trans. Dielect. Elect. Insul.* 5 (August 1998) 583–588.
- [2] J.C. Wu, H.L. Jou, K.D. Wu, N.C. Shen, Power converter-based method for protecting three-phase power capacitor from harmonic destruction, *IEEE Trans. Power Deliv.* 19 (3) (July 2004) 1434–1441.
- [3] A. Fernandez, J. Sebastian, M.M. Hernando, P. Villegas, J. Garcia, Helpful hints to select a power-factor correction solution for low- and medium-power single-phase power supplies, *IEEE Trans. Ind. Electron.* 52 (1) (February 2005) 46–55.
- [4] S. Basu, M.H.J. Bollen, A novel common power-factor correction scheme for homes and offices, *IEEE Trans. Power Deliv.* 20 (3) (July 2005) 2257–2263.
- [5] W.H. Wolfle, W.G. Hurley, Quasi-active power-factor correction with a variable inductive filter: theory, design and practice, *IEEE Trans. Power Electron.* 18 (1 Pt. 1) (January 2003) 248–255.

- [6] T.E. Grebe, Application of distribution system capacitor banks and their impact on power quality, IEEE Trans. Ind. Appl. 32 (3) (May–June 1996) 714–719.
- [7] R.H. Simpson, Misapplication of power capacitors in distribution systems with nonlinear loads—three case histories, IEEE Trans. Ind. Appl. 41 (1) (Jan.–Feb. 2005) 134–143.
- [8] IEEE recommended practices and requirements for harmonic control in electric power systems, IEEE Standard 519-1992, New York, NY, 1993.
- [9] G.T. Heydt, Electric Power Quality, Star in a Circle Publications, USA, 1991.
- [10] ANSI/IEEE Standard 18-1980.
- [11] VDE 0560 T1 and T4.
- [12] DIN 48500.
- [13] A. Hoppner, *Schaltanlagen, Taschenbuch für Planung, Konstruktion und Montage von Schaltanlagen*, Brown, Boveri & Cie, Aktiengesellschaft, Mannheim, W. Girardet, Essen, Germany, 1966.
- [14] G.K. Dubey, *Power Semiconductor Controlled Drives*, Prentice Hall, Englewood Cliffs, NJ, 1989.

This page intentionally left blank

Lifetime reduction of transformers and induction machines

The total installed power capacity within the Eastern, Western, and Texan power pools of the United States is 1200 GW with about 80 GW of spinning reserve. Approximately 60% of the 1200 GW is consumed by induction motors, and 100% passes through transformers. Similar percentages exist in most countries around the world. For this reason, transformers and induction motors are important components of the electric power system.

The lifetime of any device is limited by the aging of the insulation material due to temperature: The higher the activation energy of any material, the faster the aging proceeds. Iron and copper/aluminum have low activation energies, and for this reason, their aging is negligible. Insulation material—either of the organic or inorganic type—is most susceptible to aging caused by temperature. If a device is properly designed, then the rated temperature results in the rated lifetime. Temperature rises above rated temperature result in a decrease of lifetime below its rated value. There are a few mechanisms by which the rated lifetime can be reduced:

1. Temperature rises above the rated temperature can come about due to overload and voltage or current harmonics.
2. Lifetime can be also decreased by intermittent operation. It is well known that generators of pumped storage plants must be rewound every 15 years as compared to 40 years for generators which operate at a constant temperature.
3. Vibration within a machine due to load variations (e.g., piston compressor) can destroy the mechanical properties of conductor insulation.
4. Faults—such as short circuits—can impact the lifetime due to excessive mechanical forces acting on the winding and their insulation.

In this chapter we are concerned with aging due to elevated temperatures caused by harmonics. The presence of current and voltage harmonics in today's power systems causes additional losses in electromagnetic components and appliances, creating substantial elevated temperature rises, and decreasing lifetime of machines and transformers. Therefore, estimating additional losses, temperature rises, and aging of power system components and loads has become an important issue for utilities and end users alike.

Three different phases are involved in the estimation (or determination) of the lifetime of magnetic devices:

1. modeling and computation of the additional losses due to voltage or current harmonics,
2. determination of the ensuing temperature rises, and
3. estimation of the percentage decrease of lifetime as compared with rated lifetime [1].

The literature is rich in documents and papers that report the effect of poor power quality on losses and temperature rises of power system components and loads; however, a matter that still remains to be examined in more detail is the issue of device aging under nonsinusoidal operating conditions. Earlier papers were mostly concerned about magnetic device losses under sinusoidal operating conditions [2–13]. However, more recent research has expanded the scope to magnetic device derating under nonsinusoidal operation [14–17]. Only a few papers have addressed the subjects of device aging and economics issues caused by poor power quality [18–23].

In the first sections of this chapter the decrease of lifetime of power system components and loads such as universal motors, single- and three-phase transformers, and induction motors are estimated based on their terminal voltage harmonics. After a brief review of temperature relations, the concept of weighted harmonic factors is introduced. This is a quantity that relates the device terminal voltage harmonic amplitudes to its temperature rise. Additional temperature rises and losses due to harmonics are discussed, and thereafter the weighted harmonic factors are employed to determine the decrease of lifetime of electrical appliances. Toward the end of this chapter the time-varying nature of harmonics is addressed with respect to their measurement, summation, and propagation. The probabilistic evaluation of the economic damage—that is, cost—due to harmonic losses in industrial energy systems is explored next, and the increase of temperature in a device as a function of time as well as intermittent operation of devices conclude this chapter.

7.1 Rationale for relying on the worst-case conditions

Field measurements show that the harmonic voltages and currents of a distribution feeder are time-varying. This is due to

1. the changes in the loads, and
2. the varying system's configuration.

This means that steady-state harmonic spectra do not exist. However, loads such as variable-speed drives for air-conditioning, rolling mills, and arc furnaces operate during their daily operating cycle for at least a few hours at rated operation. It is for this operating condition that system components (e.g., transformers, capacitors) and loads must be designed. Most electromagnetic devices such as transformers and rotating machines have thermal time constants of 1–3 h—depending on their sizes and cooling mechanisms. When these components continually operate at rated power, they are exposed to steady-state current and voltage spectra resulting at an ambient temperature of $T_{\text{amb}} = 40^\circ\text{C}$ in the maximum temperature rise $T_{\text{rise max}}$, and the resulting temperature $T_{\text{max}} = T_{\text{amb}} + T_{\text{rise max}}$.

must be less or equal to the rated temperature T_{rat} . The worst case is therefore when the power system components operate at rated load with their associated current or voltage spectra where individual harmonic amplitudes are maximum. It is not sufficient to limit the total harmonic distortion of either voltage (THD_v) or current (THD_i) because these parameters can be the same for different spectra—resulting in different additional temperature rises, insulation stresses, and mechanical vibrations. In Sections 7.2–7.10, worst-case conditions will be assumed.

7.2 Elevated temperature rise due to voltage harmonics

Most electric appliances use electric motors and/or transformers. In all these cases, the power system's sinusoidal voltage causes ohmic and iron-core losses resulting in a temperature rise, which approaches the rated temperature rise ($T_{\text{rise rat}}$) at continuous operation:

$$T_{\text{rat}} = T_{\text{amb}} + T_{\text{rise rat}}, \quad (7.1)$$

where $T_{\text{amb}} = 40^\circ\text{C}$ is the ambient temperature. The lifetime of a magnetic device is greatly dependent on this temperature rise and the lifetime will be reduced if this rated temperature rise is exceeded over any length of time [1].

The presence of voltage harmonics in the power system's voltage causes harmonic currents in induction motors and transformers of electrical appliances, resulting in an elevated temperature rise ($T_{\text{rise rat}} + \Delta T_h$) such that the device temperature is

$$T = T_{\text{amb}} + T_{\text{rise rat}} + \Delta T_h, \quad (7.2)$$

where ΔT_h is the additional temperature rise due to voltage (integer, sub-, inter-) harmonics. Through a series of studies this additional temperature rise of various electric machines and transformers was calculated and measured as a function of the harmonic amplitude V_h and the phase shifts of the voltage harmonics ϕ_h with respect to the fundamental [18,19].

The insulating material of electrical apparatus, as used in electrical appliances, is of either organic or inorganic origin. The deterioration of the insulation caused by the elevated temperature rise is manifested by a reduction of the mechanical strength and/or a change of the dielectric behavior of the insulation material. This thermal degradation is best represented by the reaction rate equation of Arrhenius. Plots which will be drawn based on this equation are called Arrhenius plots [24,25]. The slopes of these plots are proportional to the activation energy E of the insulation material under consideration. Knowing the rated lifetime of insulation materials at rated temperature ($T_{\text{rat}} = T_{\text{amb}} + T_{\text{rise rat}}$), and the elevated temperature rise (ΔT_h) due to given amplitudes V_h and phase shifts ϕ_h of voltage harmonics, one will be able to estimate from the Arrhenius plot the reduction of the lifetime of an electrical appliance due to ΔT_h .

Definition The activation energy E is the energy transmitted in the form of heat to the chemical reaction of decomposition.

7.3 Weighted-harmonic factors

The harmonic voltage content (order h , amplitude V_h , and phase shift φ_h) of power system voltages varies with the type and size of harmonic generators and loads as well as with the topology of the system, and it will hardly be the same for any two networks. Since voltage harmonics result in additional losses and temperature rises (ΔT_h) in electrical appliances, it would be desirable to derive one single criterion which limits—for a maximum allowable additional temperature rise—the individual amplitudes and phase shifts of the occurring harmonic voltages including their relative weight with respect to each other in contributing to the elevated temperature rise ΔT_h .

Also, this criterion should be simple enough so that the additional losses, temperature rises ΔT_h , and the reduction of lifetime of electrical appliances can easily be predicted as a function of the harmonic content of their terminal voltages. As most electrical appliances use transformers and motors as input devices, in this section weighted harmonic factors will be derived for single-phase and three-phase transformers and induction machines.

The ambient temperature is at the most $T_{\text{amb}} = 40^\circ\text{C}$. The rated temperature rise depends on the class of insulation material used. $T_{\text{rise rat}} = 80^\circ\text{C}$ is a commonly permitted value so that

$$T_{\text{rat}} = T_{\text{amb}} + T_{\text{rise rat}} = 40^\circ\text{C} + 80^\circ\text{C} = 120^\circ\text{C}. \quad (7.3)$$

In transformers, iron-core sheets and copper (aluminum) conductors are insulated by paper, plastic material, or varnish.

The Swedish scientist Svante Arrhenius originated the so-called Arrhenius rule: a differential equation describing the speed of degradation or deterioration of any (organic, inorganic) material. This deterioration is not oxidation due to elevated temperatures.

The idea of a weighted harmonic factor for different magnetic devices [20] is based on the fact that the additional temperature rise ΔT_h is different for transformers, universal machines, and induction machines, although the harmonic content (V_h, φ_h) of the terminal voltages is the same.

7.3.1 Weighted-harmonic factor for single-phase transformers

Fig. 7.1 illustrates the equivalent circuit of a single-phase transformer for the fundamental ($h = 1$) and harmonic voltages of h th order.

The ohmic losses of the h th harmonic expressed in terms of the fundamental ohmic losses are

$$\frac{W_{\text{ohmic}, h}}{W_{\text{ohmic}, 1}} = \left(\frac{V_{ph}}{V_{p1}} \right)^2 \left(\frac{R_{ph} + R'_{sh}}{R_{p1} + R'_{s1}} \right) \left[\frac{\left(R_{p1} + R'_{s1} + R'_{\text{load},1} \right)^2 + \omega^2 \left(L_{p1} + L'_{s1} + L'_{\text{load},1} \right)^2}{\left(R_{ph} + R'_{sh} + R'_{\text{load},h} \right)^2 + (h\omega)^2 \left(L_{ph} + L'_{sh} + L'_{\text{load},h} \right)^2} \right]. \quad (7.4)$$

In most residential power transformers the influence of the skin effect can be neglected. However, the skin effect of an ohmic load cannot be ignored, because $R'_{\text{load},h}, R'_{\text{load},1} \gg R_{ph}, R_{p1}, R'_{sh}, R'_{s1}$. Therefore, one obtains

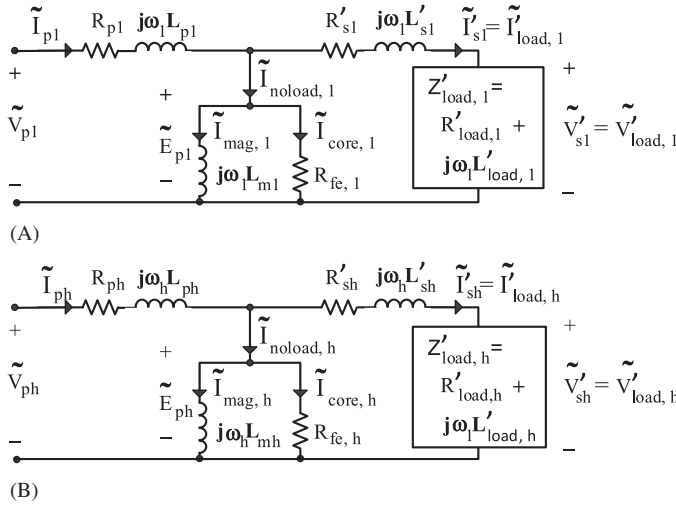


FIG. 7.1 Fundamental (A) and harmonic (B) equivalent circuits of single-phase transformers.

$$\frac{W_{\text{ohmic},h}}{W_{\text{ohmic},1}} \approx \left(\frac{V_{ph}}{V_{p1}} \right)^2 \frac{(R'_{\text{load},1})^2 + \omega^2 (L_{p1} + L'_{s1} + L'_{\text{load},1})^2}{(R'_{\text{load},h})^2 + (h\omega)^2 (L_{ph} + L'_{sh} + L'_{\text{load},h})^2}. \quad (7.5)$$

Due to $L_{ph} \approx L_{p1}$, $L'_{sh} \approx L'_{s1}$, $L'_{\text{load},h} \approx L'_{\text{load},1}$ and the fact that the load resistance $R'_{\text{load},h}$ increases less than linearly with frequency [18], the following simplified expression is considered:

$$\frac{W_{\text{ohmic},h}}{W_{\text{ohmic},1}} \approx \frac{1}{h^n} \left(\frac{V_{ph}}{V_{p1}} \right)^2, \quad (7.6)$$

where $0 < n < 2$ depends on the resistance and inductance values of the equivalent circuit of a load.

The iron-core losses of a single-phase transformer due to a voltage harmonic of order h are expressed in terms of the corresponding losses caused by the fundamental as

$$\frac{W_{\text{iron},h}}{W_{\text{iron},1}} = \left(\frac{B_{\text{max},h}}{B_{\text{max},1}} \right)^2 \frac{\left\{ \sigma \left(\frac{f_h}{100} \right)^2 k_m^2 + \varepsilon \left(\frac{f_h}{100} \right) \right\}}{\left\{ \sigma \left(\frac{f}{100} \right)^2 + \varepsilon \left(\frac{f}{100} \right) \right\}} \quad (7.7)$$

where $B_{\text{max},1}$ and $B_{\text{max},h}$ define fundamental and harmonic maximum flux densities, respectively, and σ and ε are [26] coefficients related to eddy-current and hysteresis losses, respectively. The term k_m takes the reaction of the eddy currents within the laminations and between the laminations on the original field into account [18]. With $(hB_{\text{max},h}) \propto E_{ph}$ and $B_{\text{max},1} \propto E_{p1}$, the relation becomes

$$\frac{W_{\text{iron},h}}{W_{\text{iron},1}} = \left(\frac{E_{ph}}{hE_{p1}} \right)^2 \left(\frac{R_{fe,1}}{R_{fe,h}} \right), \quad (7.8)$$

where $R_{fe,1}$ and $R_{fe,h}$ are the iron-core loss resistances for the fundamental ($h = 1$) and harmonic of order h , respectively.

The total losses for a harmonic of order h are then determined from the sum of Eqs. (7.6) and (7.8):

$$\frac{W_{total,h}}{W_{total,1}} \approx \frac{1}{h^n} \left(\frac{V_{ph}}{V_{p1}} \right)^2 + \frac{1}{h^2} \left(\frac{E_{ph}}{E_{p1}} \right)^2 \left(\frac{R_{fe,1}}{R_{fe,h}} \right). \quad (7.9)$$

According to [27], the core-loss resistance ratio is $R_{fe,h}/R_{fe,1} = h^{0.6}$ and because of the leakage reactance being proportional to h , one obtains the inequality $(E_{ph}/E_{p1}) < V_{ph}/V_{p1}$ or

$$\left(\frac{E_{ph}}{E_{p1}} \right)^2 = \left(\frac{V_{ph}}{V_{p1}} \right)^m, \quad (7.10)$$

where the exponent m is less than 2. Therefore, for single-phase transformers Eq. (7.9) becomes

$$\frac{W_{total,h}}{W_{total,1}} \approx \frac{1}{h^n} \left(\frac{V_{ph}}{V_{p1}} \right)^2 + \frac{1}{h^{2.6}} \left(\frac{V_{ph}}{V_{p1}} \right)^m. \quad (7.11)$$

Depending on the relative sizes of the ohmic and iron-core losses at full load, Eq. (7.11) can be rewritten for all occurring harmonics and is called the weighted harmonic factor [20]:

$$\frac{W_{total,h\Sigma}}{W_{total,1}} = K_1 \sum_{h=2}^{\infty} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^{\ell}, \quad (7.12)$$

where $W_{total,h\Sigma}$ and $W_{total,1}$ are the total harmonic losses and the total fundamental losses, respectively. Also $0 \leq k \leq 2.0$ and $0 \leq \ell \leq 2.0$. Average values for k and ℓ are obtained from measurements as discussed in a later section.

7.3.2 Measured temperature increases of transformers

Measured temperature rises in transformers and induction machines as they occur in a residential/commercial power system—together with calculated loss increases due to voltage harmonics—represent a base for the estimation of the lifetime reduction due to voltage harmonics. It is thereby assumed that for small additional temperature rises—as compared with the rated temperature rise—the additional losses are proportional to the additional temperature rise.

7.3.2.1 Single-phase transformers

A single-phase 150 VA transformer was tested [18,19] and Fig. 7.2A and B shows the measured temperature rises in percent of the rated temperature rises at full load for moderate (e.g., $T_{amb} = 23^\circ\text{C}$) and high (e.g., $T_{amb} = 40^\circ\text{C}$) ambient temperatures.

Note that if the third harmonic voltage $v_3(t)$ superposed with the fundamental voltage $v_1(t)$ produces a peak-to-peak voltage $\{v_1(t) + v_3(t)\}$ that is maximum, then the peak-to-peak flux density in the core $\{B_1(t) + B_3(t)\}$ is minimum. That is, the total harmonic losses are smaller than those when the peak-to-peak voltage is minimum, resulting in a maximum peak-to-peak

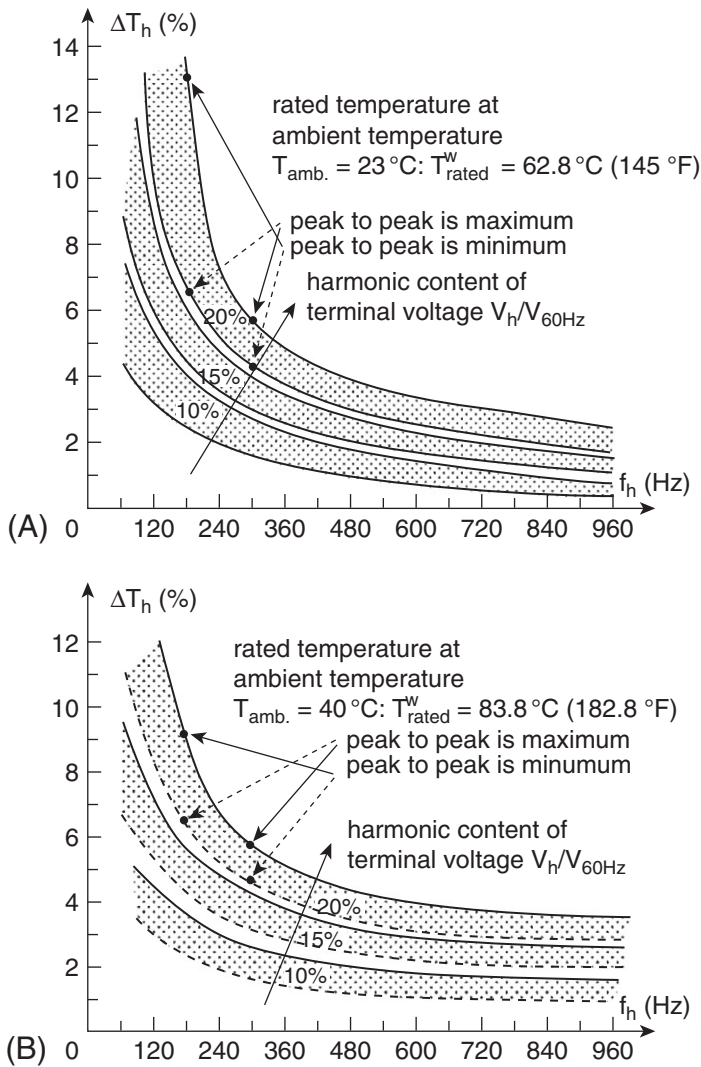


FIG. 7.2 Measured additional temperature rise of the 150 VA single-phase transformer winding in % of the rated temperature rise at full load at an ambient temperature of (A) 23°C and (B) 40°C as a function of the harmonic voltage amplitude, phase shift, and frequency [29,30].

value of the flux density. This “alternating” behavior of the harmonic losses and associated temperatures is discussed in detail in [27,28].

7.3.2.2 Three-phase transformers

Three 150 VA single-phase transformers were assembled to Δ /Y-grounded and Y-grounded/Y-grounded configurations and they were subjected to the same harmonic voltage conditions as the single-phase transformer of the preceding section. The temperatures of the transformer windings were measured at the same location as for the single-phase transformer. The tests were limited to balanced operation. However, no phase-lock loop was

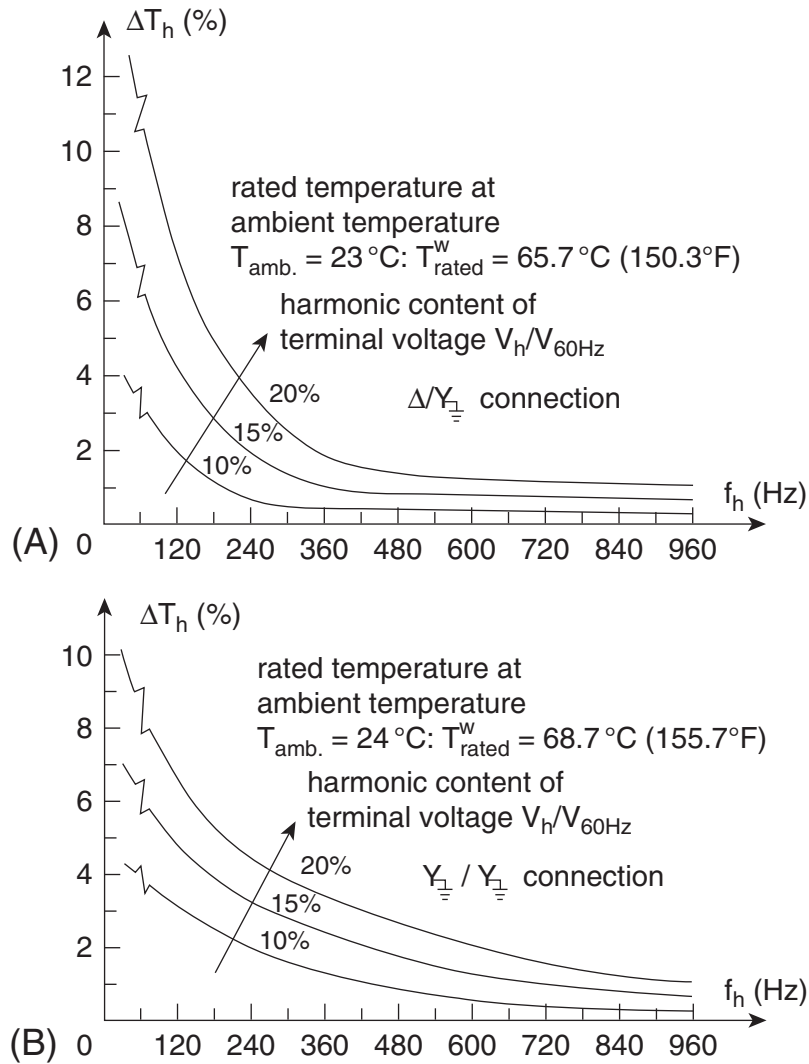


FIG. 7.3 (A) Measured additional temperature rise of the transformer winding in % of the rated temperature rise at full load at an ambient temperature of 23°C as a function of the harmonic voltage amplitude and frequency for either forward- or backward-rotating harmonic voltage systems, if the transformer bank is in Δ/Y -grounded connection [29,30]. (B) Measured additional temperature rise of the transformer winding in % of the rated temperature rise at full load at an ambient temperature of 24°C as a function of the harmonic voltage amplitude and frequency for either forward- or backward-rotating harmonic voltage systems, if the transformer bank is in Y -grounded/ Y -grounded connection [29,30].

available and no stable relation between fundamental and harmonic voltage systems could be maintained. Therefore, the temperature data of Fig. 7.3A and B represent average values and the alternating behavior could not be observed, although it also exists in three-phase transformers.

7.3.3 Weighted-harmonic factor for three-phase induction machines

The per-phase equivalent circuits of a three-phase induction motor are shown for the fundamental ($h = 1$) and a (integer, sub-, inter-) harmonic of h th order in Fig. 7.4. In Fig. 7.4, the fundamental slip is

$$s_1 = \frac{n_{s1} - n_m}{n_{s1}}, \quad (7.13a)$$

and the harmonic slip is

$$s_h = \frac{n_{sh} - n_m}{n_{sh}}. \quad (7.13b)$$

The ohmic losses caused by either the fundamental or a harmonic of order h are proportional to the square of the respective currents. Therefore, one can write for the ohmic losses caused by voltage harmonics:

$$\frac{W_{\text{ohmic},h}}{W_{\text{ohmic},1}} = \left(\frac{R_{ph} + R'_{sh}}{R_{p1} + R'_{s1}} \right) \left(\frac{V_{ph}}{V_{p1}} \right)^2 \left(\frac{Z_{p1}}{Z_{ph}} \right)^2, \quad (7.14)$$

where

$$Z_{p1} = \sqrt{(R_{p1} + R'_{s1}/s_1)^2 + (\omega_1 L_{p1} + \omega_1 L'_{s1})^2}$$

and

$$Z_{ph} = \sqrt{(R_{ph} + R'_{sh}/s_h)^2 + (h\omega_1 L_{ph} + h\omega_1 L'_{sh})^2}.$$

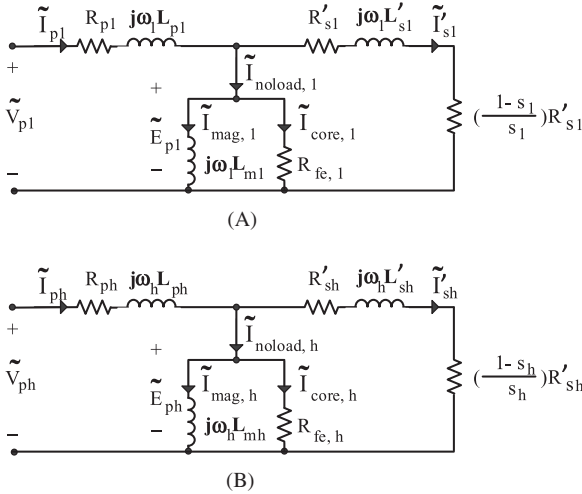


FIG. 7.4 Fundamental (A) and harmonic (B) equivalent circuits of three-phase induction machines.

For all time harmonics ($h = 2, 3, 4, \dots$) an induction machine operating at rated speed can be considered being at standstill because $s_1 \ll s_h$. With R_{ph} , $R'_{sh}/s_h \ll h\omega_1 L_{ph} \approx h\omega_1 L_{p1}$, $h\omega_1 L'_{sh} \approx h\omega_1 L'_{s1}$, the per-unit starting impedance

$$Z_{\text{start pu}} = \frac{\sqrt{(\omega_1 L_{p1} + \omega_1 L'_{s1})^2}}{\sqrt{(R_{p1} + R'_{s1}/s_1)^2 + (\omega_1 L_{p1} + \omega_1 L'_{s1})^2}}, \quad (7.15)$$

and the slip $s_h = \{h \pm (1 - s_1)\}/h \approx (h \pm 1)/h$, Eq. (7.14) can be rewritten as

$$\frac{W_{\text{ohmic},h}}{W_{\text{ohmic},1}} = \left(\frac{R_{ph} + R'_{sh}}{R_{p1} + R'_{s1}} \right) \left(\frac{V_{ph}}{V_{p1}} \right)^2 \frac{1}{h^2 Z_{\text{start pu}}^2}. \quad (7.16)$$

The additional iron-core losses due to a voltage harmonic of order h referred to the iron-core losses at the fundamental frequency are (see Fig. 7.4)

$$\frac{W_{\text{iron},h}}{W_{\text{iron},1}} = \left(\frac{V_{ph}}{V_{p1}} \right)^2 \left(\frac{Z_{fe,1}}{Z_{fe,h}} \right)^2 \frac{R_{fe,h}}{R_{fe,1}} = \left(\frac{E_{ph}}{E_{p1}} \right)^2 \frac{R_{fe,1}}{R_{fe,h}}, \quad (7.17)$$

where

$$Z_{fe,1} = \frac{(j\omega_1 L_{m1} + R_{fe,1})(R_{p1} + j\omega_1 L_{p1})}{j\omega_1 L_{m1}} + R_{fe,1},$$

$$Z_{fe,h} = \frac{(jh\omega_1 L_{mh} + R_{fe,h})(R_{ph} + jh\omega_1 L_{ph})}{jh\omega_1 L_{mh}} + R_{fe,h},$$

where $L_{mh} \approx L_{m1}$, $L_{ph} \approx L_{p1}$. From [31] follows $\frac{R_{fe,h}}{R_{fe,1}} \approx h^{0.6}$, and therefore the iron-core losses are

$$\frac{W_{\text{iron},h}}{W_{\text{iron},1}} \approx \left(\frac{E_{ph}}{E_{p1}} \right)^2 \left(\frac{1}{h^{0.6}} \right). \quad (7.18)$$

Summing Eqs. (7.16) and (7.18), the total iron-core losses for a harmonic of order h of a three-phase induction machine become

$$\frac{W_{\text{total},h}}{W_{\text{total},1}} \approx \left(\frac{R_{ph} + R'_{sh}}{R_{p1} + R'_{s1}} \right) \left(\frac{V_{ph}}{V_{p1}} \right)^2 \frac{1}{h^2 Z_{\text{start pu}}^2} + \left(\frac{E_{ph}}{E_{p1}} \right)^2 \left(\frac{1}{h^{0.6}} \right), \quad (7.19)$$

or for all occurring harmonics, one can show that the total harmonic losses $W_{\text{total},h\Sigma}$ relate to the total fundamental losses, as defined by the weighted harmonic factor [32]:

$$\frac{W_{\text{total},h\Sigma}}{W_{\text{total},1}} = K_2 \sum_{h=2}^{\infty} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^{\ell}, \quad (7.20)$$

where $0 \leq k \leq 2$ and $0 \leq \ell \leq 2$.

Note that the relations for single-phase transformers (Eq. 7.12) and that for a three-phase induction motor (Eq. 7.20) are identical in structure, though the exponents k and ℓ may assume different values for single-phase transformers and three-phase induction motors. These exponents will be identified in the next section and it will be shown that the same structure of

the weighted harmonic factor will also be valid for three-phase transformers and single-phase induction machines as well as universal machines.

Depending on the values of k and ℓ one obtains different loss or temperature dependencies as a function of the frequency. Unfortunately, these dependencies can vary within wide ranges from constant to hyperbolic functions. This is so because the iron-core losses depend on the electric steel (e.g., conductivity, lamination thickness, permeability) used and the winding configurations in primary or stator and secondary or rotor. These can exhibit different conductivities (e.g., Cu, Al) or skin and proximity effects. In order to study these dependencies, various k and ℓ combinations will be assumed, as is depicted in Figs. 7.5–7.7:

- $k = 0$ and $\ell = 1$ results in a linear frequency-independent characteristic (Fig. 7.5).
- $k = 1$ and $\ell = 1$ results in an inverse frequency-dependent characteristic (Fig. 7.6).
- $k = 2$ and $\ell = 2$ results in a quadratic inverse frequency-dependent characteristic (Fig. 7.7).

In real transformers and induction machines combinations of these characteristics will be possible.

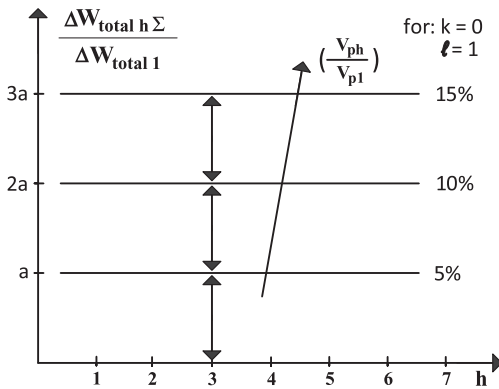


FIG. 7.5 Linear frequency-independent increase of harmonic losses with harmonic voltage V_{ph} .


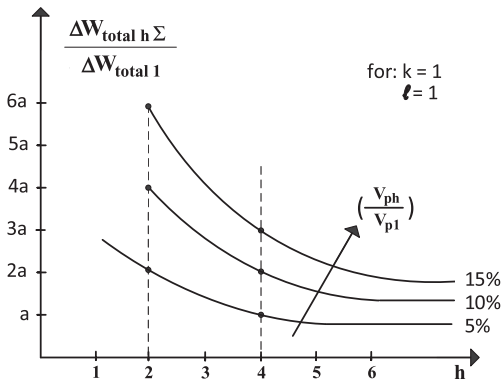


FIG. 7.6 Inverse frequency-dependent increase of harmonic losses with harmonic voltage V_{ph} .

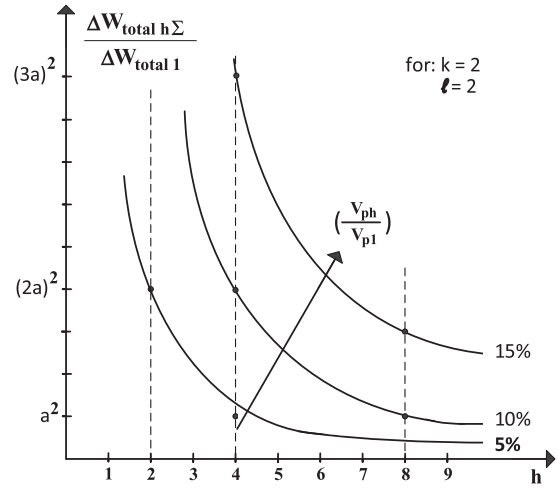FIG. 7.7 Quadratic inverse frequency-dependent increase of harmonic losses with harmonic voltage V_{ph} .



7.3.4 Calculated harmonic losses and measured temperature increases of induction machines

7.3.4.1 Single-phase induction motors

Calculated additional losses due to voltage harmonics for the machine of Eq. (7.21) are shown for the stator in Fig. 7.8A and for the rotor in Fig. 7.8B. Measured additional temperature rises of the stator end winding and that of the squirrel-cage rotor winding at full load as a function of the harmonic voltage amplitude, phase shift, and frequency for the same single-phase induction motor are depicted in Fig. 7.9A and B, respectively. Note that the maximum additional temperature rises are obtained when the peak-to-peak value of the terminal voltage is a maximum as a function of the superposed harmonic voltage with the fundamental voltage.

$$P = 2 \text{ hp}, V_t = (115/208) \text{ V}, I_t = (24/12) \text{ A}, f = 60 \text{ Hz}, \eta = 0.73, n_{\text{rat}} = 1725 \text{ rpm} \quad (7.21)$$

Fig. 7.8A and B show that the additional harmonic losses due to subharmonic voltages and interharmonics below the fundamental become very large, even at low percentages and, therefore, the subharmonic voltages must be limited to less than 0.5% of the fundamental. Note that at the slip frequency which corresponds to a slip of $s = 0$ the total stator losses reach a minimum (see Fig. 7.8A) because the total rotor losses are about zero (see Fig. 7.8B).

7.3.4.2 Three-phase induction motors

Fig. 7.4A and B illustrate the equivalent circuit of three-phase induction machines for the fundamental and time harmonics of order h (integer, sub-, and interharmonics). The total harmonic losses were calculated [18,19] for a three-phase induction machine with the following nameplate data and equivalent circuit parameters:

$$\begin{aligned} P &= 800 \text{ W}, p = 4 \text{ poles}, n_{\text{rat}} = 1738 \text{ rpm}, f = 60 \text{ Hz}, \\ V_{L-L} &= 220/380 \text{ V}, \Delta/Y \text{ connected}, I_{ph} = 2.35 \text{ A}, R_{s1} = 7.0 \Omega, X_{s1} = 8.0 \Omega, \\ X_{m1} &= 110.0 \Omega, R'_{r1} = 4.65 \Omega, X'_{r1} = 7.3 \Omega. \end{aligned} \quad (7.22)$$


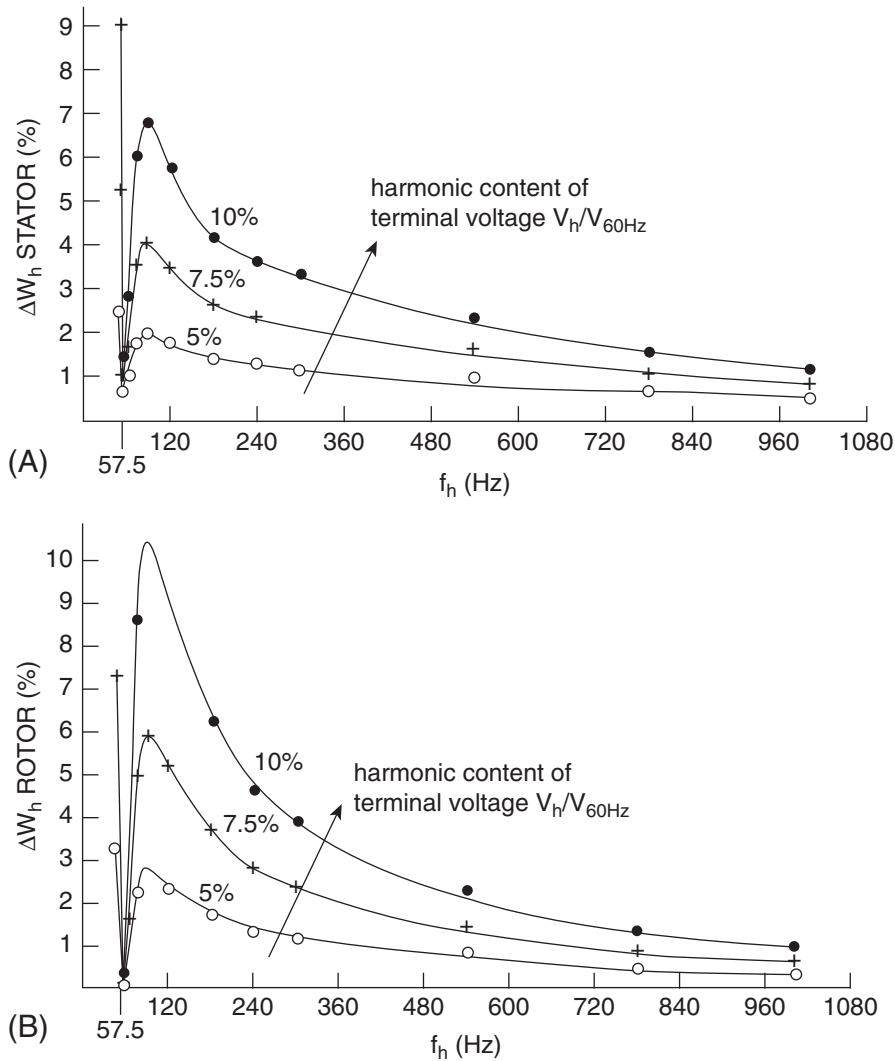


FIG. 7.8 Calculated total harmonic losses of (A) the stator referred to the rated losses of the stator and (B) the rotor referred to the rated losses of the rotor as a function of the harmonic frequency f_h for the single-phase machine of Eq. (7.21) [33].

Fig. 7.10A shows the total harmonic stator losses referred to the total rated stator losses and Fig. 7.10B depicts the total harmonic rotor losses referred to the total rated rotor losses. In Fig. 7.10A, there is a local maximum around 360 Hz; this maximum stems from the iron-core losses and its location depends on the lamination thickness of the iron-core sheets. The losses rapidly increase for subharmonics and interharmonics with decreasing frequency. The total harmonic rotor losses of Fig. 7.10B are larger for backward-rotating harmonic voltage systems (full lines) and smaller for forward-rotating harmonic systems (dashed lines). As for the stator, the rotor losses due to subharmonics and interharmonics below 60 Hz increase greatly with decreasing frequency. Note that at the slip frequency which corresponds to a slip of

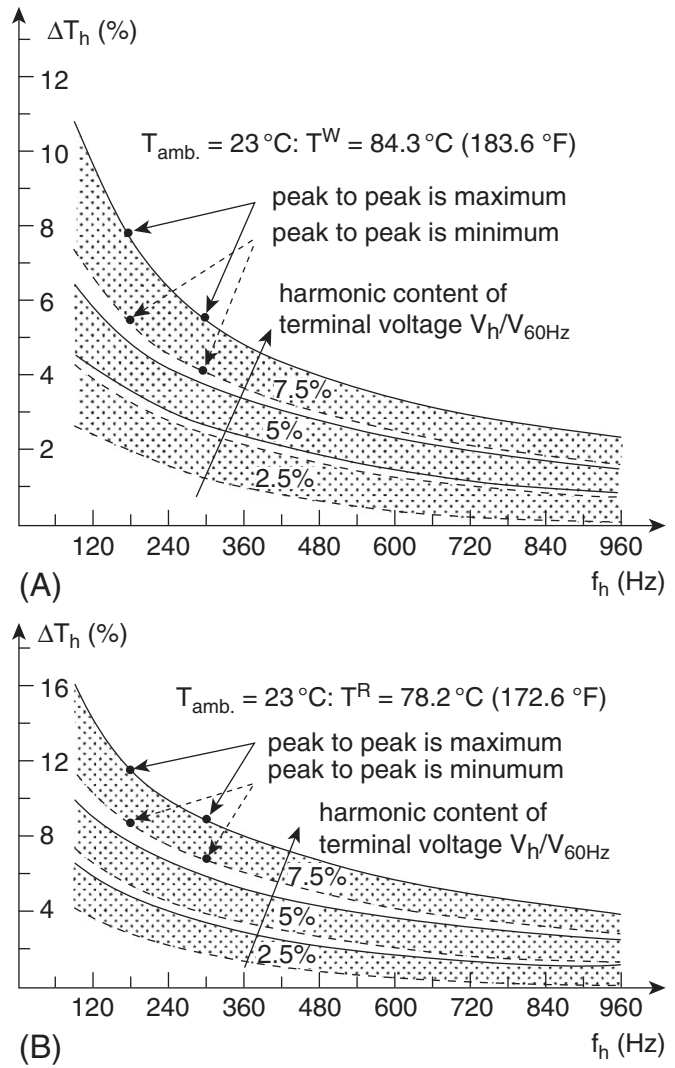FIG. 7.9 (A) Measured additional temperature rise of the stator-end winding at full load as a function of the harmonic voltage amplitude, phase shift, and frequency for the single-phase machine of Eq. (7.21) [33] (referred to rated temperature rise of stator). (B) Measured additional temperature rise of the squirrel-cage rotor winding at full load as a function of the harmonic voltage amplitude, phase shift, and frequency for the single-phase machine of Eq. (7.21) [33] (referred to rated temperature rise of rotor).



$s = 0$ the total stator losses reach a minimum (see Fig. 7.10A) because the total rotor losses are about zero (see Fig. 7.10B).

For the three-phase induction motor with the following nameplate data:

$$P = 2 \text{ hp}, \quad q_1 = 3, \quad N_0 = LPF, \quad f = 60 \text{ Hz}, \quad n_{\text{rat}} = 1725 \text{ rpm}, \quad V_{L-L} = 200 \text{ V}, \\ I_{ph} = 7.1 \text{ A}, \quad \text{time : continuous} \quad (7.23)$$

the additional temperature rise of the stator end winding for forward- and backward-rotating harmonic voltage systems superimposed with a forward voltage system of fundamental frequency of 60 Hz is shown in Fig. 7.11A. Note that for subharmonic and interharmonics below

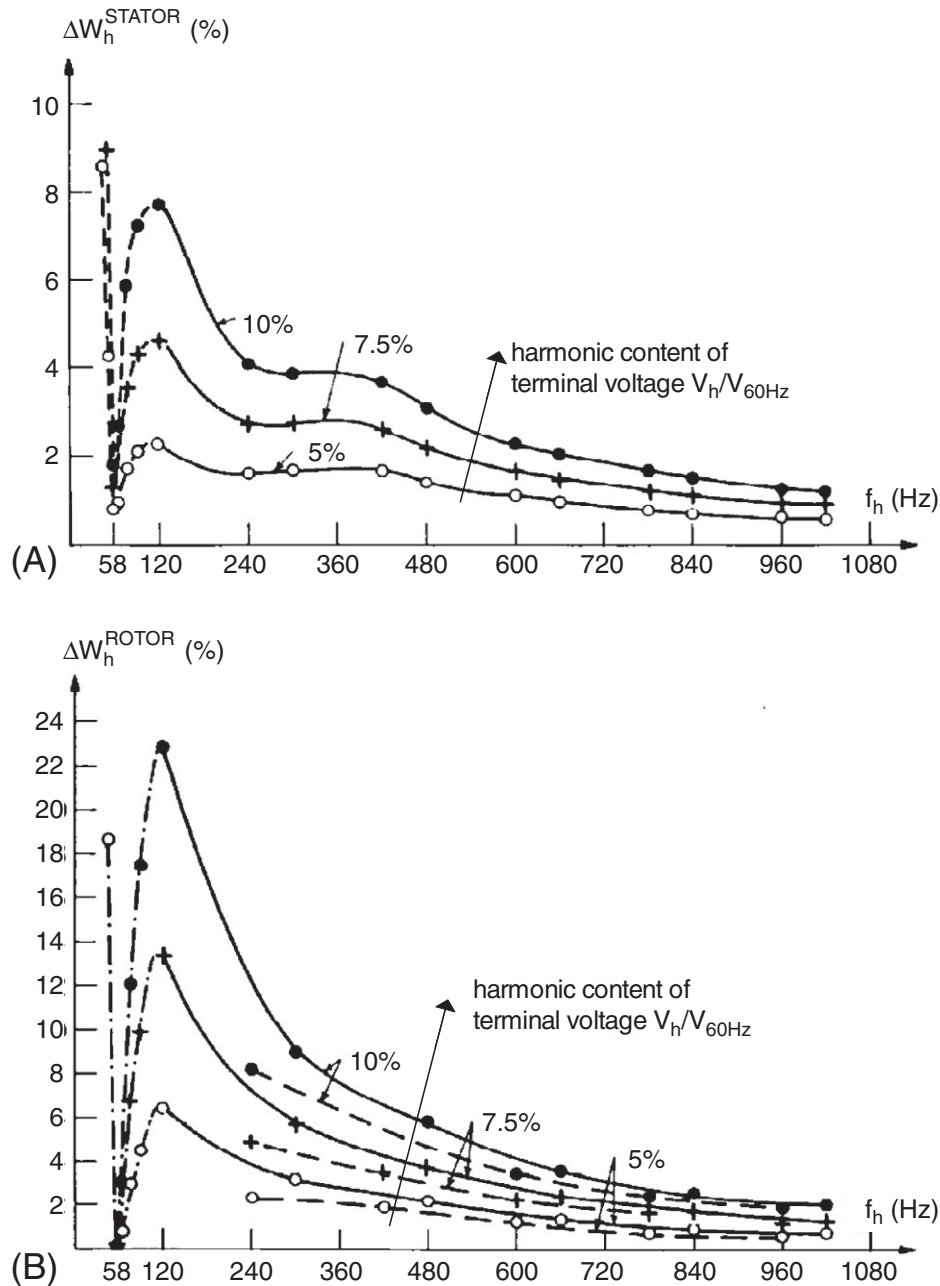


FIG. 7.10 (A) Calculated total harmonic stator losses referred to the total rated stator losses for the machine of Eq. (7.22) [30]. (B) Calculated total harmonic rotor losses referred to the total rated rotor losses for the machine of Eq. (7.22) [30].

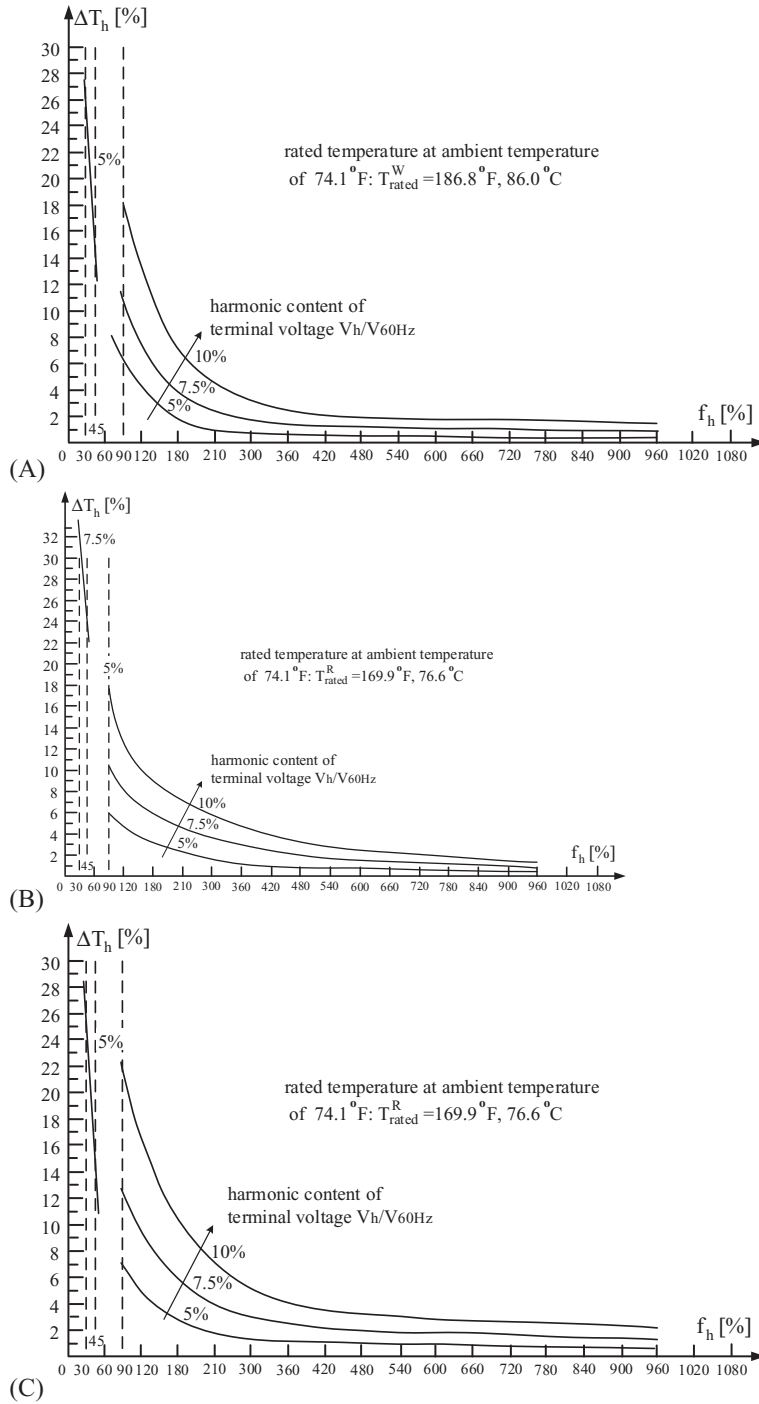


FIG. 7.11 (A) Measured additional temperature rise of the stator end winding as a function of forward-and backward-rotating harmonic voltage systems superposed with a forward-rotating fundamental voltage system for the induction machine of Eq. (7.23) [30] (referred to rated temperature rise of stator). (B) Measured additional temperature rise of the rotor squirrel-cage winding as a function of forward-rotating harmonic voltage systems superposed with a forward-rotating fundamental voltage system for the induction machine of Eq. (7.23) [30] (referred to rated temperature rise of rotor). (C) Measured additional temperature rise of the rotor squirrel-cage winding as a function of backward-rotating harmonic voltage systems superposed with a forward-rotating fundamental voltage system for the induction machine of Eq. (7.23) [30] (referred to rated temperature rise of rotor).

60Hz the stator temperature increases rapidly. The corresponding temperature rises of the squirrel-cage winding of the rotor are depicted in Fig. 7.11B and C for forward- and backward-rotating harmonic voltage systems, respectively. The temperature rise due to the backward-rotating harmonic voltage system is slightly larger than that of the forward-rotating system, if the rotor temperature rise is considered. Again, the temperature rises due to sub- and interharmonics below 60Hz are rapidly increasing with decreasing frequency.

Figs. 7.10 and 7.11 illustrate that the additional temperature rises due to subharmonic and interharmonics below 60Hz voltages become very large, even at low percentages; therefore, the subharmonic and interharmonics below 60Hz voltage components must be limited to less than 0.5% of the fundamental voltage. The sensitivity of large three-phase induction machines with respect to additional temperature rises has also been calculated in [34], and it is recommended to limit the subharmonic voltages to 0.1%.

7.4 Exponents of weighted-harmonic factors

In references [18,19], the functional dependencies of the additional losses and the additional temperature rises due to harmonics of the terminal voltage are calculated for linear circuits and measured for actual machines, respectively. Thereby it is assumed that the additional temperature rise is proportional to the additional losses. Inspecting these loss and temperature functions, one notes that they can be approximated by hyperbolas for $h \geq 1.0$, as shown in Fig. 7.12.

For $h < 1$ corresponding to the slip frequency where the stator field is in synchronism with the mechanical rotor no voltage $\tilde{E}$ will be induced in the rotor and the rotor currents are zero; that is, the rotor loss is zero and the total motor loss is at a minimum, as is indicated in Fig. 7.12. At very low inter- or subharmonic frequencies, say, 3Hz, the magnetizing reactance is very small and the 3Hz current becomes very large, resulting in large total losses and harmonic torques as discussed in Chapter 3.

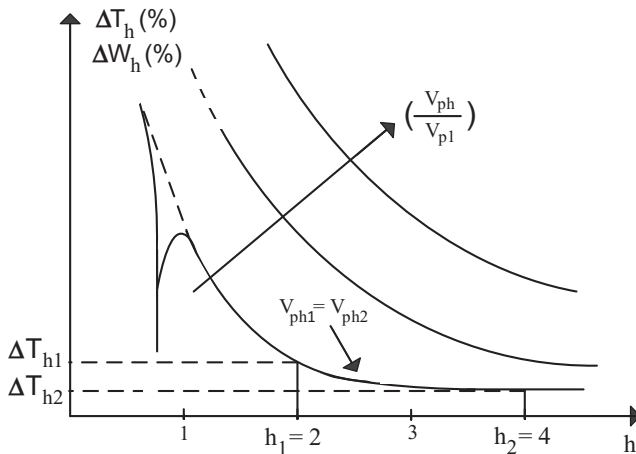


FIG. 7.12 Hyperbolic inverse frequency-dependent increase of harmonic losses with harmonic voltage V_{ph} , except at the frequency corresponding to mechanical speed (slip frequency).

7.4.1 Determination of factor k

Knowing

$$\Delta T_h = K_1 \sum_{h=2}^{\infty} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^{\ell}, \quad (7.24)$$

one can determine the exponent k from two given (measured) points $(h_1, \Delta T_{h1})$ and $(h_2, \Delta T_{h2})$ of Fig. 7.12. Therefore, one can write

$$k = \frac{\log \left\{ \frac{\Delta T_{h2}}{\Delta T_{h1}} \left(\frac{(V_{ph1}/V_{p1})^{\ell}}{(V_{ph2}/V_{p1})^{\ell}} \right) \right\}}{\log \left(\frac{h_1}{h_2} \right)}. \quad (7.25)$$

From evaluation of measured points one finds the following [33]:

• Single- and three-phase transformers	$0.6 \leq k \leq 1.2$	► $k_{\text{avg}} = 0.90$
• Single-phase induction machines	$0.5 \leq k \leq 1.2$	► $k_{\text{avg}} = 0.85$
• Three-phase induction machines	$0.7 \leq k \leq 1.2$	► $k_{\text{avg}} = 0.95$
• Universal machines	$0.8 \leq k \leq 1.2$	► $k_{\text{avg}} = 1.00$

The average values of $k = k_{\text{avg}}$ for each category are also shown.

7.4.2 Determination of factor ℓ

For the determination of the exponent ℓ of the weighted-harmonic factors, the functional dependencies of the additional losses and measured temperature rises on the harmonic frequencies and amplitude of references [18,19] can be used. These calculated and measured functions can be approximated by a family of hyperbolas, as shown in Fig. 7.13.

One can determine the values of the exponent ℓ from any given two points $(V_{ph1}, \Delta T_{h1})$ and $(V_{ph2}, \Delta T_{h2})$ of Fig. 7.13 for any given two harmonic frequencies of order h_1 and h_2 :

$$\ell = \frac{\log \left\{ \frac{\Delta T_{h2}}{\Delta T_{h1}} \left(\frac{h_1}{h_2} \right)^k \right\}}{\log \left(\frac{V_{ph1}}{V_{ph2}} \right)}. \quad (7.26)$$

From evaluation of measured points one finds the following [33]:

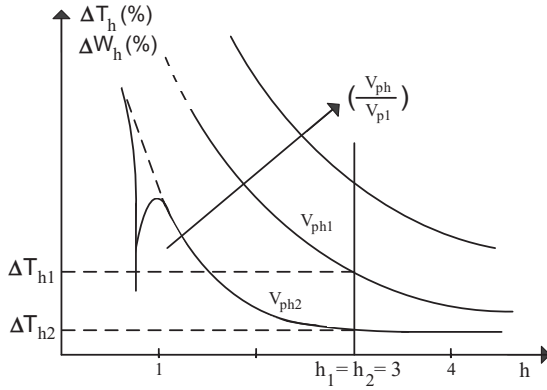


FIG. 7.13 Hyperbolic inverse frequency-dependent increase of harmonic losses with harmonic voltage V_{ph} , except at the frequency corresponding to mechanical speed (slip frequency).

• Single- and three-phase transformers	$1.50 \leq \ell \leq 2.0$	► $\ell_{\text{avg}} = 1.75$
• Single-phase induction machines	$1.0 \leq \ell \leq 1.80$	► $\ell_{\text{avg}} = 1.40$
• Three-phase induction machines	$1.2 \leq \ell \leq 2.0$	► $\ell_{\text{avg}} = 1.60$
• Universal machines	$1.5 \leq \ell \leq 2.5$	► $\ell_{\text{avg}} = 2.00$

The average values $\ell = \ell_{\text{avg}}$ for each category are also shown.

7.5 Additional losses or temperature rises versus weighted-harmonic factors

The additional losses and temperature rises due to harmonics of the terminal voltage of transformers, induction machines, and universal machines are calculated and measured in references [18,19]. Provided these additional losses due to such time harmonics are small as compared with the rated losses ($W_{\text{total},h\Sigma} \ll W_{\text{total},1}$), a proportionality between the additional losses and the additional temperature rises can be assumed because the cooling conditions are not significantly altered. Calculations and measurements show that the previously mentioned electromagnetic devices are sensitive to voltage harmonics in the frequency range $0 \leq f_h \leq 1500$ Hz. Harmonics of low order generate the largest additional loss. The correspondence of a given value of the weighted-harmonic factor (to an additional loss and temperature rise) leads to the additional temperature rise (or loss) versus the harmonic-factor function [20] as shown in Fig. 7.14.

With assumed values for the average exponents k_{avg} and ℓ_{avg} as they apply to transformers, induction and universal machines, one can compute for given percentages of the harmonic voltages the weighted-harmonic factor and associate with it the additional losses or temperature rises.

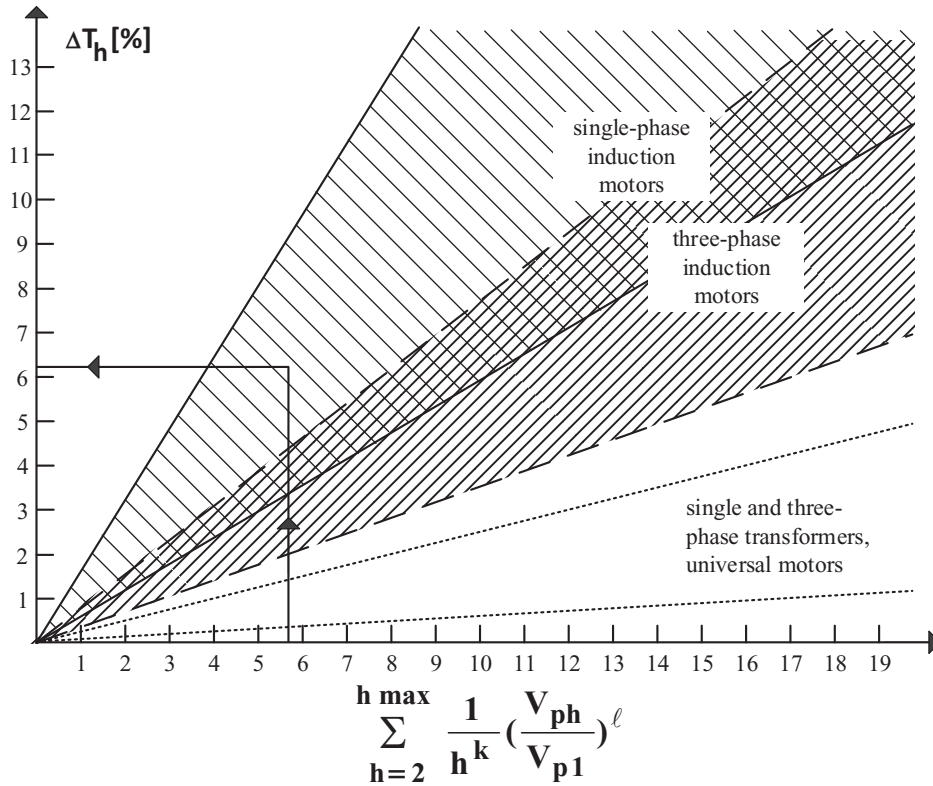


FIG. 7.14 Additional temperature rise (or loss) versus weighted-harmonic factor function for universal motors, single- and three-phase transformers, and induction motors [33].

7.5.1 Application Example 7.1: Temperature rise of a single-phase transformer due to single harmonic voltage

Determine the temperature rise ΔT_h of a single-phase transformer provided the third harmonic voltage is $V_3 = 0.10$ pu = 10%, $T_{\text{amb}} = 40^\circ\text{C}$, and $T_{\text{rated}} = 100^\circ\text{C}$. Assume $k_{\text{avg}} = 0.90$ and $\ell_{\text{avg}} = 1.75$.

Solution to Application Example 7.1 *Temperature rise of a single-phase transformer due to single harmonic voltage*

The rated temperature rise is $\Delta T_{\text{rated}} = T_{\text{rated}} - T_{\text{amb}} = T_{\text{rise rat}} = 60^\circ\text{C}$. For the harmonic with order $h = 3$ and amplitude $V_3 = 0.10$ pu $\equiv 10\%$, one obtains (through linear extrapolation) the weighted-harmonic factor by replacing $\frac{V_{ph}}{V_{p1}}$ by 10:

$$\sum_{h=3}^{h=3} \frac{1}{(3)^{0.9}} (10)^{1.75} = 20.98,$$

resulting with Fig. 7.14 in the additional temperature increase due to the 3rd harmonic $\Delta T_{h=3} = 3.3\%$ or $\Delta T_{h=3} = 1.98^\circ\text{C}$.

7.5.2 Application Example 7.2: Temperature rise of a single-phase induction motor due to single harmonic voltage

Determine the temperature rise ΔT_h of a single-phase induction motor provided the third harmonic voltage is $V_3 = 0.10 \text{ pu} \equiv 10\%$, $T_{\text{amb}} = 40^\circ\text{C}$, and $T_{\text{rated}} = 100^\circ\text{C}$. Assume $k_{\text{avg}} = 0.85$ and $\ell_{\text{avg}} = 1.40$.

Solution to Application Example 7.2 *Temperature rise of a single-phase induction motor due to single harmonic voltage*

The rated temperature rise is $\Delta T_{\text{rated}} = T_{\text{rated}} - T_{\text{amb}} = T_{\text{rise rat}} = 60^\circ\text{C}$. For the harmonic with order $h = 3$ and amplitude $V_3 = 0.10 \text{ pu} \equiv 10\%$ one obtains the weighted-harmonic factor by replacing $\frac{V_{ph}}{V_{p1}}$ by 10 as follows $\sum_{h=3} \frac{1}{(3)^{0.85}} (10)^{1.40} = 9.88$ resulting with Fig. 7.14 in the additional temperature increase due to the 3rd harmonic $\Delta T_{h=3} = 11\%$ or $\Delta T_{h=3} = 6.6^\circ\text{C}$.

Transformers, induction machines, and universal machines have different loss or temperature sensitivities with respect to voltage harmonics and, therefore, the additional temperature rises are different for all five types of devices. The additional temperature rise (loss) versus weighted-harmonic factor function indicates that the most sensitive components are single-phase induction machines, whereas the least sensitive devices are transformers with resistive load and universal machines. This is so because for any harmonic terminal voltage, a single-phase machine (and to some degree an unbalanced three-phase induction machine) develops forward- and backward-rotating harmonic fields and responds like being under short-circuit conditions due to the large slip s_h of the harmonic field with respect to the rotating rotor. In transformers, the resistive and inductive loads can never have zero impedance due to the nature of the frequency dependency of such loads.

7.6 Arrhenius plots

A series of studies have investigated the behavior of various electric machines and transformers as they occur in a residential distribution system and are exposed to harmonics of the terminal voltage [18,19]. The influence of such harmonics expresses itself, among others (e.g., mechanical vibration), in an elevated (additional) temperature rise of the machine windings and iron cores. The question arises how the lifetime of the machines will be affected by such additional temperature rises.

7.6.1 Thermal aging

The insulating material of an electric apparatus as used in electrical appliances is of organic or inorganic origin. Due to the heating of these materials, caused by the loss within the machine, a deterioration of the insulating materials will occur. This deterioration is manifested either by

- lowering of the mechanical strength, and/or
- changing of the dielectric behavior of the insulating material.

It may be mentioned that not only the heat itself, but also small motions due to expansion and contraction of the wire and iron laminations, are causing deteriorations by mechanical friction. In addition, time harmonics induce small core vibrations that may aggravate the mechanical stresses. The mechanical failure of the insulation is a result of the decrease of the tensile strength or flexibility of the insulation material. The thermal lifetime of electric machines and transformers is highly dependent on the mode of utilization; there is no doubt that machines with frequently variable load are more prone to aging from a mechanical failure point of view.

All further investigations consider machines or transformers operating at constant rated load, where the chemical changes of the insulating materials are responsible only for thermal aging.

7.7 Reaction rate equation

For many years it has been recognized that thermal degradation of organic or inorganic materials can be best represented by the reaction rate equation [24,25]

$$\frac{dR}{dt} = Ae^{(-E/KT)}. \quad (7.27)$$

In this equation, dR/dt is the reduction in property R with respect to time, A is a constant of integration, K is the gas constant or, depending on the units, the Boltzmann constant, T is the absolute temperature in kelvin, and E is the activation energy of the aging reaction (large E leads to fast aging, small E leads to slow aging).

Eq. (7.27) expresses the rule of chemical reactions which was derived by Svante Arrhenius in 1880. The form of the original Arrhenius formula can be obtained from the differential equation by integration as follows:

$$dR = Ae^{(-\frac{E}{KT})}dt, \quad \int dR = A \int e^{(-\frac{E}{KT})}dt, \quad \frac{R}{t} = Ae^{(-\frac{E}{KT})}, \quad \ln\left(\frac{R}{t}\right) = \ln\left(Ae^{(-\frac{E}{KT})}\right),$$

$$\ln(R) - \ln(t) = \ln(A) - \frac{E}{KT},$$

or

$$\ln(t) = \left(\frac{E}{K}\right) \frac{1}{T} + B. \quad (7.28)$$

The plot $\ln(t)$ versus $1/T$ is a straight line with the slope E/K , if for the lifetime t a logarithmic scale is employed, as shown in Fig. 7.15.

Eq. (7.28) expresses that the logarithm of the degradation (decreased life) time t is proportional to the activation energy E : this energy is transmitted in the form of heat to the chemical reaction or decomposition. Different kinds of materials need a different amount of heat energy to arrive at the same degree of deterioration. To obtain these data in the case of insulating materials, extensive experimental research has been done [24]. In this reference, one can find

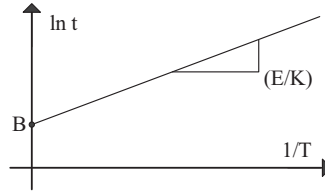


FIG. 7.15 Lifetime t or $\ln t$ versus the inverse of the absolute temperature T or $1/T$.

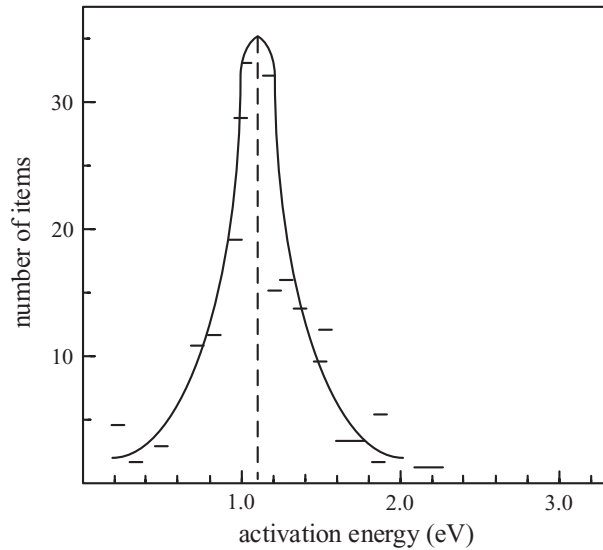


FIG. 7.16 Frequency distribution of activation energies of various organic and inorganic materials [24].

not only a list of the activation energies, but the frequency distribution of the activation energies of various materials. Properties monitored for these materials include flexural strength, impact strength, and dielectric strength. In Fig. 4 of [24], one notes the number of materials for each increment of 0.1 eV activation energy (see Fig. 7.16). The peak of this distribution curve occurs at about $E = 1.15$ eV.

The practical use of the Arrhenius plot and the consequences of the data of Fig. 4 of [24] will be discussed in the next section.

7.8 Decrease of lifetime due to an additional temperature rise

The slope of the Arrhenius plot based on

$$\ln(t) = \left(\frac{E}{K}\right) \frac{1}{T} + B \quad (7.29)$$

is the most important quantity (proportional to the activation energy E) for our investigation; this is the only quantity that determines the aging of the insulation material. Therefore, we have to use the slope of the Arrhenius plot as a measure of aging.

If one knows from experiments two (different) points of the plot belonging to temperatures T_1 and T_2 and lifetimes t_1 and t_2 , respectively, that is, (T_1, t_1) and (T_2, t_2) , then one can obtain for a given insulation material

$$\ln(t_1) - \ln(t_2) = \left(\frac{E}{K}\right) \left(\frac{1}{T_1} - \frac{1}{T_2}\right). \quad (7.30)$$

It must be noted that if the activation energy E is measured in electron volts one has to use for K the Boltzmann constant: $K = 1.38 \cdot 10^{-23} \text{ J/kelvin}$; in case the activation energy is given in kilocalories per mole the constant K will be the gas constant $K = R = 19.84 \cdot 10^{-4} \text{ kcal/mol}$. Note that $1 \text{ eV} = 1.602 \cdot 10^{-19} \text{ J}$ or $1 \text{ J} = 0.624 \cdot 10^{19} \text{ eV}$.

Suppose one knows the rated lifetime t_2 of an apparatus and its rated (constant) temperature T_2 at which it is operating. The question arises to what extent the lifetime decreases provided the elevated temperature becomes $T_1 = T_2 + \Delta T$ where $\Delta T = \Delta T_h$. To answer this question one has to substitute in Eq. (7.30) T_1 by $T_2 + \Delta T$:

$$\ln(t_1) - \ln(t_2) = \left(\frac{E}{K}\right) \left(\frac{1}{T_2 + \Delta T} - \frac{1}{T_2}\right). \quad (7.31)$$

After some manipulations, the new decreased lifetime is

$$t_1 = t_2 e^{-\left(\frac{E}{K}\right) \frac{\Delta T}{T_2(T_2 + \Delta T)}}, \quad (7.32)$$

where t_2 is the rated lifetime, T_2 is the rated temperature in kelvin, and ΔT is the (additional) temperature rise in degrees Celsius. Several examples will illustrate the use of the above relation as applied to the calculation of the decrease of the lifetime due to the additional temperature rise caused by the additional harmonic losses. In all following examples, it is assumed that the rated lifetime of the apparatus is $t_2 = 40$ years, and the steady-state rated temperature of the hottest spot is $T_2 = 100^\circ\text{C} \equiv 273 + 100 = 373 \text{ kelvin}$.

7.8.1 Application Example 7.3: Aging of a single-phase induction motor with $E = 0.74 \text{ eV}$ due to a single harmonic voltage

Determine for an activation energy of $E = 0.74 \text{ eV}$ the slope E/K and for the additional temperature rise $\Delta T_{h=3} = 6.6^\circ\text{C}$ (see Application Example 7.2 with $T_{\text{amb}} = 40^\circ$, $T_2 = T_{\text{rat}} = 100^\circ\text{C}$) the reduced lifetime of a single-phase induction motor.

Solution to Application Example 7.3 *Aging of a single-phase induction motor with $E = 0.74 \text{ eV}$ due to a single harmonic voltage*

The slope (E/K) is $E/K = 8.58 \cdot 10^3 \text{ kelvin}$. Thus one obtains from $t_1 = 40 e^{-8.58 \cdot 10^3 \frac{\Delta T_h}{373(373 + \Delta T_h)}}$, with $\Delta T_{h=3} = 6.6^\circ\text{C}$, a reduced lifetime of $t_1|_{\Delta T_{h=3}=6.6^\circ\text{C}} = 26.81 \text{ years}$.

7.8.2 Application Example 7.4: Aging of a single-phase induction motor with $E = 0.51 \text{ eV}$ due to a single harmonic voltage

Determine for an activation energy of $E = 0.51 \text{ eV}$ the slope E/K and for the additional temperature rise $\Delta T_{h=3} = 6.6^\circ\text{C}$ (see Application Example 7.2 with $T_{\text{amb}} = 40^\circ$, $T_2 = T_{\text{rat}} = 100^\circ\text{C}$) the reduced lifetime of a single-phase induction motor.

Solution to Application Example 7.4 *Aging of a single-phase induction motor with $E = 0.51$ eV due to a single harmonic voltage*

The slope (E/K) is $E/K = 5.91 \cdot 10^3$ kelvin. Thus one obtains from $t_1 = 40e^{-5.91 \cdot 10^3 \frac{\Delta T_h}{373 + \Delta T_h}}$, with $\Delta T_h = 6.6^\circ\text{C}$, a reduced lifetime of $t_{1|\Delta T_h=6.6^\circ\text{C}} = 30.37$ years.

From Application Examples 7.3 and 7.4 one concludes that lower values of the activation energy E result in lower decreases in lifetime.

7.9 Reduction of lifetime of components with activation energy $E = 1.1$ eV due to harmonics of the terminal voltage within residential or commercial utility systems

Fig. 7.14 shows the additional temperature rises (or losses) in percent of the rated temperature rises (or losses) as a function of the weighted-harmonic factor. These functions are obtained from calculations and measurements [18,19]. Note that the ambient temperature has been eliminated. For the evaluation of the reduction of the lifetime, one must base all calculations on an activation energy of about $E = 1.1$ eV because of Fig. 7.16, which confirms that the majority of (insulation) materials have such a distinct activation energy.

According to Fig. 7.14, a weighted harmonic-voltage factor of $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^\ell = 5.8$ corresponds to additional temperature rises (referred to the rated temperature rises) on the average of 6.2% for single-phase induction machines, 3.2% for three-phase induction machines, and 0.85% for transformers and universal machines. These percentage values confirm that single-phase machines are very sensitive to harmonic voltages due to their forward- and backward-rotating fields and their short-circuited rotor, three-phase induction machines are sensitive to voltage harmonics due to their short-circuited rotor, transformers are not very sensitive to voltage harmonics because of their resistive load, and universal machines are not sensitive as well because the commutator transforms a voltage source to a current source where the current magnitudes are limited. A weighted-harmonic voltage factor of 5.8 results for the rated temperature $T_2 = 85^\circ\text{C}$ at $T_{\text{amb}60\text{Hz}} \approx T_{\text{amb}h} = 23^\circ\text{C}$ in temperature increases of 3.84°C for single-phase induction machines, 1.98°C for three-phase induction machines, and 0.53°C for transformers and universal machines. With these additional temperature increases one obtains at an activation energy of $E = 1.1$ eV—with $E/K = 12,769$ kelvin—the decreased lifetime (using Eq. 7.32) of 31.5% for single-phase induction machines, 18% for three-phase induction machines, and 5% for transformers and universal machines.

7.9.1 Conclusion

It is believed that the weighted-harmonic voltage factor for single-phase and three-phase induction motors in the neighborhood of 5.8 represents a compromise which on the one hand promotes the installation of solid-state circuits by choosing generous permissible harmonic voltage levels, and on the other hand avoids severe detrimental reactions on the majority of the residential or commercial power system components including loads. Harmonic spectra of the residential or commercial power system voltage that satisfy for single-phase and three-phase induction motors

$$\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^\ell \approx 5.8 \quad (7.33)$$

result in acceptable temperature rises as far as induction motors, transformers, and universal machines are concerned. Thus it is recommended not to rigidly fix the harmonic voltages but rather the additional temperature rises they generate.

7.10 Possible limits for harmonic voltages

In order to illustrate the use of Eqs. (7.33) and (7.32), the harmonic voltage spectra for a single-phase and for a three-phase feeder (see Table 7.1) are proposed [33].

With average values of $k_{\text{avg}}=0.85$ and $\ell_{\text{avg}}=1.4$ for single-phase induction motors, $k_{\text{avg}}=0.95$ and $\ell_{\text{avg}}=1.6$ for three-phase induction motors, $k_{\text{avg}}=0.90$ and $\ell_{\text{avg}}=1.75$ for single-phase and three-phase transformers, and $k_{\text{avg}}=1.0$ and $\ell_{\text{avg}}=2.0$ for universal machines, one obtains for the single-phase spectrum of Table 7.1 the weighted harmonic-voltage

TABLE 7.1 Possible voltage spectra of single-phase and three-phase feeders.

h	$\left(\frac{V_h}{V_{60 \text{ Hz}}} \right)_{1\Phi} (\%)$	$\left(\frac{V_h}{V_{60 \text{ Hz}}} \right)_{3\Phi} (\%)$
1	100	100
2	0.5	0.5
3	4.0	2.0 ^a
4	0.3	0.5
5	3.0	5.0
6	0.2	0.2
7	2.0	3.5
8	0.2	0.2
9	1.0	0.3
10	0.1	0.1
11	1.5	1.5
12	0.1	0.1
13	1.5	1.0
14	0.1	0.05
15	0.5	0.1

TABLE 7.1 Possible voltage spectra of single-phase and three-phase feeders—cont'd

h	$\left(\frac{V_h}{V_{60 \text{ Hz}}}\right)_{1\Phi} (\%)$	$\left(\frac{V_h}{V_{60 \text{ Hz}}}\right)_{3\Phi} (\%)$
16	0.05	0.05
17	1.0	0.5
18	0.05	0.01
19	1.0	0.5

All higher harmonics <0.5%

^a Under certain conditions (e.g., DC bias of transformers as discussed in Chapter 2, and the harmonic generation of synchronous generators as outlined in Chapter 4) triplen harmonics are not of the zero-sequence type and can therefore exist in a three-phase system.

TABLE 7.2 Additional temperature rise and associated lifetime reduction of induction motors, transformers, and universal motors due to the harmonic spectra of Table 7.1.

	Single-phase induction motors	Three-phase induction motors	Single-phase transformers	Three-phase transformers	Universal motors
ΔT_h (%)	6.2	3.2	1.2	1.2	1.3
ΔT_h (°C)	3.84	1.98	0.74	0.74	0.81
Lifetime reduction (%)	31.5	17.8	7.1	7.1	7.7

factor for single-phase induction $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}}\right)^\ell \approx 5.7$. For the three-phase spectrum of Table 7.1 one obtains for three-phase induction motors $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}}\right)^\ell \approx 5.7$. For single-phase transformers $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}}\right)^\ell \approx 7.37$. For three-phase transformers, $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}}\right)^\ell \approx 7.4$. For universal motors, $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}}\right)^\ell \approx 8.5$. Any other set of voltage harmonics is feasible if Eq. (7.33) is about satisfied. Based on Fig. 7.14 (with $T_2=85^\circ\text{C}$, $T_{\text{amb}}=23^\circ\text{C}$, $E=1.1\text{ eV}$, and rated lifetime of $t_2=40$ years), those harmonic factors result in the additional temperature rises and lifetime reductions of Table 7.2.

7.10.1 Application Example 7.5: Estimation of lifetime reduction for given single-phase and three-phase voltage spectra with high harmonic penetration with activation energy $E=1.1\text{ eV}$

Estimate the lifetime reductions of induction machines, transformers, and universal machines for the single- and three-phase voltage spectra of Table E7.5.1 and their associated

lifetime reduction for an activation energy of $E = 1.1 \text{ eV}$. The ambient temperature is $T_{\text{amb}} = 23^\circ\text{C}$, the rated temperature is $T_2 = 85^\circ\text{C}$, and the rated lifetime of $t_2 = 40$ years can be assumed.

TABLE E7.5.1 Possible voltage spectra with high-harmonic penetration.

h	$\left(\frac{V_h}{V_{60 \text{ Hz}}}\right)_{1\Phi} (\%)$	$\left(\frac{V_h}{V_{60 \text{ Hz}}}\right)_{3\Phi} (\%)$
1	100	100
2	2.5	0.5
3	5.71	1.0
4	1.6	0.5
5	1.25	7.0
6	0.88	0.2
7	1.25	5.0
8	0.62	0.2
9	0.96	0.3
10	0.66	0.1
11	0.30	2.5
12	0.18	0.1
13	0.57	2.0
14	0.10	0.05
15	0.10	0.1
16	0.13	0.05
17	0.23	1.5
18	0.22	0.01
19	1.03	1.0
All higher harmonics <0.2%		

Solution to Application Example 7.5 *Estimation of lifetime reduction for given single-phase and three-phase voltage spectra with high harmonic penetration with activation energy $E = 1.1 \text{ eV}$*

Calculation of weighted harmonic factor for single-phase spectrum of [Table E7.5.1](#) based on the values for $k_{\text{avg}} = 0.85$ and $\ell_{\text{avg}} = 1.4$ for single-phase induction motors:

$$\frac{1}{2^{0.85}} (2.5)^{1.4} = 2.000, \quad \frac{1}{3^{0.85}} (5.71)^{1.4} = 4.506, \quad \frac{1}{4^{0.85}} (1.6)^{1.4} = 0.594, \dots,$$

$$\frac{1}{17^{0.85}}(0.23)^{1.4} = 0.0115, \quad \frac{1}{18^{0.85}}(0.22)^{1.4} = 0.0103, \quad \frac{1}{19^{0.85}}(1.03)^{1.4} = 0.0853.$$

Summing all contributions results in the weighted harmonic-voltage factor for single-phase induction motors $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^\ell \approx 8.5$.

Calculation of weighted harmonic factor for three-phase spectrum of Table E7.5.1 using the values for $k_{\text{avg}}=0.95$ and $\ell_{\text{avg}}=1.6$ for three-phase induction motors:

$$\frac{1}{2^{0.95}}(0.5)^{1.6} = 0.1707, \quad \frac{1}{3^{0.95}}(1.0)^{1.6} = 0.3522, \quad \frac{1}{4^{0.95}}(0.5)^{1.6} = 0.0884, \dots,$$

$$\frac{1}{17^{0.95}}(1.5)^{1.6} = 0.1297, \quad \frac{1}{18^{0.95}}(0.01)^{1.6} = 0.00004, \quad \frac{1}{19^{0.95}}(1.0)^{1.6} = 0.0609.$$

Summing all contributions results in the weighted harmonic-voltage factor for three-phase induction motors $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^\ell \approx 8.6$.

Calculation of weighted harmonic factor for single-phase spectrum of Table E7.5.1 based on the values for $k_{\text{avg}}=0.90$ and $\ell_{\text{avg}}=1.75$ for single-phase transformers:

$$\frac{1}{2^{0.9}}(2.5)^{1.75} = 2.664, \quad \frac{1}{3^{0.9}}(5.71)^{1.75} = 7.847, \quad \frac{1}{4^{0.9}}(1.6)^{1.75} = 0.6536, \dots,$$

$$\frac{1}{17^{0.9}}(0.23)^{1.75} = 0.00597, \quad \frac{1}{18^{0.9}}(0.22)^{1.75} = 0.00524, \quad \frac{1}{19^{0.9}}(1.03)^{1.75} = 0.744.$$

Summing all contributions results in the weighted harmonic-voltage factor for single-phase transformers $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^\ell \approx 12.3$.

Calculation of weighted harmonic factor for three-phase spectrum of Table E7.5.1 based on the values for $k_{\text{avg}}=0.90$ and $\ell_{\text{avg}}=1.75$ for three-phase transformers:

$$\frac{1}{2^{0.9}}(0.5)^{1.75} = 0.1593, \quad \frac{1}{3^{0.9}}(1.0)^{1.75} = 0.37203, \quad \frac{1}{4^{0.9}}(0.5)^{1.75} = 0.0854, \dots,$$

$$\frac{1}{17^{0.9}}(1.5)^{1.75} = 0.15876, \quad \frac{1}{18^{0.9}}(0.01)^{1.75} = 0.0000234, \quad \frac{1}{19^{0.9}}(1.0)^{1.75} = 0.07065.$$

Summing all above contributions results in the weighted harmonic-voltage factor for three-phase transformers $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^\ell \approx 11.8$.

Calculation of weighted harmonic factor for single-phase spectrum of Table E7.5.1 based on the values for $k_{\text{avg}}=1.0$ and $\ell_{\text{avg}}=2.0$ for universal motors:

$$\frac{1}{2^{1.0}}(2.5)^2 = 3.125, \quad \frac{1}{3^{1.0}}(5.71)^2 = 10.868, \quad \frac{1}{4^{1.0}}(1.6)^2 = 0.640, \dots,$$

$$\frac{1}{17^{1.0}}(0.23)^2 = 0.00311, \quad \frac{1}{18^{1.0}}(0.22)^2 = 0.0027, \quad \frac{1}{19^{1.0}}(1.03)^2 = 0.0558.$$

Summing all contributions results in the weighted harmonic-voltage factor for universal motors $\sum_{h=2}^{h_{\max}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^\ell \approx 15.6$.

Based on Fig. 7.14, $T_2 = 85^\circ\text{C}$, $T_{\text{amb}} = 23^\circ\text{C}$, $E = 1.1 \text{ eV}$, and rated lifetime of $t_2 = 40$ years the above harmonic factors result in the additional temperature rises and lifetime reductions of Table E7.5.2.

TABLE E7.5.2 Additional temperature rise and associated lifetime reduction of induction motors, transformers, and universal motors due to the harmonic spectra of Table E7.5.1.

	Single-phase induction motors	Three-phase induction motors	Single-phase transformers	Three-phase transformers	Universal motors
ΔT_h (%)	9.2	4.5	1.9	1.8	2.4
ΔT_h ($^\circ\text{C}$)	5.7	2.8	1.2	1.1	1.5
Lifetime reduction (%)	43	24	11	10	14

7.10.2 Application Example 7.6: Estimation of lifetime reduction for given single-phase and three-phase voltage spectra with moderate harmonic penetration with activation energy $E = 1.1 \text{ eV}$

Estimate the lifetime reductions for induction machines, transformers, and universal machines for the single- and three-phase voltage spectra of Table E7.6.1 and their associated lifetime reduction for an activation energy of $E = 1.1 \text{ eV}$. The ambient temperature is $T_{\text{amb}} = 23^\circ\text{C}$, the rated temperature is $T_2 = 85^\circ\text{C}$, and the rated lifetime of $t_2 = 40$ years can be assumed.

TABLE E7.6.1 Possible voltage spectra with moderate-harmonic penetration.

h	$\left(\frac{V_h}{V_{60 \text{ Hz}}} \right)_{1\Phi} (\%)$	$\left(\frac{V_h}{V_{60 \text{ Hz}}} \right)_{3\Phi} (\%)$
1	100	100
2	0.5	0.5
3	3.0	0.5
4	0.3	0.5
5	2.0	3.0
6	0.2	0.2
7	1.0	2.5
8	0.2	0.2
9	0.75	0.3

TABLE E7.6.1 Possible voltage spectra with moderate-harmonic penetration—cont'd

h	$\left(\frac{V_h}{V_{60 \text{ Hz}}}\right)_{1\Phi} (\%)$	$\left(\frac{V_h}{V_{60 \text{ Hz}}}\right)_{3\Phi} (\%)$
10	0.1	0.1
11	1.0	1.0
12	0.1	0.1
13	0.9	0.85
14	0.1	0.05
15	0.3	0.1
16	0.05	0.05
17	0.5	0.3
18	0.05	0.01
19	0.4	0.2
All higher harmonics <0.2%		

Solution to Application Example 7.6 Estimation of lifetime reduction for given single-phase and three-phase voltage spectra with moderate harmonic penetration with activation energy $E = 1.1 \text{ eV}$

Calculation of weighted harmonic factor for single-phase spectrum of Table E7.6.1 based on the values for $k_{\text{avg}} = 0.85$ and $\ell_{\text{avg}} = 1.4$ for single-phase induction motors:

$$\frac{1}{2^{0.85}} (0.5)^{1.4} = 0.2103, \quad \frac{1}{3^{0.85}} (3.0)^{1.4} = 1.8297, \quad \frac{1}{4^{0.85}} (0.3)^{1.4} = 0.05703, \dots,$$

$$\frac{1}{17^{0.85}} (0.5)^{1.4} = 0.0341, \quad \frac{1}{18^{0.85}} (0.05)^{1.4} = 0.0013, \quad \frac{1}{19^{0.85}} (0.4)^{1.4} = 0.0227.$$

Summing all contributions results in the weighted harmonic-voltage factor for single-phase induction motors $\sum_{h=2}^{h_{\text{max}}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}}\right)^\ell \approx 3.4$.

Calculation of weighted harmonic factor for three-phase spectrum of Table E7.6.1 using the values for $k_{\text{avg}} = 0.95$ and $\ell_{\text{avg}} = 1.6$ for three-phase induction motors:

$$\frac{1}{2^{0.95}} (0.5)^{1.6} = 0.1707, \quad \frac{1}{3^{0.95}} (0.5)^{1.6} = 0.1162, \quad \frac{1}{4^{0.95}} (0.5)^{1.6} = 0.0884, \dots,$$

$$\frac{1}{17^{0.95}} (0.3)^{1.6} = 0.00986, \quad \frac{1}{18^{0.95}} (0.01)^{1.6} = 0.00004, \quad \frac{1}{19^{0.95}} (0.2)^{1.4} = 0.00464.$$

Summing all contributions results in the weighted harmonic-voltage factor for three-phase induction motors $\sum_{h=2}^{h_{\text{max}}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}}\right)^\ell \approx 2.6$.

Calculation of weighted harmonic factor for single-phase spectrum of Table E7.6.1 based on the values for $k_{\text{avg}}=0.90$ and $\ell_{\text{avg}}=1.75$ for single-phase transformers:

$$\frac{1}{2^{0.9}}(0.5)^{1.75} = 0.1593, \quad \frac{1}{3^{0.9}}(0.3)^{1.75} = 2.544, \quad \frac{1}{4^{0.9}}(0.3)^{1.75} = 0.0349, \dots,$$

$$\frac{1}{17^{0.9}}(0.5)^{1.75} = 0.0232, \quad \frac{1}{18^{0.9}}(0.05)^{1.75} = 0.000392, \quad \frac{1}{19^{0.9}}(0.4)^{1.75} = 0.01421.$$

Summing all contributions results in the weighted harmonic-voltage factor for single-phase transformers $\sum_{h=2}^{h_{\text{max}}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^\ell \approx 4.1$.

Calculation of weighted harmonic factor for three-phase spectrum of Table E7.6.1 based on the values for $k_{\text{avg}}=0.90$ and $\ell_{\text{avg}}=1.75$ for three-phase transformers:

$$\frac{1}{2^{0.9}}(0.5)^{1.75} = 0.1593, \quad \frac{1}{3^{0.9}}(0.5)^{1.75} = 0.1106, \quad \frac{1}{4^{0.9}}(0.5)^{1.75} = 0.0854, \dots,$$

$$\frac{1}{17^{0.9}}(0.3)^{1.75} = 0.00949, \quad \frac{1}{18^{0.9}}(0.05)^{1.75} = 0.000392, \quad \frac{1}{19^{0.9}}(0.2)^{1.75} = 0.00423.$$

Summing all contributions results in the weighted harmonic-voltage factor for three-phase transformers $\sum_{h=2}^{h_{\text{max}}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^\ell \approx 3.1$.

Calculation of weighted harmonic factor for single-phase spectrum of Table E7.6.1 based on the values for $k_{\text{avg}}=1.0$ and $\ell_{\text{avg}}=2.0$ for universal motors:

$$\frac{1}{2^{1.0}}(0.5)^2 = 0.125, \quad \frac{1}{3^{1.0}}(3)^2 = 3.0, \quad \frac{1}{4^{1.0}}(0.3)^2 = 0.0225, \dots,$$

$$\frac{1}{17^{1.0}}(0.5)^2 = 0.0147, \quad \frac{1}{18^{1.0}}(0.05)^2 = 0.000139, \quad \frac{1}{19^{1.0}}(0.4)^2 = 0.00842.$$

Summing all contributions results in the weighted harmonic-voltage factor for universal motors: $\sum_{h=2}^{h_{\text{max}}} \frac{1}{(h)^k} \left(\frac{V_{ph}}{V_{p1}} \right)^\ell \approx 4.4$.

Based on Fig. 7.14 the above harmonic factors, $T_2=85^\circ\text{C}$, $T_{\text{amb}}=23^\circ\text{C}$, $E=1.1\text{ eV}$, and rated lifetime of $t_2=40$ years result in the additional temperature rises and lifetime reductions of Table E7.6.2.

TABLE E7.6.2 Additional temperature rise and associated lifetime reduction of induction motors, transformers, and universal motors due to the harmonic spectra of Table E7.6.1.

	Single-phase induction motors	Three-phase induction motors	Single-phase transformers	Three-phase transformers	Universal motors
ΔT_h (%)	3.7	1.3	0.6	0.4	0.7
ΔT_h ($^\circ\text{C}$)	2.3	0.81	0.37	0.25	0.43
Lifetime reduction (%)	20	7.7	3.6	2.5	4.2

7.11 Probabilistic and time-varying nature of harmonics

As mentioned in [Section 7.1](#), the harmonic current or voltage spectra within a distribution feeder are continually changing as a function of changes in the load and the system's condition. The rationale given for using the worst-case conditions, where loads are operating for at least a few hours at rated operation generating the "rated current/voltage spectra," is the basis for the IEEE [\[35\]](#) and IEC [\[36\]](#) harmonic guidelines and standards, respectively. Nevertheless it will be worthwhile to study the time-varying nature [\[37,38\]](#) of harmonic spectra. In these publications, continually changing current (THD_i) and voltage (THD_v) total harmonic distortions are plotted as a function of time. They indeed change widely from 2.5% to about 9% for THD_i , and from 1% to about 5% for the THD_v for one site, and for another site the changes are similar in magnitude. As mentioned in prior sections, the THDs are neither a good measure for temperature rises nor for vibrations; instead harmonic components should be used in any further studies. The measured THD data are characterized by statistical measures (e.g., minimum, maximum, average or mean values, standard deviation, probability distribution), histograms or probability density functions (pdf), probability distribution functions ($PX(x)$), statistical description of sub-time intervals, and combined deterministic or statistical description [\[41–45\]](#). These publications address the harmonic summation and propagation by explaining the sum of random harmonic phasors via the representation of harmonic phasors, marginal pdf of x - y components, pdf of sum of projections of independent phasors, and pdf of magnitude of sum of random phasors. These papers apply the methods described to a 14-bus transmission system and provide general guidelines with respect to their applicability. The probabilistic evaluation of the economic cost due to harmonic losses in industrial energy systems is presented in the next section.

7.12 The cost of harmonics

The cost of harmonics can originate either in

- the complicated solid-state components necessary to maintain the current or voltage harmonics at a low level, for example, switched-mode power supplies operating at unity-power factor [\[39\]](#), or in
- the use of simple peak-rectifiers resulting in high harmonic amplitudes [\[40\]](#).

Both costs are not negligibly small and must be considered in the future. The first approach appears to be favored by the IEC [\[36\]](#) for low-, medium-, and high-voltage power systems, whereas the latter appears to be favored by IEEE [\[35\]](#) for single-phase systems only.

In references [\[41–45\]](#) the cost of the latter approach is discussed by defining the economic damage (cost) due to harmonic losses $D = D_w + D_a$, where D_w is the operating cost and D_a is the aging cost. This economic damage is a probabilistic quantity because the harmonic voltage or current spectra change in a random manner. The expected value of these costs is defined as $E(D) = E(D_w) + E(D_a)$, where $E(D_w)$ is the present-worth expected value of the operating costs due to harmonic losses and $E(D_a)$ is the present-worth expected value of the aging costs due to harmonic losses. Numerical results for a 20kV, 150 MVA industrial feeder illustrate that the economic damage for induction motors is significant and within a lifetime of 35 years amounts to about the purchase cost (\$7625) of an induction motor.

7.13 Temperature as a function of time

Rotating machines, transformers, and inductors must be designed so that their rated temperatures will not be exceeded. For rotating machines, the maximum torques are not a design criterion as long as the machines continue to operate. The maximum permissible temperature (hot spot) must not be exceeded; otherwise, the lifetime will be reduced. Note that any machine works most efficiently and cost-effectively if the permissible (maximum) rated temperature will be reached but not exceeded at any time. At steady-state machines must be able to operate at rated torque. For a short time, machines can be operated above rated torque. This leads to the concept of intermittent operation discussed in a later section.

A motor can be replaced by a radiating sphere as illustrated in Fig. 7.17. During a small time increment dt one can assume that the temperature of the sphere increases by the incremental temperature $d\theta$. For this reason, the change in stored heat (increase) dQ_C during the time dt is

$$dQ_C = C \cdot d\theta, \quad (7.34)$$

where θ is the temperature rise and C is the heat-absorption capacity. Note that Eq. (7.34) is independent of time.

Due to thermal radiation a part of the stored heat will be emitted to the surrounding environment. The change of the stored heat (reduction) dQ_A is time dependent:

$$dQ_A = A \cdot \theta \cdot dt, \quad (7.35)$$

where A is the heat-radiation capacity.

The sum of Eqs. (7.34) and (7.35) yields the ordinary differential equation

$$dQ = dQ_C + dQ_A = C \cdot d\theta + A \cdot \theta \cdot dt = P_{\text{loss}} \cdot dt, \quad (7.36)$$


where $P_{\text{loss}} \cdot dt$ is the (loss) energy absorbed by the machine during the incremental time dt . Dividing Eq. (7.36) by dt and A , one obtains the first-order ordinary differential equation

$$\frac{P_{\text{loss}}}{A} = \frac{C}{A} \cdot \frac{d\theta}{dt} + \theta = \tau_\theta \cdot \frac{d\theta}{dt} + \theta, \quad (7.37)$$

where $\tau_\theta = (C/A)$ is the thermal time constant. The solution of this first-order differential equation is

$$\theta = \frac{P_{\text{loss}}}{A} + k \cdot e^{(-t/\tau_\theta)}. \quad (7.38)$$

FIG. 7.17 Rotating machine represented by radiating sphere.

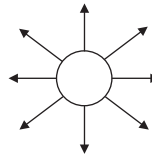

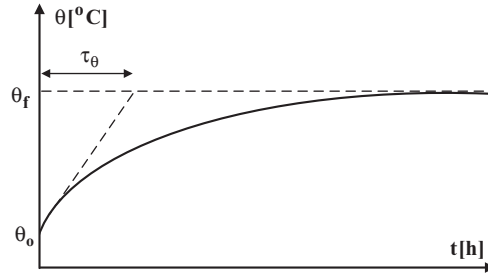


FIG. 7.18 Solution of Eq. (7.39) including its time constant τ_θ .

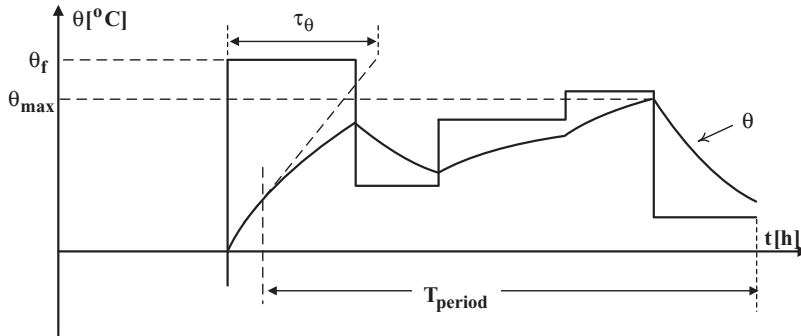


FIG. 7.19 Temperature transient during a load cycle.

For $t = 0$ and $\theta = \theta_0$ (initial temperature rise) and for $t = \infty$ with $\theta = \theta_f = P_{\text{loss}}/A$ (final temperature rise) one obtains for the temperature as a function of time

$$\theta = \theta_f - (\theta_f - \theta_0) \cdot e^{(-t/\tau_\theta)}. \quad (7.39)$$

Fig. 7.18 illustrates the solution of Eq. (7.39) including its time constant. The temperature transient during a load cycle is schematically depicted in Fig. 7.19 with $\theta_f = P_{\text{loss}}/A$.

7.13.1 Application Example 7.7: Temperature increase of rotating machine with a step load

An enclosed fan-cooled induction motor has a thermal time constant of $\tau_\theta = 3h$ and a steady-state rated temperature of $\theta_f = 120^\circ\text{C}$ at an ambient temperature of $\theta_{\text{amb}} = 40^\circ\text{C}$. The motor has at time $t = 0_-$ a temperature of $\theta = \theta_{\text{amb}}$, and the motor is fully loaded at $t = 0_+$. Calculate the time $t_{95\%}$ when the fully loaded motor reaches 95% of its final temperature $\theta_f = 120^\circ\text{C}$.

Solution to Application Example 7.7 *Temperature increase of rotating machine with a step load*

With Eq. (7.39) one obtains

$$0.95 \cdot \theta_f = \theta_f - (\theta_f - \theta_{\text{amb}}) e^{(-t_{95\%}/\tau_\theta)},$$

$$0.95 \cdot 120 = (120 - 40) e^{\left(\frac{-t_{95\%}}{\tau_\theta}\right)},$$

or

$$t_{95\%} = 2.59 \cdot \tau_\theta = 7.77 \text{ h}.$$

7.14 Various operating modes of rotating machines

Depending on their applications, rotating machines can be subjected to various operating modes such as steady-state, short-term, steady-state with short-term, intermittent, and steady-state with intermittent operating modes.

7.14.1 Steady-state operation

Steady-state temperature is reached when the operating time of the machine t_{oper} is large as compared with the time constant τ_θ of the machine. That is,

$$t_{\text{oper}} \geq (3 - 4) \cdot \tau_\theta. \quad (7.40)$$

According to experience the thermal time constant for openly ventilated machines is

$$\tau_\theta \approx 1 \text{ h} \quad (7.41)$$

and for enclosed but ventilated machines

$$\tau_\theta \approx (3 - 4) \text{ h}. \quad (7.42)$$

During steady-state operation the rated output power must be delivered by the machine.

7.14.2 Short-term operation

For short-term operation one assumes that the machine cools down to the ambient temperature and its temperature rise (initial temperature rise) is $\theta_o = 0$. Fig. 7.20 illustrates the transient temperature of this operating mode.

The absence of any ventilation during standstill (time $t_{\text{standstill}}$) requires that the time constant during standstill be longer than that during operation (time t_{oper}), that is, $\tau_{\text{standstill}} > \tau_{\text{oper}}$. For short-term operation, the times t_{oper} and $t_{\text{standstill}}$ must relate to the time constants as follows:

$$t_{\text{oper}} < (3 - 4) \cdot \tau_{\text{oper}}, \quad (7.43)$$

$$t_{\text{standstill}} < (3 - 4) \cdot \tau_{\text{standstill}}. \quad (7.44)$$

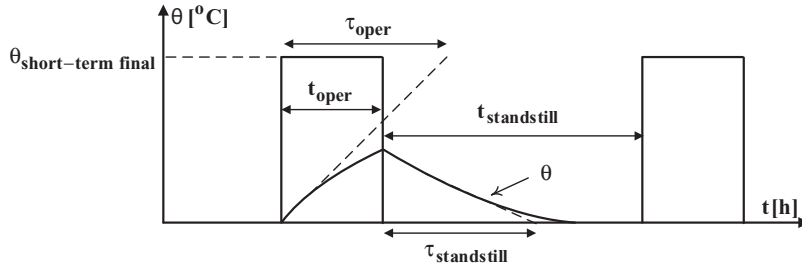


FIG. 7.20 Transient temperature for short-term operation.

The transient temperature is for short-term operation (see Fig. 7.20):

$$\theta_{\text{short-term}} = \theta_{\text{rated}} = \theta_{\text{short-term_final}} \left[1 - e^{(-t_{\text{oper}}/\tau_{\text{oper}})} \right]. \quad (7.45)$$

The final short-term temperature is obtained from Eq. (7.45):

$$\theta_{\text{short-term_final}} = \frac{\theta_{\text{rated}}}{\left[1 - e^{(-\frac{t_{\text{oper}}}{\tau_{\text{oper}}})} \right]}, \quad (7.46)$$

with

$$\theta_{\text{short-term_final}} \propto P_{\text{loss_short-term}} \quad (7.47)$$

and

$$\theta_{\text{rated}} \propto P_{\text{loss_rated}}. \quad (7.48)$$

It follows for the losses during short-term operation:

$$P_{\text{loss_short-term}} = \frac{P_{\text{loss_rated}}}{\left[1 - e^{(-\frac{t_{\text{oper}}}{\tau_{\text{oper}}})} \right]}. \quad (7.49)$$

For machines whose losses consist of iron-core and copper losses (e.g., induction machines) the total losses at rated operation are

$$P_{\text{loss_rated}} = p \cdot P_{\text{rated}} + q \cdot P_{\text{rated}}. \quad (7.50)$$

The first term of Eq. (7.50) pertains to the iron-core and the second term to the copper losses. The losses during short-term operation are

$$P_{\text{loss_short-term}} = p \cdot P_{\text{rated}} + q \cdot P_{\text{rated}} \left(\frac{P_{\text{loss_short-term}}}{P_{\text{rated}}} \right)^2. \quad (7.51)$$

Introducing Eqs. (7.50) and (7.51) into Eq. (7.49) yields the ratio

$$\frac{P_{\text{loss_short-term}}}{P_{\text{rated}}} = \sqrt{\left[1 + \frac{p}{q}\right] \left\{ \frac{1}{1 - e^{-\left(\frac{t_{\text{oper}}}{\tau_{\theta}}\right)}} \right\}} - \frac{p}{q} \quad (7.52)$$

where the ratio p/q is available from the manufacturer of the machine.

7.14.3 Steady state with short-term operation

In this case the short-term load is superposed with the steady-state load (see Fig. 7.21). The operating time t_{oper} and the pause time t_{pause} relate to the time constant as follows:

$$t_{\text{oper}} < (3 - 4) \cdot \tau_{\theta}, \quad (7.53)$$

$$t_{\text{pause}} > (3 - 4) \cdot \tau_{\theta}, \quad (7.54)$$

and the ratio between the required power during steady-state with short-term load to the rated power is

$$\frac{P_{\text{steady-state+short-time}}}{P_{\text{rated}}} = \sqrt{\frac{1}{\left[1 - e^{-\left(\frac{t_{\text{oper}}}{\tau_{\theta}}\right)}\right]}}. \quad (7.55)$$

In Eq. (7.55) the iron-core losses are neglected ($p = 0$).

7.14.4 Intermittent operation

The mode of intermittent operation occurs most frequently. One can differentiate between two cases:

- irregular load steps (see Fig. 7.22), and
- regular load steps.

The case with irregular load steps is discussed in Application Example 7.8.

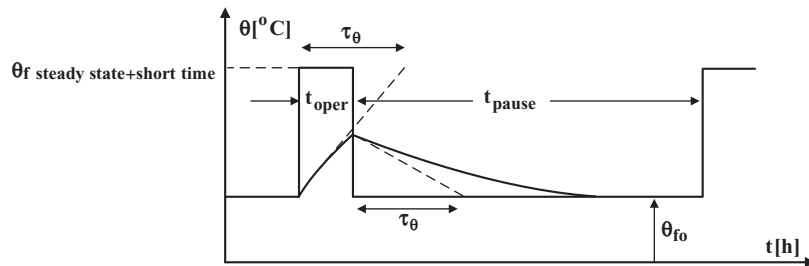


FIG. 7.21 Transient temperature for steady-state load superposed with short-term load.

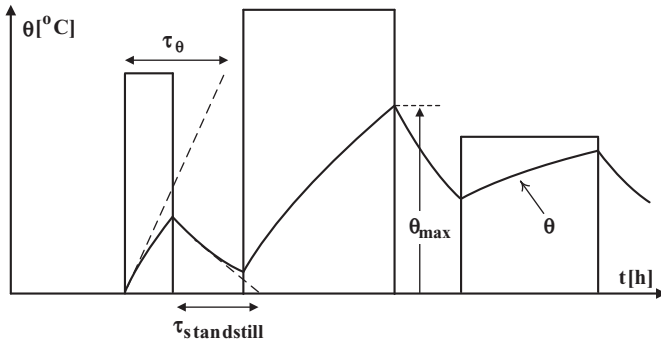


FIG. 7.22 Intermittent operation with irregular load steps.

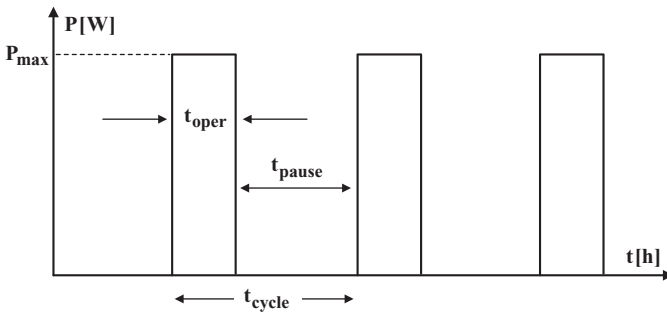


FIG. 7.23 Intermittent operation with regular load steps.

The case with regular load steps can be approximated as follows based on Fig. 7.23:

$$\frac{P_{\text{intermittent}}}{P_{\text{rated}}} = \sqrt{\left(1 + \frac{p}{q}\right) \left(1 + \frac{t_{\text{pause}}}{t_{\text{oper}}} \cdot \frac{\tau_{\theta}}{\tau_{\text{standstill}}}\right)} - \frac{p}{q}. \quad (7.56)$$

7.14.5 Steady state with intermittent operation

Steady state with superimposed periodic intermittent operation (see Fig. 7.24) does not occur frequently. The ratio between the power required for this case and the rated power is

$$\frac{P_{\text{steady-state+periodic intermittent}}}{P_{\text{rated}}} = \sqrt{\left(1 + \frac{t_{\text{pause}}}{t_{\text{oper}}}\right)} \quad (7.57)$$

for $t_{\text{oper}} < (3-4) \tau_{\theta}$ and $t_{\text{pause}} < (3-4) \tau_{\theta}$. In summary, one can state that for the motor sizing the maximum temperature (and not the torque) is important.

Intermittent operation occurs in drives such as used in hybrid cars, wind-power plants, air-conditioning and refrigeration systems, and others. For this reason, a detailed analysis of steady state with superposed intermittent operation will be presented in Application Example 7.8.

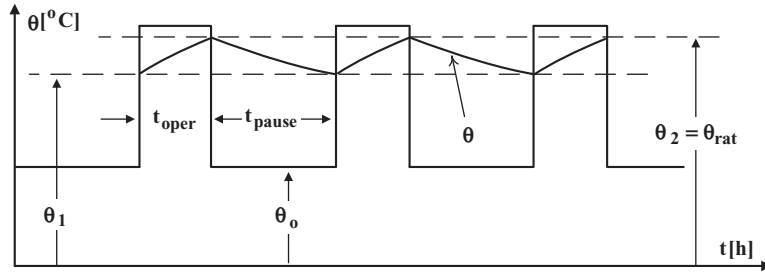


FIG. 7.24 Steady state with superimposed periodic intermittent operation with regular load steps.

7.14.6 Application Example 7.8: Steady state with superimposed periodic intermittent operation with irregular load steps

A three-phase, squirrel-cage induction motor is fed by a voltage-source inverter. The induction motor is operated at variable frequency and constant (rated) flux (i.e., $|\tilde{E}|/f = \text{constant}$) and has the following nameplate data: $V_{L-L} = 460 \text{ V}$, $f = 60 \text{ Hz}$, $p = 4$ poles, $n_{m_rat} = 1720 \text{ rpm}$, $P_{out_rat} = 29.594 \text{ kW}$ or 39.67 hp . The stator winding is Y-connected, and the parameters per phase are $R_s = 0.5 \Omega$, $R'_r = 0.2 \Omega$, $X_s = X'_r = 1 \Omega$, $X_m = 30 \Omega$ at $f = 60 \text{ Hz}$, and $R_{fe} \rightarrow \infty$. The axial moment of inertia of the motor is $J_m = 0.234 \text{ kg m}^2$, the viscous damping coefficient B can be assumed to be zero, and the inertia of the load referred to the motor shaft is $J_{load} = 4.766 \text{ kg m}^2$. The steady-state/intermittent load cycle is shown in Fig. E7.8.1.

The induction motor is operated at 60 Hz (natural torque-speed characteristic).

- Determine the rated synchronous speed, rated synchronous angular velocity, rated angular velocity, rated slip, rated stator current $|\tilde{I}_s|$, rated rotor current $|\tilde{I}_r|$, and rated induced voltage $|\tilde{E}|$.
- Calculate the maximum torque T_{max} at s_m and the fictitious maximum torque T_{max_fict} at $s = 1$.
- Derive from the equation of motion the slip $s(t)$ as a function of the initial slip $s(0)$, the load torque $T_L(t)$, the maximum fictitious torque T_{max_fict} , the time constant τ_m , and the time t .
- Apply the solution for $s(t)$ to the different regions of Fig. E7.8.1 and plot $s(t)$ from $t = 0$ to the maximum time $t = 5 \text{ s}$ of the load-cycle time period of $T_{period} = 5 \text{ s}$.
- Calculate the torque $T(t)$ and plot it from $t = 0$ to $t = 5 \text{ s}$.
- Based on the slip function compute point-wise the stator current $|\tilde{I}_s(t)|$ and plot $|\tilde{I}_s(t)|$ from $t = 0$ to $t = 5 \text{ s}$.
- Plot $|\tilde{I}_s(t)|^2$ as a function of time from $t = 0$ to $t = 5 \text{ s}$.
- Determine the rms value of the motor (stator) current $i_s(t)$ for the entire load cycle as specified in Fig. E7.8.1; that is, determine

$$I_{s_rms} = \sqrt{\frac{1}{T} \int_t^{t+T} |\tilde{I}_s(t)|^2 dt}.$$

- Is this induction motor over- or underdesigned? If it is underdesigned, what is the reduction of lifetime?

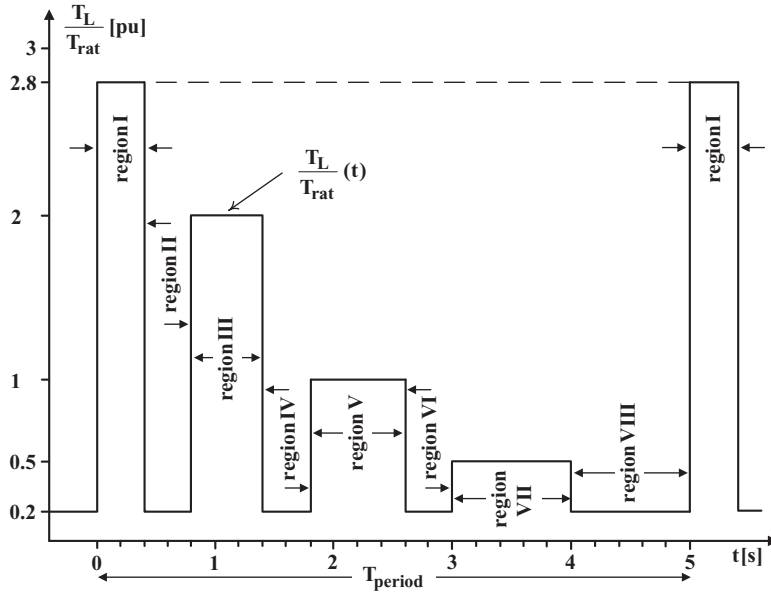


FIG. E7.8.1 Steady-state intermittent load cycle.

Solution to Application Example 7.8 *Steady state with superimposed periodic intermittent operation with irregular load steps*

The induction motor is operated at 60Hz (natural torque-speed characteristic) [46].

(a)

$$\begin{aligned}
 n_{ms} &= 1800 \text{ rpm}, \quad \omega_{ms} = 188.49 \text{ rad/s}, \quad \omega_m = 180.11 \text{ rad/s}, \\
 s_{rat} &= 0.044, \quad |\tilde{I}_s(t)| = 49.82 \text{ A}, \quad |\tilde{I}_r(t)| = 47.66 \text{ A}, \\
 |\tilde{E}| &= 221.75 \text{ V}, \quad \text{and} \quad T_{rat} = 164.31 \text{ Nm}.
 \end{aligned}
 \tag{E7.8.1}$$

(b) Due to constant flux control, the $(\omega_m - T)$ or the $(s - T)$ characteristic consists of a family of parallel lines as indicated in Fig. E7.8.2.

The maximum torque T_{max} and the slip s_m where the maximum torque occurs are [46]

$$T_{max} = 391.32 \text{ Nm}, \quad s_m = 0.20. \tag{E7.8.2}$$

From the relation (see Fig. E7.8.2)

$$\frac{T_{rat}}{T_{max_fict}} = \frac{s_{rat}}{1} \tag{E7.8.3}$$

one obtains for the maximum fictitious torque

$$T_{\max_fict} = T_{\text{rat}}/s_{\text{rat}} = 3734.3 \text{ Nm}. \quad (\text{E7.8.4})$$

(c) Equation of motion (or fundamental torque equation) is

$$T - T_L - J \frac{d\omega_m}{dt} = 0, \quad (\text{E7.8.5})$$

where T_L and T are the load and the motor torques, respectively. J is the total axial moment of inertia $J = J_m + J_{\text{load}}$. Dividing this equation by $T_{\max_fict}$ one gets

$$\frac{T}{T_{\max_fict}} - \frac{T_L}{T_{\max_fict}} - \frac{J}{T_{\max_fict}} \cdot \frac{d\omega_m}{dt} = 0 \quad (\text{E7.8.6})$$

or with $\frac{T}{T_{\max_fict}} = s$ follows

$$s - \frac{T_L}{T_{\max_fict}} - \frac{J}{T_{\max_fict}} \cdot \frac{d\omega_m}{dt} = 0, \quad (\text{E7.8.7})$$

with $\omega_m = \omega_{ms}(1-s)$ the differential equation becomes

$$\tau_m \frac{ds}{dt} + s = \frac{T_L}{T_{\max_fict}} \quad (\text{E7.8.8})$$

where

$$\tau_m = \frac{(J \cdot \omega_{ms})}{T_{\max_fict}} = \frac{(5 \cdot 188.49)}{3734.3} = 0.252 \text{ s} \quad (\text{E7.8.9})$$

is the mechanical time constant.

The general solution of this differential equation is

$$s(t) = \text{const} \cdot e^{\left(-\frac{t}{\tau_m}\right)} + \frac{T_L}{T_{\max_fict}}. \quad (\text{E7.8.10})$$

For the initial condition where at $t=0$ one assigns $s=s(0)$

$$s(t) = \left(s(0) - \frac{T_L(t)}{T_{\max_fict}} \right) \cdot e^{\left(-\frac{t}{\tau_m}\right)} + \frac{T_L(t)}{T_{\max_fict}}. \quad (\text{E7.8.11})$$

(d) Application of $s(t)$ to eight different regions of [Fig. E7.8.1](#).

Region I. It is assumed that the motor at time $t = 0$ s (at the start of the load cycle) has the steady-state slip of $s(0)$. This slip is obtained from

$$\frac{T(0)}{T_{\text{rat}}} = \frac{s(0)}{s_{\text{rat}}}, \quad (\text{E7.8.12})$$

and with [Fig. E7.8.1](#)

$$T(0) = 0.2 \cdot T_{\text{rat}} = 32.86 \text{ Nm}$$

$$s(0) = 32.86 \cdot 0.044 / (164.31) = 0.0088.$$

Therefore, the slip at the start of region (I) is

$$s(t^{(\text{I})} = 0) = 0.0088.$$

It is best to introduce for each region a new coordinate system for the time axis. Thus for region (I) ($0 \leq t^{(\text{I})} \leq 0.4 \text{ s}$) one obtains from Fig. E7.8.1 the load torque

$$T_L^{(\text{I})} = 2.8 \cdot T_{\text{rat}} = 460.07 \text{ Nm}.$$

With Eq. (E7.8.11)

$$s(t^{(\text{I})}) = \left(s(t^{(\text{I})} = 0) - \frac{T_L^{(\text{I})}(t^{(\text{I})})}{T_{\text{max_fict}}} \right) \cdot e^{\left(-\frac{t^{(\text{I})}}{\tau_m}\right)} + \frac{T_L^{(\text{I})}(t^{(\text{I})})}{T_{\text{max_fict}}} = \left(0.0088 - \frac{460.07}{3734.3} \right) \cdot e^{\left(-\frac{t^{(\text{I})}}{\tau_m}\right)} + \frac{460.07}{3734.3}$$

$$s(t^{(\text{I})}) = -0.1144 \cdot e^{\left(-\frac{t^{(\text{I})}}{\tau_m}\right)} + 0.1232$$

$$s(t^{(\text{I})} = 0.4 \text{ s}) = 0.0998 = s(t^{(\text{II})} = 0)$$

and

$$s(t^{(\text{I})} = 0.2 \text{ s}) = 0.07147.$$

Region II. For region II ($0 \leq t^{(\text{II})} \leq 0.4 \text{ s}$) one obtains from Fig. E7.8.1, the load torque

$$T_L^{(\text{II})} = 0.2 \cdot T_{\text{rat}} = 32.86 \text{ Nm}.$$

With Eq. (E7.8.11)

$$s(t^{(\text{II})}) = \left(s(t^{(\text{II})} = 0) - \frac{T_L^{(\text{II})}(t^{(\text{II})})}{T_{\text{max_fict}}} \right) \cdot e^{\left(-\frac{t^{(\text{II})}}{\tau_m}\right)} + \frac{T_L^{(\text{II})}(t^{(\text{II})})}{T_{\text{max_fict}}}$$

$$= \left(0.0998 - \frac{32.86}{3734.3} \right) \cdot e^{\left(-\frac{t^{(\text{II})}}{\tau_m}\right)} + \frac{32.86}{3734.3}$$

$$s(t^{(\text{II})}) = 0.091 \cdot e^{\left(-\frac{t^{(\text{II})}}{\tau_m}\right)} + 0.0088$$

$$s(t^{(\text{II})} = 0.4 \text{ s}) = 0.0274 = s(t^{(\text{III})} = 0)$$

and

$$s(t^{(\text{II})} = 0.2 \text{ s}) = 0.04994.$$

Region III. For region III ($0 \leq t^{(III)} \leq 0.6$ s) one obtains from Fig. E7.8.1, the load torque

$$T_L^{(III)} = 2 \cdot T_{\text{rat}} = 328.62 \text{ Nm.}$$

With Eq. (E7.8.11)

$$\begin{aligned} s(t^{(III)}) &= \left(s(t^{(III)} = 0) - \frac{T_L^{(III)}(t^{(III)})}{T_{\text{max_fict}}} \right) \cdot e^{\left(-\frac{t^{(III)}}{\tau_m}\right)} + \frac{T_L^{(III)}(t^{(III)})}{T_{\text{max_fict}}} \\ &= \left(0.0274 - \frac{328.62}{3734.3} \right) \cdot e^{\left(-\frac{t^{(III)}}{\tau_m}\right)} + \frac{328.62}{3734.3} \\ s(t^{(III)}) &= -0.060 \cdot e^{\left(-\frac{t^{(III)}}{\tau_m}\right)} + 0.088 \\ s(t^{(III)} = 0.6 \text{ s}) &= 0.0824 = s(t^{(IV)} = 0) \end{aligned}$$

and

$$s(t^{(III)} = 0.3 \text{ s}) = 0.06957.$$

Region IV. For region IV ($0 \leq t^{(IV)} \leq 0.4$ s) one obtains from Fig. E7.8.1, the load torque

$$T_L^{(IV)} = 0.2 \cdot T_{\text{rat}} = 32.86 \text{ Nm.}$$

With Eq. (E7.8.11)

$$\begin{aligned} s(t^{(IV)}) &= \left(s(t^{(IV)} = 0) - \frac{T_L^{(IV)}(t^{(IV)})}{T_{\text{max_fict}}} \right) \cdot e^{\left(-\frac{t^{(IV)}}{\tau_m}\right)} + \frac{T_L^{(IV)}(t^{(IV)})}{T_{\text{max_fict}}} \\ &= \left(0.0824 - \frac{32.86}{3734.3} \right) \cdot e^{\left(-\frac{t^{(IV)}}{\tau_m}\right)} + \frac{32.86}{3734.3} \\ s(t^{(IV)}) &= 0.0736 \cdot e^{\left(-\frac{t^{(IV)}}{\tau_m}\right)} + 0.0088 \\ s(t^{(IV)} = 0.4 \text{ s}) &= 0.02385 = s(t^{(V)} = 0) \end{aligned}$$

and

$$s(t^{(IV)} = 0.2 \text{ s}) = 0.04208.$$

Region V. For region V ($0 \leq t^{(V)} \leq 0.8$ s) one obtains from Fig. E7.8.1, the load torque

$$T_L^{(V)} = T_{\text{rat}} = 164.3 \text{ Nm.}$$

With Eq. (E7.8.11)

$$\begin{aligned}
 s(t^{(V)}) &= \left(s(t^{(V)} = 0) - \frac{T_L^{(V)}(t^{(V)})}{T_{\max_fict}} \right) \cdot e^{\left(-\frac{t^{(V)}}{\tau_m}\right)} + \frac{T_L^{(V)}(t^{(V)})}{T_{\max_fict}} \\
 &= \left(0.02384 - \frac{164.31}{3734.3} \right) \cdot e^{\left(-\frac{t^{(V)}}{\tau_m}\right)} + \frac{164.31}{3734.3} \\
 s(t^{(V)}) &= -0.0202 \cdot e^{\left(-\frac{t^{(V)}}{\tau_m}\right)} + 0.044 \\
 s(t^{(V)} = 0.8 \text{ s}) &= 0.0432 = s(t^{(VI)} = 0)
 \end{aligned}$$

and

$$s(t^{(V)} = 0.4 \text{ s}) = 0.03987.$$

Region VI. For region VI ($0 \leq t^{(VI)} \leq 0.4 \text{ s}$) one obtains from Fig. E7.8.1, the load torque

$$T_L^{(VI)} = 0.2 \cdot T_{\text{rat}} = 32.86 \text{ Nm}.$$

With Eq. (E7.8.11)

$$\begin{aligned}
 s(t^{(VI)}) &= \left(s(t^{(VI)} = 0) - \frac{T_L^{(VI)}(t^{(VI)})}{T_{\max_fict}} \right) \cdot e^{\left(-\frac{t^{(VI)}}{\tau_m}\right)} + \frac{T_L^{(VI)}(t^{(VI)})}{T_{\max_fict}} \\
 &= \left(0.0432 - \frac{32.86}{3734.3} \right) \cdot e^{\left(-\frac{t^{(VI)}}{\tau_m}\right)} + \frac{32.86}{3734.3} \\
 s(t^{(VI)}) &= 0.0344 \cdot e^{\left(-\frac{t^{(VI)}}{\tau_m}\right)} + 0.0088 \\
 s(t^{(VI)} = 0.4 \text{ s}) &= 0.01583 = s(t^{(VII)} = 0)
 \end{aligned}$$

and

$$s(t^{(VI)} = 0.2 \text{ s}) = 0.0244.$$

Region VII. For region VII ($0 \leq t^{(VII)} \leq 1 \text{ s}$) one obtains from Fig. E7.8.1, the load torque

$$T_L^{(VII)} = 0.5 \cdot T_{\text{rat}} = 82.155 \text{ Nm}.$$

With Eq. (E7.8.11)

$$s(t^{(VII)}) = \left(s(t^{(VII)} = 0) - \frac{T_L^{(VII)}(t^{(VII)})}{T_{\max_fict}} \right) \cdot e^{\left(-\frac{t^{(VII)}}{\tau_m}\right)} + \frac{T_L^{(VII)}(t^{(VII)})}{T_{\max_fict}}$$

$$\begin{aligned}
&= \left(0.01583 - \frac{82.155}{3734.3} \right) \cdot e^{\left(-\frac{t^{(\text{VII})}}{\tau_m} \right)} + \frac{82.155}{3734.3} \\
s(t^{(\text{VII})}) &= -0.00617 \cdot e^{\left(-\frac{t^{(\text{VII})}}{\tau_m} \right)} + 0.022 \\
s(t^{(\text{VII})} = 1 \text{ s}) &= 0.0219 = s(t^{(\text{VIII})} = 0)
\end{aligned}$$

and

$$s(t^{(\text{VII})} = 0.5 \text{ s}) = 0.02115.$$

Region VIII. For region VIII ($0 \leq t^{(\text{VIII})} \leq 1 \text{ s}$) one obtains from Fig. E7.8.1, the load torque

$$T_L^{(\text{VIII})} = 0.2 \cdot T_{\text{rat}} = 32.86 \text{ Nm}.$$

With Eq. (E7.8.11)

$$\begin{aligned}
s(t^{(\text{VIII})}) &= \left(s(t^{(\text{VIII})} = 0) - \frac{T_L^{(\text{VIII})}(t^{(\text{VIII})})}{T_{\text{max_fict}}} \right) \cdot e^{\left(-\frac{t^{(\text{VIII})}}{\tau_m} \right)} + \frac{T_L^{(\text{VIII})}(t^{(\text{VIII})})}{T_{\text{max_fict}}} \\
&= \left(0.0219 - \frac{32.86}{3734.3} \right) \cdot e^{\left(-\frac{t^{(\text{VIII})}}{\tau_m} \right)} + \frac{32.86}{3734.3} \\
s(t^{(\text{VIII})}) &= 0.0131 \cdot e^{\left(-\frac{t^{(\text{VIII})}}{\tau_m} \right)} + 0.0088 \\
s(t^{(\text{VIII})} = 1 \text{ s}) &= 0.0090 \approx s(t^{(\text{I})} = 0.0088),
\end{aligned}$$

that is, the periodicity of the slip $s(t)$ is about satisfied, and

$$s(t^{(\text{VIII})} = 0.5 \text{ s}) = 0.0106.$$

The plot of $s(t)$ is given in Fig. E7.8.3.

(e) Calculation of the torque $T(t)$ and its plot from $t = 0$ to $t = 5 \text{ s}$. From $\frac{T}{T_{\text{max_fict}}} = \frac{s}{1}$ follows

$$T = s \cdot T_{\text{max_fict}}, \quad (\text{E7.8.13})$$

Region I

$$T(t^{(\text{I})}) = s(t^{(\text{I})}) \cdot T_{\text{max_fict}}, \quad (\text{E7.8.14})$$

$$\begin{aligned}
T(t^{(\text{I})} = 0 \text{ s}) &= 0.0088 \cdot 3734.3 = 32.86 \text{ Nm} \equiv 0.2 \text{ pu}^*, \\
T(t^{(\text{I})} = 0.2 \text{ s}) &= 266.9 \text{ Nm} \equiv 1.62 \text{ pu}, \\
T(t^{(\text{I})} = 0.4 \text{ s}) &= 372.7 \text{ Nm} \equiv 2.27 \text{ pu}.
\end{aligned}$$

Region II

$$\begin{aligned} T(t^{(II)} = 0 \text{ s}) &= 372.7 \text{ Nm} \equiv 2.27 \text{ pu}, \\ T(t^{(II)} = 0.2 \text{ s}) &= 186.5 \text{ Nm} \equiv 1.14 \text{ pu}, \\ T(t^{(II)} = 0.4 \text{ s}) &= 102.3 \text{ Nm} \equiv 0.62 \text{ pu}. \end{aligned}$$

Region III

$$\begin{aligned} T(t^{(III)} = 0 \text{ s}) &= 102.3 \text{ Nm} \equiv 0.62 \text{ pu}, \\ T(t^{(III)} = 0.3 \text{ s}) &= 259.8 \text{ Nm} \equiv 1.58 \text{ pu}, \\ T(t^{(III)} = 0.6 \text{ s}) &= 307.7 \text{ Nm} \equiv 1.87 \text{ pu}. \end{aligned}$$

Region IV

$$\begin{aligned} T(t^{(IV)} = 0 \text{ s}) &= 307.7 \text{ Nm} \equiv 1.87 \text{ pu}, \\ T(t^{(IV)} = 0.2 \text{ s}) &= 157.1 \text{ Nm} \equiv 0.96 \text{ pu}, \\ T(t^{(IV)} = 0.4 \text{ s}) &= 89.1 \text{ Nm} \equiv 0.54 \text{ pu}. \end{aligned}$$

Region V

$$\begin{aligned} T(t^{(V)} = 0 \text{ s}) &= 89.1 \text{ Nm} \equiv 0.54 \text{ pu}, \\ T(t^{(V)} = 0.4 \text{ s}) &= 148.9 \text{ Nm} \equiv 0.91 \text{ pu}, \\ T(t^{(V)} = 0.8 \text{ s}) &= 161.3 \text{ Nm} \equiv 0.98 \text{ pu}. \end{aligned}$$

Region VI

$$\begin{aligned} T(t^{(VI)} = 0 \text{ s}) &= 161.3 \text{ Nm} \equiv 0.98 \text{ pu}, \\ T(t^{(VI)} = 0.2 \text{ s}) &= 9.91 \text{ Nm} \equiv 0.55 \text{ pu}, \\ T(t^{(VI)} = 0.4 \text{ s}) &= 59.1 \text{ Nm} \equiv 0.36 \text{ pu}. \end{aligned}$$

Region VII

$$\begin{aligned} T(t^{(VII)} = 0 \text{ s}) &= 59.1 \text{ Nm} \equiv 0.36 \text{ pu}, \\ T(t^{(VII)} = 0.5 \text{ s}) &= 79 \text{ Nm} \equiv 0.48 \text{ pu}, \\ T(t^{(VII)} = 1 \text{ s}) &= 81.8 \text{ Nm} \equiv 0.50 \text{ pu}. \end{aligned}$$

Region VIII

$$\begin{aligned} T(t^{(VIII)} = 0 \text{ s}) &= 81.8 \text{ Nm} \equiv 0.50 \text{ pu}, \\ T(t^{(VIII)} = 0.5 \text{ s}) &= 39.6 \text{ Nm} \equiv 0.24 \text{ pu}, \\ T(t^{(VIII)} = 1 \text{ s}) &= 33.6 \text{ Nm} \equiv 0.204 \text{ pu}. \end{aligned}$$

*Referred to rated torque $T_{\text{rat}} = 164.31 \text{ Nm}$. Note that the motor torque is at any time less than $T_{\text{max}} = 391.32 \text{ Nm}$. The motor torque $T(t)$ is proportional to the slip $s(t)$ and is depicted in Fig. E7.8.4.

- (f) Point-wise calculation of the stator current $\left| \tilde{I}_s(t) \right|$ for the eight different regions.

For the calculation of the stator current $\left| \tilde{I}_s(t) \right|$, the equivalent circuit of Fig. E7.8.5 is employed.

For $s(t^{(I)} = 0 \text{ s}) = 0.0088$ one gets

$$\frac{R'_r}{s} = \frac{0.2}{0.0088} = 22.73 \, \Omega.$$

With $\tilde{E} = 221.75 \text{ V} \angle 0^\circ$ the rotor current becomes

$$\tilde{I}_r = \frac{\tilde{E}}{\left(\frac{R'_r}{s} + jX'_r \right)} = \frac{221.75 \text{ V} \angle 0^\circ}{(22.73 + j) \, \Omega} = (9.737 - j0.428) \text{ A}.$$

The magnetizing current is

$$\tilde{I}_m = \frac{\tilde{E}}{jX_m} = \frac{221.75 \angle 0^\circ \text{ V}}{j30 \Omega} = -j7.392 \text{ A},$$

and the stator current

$$\tilde{I}_s = \tilde{I}_m + \tilde{I}_r = (9.737 - j7.82) \text{ A},$$

where $\tilde{E}$ is the reference phasor.

Table E7.8.1 summarizes the point-wise calculation of the rms values of $|\tilde{I}_s(t)|$ over a load cycle.

- (g) Fig. E7.8.6 shows the plot of $|\tilde{I}_s(t)|$ as a function of time and Fig. E7.8.7 depicts $|\tilde{I}_s(t)|^2$.
 (h) The rms current value of the stator current $I_{s_rms_actual}$ for the load cycle of Fig. E7.8.1 can be calculated from Fig. E7.8.7 using

$$I_{s_rms_actual} = \sqrt{\frac{1}{T} \int_t^{t+T} |\tilde{I}_s(t)|^2 dt}.$$

The evaluation of this integral can be done mathematically or graphically. The graphic evaluation leads to $I_{s_rms_actual} = 47.7 \text{ A}$.

- (i) Comparison of rated $I_{s_rms_rat}$ and actual current $I_{s_rms_actual}$. Is the motor over- or underdesigned?

The losses of an induction motor are about proportional to the square of the stator current I_{s_rms} . The ratio $\left(\frac{I_{s_rms_actual}}{I_{s_rms_rat}}\right)^2 = \left(\frac{47.7}{49.82}\right)^2 = 0.9$ indicates that the motor rating can be reduced by 9%, that is, $P_{out_reduced} = 0.91 \cdot P_{out_rat} = 0.91 \cdot 29.594 \text{ kW} = 26.93 \text{ kW}$ or 36.1 hp.


Let us assume that the stator current is larger than the rated current, say, $I_{s_rms_high} = 52 \text{ A}$; then the motor will experience a lifetime reduction—if the service factor of the motor is 1.0—based on the ratio $\left(\frac{I_{s_rms_high}}{I_{s_rms_rat}}\right)^2 = \left(\frac{52}{49.82}\right)^2 = 1.09$, that is, the losses are about $\Delta P_{loss} = 9\%$ larger than the rated losses. This leads for a steady-state rated temperature of the hottest spot of $T_2 = 85^\circ\text{C} \equiv 273 + 85 = 358 \text{ K}$ at an ambient temperature of $T_{amb} = 40^\circ\text{C}$ to an additional temperature rise of $\Delta T = 9\%$ or $\Delta T = 4.05^\circ\text{C}$. With an activation energy of $E = 0.74 \text{ eV}$ and a rated lifetime of 40 years the reduced lifetime of the three-phase induction motor is with $\Delta T = 4.05^\circ\text{C}$



$$t_1 = 40e^{-8.58 \cdot 10^3 \left(\frac{\Delta T}{358(358 + \Delta T)}\right)} = 30.6 \text{ years}.$$

Most induction motors are designed with a service factor of 1.1–1.15, that is, the motor can be overloaded by 10%–15%. If this motor were designed with a service factor of 1.10 then no lifetime reduction would occur for a stator current of $I_{s_rms_high} = 52 \text{ A}$.

TABLE E7.8.1 Point-wise calculation of the rms values of $|\tilde{I}_s(t)|$.

Region I	$ \tilde{I}_s $ [A]	Region II	$ \tilde{I}_s $ [A]
$s(t^{(I)}=0)=0.0088$	12.49	$s(t^{(II)}=0)=0.0998$	102.69
$s(t^{(I)}=0.2\text{ s})=0.07147$	77.44	$s(t^{(II)}=0.2\text{ s})=0.04994$	56.04
$s(t^{(I)}=0.4\text{ s})=0.0998$	102.69	$s(t^{(II)}=0.4\text{ s})=0.0274$	31.95
Region III	$ \tilde{I}_s $ [A]	Region IV	$ \tilde{I}_s $ [A]
$s(t^{(III)}=0)=0.0274$	31.95	$s(t^{(IV)}=0)=0.082$	84.47
$s(t^{(III)}=0.3\text{ s})=0.06957$	75.56	$s(t^{(IV)}=0.2\text{ s})=0.04208$	47.76
$s(t^{(III)}=0.6\text{ s})=0.0824$	84.47	$s(t^{(IV)}=0.4\text{ s})=0.02385$	28.11
Region V	$ \tilde{I}_s $ [A]	Region VI	$ \tilde{I}_s $ [A]
$s(t^{(V)}=0)=0.02385$	28.11	$s(t^{(VI)}=0)=0.0432$	48.92
$s(t^{(V)}=0.4\text{ s})=0.03987$	45.38	$s(t^{(VI)}=0.2\text{ s})=0.0244$	28.706
$s(t^{(V)}=0.8\text{ s})=0.0432$	48.92	$s(t^{(VI)}=0.4\text{ s})=0.01583$	19.53
Region VII	$ \tilde{I}_s $ [A]	Region VIII	$ \tilde{I}_s $ [A]
$s(t^{(VII)}=0)=0.01583$	19.53	$s(t^{(VIII)}=0)=0.0219$	26
$s(t^{(VII)}=0.5\text{ s})=0.02115$	25.19	$s(t^{(VIII)}=0.5\text{ s})=0.0106$	14.2
$s(t^{(VII)}=1\text{ s})=0.0219$	26	$s(t^{(VIII)}=1\text{ s})=0.009$	12.68

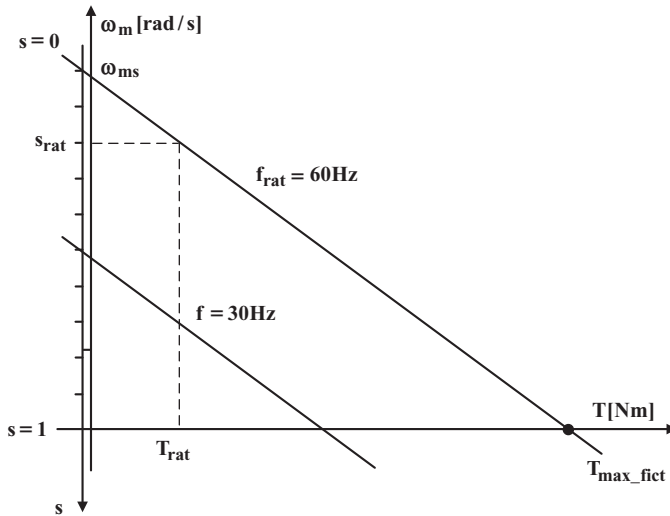**FIG. E7.8.2** (ω_m-T) or $(s-T)$ characteristics for $f_{\text{rat}}=60\text{ Hz}$ (natural characteristic) and for $f=30\text{ Hz}$.

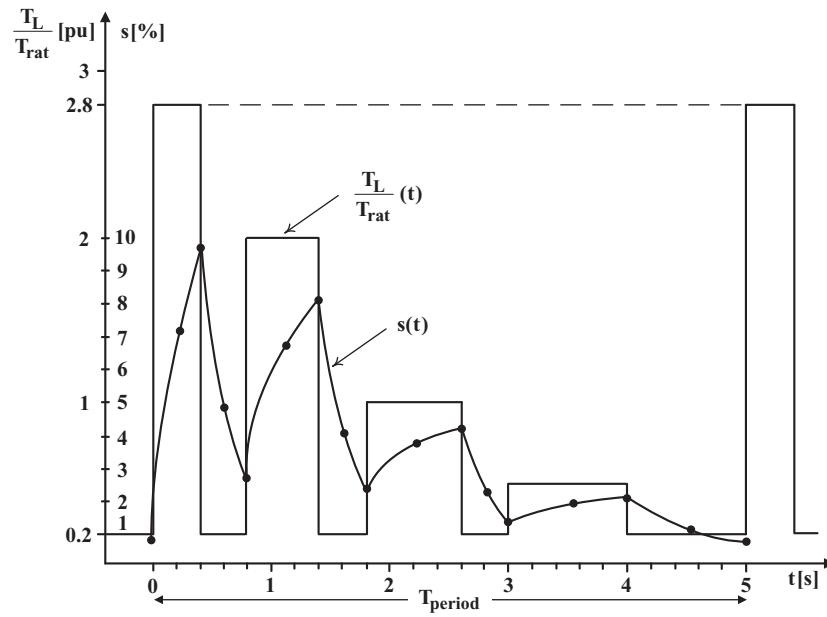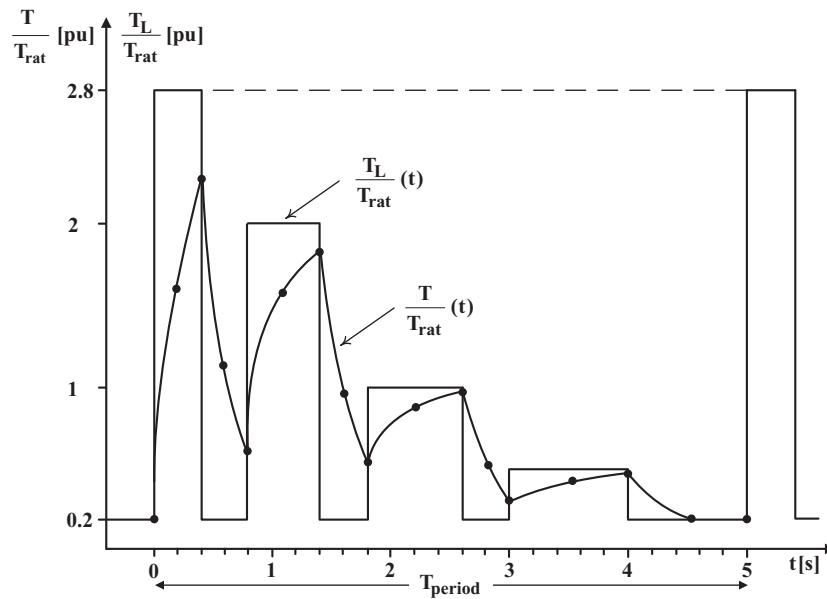FIG. E7.8.3 Slip $s(t)$.FIG. E7.8.4 Motor torque $T(t)$.

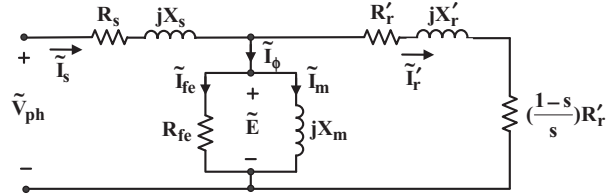
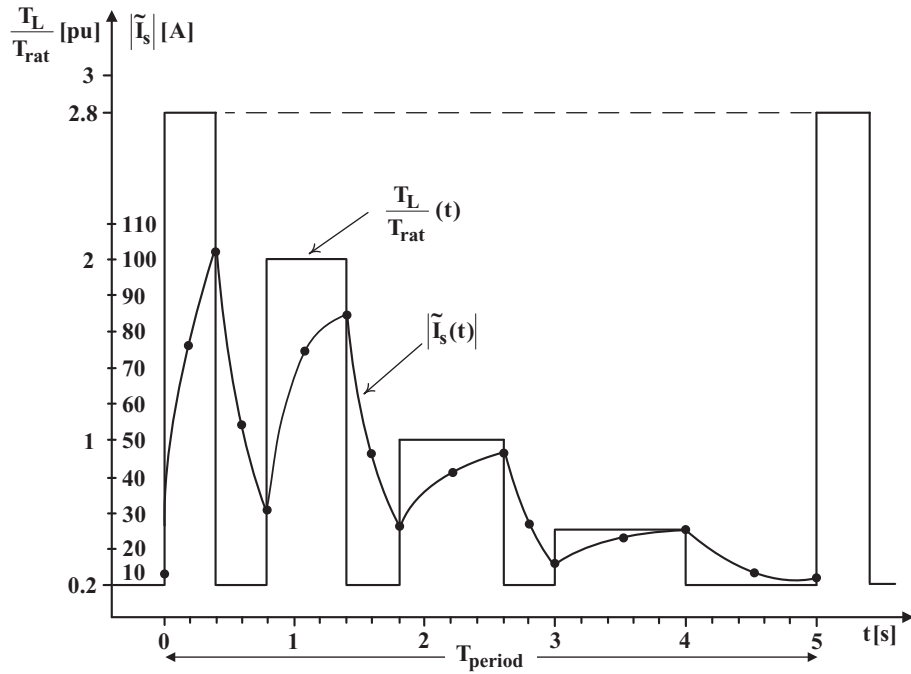
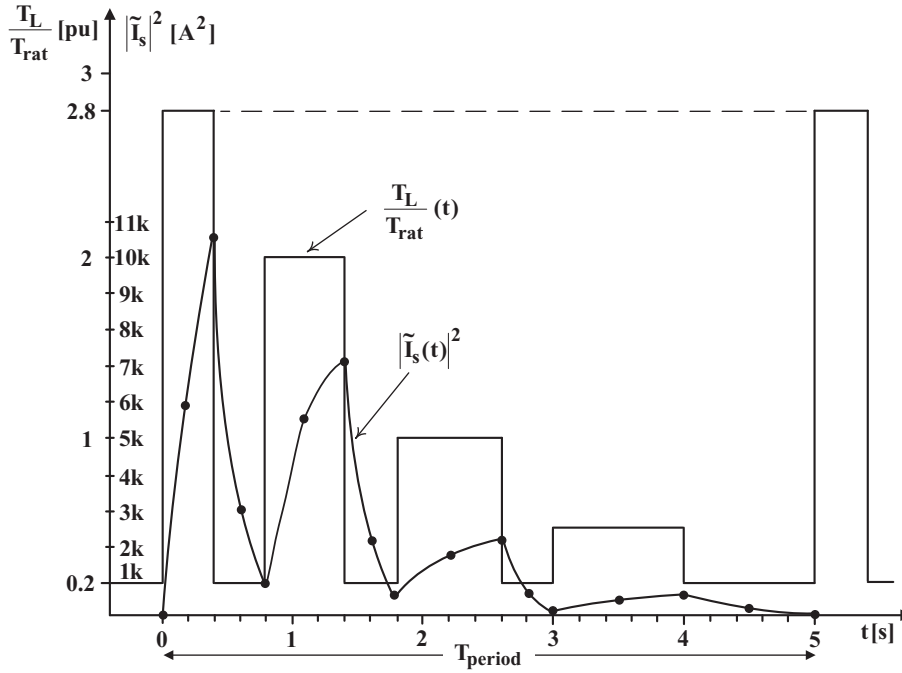


FIG. E7.8.5 Equivalent circuit of induction motor.

FIG. E7.8.6 $|\tilde{I}_s(t)|$.

FIG. E7.8.7 $|\tilde{I}_s(t)|^2$.

7.14.7 Reduction of vibrations and torque pulsations in electric machines

Vibrations and torque pulsations generate electromagnetic forces that mainly act on the end turns of stator windings. As it is well known the turns residing in the stator slots are not exposed to high magnetic fields and for this reason the magnetic forces acting on the turns within the slots are relatively small. Besides increased temperatures, vibrations and torque pulsations are a major reason for the deterioration of the insulation materials. Vibrations and pulsating torques can have their origin in motor asymmetries (e.g., rotor eccentricities, interturn faults, cogging due to permanent magnets, and a poor selection of stator and rotor slotting [47]) and loads (e.g., piston compressors). For this reason, it will be important to demonstrate how torque pulsations caused by loads can be reduced to an acceptable level. This will be the subject of Application Example 7.9.

7.14.8 Application Example 7.9: Reduction of harmonic torques of a piston-compressor drive with synchronous motor as prime mover

The drive motor of a piston compressor is a nonsalient-pole synchronous motor with an amortisseur. To compensate for the piston stroke an eccentric shaft is employed. The load (L) torque at the eccentric shaft consists of an average torque and two harmonic torques:

$$T_L = T_{L\text{avg}} + T_{L1} + T_{L4}, \quad (\text{E7.9.1})$$

where

$$T_{\text{Lavg}} = 265.53 \text{ kNm}, \quad (\text{E7.9.2})$$

$$T_{L1} = 31.04 \text{ kNm} \sin(\omega_{ms}t - \pi), \quad (\text{E7.9.3})$$

$$T_{L4} = 50.65 \text{ kNm} \sin(4\omega_{ms}t - \pi/6). \quad (\text{E7.9.4})$$

The drive motor and the flywheel are coupled with the eccentric shaft, and the nonsalient-pole synchronous motor has the following data: $P_{\text{rat}}=7.5 \text{ MW}$, $p=28$ poles, $f=60 \text{ Hz}$, $V_{L-\text{Lrat}}=6 \text{ kV}$, $\cos \varphi_{\text{rat}}=0.9$ overexcited, $\eta_{\text{rat}}=96.9\%$, $T_{\text{max}}/T_{\text{rat}}=2.3$.

The slip of the nonsalient pole synchronous motor when operating as an induction motor is $s_{\text{rat}}=6.8\%$ at T_{rat} .

- Calculate the synchronous speed n_{ms} , synchronous angular velocity ω_{ms} , rated stator current $\tilde{I}_{a,\text{rat}}$, rated torque T_{rat} , the torque angle δ , stator current $\tilde{I}_a$ at T_{Lavg} and the synchronous reactance X_s (in ohms and in per unit).
- Neglecting damping provided by induction-motor action, derive the nonlinear differential equation for the motor torque, and by linearizing this equation find an expression for the eigen angular frequency ω_{eigen} of the undamped motor.
- Repeat part *b*, but do not neglect damping provided by induction motor action.
- Solve the linearized differential equations of part *b* (without damping) and part *c* (with damping) and determine—by introducing phasors—the axial moment of inertia J required so that the first harmonic motor torque will be reduced to $\pm 4\%$ of the average torque (Eq. E7.9.2).
- Compare the eigen frequency f_{eigen} with the pulsation frequencies occurring at the eccentric shaft.
- State the total motor torque $T(t)$ as a function of time (neglecting damping) for one revolution of the eccentric shaft and compare it with the load torque $T_L(t)$. Why are they different?

Solution to Application Example 7.9 *Reduction of harmonic torques of a piston-compressor drive with synchronous motor as prime mover*

$$(a) \quad n_{ms} = (120 \cdot f)/p = 257.14 \text{ rpm}, \quad \omega_{ms} = (2\pi \cdot n_{ms})/60 = 26.927 \text{ rad/s},$$

$$T_{\text{rat}} = \frac{P_{\text{rat}}}{\omega_{ms}} = 278.53 \text{ kNm}, \quad (\text{E7.9.5})$$

$$|\tilde{I}_{a,\text{rat}}| = \frac{P_{\text{rat}}}{\sqrt{3} \cdot V_{L-\text{Lrat}} \cos \varphi_{\text{rat}} \eta_{\text{rat}}} = 827.6 \text{ A}. \quad (\text{E7.9.6})$$

The average load torque $T_{\text{Lavg}}=265.53 \text{ kNm}$ leads with

$$T_{\text{Lavg}} = \frac{3|\tilde{E}_a||\tilde{V}_{a,\text{rat}}|}{X_s \omega_{ms}} \sin \delta \text{ and } T_{\text{max}} = \frac{3|\tilde{E}_a||\tilde{V}_{a,\text{rat}}|}{X_s \omega_{ms}}$$

to the ratio

$$\frac{T_{\text{Lavg}}}{T_{\text{max}}} = \sin \delta \text{ or } \delta = \sin^{-1} \left(\frac{T_{\text{Lavg}}}{2.3 \cdot T_{\text{rat}}} \right) = 0.427 \text{ rad or } 24.48^\circ. \quad (\text{E7.9.7})$$

Fig. E7.9.1 defines the torque angle δ .

From the phasor diagram (overexcited, consumer notation) one obtains

$$\left| \tilde{E}_a \right|^2 = \left(\left| \tilde{V}_{\text{a_rat}} \right| + \left| \tilde{I}_a \right| X_s \sin \varphi \right)^2 + \left(\left| \tilde{I}_a \right| X_s \cos \varphi \right)^2$$

or

$$\left| \tilde{E}_a \right|^2 = \left| \tilde{V}_{\text{a_rat}} \right|^2 + 2 \left| \tilde{V}_{\text{a_rat}} \right| \left| \tilde{I}_a \right| X_s \sin \varphi + \left(\left| \tilde{I}_a \right| X_s \right)^2 \quad (\text{E7.9.8})$$

and with

$$P = \frac{3 \left| \tilde{E}_a \right| \left| \tilde{V}_{\text{a_rat}} \right| \sin \delta}{X_s} \quad (\text{E7.9.9})$$

follows the second-order equation for X_s

$$\left[\left(\frac{P}{3 \left| \tilde{V}_{\text{a_rat}} \right| \sin \delta} \right)^2 - \left| \tilde{I}_a \right|^2 \right] X_s^2 - \left(2 \left| \tilde{V}_{\text{a_rat}} \right| \left| \tilde{I}_a \right| \sin \varphi \right) X_s - \left| \tilde{V}_{\text{a_rat}} \right|^2 = 0. \quad (\text{E7.9.10})$$

For the given operating point one gets

$$\begin{aligned} P &= T_{\text{Lavg}} \cdot \omega_{ms} = 7.14 \text{ MW}, \quad \left| \tilde{V}_{\text{a_rat}} \right| = 3.464 \text{ kV}, \quad \sin \delta = \frac{T_{\text{Lavg}}}{T_{\text{max}}} = \frac{T_{\text{Lavg}}}{2.3 \cdot T_{\text{rat}}} = 0.4145, \\ \cos \varphi &= 0.9, \quad \sin \varphi = 0.4359, \quad \left| \tilde{I}_a \right| = \frac{T_{\text{Lavg}} \cdot \omega_{ms}}{3 \cdot \left| \tilde{V}_{\text{a_rat}} \right| \cdot \cos \varphi \cdot \eta_{\text{rat}}} = 789 \text{ A}, \end{aligned} \quad (\text{E7.9.11})$$

and therefore

$$X_s = 3.07 \, \Omega. \quad (\text{E7.9.12})$$

With the base impedance of

$$Z_{\text{base}} = \frac{\left| \tilde{V}_{\text{a_rat}} \right|}{\left| \tilde{I}_{\text{a_rat}} \right|} = 4.18 \, \Omega \quad (\text{E7.9.13})$$

the per-unit synchronous reactance is

$$X_{s_pu} = 0.74 \text{ pu}. \quad (\text{E7.9.14})$$

(b) Nonlinear differential equation for the motor torque.

The torque equation is

$$T - T_L - J \frac{d\omega_m}{dt} = 0, \quad (\text{E7.9.15})$$

where

$$T = T_{\max} \cdot \sin \delta, \quad \delta = \frac{p}{2} \alpha, \quad T_L = T_{\text{Lavg}} + T_{L1}, \quad \alpha = \omega_{ms} t - \omega_m t, \quad \frac{d\alpha}{dt} = (\omega_{ms} - \omega_m),$$

$$\frac{d\delta}{dt} = \frac{p}{2} \cdot \frac{d\alpha}{dt}, \quad \frac{d\delta}{dt} = \frac{p}{2} (\omega_{ms} - \omega_m), \quad \omega_m = \omega_{ms} - \frac{1}{\frac{p}{2}} \cdot \frac{d\delta}{dt}, \quad \frac{d\omega_m}{dt} = -\frac{1}{p/2} \cdot \frac{d^2\delta}{dt^2}. \quad (\text{E7.9.16})$$

The nonlinear differential equation becomes

$$T_{\max} \sin \delta - T_{\text{Lavg}} - T_{L1} + \frac{J}{\frac{p}{2}} \cdot \frac{d^2\delta}{dt^2} = 0. \quad (\text{E7.9.17})$$

Linearization of the nonlinear differential equation is based on Fig. E7.9.2.

The motor torque is

$$T = T_{\max} \sin (\delta_0 + \delta_1) = T_{\max} \sin \delta_0 + T_{\max} \delta_1 \cos \delta_0 \quad (\text{E7.9.18})$$

or with the synchronizing torque $S = T_{\max} \cos \delta_0$, the linearized differential equation becomes

$$\delta_1 + \frac{J}{(p/2)S} \frac{d^2\delta_1}{dt^2} = \frac{T_{L1}}{S}. \quad (\text{E7.9.19})$$

The eigen-angular frequency of the undamped machine can be defined by

$$\omega_{\text{eigen}} = \sqrt{\frac{(p/2)S}{J}}. \quad (\text{E7.9.20})$$

(c) Repetition of part *b*, but not neglecting damping provided by induction motor action as is indicated in Fig. E7.9.3. The small-slip approximation of an induction motor is depicted in Fig. E7.9.4.

From Fig. E7.9.4 one obtains for the motor torque developed by induction-motor action with slip s

$$T_{\text{induction}} = \frac{T_{\text{rat}} \cdot s}{s_{\text{rat}}}, \quad s = 1 - \frac{n_m}{n_{ms}} = 1 - \frac{\omega_m}{\omega_{ms}}, \quad T_{\text{induction}} = \frac{T_{\text{rat}}}{s_{\text{rat}}} \left(1 - \frac{\omega_m}{\omega_{ms}} \right), \quad (\text{E7.9.21a})$$

or

$$T_{\text{induction}} = \frac{T_{\text{rat}}}{s_{\text{rat}}} \frac{1}{(p/2) \cdot \omega_{ms}} \cdot \frac{d\delta}{dt}. \quad (\text{E7.9.21b})$$

With the power system's frequency $\omega_s = 2\pi f$ and $\omega_s = (p/2)\omega_{ms}$ one obtains the total motor torque

$$T = T_{\max} \sin \delta + \frac{T_{\text{rat}}}{s_{\text{rat}}} \cdot \frac{1}{\omega_s} \cdot \frac{d\delta}{dt} \quad (\text{E7.9.21c})$$

or the nonlinear differential equation including the damping due to induction-motor action

$$\frac{J}{(p/2)} \frac{d^2\delta}{dt^2} + \frac{T_{\text{rat}}}{s_{\text{rat}} \cdot \omega_s} \cdot \frac{d\delta}{dt} + T_{\max} \sin \delta = T_{\text{Lavg}} + T_{L1}. \quad (\text{E7.9.22})$$

Linearization leads to the differential equation

$$\frac{J}{(p/2)} \frac{d^2\delta_1}{dt^2} + D \frac{d\delta_1}{dt} + S \cdot \delta_1 = T_{L1}, \quad (\text{E7.9.23})$$

where the damping factor is

$$D = \frac{T_{\text{rat}}}{s_{\text{rat}} \cdot \omega_s}. \quad (\text{E7.9.24})$$

- (d) Solution of the linearized differential equations of part *b*—without damping—and determining (by introducing phasors indicated by “ $\sim$ ”) the axial moment of inertia J required so that the first harmonic motor torque $T_1(t)$ will be reduced to $\pm 4\%$ of the average torque (Eq. [E7.9.2](#)).

Neglecting damping one obtains for the k th harmonic the differential equation

$$\delta_1 + \frac{1}{\omega_{\text{eigen}}^2} \frac{d^2\delta_1}{dt^2} = \frac{T_{Lk}}{S}. \quad (\text{E7.9.25})$$

Replacing $\frac{d}{dt}$ by $j\omega_k$ for sine/cosine variations of harmonic torques one gets

$$\tilde{\delta}_1 + \frac{1}{\omega_{\text{eigen}}^2} (j\omega_k)^2 \tilde{\delta}_1 = \frac{\tilde{T}_{Lk}}{S}. \quad (\text{E7.9.26})$$

With

$$\tilde{T}_k = T_{\max} \cos \delta_0 \cdot \tilde{\delta}_1 = S \cdot \tilde{\delta}_1 \quad (\text{E7.9.27})$$

follows

$$\frac{\tilde{T}_k}{\tilde{T}_{Lk}} = \frac{1}{\left(1 - \frac{\omega_k^2}{\omega_{\text{eigen}}^2}\right)}, \quad (\text{E7.9.28})$$

or magnitudes only where “ $\hat{}$ ” indicates amplitude

$$\frac{|\tilde{T}_k|}{|\tilde{T}_{Lk}|} = \frac{\hat{T}_k}{\hat{T}_{Lk}} = \frac{1}{\left[1 - \left(\frac{\omega_k}{\omega_{\text{eigen}}}\right)^2\right]}, \quad (\text{E7.9.29})$$

where $\tan(\varepsilon)=0$ for $\omega_k < \omega_{\text{eigen}}$ and $\tan(\varepsilon)=-180^\circ$ for $\omega_k > \omega_{\text{eigen}}$ (see E7.9.38).

For the first harmonic torque one can write

$$T_{L1} = 31.04 \text{ kNm} \sin(\omega_{ms}t - \pi), \quad \hat{T}_1 = \pm 0.04 T_{\text{Lav}g} \quad (\text{E7.9.30})$$

$$\frac{\hat{T}_1}{\hat{T}_{L1}} = \frac{1}{\left(1 - \frac{\omega_1^2}{\omega_{\text{eigen}}^2}\right)}. \quad (\text{E7.9.31})$$

The required inertia becomes for the worst case (– sign):

$$J = \frac{S\left(\frac{p}{2}\right)}{\omega_1^2} \left(1 - \frac{\hat{T}_{L1}}{\hat{T}_1}\right) = \frac{2.3 T_{\text{rat}} \cos \delta_0 \left(\frac{p}{2}\right)^3}{\omega_s^2} \quad (\text{E7.9.32})$$

$$\left(1 - \frac{\hat{T}_{L1}}{\hat{T}_1}\right) = 11.256 \cdot 10^3 \left(1 - \frac{31.04}{-0.04 \cdot 265.53}\right) = 44 \cdot 10^3 \text{ kg m}^2.$$

Solution of the linearized differential equations of part *c*—with damping—and determining (by introducing phasors) the axial moment of inertia J required so that the first harmonic motor torque will be reduced to $\pm 4\%$ of the average torque (Eq. E7.9.2).

Not neglecting damping one obtains for the k th harmonic the differential equation

$$\frac{J}{(p/2)} \frac{d^2 \delta_1}{dt^2} + D \frac{d \delta_1}{dt} + S \delta_1 = T_{Lk} \quad (\text{E7.9.33})$$

or for sine/cosine variations of harmonic load torques

$$(j\omega_k)^2 \frac{J}{(p/2)} \tilde{\delta}_1 + j\omega_k D \tilde{\delta}_1 + S \tilde{\delta}_1 = \tilde{T}_{Lk} \quad (\text{E7.9.34})$$

with

$$S \tilde{\delta}_1 = \tilde{T}_k \quad (\text{E7.9.35})$$

$$\frac{\tilde{T}_k}{\tilde{T}_{Lk}} = \frac{1}{(j\omega_k)^2 \cdot \frac{J}{\left(\frac{p}{2}\right)S} + j\omega_k \frac{D}{S} + 1} \quad (\text{E7.9.36})$$

or the magnitudes only

$$\frac{|\hat{T}_k|}{|\hat{T}_{Lk}|} = \frac{\hat{T}_k}{\hat{T}_{Lk}} = \frac{1}{\sqrt{\left(1 - \omega_k^2 \frac{J}{(p/2) \cdot S}\right)^2 + \left(\omega_k \frac{D}{S}\right)^2}} \quad (\text{E7.9.37})$$

with

$$\tan(\varepsilon) = \frac{\omega_k \frac{D}{S}}{1 - \omega_k^2 \frac{J}{(p/2) \cdot S}}. \quad (\text{E7.9.38})$$

The inertia is now

$$J = \frac{(p/2) \cdot S}{\omega_k^2} \left[1 \mp \sqrt{\left(\frac{\hat{T}_{Lk}}{\hat{T}_k}\right)^2 - \left(\omega_k \cdot \frac{D}{S}\right)^2} \right]. \quad (\text{E7.9.39})$$

With

$$\omega_k = \omega_{ms} = \frac{\omega_s}{(p/2)}, \quad \hat{T}_{Lk} = \hat{T}_{L1} = 31.04 \text{ kNm}, \quad \hat{T}_k = \hat{T}_1 = 0.04 \cdot 265.53 \text{ kNm} = 10.62 \text{ kNm},$$

one obtains with D and S defined above

$$J = 43.66 \cdot 10^3 \text{ kg m}^2 \approx 44 \cdot 10^3 \text{ kg m}^2. \quad (\text{E7.9.40})$$

Conclusion. Damping does not significantly influence the calculation of the required axial moment of inertia!

(e) Comparison of the eigen frequency f_{eigen} with the pulsation frequencies occurring at the eccentric shaft.

The angular eigen (resonance) frequency of the undamped oscillation is

$$\omega_{\text{eigen}} = \sqrt{\frac{S \cdot (p/2)}{J}} = 13.62 \text{ rad/s}$$

or the eigen frequency is

$$f_{\text{eigen}} = \frac{\omega_{\text{eigen}}}{2\pi} = 2.17 \frac{1}{s}.$$

The first harmonic pulsation (given by the load) frequency of the eccentric shaft is

$$\omega_1 = \omega_{ms} = \frac{\omega_s}{(p/2)} = \frac{2\pi 60}{14} = 26.93 \frac{1}{s}. \quad (\text{E7.9.41})$$

The ratio between first harmonic pulsation frequency and resonance frequency is

$$\frac{\omega_1}{\omega_{\text{eigen}}} = \frac{f_1}{f_{\text{eigen}}} = 1.98 \approx 2.0. \quad (\text{E7.9.42})$$

The fourth harmonic pulsation (given by the load) frequency of the eccentric shaft is

$$\omega_4 = 4 \cdot \omega_{ms} = 4 \cdot \omega_1. \quad (\text{E7.9.43})$$

The ratio between fourth harmonic pulsation frequency and resonance frequency is

$$\frac{\omega_4}{\omega_{\text{eigen}}} = \frac{f_4}{f_{\text{eigen}}} = 4 \cdot 1.98 \approx 8.0. \quad (\text{E7.9.44})$$

Note that from a dynamic performance point of view it is desirable if

$$\frac{\omega_k}{\omega_{\text{eigen}}} \geq 3 - 4. \quad (\text{E7.9.45})$$

As can be seen the ratio $\omega_1/\omega_{\text{eigen}} = 1.98 \approx 2.0$ does not satisfy this condition and therefore the calculated axial moment of inertia of $44 \cdot 10^3 \text{ kg m}^2$ is not large enough. It is recommended to select a desirable axial moment of inertia of $J_{\text{desirable}}$ that is larger than $44 \cdot 10^3 \text{ kg m}^2$ and results in $\omega_1/\omega_{\text{eigen}} \approx 3.0$.

- (f) List the total motor torque $T(t)$ as a function of time (neglecting damping) for one revolution of the eccentric shaft and compare it with the load torque $T_L(t)$. Why are they different?

The total motor torque is now

$$\vec{T} = \vec{T}_{\text{Lavg}} + \vec{T}_1 + \vec{T}_4 \quad (\text{E7.9.46})$$

where

$$\vec{T}_{\text{Lavg}} = 265.53 \text{ kNm} \quad (\text{E7.9.47})$$

and the motor torque for the k th harmonic is

$$\vec{T}_k = \frac{\vec{T}_{Lk}}{1 - \left(\frac{\omega_k^2}{\omega_{\text{eigen}}^2} \right)}. \quad (\text{E7.9.48})$$

For the first harmonic load torque one obtains

$$T_{L1}(t) = 31.04 \text{ kNm} \sin(\omega_{ms}t - \pi) = -31.04 \text{ kNm} \sin(\omega_{ms}t) \quad (\text{E7.9.49})$$

and the first harmonic motor torque becomes

$$T_1(t) = \frac{-31.04 \text{ kNm}}{1 - \left(\frac{\omega_1^2}{\omega_{\text{eigen}}^2} \right)} \sin \omega_{ms}t = 10.35 \text{ kNm} \sin(\omega_{ms}t). \quad (\text{E7.9.50})$$

For the fourth harmonic motor torque one gets

$$T_4(t) = \frac{50.65 \text{ kNm}}{1 - \left(\frac{\omega_4^2}{\omega_{\text{eigen}}^2} \right)} \sin(4\omega_{ms}t - \pi/6) = -0.804 \text{ kNm} \sin(4\omega_{ms}t - \pi/6). \quad (\text{E7.9.51})$$

Conclusions. The total load torque is

$$T_L(t) = 265.53 \text{ kNm} + 31.04 \text{ kNm} \sin(\omega_{ms}t - \pi) + 50.65 \text{ kNm} \sin(4\omega_{ms} - \pi/6) \quad (\text{E7.9.52})$$

and the total motor torque becomes

$$T(t) = 265.53 \text{ kNm} + 10.35 \text{ kNm} \sin(\omega_{ms}t) - 0.804 \text{ kNm} \sin(4\omega_{ms} - \pi/6). \quad (\text{E7.9.53})$$

The difference in the harmonic torques is provided by the flywheel with inertia of $J = 44 \cdot 10^3 \text{ kg m}^2$.

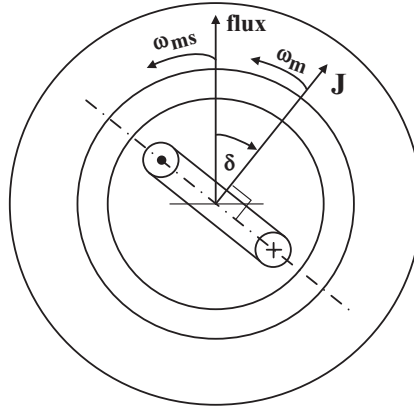


FIG. E7.9.1 Definition of torque angle δ without induction motor damping.

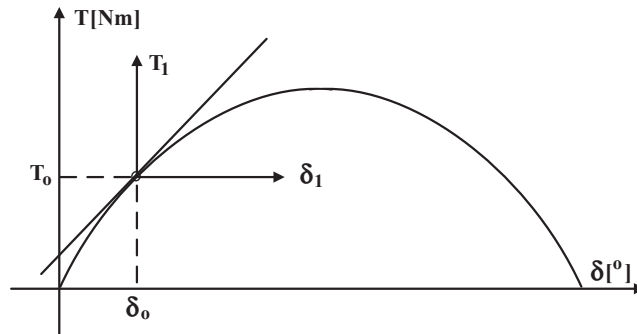


FIG. E7.9.2 Linearization of sine function for a given operating point $\delta = (\delta_0 + \delta_1)$, where $\delta_1 \ll \delta_0$.

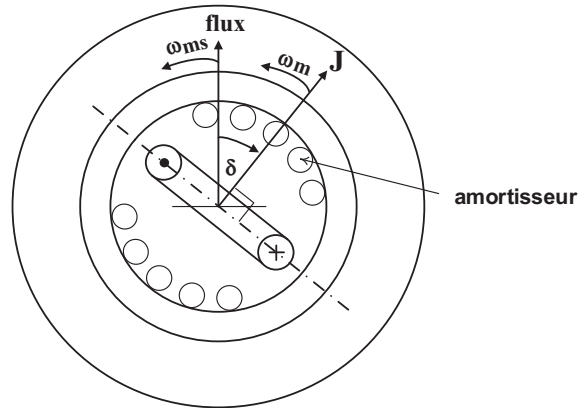


FIG. E7.9.3 Definition of torque angle δ with induction motor damping.

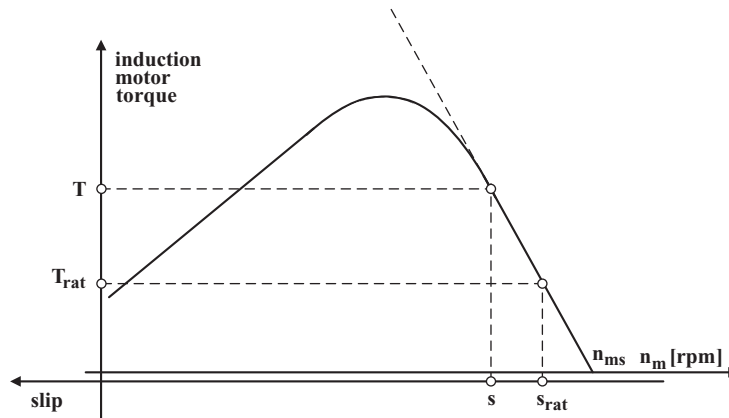


FIG. E7.9.4 Small-slip approximation of induction motor characteristic.

7.14.9 Calculation of steady-state temperature rise ΔT of electric apparatus based on thermal networks

The losses of an electric apparatus (e.g., rotating machine, transformer, and inductor) heat up various parts of the apparatus, and the losses are dissipated via heat conduction, convection, and radiation.

7.14.9.1 Heat flow related to conduction

Assume that the losses at end #2 with the temperature θ_2 of a homogeneous body (see Fig. 7.25) are

$$P_{\text{loss}} = \lambda \cdot S \frac{(\theta_2 - \theta_1)}{\ell} = \lambda \cdot S \frac{\Delta T}{\ell}, \quad (7.58)$$

where λ is the thermal conductivity of a homogeneous body measured in $[\frac{\text{W}}{\text{m} \cdot \text{C}}]$, S is the surface of the homogeneous body perpendicular to the heat flow measured in m^2 , and ℓ is the length of the homogeneous body along the direction of the heat flow measured in m .

The temperature at end #1 θ_1 is given by Eq. (7.58):

$$\Delta T = (\theta_2 - \theta_1) = \frac{\ell}{\lambda \cdot S} P_{\text{loss}} = R_{\text{conduct}} \cdot P_{\text{loss}}, \quad (7.59)$$

where the term $[\frac{\ell}{\lambda \cdot S}]$ is defined as the heat conduction resistance

$$R_{\text{conduct}} = \frac{\ell}{\lambda \cdot S}. \quad (7.60)$$

7.14.9.2 Heat flow related to radiation and convection

The heat flow due to radiation and convection from the heat source to the cooling medium (e.g., ambient air) is proportional to the surface A of the body (e.g., winding) on which the heat source resides and its temperature difference $\Delta T = (\theta_2 - \theta_1)$ with respect to the cooling medium:

$$P_{\text{loss}} = \alpha \cdot A (\theta_2 - \theta_1), \quad (7.61a)$$

where α is the thermal coefficient measured in $[\frac{\text{W}}{\text{m}^2 \cdot \text{C}}]$ between the heat source and the cooling medium.


Correspondingly, one can define

$$\Delta T = (\theta_2 - \theta_1) = \frac{1}{\alpha \cdot A} P_{\text{loss}} = R_{\text{radiation/convection}} \cdot P_{\text{loss}} \quad (7.61b)$$

where the term $\frac{1}{\alpha \cdot A}$ is defined as the heat radiation/convection resistance

$$R_{\text{radiation/convection}} = \frac{1}{\alpha \cdot A}. \quad (7.62)$$

FIG. 7.25 Heat flow within a homogeneous body (principle of heat pipe).

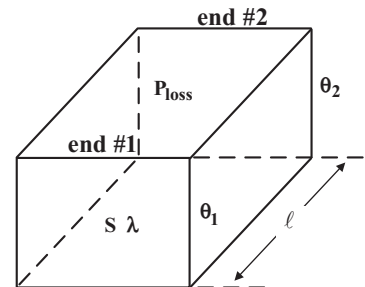

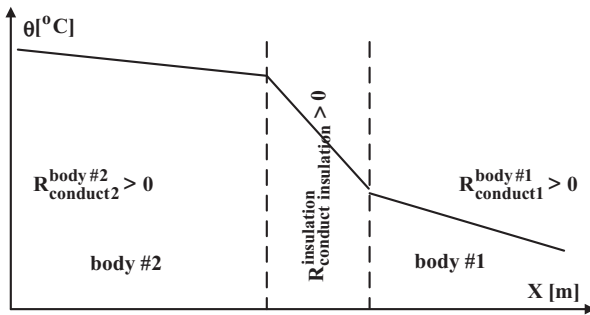


FIG. 7.26 Linear heat flow through conduction from a high-temperature body #2 to a low-temperature body #1 with finite thermal resistances.

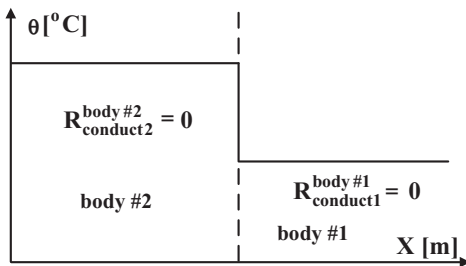


FIG. 7.27 Step-function heat flow through convection/radiation from a high-temperature body to a low-temperature cooling medium.

The application of the conduction relationship (Eq. 7.59) generates Fig. 7.26, where a linear function leads to the heat flow from a high-temperature body #2 (e.g., winding) via insulation—with the heat conduction resistance $R_{\text{conduct}} = \frac{\ell}{\lambda S}$ to a low-temperature body #1 (e.g., iron core).

The application of the radiation/convection relationship (Eq. 7.61) generates Fig. 7.27, where a step function leads to the heat flow from a high-temperature body #2 (e.g., frame)—with the heat radiation/convection resistance $R_{\text{radiation/convection}} = \frac{1}{\alpha A}$ —to a low-temperature body #1 (e.g., ambient air). An example for this case is the interface between the motor frame and the ambient air.

Fig. 7.28 depicts the heat flow as it occurs from a winding via the insulation, the iron core, the small air gap between iron core and frame, and from the frame of an electrical apparatus to the ambient air serving as cooling medium. Note that the heat drop in the small air gap is a mixture between conduction and convection/radiation. The reason is that some of the iron core laminations have contact (heat transfer via conduction) with the frame and some have no contact (heat transfer via convection/radiation).

7.14.10 Application Example 7.10: Temperature-rise equations for a totally enclosed fan-cooled 100hp motor

For a totally enclosed fan-cooled motor [48–50] the surface of the external frame dissipates the heat. The ribs are located along the axis of the machine where the hot air is removed by a fan. Test results show [49,50] that the stator end windings have about the same temperature

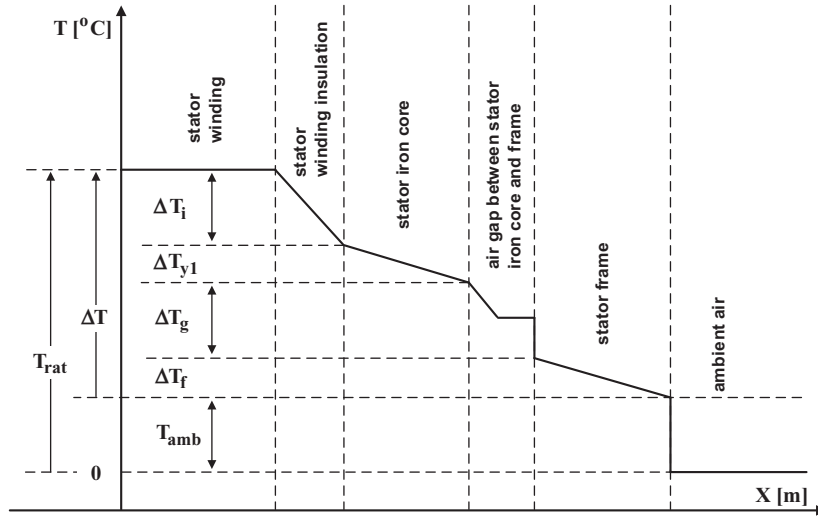


FIG. 7.28 Heat flow within electrical apparatus from a high-temperature body (e.g., winding) to a low-temperature cooling medium (e.g., ambient air).

as the slot-embedded part of the stator winding. This result permits us to assume that the end winding does not dissipate heat (e.g., radiates and removes heat by convection) to the surrounding air inside the end bells of the motor, and the heat developed by the stator winding is completely transferred to the stator core. The stator iron loss is then added to the stator copper loss and the resultant heat is transferred to the stator frame via the small air gap between core and frame from which it is removed by the fan through radiation and convection. A second assumption refers to the heat of the rotor winding. It is assumed that this heat is transferred to the stator. This means that the temperature of the rotor is higher than that of the stator. The temperature of the hottest spot in the stator determines the class of winding insulation. It is assumed that this point is residing in the stator winding inside a stator slot. The temperature of the hot spot consists of the following temperature drops:

- temperature drop across stator winding insulation, ΔT_i
- temperature drop across stator back iron (yoke), ΔT_{y1}
- temperature drop across the small air gap between the stator back iron and the frame of the motor, ΔT_g
- difference between the temperature of the frame and the ambient temperature of the air, ΔT_f .

The temperature rise of the stator winding is therefore

$$\Delta T = \Delta T_i + \Delta T_{y1} + \Delta T_g + \Delta T_f. \quad (\text{E7.10.1})$$

The thermal network of the motor is shown in Fig. E7.10.1, where R_i is the thermal conductivity resistance of the stator slot insulation, R_{y1} is the thermal conductivity resistance of the stator back iron or yoke, R_g is the thermal conductivity resistance of the small air gap between the stator core and the frame of the motor, R_f is the thermal radiation/convection resistance of

the outside of the stator frame and the moving air, P_{cu1} is the stator ohmic (copper) loss, P_{Al2} is the rotor ohmic (aluminum) loss, P_{t1} is the stator teeth (iron-core) loss, P_{y1} is the stator yoke (iron-core) loss, and P_{mech} is the friction (bearing, windage) loss.

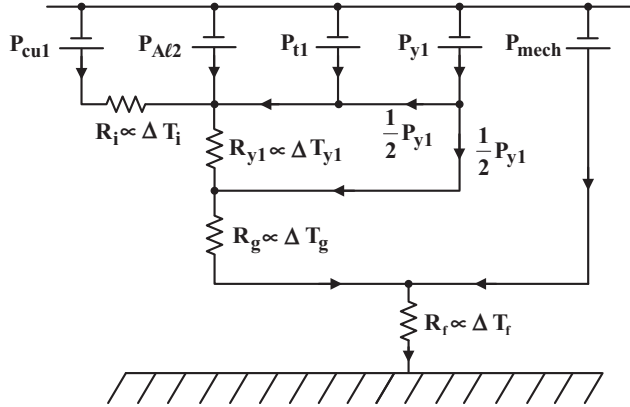


FIG. E7.10.1 Thermal network of a totally enclosed fan-cooled induction motor.

Solution to Application Example 7.10 *Temperature-rise equations for a totally enclosed fan-cooled 100hp motor*

From Fig. E7.10.1 one notes that the stator ohmic loss generates a temperature drop across the slot insulation (ΔT_i). The temperature drop across the stator back iron or yoke (ΔT_{y1}) is produced by the sum of the stator and rotor ohmic losses, stator teeth loss, and half of the stator back iron loss. The calculation of ΔT_{y1} is based on half of the stator back iron loss because this loss is assumed to be generated uniformly throughout the stator back iron; therefore, the stator back iron loss generated radially through the stator back iron varies from zero to P_{y1} from the inner to the outer surfaces of the stator back iron, respectively. The temperature drop across the small air gap between stator back iron and the frame (ΔT_g) is produced by the sum of the ohmic and the iron-core losses of the motor. Finally, the total losses cause a temperature drop from the motor frame to the moving air (ΔT_f).

The temperature difference between the stator winding and the iron core (across the stator winding insulation) is

$$\Delta T_i = P_{cu1} \frac{\beta_i}{\lambda_i \cdot S_i}, \quad (\text{E7.10.2})$$

where β_i is the thickness of stator slot insulation, λ_i is the thermal conductivity (W/m °C) of stator slot insulation, and S_i is the total surface area of (all) stator slots.

The temperature drop across the stator back iron can be expressed as

$$\Delta T_{y1} = \left(P_{cu1} + \frac{1}{2} P_{y1} + P_{t1} + P_{sp1} + P_{Al2} + P_{sp2} \right) \frac{h_{y1}}{\lambda_c \cdot S_{y1}}, \quad (\text{E7.10.3a})$$

where h_{y1} is the radial height of stator back iron, λ_c is the thermal conductivity (W/m °C) of the stator laminations, S_{y1} is the cross-sectional area of the stator core at the radial middle of the back iron, P_{sp1} is the surface and pulsation loss caused by stator teeth (note that these losses are very small and have been neglected in Fig. E7.10.1), and P_{sp2} is the surface and pulsation loss caused by rotor teeth (note that these losses are very small and have been neglected in Fig. E7.10.1).

The temperature difference across the small air gap between the stator back iron and the frame can be expressed as

$$\Delta T_\delta = \Delta T_g = (P_{cu1} + P_{y1} + P_{t1} + P_{sp1} + P_{A\ell 2} + P_{sp2}) \frac{\beta_\delta}{\lambda_\delta \cdot S_\delta}, \quad (\text{E7.10.3b})$$

where β_δ is the air gap length between stator back iron and frame, λ_δ is the thermal conductivity (W/m °C) of the airgap, S_δ is the outside surface of stator core, P_{sp1} is the surface and pulsation loss caused by stator teeth (note that these losses are very small and have been neglected in Fig. E7.10.1), and P_{sp2} is the surface and pulsation loss caused by rotor teeth (note that these losses are very small and have been neglected in Fig. E7.10.1).

The heat of the motor is dissipated to the air at ambient temperature through the end bells of the motor frame to the stationary air, and through the cylindrical frame surface containing the cooling ribs (which increase the frame surface) to the moving air. The temperature difference between the outer surface of the frame and the ambient temperature is

$$\Delta T_f = \frac{\Sigma P}{\alpha_0 S_0 + \alpha_v S_v} \quad (\text{E7.10.4})$$

where ΣP represents total losses of the motor, α_0 is the surface thermal coefficient (W/m² °C) for dissipating the heat from the surface of the frame to the stationary air (near end bells), α_v is the surface thermal coefficient (W/m² °C) for dissipating the heat from the surface of the frame to the moving air (near cylindrical frame), S_0 is the surface area in contact with stationary air, and S_v is the surface area in contact with moving air.

The relation between α_0 and α_v is given by

$$\alpha_v = \alpha_0 (1 + k_v \sqrt{v}) \quad (\text{E7.10.5})$$

where k_v is a coefficient, and v is the air velocity (m/s).

7.14.11 Application Example 7.11: Temperature-rise equations for a drip-proof 5 hp motor

The temperature rise equation is written for a drip-proof motor ([48], Section 13.7). This equation is based on the following assumptions:

1. The ohmic losses in the embedded part of the stator winding produce a temperature drop across the slot insulation.
2. The iron-core losses of the stator teeth, the ohmic losses in the embedded part of the stator winding, and the ohmic losses of the rotor bars and half of the iron-core losses of the stator back iron generate temperature drops across the stator back iron and the motor frame. The thermal network of this drip-proof motor based on the above assumptions is depicted in Fig. E7.11.1. In this figure, P_{em} stands for the ohmic losses in the embedded part of the stator winding.

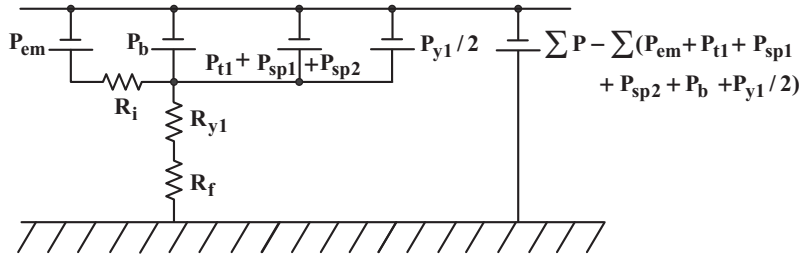


FIG. E7.11.1 Thermal network of a drip-proof induction motor.

Solution to Application Example 7.11 *Temperature-rise equations for a drip-proof 5hp motor*

From the thermal network of Fig. E7.11.1 one obtains for the temperature drop across the stator winding insulation

$$\Delta T_i = P_{em} \frac{\beta_i}{\lambda_i \cdot S_i}, \quad (\text{E7.11.1})$$

and the temperature drop across the stator back iron is

$$\Delta T_{y1} = \left(P_{em} + \frac{1}{2} P_{y1} + P_{t1} + P_{sp1} + P_b + P_{sp2} \right) \frac{h_{y1}}{\lambda_c \cdot S_{y1}}, \quad (\text{E7.11.2})$$

where P_b is the ohmic loss in the rotor bars.

Finally, the temperature drop from the motor frame to the ambient temperature is

$$\Delta T_f = \frac{(P_{em} + P_b + P_{t1} + P_{sp1} + P_{sp2} + \frac{1}{2} P_{y1})}{\alpha_0 \pi (D + 2h_1 + 2h_{y1} + 2h_f)(L + L_e)} \quad (\text{E7.11.3})$$

where h_1 is the radial height of stator tooth, h_f is the radial thickness of stator frame, h_{y1} is the radial height of stator back iron, L is the embedded (cylindrical) length of stator winding, and L_e is the length of the two stator end windings.

The temperature rise of the stator winding is therefore

$$\Delta T = \Delta T_i + \Delta T_{y1} + \Delta T_f. \quad (\text{E7.11.4})$$

7.15 Summary

- (1) All IEC and IEEE harmonic standards and guidelines rely on the worst-case condition where the harmonic current or voltage spectra are independent of time.
- (2) The weighted-harmonic voltage factor is based on the same assumption and estimates the additional temperature rise for rated operation of transformers, induction motors, and universal motors for the voltage spectrum with maximum individual harmonic voltage amplitudes.
- (3) The weighted-harmonic voltage factor

$$\sum_{h=2}^{\infty} \frac{1}{(h)^k} \left(\frac{V_h}{V_1} \right)^{\ell} \quad (7.63)$$

described in this chapter is related to the square of the total harmonic distortion of the voltage

$$\text{THD}_v = \sqrt{\sum_{h=2}^{\infty} \left(\frac{V_h}{V_1} \right)^2} \quad (7.64)$$

by introducing the weighting function $\left(\frac{1}{h}\right)^k$ and replacing the exponent 2 of the ratio

$\sum_{h=2}^{\infty} \frac{1}{(h)^k} \left(\frac{V_h}{V_1} \right)^2$ by the exponent ℓ .

- (4) $\sum_{h=2}^{\infty} \frac{1}{(h)^k} \left(\frac{V_h}{V_1} \right)^{\ell}$ can be used as a measure for the losses and temperature rises of electromagnetic apparatus due to harmonic voltages.
- (5) Acceptable limits for the reduction of lifetime due to thermal aging requires limits for the value of the weighted-harmonic factor $\sum_{h=2}^{\infty} \frac{1}{(h)^k} \left(\frac{V_h}{V_1} \right)^{\ell}$ and indirectly limits the amplitude of the occurring voltage harmonics.
- (6) A weighted harmonic factor of

$$\sum_{h=2}^{\infty} \frac{1}{(h)^k} \left(\frac{V_h}{V_1} \right)^{\ell} = 5.8 \quad (7.65)$$

is recommended.

- (7) It is evident that for a given weighted-harmonic voltage factor, single- and three-phase induction machines are more susceptible to aging than transformers and universal machines.
- (8) Strictly speaking, all current or voltage harmonic spectra are continually changing as a function of time due to changing system configuration and loads, and the assumption of time-independent spectra is a simplification leading to a first-cut approach only.
- (9) The cost of harmonics incurs by either purchasing more expensive solid-state equipment (e.g., PWM inverters, switched-mode power supplies), which generates a reduced amount of harmonics, or by using less-sophisticated but harmonic generating equipment (e.g., six-step inverters, diode rectifiers), which generate a greater amount of harmonics than the more expensive switched-mode equipment. In the first case, the losses occur in the switched-mode equipment (e.g., efficiencies ranging from 80% to 98%), whereas in the second case of less-sophisticated solid-state equipment (e.g., efficiencies ranging from 90% to 98%) the harmonic losses incur in the loads (e.g., induction motors) and their reduction of lifetime must be accounted for due to temperature increase.
- (10) Design considerations for intermittent operation are presented so that no lifetime reduction occurs.
- (11) Most drives are subjected to pulsating loads that cause vibrations within the drive motor, in particular the motor windings. To limit vibrations to a certain value the required axial moment of inertia J of a flywheel is calculated.
- (12) The temperature rises for totally enclosed fan-cooled and for drip-proof induction motors are derived.

7.16 Problems

Problem 7.1: Aging of transformers and induction machines due to single harmonic voltage

The terminal voltage of a single-phase transformer (rated resistive load) and a single-phase induction machine (operation at rated load) contains a third-harmonic voltage component of $V_{p3}/V_{p1} = 2.5\%$, 5% , and 7.5% .

- (a) Determine for the worst-case condition the temperature rises ΔT for both devices, which occur due to the previously mentioned harmonic voltage components. You may assume for both devices a rated temperature of $T_{\text{rat}} = T_2 = 125^\circ\text{C}$ at an ambient temperature of $T_{\text{amb}} = 40^\circ\text{C}$.
- (b) Calculate for the temperature rises ΔT of part a the decrease of lifetime for both devices under the given three (not simultaneously occurring) harmonic voltage components for an activation energy of $E = 1.15\text{ eV}$.

Problem 7.2: Operation of induction motor at reduced line-to-line voltage

A 100hp, 480 V_{L-L} , 60Hz, 6-pole three-phase induction motor runs at full load and rated voltage with a slip of 3%. Under conditions of stress on the power supply system, the line-to-line voltage drops to 420 V_{L-L} . If the load is of the constant torque type, then compute for the lower voltage

- (a) The slip s (use small slip approximation).
- (b) The shaft speed n_m in rpm.
- (c) The horsepower (hp) output.
- (d) The rotor copper loss ($I_s'^2 R_s'$) in terms of the rated rotor copper loss at rated voltage, where subscript s stands for secondary.
- (e) Estimate the reduction of lifetime due to reduced voltage operation provided the rated temperature is $T_{\text{rat}} = 125^\circ\text{C}$, the ambient temperature is $T_{\text{amb}} = 40^\circ\text{C}$, rated lifetime is $t_2 = 40$ years, and $E = 1.15\text{ eV}$.

Problem 7.3: Operation of induction motor at increased line-to-line voltage

Repeat Problem 7.2 for the condition when the line-to-line voltage of the power supply system increases to 520 V_{L-L} and estimate the reduction of lifetime.

Problem 7.4: Reduced voltage and frequency operation of induction machines

A 100hp, 480 V_{L-L} , 60Hz, 6-pole three-phase induction motor runs at full load and rated voltage and frequency with a slip of 3%. Under conditions of stress on the power supply system the terminal voltage and the frequency drops to 420 V_{L-L} and 54Hz, respectively. If the load is of the constant torque type, then compute for the lower voltage and frequency:

- (a) The slip s (use small slip approximation).
- (b) The shaft speed n_m in rpm.
- (c) The horsepower (hp) output.

- (d) Rotor copper loss ($I_s'^2 R_s'$) in terms of the rated rotor copper loss at rated frequency and voltage, where subscript s stands for secondary.
- (e) Estimate the reduction of lifetime for $T_{\text{rat}} = 125^\circ\text{C}$, $T_{\text{amb}} = 40^\circ\text{C}$, $t_2 = 40$ years, and $E = 1.15\text{eV}$.

Problem 7.5: Lifetime reduction of induction motors and transformers for given voltage spectra

Estimate the lifetime reductions of induction machines, transformers, and universal machines for the single- and three-phase voltage spectra of [Table P7.5.1](#), for an activation energy of $E = 1.15\text{eV}$. The ambient temperature is $T_{\text{amb}} = 40^\circ\text{C}$, the rated temperature is $T_2 = 120^\circ\text{C}$, and the rated lifetime of $t_2 = 40$ years can be assumed.

TABLE P7.5.1 Possible voltage spectra with high-harmonic penetration.

h	$\left(\frac{V_h}{V_{60\text{ Hz}}}\right)_{1\Phi} (\%)$	$\left(\frac{V_h}{V_{60\text{ Hz}}}\right)_{3\Phi} (\%)$
1	100	100
2	0.5	0.5
3	7.0	0.5
4	1.6	0.5
5	5.0	7.5
6	0.88	0.2
7	3.0	5.0
8	0.62	0.2
9	2.0	0.3
10	0.66	0.1
11	1.0	4.0
12	0.18	0.1
13	0.8	3.0
14	0.10	0.05
15	0.10	0.1
16	0.13	0.05
17	0.23	1.5
18	0.22	0.01
19	1.03	1.0
All higher harmonics <0.2%		

Problem 7.6: Calculate the stator rms current of an induction motor at steady-state operation with superimposed intermittent, irregular load steps

Repeat the analysis of Application Example 7.8 provided the inverter-motor drive is operated at $f = 30\text{ Hz}$ with constant flux, $(E/f) = \text{constant}$, control.

Problem 7.7: Calculate the reduction of harmonic synchronous motor torques for a given time-dependent load

The drive motor of a pulsating load is a nonsalient-pole synchronous motor with an amortisseur. To compensate for the changing load torque as a function of time a flywheel is coupled with the shaft. The load (L) torque at the shaft consists of an average torque and two harmonic torques:

$$T_L = T_{L\text{avg}} + T_{L1} + T_{L3}, \quad (\text{P7.7.1})$$

where

$$T_{L\text{avg}} = 260 \text{ kNm}, \quad (\text{P7.7.2})$$

$$T_{L1} = 30 \text{ kNm} \sin(\omega_{ms}t - \pi), \quad (\text{P7.7.3})$$

$$T_{L3} = 50 \text{ kNm} \sin(3\omega_{ms}t - \pi/6). \quad (\text{P7.7.4})$$

The nonsalient-pole synchronous motor has the following data: $P_{\text{rat}} = 5\text{ MW}$, $p = 40$ poles, $f = 60\text{ Hz}$, $V_{L-L \text{ rat}} = 6\text{ kV}$, $\cos \Phi_{\text{rat}} = 0.8$ overexcited, $\eta_{\text{rat}} = 95\%$, $T_{\text{max}}/T_{\text{rat}} = 2.5$. The slip of the nonsalient pole synchronous motor when operating as an induction motor is $s_{\text{rat}} = 6\%$ at T_{rat} .

- Calculate the synchronous speed n_{ms} , synchronous angular velocity ω_{ms} , rated stator current $\tilde{I}_{a\text{rat}}$, rated torque T_{rat} , the torque angle δ , stator current $\tilde{I}_a$ at $T_{L\text{avg}}$ and the synchronous reactance X_S (in ohms and in per unit).
- Neglecting damping provided by induction-motor action, derive the nonlinear differential equation for the motor torque, and by linearizing this equation find an expression for the eigen angular frequency ω_{eigen} of the undamped motor.
- Repeat part *b*, but do not neglect damping provided by induction motor action.
- Solve the linearized differential equations of part *b* (without damping) and part *c* (with damping) and determine—by introducing phasors—the axial moment of inertia J required so that the first harmonic order motor torque will be reduced to $\pm 2\%$ of the average torque (Eq. P7.7.2).
- Compare the eigen frequency f_{eigen} with the pulsation frequencies occurring at the eccentric shaft.
- State the total motor torque $T(t)$ as a function of time (neglecting damping) for one revolution of the eccentric shaft and compare it with the load torque $T_L(t)$. Why are they different?

Problem 7.8: Temperature transient of an induction machine

An enclosed fan-cooled induction motor has a thermal time constant of $\tau_\theta = 4\text{ h}$ and a steady-state rated temperature of $\theta_f = 140^\circ\text{C}$ at an ambient temperature of $\theta_{\text{amb}} = 40^\circ\text{C}$. The

motor has at time $t = 0_-$ a temperature of $\theta = \theta_{\text{amb}}$, and the motor is fully loaded at $t = 0_+$. Calculate the time $t_{95\%}$ when the fully loaded motor reaches 95% of its final temperature $\theta_f = 140^\circ\text{C}$.

Problem 7.9: Calculation of the temperature rise of a totally enclosed fan-cooled 100hp induction motor

- (a) Based on Application Example 7.10 calculate the temperature rise ΔT of a totally enclosed fan-cooled induction motor provided the following data are given: Input power $P_{\text{in}} = 79,610\text{ W}$, output power $P_{\text{out}} = 74,600\text{ W}$, line frequency $f = 60\text{ Hz}$, thickness of stator slot insulation $\beta_i = 9 \cdot 10^{-4}\text{ m}$, thermal conductivity of stator slot insulation $\lambda_i = 0.109\text{ W/m}^\circ\text{C}$, total area of the stator slots $S_i = 2.006\text{ m}^2$, thermal conductivity of the stator laminations (iron core) $\lambda_c = 47.24\text{ W/m}^\circ\text{C}$, radial height of stator back iron $h_{y1} = 0.049\text{ m}$, cross-sectional area of the stator core at the middle of the stator back iron (stator yoke) $S_{y1} = 0.482\text{ m}^2$, length of the small air gap between the stator core and the frame of the motor $\beta_\delta = 3 \cdot 10^{-5}\text{ m}$, thermal conductivity of the small air gap between stator core and frame $\lambda_\delta = 0.028\text{ W/m}^\circ\text{C}$, outside surface area of the stator frame $S_\delta = 0.563\text{ m}^2$, surface thermal coefficient for dissipation of heat to stationary air $\alpha_0 = 14.30\text{ W/m}^2^\circ\text{C}$, surface thermal coefficient for dissipation of heat $\alpha_v = 88.66\text{ W/m}^2^\circ\text{C}$ to moving air at $v = 16\text{ m/s}$, surface area in contact with stationary air $S_0 = 0.841\text{ m}^2$, and surface area in contact with moving air $S_v = 3.36\text{ m}^2$. Table P7.9.1 details the percentage values of the various losses of the 100hp induction motor. Note that the iron core losses of the rotor are very small due to the low frequency in the rotor member (slip frequency).
- (b) Determine the rated temperature of the motor T_{rat} provided the ambient temperature is $T_{\text{amb}} = 40^\circ\text{C}$.

TABLE P7.9.1 Percentage losses of a 100hp three-phase induction motor.

P_{cu1}	P_{y1}	P_{t1}	P_{sp1}	P_{At2}	P_{sp2}	P_{mech}
30%	8%	10%	2%	45%	2%	3%

Problem 7.10: Calculation of the temperature rise of a drip-proof 5hp induction motor ([48], Section 13.7)

- (a) Based on Application Example 7.11 calculate the temperature rise ΔT of a drip-proof induction motor provided the following data are given: Input power $P_{\text{in}} = 4355\text{ W}$, output power $P_{\text{out}} = 3730\text{ W}$, line frequency $f = 60\text{ Hz}$, thickness of stator slot insulation $\beta_i = 6 \cdot 10^{-4}\text{ m}$, thermal conductivity of stator slot insulation $\lambda_i = 0.148\text{ W/m}^\circ\text{C}$, total area of the stator slots $S_i = 0.0701\text{ m}^2$, thermal conductivity of the stator laminations (iron core) $\lambda_c = 47.24\text{ W/m}^\circ\text{C}$, radial height of stator back iron $h_{y1} = 0.0399\text{ m}$, cross-sectional area of

the stator core at the middle of the stator back iron (stator yoke) $S_{y1} = 0.0325 \text{ m}^2$, surface thermal coefficient for dissipation of heat to stationary air $\alpha_0 = 18.70 \text{ W/m}^2 \text{ }^\circ\text{C}$. The ohmic losses in the embedded part of the stator winding are $P_{em} = 0.238 \cdot P_{cu1} = 44.56 \text{ W}$, in addition $D = 0.11 \text{ m}$, $r_1 = 1.114$, $L = 0.06 \text{ m}$, $P_b \approx P_{Al2} = 131.25 \text{ W}$, $h_1 = 0.02 \text{ m}$, $h_f = 0.01 \text{ m}$, $p = 1$ pole pair (or two poles), $L_e = [(187.5 \text{ W} - 44.56 \text{ W}) / 44.56 \text{ W}] \cdot L = 0.193 \text{ m}$ as given in [48], where W is the unit of watts for P_{cu1} and P_{em} . Table P7.10 details the percentage values of the various losses of the 5 hp induction motor. Note that the iron-core losses of the rotor are very small due to the low frequency in the rotor member (slip frequency).

- (b) Determine the rated temperature of the motor T_{rat} provided the ambient temperature is $T_{\text{amb}} = 40^\circ\text{C}$.

TABLE P7.10 Percentage losses of a 5 hp three-phase induction motor.

P_{cu1}	P_{y1}	P_{t1}	P_{sp1}	P_{Al2}	P_{sp2}	P_{mech}
30%	8%	10%	2%	42%	2%	6%

Problem 7.11: Solution of the partial differential equation governing heat conduction

The solution of the heat equation in one spatial dimension (x) [51]

$$\frac{\partial T(x, t)}{\partial t} = c^2 \frac{\partial^2 T(x, t)}{\partial x^2} \quad (\text{P7.11.1})$$

is based on the separation of variables as was proposed by Fourier, where T is the temperature and x is the spatial coordinate as illustrated, for example, in Fig. P7.11.1, and t is the time. The boundary conditions are

$$T(0, t) = 0 \text{ and } T(\ell, t) = 0 \quad (\text{P7.11.2})$$

for all times t , and the initial condition at $t = 0$ is

$$T(x, 0) = f(x), \quad (\text{P7.11.3})$$

where $f(x)$ is a given function of x .

The temperature $T(x, t)$, is assumed separable in x and t .

$$T(x, t) = X(x) \cdot T(t) \quad (\text{P7.11.4})$$

so that

$$X'' \cdot T = \frac{1}{c^2} X \cdot T', \quad (\text{P7.11.5})$$

or after dividing by $X(x)T(t)$

$$\frac{X''}{X} = \frac{1}{c^2} \frac{T'}{T} = k, \quad (\text{P7.11.6})$$

where k is the separation constant. We can expect k to be negative as can be seen from the time equation:

$$T' = c^2 k T \quad (\text{P7.11.7})$$

or after integration

$$T(t) = T_0 e^{c^2 k T}. \quad (\text{P7.11.8})$$

Thus $T(t)$ will increase in time if k is positive and decrease in time if k is negative. The increase of T in time is not possible without any additional heating mechanism and therefore we assume that k is negative. To force this we set $k = -p^2$. The spatial differential equation is now

$$X'' + p^2 X = 0, \quad (\text{P7.11.9})$$

which is similar to the harmonic motion equation with the trigonometric solution

$$X(x) = A \cos(px) + B \sin(px). \quad (\text{P7.11.10})$$

Now, applying the boundary condition, we find that for

$$X(0) = 0, X(\ell) = 0. \quad (\text{P7.11.11})$$

$A = 0$ and $\sin(p\ell) = 0$, resulting in $p\ell = n\pi$. We take the most general solution by adding together all possible solutions, satisfying the boundary conditions, to obtain

$$T(x, t) = \sum_{n=0}^{\infty} B_n \sin\left(\frac{n\pi}{\ell}x\right) \cdot e^{-\left(\frac{n^2 \pi^2 c^2}{\ell^2}\right)t}. \quad (\text{P7.11.12})$$

The final step is to apply the initial conditions

$$T(x, 0) = \sum_{n=0}^{\infty} B_n \sin\left(\frac{n\pi}{\ell}x\right) = f(x). \quad (\text{P7.11.13})$$

Finding the Fourier coefficient of the above expression leads to

$$B_n = \frac{2}{\ell} \int_0^{\ell} f(x) \sin\left(\frac{n\pi}{\ell}x\right) dx \quad (\text{P7.11.14})$$

for all positive integers n .

Note that because every term in the solution for $T(x, t)$ has a negative exponential in it, the temperature must decrease in time, and the final solution will tend to $T = 0$.

- (a) For $c^2 = 1$, $\ell = 1$ m, that is, $\frac{\partial T(x, t)}{\partial t} = \frac{\partial^2 T(x, t)}{\partial x^2}$ the boundary conditions $T(0, t) = T(1, t) = 0$, and the initial condition $T(x, 0) = f(x) = -4x^2 + 4x$ find $T(x, t)$ for $0 < x < 1$. The initial conditions and boundary conditions are shown in Fig. P7.11.1 as a function of the spatial coordinate x and the time t . Calculate and plot $T(x, t)$ as a function of x for $t = 1$ ms; thereby it will be sufficient to take into account three terms of the Fourier series.
- (b) For $c^2 = 1$, $\ell = 1$ m, that is, $\frac{\partial T(x, t)}{\partial t} = \frac{\partial^2 T(x, t)}{\partial x^2}$ the boundary conditions $T(0, t) = T(1, t) = 0$, and the initial conditions $T(x, 0) = f(x) = x$ (for $0 < x < 1/2$) and $T(x, 0) = f(x) = 1 - x$ (for

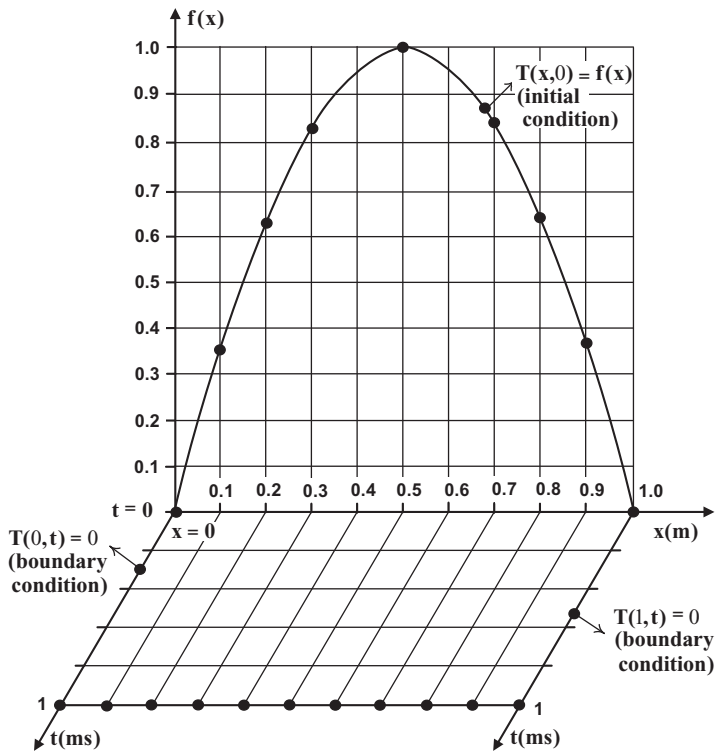


FIG. P7.11.1 Heat conduction in a homogeneous one-dimensional body of length $\ell = 1$ m.

$1/2 < x < 1$) find $T(x, t)$. Calculate and plot $T(x, t)$ as a function of x for $t = 1$ ms; thereby it will be sufficient to take into account three terms of the Fourier series.

References

- [1] V.M. Montsinger, Loading transformer by temperature, *Trans. AIEE* 49 (1930) 776.
- [2] L.W. Pierce, Thermal considerations in specifying dry-type transformers, *IEEE Trans. Ind. Appl.* 30 (4) (1994) 1090–1098.
- [3] T. Yan, H. Zhongyan, The calculating hotpoint temperature-rise of transformer windings, in: *ICEMS 2001, Proceedings of the Fifth International Conference on Electrical Machines and Systems 2001*, 18–20 August 2001, vol. 1, 2001, pp. 220–223.
- [4] L.W. Pierce, Hottest spot temperatures in ventilated dry type transformers, *IEEE Trans. Power Delivery* 9 (1) (1994) 257–264.
- [5] Z. Radakovic, K. Feser, A new method for the calculation of the hot-spot temperature in power transformers with ONAN cooling, *IEEE Trans. Power Delivery* 18 (4) (2003) 1284–1292.
- [6] O.I. Okoro, B. Weidemann, O. Ojo, An efficient thermal model for induction machines, in: *2004, 39th IAS Annual Meeting, Conference Record of the 2004 IEEE Industry Applications Conference*, 3–7 October 2004, vol. 4, 2004, pp. 2477–2484.
- [7] L.W. Pierce, Predicting liquid filled transformer loading capability, *IEEE Trans. Ind. Appl.* 30 (1) (1994) 170–178.
- [8] T. Weekes, T. Molinski, G. Swift, Transient transformer overload ratings and protection, *IEEE Electr. Insul. Mag.* 20 (2) (2004) 32–35.

- [9] J.F. Moreno, F.P. Hidalgo, M.D. Martinez, Realisation of tests to determine the parameters of the thermal model of an induction machine, *IEEE Proc. Electric Power Appl.* 148 (5) (2001) 393–397.
- [10] L. Sang-Bin, T.G. Habetler, An online stator winding resistance estimation technique for temperature monitoring of line-connected induction machines, *IEEE Trans. Ind. Appl.* 39 (3) (2003) 685–694.
- [11] D.J.T. Siyambalapitiya, P.G. McLaren, P.J. Tavner, Transient thermal characteristics of induction machine rotor cage, *IEEE Trans. Energy Convers.* 3 (4) (1988) 849–854.
- [12] M.J. Duran, J. Fernandez, Lumped-parameter thermal model for induction machines, *IEEE Trans. Energy Convers.* 19 (4) (2004) 791–792.
- [13] M.S. Rajagopal, K.N. Seetharamu, P.A. Ashwathnarayana, Transient thermal analysis of induction motors, *IEEE Trans. Energy Convers.* 13 (1) (1998) 62–69.
- [14] L.W. Pierce, Transformer design and application considerations for nonsinusoidal load currents, *IEEE Trans. Ind. Appl.* 32 (3) (1996) 633–645.
- [15] A.W. Galli, M.D. Cox, Temperature rise of small oil-filled distribution transformers supplying nonsinusoidal load current, *IEEE Trans. Power Delivery* 11 (1) (1996) 283–291.
- [16] P. Picher, L. Bolduc, A. Dutil, V.Q. Pham, Study of the acceptable dc current limit in core-form power transformers, *IEEE Trans. Power Delivery* 12 (1) (1997) 257–265.
- [17] G.C.D. Sousa, B.K. Bose, J. Cleland, R.J. Spiegel, P.J. Chappell, Loss modeling of converter induction machine system for variable speed drive, in: *Proceedings of the 1992 International Conference on Industrial Electronics, Control, Instrumentation, and Automation*, 1992, 9–13 November 1992, vol. 1, 1992, pp. 114–120.
- [18] E.F. Fuchs, D.J. Roesler, F.S. Alashhab, Sensitivity of electrical appliances to harmonics and fractional harmonics of the power system's voltage, part I, *IEEE Trans. Power Delivery TPWRD-2* (2) (1987) 437–444.
- [19] E.F. Fuchs, D.J. Roesler, K.P. Kovacs, Sensitivity of electrical appliances to harmonics and fractional harmonics of the power system's voltage, part II, *IEEE Trans. Power Delivery TPWRD-2* (2) (1987) 445–453.
- [20] E.F. Fuchs, D.J. Roesler, K.P. Kovacs, Aging of electrical appliances due to harmonics of the power system's voltage, *IEEE Trans. Power Delivery TPWRD-1* (3) (1986) 301–307.
- [21] E.F. Fuchs, D.J. Roesler, M.A.S. Masoum, Are harmonic recommendations according to IEEE and IEC too restrictive? *IEEE Trans. Power Delivery* 19 (4) (2004) 11775–11786.
- [22] E.F. Fuchs, D. Lin, J. Martynaitis, Measurement of three-phase transformer derating and reactive power demand under nonlinear loading conditions, *IEEE Trans. Power Delivery* 21 (2) (2006) 665–672.
- [23] D. Lin, E.F. Fuchs, Real-time monitoring of iron-core and copper losses of three-phase transformers under (non) sinusoidal operation, *IEEE Trans. Power Delivery* 21 (3) (2006) 1333–1341.
- [24] R.R. Dixon, Thermal aging predictions from an Arrhenius plot with only one data point, *IEEE Trans. Electr. Insul.* E1-15 (4) (1980) 331.
- [25] <http://nobelprize.org/chemistry/laureates/1903/arrhenius-bio.html>.
- [26] R. Richter, *Elektrische Maschinen*, Springer Verlag, Berlin, 1924, p. 157.
- [27] E.F. Fuchs, M.A.S. Masoum, D.J. Roesler, Large signal nonlinear model of anisotropic transformers for nonsinusoidal operation, parts I and II, *IEEE Trans. Power Delivery PWRD-6* (1991) 174–186. E.F. Fuchs, M. A.S. Masoum, D.J. Roesler, Large signal nonlinear model of anisotropic transformers for nonsinusoidal operation, parts I and II, *IEEE Trans. Power Delivery PWRD-6* (1991) 1509–1516.
- [28] E.F. Fuchs, R. Fei, A new computer-aided method for the efficiency measurement of low-loss transformers and inductors under nonsinusoidal operation, *IEEE Trans. Power Delivery PWRD-11* (1996) 292–304.
- [29] E.F. Fuchs, F. Alashhab, T.F. Hock, P.K. Sen, Impact of harmonics on home appliances, Topical Report (First Draft), prepared for the U.S. Department of Energy under contract No. DOE-RA-50150-9, University of Colorado at Boulder, 1981.
- [30] E.F. Fuchs, L.H. Chang, J. Appelbaum, S. Moghadamnia, Sensitivity of transformer and induction motor operation to power system's harmonics, Topical Report (First Draft), prepared for the U.S. Department of Energy under contract No. DOE-RA-50150-18, University of Colorado at Boulder, 1983.
- [31] E.F. Fuchs, L.H. Chang, J. Appelbaum, Magnetizing current, iron losses and forces of three-phase induction machines at sinusoidal and nonsinusoidal terminal voltages, part I: analysis, *IEEE Trans. Power Appar. Syst. PAS-* 103 (11) (1984) 3303–3312.
- [32] P.G. Cummings, Private communication, January 4, 1984.

- [33] E.F. Fuchs, Investigations on the impact of voltage and current harmonics on end-use devices and their protection, Summary Report, prepared for the U.S. Department of Energy under contract No. DE-AC02-80RA 50150, University of Colorado at Boulder, 1987.
- [34] J.P.G. de Abreu, A.E. Emanuel, The need to limit subharmonic injection, in: Proceedings of the 9th International Conference on Harmonics and Quality of Power, 1–4 October 2000, vol. I, 2000, pp. 251–253.
- [35] IEEE Standard 519, IEEE Recommended Practices and Requirements for Harmonic Control in Electric Power Systems, IEEE-519, 1992.
- [36] IEC 61000-3-2 (2001-10) Consolidated edition, electromagnetic compatibility (EMC) – part 3-2: limits for harmonic current emissions.
- [37] Y. Baghzouz, R.F. Burch, A. Capasso, A. Cavallini, A.E. Emanuel, M. Halpin, A. Imece, A. Ludbrook, G. Montanari, K.J. Olejniczak, P. Ribeiro, S. Rios-Marcuello, L. Tang, R. Thallam, P. Verde, Time-varying harmonics; I. Characterizing measured data, IEEE Trans. Power Delivery 13 (3) (1998) 938–944.
- [38] Y. Baghzouz, R.F. Burch, A. Capasso, A. Cavallini, A.E. Emanuel, M. Halpin, R. Langella, G. Montanari, K.J. Olejniczak, P. Ribeiro, S. Rios-Marcuello, F. Ruggiero, R. Thallam, A. Testa, P. Verde, Time-varying harmonics; II. Harmonic summation and propagation, IEEE Trans. Power Delivery 17 (1) (2002) 279–285.
- [39] R.W. Erickson, D. Maksimovic, Fundamentals of Power Electronics, second ed., Kluwer Academic Publishers, 2000, ISBN: 0-7923-7270-0.
- [40] E.F. Fuchs, M.A.S. Masoum, M. Ladjevardi, Effects on distribution feeders from electronic loads based on future peak-load growth, part I: measurements, in: Proceedings of the IASTED International Conference on Power and Energy Systems (EuroPES 2005), Paper # 468-019, Benalmadena, Spain, 15–17 June 2005, 2005.
- [41] G. Carpinelli, P. Caramia, E. Di Vito, A. Losi, P. Verde, Probabilistic evaluation of the economical damage due to harmonic losses in industrial energy system, IEEE Trans. Power Delivery 11 (2) (1996) 1021–1031. G. Carpinelli, P. Caramia, E. Di Vito, A. Losi, P. Verde, Correction to “Probabilistic evaluation of the economical damage due to harmonic losses in industrial energy systems”, IEEE Trans. Power Delivery 11 (3) (1996) 1692.
- [42] P. Verde, Cost of harmonic effects as meaning of standard limits, in: Proceedings of the Ninth International Conference on Harmonics and Quality of Power, 1–4 October 2000, vol. 1, 2000, pp. 257–259.
- [43] P. Caramia, G. Carpinelli, P. Verde, G. Mazzanti, A. Cavallini, G.C. Montanari, An approach to life estimation of electrical plant components in the presence of harmonic distortion, in: Proceedings of the Ninth International Conference on Harmonics and Quality of Power, 2000, 1–4 October, vol. 3, 2000, pp. 887–892.
- [44] P. Caramia, P. Verde, Cost-related harmonic limits, in: IEEE Power Engineering Society Winter Meeting, 2000, 23–27 January, vol. 4, 2000, pp. 2846–2851.
- [45] P. Caramia, G. Carpinelli, A. Losi, A. Russo, P. Verde, A simplified method for the probabilistic evaluation of the economical damage due to harmonic losses, in: Proceedings of the 8th International Conference on Harmonics and Quality of Power, 14–16 October 1998, vol. 2, 1998, pp. 767–776.
- [46] G.K. Dubey, Power Semiconductor Controlled Drives, Prentice Hall, Englewood Cliffs, New Jersey, 1989.
- [47] B. Heller, V. Hamata, Harmonic Field Effects in Induction Machines, Academia, Publishing House of the Czechoslovak Academy of Sciences, Prague, 1977.
- [48] E.F. Fuchs, J. Appelbaum, I.A. Khan, J. Höll, U.V. Frank, Optimization of induction motor efficiency, volume 1: three-phase induction motors, final report prepared by the University of Colorado for the Electric Power Research Institute (EPRI), Palo Alto, EL-4152-CCM, vol. 1, Research Project 1944-1, 1985.
- [49] E.F. Fuchs, H. Huang, A.J. Vandenput, J. Höll, J. Appelbaum, Z. Zak, M.S. Erlicky, Optimization of induction motor efficiency, volume 2: single-phase induction motors, final report prepared by the University of Colorado for the Electric Power Research Institute (EPRI), Palo Alto, EL-4152-CCM, vol. 2, Research Project 1944-1, 1987.
- [50] E.F. Fuchs, J. Höll, J. Appelbaum, A.J. Vandenput, H. Klode, Optimization of induction motor efficiency, volume 3: experimental comparison of three-phase Standard motors with Wamless motors, final report prepared by the University of Colorado for the Electric Power Research Institute (EPRI), Palo Alto, EL-4152-CCM, vol. 3, Research Project 1944-1, 1985.
- [51] <http://www-solar.mcs.st-and.ac.uk/~alan/MT2003/PDE/node21.html>.

This page intentionally left blank

Power system modeling under nonsinusoidal operating conditions

The calculation of power system harmonic voltages and currents and analyzing power quality problems can be classified into frequency- and time-domain methods. Frequency-domain techniques are widely used for harmonic problem formulation. They are a reformulation of the fundamental load flow problem in the presence of nonlinear loads and/or distorted utility voltages. This complicated, nonlinear, and harmonically coupled problem has been solved in several ways in order to reach a compromise between simplicity and reliability of the formulation. Time-domain techniques can accurately model system nonlinearities and are mostly used for power quality problems such as transient and stability issues under nonsinusoidal operating conditions. They require more computation time than frequency-domain approaches but can accurately model nonlinearities (e.g., saturation and hysteresis), transients, and stability associated with transformers, nonlinear loads, and synchronous generators. Some techniques are based on a combination of frequency- and time-domain methods. In the frequency domain, the power system is linearly modeled, while nonlinear simulation of components and loads can be accurately performed in the time domain. Hybrid time- and frequency-domain techniques result in moderate computational speed and accuracy.

This chapter starts with a review of power system matrices and the fundamental Newton-Raphson load flow algorithm. In [Section 8.4](#), the Newton-Raphson harmonic power flow (HPF) formulation is presented and explained in detail. In the last part of this chapter, a survey and classification of HPF approaches are addressed. All phasors are in per unit (pu), and all phase angles are assumed to be in radians.

8.1 Overview of a modern power system

The power systems of the present including solar and geothermal sources ([Section 12.9](#) and [12.12](#)) and of the future including photovoltaic and wind power plants ([Fig. 8.1](#)) are complicated interconnected networks consisting of the following major sections:

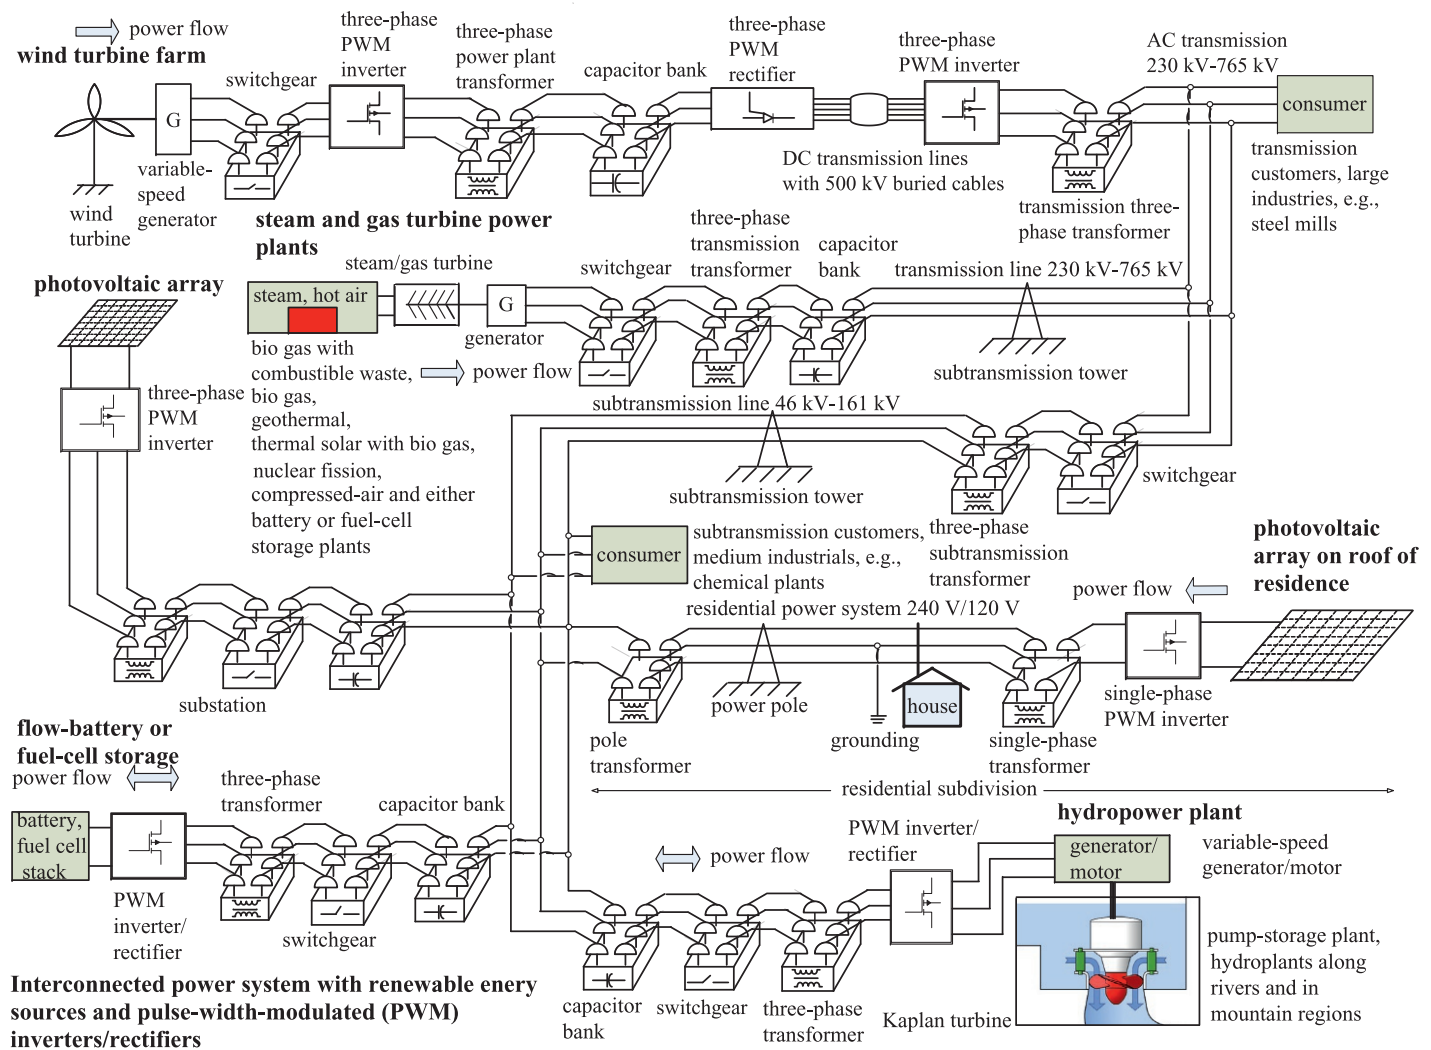


FIG. 8.1 Basic elements of future power and distribution systems with renewable sources only.

- conventional and renewable generation with storage plants,
- transmission and subtransmission system,
- distribution system, and
- linear and nonlinear rectifier and inverter loads.

8.1.1 Generation with storage plants

The three-phase AC synchronous generator or alternator is one of the fundamental components of a power system consisting of two synchronously rotating fields: one field is produced by the rotor driven at synchronous speed and excited by DC current. The DC current in the rotor winding is provided by an excitation system with or without slip rings. The second field is set up through the stator windings by the three-phase armature currents. An important element of power systems are AC generators with rotating rectifiers, known as brushless excitation systems [1]. The excitation system controls the generator voltage and indirectly controls the reactive power flow within the power system together with synchronous condensers and capacitor banks. The slip ring free rotor enables the generation of high power—from 50 MVA up to 1600 MVA—at high voltages, typically in the 30–40 kV range. Hydrogen and water cooling permit the high power density of synchronous generators, which are mostly of the 2 and 4-pole types. Hydrogenerators are of the synchronous and of the induction machine types and can have up to 40 poles [2]. The source of mechanical power for AC generators may be water turbines, steam turbines (where the steam is either generated by coal, natural gas, oil, or nuclear fuel), and gas turbines for peak-power generation. Natural gas fired plants have an efficiency of about 30% [3], whereas combined-cycle plants (gas turbine in series with a steam turbine) can reach efficiencies of about 60%. Today's deregulated power system also relies on distributed renewable energy resources such as solar, fuel cells, and turbines driven by wind, tides, water, and biomass generated gas. In a typical power station, several generators are connected to a common point called a bus and operated in parallel to provide the total required power. Fig. 8.1 shows that the power plant generation is not limited to a number of single power plants but to the integrated approach where conventional power plants (e.g., natural gas, hydro and nuclear plants) are combined with renewables such as photovoltaic, wind power, biomass, geothermal, and energy storage plants such as fuel cells and batteries.

8.1.2 Single and three-phase transformers

Another key component of a power system is the transformer. Its role is to transform power with very high efficiency (e.g., 98%) from one level of voltage to another. Using a step-up transformer of turns ratio $a = \frac{N_p}{N_s}$ will reduce the secondary (s) winding current by a ratio of $1/a$ as provided by the primary (p) winding. This will reduce the real power loss I^2R and the reactive power I^2X of the transmission line, which makes the transmission of power over long distances feasible.

Due to insulation requirements and other practical design problems, terminal voltages of generators are limited to relatively low values, typically in the 30–40 kV range. Consequently, step-up transformers are used for transmission of power. At the receiving end of a

transmission line, step-down transformers are employed to reduce the voltage to suitable levels for distribution or direct utilization. The power may go through several transformers between generator and the end user. Note that any endowed [4] electron generated must be used either from a load or stored on a device for later use.

8.1.3 Transmission and subtransmission lines

Overhead transmission lines permit the transfer of energy from generating units to the distribution system that serves the end users. Transmission lines also interconnect neighboring utilities (e.g., generating an interconnected power system) to permit economic dispatch of power within regions during normal operating conditions, as well as transfer of power between regions during emergencies. Transmission-line voltage levels above 60kV are standardized at 69, 115, 138, 161, 230, 345, 500, and 745kV. Transmission voltages above 230kV are referred to as extrahigh voltage (EHV). High-voltage transmission lines are terminated at substations.

There are three types of substations: high-voltage substations, receiving substations, and primary substations. At the primary substations, the voltage is stepped down through a transformer to a value suitable for end users. For example, large industrial customers may be served directly from the transmission system.

The segment of the transmission system that connects high-voltage substations through step-down transformers to distribution substations is called the subtransmission network. There is no clear delineation between transmission and subtransmission voltage levels. Typically, the subtransmission voltage levels range from 69 to 138kV. Some large industrial customers may be served from the subtransmission system. Capacitor and reactor banks are usually installed in subtransmission substations for maintaining or controlling the transmission line voltage. It is well known that for distribution voltages higher than 15kV ferroresonance may occur if cables instead of overhead lines are used over a fairly long distance. To avoid this problem, gas-insulated underground cables are relied on to deliver in cities the power at high voltages.

8.1.4 Distribution system

The distribution system (in the range of 4–34.5kV) connects distribution substations to end users. Some small industrial consumers may be served directly by primary feeders. The secondary distribution network reduces the voltage for utilization by commercial and residential consumers. Either overhead transmission lines or cables are employed to deliver power to consumers. Typical secondary distribution systems operate at levels of 240/120V (single-phase, three-wire), 208Y/120V (three phase, four wire), and 480Y/277V (three-phase, four-wire). The power for residential loads in the United States are derived from transformers that reduce the primary feeder voltage to 240/120V using a single-phase, three-wire line. Distribution systems are made up of both overhead and underground lines. The growth of underground distribution has been extremely rapid, especially in new residential areas.

8.1.5 Linear and nonlinear loads, including energy storage plants

Power systems serve linear and nonlinear loads. Loads are divided into three key categories within a power system: industrial, commercial, and residential. Industrial loads are functions of both voltage and frequency. Induction motors form a high proportion (e.g., 60%) of these loads. Commercial and residential loads consist largely of lighting, heating based on heat pumps, and air conditioning systems (e.g., speed-controlled induction motors or brushless DC machines/motors). These loads are largely independent of frequency and consume reactive power with a total power factor (TPF) of larger than $\text{TPF} = 80\%$.

The nonlinear ($v - i$) characteristics of nonlinear loads generate both current and voltage harmonics and call for nonsinusoidal analysis and modeling of power systems. A typical power system consists of large industrial nonlinear loads (e.g., rectifiers and inverters, variable-speed drives, and energy storage plants); the number of nonlinear loads (such as power electronic rectifiers, high-efficiency lighting, and variable-speed drives) is rapidly increasing. This requires attention to such nonlinear loads during the design, planning, and operation of distribution systems.

8.1.6 Renewable energy generation plants

In order to decarbonize the power system renewable power plants such as wind power, photovoltaic, biomass, and hydro power generation are preferred as a generation mix for future power systems. When a “Dunkelflaute” [5] occurs then either storage plants or natural gas power plants must replace the renewable energy generation mix.

8.1.7 Control and dispatch centers

Present (Fig. 8.1) and future (Section 12.9 and 12.12) power systems rely on electric power distribution from various sources to the loads by control and dispatch centers, where frequency, voltages and currents including the harmonics, fundamental ($\cos \phi$) and TPF are controlled within given limits within the transmission and distribution systems. Harmonic filters must be adjusted depending upon the nonlinear loads (e.g., variable-speed drives and electronic loads such as communication equipment) connected at any instant of time, and faults must be isolated to allow intentional islanding operation of the power and distribution systems. Control is achieved by telecommunication equipment (e.g., towers) either through cables or air, and the power system cannot consist only of plants within a fenced-in area, but also consist of a components network within the entire area served by an electric utility. It is therefore wrong to speak of “public service” company because it is a company manufacturing electric power.

8.2 Power system matrices

Frequency- and time-domain techniques employ vectors and matrices for mathematical modeling of power systems and for defining input and output variables. This section deals with the bus admittance and the Jacobian matrices, which are essential components of all power flow formulations.

TABLE 8.1 Review of circuit definitions and laws.

Circuit-component definitions		Circuit laws	
Resistance	R	Ohm's law	$V = I Z$
Conductance	$G = 1/R$		$V = I/Y$
Inductance	L	Kirchhoff's voltage-loop law (KVL)	$\sum v = 0$, leads to loop matrix loop matrix
Reactance (inductive)	$j\omega L$		
Capacitance	C		
Reactance (capacitive)	$1/j\omega C = -j/\omega C$		
Impedance	$Z = R + j\omega L$ (e.g., inductor) $Z = R - j/\omega C$ (e.g., capacitor)		
Admittance	$Y = 1/Z$	Kirchhoff's current-node law (KCL)	$\sum I = 0$, leads to bus matrix
Susceptance	$B = 1/X$		

8.2.1 Bus admittance matrix

Table 8.1 presents a review of circuit-component definitions and laws. Ohm's and Kirchhoff's laws can be used for matrix formulations that are useful for load flow analyses. This approach yields two matrices:

- Kirchhoff's current law (KCL) generates bus matrices, which result from the fact that the sum of currents entering a bus is zero.
- Kirchhoff's voltage law (KVL) results in loop matrices, which describe voltages in a circuit loop.

The bus matrix written in terms of admittance originates directly from the KCL applied to each circuit bus other than the reference (ground) bus.

8.2.1.1 Application Example 8.1: A simple power system configuration

Draw the single-phase representation of a simple power system with bus 1 (called the swing bus) connected to buses 2 and 4 (through a transmission line), bus 2 connected to bus 3, and bus 3 connected to the reference ground (bus 0).

Solution to Application Example 8.1: A simple power system configuration.

The single-phase representation of the power system is shown in [Fig. E8.1.1](#).

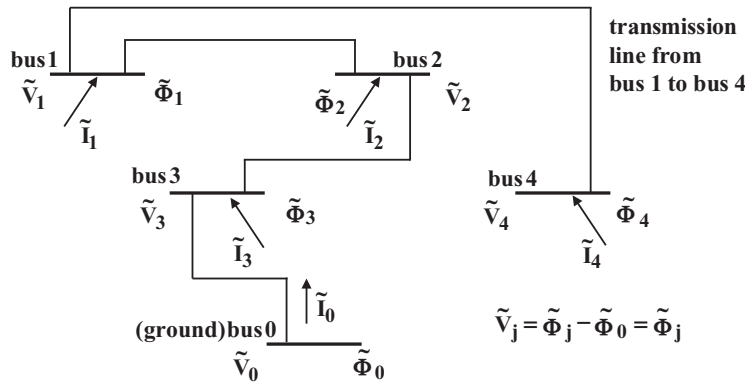


FIG. E8.1.1 Simple power system configuration (single-phase representation).

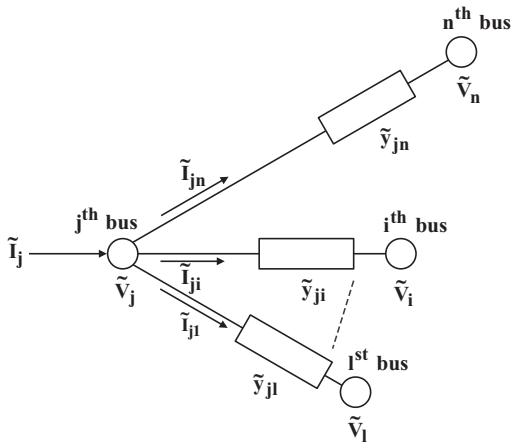


FIG. 8.2 Currents entering and leaving a circuit bus.

Let j be an arbitrary circuit bus other than the reference bus (which is denoted as bus 0), as shown in Fig. 8.2. Then

$$\sum_{i=1}^n \tilde{I}_{ji} = \tilde{I}_j \quad (8.1)$$

where $\tilde{I}_{ji}$ = line current, which leaves bus j and enters bus i via a line and $\tilde{I}_j$ = current injected at bus j from an external source or bus injection current. The tilde ($\sim$) above $\tilde{I}_{ji}$ and $\tilde{I}_j$ denotes a complex line current and a complex bus injection current, respectively.

Application of Ohm's law (Fig. 8.3) leads to

$$\tilde{I}_{ji} = \tilde{y}_{ji} (\tilde{V}_j - \tilde{V}_i) \quad (8.2)$$

where $\tilde{y}_{ji}$ is the complex line admittance of a line from bus j to bus i .




FIG. 8.3 Application of Ohm's law.

Certain elements of $\sum_{i=1}^n \tilde{I}_{ji} = \tilde{I}_j$ are zero:

- The current $\tilde{I}_{jj}$ is zero since no line joins bus j with bus j and this is reflected in $\tilde{I}_{jj} = \tilde{y}_{jj}(\tilde{V}_j - \tilde{V}_j)$ because it gives zero for $\tilde{I}_{jj}$ due to $(\tilde{V}_j - \tilde{V}_j) = 0$; and
- $\tilde{I}_{ji}$ will be zero if no line exists between j and i , the "line impedance" is infinite, and the "line admittance" $\tilde{y}_{ji}$ is zero. One can write now (introducing Eq. 8.2 into Eq. 8.1)

$$\sum_{i=1}^n \tilde{y}_{ji}(\tilde{V}_j - \tilde{V}_i) = \tilde{I}_j \quad (8.3)$$

Note that $\tilde{V}_j$ and $\tilde{V}_i$ are bus voltages with respect to bus 0, the reference (ground) bus. Eq. (8.3) is written for $i = 1, 2, \dots, n$ and the coefficient of voltage $\tilde{V}_j$ in the Kirchhoff equation at bus j is $\sum_{i=1}^n \tilde{y}_{ji}$ whereas the coefficient of $\tilde{V}_i (i \neq j)$ in the j th equation is $(-\tilde{y}_{ji})$.

All equations now read ($n \times n$ equation system) as follows,
for $j=1$:

$$\tilde{I}_1 = \left(\sum_{\substack{i=1 \\ i \neq 1}}^n \tilde{y}_{1i} \right) \tilde{V}_1 + (-\tilde{y}_{12})\tilde{V}_2 + \dots + (-\tilde{y}_{1n})\tilde{V}_n \quad (8.4a)$$

for $j=2$:

$$\tilde{I}_2 = (-\tilde{y}_{21})\tilde{V}_1 + \left(\sum_{\substack{i=1 \\ i \neq 2}}^n \tilde{y}_{2i} \right) \tilde{V}_2 + \dots + (-\tilde{y}_{2n})\tilde{V}_n \quad (8.4b)$$

for $j=n$:

$$\tilde{I}_n = (-\tilde{y}_{n1})\tilde{V}_1 + (-\tilde{y}_{n2})\tilde{V}_2 + \dots + \left(\sum_{\substack{i=1 \\ i \neq n}}^n \tilde{y}_{ni} \right) \tilde{V}_n. \quad (8.4c)$$

Observe the pattern of the coefficients of the bus voltages on the right-hand side of the equation system. This pattern will be generalized as the rule for the formation of a matrix of coefficients of $\tilde{V}_j$. The above n equations can be written in matrix form

$$\tilde{I}_{bus} = \bar{Y}_{bus} \bar{V}_{bus} \quad (8.5)$$

where $\tilde{I}_{bus}$ is the bus injection vector representing the n phasor injection currents, $\bar{Y}_{bus}$ is the bus admittance matrix (it is an $n \times n$ matrix of coefficients formed as indicated above), and $\bar{V}_{bus}$ is the bus voltage vector of n phasor voltages referenced to bus 0:

$$\tilde{V}_n = \tilde{\Phi}_n - \tilde{\Phi}_0 = \tilde{\Phi}_n \quad (8.6)$$

where $\tilde{\Phi}_n$ and $\tilde{\Phi}_0$ are the potentials at bus n and bus 0, respectively, and $\tilde{\Phi}_0 = 0$.

If $\bar{Y}_{bus}$ is a nonsingular matrix then its inverse $(\bar{Y}_{bus})^{-1}$ can be found and there exists a solution to the matrix equation. If $\bar{Y}_{bus}$ is singular then $(\bar{Y}_{bus})^{-1}$ cannot be found and there exists no solution to the matrix equation.

$$\begin{array}{ccc} \tilde{I}_{bus} & = & \tilde{Y}_{bus} \cdot \tilde{V}_{bus} \\ \uparrow & & \uparrow \quad \uparrow \\ n \times 1 & \{ n \times n \quad n \times 1 \} \leftarrow \{ n \times 1 \} \\ \uparrow \quad \uparrow \\ \text{row} & \text{column} \end{array} \quad (8.7)$$

Note that the injection currents find a return path through bus 0 (ground). Also note that the Kirchhoff current law is not applied to bus 0 in these equations; however, the total current entering bus 0 is the negative sum of the currents $\tilde{I}_1, \tilde{I}_2, \dots, \tilde{I}_n$. Therefore, the Kirchhoff current law at bus 0 is

$$\begin{aligned} -\sum_{i=1}^n \tilde{I}_i = & - \left[\left(-\tilde{y}_{21} - \tilde{y}_{31} - \dots - \tilde{y}_{n1} + \sum_{\substack{i=1 \\ i \neq 1}}^n \tilde{y}_{1i} \right) \tilde{V}_1 \right. \\ & \left. + \left(-\tilde{y}_{12} - \tilde{y}_{32} - \dots - \tilde{y}_{n2} + \sum_{\substack{i=1 \\ i \neq 2}}^n \tilde{y}_{2i} \right) \tilde{V}_2 + \dots \right] \end{aligned} \quad (8.8)$$

which can be readily simplified as

$$\tilde{I}_0 = -\tilde{y}_{01} \tilde{V}_1 - \tilde{y}_{02} \tilde{V}_2 - \dots - \tilde{y}_{0n} \tilde{V}_n, \quad (8.9)$$

where $\tilde{y}_{0k}$ is the primitive admittance joining buses 0 and k .

Because the relation in Eq. (8.9) is a linear combination of the previous n equations, it cannot be used to obtain additional information beyond that given in the $n \times n$ equation system. Inspection of the coefficients of the $\tilde{V}$ terms in the $n \times n$ equation system reveals a rule for the formation of $\bar{Y}_{bus}$. The following rules are used to “build” the bus admittance matrix referenced to bus 0.

The admittance matrix building algorithm

- y_{jj} : the diagonal entries of $\bar{Y}_{bus}$ are formed by summing the admittances of lines terminating at bus j . Note there is no tilde on y_{jj} .
- y_{ij} : the off-diagonal entries are the negatives of the admittances of lines between buses i and j . If there is no line between i and j , this term is zero. Note there is no tilde on y_{ij} .

Usually, bus 0 is the ground bus, but other buses may be chosen as the reference (for specialized applications). Since bus 0 is commonly chosen as the reference, the notation

$$\bar{Y}_{bus} = \bar{Y}_{bus}^{(0)} \quad (8.10)$$

is employed to denote the bus admittance matrix referenced to ground. If some other bus is used as the reference, for example bus k , the following notation is used:

$$\bar{Y}_{bus}^{(k)} \quad (8.11)$$

8.2.1.2 Application Example 8.2: Construction of bus admittance matrix

Construct the bus admittance matrix for the simple 4 bus power system of Fig. E8.2.1.

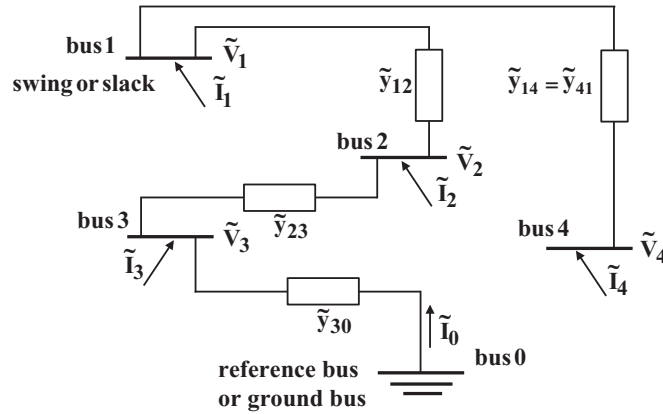


FIG. E8.2.1 Example for construction of bus matrix.

Solution to Application Example 8.2: Construction of bus admittance matrix.

The $\bar{Y}_{bus}$ admittance matrix is for Fig. E8.2.1

$$[\bar{Y}_{bus}] = \begin{bmatrix} Y_{11} & Y_{12} & Y_{13} & Y_{14} \\ Y_{21} & Y_{22} & Y_{23} & Y_{24} \\ Y_{31} & Y_{32} & Y_{33} & Y_{34} \\ Y_{41} & Y_{42} & Y_{43} & Y_{44} \end{bmatrix} \quad (E8.2.1)$$

where the entries y_{ij} of Eq. (E8.2.1) are as a function of the admittances $\tilde{y}_{ij}$ for $i=1\ldots 4$ and $j=1\ldots 4$:

$$\begin{aligned} y_{11} &= \tilde{y}_{12} + \tilde{y}_{14}, & y_{12} &= -\tilde{y}_{12}, & y_{13} &= 0, & y_{14} &= -\tilde{y}_{14} \\ y_{21} &= -\tilde{y}_{12}, & y_{22} &= \tilde{y}_{12} + \tilde{y}_{23}, & y_{23} &= -\tilde{y}_{23}, & y_{24} &= 0 \\ y_{31} &= 0, & y_{32} &= -\tilde{y}_{23}, & y_{33} &= \tilde{y}_{23} + \tilde{y}_{30}, & y_{34} &= 0 \\ y_{41} &= -\tilde{y}_{14}, & y_{42} &= 0, & y_{43} &= 0, & y_{44} &= \tilde{y}_{14} \end{aligned}$$

and

$$-\sum_{j=1}^4 \tilde{\mathbf{I}}_j = -(\tilde{\mathbf{I}}_1 + \tilde{\mathbf{I}}_2 + \tilde{\mathbf{I}}_3 + \tilde{\mathbf{I}}_4) = \tilde{\mathbf{I}}_0 \quad (\text{E8.2.2})$$

Inspection of the $\bar{\mathbf{Y}}_{bus}$ building algorithm reveals several properties of the bus matrix:

- $\bar{\mathbf{Y}}_{bus}$ is complex and symmetric;
- $\bar{\mathbf{Y}}_{bus}$ is sparse since each bus is connected to only a few nearby buses, and this causes many $y_{ji} = 0$ entries; and
- provided that there is a net nonzero admittance tie to the reference bus (e.g., ground), $\bar{\mathbf{Y}}_{bus}$ is nonsingular and may be inverted to find $\bar{\mathbf{V}}_{bus}$ from

$$\bar{\mathbf{I}}_{bus} = \bar{\mathbf{Y}}_{bus} \bar{\mathbf{V}}_{bus} \quad (8.12)$$

or

$$\bar{\mathbf{V}}_{bus} = (\bar{\mathbf{Y}}_{bus})^{-1} \bar{\mathbf{I}}_{bus} \quad (8.13)$$

If there are no ties to the reference bus, $\bar{\mathbf{Y}}_{bus}$ is singular and cannot be inverted because no solution to the $n \times n$ equation system exists.

8.2.1.3 Application Example 8.3: Building of nonsingular bus admittance matrix

Construct the bus admittance matrix for the 3 bus power system of Fig. E8.3.1.

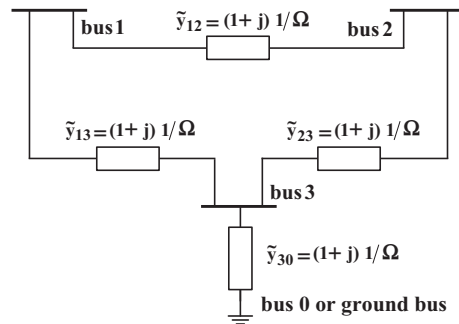


FIG. E8.3.1 Building of nonsingular bus admittance matrix for simple power system configuration.

Solution to Application Example 8.3: Building of nonsingular bus admittance matrix.

Note: Off-diagonal entries = sum of negatives of the line admittances

$$y_{21} = y_{12} = -(1 + j) 1/\Omega$$

$$y_{31} = y_{13} = -(1 + j) 1/\Omega$$

$$y_{32} = y_{23} = -(1 + j) 1/\Omega$$

main-diagonal entry for bus 1: $y_{11} = (2 + 2j) 1/\Omega$,

main diagonal entry for bus 2: $y_{22} = (2 + 2j) 1/\Omega$,

main-diagonal entry for bus 3: $y_{33} = (3 + 3j) 1/\Omega$.

Therefore,

$$\bar{Y}_{bus} = \begin{bmatrix} y_{11} & y_{12} & y_{13} \\ y_{21} & y_{22} & y_{23} \\ y_{31} & y_{32} & y_{33} \end{bmatrix} = \begin{bmatrix} (2 + 2j) & -(1 + j) & -(1 + j) \\ -(1 + j) & (2 + 2j) & -(1 + j) \\ -(1 + j) & -(1 + j) & (3 + 3j) \end{bmatrix} \quad (\text{E8.3.1})$$

$\bar{Y}_{bus}$ is complex and symmetric, but not sparse.

8.2.1.4 Application Example 8.4: Building of singular bus admittance matrix

Construct the bus admittance matrix for the simple 4 bus power system of Fig. E8.4.1.

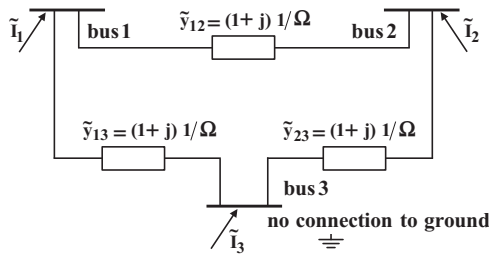


FIG. E8.4.1 Building of singular bus admittance matrix for simple power system configuration.

Solution to Application Example 8.4: Building of singular bus admittance matrix.

$$\tilde{I}_{bus} = \bar{Y}_{bus} \bar{V}_{bus} = \begin{bmatrix} (2 + 2j) & -(1 + j) & -(1 + j) \\ -(1 + j) & (2 + 2j) & -(1 + j) \\ -(1 + j) & -(1 + j) & (2 + 2j) \end{bmatrix} \begin{bmatrix} \tilde{V}_1 \\ \tilde{V}_2 \\ \tilde{V}_3 \end{bmatrix} \quad (\text{E8.4.1})$$

$$\tilde{I}_1 = (2 + 2j)\tilde{V}_1 - (1 + j)\tilde{V}_2 - (1 + j)\tilde{V}_3 \quad (\text{E8.4.2})$$

$$\tilde{I}_2 = -(1 + j)\tilde{V}_1 + (2 + 2j)\tilde{V}_2 - (1 + j)\tilde{V}_3 \quad (\text{E8.4.3})$$

$$\tilde{I}_3 = -(1 + j)\tilde{V}_1 - (1 + j)\tilde{V}_2 + (2 + 2j)\tilde{V}_3 \quad (\text{E8.4.4})$$

Add Eqs. (E8.4.2), (E8.4.3):

$$(\tilde{I}_1 + \tilde{I}_2) = (1 + j)\tilde{V}_1 + (1 + j)\tilde{V}_2 - (2 + 2j)\tilde{V}_3$$

or

$$\tilde{I}_3 = (\tilde{I}_1 + \tilde{I}_2) = -(1 + j)\tilde{V}_1 - (1 + j)\tilde{V}_2 + (2 + 2j)\tilde{V}_3 \quad (\text{E8.4.5})$$

Note that Eq. (E8.4.2) + Eq. (E8.4.3) = Eq. (E8.4.5), which is the same as Eq. (E8.4.4). That is, these equations are dependent. One concludes that the matrix is singular and no solution exists for Eqs. (E8.4.2)–(E8.4.4).

8.2.2 Triangular factorization

In the United States there exist three power grids: the Eastern, Western, and Texan (Electric Reliability Council of Texas $\equiv$ ERCOT). Because of stability problems these grids are linked with small (100 MW range) DC tie lines. Nevertheless if even one of the grids is analyzed, the number of buses will be very large: a few thousand buses or more, depending on the detail of modeling. Fortunately, not all buses are mutually linked through a transmission line and for this reason the resulting bus admittance matrix is very sparse, that is, only about 1% of the entire matrix entries are nonzero. However, because of the large dimensions (few thousands), a direct solution (e.g., Gaussian elimination) of the equation system is not feasible and one uses the Newton-Raphson method together with the Jacobian matrix to arrive at the solution via iterations.

To reduce computer memory requirements, sparsity programming is used: it is a digital programming technique whereby sparse matrices are stored in compact forms. The usual basis of sparsity programming techniques is the storage of only nonzero entries. Two broad classes of sparsity programming techniques are

- the entry-row-column storage method, and
- the chained-data-structure method.

Applications of sparsity programming methods are primarily in $\bar{Y}_{bus}$ methods. In this chapter, the Jacobian will be used; this matrix is as sparse as the $\bar{Y}_{bus}$ matrix and lends itself to sparsity programming.

In power engineering, as well as in many other branches of engineering, it is necessary to solve a simultaneous set of algebraic linear equations. The general form is the solution of

$$\bar{A} \cdot \bar{x} = \bar{b} \quad (8.14)$$

Given are the n by n matrix $\bar{A}$ and the n -dimensional vector $\bar{b}$. Such is the case in the solution of

$$\bar{I}_{bus} = \bar{Y}_{bus} \bar{V}_{bus} \quad (8.15)$$

or

$$\bar{V}_{bus} = [\bar{Y}_{bus}]^{-1} \bar{I}_{bus} \quad (8.16)$$

for $\bar{V}_{bus}$ where the injection currents and the admittance matrix are given. Using the notation of $\bar{A} \cdot \bar{x} = \bar{b}$, let $\bar{A}$ be factored into two matrices called triangular factorization:

$$\bar{A} = \bar{L} \cdot \bar{U} \quad (8.17)$$

where $\bar{L}$ is lower left triangular (e.g., l_{rc} is zero for $c > r$) and $\bar{U}$ is upper right triangular (e.g., u_{rc} is zero for $r > c$). Then

$$\bar{A} \cdot \bar{x} = [\bar{L} \cdot \bar{U}] \bar{x} = \bar{b} \quad (8.18)$$

Let $(\bar{U} \cdot \bar{x})$ be a new variable $\bar{w}$, which is an n -dimensional vector; then

$$\bar{w} = \bar{U} \cdot \bar{x} \quad (8.19)$$

$$\bar{L} \cdot \bar{w} = \bar{b} \quad (8.20)$$

where

$$\bar{w} = \begin{bmatrix} w_1 \\ w_2 \\ \cdot \\ \cdot \\ \cdot \\ w_n \end{bmatrix}, \quad \bar{b} = \begin{bmatrix} b_1 \\ b_2 \\ \cdot \\ \cdot \\ \cdot \\ b_n \end{bmatrix} \quad (8.21a,b)$$

$$\bar{L} = \begin{bmatrix} l_{11} & 0 & 0 & \cdot \\ l_{21} & l_{22} & 0 & \cdot \\ l_{31} & l_{32} & l_{33} & \cdot \\ \cdot & \cdot & \cdot & \cdot \end{bmatrix}, \quad \bar{U} = \begin{bmatrix} u_{11} & u_{12} & u_{13} & \cdot \\ 0 & u_{22} & u_{23} & \cdot \\ 0 & 0 & u_{33} & \cdot \\ \cdot & \cdot & \cdot & \cdot \end{bmatrix}. \quad (8.22a,b)$$

Note that $\bar{x}$ and $\bar{b}$ correspond to the $\bar{V}_{bus}$ vector and the current vector $\bar{I}_{bus}$, respectively.

8.2.2.1 Application Example 8.5: Matrix multiplication

Given

$$\bar{U} = \begin{bmatrix} u_{11} & u_{12} \\ 0 & u_{22} \end{bmatrix}, \quad \bar{L} = \begin{bmatrix} l_{11} & 0 \\ l_{21} & l_{22} \end{bmatrix} \quad (E8.5.1a,b)$$

Find entries of the matrix $\bar{L} \cdot \bar{U}$.

Solution to Application Example 8.5: Matrix multiplication.

$$\bar{L} \cdot \bar{U} = \begin{bmatrix} l_{11} & 0 \\ l_{21} & l_{22} \end{bmatrix} \cdot \begin{bmatrix} u_{11} & u_{12} \\ 0 & u_{22} \end{bmatrix} = \begin{bmatrix} (l_{11}u_{11}) & (l_{11}u_{12}) \\ (l_{21}u_{11}) & (l_{21}u_{12} + l_{22}u_{22}) \end{bmatrix} \quad (E8.5.2)$$

8.2.2.2 Application Example 8.6: Triangular factorization

Given

$$\overline{U} = \begin{bmatrix} u_{11} & u_{12} \\ 0 & u_{22} \end{bmatrix}, \quad \overline{x} = \begin{bmatrix} x_1 \\ x_2 \end{bmatrix} \quad (\text{E8.6.1a,b})$$

show that $\overline{w} = \overline{L} \cdot \overline{x}$ is a column ($n=2$) vector.

Solution to Application Example 8.6: Triangular factorization.

$$\overline{w} = \overline{U} \cdot \overline{x} = \begin{bmatrix} u_{11} & u_{12} \\ 0 & u_{22} \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \end{bmatrix} \quad (\text{E8.6.2})$$

$\begin{matrix} 2 & \times & 2 \\ \uparrow & & \uparrow \\ \text{row} & & \text{column} \end{matrix}$
 $\begin{matrix} 2 & \times & 1 \\ \uparrow & & \uparrow \\ \text{row} & & \text{column} \end{matrix}$

$$\overline{w} = \begin{bmatrix} u_{11}x_1 + u_{12}x_2 \\ u_{22}x_2 \end{bmatrix} \quad (\text{E8.6.3})$$

Therefore, $\overline{w}$ is a 2×1 matrix or a column vector.

Forward substitution

$\overline{L} \cdot \overline{w} = \overline{b}$ is readily solved for $\overline{w}$ since the form of the equation is rather special:

$$\overline{L} = \begin{bmatrix} l_{11} & 0 & 0 & 0 & \cdot \\ l_{21} & l_{22} & 0 & 0 & \cdot \\ l_{31} & l_{32} & l_{33} & 0 & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot \end{bmatrix} \begin{bmatrix} w_1 \\ w_2 \\ \cdot \\ \cdot \\ w_n \end{bmatrix} = \begin{bmatrix} b_1 \\ b_2 \\ \cdot \\ \cdot \\ b_n \end{bmatrix}. \quad (8.23)$$

The top row of the matrix equation is solved readily for w_1 since the only nonzero entry on the left-hand side is $l_{11}w_1$ and therefore

$$l_{11}w_1 = b_1 \quad (8.24a)$$

or

$$w_1 = \frac{b_1}{l_{11}} \quad (8.24b)$$

From row 2 of Eq. (8.23) one finds

$$l_{21}w_1 + l_{22}w_2 = b_2 \quad (8.24c)$$

or

$$w_2 = \frac{b_2 - l_{21}w_1}{l_{22}} \quad (8.24d)$$

This process of forward substitution continues until all components of $\overline{w}$ are computed.

Having found vector $\bar{w}$, the relation $\bar{w} = \bar{U} \cdot \bar{x}$ is used to find $\bar{x}$:

$$\begin{bmatrix} w_1 \\ w_2 \\ \cdot \\ \cdot \\ w_n \end{bmatrix} = \begin{bmatrix} u_{11} & u_{12} & u_{13} & \cdot \\ 0 & u_{22} & u_{23} & \cdot \\ 0 & 0 & u_{33} & \cdot \\ \cdot & \cdot & \cdot & \cdot \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \\ \cdot \\ \cdot \\ x_n \end{bmatrix} \quad (8.25)$$

Backward substitution

The bottom row of Eq. (8.25) is readily solved ($n=3$) for x_3 :

$$w_3 = u_{33}x_3 \quad (8.26a)$$

or

$$x_3 = \frac{w_3}{u_{33}} \quad (8.26b)$$

The second row of Eq. (8.25) from the bottom yields

$$w_2 = u_{22}x_2 + u_{23}x_3 \quad (8.26c)$$

or

$$x_2 = \frac{w_2 - u_{23}x_3}{u_{22}} \quad (8.26d)$$

Rule: The value of x_n is backward substituted into the $(n-1)$ st row of the above matrix equation to find x_{n-1} from

$$w_{n-1} = u_{n-1 \ n-1} x_{n-1} + u_{n-1 \ n} x_n \quad (8.27)$$

This process of back substitution is employed to find all other components of $\bar{x}$.

Note: By the process of

- (i) triangular factorization of $\bar{A}$,
- (ii) forward, and
- (iii) backward substitution,

the solution of $\bar{A} \cdot \bar{x} = \bar{b}$ is found without inverting $\bar{A}$! At first glance, it may appear remarkable that the inversion of $\bar{A}$ may be avoided, but there is some information that lies uncalculated in the use of triangular factorization compared to a solution using inversion. If $\bar{A} \cdot \bar{x} = \bar{b}$ is to be solved for many different values of $\bar{b}$, inversion is readily used since a given vector $\bar{b}$ premultiplied by $\bar{A}^{-1}$ gives the required result $\bar{x} = \bar{A}^{-1} \cdot \bar{b}$. In such an application, $\bar{A}^{-1}$ is calculated only once.

If triangular factorization is used, the forward/backward substitution process would have to be repeated for each different $\bar{b}$ vector. In power engineering applications, however, it is usually necessary to solve $\bar{A} \cdot \bar{x} = \bar{b}$ only once: the inverse of $\bar{A}$ is not really desired—only $\bar{x}$ is sought. The triangular factorization method is favored for most applications.

The success of the triangular factorization method depends on

- the speed of the factorization of $\bar{A}$ into $\bar{L}$ and $\bar{U}$, and
- the sparsity of $\bar{L}$ and $\bar{U}$.

A sparse $\bar{A}$ is of considerable interest because if the triangular matrices were sparse, the memory advantages of sparsity programming may be added to the speed advantages of triangular factorization.

Formation of the table of factors

Let $\bar{L}$ have unit (main) diagonal entries.

$$\bar{L} = \begin{bmatrix} 1 & 0 & 0 & . \\ l_{21} & 1 & 0 & . \\ l_{31} & l_{32} & 1 & . \\ . & . & . & . \end{bmatrix}, \quad \bar{U} = \begin{bmatrix} u_{11} & u_{12} & u_{13} & . \\ 0 & u_{22} & u_{23} & . \\ 0 & 0 & u_{33} & . \\ . & . & . & . \end{bmatrix}$$

and let $\bar{U}$ be stored superimposed onto $\bar{L}$ (omitting the writing of the unit entries of $\bar{L}$):

$$\begin{bmatrix} u_{11} & u_{12} & u_{13} & . \\ l_{21} & u_{22} & u_{23} & . \\ l_{31} & l_{32} & u_{33} & . \\ . & . & . & . \end{bmatrix} \quad (8.29)$$

This superimposed array is called the table of factors. The upper right triangle of the table is $\bar{U}$; the lower left triangle is $\bar{L}$ with the unit diagonal entries deleted.

8.2.3 Jacobian matrix

The proposal to use for a partial derivative “ ∂ ” instead of “ d ” stems from Carl Gustav Jacob Jacobi, 1804–1851, a German mathematician. At about the same time as Jacobi, the Russian mathematician Michail Vasilevich Ostrogradski (1801–1862) also introduced the Jacobian of n functions $y_1, y_2, \dots, y_n$ and n unknowns $x_1, x_2, \dots, x_n$ as follows:

$$\bar{J} = \begin{bmatrix} \frac{\partial y_1}{\partial x_1} & \frac{\partial y_1}{\partial x_2} & \frac{\partial y_1}{\partial x_n} \\ \frac{\partial y_2}{\partial x_1} & \frac{\partial y_2}{\partial x_2} & \frac{\partial y_2}{\partial x_n} \\ . & . & . \\ \frac{\partial y_n}{\partial x_1} & \frac{\partial y_n}{\partial x_2} & \frac{\partial y_n}{\partial x_n} \end{bmatrix} \quad (8.30)$$

It is possible to factorize arbitrary nonsingular matrices $\bar{J}$ into $\bar{L}$ and $\bar{U}$ without the need for new computer storage areas: in other words, $\bar{J}$ is destroyed and replaced by the table of factors. The table of factors is approximately as sparse as $\bar{J}$ and, therefore, the table of factors does not require additional storage.

Techniques that result in the destruction of the original data and the replacement of those data by the solution are known as in situ methods. Matrix $\bar{J}$ is factored into $\bar{L}$ and $\bar{U}$ in situ and $\bar{J}$ is destroyed and replaced by the table of factors.

The formulas required for the calculation of the table of factors are readily found, noting that

$$\bar{L} \cdot \bar{U} = \bar{J} (= \bar{A}) \quad (8.31)$$

Write $\bar{L}$ and $\bar{U}$, and find the entries of $\bar{L}$ and $\bar{U}$, that is, the table of factors:

$$\begin{bmatrix} 1 & 0 & 0 & 0 & \cdot \\ l_{21} & 1 & 0 & 0 & \cdot \\ l_{31} & l_{32} & 1 & 0 & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot \end{bmatrix} \begin{bmatrix} u_{11} & u_{12} & u_{13} & \cdot \\ 0 & u_{22} & u_{23} & \cdot \\ 0 & 0 & u_{33} & \cdot \\ \cdot & \cdot & \cdot & \cdot \end{bmatrix} = \bar{J} = \begin{bmatrix} J_{11} & J_{12} & J_{13} & \cdot \\ J_{21} & J_{22} & J_{23} & \cdot \\ J_{31} & J_{32} & J_{33} & \cdot \\ \cdot & \cdot & \cdot & \cdot \end{bmatrix} \quad (8.32)$$

8.2.3.1 Application Example 8.7: Jacobian matrices

Given

$$\begin{bmatrix} 1 & 0 \\ l_{21} & 1 \end{bmatrix} \begin{bmatrix} u_{11} & u_{12} \\ 0 & u_{22} \end{bmatrix} = \begin{bmatrix} J_{11} & J_{12} \\ J_{21} & J_{22} \end{bmatrix} \quad (E8.7.1)$$

Find u_{11} , u_{12} , u_{22} , and l_{21} .

Solution to Application Example 8.7: Jacobian matrices.

$$J_{11} = u_{11} \quad \text{or} \quad u_{11} = J_{11},$$

$$J_{12} = u_{12} \quad \text{or} \quad u_{12} = J_{12},$$

$$J_{21} = l_{21}u_{11} \quad \text{or} \quad l_{21} = J_{21}/u_{11},$$

$$J_{22} = l_{21}u_{12} + u_{22} \quad \text{or} \quad u_{22} = J_{22} - l_{21}u_{12}.$$

In general

$$u_{11} = J_{11}, \quad u_{12} = J_{12}, \dots, \quad u_{1c} = J_{1c}, \dots, \quad u_{1n} = J_{1n}$$

Since the first row of the table of factors is row 1 of $\bar{U}$, the first row of the table of factors is simply row 1 of $\bar{J}$.

In row 2 of $\bar{J}$:

$$l_{21}u_{11} = J_{21}, \quad l_{21}u_{12} + u_{22} = J_{22}, \quad l_{21}u_{13} + u_{23} = J_{23} \dots$$

These equations yield l_{21} , u_{22} , u_{23} , u_{24} , ...

$$l_{21} = \frac{J_{21}}{u_{11}}, \quad u_{22} = J_{22} - l_{21}u_{12}, \quad u_{23} = J_{23} - l_{21}u_{13} \dots$$

Thus in the expansion of row 2 of $\bar{J}$, one l and $(n-1)$ u 's are formed. The generalization for the expansion of row r of $\bar{J}$ is straightforward:

$$l_{rc} = \frac{J_{rc} - \sum_{q=1}^{c-1} l_{rq}u_{qc}}{u_{cc}}, \quad \text{for } c = 1, 2, \dots, (r-1) \quad (E8.7.2)$$

$$u_{rc} = J_{rc} - \sum_{q=1}^{r-1} l_{rq} u_{qc}, \quad \text{for } c = r, r+1, \dots, n \quad (\text{E8.7.3})$$

The rules for the formation of the table of factors in situ are as follows:

- 1) Row 1 of $\bar{J}$ is not modified.
- 2) Row 2 of $\bar{J}$ is modified to yield one l and $(n-1)$ u 's. These entries are found using the above two equations for l_{rc} and u_{rc} . For these equations, when the summation upper index is zero, there are no terms in the sum (e.g., ignore the summation term). When the upper and lower indices of summation are the same, there is a single term in the sum.
- 3) Rule 2 is repeated for each row and $\bar{J}$ is replaced by the table of factors. In row r , there will be $(r-1)$ l -terms calculated and $(n-r+1)$ u -terms. The above equations for l_{rc} and u_{rc} are used.

Forward and backward substitutions

The solution of a simultaneous set of algebraic linear equations by triangular factorization involves two main steps:

- formation of the table of factors, and
- forward/backward substitutions.

Having found the table of factors as indicated previously, the following relations are used to complete the solution:

$$\bar{L} \cdot \bar{w} = \bar{b}, \quad \bar{U} \cdot \bar{x} = \bar{w} \quad (8.33)$$

Vector $\bar{b}$ is destroyed in this process and converted in situ to vector $\bar{w}$. Since l_{11} is unity, w_1 is simply b_1 as can be seen from the matrix solution

$$\begin{bmatrix} l_{11} & 0 & 0 & 0 & \cdot \\ l_{21} & l_{22} & 0 & 0 & \cdot \\ l_{31} & l_{32} & l_{33} & 0 & \cdot \\ \cdot & \cdot & \cdot & \cdot & \cdot \end{bmatrix} \begin{bmatrix} w_1 \\ w_2 \\ \cdot \\ \cdot \\ w_n \end{bmatrix} = \begin{bmatrix} b_1 \\ b_2 \\ \cdot \\ \cdot \\ b_n \end{bmatrix} \quad (8.34)$$

Subsequent rows of $\bar{w}$ are found using

$$w_r = b_r - \sum_{q=1}^{r-1} l_{rq} w_q.$$

$\uparrow \quad \uparrow$
created destroyed
 for $r = 1, 2, \dots, n$

As this equation is used, w_1 replaces b_1 , w_2 replaces b_2 , and so on. Having found w_1 a similar process is used to find $\bar{x}$:

$$\begin{bmatrix} u_{11} & u_{12} & u_{13} & \cdot \\ 0 & u_{22} & u_{23} & \cdot \\ 0 & 0 & u_{33} & \cdot \\ \cdot & \cdot & \cdot & \cdot \end{bmatrix} \begin{bmatrix} x_1 \\ x_2 \\ \cdot \\ \cdot \\ x_n \end{bmatrix} = \begin{bmatrix} w_1 \\ w_2 \\ \cdot \\ \cdot \\ w_n \end{bmatrix} \quad (8.35)$$

By inspection,

$$u_{nn}x_n = w_n \quad (8.36)$$

or

$$x_n = \frac{w_n}{u_{nn}} \quad (8.37)$$

Again, in situ technique is used and x_n replaces w_n .

In row $n - 1$:

$$u_{n-1, n-1}x_{n-1} + u_{n-1, n}x_n = w_{n-1} \quad (8.38)$$

or

$$x_{n-1} = \frac{w_{n-1} - u_{n-1, n}x_n}{u_{n-1, n-1}} \quad (8.39)$$

Element x_{n-1} replaces w_{n-1} . The process continues for rows $n - 2, n - 3, \dots, 1$. In row r ,

$$x_r = \frac{w_r - \sum_{q=r+1}^n u_{rq}x_q}{u_{rr}} \quad (8.40)$$

This completes the solution.

8.3 Fundamental power flow

The electric power flow problem is the most studied and documented problem in power engineering. It is the calculation of line loading given the generation and demand levels of P , Q , and S measured in kW, kVAr, and kVA, respectively. The transmission network is (nearly) linear, and one might expect the power flow to be a linear problem. However, because power $p = (v \cdot i)$ is a product of voltage v and current i , the problem formulation is nonlinear even for a linear transmission network. Additional nonlinearities arise from the specification and use of complex voltages and currents. Also, there are transmission component nonlinearities that may be considered, such as tap changing transformers, in which the tap is adjusted to hold a given bus voltage at a fixed magnitude.

The power flow formulation does not consider time variations of loads, generation, or network configuration. The sinusoidal steady state is assumed and, as a result, equations are algebraic in form rather than differential.

Prior to 1940 there were a limited number of interconnected power systems and the servicing of the load was elementary since the systems were primarily radial circuits (Fig. 8.4). In more recent years, the numerous advantages of interconnection were recognized, and modern power systems are characterized by a high degree of interconnection (Fig. 8.5), for example, within the three U.S. power grids (Western, Eastern, and Texan power systems). Many loop circuits with many load/generation buses and high levels of power exchange between neighboring companies exist. The latter point relates closely to interconnection advantages.

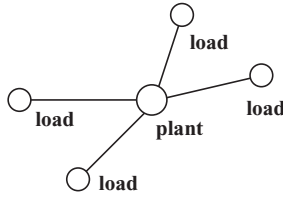


FIG. 8.4 Radial power systems.

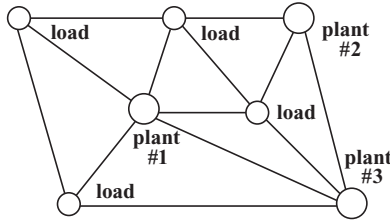


FIG. 8.5 Interconnected power systems.

With no addition of generation capacity, it is possible to increase the generation available through interconnection. For example, in the case of an outage of a generating unit, power may be purchased from a neighboring company. The cost savings realized from lower installed capacity usually far outweigh the cost of the transmission circuits required to access neighboring companies. The analysis of large interconnected power systems generally involves the simultaneous solution of many (thousands) nonlinear algebraic equations using the Newton-Raphson approach. Like most engineering problems, the power flow problem has a set of given data and a set of quantities that must be calculated.

In this section, each complex unknown will be counted as two real unknowns, and each complex equation will be considered as two real equations. The objective of fundamental power flow is to calculate line loading for given generation and load levels (P , Q , and S).

8.3.1 Fundamental bus admittance matrix

As discussed and formulated in the previous section, for an n bus system (not including the ground bus, which is the reference bus), the fundamental bus admittance matrix is an $n \times n$ matrix:

$$\bar{Y}_{bus} = \begin{bmatrix} y_{11} & y_{12} & \cdots & y_{1n} \\ \vdots & & \ddots & \vdots \\ y_{n1} & y_{n2} & \cdots & y_{nn} \end{bmatrix} \quad (8.41)$$

where $f_1 = 60 \text{ Hz}$ and $\omega_1 = 2\pi f_1 = 377 \text{ rad/s}$.

The entries of $\bar{Y}_{bus}$ are found as follows,
main-diagonal entries:

$y_{kk} = \text{sum of line admittances connected to bus } k \text{ } (k = 1, 2, \dots, n).$

off-diagonal entries:

$y_{kj} = -(\text{line admittance connected between buses } k \text{ and } j).$

Since $y_{kj} = y_{jk}$, the matrix $\bar{Y}_{bus}$ is symmetric.

8.3.2 Newton-Raphson power flow formulation

The power (load) flow problem consists of calculations of power flows (real, reactive) and voltages (magnitude, phase) of a network for specified (demand and generation powers) terminal or bus conditions. All voltages and currents are assumed to have fundamental ($h=1$, $f_1=60$ Hz) frequency components. A single-phase representation is considered to be adequate because power systems are approximately balanced within all three phases. Associated with each bus (e.g., bus j) are four quantities:

- real power P ,
- reactive power Q ,
- root-mean-squared (rms) voltage value $|\tilde{V}|$, and
- phase angle of voltage δ .

Three types of buses are represented and two of the four quantities are specified at each bus:

- **Swing bus.** It is necessary to select one reference bus (called the swing or slack bus) providing the transmission losses because these are unknown until the final solution is available. The voltage amplitude and its phase angle are given at the swing bus (usually 1.0 per unit (pu) and zero radians, respectively), and all other bus voltage angles are measured with respect to the phase angle of this reference bus. The remaining buses are either *PV* or *PQ* buses.
- **Voltage controlled (*PV*) buses.** The real power P and the voltage magnitude (amplitude) $|\tilde{V}|$ are specified for *PV* buses. These are usually the generation buses at which the injected real power is specified and held fixed by turbine settings (e.g., steam entry valve). A voltage regulator holds $|\tilde{V}|$ fixed at *PV* buses by automatically varying the generator field excitation.
- **Load (*PQ*) buses.** These are mostly system loads at which real and reactive powers (P and Q , respectively) are specified.

The following notations will be used,

- for a given bus (e.g., the j th bus):
 - P_j = real power
 - Q_j = reactive power
 - $|\tilde{V}_j|$ = rms value of voltage, and
 - δ_j = angle of voltage.
- For the swing or slack bus ($j=1$):
 - $|\tilde{V}_1| = 1.0$ pu
 - $\delta_1 = 0$ rad, and
 - It will cover all transmission line losses of the system ("slack").
- For a *PV* bus (e.g., the j th bus):
 - It is a generation bus
 - P_j is given by turbine setting, and
 - $|\tilde{V}_j|$ is given by generator excitation.

- For a PQ bus (e.g., the j th bus):
 - It is a load bus,
 - P_j and Q_j are given by the load demand,
 - because power values are given ($p = v \cdot i$) one obtains an algebraic, nonlinear system of equations.

Fundamental bus voltage vector

For power system modeling at rated frequency, the bus voltage vector is defined as (note: the bar above the x means vector, and t means transpose):

$$\bar{x} = [\delta_2, |\tilde{V}_2|, \delta_3, |\tilde{V}_3|, \dots, \delta_n, |\tilde{V}_n|]^t \quad (8.42)$$

where δ_j is the phase shift of voltage at bus j with respect to the swing bus voltage phase angle and $|\tilde{V}_j|$ is the voltage rms magnitude at bus j . Note that if bus 1 is the swing bus, $|\tilde{V}_1|$ and δ_1 are known (usually 1.0 per unit and zero radians).

Although power system components are assumed to be linear in the conventional power flow formulation, the problem is a nonlinear one because power p is the product of voltage v and current i . The load flow problem requires the solution of algebraic but nonlinear equations, which are solved using the Newton-Raphson method as will be discussed next.

i) Linear approximation, one-dimensional analysis (Fig. 8.6):

$$F(x_1) = (x_1 - x_0) \frac{dF(x_0)}{dx} \quad (8.43)$$

where $h = (x_1 - x_0)$, or

$$F(x_1) = h \frac{dF(x_0)}{dx} \quad (8.44)$$

$$\left[\frac{dF(x_0)}{dx} \right]^{-1} F(x_1) = (x_1 - x_0) \quad (8.45)$$

$$x_1 = x_0 + \left[\frac{dF(x_0)}{dx} \right]^{-1} F(x_1) \quad (8.46a)$$

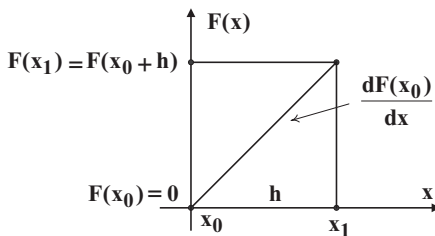


FIG. 8.6 Linear extrapolation from coordinate point $x_0, F(x_0)$ to $x_1, F(x_1)$.

or

$$\begin{array}{ccc}
 x_1 & = & x_0 + \frac{F(x_1)}{\left[\frac{dF(x_0)}{dx} \right]} \\
 \uparrow & & \uparrow \\
 \text{updated guess} & & \text{first guess} \\
 \text{after first iteration} & &
 \end{array} \quad (8.46b)$$

ii) Taylor series for one variable (Fig. 8.7):

$$F(x) = F(x_0) + \frac{(x-x_0)}{1!}F'(x_0) + \frac{(x-x_0)^2}{2!}F''(x_0) + \dots + \frac{(x-x_0)^n}{n!}F^{(n)}(x_0) + \dots \quad (8.47)$$

or


$$F(x_0 + h) = F(x_0) + \frac{h}{1!}F'(x_0) + \frac{h^2}{2!}F''(x_0) + \dots + \frac{h^n}{n!}F^{(n)}(x_0) + \dots \quad (8.48)$$

$$F(x_0 + h) \approx F(x_0) + \frac{h}{1!}F'(x_0) \quad (8.49a)$$

$$F(x_1) \approx F(x_0) + (x_1 - x_0)F'(x_0) \quad (8.49b)$$

$$\text{for } F(x_1) = 0 \quad x_1 = x_0 - \frac{F(x_0)}{F'(x_0)} \quad (8.49c)$$

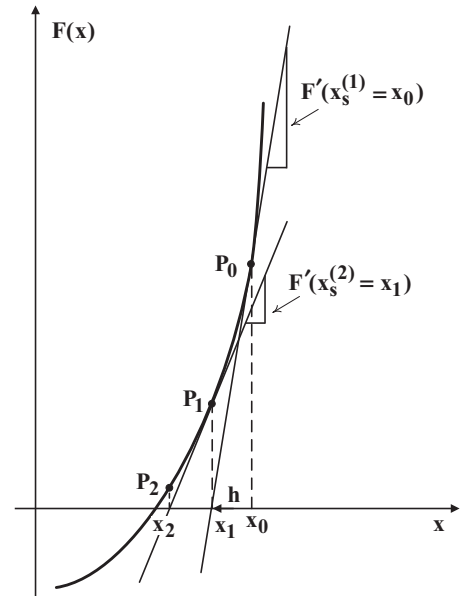FIG. 8.7 Taylor series approximation for one variable, where $h = (x_1 - x_0)$.



iii) Taylor series for two variables (replace “ d ” by “ ∂ ,” Fig. 8.6):

$$F(x_0 + h, y_0 + k) = F(x_0, y_0) + \left\{ \frac{\partial F(x_0, y_0)}{\partial x} h + \frac{\partial F(x_0, y_0)}{\partial y} k \right\} \\ + \frac{1}{2} \left\{ \frac{\partial^2 F(x_0, y_0)}{\partial x^2} h^2 + 2 \frac{\partial^2 F(x_0, y_0)}{\partial x \partial y} hk + \frac{\partial^2 F(x_0, y_0)}{\partial y^2} k^2 \right\} + \frac{1}{6} \{ \dots \} + \dots + \frac{1}{h!} \{ \dots \} + R_n \quad (8.50)$$

where R_n is the remainder.

Eq. (8.50) can be written in matrix form neglecting higher order terms:

$$F(x_0 + h, y_0 + k) = F(x_0, y_0) + \left[\frac{\partial F(x_0, y_0)}{\partial x} \quad \frac{\partial F(x_0, y_0)}{\partial y} \right] \begin{bmatrix} h \\ k \end{bmatrix} \quad (8.51)$$

where

$$h = (x_1 - x_0) \text{ and } k = (y_1 - y_0)$$

or, for $F(x_1, y_1) = 0$,

$$\begin{bmatrix} x_1 \\ y_1 \end{bmatrix} = \begin{bmatrix} x_0 \\ y_0 \end{bmatrix} - \frac{F(x_0, y_0)}{\left[\frac{\partial F(x_0, y_0)}{\partial x} \quad \frac{\partial F(x_0, y_0)}{\partial y} \right]} \quad (8.52)$$

or

$$\begin{bmatrix} x_1 \\ y_1 \end{bmatrix} = \begin{bmatrix} x_0 \\ y_0 \end{bmatrix} - \left[\frac{\partial F(x_0, y_0)}{\partial x} \quad \frac{\partial F(x_0, y_0)}{\partial y} \right]^{-1} F(x_0, y_0) \quad (8.53)$$

Therefore,

$$\begin{bmatrix} x_1 \\ y_1 \end{bmatrix} = \begin{bmatrix} x_0 \\ y_0 \end{bmatrix} - (\bar{J})^{-1} F(x_0, y_0) \quad (8.54)$$

where the two-dimensional Jacobian $\bar{J}$ is

$$\bar{J} = \left[\frac{\partial F(x_0, y_0)}{\partial x} \quad \frac{\partial F(x_0, y_0)}{\partial y} \right] \quad (8.55)$$

Residuals of an equation system

Given the equation system:

$$x_1 - 2x_2 - 4x_3 = 0$$

$$3x_1 + x_2 + 7x_3 = 0$$

$$7x_1 - x_2 + x_3 = 0$$

The approximate (guessed) solutions are x_{10}, x_{20}, x_{30} . Introducing approximate solutions in the equation system:

$$x_{10} - 2x_{20} - 4x_{30} = \text{residual 1}$$

$$3x_{10} + x_{20} + 7x_{30} = \text{residual 2}$$

$$7x_{10} - x_{20} + x_{30} = \text{residual 3}$$

If $\sum_{i=1}^3 |\text{residual } i| = 0$, then solution of the equation system has been obtained.

Fundamental mismatch power

The power flow algorithm is based on the Newton-Raphson approach forcing the mismatch powers (at system buses) to zero. The mismatch powers (real and reactive powers) correspond to the residuals of the equation system as discussed above. Specifically the term “mismatch power” at bus i refers to the summation of the complex powers leaving via lines connected to bus i and the specified complex load (demand) power at this bus. Note that the bus itself cannot produce or dissipate power, and therefore, the mismatch power for a given bus must be zero. Therefore, the mismatch power vector is

$$\Delta \bar{W} = [P_2 + F_{r,2}, Q_2 + F_{i,2}, \dots, P_n + F_{r,n}, Q_n + F_{i,n}]^t \quad (8.56)$$

where P_j and Q_j are the real and reactive load powers at bus j , respectively, and $F_{r,j}$ and $F_{i,j}$ are the real and reactive line powers computed later in this section. Fig. 8.8 illustrates the definition of power at a given bus. Note the following:

- $P_2 > 0$ demand (load) of real power,
- $P_2 < 0$ generation of real power,
- $Q_2 > 0$ demand (inductive load) of reactive power, and
- $Q_2 < 0$ generation (capacitive load) of reactive power.

For an n -bus system consisting of the swing bus and PQ buses (inclusion of PV buses is considered later), the mismatch power vector has $2(n - 1)$ rows corresponding to buses 2 through n (bus 1 is assumed to be the swing bus). Clearly $\Delta \bar{W}$ is a function of $\bar{x}$, the bus voltage vector (Eq. 8.42).

The fundamental Newton-Raphson power flow algorithm

The power flow problem simplifies to finding $\bar{x}$ such that

$$\Delta \bar{W}(\bar{x}) = 0 \quad (8.57)$$

Let $\bar{x}_s$ be the bus solution vector and expand Eq. (8.57) in a Taylor series about $\bar{x} = \bar{x}_s$ where $\bar{x}_s$ is the (guessed) solution (see Eqs. 8.46 and 8.52):


$$\Delta \bar{W}(\bar{x}) = \Delta \bar{W}(\bar{x}_s) + \bar{J}(\bar{x} - \bar{x}_s) \quad (8.58)$$

or

$$\bar{J}^{-1} \Delta \bar{W}(\bar{x}) = \bar{J}^{-1} \Delta \bar{W}(\bar{x}_s) + (\bar{x} - \bar{x}_s) \quad (8.59)$$

where $\bar{J}$ is the Jacobian.

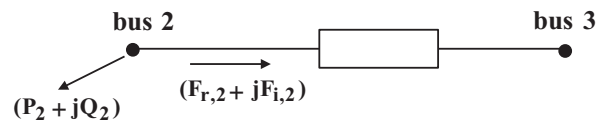FIG. 8.8 Definition of powers at a bus (bus 2).



With $\Delta\bar{W}(\bar{x}) = 0$ because $\bar{x}$ is the (converged) solution vector,

$$\bar{x} = \bar{x}_s - \bar{J}^{-1} \Delta\bar{W}(\bar{x}_s) \quad (8.60)$$

Due to the linearization (neglect of higher order terms), the solution $\bar{x}_s$ of Eq. (8.60) is an approximation which only can be improved by iterations. Therefore,

$$\bar{x}^{\xi+1} = \bar{x}^{\xi} - \bar{J}^{-1} \Delta\bar{W}(\bar{x}^{\xi}) \quad (8.61)$$

or with

$$\Delta\bar{x}^{\xi} = \bar{J}^{-1} \Delta\bar{W}(\bar{x}^{\xi}) \quad (8.62)$$

$$\bar{x}^{\xi+1} = \bar{x}^{\xi} - \Delta\bar{x}^{\xi} \quad (8.63)$$

where superscript ξ indicates the iteration number and $\bar{J}$ is a $2(n-1) \times 2(n-1)$ matrix consisting of partial derivatives of mismatch powers with respect to the bus voltages. Note that all quantities are complex (thus the 2 in front of $(n-1)$) and the swing bus voltage (magnitude and phase angle) is known (therefore $n-1$). If $\Delta\bar{W}(\bar{x}_s) = 0$ then

$$\bar{x} = \bar{x}_s - \bar{J}^{-1} \Delta\bar{W}(\bar{x}_s) = \bar{x}_s \quad (8.64)$$

The evaluation of Eq. (8.61) (the solution) is done by computer using triangular factorization and forward/backward substitution. This works for a few thousands of buses quite well. In case of hand calculations, where there are just a few buses, we use matrix inversion.

8.3.3 Fundamental Jacobian entry formulas

Fig. 8.9 shows a typical i bus of an n -bus system. This i bus is connected to three other buses m , k , and l . The load connected to bus i demands a complex power $S_{load,i}$.

The total complex (apparent) power leaving bus i via the lines to buses k , l , m is

$$S_{lines,i} = \tilde{V}_i [\tilde{I}_k + \tilde{I}_l + \tilde{I}_m]^* \quad (8.65)$$

where $(*)$ denotes the complex conjugate and $\tilde{y}_{ij}$ are the line admittances:

$$S_{lines,i} = \tilde{V}_i \left[(\tilde{V}_i - \tilde{V}_k) \tilde{y}_{ki} + (\tilde{V}_i - \tilde{V}_l) \tilde{y}_{li} + (\tilde{V}_i - \tilde{V}_m) \tilde{y}_{mi} \right]^* \quad (8.66)$$

or

$$S_{lines,i} = \tilde{V}_i \left[\tilde{V}_i (\tilde{y}_{ki} + \tilde{y}_{li} + \tilde{y}_{mi}) - \tilde{y}_{ki} \tilde{V}_k - \tilde{y}_{li} \tilde{V}_l - \tilde{y}_{mi} \tilde{V}_m \right]^* \quad (8.67)$$

With the entries of the admittance matrix

$$y_{ii} = (\bar{Y}_{bus})_{ii} = \tilde{y}_{ki} + \tilde{y}_{li} + \tilde{y}_{mi} ,$$

$$y_{ki} = (\bar{Y}_{bus})_{ki} = -\tilde{y}_{ki} ,$$

$$y_{li} = (\bar{Y}_{bus})_{li} = -\tilde{y}_{li} ,$$

$$y_{mi} = (\bar{Y}_{bus})_{mi} = -\tilde{y}_{mi} ,$$

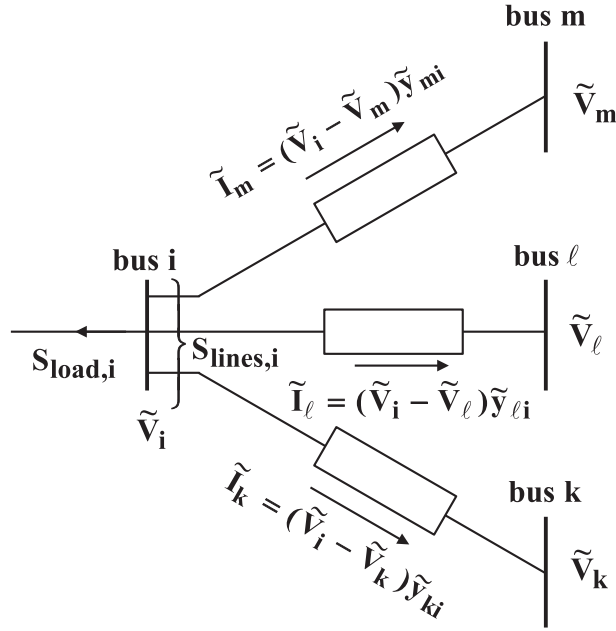


FIG. 8.9 Definition of load and line apparent powers as well as line currents.

it follows

$$S_{lines,i} = \left[(\bar{Y}_{bus})_{ii} \tilde{V}_i + (\bar{Y}_{bus})_{ki} \tilde{V}_k + (\bar{Y}_{bus})_{li} \tilde{V}_l + (\bar{Y}_{bus})_{mi} \tilde{V}_m \right]^* \tilde{V}_i \quad (8.68)$$

Using the notation

$$\bar{V}_{bus} = \begin{bmatrix} \tilde{V}_i \\ \tilde{V}_k \\ \tilde{V}_l \\ \tilde{V}_m \end{bmatrix} \quad (8.69)$$

one can write in a condensed manner

$$S_{lines,i} = \left[(\text{row } i \text{ of } \bar{Y}_{bus}) \bar{V}_{bus} \right]^* \tilde{V}_i \quad (8.70)$$

Therefore, for the PQ buses, we have the mismatch powers

$$\Delta W_i = S_{load,i} + S_{lines,i} \quad (8.71)$$

$$\Delta W_i = S_{load,i} + \left[(\text{row } i \text{ of } \bar{Y}_{bus}) \bar{V}_{bus} \right]^* \tilde{V}_i \quad (8.72)$$

where $S_{load,i}$ is the load (demand) complex (apparent) power at bus i ($S_{load,i} = P_i + jQ_i$). Breaking the mismatch power ΔW_i into a real part ΔP_i and an imaginary part ΔQ_i , we have the real and reactive mismatch powers, respectively:

$$\Delta P_i = P_i + \text{Re} \left\{ \left[(\text{row } i \text{ of } \bar{Y}_{bus}) \bar{V}_{bus} \right]^* \tilde{V}_i \right\} \quad (8.73)$$

and

$$\Delta Q_i = Q_i + \text{Im} \left\{ \left[(\text{row } i \text{ of } \bar{Y}_{bus}) \bar{V}_{bus} \right]^* \tilde{V}_i \right\} \quad (8.74)$$

with P_i and Q_i being the real and reactive load (demand) powers at bus i .

Inspection of matrix expression (Eq. 8.70).

Let us inspect the expression $\tilde{V}_i \left[(\text{row } i \text{ of } \bar{Y}_{bus}) \bar{V}_{bus} \right]^*$ (with entries of admittance matrix in terms of line admittances, note minus signs):

$$\tilde{V}_i \left[(\text{row } i \text{ of } \bar{Y}_{bus}) \bar{V}_{bus} \right]^* = \tilde{V}_i \left[\tilde{V}_i (\tilde{y}_{ki} + \tilde{y}_{li} + \tilde{y}_{mi}) - \tilde{y}_{ki} \tilde{V}_k - \tilde{y}_{li} \tilde{V}_l - \tilde{y}_{mi} \tilde{V}_m \right]^* \quad (8.75)$$

with

$$\begin{aligned} \tilde{V}_i &= |\tilde{V}_i| e^{j\delta_i} = V_i e^{j\delta_i}, \quad \tilde{V}_k = |\tilde{V}_k| e^{j\delta_k} = V_k e^{j\delta_k}, \quad \tilde{V}_l = |\tilde{V}_l| e^{j\delta_l} = V_l e^{j\delta_l}, \\ \tilde{V}_m &= |\tilde{V}_m| e^{j\delta_m} = V_m e^{j\delta_m} \quad \text{and} \quad \tilde{y}_{ki} = |\tilde{y}_{ki}| e^{j\theta_{ki}} \end{aligned} \quad (8.76)$$

Therefore, for the complex (apparent) power between buses k and i , one gets

$$\begin{aligned} \tilde{V}_i \left[(-\tilde{y}_{ki}) \tilde{V}_k \right]^* &= |\tilde{V}_i| e^{j\delta_i} (-|\tilde{y}_{ki}|) e^{-j\theta_{ki}} |\tilde{V}_k| e^{-j\delta_k} = |\tilde{V}_i| |\tilde{V}_k| (-|\tilde{y}_{ki}|) e^{j(-\theta_{ki} - \delta_k + \delta_i)} \\ &= F_{r,ki} + F_{i,ki} \end{aligned} \quad (8.77)$$

$$F_{r,ki} = V_i V_k (-|\tilde{y}_{ki}|) \cos(-\theta_{ki} - \delta_k + \delta_i) \quad (8.78)$$

and

$$F_{i,ki} = V_i V_k (-|\tilde{y}_{ki}|) \sin(-\theta_{ki} - \delta_k + \delta_i) \quad (8.79)$$

or for all buses connected to bus i ,

$$\Delta P_i = P_i + F_{r,i} = P_i + \sum_{j=1}^n y_{ij} V_j V_i \cos(-\theta_{ij} - \delta_j + \delta_i) \quad (8.80)$$

and

$$\Delta Q_i = Q_i + F_{i,i} = Q_i + \sum_{j=1}^n y_{ij} V_j V_i \sin(-\theta_{ij} - \delta_j + \delta_i) \quad (8.81)$$

where y_{ij} and θ_{ij} are the magnitude and the phase angle of the (i, j) th entry of the admittance matrix, respectively, and $V_j = |\tilde{V}_j|$ and δ_j are the voltage rms magnitude and phase angle at bus j .

The Jacobian matrix is defined as

$$\bar{J} = \begin{bmatrix} \frac{\partial \Delta P_2}{\partial \delta_2} & \frac{\partial \Delta P_2}{\partial V_2} & \cdots & \frac{\partial \Delta P_2}{\partial \delta_n} & \frac{\partial \Delta P_2}{\partial V_n} \\ \frac{\partial \Delta Q_2}{\partial \delta_2} & \frac{\partial \Delta Q_2}{\partial V_2} & \cdots & \frac{\partial \Delta Q_2}{\partial \delta_n} & \frac{\partial \Delta Q_2}{\partial V_n} \\ \vdots & \vdots & \ddots & \vdots & \vdots \\ \frac{\partial \Delta P_n}{\partial \delta_2} & \frac{\partial \Delta P_n}{\partial V_2} & \cdots & \frac{\partial \Delta P_n}{\partial \delta_n} & \frac{\partial \Delta P_n}{\partial V_n} \\ \frac{\partial \Delta Q_n}{\partial \delta_2} & \frac{\partial \Delta Q_n}{\partial V_2} & \cdots & \frac{\partial \Delta Q_n}{\partial \delta_n} & \frac{\partial \Delta Q_n}{\partial V_n} \end{bmatrix} \quad (8.82a)$$

where the entries of the Jacobian are

$$\frac{\partial \Delta P_i}{\partial \delta_i} = - \sum_{\substack{j=1 \\ j \neq i}}^n y_{ij} V_i V_j \sin(\delta_i - \delta_j - \theta_{ij}) \quad (8.82b)$$

$$\frac{\partial \Delta P_i}{\partial \delta_k} = y_{ik} V_i V_k \sin(\delta_i - \delta_k - \theta_{ik}) \quad k \neq i \quad (8.82c)$$

(Note that the negative sign cancels with negative sign due to derivative of $-\delta_k$).

$$\frac{\partial \Delta P_i}{\partial V_i} = \sum_{\substack{j=1 \\ j \neq i}}^n y_{ij} V_j \cos(\delta_i - \delta_j - \theta_{ij}) + 2V_i y_{ii} \cos(-\theta_{ii}) \quad (8.82d)$$

$$\frac{\partial \Delta P_i}{\partial V_k} = y_{ik} V_i \cos(\delta_i - \delta_k - \theta_{ik}) \quad k \neq i \quad (8.82e)$$

$$\frac{\partial \Delta Q_i}{\partial \delta_i} = \sum_{\substack{j=1 \\ j \neq i}}^n y_{ij} V_i V_j \cos(\delta_i - \delta_j - \theta_{ij}) \quad (8.82f)$$

$$\frac{\partial \Delta Q_i}{\partial \delta_k} = -y_{ik} V_i V_k \cos(\delta_i - \delta_k - \theta_{ik}) \quad k \neq i \quad (8.82g)$$

$$\frac{\partial \Delta Q_i}{\partial V_i} = \sum_{\substack{j=1 \\ j \neq i}}^n y_{ij} V_j \sin(\delta_i - \delta_j - \theta_{ij}) + 2V_i y_{ii} \sin(-\theta_{ii}) \quad (8.82h)$$

$$\frac{\partial \Delta Q_i}{\partial V_k} = y_{ik} V_i \sin(\delta_i - \delta_k - \theta_{ik}) \quad k \neq i \quad (8.82i)$$

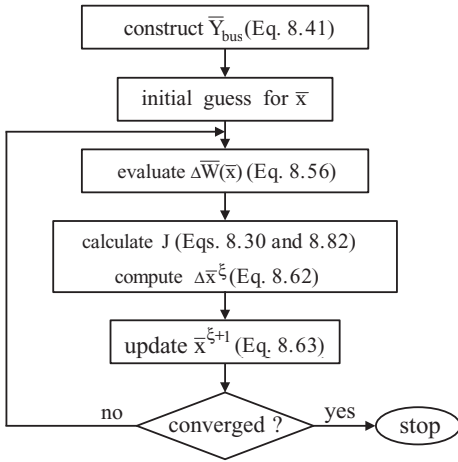


FIG. 8.10 Fundamental Newton-Raphson power flow algorithm.

8.3.4 Newton-Raphson power flow algorithm

Based on the equations given, the conventional fundamental power flow algorithm is the computation of the bus voltage vector for a given system configuration and linear loads. The Newton-Raphson approach (Eq. 8.64) will be used to force the mismatch power to zero (Eq. 8.57). The iterative solution procedure for the fundamental Newton-Raphson power flow algorithm is as follows (Fig. 8.10):

- **Step 1:** Construct the admittance matrix $\bar{Y}$ (Eq. 8.41).
- **Step 2:** Make an initial guess for $\bar{x}$ (e.g., 1.0 pu volts and zero radians for all bus voltages, Eq. 8.42).
- **Step 3:** Evaluate mismatch power, $(\Delta\bar{W}(\bar{x}), \text{Eq. 8.56})$. If it is small enough, then stop.
- **Step 4:** Establish Jacobian $\bar{J}$ (Eqs. 8.30 and 8.82) and calculate $\Delta\bar{x}^{\xi}$ (Eq. 8.62) using either matrix inversion (for problems with a few buses) or upper (lower) triangular factorization combined with backward/forward substitution.
- **Step 5:** Update the bus vector voltage (Eq. 8.63) and go to Step 3.

It is recommended to use upper (lower) triangular factorization combined with backward/forward substitutions rather than matrix inversion in computing the solution because an iterative method is used where the coefficient matrix is updated from iteration to iteration.

8.3.5 Application Example 8.8: Computation of fundamental admittance matrix

A simple (few buses) power system (Fig. E8.8.1) is used to illustrate in detail the Newton-Raphson load flow analysis. All impedances are in pu and the base apparent power is $S_{base} = 1 \text{ kVA}$. Compute the fundamental admittance matrix for this system.

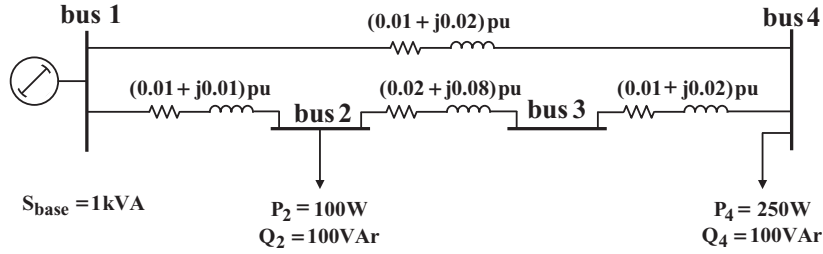


FIG. E8.8.1 Four-bus power systems with per unit (pu) line impedances.

Solution to Application Example 8.8: Computation of fundamental admittance matrix.

For this example $y_{14} = -\tilde{y}_{14}$, where $\tilde{y}_{14}$ is the admittance between bus 1 and bus 4 and y_{14} is an entry of the bus admittance matrix $\tilde{Y}_{bus}$. Note the minus sign.

$$y_{14} = -\tilde{y}_{14} = \frac{-1}{0.01 + j0.02} = \frac{-1}{0.02236 \angle 1.1071 \text{ rad}} = \frac{1 \angle \pm 3.1415 \text{ rad}}{0.02236 \angle 1.1071 \text{ rad}} = 44.72 \text{ pu} \angle 2.034 \text{ rad}$$

$$y_{12} = -\tilde{y}_{12} = \frac{-1}{0.01 + j0.01} = \frac{-1}{0.01414 \angle 0.7854 \text{ rad}} = \frac{1 \angle \pm 3.1415 \text{ rad}}{0.01414 \angle 0.7854 \text{ rad}} = 70.72 \text{ pu} \angle 2.356 \text{ rad}$$

$$\begin{aligned} y_{11} &= -\{\tilde{y}_{14} + \tilde{y}_{12}\} \\ &= -\{44.72 \cos(2.034) + 70.72 \cos(2.356) + j[44.72 \sin(2.034) + 70.72 \sin(2.356)]\} \\ &= -\{-19.98 - 49.997 + j[40.008 + 50.02]\} = (69.98 - j90.03) = 114.03 \text{ pu} \angle -0.910 \text{ rad} \end{aligned}$$

$$y_{13} = -\tilde{y}_{13} = 0 \text{ (because there is no direct line between buses 1 and 3),}$$

$$y_{23} = -\tilde{y}_{23} = \frac{-1}{0.02 + j0.08} = \frac{1 \angle \pm 3.1415 \text{ rad}}{0.082462 \angle 1.3258 \text{ rad}} = 12.127 \text{ pu} \angle 1.81 \text{ rad}$$

$$y_{24} = -\tilde{y}_{24} = 0$$

$$y_{34} = -\tilde{y}_{34} = \frac{-1}{0.01 + j0.02} = \frac{1 \angle \pm 3.1415 \text{ rad}}{0.02236 \angle 1.1071 \text{ rad}} = 44.72 \text{ pu} \angle 2.034 \text{ rad}$$

$$\begin{aligned} y_{22} &= -\{\tilde{y}_{12} + \tilde{y}_{23}\} \\ &= -\{70.72 \cos(2.356) + 12.127 \cos(1.816) + j[70.72 \sin(2.356) + 12.127 \sin(1.816)]\} \\ &= -\{-49.997 - 2.994 + j(50.102 + 11.764)\} = -\{-52.941 + j61.862\} \\ &= 52.941 - j61.862 = 81.42 \text{ pu} \angle -0.863 \text{ rad} \end{aligned}$$

$$\begin{aligned} y_{33} &= -\{\tilde{y}_{23} + \tilde{y}_{34}\} \\ &= -\{12.127 \cos(1.816) + 44.72 \cos(2.034) + j[12.127 \sin(1.816) + 44.72 \sin(2.034)]\} \\ &= -\{-2.944 - 19.982 + j(11.764 + 4.008)\} = -\{-22.93 + j51.772\} \\ &= 22.93 - j51.772 = 56.62 \text{ pu} \angle -1.154 \text{ rad} \end{aligned}$$

$$\begin{aligned}
y_{44} &= -\{\tilde{y}_{14} + \tilde{y}_{34}\} \\
&= -\{44.72 \cos(2.034) + 44.72 \cos(2.034) + j[44.72 \sin(2.034) + 44.72 \sin(2.034)]\} \\
&= -\{-19.982 - 19.982 + j(40.008 + 40.008)\} = -\{-39.964 + j80.016\} \\
&= 89.44 \text{ pu} \angle -1.107 \text{ rad}
\end{aligned}$$

The bus admittance matrix is now

$$\bar{Y}_{bus} = \begin{bmatrix} 114.03 \text{ pu} \angle -0.910 \text{ rad} & 70.72 \text{ pu} \angle 2.35 \text{ rad} & 0 & 44.72 \text{ pu} \angle 2.034 \text{ rad} \\ 70.72 \text{ pu} \angle 2.356 \text{ rad} & 81.42 \text{ pu} \angle -0.863 \text{ rad} & 12.127 \text{ pu} \angle 1.81 \text{ rad} & 0 \\ 0 & 12.12 \text{ pu} \angle 1.81 \text{ rad} & 56.62 \text{ pu} \angle -1.154 \text{ rad} & 44.72 \text{ pu} \angle 2.034 \text{ rad} \\ 44.72 \text{ pu} \angle 2.03 \text{ rad} & 0 & 44.72 \text{ pu} \angle 2.03 \text{ rad} & 89.44 \text{ pu} \angle -1.107 \text{ rad} \end{bmatrix}$$

Note that $\bar{Y}_{bus}$ is singular; that is, $(\bar{Y}_{bus})^{-1}$ cannot be found, because there is no admittance connected to the ground bus. This is unimportant for the Newton-Raphson approach because for forming of the Jacobian the entries of $\bar{Y}_{bus}$ are used and $\bar{Y}_{bus}$ is not inverted.

Comment about singularity

- Considering

$$[\bar{I}_{bus}] = [\bar{Y}_{bus}]^{-1} [\bar{V}_{bus}]$$

without any connection (admittance) from any bus to ground (Fig. 8.11), $[\bar{Y}_{bus}]^{-1}$ is singular. However, if $\bar{Y}_{bus}$ contains load information (admittance to ground), then it will not be singular.

- Considering

$$[\Delta \bar{x}] = [\bar{J}]^{-1} [\Delta \bar{W}]$$

if $[\bar{J}]$ contains load information (P_3, Q_3 , Fig. 8.12), then $[\bar{J}]$ is not singular.

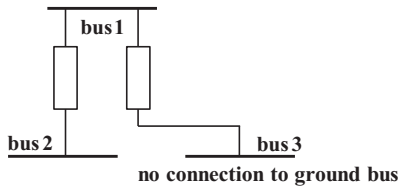


FIG. 8.11 No connection to ground results in singular admittance matrix.

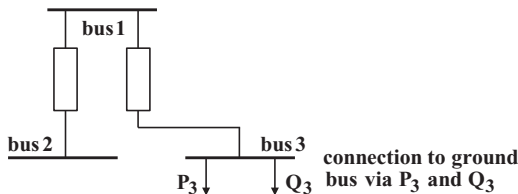


FIG. 8.12 PQ bus (bus 3) results in nonsingular Jacobian and load flow problem has a well-defined solution because the inverse of $\bar{J}$ exists, although $\bar{Y}_{bus}^{-1}$ is singular.

8.3.6 Application Example 8.9: Evaluation of fundamental mismatch vector

For the system of Fig. E8.8.1, assume bus 1 is the swing bus ($\delta_1 = 0$ and $|\tilde{V}_1| = 1.0$ pu). Then we can make an initial guess for bus voltage vector $\bar{x}^0 = (\delta_2, |\tilde{V}_2|, \delta_3, |\tilde{V}_3|, \delta_4, |\tilde{V}_4|)^t = (0, 1, 0, 1, 0, 1)^t$. Note, the superscript 0 means initial guess. Compute the mismatch power vector for this initial condition.

Solution to Application Example 8.9: Evaluation of fundamental mismatch vector.

$$\bar{x}^0 = (\delta_2, |\tilde{V}_2|, \delta_3, |\tilde{V}_3|, \delta_4, |\tilde{V}_4|)^t = (0, 1, 0, 1, 0, 1)^t$$

$$\Delta \bar{W}^0 = (P_2 + F_{r,2}, Q_2 + F_{i,2}, P_3 + F_{r,3}, Q_3 + F_{i,3}, P_4 + F_{r,4}, Q_4 + F_{i,4})^t$$

$$\begin{aligned} \Delta P_2 &= P_2 + F_{r,2} = P_2 + \sum_{j=1}^4 y_{2j} V_j V_2 \cos(-\theta_{2j} - \delta_j + \delta_2) \\ &= P_2 + y_{21} V_1 V_2 \cos(-\theta_{21} - \delta_1 + \delta_2) + y_{22} V_2 V_2 \cos(-\theta_{22} - \delta_2 + \delta_2) \\ &\quad + y_{23} V_3 V_2 \cos(-\theta_{23} - \delta_3 + \delta_2) + y_{24} V_4 V_2 \cos(-\theta_{24} - \delta_4 + \delta_2) \\ \Delta P_2 &= P_2 + F_{r,2} = 0.10 + \{70.72 \cdot 1 \cdot 1 \cdot \cos(-2.356 - 0 + 0) + 81.42 \cdot 1 \cdot 1 \cdot \\ &\quad \cos(0.863 - 0 + 0) + 12.127 \cdot 1 \cdot 1 \cdot \cos(-1.816 - 0 + 0) + 0\} \\ &= 0.10 - 49.996 + 52.936 - 2.942 = 0.0978 \end{aligned}$$

$$\begin{aligned} \Delta Q_2 &= Q_2 + F_{i,2} = Q_2 + \sum_{j=1}^4 y_{2j} V_j V_2 \sin(-\theta_{2j} - \delta_j + \delta_2) \\ &= Q_2 + y_{21} V_1 V_2 \sin(-\theta_{21} - \delta_1 + \delta_2) + y_{22} V_2 V_2 \sin(-\theta_{22} - \delta_2 + \delta_2) \\ &\quad + y_{23} V_3 V_2 \sin(-\theta_{23} - \delta_3 + \delta_2) + y_{24} V_4 V_2 \sin(-\theta_{24} - \delta_4 + \delta_2), \end{aligned}$$

$$\begin{aligned} \Delta Q_2 &= Q_2 + F_{i,2} \\ &= 0.10 + \{70.72 \cdot 1 \cdot 1 \cdot \sin(-2.356 - 0 + 0) + 81.42 \cdot 1 \cdot 1 \cdot \sin(0.863 - 0 + 0) \\ &\quad + 12.127 \cdot 1 \cdot 1 \cdot \sin(-1.816 - 0 + 0) + 0\} = 0.10 - 50.016 + 61.86 \\ &\quad - 11.57 = 0.374 \end{aligned}$$

$$\begin{aligned} \Delta P_3 &= P_3 + F_{r,3} \\ &= P_3 + y_{31} V_1 V_3 \cos(-\theta_{31} - \delta_1 + \delta_3) + y_{32} V_2 V_3 \cos(-\theta_{32} - \delta_2 + \delta_3) \\ &\quad + y_{33} V_3 V_3 \cos(-\theta_{33} - \delta_3 + \delta_3) + y_{34} V_4 V_3 \cos(-\theta_{34} - \delta_4 + \delta_3) \\ \Delta P_3 &= P_3 + F_{r,3} = 0.0 + 0.0 + \{12.127 \cdot 1 \cdot 1 \cdot \cos(-1.816 - 0 + 0) \\ &\quad + 56.62 \cdot 1 \cdot 1 \cdot \cos(1.154 - 0 + 0) + 44.72 \cdot 1 \cdot 1 \cdot \cos(-2.034 - 0 + 0)\} \\ &= 0.0 + 0.0 - 2.944 + 22.92 - 19.98 = -0.0056 \end{aligned}$$

$$\begin{aligned}\Delta Q_3 &= Q_3 + F_{i,3} \\ &= Q_3 + y_{31} V_1 V_3 \sin(-\theta_{31} - \delta_1 + \delta_3) + y_{32} V_2 V_3 \sin(-\theta_{32} - \delta_2 + \delta_3) \\ &\quad + y_{33} V_3 V_3 \sin(-\theta_{33} - \delta_3 + \delta_3) + y_{34} V_4 V_3 \sin(-\theta_{34} - \delta_4 + \delta_3)\end{aligned}$$

$$\begin{aligned}\Delta Q_3 &= Q_3 + F_{i,3} = 0.0 + 0.0 + \{12.127 \cdot 1 \cdot 1 \cdot \sin(-1.816 - 0 + 0) + 56.62 \cdot 1 \cdot 1 \cdot \sin(1.154 - 0 + 0) \\ &\quad + 44.72 \cdot 1 \cdot 1 \cdot \sin(-2.034 - 0 + 0)\} = 0.0 + 0.0 - 11.764 + 51.77 \\ &\quad - 40.008 = -0.00166\end{aligned}$$

$$\begin{aligned}\Delta P_4 &= P_4 + F_{r,4} \\ &= P_4 + y_{41} V_1 V_4 \cos(-\theta_{41} - \delta_1 + \delta_4) + y_{42} V_2 V_4 \cos(-\theta_{42} - \delta_2 + \delta_4) \\ &\quad + y_{43} V_3 V_4 \cos(-\theta_{43} - \delta_3 + \delta_4) + y_{44} V_4 V_4 \cos(-\theta_{44} - \delta_4 + \delta_4)\end{aligned}$$

$$\begin{aligned}\Delta P_4 &= P_4 + F_{r,4} \\ &= 0.25 + \{44.72 \cdot 1 \cdot 1 \cdot \cos(-2.034 - 0 + 0) + 0 + 44.72 \cdot 1 \cdot 1 \cdot \cos(-2.034 - 0 + 0) \\ &\quad + 89.44 \cdot 1 \cdot 1 \cdot \cos(1.1076 - 0 + 0)\} = 0.25 - 19.98 + 0 - 19.98 + 39.96 = 0.2527,\end{aligned}$$

$$\begin{aligned}\Delta Q_4 &= Q_4 + F_{i,4} \\ &= Q_4 + y_{41} V_1 V_4 \sin(-\theta_{41} - \delta_1 + \delta_4) + y_{42} V_2 V_4 \sin(-\theta_{42} - \delta_2 + \delta_4) \\ &\quad + y_{43} V_3 V_4 \sin(-\theta_{43} - \delta_3 + \delta_4) + y_{44} V_4 V_4 \sin(-\theta_{44} - \delta_4 + \delta_4)\end{aligned}$$

$$\begin{aligned}\Delta Q_4 &= Q_4 + F_{i,4} = 0.1 + \{44.72 \cdot 1 \cdot 1 \cdot \sin(-2.034 - 0 + 0) + 0 + 44.72 \cdot 1 \cdot 1 \cdot \sin(-2.034 - 0 + 0) \\ &\quad + 89.44 \cdot 1 \cdot 1 \cdot \sin(1.1076 - 0 + 0)\} = 0.1 - 40.0076 - 40.0076 + 80.016 \\ &= 0.1004\end{aligned}$$

The mismatch power vector is now

$$\Delta \bar{W}^0 = (0.0978, 0.374, -0.0056, -0.00166, 0.2527, 0.1004)^t$$

8.3.7 Application Example 8.10: Evaluation of fundamental Jacobian matrix

For the system of Fig. E8.8.1, compute the Jacobian matrix.

Solution to Application Example 8.10: Evaluation of fundamental Jacobian matrix.

$$\begin{aligned}J_{11} &= \frac{\partial \Delta P_2}{\partial \delta_2} = - \sum_{\substack{j=1 \\ \neq 2}}^4 y_{2j} V_2 V_j \sin(\delta_2 - \delta_j - \theta_{2j}) \\ &= -y_{21} V_2 V_1 \sin(\delta_2 - \delta_1 - \theta_{21}) - y_{23} V_2 V_3 \sin(\delta_2 - \delta_3 - \theta_{23}) - y_{24} V_2 V_4 \sin(\delta_2 - \delta_4 - \theta_{24}) \\ J_{11} &= \frac{\partial \Delta P_2}{\partial \delta_2} = -70.72 \cdot 1 \cdot 1 \cdot \sin(0 - 0 - 2.356) - 12.127 \cdot 1 \cdot 1 \cdot \sin(0 - 0 - 1.816) - 0 \\ &= 61.68\end{aligned}$$

$$\begin{aligned}
J_{12} &= \frac{\partial \Delta P_2}{\partial V_2} = \sum_{\substack{j=1 \\ \neq 2}}^4 y_{2j} V_j \cos(\delta_2 - \delta_j - \theta_{2j}) + 2y_{22} V_2 \cos(-\theta_{22}) \\
&= y_{21} V_1 \cos(\delta_2 - \delta_1 - \theta_{21}) + y_{23} V_3 \cos(\delta_2 - \delta_3 - \theta_{23}) + y_{24} V_4 \cos(\delta_2 - \delta_4 - \theta_{24}) \\
&\quad + 2V_2 y_{22} \cos(-\theta_{22})
\end{aligned}$$

$$\begin{aligned}
J_{12} &= \frac{\partial \Delta P_2}{\partial V_2} \\
&= 70.72 \cdot 1 \cdot \cos(0 - 0 - 2.356) + 12.127 \cdot 1 \cdot \cos(0 - 0 - 1.816) + 0 + 2 \cdot 1 \\
&\quad \cdot 81.42 \cos(0.863) = -49.996 - 2.944 + 0 + 105.872 = 52.932
\end{aligned}$$

$$J_{13} = \frac{\partial \Delta P_2}{\partial \delta_3} = y_{23} V_1 V_3 \sin(\delta_2 - \delta_3 - \theta_{23}) = 12.127 \cdot 1 \cdot 1 \cdot \sin(0 - 0 - 1.816) = -11.764$$

$$J_{14} = \frac{\partial \Delta P_2}{\partial V_3} = y_{23} V_2 \cos(\delta_2 - \delta_3 - \theta_{23}) = 12.127 \cdot 1 \cdot \cos(0 - 0 - 1.816) = -2.944$$

$$J_{15} = \frac{\partial \Delta P_2}{\partial \delta_4} = y_{24} V_1 V_5 \sin(\delta_2 - \delta_5 - \theta_{25}) = 0$$

$$J_{16} = \frac{\partial \Delta P_2}{\partial V_4} = y_{24} V_2 \cos(\delta_2 - \delta_4 - \theta_{24}) = 0$$

$$\begin{aligned}
J_{21} &= \frac{\partial \Delta Q_2}{\partial \delta_2} = \sum_{\substack{j=1 \\ \neq 2}}^4 y_{2j} V_2 V_j \cos(\delta_2 - \delta_j - \theta_{2j}) \\
&= y_{21} V_2 V_1 \cos(\delta_2 - \delta_1 - \theta_{21}) + y_{23} V_2 V_3 \cos(\delta_2 - \delta_3 - \theta_{23}) + y_{24} V_2 V_4 \cos(\delta_2 - \delta_4 - \theta_{24})
\end{aligned}$$

$$\begin{aligned}
J_{21} &= \frac{\partial \Delta Q_2}{\partial \delta_2} = 70.72 \cdot 1 \cdot 1 \cdot \cos(0 - 0 - 2.356) + 12.127 \cdot 1 \cdot 1 \cdot \cos(0 - 0 - 1.816) + 0 \\
&= -49.996 - 2.944 + 0 = -52.94
\end{aligned}$$

$$\begin{aligned}
J_{22} &= \frac{\partial \Delta Q_2}{\partial V_2} = \sum_{\substack{j=1 \\ \neq 2}}^4 y_{2j} V_j \sin(\delta_2 - \delta_j - \theta_{2j}) + 2V_2 y_{22} \sin(-\theta_{22}) \\
&= y_{21} V_1 \sin(\delta_2 - \delta_1 - \theta_{21}) + y_{23} V_3 \sin(\delta_2 - \delta_3 - \theta_{23}) + y_{24} V_4 \sin(\delta_2 - \delta_4 - \theta_{24}) \\
&\quad + 2V_2 y_{22} \sin(-\theta_{22})
\end{aligned}$$

$$\begin{aligned}
J_{22} &= \frac{\partial \Delta Q_2}{\partial V_2} = 70.72 \cdot 1 \cdot \sin(0 - 0 - 2.356) + 12.127 \cdot 1 \cdot \sin(0 - 0 - 1.816) \\
&\quad + 0 + 2 \cdot 1 \cdot 81.42 \sin(0.863) = -50.016 - 11.764 + 0 + 123.725 = 61.945
\end{aligned}$$

$$J_{23} = \frac{\partial \Delta Q_2}{\partial \delta_3} = -y_{23} V_2 V_3 \cos(\delta_2 - \delta_3 - \theta_{23}) = -12.127 \cdot 1 \cdot 1 \cdot \cos(0 - 0 - 1.816) = 2.944$$

$$J_{24} = \frac{\partial \Delta Q_2}{\partial V_3} = y_{23} V_2 \sin(\delta_2 - \delta_3 - \theta_{23}) = 12.127 \cdot 1 \cdot \sin(0 - 0 - 1.816) = -11.764$$

$$J_{25} = \frac{\partial \Delta Q_2}{\partial \delta_4} = -y_{24} V_2 V_4 \cos(\delta_2 - \delta_4 - \theta_{24}) = 0$$

$$J_{26} = \frac{\partial \Delta Q_2}{\partial V_4} = y_{24} V_2 \sin(\delta_2 - \delta_4 - \theta_{24}) = 0$$

$$J_{31} = \frac{\partial \Delta P_3}{\partial \delta_2} = y_{32} V_3 V_2 \sin(\delta_3 - \delta_2 - \theta_{32}) = 12.127 \cdot 1 \cdot 1 \cdot \sin(0 - 0 - 1.816) = -11.764$$

$$J_{32} = \frac{\partial \Delta P_3}{\partial V_2} = y_{32} V_3 \cos(\delta_3 - \delta_2 - \theta_{32}) = 12.127 \cdot 1 \cdot \cos(0 - 0 - 1.816) = -2.944$$

$$J_{33} = \frac{\partial \Delta P_3}{\partial \delta_3} = - \sum_{\substack{j=1 \\ \neq 3}}^4 y_{3j} V_3 V_j \sin(\delta_3 - \delta_j - \theta_{3j})$$

$$\begin{aligned} J_{33} &= \frac{\partial \Delta P_3}{\partial \delta_3} = -y_{31} V_3 V_1 \sin(\delta_3 - \delta_1 - \theta_{31}) - y_{32} V_3 V_2 \sin(\delta_3 - \delta_2 - \theta_{32}) \\ &\quad - y_{34} V_3 V_4 \sin(\delta_3 - \delta_4 - \theta_{34}) = 0 - 12.127 \cdot 1 \cdot 1 \cdot \sin(0 - 0 - 1.816) \\ &\quad - 44.72 \cdot 1 \cdot 1 \cdot \sin(0 - 0 - 2.034) = 51.772 \end{aligned}$$

$$\begin{aligned} J_{34} &= \frac{\partial \Delta P_3}{\partial V_3} = \sum_{\substack{j=1 \\ \neq 3}}^4 y_{3j} V_j \cos(\delta_3 - \delta_j - \theta_{3j}) + 2V_3 y_{33} \cos(-\theta_{33}) = y_{31} V_1 \cos(\delta_3 - \delta_1 - \theta_{31}) \\ &\quad + y_{32} V_2 \cos(\delta_3 - \delta_2 - \theta_{32}) + y_{34} V_4 \cos(\delta_3 - \delta_4 - \theta_{34}) + 2V_3 y_{33} \cos(-\theta_{33}) \\ &= 0 + 12.127 \cdot 1 \cdot \cos(0 - 0 - 1.816) + 44.72 \cdot 1 \cdot \cos(0 - 0 - 2.034) \\ &\quad + 2 \cdot 1 \cdot 56.62 \cos(1.154) = 0 - 2.944 - 19.982 + 45.843 = 22.917 \end{aligned}$$

$$J_{35} = \frac{\partial \Delta P_3}{\partial \delta_4} = y_{34} V_3 V_4 \sin(\delta_3 - \delta_4 - \theta_{34}) = 44.72 \cdot 1 \cdot 1 \cdot \sin(0 - 0 - 2.034) = -40.0076$$

$$J_{36} = \frac{\partial \Delta P_3}{\partial V_4} = y_{34} V_3 \cos(\delta_3 - \delta_4 - \theta_{34}) = 44.72 \cdot 1 \cdot \cos(0 - 0 - 2.034) = -19.98$$

$$J_{41} = \frac{\partial \Delta Q_3}{\partial \delta_2} = -y_{32} V_3 V_2 \cos(\delta_3 - \delta_2 - \theta_{32}) = -12.127 \cdot 1 \cdot 1 \cdot \cos(0 - 0 - 1.816) = 2.944$$

$$J_{42} = \frac{\partial \Delta Q_3}{\partial V_2} = y_{32} V_3 \sin(\delta_3 - \delta_2 - \theta_{32}) = 12.127 \cdot 1 \cdot \sin(0 - 0 - 1.816) = -11.764$$

$$J_{43} = \frac{\partial \Delta Q_3}{\partial \delta_3} = \sum_{\substack{j=1 \\ \neq 3}}^4 y_{3j} V_3 V_j \cos(\delta_3 - \delta_j - \theta_{3j})$$

$$J_{43} = \frac{\partial \Delta Q_3}{\partial \delta_3} = y_{31} V_3 V_1 \cos(\delta_3 - \delta_1 - \theta_{31}) + y_{32} V_3 V_2 \cos(\delta_3 - \delta_2 - \theta_{32}) + y_{34} V_3 V_4 \cos(\delta_3 - \delta_4 - \theta_{34})$$

$$J_{43} = \frac{\partial \Delta Q_3}{\partial \delta_3} = 0 + 12.127 \cdot 1 \cdot 1 \cdot \cos(0 - 0 - 1.816) + 44.72 \cdot 1 \cdot 1 \cdot \cos(0 - 0 - 2.034) = -2.944 - 19.982 = -22.926$$

$$J_{44} = \frac{\partial \Delta Q_3}{\partial V_3} = \sum_{\substack{j=1 \\ \neq 3}}^4 y_{3j} V_j \sin(\delta_3 - \delta_j - \theta_{3j}) + 2V_3 y_{33} \sin(-\theta_{33})$$

$$= y_{31} V_1 \sin(\delta_3 - \delta_1 - \theta_{31}) + y_{32} V_2 \sin(\delta_3 - \delta_2 - \theta_{32}) + y_{34} V_4 \sin(\delta_3 - \delta_4 - \theta_{34}) + 2V_3 y_{33} \sin(-\theta_{33})$$

$$J_{44} = \frac{\partial \Delta Q_3}{\partial V_3} = 0 + 12.127 \cdot 1 \cdot \sin(0 - 0 - 1.816) + 44.72 \cdot 1 \cdot \sin(0 - 0 - 2.034) + 2 \cdot 1 \cdot 56.62 \sin(1.154) = -11.764 - 40.0076 + 103.545 = 51.773$$

$$J_{45} = \frac{\partial \Delta Q_3}{\partial \delta_4} = -y_{34} V_3 V_4 \cos(\delta_3 - \delta_4 - \theta_{34}) = -44.72 \cdot 1 \cdot 1 \cdot \cos(0 - 0 - 2.034) = 19.982$$

$$J_{46} = \frac{\partial \Delta Q_3}{\partial V_4} = y_{34} V_3 \sin(\delta_3 - \delta_4 - \theta_{34}) = 44.72 \cdot 1 \cdot \sin(0 - 0 - 2.034) = -40.0076$$

$$J_{51} = \frac{\partial \Delta P_4}{\partial \delta_2} = y_{42} V_4 V_2 \sin(\delta_4 - \delta_2 - \theta_{42}) = 0$$

$$J_{52} = \frac{\partial \Delta P_4}{\partial V_2} = y_{42} V_4 \cos(\delta_4 - \delta_2 - \theta_{42}) = 0$$

$$J_{53} = \frac{\partial \Delta P_4}{\partial \delta_3} = y_{43} V_4 V_3 \sin(\delta_4 - \delta_3 - \theta_{43}) = 44.72 \cdot 1 \cdot 1 \cdot \sin(0 - 0 - 2.034) = -40.0076$$

$$J_{54} = \frac{\partial \Delta P_4}{\partial V_3} = y_{43} V_4 \cos(\delta_4 - \delta_3 - \theta_{43}) = 44.72 \cdot 1 \cdot \cos(0 - 0 - 2.034) = -19.982$$

$$J_{55} = \frac{\partial \Delta P_4}{\partial \delta_4} = - \sum_{\substack{j=1 \\ \neq 4}}^4 y_{4j} V_4 V_j \sin(\delta_4 - \delta_j - \theta_{4j})$$

$$= -y_{41} V_4 V_1 \sin(\delta_4 - \delta_1 - \theta_{41}) - y_{42} V_4 V_2 \sin(\delta_4 - \delta_2 - \theta_{42}) - y_{43} V_4 V_3 \sin(\delta_4 - \delta_3 - \theta_{43})$$

$$J_{55} = \frac{\partial \Delta P_4}{\partial \delta_4} = -44.72 \cdot 1 \cdot 1 \cdot \sin(0 - 0 - 2.034) - 0 - 44.72 \cdot 1 \cdot 1 \cdot \sin(0 - 0 - 2.034) \\ = 40.0076 - 0 + 40.0076 = 80.015$$

$$J_{56} = \frac{\partial \Delta P_4}{\partial V_4} = \sum_{\substack{j=1 \\ \neq 4}}^4 y_{4j} V_j \cos(\delta_4 - \delta_j - \theta_{4j}) + 2V_4 y_{44} \cos(-\theta_{44}) \\ = y_{41} V_1 \cos(\delta_4 - \delta_1 - \theta_{41}) + y_{42} V_2 \cos(\delta_4 - \delta_2 - \theta_{42}) + y_{43} V_3 \cos(\delta_4 - \delta_3 - \theta_{43}) \\ + 2V_4 y_{44} \cos(-\theta_{44})$$

$$J_{56} = \frac{\partial \Delta P_4}{\partial V_4} = 44.72 \cdot 1 \cdot \cos(0 - 0 - 2.034) + 0 + 44.72 \cdot 1 \cdot \cos(0 - 0 - 2.034) \\ + 2 \cdot 1 \cdot 89.44 \cos(1.1076) = -19.982 - 19.982 + 79.925 = 39.961$$

$$J_{61} = \frac{\partial \Delta Q_4}{\partial \delta_2} = -y_{42} V_4 V_2 \cos(\delta_4 - \delta_2 - \delta_{42}) = 0$$

$$J_{62} = \frac{\partial \Delta Q_4}{\partial V_2} = y_{42} V_4 \sin(\delta_4 - \delta_2 - \delta_{42}) = 0$$

$$J_{63} = \frac{\partial \Delta Q_4}{\partial \delta_3} = -y_{43} V_4 V_3 \cos(\delta_4 - \delta_3 - \delta_{43}) = -44.72 \cdot 1 \cdot 1 \cdot \cos(0 - 0 - 2.034) = 19.982$$

$$J_{64} = \frac{\partial \Delta Q_4}{\partial V_3} = y_{43} V_4 \sin(\delta_4 - \delta_3 - \delta_{43}) = 44.72 \cdot 1 \cdot \sin(0 - 0 - 2.034) = -40.0076$$

$$J_{65} = \frac{\partial \Delta Q_4}{\partial \delta_4} = \sum_{\substack{j=1 \\ \neq 4}}^4 y_{4j} V_4 V_j \cos(\delta_4 - \delta_j - \theta_{4j}) \\ = y_{41} V_4 V_1 \cos(\delta_4 - \delta_1 - \theta_{41}) + y_{42} V_4 V_2 \cos(\delta_4 - \delta_2 - \theta_{42}) + y_{43} V_4 V_3 \cos(\delta_4 - \delta_3 - \theta_{43}),$$

$$J_{65} = \frac{\partial \Delta Q_4}{\partial \delta_4} = 44.72 \cdot 1 \cdot 1 \cdot \cos(0 - 0 - 2.034) + 0 + 44.72 \cdot 1 \cdot 1 \cdot \cos(0 - 0 - 2.034) \\ = -19.982 - 19.982 = -39.963$$

$$J_{66} = \frac{\partial \Delta Q_4}{\partial V_4} = \sum_{\substack{j=1 \\ \neq 4}}^4 y_{4j} V_j \sin(\delta_4 - \delta_j - \theta_{4j}) + 2V_4 y_{44} \sin(-\theta_{44}) \\ = y_{41} V_1 \sin(\delta_4 - \delta_1 - \theta_{41}) + y_{42} V_2 \sin(\delta_4 - \delta_2 - \theta_{42}) + y_{43} V_3 \sin(\delta_4 - \delta_3 - \theta_{43}) \\ + V_4 y_{44} \sin(-\theta_{44})$$

$$J_{66} = \frac{\partial \Delta Q_4}{\partial V_4} = 44.72 \cdot 1 \cdot \sin(0 - 0 - 2.034) + 0 + 44.72 \cdot 1 \cdot \sin(0 - 0 - 2.034) \\ + 2 \cdot 1 \cdot 89.44 \sin(1.1076) = -40.0076 - 40.0076 + 160.031 = 80$$

The Jacobian matrix is

$$(\bar{J}) = \begin{bmatrix} J_{11} & J_{12} & J_{13} & J_{14} & J_{15} & J_{16} \\ J_{21} & J_{22} & J_{23} & J_{24} & J_{25} & J_{26} \\ J_{31} & J_{32} & J_{33} & J_{34} & J_{35} & J_{36} \\ J_{41} & J_{42} & J_{43} & J_{44} & J_{45} & J_{46} \\ J_{51} & J_{52} & J_{53} & J_{54} & J_{55} & J_{56} \\ J_{61} & J_{62} & J_{63} & J_{64} & J_{65} & J_{66} \end{bmatrix}$$

$$(\bar{J}^0) = \begin{bmatrix} 61.68 & 52.932 & -11.764 & -2.944 & 0 & 0 \\ -52.94 & 61.945 & 2.944 & -11.764 & 0 & 0 \\ -11.764 & -2.944 & 51.772 & 22.917 & -40.0076 & -19.98 \\ 2.944 & -11.764 & -22.926 & 51.773 & 19.982 & -40.0076 \\ 0 & 0 & -40.0076 & -19.982 & 80.015 & 39.961 \\ 0 & 0 & 19.982 & -40.0076 & -39.963 & 80 \end{bmatrix}$$

8.3.8 Application Example 8.11: Calculation of the inverse of Jacobian matrix

Compute the inverse of the Jacobian matrix (evaluated in Application Example 8.10) using the adjoint and determinant.

Solution to Application Example 8.11: Calculation of the inverse of Jacobian matrix.

Calculation of the inverse of $(\bar{J}^0)$, that is $(\bar{J}^0)^{-1}$.

$$(\bar{J}^0)^{-1} = \frac{Adj(\bar{J}^0)}{det(\bar{J}^0)}$$

where $Adj(\bar{J}^0)$ is the adjoint of matrix $(\bar{J}^0)$ and $det(\bar{J}^0) = |(\bar{J}^0)|$ is the determinant of $\bar{J}^0$.

The adjoint of $\bar{J}^0$ is obtained by first taking the transpose of $\bar{J}^0$, that is, $(\bar{J}^0)^t$, and then replacing each element in the transpose with its cofactor:

$$\left[(\bar{J}^0)^t \right]_{ij} = \left[(\bar{J}^0) \right]_{ji}$$

The transpose of $\bar{J}^0$ is

$$(\bar{J}^0)^t = \begin{bmatrix} J_{11} & J_{21} & J_{31} & J_{41} & J_{51} & J_{61} \\ J_{12} & J_{22} & J_{32} & J_{42} & J_{52} & J_{62} \\ J_{13} & J_{23} & J_{33} & J_{43} & J_{53} & J_{63} \\ J_{14} & J_{24} & J_{34} & J_{44} & J_{54} & J_{64} \\ J_{15} & J_{25} & J_{35} & J_{45} & J_{55} & J_{65} \\ J_{16} & J_{26} & J_{36} & J_{46} & J_{56} & J_{66} \end{bmatrix}$$

$$(\bar{J}^0)^t = \begin{bmatrix} 61.68 & -52.94 & -11.764 & 2.944 & 0 & 0 \\ 52.932 & 61.945 & -2.944 & -11.764 & 0 & 0 \\ -11.764 & 2.944 & 51.772 & -22.926 & -40.0076 & -19.982 \\ -2.944 & -11.764 & 22.917 & 51.773 & -19.982 & -40.0076 \\ 0 & 0 & -40.0076 & 19.982 & 80.015 & -39.963 \\ 0 & 0 & -19.98 & -40.0076 & 39.961 & 80 \end{bmatrix}$$

$$Adj(\bar{J}^0) = \begin{bmatrix} +Adj(\bar{J}^0)_{11} - Adj(\bar{J}^0)_{12} + Adj(\bar{J}^0)_{13} - Adj(\bar{J}^0)_{14} + Adj(\bar{J}^0)_{15} - Adj(\bar{J}^0)_{16} \\ -Adj(\bar{J}^0)_{21} + Adj(\bar{J}^0)_{22} - Adj(\bar{J}^0)_{23} + Adj(\bar{J}^0)_{24} - Adj(\bar{J}^0)_{25} + Adj(\bar{J}^0)_{26} \\ +Adj(\bar{J}^0)_{31} - Adj(\bar{J}^0)_{32} + Adj(\bar{J}^0)_{33} - Adj(\bar{J}^0)_{34} + Adj(\bar{J}^0)_{35} - Adj(\bar{J}^0)_{36} \\ -Adj(\bar{J}^0)_{41} + Adj(\bar{J}^0)_{42} - Adj(\bar{J}^0)_{43} + Adj(\bar{J}^0)_{44} - Adj(\bar{J}^0)_{45} + Adj(\bar{J}^0)_{46} \\ +Adj(\bar{J}^0)_{51} - Adj(\bar{J}^0)_{52} + Adj(\bar{J}^0)_{53} - Adj(\bar{J}^0)_{54} + Adj(\bar{J}^0)_{55} - Adj(\bar{J}^0)_{56} \\ -Adj(\bar{J}^0)_{61} + Adj(\bar{J}^0)_{62} - Adj(\bar{J}^0)_{63} + Adj(\bar{J}^0)_{64} - Adj(\bar{J}^0)_{65} + Adj(\bar{J}^0)_{66} \end{bmatrix}$$

or

$$Adj(\bar{J}^0)_{11} = \begin{bmatrix} J_{22} & J_{32} & J_{42} & J_{52} & J_{62} \\ J_{23} & J_{33} & J_{43} & J_{53} & J_{63} \\ J_{24} & J_{34} & J_{44} & J_{54} & J_{64} \\ J_{25} & J_{35} & J_{45} & J_{55} & J_{65} \\ J_{26} & J_{36} & J_{46} & J_{56} & J_{66} \end{bmatrix}, \quad Adj(\bar{J}^0)_{12} = \begin{bmatrix} J_{12} & J_{32} & J_{42} & J_{52} & J_{62} \\ J_{13} & J_{33} & J_{43} & J_{53} & J_{63} \\ J_{14} & J_{34} & J_{44} & J_{54} & J_{64} \\ J_{15} & J_{35} & J_{45} & J_{55} & J_{65} \\ J_{16} & J_{36} & J_{46} & J_{56} & J_{66} \end{bmatrix}$$

$$Adj(\bar{J}^0)_{13} = \begin{bmatrix} J_{12} & J_{22} & J_{42} & J_{52} & J_{62} \\ J_{13} & J_{23} & J_{43} & J_{53} & J_{63} \\ J_{14} & J_{24} & J_{44} & J_{54} & J_{64} \\ J_{15} & J_{25} & J_{45} & J_{55} & J_{65} \\ J_{16} & J_{26} & J_{46} & J_{56} & J_{66} \end{bmatrix}, \quad Adj(\bar{J}^0)_{14} = \begin{bmatrix} J_{12} & J_{22} & J_{32} & J_{52} & J_{62} \\ J_{13} & J_{23} & J_{33} & J_{53} & J_{63} \\ J_{14} & J_{24} & J_{34} & J_{54} & J_{64} \\ J_{15} & J_{25} & J_{35} & J_{55} & J_{65} \\ J_{16} & J_{26} & J_{36} & J_{56} & J_{66} \end{bmatrix}$$

$$Adj(\bar{J}^0)_{15} = \begin{bmatrix} J_{12} & J_{22} & J_{32} & J_{42} & J_{62} \\ J_{13} & J_{23} & J_{33} & J_{43} & J_{63} \\ J_{14} & J_{24} & J_{34} & J_{44} & J_{64} \\ J_{15} & J_{25} & J_{35} & J_{45} & J_{65} \\ J_{16} & J_{26} & J_{36} & J_{46} & J_{66} \end{bmatrix}, \quad Adj(\bar{J}^0)_{16} = \begin{bmatrix} J_{12} & J_{22} & J_{32} & J_{42} & J_{52} \\ J_{13} & J_{23} & J_{33} & J_{43} & J_{53} \\ J_{14} & J_{24} & J_{34} & J_{44} & J_{54} \\ J_{15} & J_{25} & J_{35} & J_{45} & J_{55} \\ J_{16} & J_{26} & J_{36} & J_{46} & J_{56} \end{bmatrix}$$

$$Adj(\bar{J}^0)_{21} = \begin{bmatrix} J_{21} & J_{31} & J_{41} & J_{51} & J_{61} \\ J_{23} & J_{33} & J_{43} & J_{53} & J_{63} \\ J_{24} & J_{34} & J_{44} & J_{54} & J_{64} \\ J_{25} & J_{35} & J_{45} & J_{55} & J_{65} \\ J_{26} & J_{36} & J_{46} & J_{56} & J_{66} \end{bmatrix}, \quad Adj(\bar{J}^0)_{22} = \begin{bmatrix} J_{11} & J_{31} & J_{41} & J_{51} & J_{61} \\ J_{13} & J_{33} & J_{43} & J_{53} & J_{63} \\ J_{14} & J_{34} & J_{44} & J_{54} & J_{64} \\ J_{15} & J_{35} & J_{45} & J_{55} & J_{65} \\ J_{16} & J_{36} & J_{46} & J_{56} & J_{66} \end{bmatrix}$$

$$\begin{aligned}
Adj(\bar{J}^0)_{23} &= \begin{bmatrix} J_{11} & J_{21} & J_{41} & J_{51} & J_{61} \\ J_{13} & J_{23} & J_{43} & J_{53} & J_{63} \\ J_{14} & J_{24} & J_{44} & J_{54} & J_{64} \\ J_{15} & J_{25} & J_{45} & J_{55} & J_{65} \\ J_{16} & J_{26} & J_{46} & J_{56} & J_{66} \end{bmatrix}, \quad Adj(\bar{J}^0)_{24} = \begin{bmatrix} J_{11} & J_{21} & J_{31} & J_{51} & J_{61} \\ J_{13} & J_{23} & J_{33} & J_{53} & J_{63} \\ J_{14} & J_{24} & J_{34} & J_{54} & J_{64} \\ J_{15} & J_{25} & J_{35} & J_{55} & J_{65} \\ J_{16} & J_{26} & J_{36} & J_{56} & J_{66} \end{bmatrix} \\
Adj(\bar{J}^0)_{25} &= \begin{bmatrix} J_{11} & J_{21} & J_{31} & J_{41} & J_{61} \\ J_{13} & J_{23} & J_{33} & J_{43} & J_{63} \\ J_{14} & J_{24} & J_{34} & J_{44} & J_{64} \\ J_{15} & J_{25} & J_{35} & J_{45} & J_{65} \\ J_{16} & J_{26} & J_{36} & J_{46} & J_{66} \end{bmatrix}, \quad Adj(\bar{J}^0)_{26} = \begin{bmatrix} J_{11} & J_{21} & J_{31} & J_{41} & J_{51} \\ J_{13} & J_{23} & J_{33} & J_{43} & J_{53} \\ J_{14} & J_{24} & J_{34} & J_{44} & J_{54} \\ J_{15} & J_{25} & J_{35} & J_{45} & J_{55} \\ J_{16} & J_{26} & J_{36} & J_{46} & J_{56} \end{bmatrix} \\
Adj(\bar{J}^0)_{31} &= \begin{bmatrix} J_{21} & J_{31} & J_{41} & J_{51} & J_{61} \\ J_{22} & J_{32} & J_{42} & J_{52} & J_{62} \\ J_{24} & J_{34} & J_{44} & J_{54} & J_{64} \\ J_{25} & J_{35} & J_{45} & J_{55} & J_{65} \\ J_{26} & J_{36} & J_{46} & J_{56} & J_{66} \end{bmatrix}, \quad Adj(\bar{J}^0)_{41} = \begin{bmatrix} J_{21} & J_{31} & J_{41} & J_{51} & J_{61} \\ J_{22} & J_{32} & J_{42} & J_{52} & J_{62} \\ J_{23} & J_{33} & J_{43} & J_{53} & J_{63} \\ J_{25} & J_{35} & J_{45} & J_{55} & J_{56} \\ J_{26} & J_{36} & J_{46} & J_{56} & J_{66} \end{bmatrix} \\
Adj(\bar{J}^0)_{51} &= \begin{bmatrix} J_{21} & J_{31} & J_{41} & J_{51} & J_{61} \\ J_{22} & J_{32} & J_{42} & J_{52} & J_{62} \\ J_{23} & J_{33} & J_{43} & J_{53} & J_{63} \\ J_{24} & J_{34} & J_{44} & J_{54} & J_{64} \\ J_{26} & J_{36} & J_{46} & J_{56} & J_{66} \end{bmatrix}, \quad Adj(\bar{J}^0)_{61} = \begin{bmatrix} J_{21} & J_{31} & J_{41} & J_{51} & J_{61} \\ J_{22} & J_{32} & J_{42} & J_{52} & J_{62} \\ J_{23} & J_{33} & J_{43} & J_{53} & J_{63} \\ J_{24} & J_{34} & J_{44} & J_{54} & J_{64} \\ J_{25} & J_{35} & J_{45} & J_{56} & J_{66} \end{bmatrix}
\end{aligned}$$

As an example, the calculation of the first entry of the adjoint $Adj(\bar{J}^0)_{11}$ will be outlined:

$$Adj(\bar{J}^0)_{11} = \begin{bmatrix} J_{22} & J_{32} & J_{42} & J_{52} & J_{62} \\ J_{23} & J_{33} & J_{43} & J_{53} & J_{63} \\ J_{24} & J_{34} & J_{44} & J_{54} & J_{64} \\ J_{25} & J_{35} & J_{45} & J_{55} & J_{65} \\ J_{26} & J_{36} & J_{46} & J_{56} & J_{66} \end{bmatrix} = \begin{bmatrix} 61.945 & -2.944 & -11.764 & 0 & 0 \\ 2.944 & 51.772 & -22.926 & -40.0076 & 19.982 \\ -11.764 & 22.917 & 51.773 & -19.982 & -40.0076 \\ 0 & -40.0076 & 19.982 & 80.015 & -39.963 \\ 0 & -19.98 & -40.0076 & 39.961 & 80.0 \end{bmatrix}$$

or the matrix $Adj(\bar{J}^0)_{11}$ is in form of a table.

61.945	-2.944	-11.764	0	0
2.944	51.772	-22.926	-40.0076	19.982
-11.764	22.917	51.773	-19.982	-40.0076
0	-40.0076	19.982	80.015	-39.963
0	-19.98	-40.0076	39.961	80.0

$$\begin{aligned}
Adj(\bar{J}^0)_{11} &= 61.945 \begin{bmatrix} 51.772 & -22.926 & -40.0076 & 19.982 \\ 22.917 & 51.772 & -19.982 & -40.0076 \\ -40.0076 & 19.982 & 80.015 & -39.963 \\ -19.98 & -40.0076 & 39.961 & 80 \end{bmatrix} \\
&+ 2.944 \begin{bmatrix} 2.944 & -22.917 & -40.0076 & 19.982 \\ -11.764 & 51.773 & -19.982 & -40.0076 \\ 0 & 19.982 & 80.015 & -39.963 \\ 0 & -40.0076 & 39.961 & 80 \end{bmatrix} \\
&- 11.764 \begin{bmatrix} 2.944 & 51.772 & -40.0076 & 19.982 \\ -11.764 & 22.917 & -19.982 & -40.0076 \\ 0 & -40.0076 & 80.015 & -39.963 \\ 0 & -19.982 & 39.961 & 80 \end{bmatrix}
\end{aligned}$$

The determinant is

$$\begin{aligned}
\det(\bar{J}) &= J_{11} \begin{vmatrix} J_{22} & J_{23} & J_{24} & J_{25} & J_{26} \\ J_{32} & J_{33} & J_{34} & J_{35} & J_{36} \\ J_{42} & J_{43} & J_{44} & J_{45} & J_{46} \\ J_{52} & J_{53} & J_{54} & J_{55} & J_{56} \\ J_{62} & J_{63} & J_{64} & J_{65} & J_{66} \end{vmatrix} - J_{12} \begin{vmatrix} J_{21} & J_{23} & J_{24} & J_{25} & J_{26} \\ J_{31} & J_{33} & J_{34} & J_{35} & J_{36} \\ J_{41} & J_{43} & J_{44} & J_{45} & J_{46} \\ J_{51} & J_{53} & J_{54} & J_{55} & J_{56} \\ J_{61} & J_{63} & J_{64} & J_{65} & J_{66} \end{vmatrix} \\
&+ J_{13} \begin{vmatrix} J_{21} & J_{22} & J_{24} & J_{25} & J_{26} \\ J_{31} & J_{32} & J_{34} & J_{35} & J_{36} \\ J_{41} & J_{42} & J_{44} & J_{45} & J_{46} \\ J_{51} & J_{52} & J_{54} & J_{55} & J_{56} \\ J_{61} & J_{62} & J_{64} & J_{65} & J_{66} \end{vmatrix} - J_{14} \begin{vmatrix} J_{21} & J_{22} & J_{23} & J_{25} & J_{26} \\ J_{31} & J_{32} & J_{33} & J_{35} & J_{36} \\ J_{41} & J_{42} & J_{43} & J_{45} & J_{46} \\ J_{51} & J_{52} & J_{53} & J_{55} & J_{56} \\ J_{61} & J_{62} & J_{63} & J_{65} & J_{66} \end{vmatrix} \\
&+ J_{15} \begin{vmatrix} J_{21} & J_{22} & J_{23} & J_{24} & J_{26} \\ J_{31} & J_{32} & J_{33} & J_{34} & J_{36} \\ J_{41} & J_{42} & J_{43} & J_{44} & J_{46} \\ J_{51} & J_{52} & J_{53} & J_{54} & J_{56} \\ J_{61} & J_{62} & J_{63} & J_{64} & J_{66} \end{vmatrix} - J_{16} \begin{vmatrix} J_{21} & J_{22} & J_{23} & J_{24} & J_{25} \\ J_{31} & J_{32} & J_{33} & J_{34} & J_{35} \\ J_{41} & J_{42} & J_{43} & J_{44} & J_{45} \\ J_{51} & J_{52} & J_{53} & J_{54} & J_{55} \\ J_{61} & J_{62} & J_{63} & J_{64} & J_{65} \end{vmatrix}
\end{aligned}$$

The $(J_{11}^0)^{-1}$ entry is now $(J_{11}^0)^{-1} = \frac{Adj(\bar{J}^0)}{\det(\bar{J}^0)}$.

8.3.9 Application Example 8.12: Inversion of a 3×3 matrix

In order to demonstrate the entire procedure for the computation of the inverse of a matrix the following 3×3 matrix will be used

$$\bar{A} = \begin{bmatrix} 1 & 3 & -1 \\ 2 & -4 & 2 \\ 3 & 1 & 1 \end{bmatrix}$$

Solution to Application Example 8.12: Inversion of a 3×3 matrix.

Transpose of $\bar{A}$

$$\bar{A}^t = \begin{bmatrix} 1 & 2 & 3 \\ 3 & -4 & 1 \\ -1 & 2 & 1 \end{bmatrix}$$

The cofactors of $\bar{A}^t$ are

$$A_{11}^t = (-1)^{(1+1)} \begin{vmatrix} -4 & 1 \\ 2 & 1 \end{vmatrix} = (-4 - 2) = -6$$

$$A_{12}^t = (-1)^{(1+2)} \begin{vmatrix} 3 & 1 \\ -1 & 1 \end{vmatrix} = -(3 + 1) = -4$$

$$A_{13}^t = (-1)^{(1+3)} \begin{vmatrix} 3 & -4 \\ -1 & 2 \end{vmatrix} = (6 - 4) = 2$$

$$A_{21}^t = (-1)^{(2+1)} \begin{vmatrix} 2 & 3 \\ 2 & 1 \end{vmatrix} = (-2 + 6) = 4$$

$$A_{22}^t = (-1)^{(2+2)} \begin{vmatrix} 1 & 3 \\ -1 & 1 \end{vmatrix} = (1 + 3) = 4$$

$$A_{23}^t = (-1)^{(2+3)} \begin{vmatrix} 1 & 2 \\ -1 & 2 \end{vmatrix} = -(2 + 2) = -4$$

$$A_{31}^t = (-1)^{(3+1)} \begin{vmatrix} 2 & 3 \\ -4 & 1 \end{vmatrix} = (2 + 12) = 14$$

$$A_{32}^t = (-1)^{(3+2)} \begin{vmatrix} 1 & 3 \\ 3 & 1 \end{vmatrix} = -(1 - 9) = 8$$

$$A_{33}^t = (-1)^{(3+3)} \begin{vmatrix} 1 & 2 \\ 3 & -4 \end{vmatrix} = (-4 - 6) = -10$$

The determinant $\det(\bar{A}) = |\bar{A}|$ is

$$|\bar{A}| = 1 \cdot \begin{vmatrix} -4 & 2 \\ 1 & 1 \end{vmatrix} - 3 \begin{vmatrix} 2 & 2 \\ 3 & 1 \end{vmatrix} - 1 \begin{vmatrix} 2 & -4 \\ 3 & 1 \end{vmatrix} = -4 - 2 - 6 + 18 - 2 - 12 = -26 + 18 = -8$$

The inverse of $\bar{A}$ is now

$$(\bar{A})^{-1} = \frac{Adj(\bar{A})}{|\bar{A}|} = -\frac{1}{8} \begin{bmatrix} -6 & -4 & 2 \\ 4 & 4 & -4 \\ 14 & 8 & -10 \end{bmatrix}$$

8.3.10 Application Example 8.13: Computation of the correction voltage vector

For the system of Fig. E8.8.1, compute the correction voltage vector $\Delta\bar{x}^0$, updating the mismatch power vector, and check the convergence of the load flow algorithm (using a convergence tolerance of 0.0001).

Solution to Application Example 8.13: Computation of the correction voltage vector.

Based on the results of Application Examples 8.9 to 8.11, the correction voltage vector $\Delta\bar{x}^0$ can be computed from

$$\Delta\bar{x}^0 = (\bar{J}^0)^{-1} \Delta\bar{W}(\bar{x}^0) = (2.68E-4, 2.3E-3, 2.79E-3, 3.57E-3, 3.39E-3, 4.03E-3)^t$$

The updated mismatch power vector is

$$\Delta\bar{W}^1 = (1.41E-4, 3.01E-4, -9.63E-6, 7.62E-5, 1.20E-3, 5.96E-4)^t$$

Since the components of $\Delta\bar{W}^1$ are larger than the specified convergence tolerance (e.g., 0.0001), the Newton-Raphson solution has not converged. However, it will converge in two iterations:

Fundamental power flow iteration summary for Fig. E8.8.1:

Number of iterations	Absolute real power mismatch			Absolute reactive power mismatch		
	Average (%)	Worst (%)	Worst bus	Average (%)	Worst (%)	Worst bus
0	11.67	25	4	6.67	10.00	4
1	0.05	0.12	4	0.03	0.06	4
2	0.00	0.00	4	0.00	0.00	4

Fundamental power flow output solution (Fig. E8.8.1), where δ angles are rounded (approximate) values:

From bus	Bus voltage		Bus generation (G) and load (L) powers				To bus	Line power ^a	
	$ \tilde{V} $ (%)	δ (°)	P_G (%)	Q_G (%)	P_L (%)	Q_L (%)		P_{line} (%)	Q_{line} (%)
1	100	0.00	35.09	20.15	0.00	0.00	2	13.35	10.69
							4	21.73	9.47
2	99.76	−0.02	0.00	0.00	10.00	10.00	1	−13.32	−10.66
							3	3.32	0.66
3	99.64	−0.16	0.00	0.00	0.00	0.00	2	−3.32	−0.65
							4	3.32	0.65
4	99.59	−0.20	0.00	0.00	25.00	10.00	3	−3.32	−0.65
							1	−21.68	−9.35

^a Active and reactive powers in the line between “from bus” and “to bus.”

8.4 Newton-based harmonic power flow

Classifications of solution approaches for the harmonic power (load) flow problem are summarized at the end of this chapter. In this section, the Newton-based HPF [6] is selected, analyzed, and thoroughly illustrated. There are two main reasons for this selection:

- The Newton-based HPF is relatively easy to understand and to implement since it is an extension of the conventional fundamental Newton-Raphson formulation; it is based on similar terminologies and equations. It is capable of including any type of nonlinear load assuming its $v-i$ characteristic is available in the frequency (or time) domain.
- It was the first proposed approach for power system modeling with nonlinear loads and harmonic couplings [6].

Among the limitations of the Newton-based HPF in its present form is the assumption of balanced network and load conditions.

8.4.1 Harmonic bus admittance matrix and power definitions

For nonsinusoidal operating conditions power system matrices will be defined at harmonic frequencies. These matrices include the harmonic bus admittance matrix $\bar{Y}_{bus}^{(h)}$ the harmonic bus impedance matrix $\bar{Z}_{bus}^{(h)} = 1/\bar{Y}_{bus}^{(h)}$, and the harmonic Jacobian $\bar{J}^{(h)}$ matrix.

The harmonic bus admittance matrix $\bar{Y}_{bus}^{(h)}$ is identical to the fundamental bus admittance matrix $\bar{Y}_{bus}^{(h)} = \bar{Y}_{bus}$ with the difference that line admittances are evaluated at the h th harmonic frequency $f_h = h \cdot f_1$:

$$\bar{Y}_{bus}^{(h)} = \begin{bmatrix} y_{11}^{(h)} & y_{12}^{(h)} & \cdots & y_{1n}^{(h)} \\ y_{21}^{(h)} & y_{22}^{(h)} & \cdots & y_{2n}^{(h)} \\ \vdots & \vdots & \ddots & \vdots \\ y_{n1}^{(h)} & y_{n2}^{(h)} & \cdots & y_{nn}^{(h)} \end{bmatrix} \quad (8.83)$$

where $\omega_h = 2\pi h f_1 = h \cdot 377 \text{ rad/s}$.

Power definitions at harmonic frequencies

Consider a voltage $v(t)$ and a current $i(t)$ expressed in terms of their rms harmonic components

$$v(t) = V_0 + \sum_{h=1}^{\infty} \sqrt{2} V_h \sin(h\omega_1 t + \theta_h^v) \quad (8.84)$$

$$i(t) = I_0 + \sum_{h=1}^{\infty} \sqrt{2} I_h \sin(h\omega_1 t + \theta_h^i) \quad (8.85)$$

Then

- the active (real, average) power is given by

$$P = V_0 I_0 + \sum_{h=1}^{\infty} V_h I_h \cos(\theta_h^v - \theta_h^i) \quad (8.86)$$

- the reactive power is given by

$$Q = \sum_{h=1}^{\infty} V_h I_h \sin(\theta_h^v - \theta_h^i) \quad (8.87)$$

- and the apparent (voltampere) power is

$$S = \sqrt{\left(\sum_{h=0}^{\infty} I_h^2 \right) \left(\sum_{h=0}^{\infty} V_h^2 \right)} \quad (8.88)$$

In case of sinusoidal $v(t)$ and $i(t)$ ($h=1$ only), we have

$$S^2 = P^2 + Q^2 \quad (8.89)$$

For nonsinusoidal cases that relation does not hold and must be replaced by

$$D = \sqrt{S^2 - P^2 - Q^2} \quad (8.90)$$

where D is called the distortion power. Other definitions have also been proposed for harmonic powers, which are not discussed here.

Classification of time harmonics

Time harmonics can be classified into three types (Table 8.2):

- positively rotating harmonics (+),
- negatively rotating harmonics (−), and
- zero-sequence harmonics (0).

Triplen (multiples of three) harmonics ($3h$, for $h = 1, 2, 3, \dots$) in a balanced three-phase system are predominantly of the zero-sequence type. With a few exceptions (discussed in preceding chapters), zero-sequence currents cannot flow from the network into a delta or an ungrounded wye-connected device (e.g., transformer), and therefore, triplen harmonics are excluded from this analysis.

8.4.2 Modeling of nonlinear and linear loads at harmonic frequencies

Before proceeding with the reformulation of the Newton-Raphson load flow to include harmonic frequencies, it is necessary to properly model linear and nonlinear loads at fundamental and harmonic frequencies.

Harmonic modeling of nonlinear loads

The ($v-i$) relationship of nonlinear loads (such as line-commutated converters) will be modeled as coupled harmonic current sources. The injected harmonic currents of a nonlinear load ($I_{injected}^{(h)}$) at bus m will be a function of its fundamental and harmonic voltages:

TABLE 8.2 Classification of time harmonics.

Positive (+) sequence	Negative (−) sequence	Zero (0) sequence
1	2	3
4	5	6
7	8	9
10	11	12
13	14	15
16	17	18
19	20	21
...	...	...

$$\begin{cases} \text{Real}(I_{\text{injected}}^{(h)}) = g_{r,m}^{(h)} \left(\tilde{V}_m^{(1)}, \tilde{V}_m^{(5)}, \tilde{V}_m^{(7)}, \dots, \tilde{V}_m^{(L)}, \alpha_m, \beta_m \right) \\ \text{Imag}(I_{\text{injected}}^{(h)}) = g_{i,m}^{(h)} \left(\tilde{V}_m^{(1)}, \tilde{V}_m^{(5)}, \tilde{V}_m^{(7)}, \dots, \tilde{V}_m^{(L)}, \alpha_m, \beta_m \right) \end{cases} \quad (8.91)$$

where α_m and β_m are the nonlinear load control parameters and L is the maximum harmonic order considered $L = h_{\max}$. The currents of Eq. (8.91) are referred to the nonlinear bus m to which the nonlinear load is connected. The nonlinearity of $\tilde{g}_m^{(h)} = g_{r,m}^{(h)} + jg_{i,m}^{(h)}$ is due to strong couplings between harmonic currents and voltages dictated by the nonlinear load. In some cases (e.g., decoupled HPF formulation), it is convenient to ignore harmonic couplings $\tilde{g}_m^{(h)}(\tilde{V}_m^{(h)}, \alpha_m, \beta_m)$ and simplify the problem.

As an example, for a full-wave bridge rectifier connected to bus m (shown in Fig. 8.13), α_m is the firing angle of semiconductor-controlled rectifiers (SCRs), and β_m is either the commutating impedance (inductance) or the DC voltage (E). Note that the equivalent circuit models a three-phase full-wave rectifier/inverter with a general load, where L_{com} is the commutating inductance, that is, the leakage inductance of the transformer, and

- for a passive load, only resistance R and filter inductance F are considered,
- for a DC motor drive, only R and E are considered ($E > 0$) when motoring, and
- for inverter operation with a DC generator, only R and E are considered ($E < 0$).

Modeling linear loads at harmonic frequencies

For the formulation of HPF, equivalent circuits of linear loads are required. At the fundamental frequency, linear loads are modeled as conventional PQ and PV buses. However, shunt admittances are used to model them at harmonic frequencies [7,8]. The admittance of a linear load connected to bus k at the h th harmonic is

$$\tilde{y}_k^{(h)} = \frac{(P_k^{(1)} - jQ_k^{(1)})/h}{|\tilde{V}_k^{(1)}|^2} \quad (8.92)$$

where j represents the operator $\sqrt{-1}$.

Capacitor banks are modeled as a fixed shunt reactance. Transformers are approximated by linear leakage inductances, and their nonlinearities and losses due to eddy currents, hysteresis, and saturation are neglected.

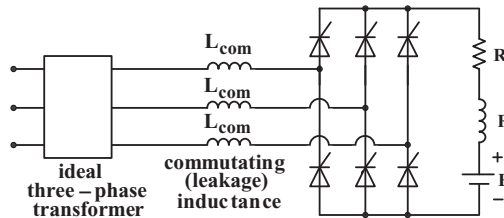


FIG. 8.13 Line-commutated converter with general load.

8.4.3 The harmonic power flow algorithm (assembly of equations)

Power system components, loads, and generators that produce time harmonics in an otherwise harmonic-free network are termed nonlinear. Other buses such as the standard PQ and PV buses with no converter or other nonlinear devices connected are termed linear. Consider

- Bus 1 to be the conventional swing (slack) bus with specified values for voltage magnitude $|\tilde{V}_1|$ and phase angle δ_1 .
- Buses 2 through $(m - 1)$ to be the conventional linear PQ (or PV) buses. As with the conventional power flow problem, active $P_i^{(1)}$ and reactive $Q_i^{(1)}$ powers are assumed to be known at these linear buses.
- Buses m through n to be nonlinear buses. At these buses, the fundamental real power $P_i^{(1)}$ and the total apparent power $S_{i,total}$ (or the total reactive power $Q_{i,total}$) are specified.

Network voltages and currents are represented by Fourier series components, and the bus voltage vector $\bar{x}$ of the fundamental power flow (Eq. 8.42) is redefined as

$$\bar{U} = \left[\delta_2^{(1)}, |\tilde{V}_2^{(1)}|, \dots, \delta_n^{(1)}, |\tilde{V}_n^{(1)}|, \delta_1^{(5)}, |\tilde{V}_1^{(5)}|, \dots, \delta_n^{(5)}, |\tilde{V}_n^{(5)}|, \dots, \delta_1^{(L)}, |\tilde{V}_1^{(L)}|, \dots, \delta_n^{(L)}, |\tilde{V}_n^{(L)}|, \alpha_m, \beta_m, \dots, \alpha_n, \beta_n \right]^t = \left[\bar{V}^{(1)}, \bar{V}^{(5)}, \dots, \bar{V}^{(L)}, \bar{\Phi} \right]^t \quad (8.93)$$

where (superscripts and subscripts denote harmonic orders and bus numbers, respectively).

Fundamental voltages are

$$\bar{V}^{(1)} = \delta_2^{(1)}, |\tilde{V}_2^{(1)}|, \dots, \delta_n^{(1)}, |\tilde{V}_n^{(1)}| \quad (8.94a)$$

Fifth harmonic voltages are

$$\bar{V}^{(5)} = \delta_1^{(5)}, |\tilde{V}_1^{(5)}|, \dots, \delta_n^{(5)}, |\tilde{V}_n^{(5)}| \quad (8.94c)$$

L^{th} harmonic voltages are

$$\bar{V}^{(L)} = \delta_1^{(L)}, |\tilde{V}_1^{(L)}|, \dots, \delta_n^{(L)}, |\tilde{V}_n^{(L)}| \quad (8.94c)$$

Nonlinear device variables vector is

$$\bar{\Phi} = \alpha_m, \beta_m, \dots, \alpha_n, \beta_n \quad (8.95)$$

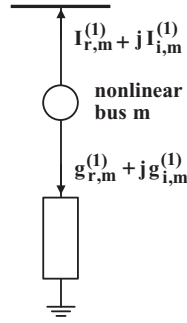


FIG. 8.14 Application of current balance ($I_{r,m}^{(1)} + jI_{i,m}^{(1)} + g_{r,m}^{(1)} + jg_{i,m}^{(1)} = 0$) at a nonlinear bus.

Harmonic bus voltage magnitudes, phase angles, and the nonlinear device parameters (α_m, β_m) are unknowns; therefore, the conventional formulation (forcing the fundamental mismatch powers to zero) is not sufficient to solve the HPF problem. Three additional relations are used:

- KCL for the fundamental frequency (fundamental current balance) at nonlinear buses.
- KCL for each harmonic (harmonic current balance) at all buses.
- Conservation of apparent voltamperes (apparent power or voltampere balance) at nonlinear buses.

Note that KCL for the fundamental frequency is not applied to linear buses since active and reactive power (mismatch power) balance has already been applied at these buses.

Current balance for fundamental frequency

The current balance is written for fundamental frequency ($h=1$) at the nonlinear buses as indicated in Fig. 8.14, where the nonlinear currents $g_{r,m}^{(1)}, g_{i,m}^{(1)}$ are referred to bus m. Therefore, one obtains for the nonlinear buses (from bus m to bus n) for the fundamental current balance:

$$\begin{bmatrix} I_{r,m}^{(1)} \\ I_{i,m}^{(1)} \\ \vdots \\ \vdots \\ I_{r,n}^{(1)} \\ I_{i,n}^{(1)} \end{bmatrix} = \begin{bmatrix} g_{r,m}^{(1)} \left(\tilde{V}_m^{(1)}, \tilde{V}_m^{(5)}, \dots, \tilde{V}_m^{(L)}, \alpha_m, \beta_m \right) \\ g_{i,m}^{(1)} \left(\tilde{V}_m^{(1)}, \tilde{V}_m^{(5)}, \dots, \tilde{V}_m^{(L)}, \alpha_m, \beta_m \right) \\ \vdots \\ \vdots \\ g_{r,n}^{(1)} \left(\tilde{V}_n^{(1)}, \tilde{V}_n^{(5)}, \dots, \tilde{V}_n^{(L)}, \alpha_n, \beta_n \right) \\ g_{i,n}^{(1)} \left(\tilde{V}_n^{(1)}, \tilde{V}_n^{(5)}, \dots, \tilde{V}_n^{(L)}, \alpha_n, \beta_n \right) \end{bmatrix} \quad (8.96)$$

where $I_{r,m}^{(1)}$ and $I_{i,m}^{(1)}$ are the fundamental real and reactive line currents at the mth nonlinear bus, respectively, and $g_{r,m}^{(1)}$ and $g_{i,m}^{(1)}$ are the fundamental real and reactive injected load currents at the same bus. Note that the line and injected load currents are positive if they leave the bus.

Current balance at harmonic frequencies

For all (linear and nonlinear) buses one can write

$$\begin{bmatrix} I_{r,1}^{(h)} \\ I_{i,1}^{(h)} \\ \vdots \\ \vdots \\ I_{r,m-1}^{(h)} \\ I_{i,m-1}^{(h)} \\ \text{---} \\ I_{r,m}^{(h)} \\ I_{i,m}^{(h)} \\ \vdots \\ \vdots \\ \vdots \\ I_{r,n}^{(h)} \\ I_{i,n}^{(h)} \end{bmatrix} = \begin{bmatrix} 0 \\ \vdots \\ \vdots \\ \vdots \\ (swing\ bus\ and\ linear\ buses) \\ \vdots \\ \vdots \\ \vdots \\ \text{---} \\ g_{r,m}^{(1)} \left(\tilde{V}_m^{(1)}, \tilde{V}_m^{(5)}, \dots, \tilde{V}_m^{(L)}, \alpha_m, \beta_m \right) \\ g_{i,m}^{(1)} \left(\tilde{V}_m^{(1)}, \tilde{V}_m^{(5)}, \dots, \tilde{V}_m^{(L)}, \alpha_m, \beta_m \right) \\ \vdots \\ (nonlinear\ buses) \\ \vdots \\ g_{r,n}^{(1)} \left(\tilde{V}_n^{(1)}, \tilde{V}_n^{(5)}, \dots, \tilde{V}_n^{(L)}, \alpha_n, \beta_n \right) \\ g_{i,n}^{(1)} \left(\tilde{V}_n^{(1)}, \tilde{V}_n^{(5)}, \dots, \tilde{V}_n^{(L)}, \alpha_n, \beta_n \right) \end{bmatrix}. \quad (8.97)$$

The line currents $I_{r,m}^{(h)}$ and $I_{i,m}^{(h)}$ will be computed in the next section.

Apparent power or voltampere balance

The third type of relation is the apparent power (voltampere) balance at each nonlinear bus j :

$$S_j^2 = \left(P_j^t\right)^2 + \left(Q_j^t\right)^2 + D_j^2 \quad (8.98)$$

where $j = m, \dots, n$ and

$$\left(P_j^t\right)^2 = \left(\sum_h^{h_{\max}} P_j^{(h)}\right)^2 = \left\{ \left(V_j^{(1)} I_j^{(1)} \cos \theta_j^{(1)}\right) + \left(V_j^{(5)} I_j^{(5)} \cos \theta_j^{(5)}\right) + \left(V_j^{(7)} I_j^{(7)} \cos \theta_j^{(7)}\right) + \dots \right\}^2 \quad (8.99a)$$

$$\left(Q_j^t\right)^2 = \left(\sum_h^{h_{\max}} Q_j^{(h)}\right)^2 = \left\{ \left(V_j^{(1)} I_j^{(1)} \sin \theta_j^{(1)}\right) + \left(V_j^{(5)} I_j^{(5)} \sin \theta_j^{(5)}\right) + \left(V_j^{(7)} I_j^{(7)} \sin \theta_j^{(7)}\right) + \dots \right\}^2 \quad (8.99b)$$

are the total (fundamental plus harmonics) real and reactive load powers at nonlinear buses. D_m to D_n can be computed from $g_{r,m}, g_{i,m}, \dots, g_{r,n}, g_{i,n}$; therefore, distortion powers are not independent variables. Eq. (8.98) is used to update (between iterations) the nonlinear-device injected powers P and Q at the nonlinear buses.

The number of unknowns for the n buses are as follows (K = number of harmonics considered not including fundamental, e.g., for $h = 1, 5, 7, 11$ we get $K = 3$):

• Fundamental bus voltage magnitudes and phases for all buses but the swing bus	$2(n - 1)$
• Fundamental real and reactive powers at the swing bus (losses P_1, Q_1)	2
• Harmonic (not including fundamental) voltage magnitudes and phases at all (total) n buses	$2nK$
• Total reactive powers Q_j^t at each nonlinear bus, where n is the number of all buses and $(m - 1)$ the number of linear buses	$n - (m - 1) = (n - m + 1)$
• Two variables (α_j, β_j) associated with each nonlinear bus	$2(n - m + 1)$
• Total number of unknowns	$2n(K + 1) + 3(n - m + 1)$

The number of available equations are as follows:

• Fundamental real and reactive power balance at all $(m - 1)$ linear buses but the swing bus	$2(m - 2)$
• Fundamental voltage magnitude and phase at the swing bus ($ \tilde{V}_1 = 1$ pu, $\delta_1 = 0$ rad)	2
• Fundamental real and imaginary current balance at $n - (m - 1)$ nonlinear buses (at $(m - 1)$ linear buses the $P_i^{(1)}$ and $Q_i^{(1)}$ are specified)	$2(n - (m - 1)) = 2(n - m + 1)$
• Harmonic real and reactive current (except the fundamental) balance at all n buses	$2nK$
• Apparent voltampere balance at $n - (m - 1)$ nonlinear buses to compute reactive power (if reactive power is specified at nonlinear buses, however, this apparent voltampere balance is not required at nonlinear buses)	$(n - m + 1)$
• Total number of equations	$2n(K + 1) + (n - m + 1)$

There remain $2(n - m + 1)$ equations to be defined. These can be the total real and reactive mismatch powers at the $n - (m - 1)$ nonlinear buses:

$$\Delta P_j^{nonlinear} = P_j^t + \sum_h^{h_{\max}} F_{r,j}^{(h)} \quad (8.100a)$$

$$\Delta Q_j^{nonlinear} = Q_j^t + \sum_h^{h_{\max}} F_{i,j}^{(h)} \quad (8.100b)$$

where $j = m, \dots, n$ and P_j^t and Q_j^t are the total (fundamental and harmonics) nonlinear load real and reactive powers at bus j , respectively. $\sum_h^{h_{\max}} F_{r,j}^{(h)}$ and $\sum_h^{h_{\max}} F_{i,j}^{(h)}$ (for $h = 1, 5, 7, \dots, L$) are the total real and reactive line powers, respectively. Note that the formulas for $F_{r,j}^{(h)}$ and $F_{i,j}^{(h)}$ are identical to those for $F_{r,j}$ and $F_{i,j}$ of the fundamental power flow problem with the difference that $\bar{Y}_{bus}^{(h)}$ and the h th harmonic voltages must be used. The application of the newly defined mismatch powers at the nonlinear buses results in $2(n - m + 1)$ additional equations, and the number of equations is identical to the number of unknowns.

8.4.4 Formulation of Newton-Raphson approach for harmonic power flow

The mismatch vector (consisting of mismatch power and mismatch currents) for HPF is defined as

$$\Delta \bar{M} = [\Delta \bar{W}, \Delta \bar{I}^{(5)}, \dots, \Delta \bar{I}^{(L)}, \Delta \bar{I}^{(1)}]^t \quad (8.101)$$

where $\Delta \bar{W}$ is the mismatch power vector (Eq. 8.56) and $(\Delta \bar{I}^{(5)}, \dots, \Delta \bar{I}^{(L)}, \Delta \bar{I}^{(1)})$ is the mismatch current vector for the harmonics including the fundamental.

In Eq. (8.101),

$$\Delta \bar{W} = [P_2^{(1)} + F_{r,2}^{(1)}, Q_2^{(1)} + F_{i,2}^{(1)}, \dots, P_{m-1}^{(1)} + F_{r,m-1}^{(1)}, Q_{m-1}^{(1)} + F_{i,m-1}^{(1)}, \Delta P_m^{nonlinear}, \Delta Q_m^{nonlinear}, \dots, \Delta P_n^{nonlinear}, \Delta Q_n^{nonlinear}]^t \quad (8.102)$$

where $P_2^{(1)} + F_{r,2}^{(1)}, Q_2^{(1)} + F_{i,2}^{(1)}, \dots, P_{m-1}^{(1)} + F_{r,m-1}^{(1)}, Q_{m-1}^{(1)} + F_{i,m-1}^{(1)}$ applies to linear buses, and $\Delta P_m^{nonlinear}, \Delta Q_m^{nonlinear}, \dots, \Delta P_n^{nonlinear}, \Delta Q_n^{nonlinear}$ applies to nonlinear buses. $P_j^{(1)}$ and $Q_j^{(1)}$ are the real and reactive fundamental load powers for the linear bus j (as defined by the fundamental load flow analysis), respectively; $F_{r,j}^{(1)}$ and $F_{i,j}^{(1)}$ are the (line) fundamental real and reactive powers at the linear bus j (see fundamental load flow analysis), respectively.

The fundamental current mismatch is defined for nonlinear buses where all currents (e.g., line currents and nonlinear load currents) are referred to the swing bus:

$$\Delta \bar{I}^{(1)} = [I_{r,m}^{(1)} + G_{r,m}^{(1)}, I_{i,m}^{(1)} + G_{i,m}^{(1)}, \dots, I_{r,n}^{(1)} + G_{r,n}^{(1)}, I_{i,n}^{(1)} + G_{i,n}^{(1)}]^t \quad (8.103)$$

and the harmonic current mismatch is defined for linear and nonlinear buses including swing bus:

$$\Delta \bar{I}^{(h)} = \left[I_{r,1}^{(h)}, I_{i,1}^{(h)}, \dots, I_{r,m-1}^{(h)}, I_{i,m-1}^{(h)}, I_{r,m}^{(h)} + G_{r,m}^{(h)}, I_{i,m}^{(h)} + G_{i,m}^{(h)}, \dots, I_{r,n}^{(h)} + G_{r,n}^{(h)}, I_{i,n}^{(h)} + G_{i,n}^{(h)} \right]^t \quad (8.104)$$

where the nonlinear load current components $G_{r,m}^{(h)}$ and $G_{i,m}^{(h)}$ are given (referred to swing bus) and the line current components $I_{r,m}^{(h)}$ and $I_{i,m}^{(h)}$ will be generated in the next section. The Newton-Raphson method is implemented by forcing the appropriate mismatches, $\Delta \bar{M}$, to zero using the Jacobian matrix $\bar{J}$ and obtaining appropriate correction terms $\Delta \bar{U}^{(\xi)} = \bar{U}^{(\xi)} - \bar{U}^{(\xi+1)}$, where ξ represents the iteration number:

$$\Delta \bar{M} = \bar{J} \Delta \bar{U}^{(\xi)} \quad (8.105)$$

The Jacobian $\bar{J}$ is a $2(nK + n - 1) + 2(n - m + 1)$ by $2(nK + n - 1) + 2(n - m + 1)$ matrix, where n is the total number of buses, $(m - 1)$ is the number of linear buses including the swing bus, and K is the number of harmonics considered, excluding the fundamental ($h = 1$):

$$\Delta \bar{M} = \begin{bmatrix} \Delta \bar{W} \\ \Delta \bar{I}^{(5)} \\ \Delta \bar{I}^{(7)} \\ \Delta \bar{I}^{(11)} \\ \cdot \\ \cdot \\ \cdot \\ \Delta \bar{I}^{(L)} \\ \Delta \bar{I}^{(1)} \end{bmatrix} = \begin{bmatrix} \bar{J}^{(1)} & \bar{J}^{(5)} & \dots & \bar{J}^{(L)} & 0 \\ \overline{YG}^{(5,1)} & \overline{YG}^{(5,5)} & \dots & \overline{YG}^{(5,L)} & \bar{H}^{(5)} \\ \overline{YG}^{(7,1)} & \overline{YG}^{(7,5)} & \dots & \overline{YG}^{(7,L)} & \bar{H}^{(7)} \\ \overline{YG}^{(11,1)} & \overline{YG}^{(11,5)} & \dots & \overline{YG}^{(11,L)} & \bar{H}^{(11)} \\ \cdot & \cdot & \dots & \cdot & \cdot \\ \cdot & \cdot & \dots & \cdot & \cdot \\ \cdot & \cdot & \dots & \cdot & \cdot \\ \overline{YG}^{(L,1)} & \overline{YG}^{(L,5)} & \dots & \overline{YG}^{(L,L)} & \bar{H}^{(L)} \\ \overline{YG}^{(1,1)} & \overline{YG}^{(1,5)} & \dots & \overline{YG}^{(1,L)} & \bar{H}^{(1)} \end{bmatrix} \begin{bmatrix} \Delta \bar{V}^{(1)} \\ \Delta \bar{V}^{(5)} \\ \Delta \bar{V}^{(7)} \\ \Delta \bar{V}^{(11)} \\ \cdot \\ \cdot \\ \cdot \\ \Delta \bar{V}^{(L)} \\ \Delta \bar{\Phi} \end{bmatrix}. \quad (8.106)$$

Solving the equation for the correction vector yields with the inverse matrix

$$\Delta \bar{U} = \begin{bmatrix} \Delta \bar{V}^{(1)} \\ \Delta \bar{V}^{(5)} \\ \Delta \bar{V}^{(7)} \\ \Delta \bar{V}^{(11)} \\ \cdot \\ \cdot \\ \cdot \\ \Delta \bar{V}^{(L)} \\ \Delta \bar{\Phi} \end{bmatrix} = \begin{bmatrix} \bar{J}^{(1)} & \bar{J}^{(5)} & \dots & \bar{J}^{(L)} & 0 \\ \overline{YG}^{(5,1)} & \overline{YG}^{(5,5)} & \dots & \overline{YG}^{(5,L)} & \bar{H}^{(5)} \\ \overline{YG}^{(7,1)} & \overline{YG}^{(7,5)} & \dots & \overline{YG}^{(7,L)} & \bar{H}^{(7)} \\ \overline{YG}^{(11,1)} & \overline{YG}^{(11,5)} & \dots & \overline{YG}^{(11,L)} & \bar{H}^{(11)} \\ \cdot & \cdot & \dots & \cdot & \cdot \\ \cdot & \cdot & \dots & \cdot & \cdot \\ \cdot & \cdot & \dots & \cdot & \cdot \\ \overline{YG}^{(L,1)} & \overline{YG}^{(L,5)} & \dots & \overline{YG}^{(L,L)} & \bar{H}^{(L)} \\ \overline{YG}^{(1,1)} & \overline{YG}^{(1,5)} & \dots & \overline{YG}^{(1,L)} & \bar{H}^{(1)} \end{bmatrix}^{-1} \begin{bmatrix} \Delta \bar{W} \\ \Delta \bar{I}^{(5)} \\ \Delta \bar{I}^{(7)} \\ \Delta \bar{I}^{(11)} \\ \cdot \\ \cdot \\ \cdot \\ \Delta \bar{I}^{(L)} \\ \Delta \bar{I}^{(1)} \end{bmatrix}, \quad (8.107)$$

where all elements in this matrix equation are subvectors and submatrices partitioned from $\Delta\bar{M}$, $\bar{J}$, and $\Delta\bar{U}^{(\xi)}$.

The subvectors are

- $(\Delta\bar{V}^{(1)}, \Delta\bar{V}^{(5)}, \Delta\bar{V}^{(7)}, \Delta\bar{V}^{(11)}, \dots, \Delta\bar{\Phi})^t$ = correction vector,
- $\Delta\bar{W}$ = mismatch power vector at all buses except the swing bus,
- $\Delta\bar{I}^{(1)}$ = fundamental mismatch current vector at nonlinear buses, and
- $\Delta\bar{I}^{(h)}$ = h th harmonic mismatch current vector at all buses.

The submatrices are

- $\bar{J}^{(1)}$ = Jacobian $2(n-1)$ square matrix corresponding to Jacobian of fundamental power flow written for all buses except the swing bus, and
- $\bar{J}^{(h)}$ = Jacobian of harmonic $h \neq 1$ with dimensions $2(n-1) \times 2n$, whereby there are zero entries for $(m-1)$ linear buses:

$$\bar{J}^{(h)} = \begin{bmatrix} 0 \\ \bar{\theta}_{2(m-2) \times 2n} \\ 0 \\ \text{(zero entries for linear buses)} \\ 0 \\ \text{-----} \\ \text{partial derivatives of the } h^{\text{th}} \text{ harmonic} \\ \text{mismatch (total) } P \text{ and } Q \text{ at nonlinear} \\ \text{buses with respect to } V^{(h)} \text{ and } \delta^{(h)}. \\ \text{These are similarly formed as those for} \\ \text{the fundamental power flow,} \\ \text{see Section 8.3} \end{bmatrix}, \quad (8.108)$$

where $\bar{\theta}_{2(m-2) \times 2n}$ denotes a $2(m-2)$ by $2n$ array of zeros and $\bar{J}^{(h)}$ is a $2(n-1)$ by $2n$ matrix.

The partial derivatives are found using the harmonic admittance matrix $\bar{Y}_{bus}^{(h)}$ and the harmonic voltages:

$$\bar{Y}\bar{G}^{(h,j)} = \begin{cases} \bar{Y}^{(h,h)} + \bar{G}^{(h,h)} & \text{for } h=j \\ \bar{0} + \bar{G}^{(h,j)} & \text{for } h \neq j \end{cases} \quad (8.109)$$

or

$$\bar{Y}\bar{G}^{(h,j)} = \begin{bmatrix} \bar{Y}^{(h,h)} & \bar{G}^{(h,h)} \\ \bar{Y}^{(h,j)} \equiv 0 & \bar{G}^{(h,j)} \end{bmatrix} \quad (8.110)$$

- $\bar{Y}^{(h,h)}$ is an array of partial derivatives of the h th harmonic (linear) line currents with respect to the h th harmonic bus voltages,
- $\bar{G}^{(h,h)}$ is an array of partial derivatives of the h th (nonlinear) harmonic load currents with respect to the h th harmonic bus voltages, and
- $\bar{G}^{(h,j)}$ is an array of partial derivatives of the h th harmonic nonlinear load currents with respect to the j th harmonic bus voltages:

$$\overline{G}^{(h,j)} = \left[\begin{array}{c|cccccc} \overline{0}_{2(m-1) \times 2(m-1)} & \overline{0}_{2(m-1) \times 2(n-m+1)} & & & & \\ \hline & \frac{\partial G_{r,m}^{(h)}}{\partial \delta_m^{(j)}} & \frac{\partial G_{r,m}^{(h)}}{\partial V_m^{(j)}} & \cdot & \cdot & 0 & 0 \\ & \frac{\partial G_{i,m}^{(h)}}{\partial \delta_m^{(j)}} & \frac{\partial G_{i,m}^{(h)}}{\partial V_m^{(j)}} & \cdot & \cdot & 0 & 0 \\ \hline \overline{0}_{2(n-m+1) \times 2(m-1)} & \cdot & \cdot & \cdot & \cdot & \cdot & \cdot \\ & 0 & 0 & \cdot & \cdot & \frac{\partial G_{r,n}^{(h)}}{\partial \delta_n^{(j)}} & \frac{\partial G_{r,n}^{(h)}}{\partial V_n^{(j)}} \\ & 0 & 0 & \cdot & \cdot & \frac{\partial G_{i,n}^{(h)}}{\partial \delta_n^{(j)}} & \frac{\partial G_{i,n}^{(h)}}{\partial V_n^{(j)}} \end{array} \right] \quad (8.111)$$

where the partial derivatives of $G_{r,m}^{(h)}$ and $G_{i,m}^{(h)}$ are referred to the swing bus. Note that $\overline{YG}^{(h,j)}$ is a $2n$ square matrix; however, for $h=1$, only the last $2(n-m+1)$ rows exist because the fundamental current balance is not applied to linear buses. $\overline{YG}^{(1,j)}$ is a $2(n-m+1) \times 2n$ matrix and for $j=1$ the first two columns do not exist because $|\tilde{V}_1^{(1)}|$ and $\delta_1^{(1)}$ are known, that is, $\overline{YG}^{(h,1)}$ is a $2n \times 2(n-1)$ matrix.


$\overline{H}^{(h)}$ is an array of partial derivatives of real and imaginary nonlinear load currents with respect to the firing angle α and the commutation impedance β :

$$\overline{H}^{(h)} = \left[\begin{array}{cc|cc} 0 & 0 & \overline{0}_{2(m-1) \times 2(n-m+1)} & 0 & 0 \\ \frac{\partial G_{r,m}^{(h)}}{\partial \alpha_m} & \frac{\partial G_{r,m}^{(h)}}{\partial \beta_m} & \cdot & 0 & 0 \\ \frac{\partial G_{i,m}^{(h)}}{\partial \alpha_m} & \frac{\partial G_{i,m}^{(h)}}{\partial \beta_m} & \cdot & 0 & 0 \\ \frac{\partial G_{r,n}^{(h)}}{\partial \alpha_n} & \frac{\partial G_{r,n}^{(h)}}{\partial \beta_n} & \cdot & \frac{\partial G_{r,n}^{(h)}}{\partial \alpha_n} & \frac{\partial G_{r,n}^{(h)}}{\partial \beta_n} \\ \frac{\partial G_{i,n}^{(h)}}{\partial \alpha_n} & \frac{\partial G_{i,n}^{(h)}}{\partial \beta_n} & \cdot & \frac{\partial G_{i,n}^{(h)}}{\partial \alpha_n} & \frac{\partial G_{i,n}^{(h)}}{\partial \beta_n} \\ 0 & 0 & \cdot & \cdot & \cdot \\ 0 & 0 & \cdot & \cdot & \cdot \end{array} \right] \quad (8.112)$$

where $h = 1, 5, 7, \dots, L$. For $h=1$, the entries are zero.

8.4.5 Harmonic Jacobian entry formulas related to line currents

Fig. 8.15 shows a typical nonlinear bus i of an n bus system. This i th bus is connected to three other buses, m , k , and l . The nonlinear device connected to bus i demands a complex load current $\tilde{g}_{\text{load},i}^{(h)}$ (referred to the nonlinear bus i) at the h th harmonic frequency.

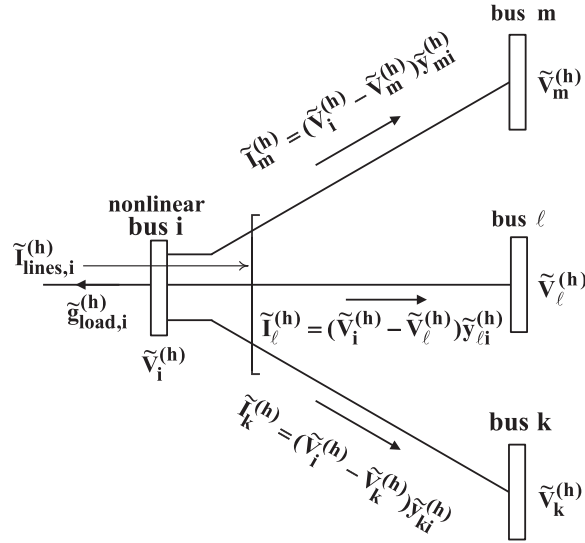FIG. 8.15 Nonlinear bus i .

The total h th harmonic complex current leaving bus i via the lines is

$$\tilde{I}_{lines,i}^{(h)} = \tilde{I}_k^{(h)} + \tilde{I}_l^{(h)} + \tilde{I}_m^{(h)} \quad (8.113a)$$

$$\tilde{I}_{lines,i}^{(h)} = (\tilde{V}_i^{(h)} - \tilde{V}_k^{(h)})\tilde{y}_{ik}^{(h)} + (\tilde{V}_i^{(h)} - \tilde{V}_l^{(h)})\tilde{y}_{il}^{(h)} + (\tilde{V}_i^{(h)} - \tilde{V}_m^{(h)})\tilde{y}_{im}^{(h)} \quad (8.113b)$$

where $\tilde{y}_{ij}^{(h)}$ is the admittance of the line connecting buses i and j evaluated at the h th harmonic frequency. Rearranging terms gives

$$\tilde{I}_{lines,i}^{(h)} = (\tilde{y}_{ik}^{(h)} + \tilde{y}_{il}^{(h)} + \tilde{y}_{im}^{(h)})\tilde{V}_i^{(h)} - \tilde{y}_{ik}^{(h)}\tilde{V}_k^{(h)} - \tilde{y}_{il}^{(h)}\tilde{V}_l^{(h)} - \tilde{y}_{im}^{(h)}\tilde{V}_m^{(h)} \quad (8.114a)$$

or

$$\tilde{I}_{lines,i}^{(h)} = (\bar{Y}_{bus}^{(h)})_{ii}\tilde{V}_i^{(h)} + (\bar{Y}_{bus}^{(h)})_{ik}\tilde{V}_k^{(h)} + (\bar{Y}_{bus}^{(h)})_{il}\tilde{V}_l^{(h)} + (\bar{Y}_{bus}^{(h)})_{im}\tilde{V}_m^{(h)} \quad (8.114b)$$

where $(\bar{Y}_{bus}^{(h)})_{ij}$ is the (i, j) th entry of the h th harmonic admittance matrix. Because k , l , and m are the only buses connected to bus i (see Fig. 8.15),

$$\tilde{I}_{lines,i}^{(h)} = \left(\text{row } i \text{ of } \bar{Y}_{bus}^{(h)} \right)_{ii} \bar{V}_{bus}^{(h)} \quad (8.115)$$

where $\bar{V}_{bus}^{(h)}$ is a complex vector of the h th harmonic bus voltages. Therefore, the mismatch current for the h th harmonic is based on the Kirchhoff current law at bus i :

$$\Delta \tilde{I}_i^{(h)} = \tilde{I}_{lines,i}^{(h)} + \tilde{G}_{load,i}^{(h)} = \left(\text{row } i \text{ of } \bar{Y}_{bus}^{(h)} \right) \bar{V}_{bus}^{(h)} + \tilde{G}_{load,i}^{(h)} \quad (8.116)$$

where $\tilde{G}_{\text{load},i}^{(h)}$ is the h th harmonic nonlinear complex load current (for bus i), referred to the swing bus:

$$\tilde{G}_{\text{load},i}^{(h)} = G_{r,i}^{(h)} + jG_{i,i}^{(h)} \quad (8.117)$$

In this equation, the second index i pertains to bus i and the first index i indicates imaginary. Breaking the mismatch current $\tilde{I}_i^{(h)}$ into a real part $\Delta I_{r,i}^{(h)}$ and an imaginary part $\Delta I_{i,i}^{(h)}$ we get

$$\Delta I_{r,i}^{(h)} = \text{Real} \left\{ \left(\text{row } i \text{ of } \bar{Y}_{\text{bus}}^{(h)} \right) \bar{V}_{\text{bus}}^{(h)} \right\} + G_{r,i}^{(h)} \quad (8.118a)$$

$$\Delta I_{i,i}^{(h)} = \text{Imag} \left\{ \left(\text{row } i \text{ of } \bar{Y}_{\text{bus}}^{(h)} \right) \bar{V}_{\text{bus}}^{(h)} \right\} + G_{i,i}^{(h)} \quad (8.118b)$$

therefore,

$$\Delta I_{r,i}^{(h)} = I_{r,i}^{(h)} + G_{r,i}^{(h)} = \sum_{j=1}^n y_{ij}^{(h)} \left| \tilde{V}_j^{(h)} \right| \cos \left(\theta_{ij}^{(h)} + \delta_j^{(h)} \right) + G_{r,i}^{(h)} \quad (8.119a)$$

$$\Delta I_{i,i}^{(h)} = I_{i,i}^{(h)} + G_{i,i}^{(h)} = \sum_{j=1}^n y_{ij}^{(h)} \left| \tilde{V}_j^{(h)} \right| \sin \left(\theta_{ij}^{(h)} + \delta_j^{(h)} \right) + G_{i,i}^{(h)} \quad (8.119b)$$

where $y_{ij}^{(h)}$ and $\theta_{ij}^{(h)}$ are the magnitude and phase angle of the (i, j) th entry of the h th harmonic admittance matrix, respectively, and $\left| \tilde{V}_j^{(h)} \right|$ and $\delta_j^{(h)}$ are the h th harmonic voltage magnitude and phase angle of bus j with respect to swing bus.

The entries of the Jacobian matrix corresponding to line currents are submatrices $\bar{Y}^{(h, h)}$ ($h = 1, 5, \dots, L$). These matrices are defined as

$$\bar{Y}^{(h, h)} = \frac{\partial \left(\bar{I}^{(h)} \right)}{\partial \left(\bar{V}^{(h)} \right)} \quad (8.120)$$

Note that $\bar{Y}^{(h, j)} = 0$ for $h \neq j$. The zero terms are due to the fact that the $(v - i)$ characteristics of the nonlinear devices are modeled in the Jacobian matrix using submatrices $\bar{G}^{(h, j)}$.

$$\bar{Y}^{(h, h)} = \begin{bmatrix} \frac{\partial I_{r,1}^{(h)}}{\partial \delta_1^{(h)}} & \frac{\partial I_{r,1}^{(h)}}{\partial V_1^{(h)}} & \cdots & \frac{\partial I_{r,1}^{(h)}}{\partial \delta_n^{(h)}} & \frac{\partial I_{r,1}^{(h)}}{\partial V_n^{(h)}} \\ \frac{\partial I_{i,1}^{(h)}}{\partial \delta_1^{(h)}} & \frac{\partial I_{i,1}^{(h)}}{\partial V_1^{(h)}} & \cdots & \frac{\partial I_{i,1}^{(h)}}{\partial \delta_n^{(h)}} & \frac{\partial I_{i,1}^{(h)}}{\partial V_n^{(h)}} \\ \vdots & \vdots & \ddots & \vdots & \vdots \\ \frac{\partial I_{r,n}^{(h)}}{\partial \delta_1^{(h)}} & \frac{\partial I_{r,n}^{(h)}}{\partial V_1^{(h)}} & \cdots & \frac{\partial I_{r,n}^{(h)}}{\partial \delta_n^{(h)}} & \frac{\partial I_{r,n}^{(h)}}{\partial V_n^{(h)}} \\ \frac{\partial I_{i,n}^{(h)}}{\partial \delta_1^{(h)}} & \frac{\partial I_{i,n}^{(h)}}{\partial V_1^{(h)}} & \cdots & \frac{\partial I_{i,n}^{(h)}}{\partial \delta_n^{(h)}} & \frac{\partial I_{i,n}^{(h)}}{\partial V_n^{(h)}} \end{bmatrix} \quad (8.121)$$

For $h = 1$ only the last $2(n - m + 1)$ rows exist because fundamental current balance is not performed for linear load buses. Also for $h = 1$ the first two columns of the matrix do not exist (are zero) because $|\tilde{V}_1^{(1)}|$ and $\delta_1^{(1)}$ are known and constant.

The entries of $\bar{Y}^{(h, h)}$ are computed from Eq. (8.119) by setting $G_{r,i}^{(h)}$ and $G_{i,i}^{(h)}$ to zero:

$$\frac{\partial I_{r,i}^{(h)}}{\partial \delta_j^{(h)}} = -y_{ij}^{(h)} |\tilde{V}_j^{(h)}| \sin(\theta_{ij}^{(h)} + \delta_j^{(h)}), \text{ for } h = 1, 5, \dots, L \quad (8.122a)$$

$$\frac{\partial I_{r,i}^{(h)}}{\partial |\tilde{V}_j^{(h)}|} = y_{ij}^{(h)} \cos(\theta_{ij}^{(h)} + \delta_j^{(h)}), \text{ for } h = 1, 5, \dots, L \quad (8.122b)$$

$$\frac{\partial I_{i,i}^{(h)}}{\partial \delta_j^{(h)}} = y_{ij}^{(h)} |\tilde{V}_j^{(h)}| \cos(\theta_{ij}^{(h)} + \delta_j^{(h)}), \text{ for } h = 1, 5, \dots, L \quad (8.122c)$$

$$\frac{\partial I_{i,i}^{(h)}}{\partial |\tilde{V}_j^{(h)}|} = y_{ij}^{(h)} \sin(\theta_{ij}^{(h)} + \delta_j^{(h)}), \text{ for } h = 1, 5, \dots, L \quad (8.122d)$$

where h and j denote harmonic order and bus number, respectively.

8.4.6 Newton-based harmonic power flow algorithm

Based on the equations given, the HPF algorithm is the computation of bus voltage vector $\bar{U}$ for a given system configuration with linear and nonlinear loads. The Newton-Raphson approach (Eq. 8.107) will be used to force the mismatch vector (Eq. 8.101) to zero using the harmonic Jacobian matrix and obtaining appropriate correction terms $\Delta \bar{U}$. Therefore (ξ represents the iteration number),

$$\Delta \bar{U}^\xi = \bar{J}^{-1} \Delta \bar{M}(\bar{U}^\xi) \quad (8.123)$$

$$\bar{U}^{(\xi+1)} = \bar{U}^\xi - \Delta \bar{U}^\xi \quad (8.124)$$

The solution procedure for the HPF algorithm is as follows (Fig. 8.16):

Step 1: Perform the fundamental load flow analysis (treating all nonlinear devices as linear loads) and compute an initial (approximate) value for the fundamental bus voltage magnitudes and phase angles. Make an initial guess for the harmonic bus voltage magnitudes and phase angles (e.g., 0.1 pu and 0 rad).

Step 2: Compute nonlinear device currents $G_{r,m}^{(h)}$ and $G_{i,m}^{(h)}$ (referred to the swing bus) for nonlinear loads.

Step 3: Evaluate $\Delta \bar{M}(\bar{U})$ using Eqs. (8.101), (8.102). If it is small enough then stop.

Step 4: Evaluate $\bar{J}^{(h)}$ (Eqs. 8.108–8.112 and 8.121) and calculate $\Delta \bar{U}$ (Eqs. 8.107 and 8.123) using matrix inversion or forward/backward substitutions.

Step 5: Update $\bar{U}$ (Eq. 8.124).

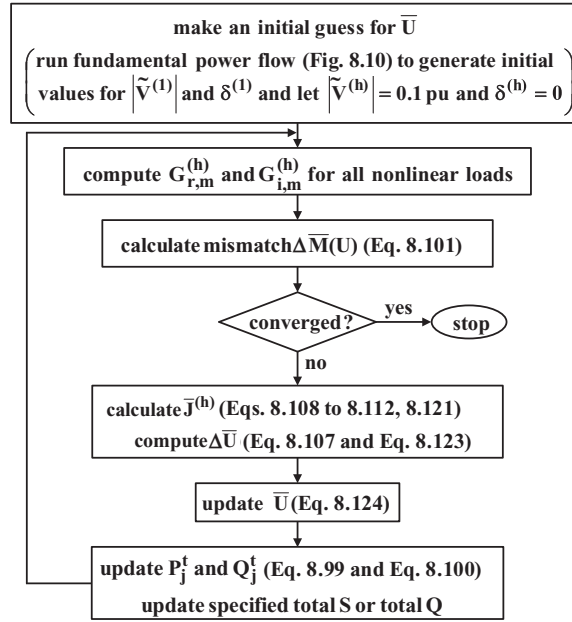


FIG. 8.16 Harmonic Newton-based power flow algorithm.

Step 6: Update the total (fundamental plus harmonic) powers at nonlinear buses (P_j^t and Q_j^t) (Eqs. 8.99 and 8.100), and the specified total apparent power or total reactive power (Eq. 8.98), whichever is known.

Step 7: Go to Step 2.

8.4.7 Application Example 8.14: Computation of harmonic admittance matrix

The HPF algorithm will be applied to the nonlinear power system as shown in Fig. E8.14.1 where all impedances are given in pu at 60 Hz and the base is $S_{base} = 1$ kVA. In order to simplify the problem, the harmonic ($v - i$) characteristic of the nonlinear load at bus 4 (referred to the voltage at bus 4) is given as

$$\begin{aligned}\tilde{g}_{load,4}^{(5)} &= g_{r,4}^{(5)} + jg_{i,4}^{(5)} \\ g_{r,4}^{(5)} &= 0.3 \left(V_4^{(1)} \right)^3 \cos \left(3\delta_4^{(1)} \right) + 0.3 \left(V_4^{(5)} \right)^2 \cos \left(3\delta_4^{(5)} \right) \\ g_{i,4}^{(5)} &= 0.3 \left(V_4^{(1)} \right)^3 \sin \left(3\delta_4^{(1)} \right) + 0.3 \left(V_4^{(5)} \right)^2 \sin \left(3\delta_4^{(5)} \right)\end{aligned}$$

It will be assumed that the voltage at the swing bus (bus 1) is $|\tilde{V}_1^{(1)}| = 1.00$ pu and $\delta_1^{(1)} = 0$ rad.

The swing bus can be represented by Fig. E8.14.2 at the fundamental frequency. For the 5th harmonic, $\tilde{E}_{an}$ of Fig. E8.14.3 represents a short-circuit, and the synchronous machine impedance Z_1 is replaced by the (subtransient) impedance $Z_2 \approx jX^- = j0.0001$ pu at 60 Hz (see Fig. E8.14.1). In this case, the subtransient reactance has been chosen to be very small in order to approximate bus 1 as an ideal bus.

Compute the fundamental and 5th harmonic admittance matrices.

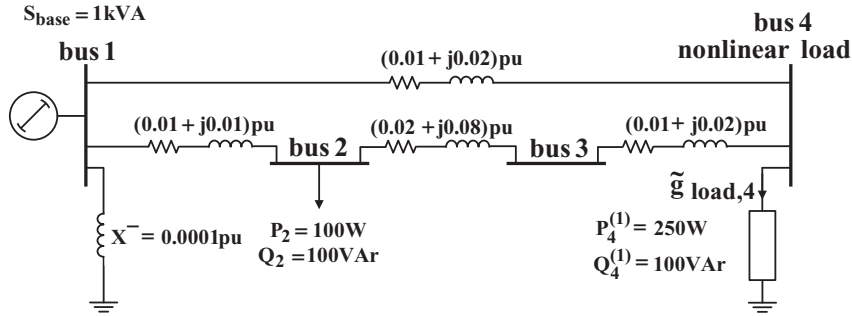


FIG. E8.14.1 Four-bus power system with one nonlinear load bus, where $n = m = 4$, that is, there is one nonlinear bus (bus 4), 2 linear buses (buses 2 and 3) and the swing bus (bus 1).

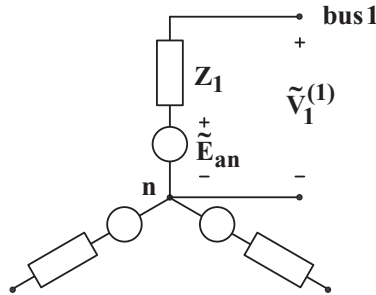


FIG. E8.14.2 Representation of swing bus (bus 1) for fundamental ($h=1$) frequency.

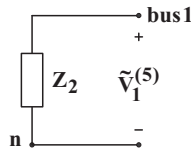


FIG. E8.14.3 Equivalent circuit of swing bus for the 5th harmonic ($h=5$).

Solution to Application Example 8.14: Computation of harmonic admittance matrix.

The fundamental bus admittance matrix (X^- does not exist for fundamental quantities) is computed in Application Example 8.8. The 5th harmonic bus admittance matrix takes into account X^- and its entries are calculated as follows:

$$y_{11}^{(5)} = \frac{1}{0.01 + j(0.02 \cdot 5)} + \frac{1}{0.01 + j(0.01 \cdot 5)} + \frac{1}{j(0.0001 \cdot 5)} = 2029.137 \text{ pu}\angle -1.5684 \text{ rad}$$

$$y_{12}^{(5)} = \frac{-1}{0.01 + j(0.01 \cdot 5)} = 19.612 \text{ pu}\angle 1.7681 \text{ rad}$$

$$y_{13}^{(5)} = 0$$

$$y_{14}^{(5)} = \frac{-1}{0.01 + j(0.02 \cdot 5)} = 9.9503 \text{ pu}\angle 1.6704 \text{ rad}$$

$$y_{21}^{(5)} = y_{12}^{(5)}$$

$$y_{22}^{(5)} = \frac{1}{0.01 + j(0.01 \cdot 5)} + \frac{1}{0.02 + j(0.08 \cdot 5)} = 22.084 \text{ pu}\angle -1.3900 \text{ rad}$$

$$y_{23}^{(5)} = \frac{-1}{0.02 + j(0.08 \cdot 5)} = 2.4969 \text{ pu}\angle 1.62066 \text{ rad}$$

$$y_{24}^{(5)} = 0$$

$$y_{31}^{(5)} = y_{13}^{(5)}$$

$$y_{32}^{(5)} = y_{23}^{(5)}$$

$$y_{33}^{(5)} = \frac{1}{0.02 + j(0.08 \cdot 5)} + \frac{1}{0.01 + j(0.02 \cdot 5)} = 12.445 \text{ pu}\angle -1.4811 \text{ rad}$$

$$y_{34}^{(5)} = \frac{-1}{0.01 + j(0.02 \cdot 5)} = 9.9504 \text{ pu}\angle 1.6704 \text{ rad}$$

$$y_{41}^{(5)} = y_{14}^{(5)}$$

$$y_{42}^{(5)} = y_{24}^{(5)}$$

$$y_{43}^{(5)} = y_{34}^{(5)}$$

$$y_{44}^{(5)} = \frac{1}{0.01 + j(0.02 \cdot 5)} + \frac{1}{0.01 + j(0.02 \cdot 5)} = 19.901 \text{ pu}\angle -1.4711 \text{ rad}$$

Therefore,

$$\bar{Y}_{bus}^{(5)} = \begin{bmatrix} 2029.137 \text{ pu}\angle -1.5684 \text{ rad} & 19.61 \text{ pu}\angle 1.7681 \text{ rad} & 0 & 9.9503 \text{ pu}\angle 1.6704 \text{ rad} \\ 19.61 \text{ pu}\angle 1.7681 \text{ rad} & 22.0847 \text{ pu}\angle -1.3900 \text{ rad} & 2.4969 \text{ pu}\angle 1.62066 \text{ rad} & 0 \\ 0 & 2.4969 \text{ pu}\angle 1.62066 \text{ rad} & 12.445 \text{ pu}\angle -1.4811 \text{ rad} & 9.9504 \text{ pu}\angle 1.6704 \text{ rad} \\ 9.9503 \text{ pu}\angle 1.6704 \text{ rad} & 0 & 9.9504 \text{ pu}\angle 1.6704 \text{ rad} & 19.901 \text{ pu}\angle -1.4711 \text{ rad} \end{bmatrix}$$

Note that: $-y_{ij} \angle \theta_{ij} = y_{ij} \angle (\theta_{ij} + \pi)$.

8.4.8 Application Example 8.15: Computation of nonlinear load harmonic currents

For the system of Fig. E8.14.1, assume an initial value for the bus vector $\bar{U}^0$ and compute the fundamental and the 5th harmonic currents injected into the system by the nonlinear load. The computation of the nonlinear load harmonic currents is the initial step of the harmonic load flow algorithm.

Solution to Application Example 8.15: Computation of nonlinear load harmonic currents.

The initial step of harmonic load flow is as follows:

The real and imaginary nonlinear device currents $G_{r,4}^{(1)}$ and $G_{i,4}^{(1)}$ —referred to the swing bus—may be computed as follows, where the following powers are referred to the nonlinear bus 4:

$$\begin{cases} P_4^{(1)} = V_4^{(1)} I_4^{(1)} \cos(\delta_4^{(1)} - \gamma_4^{(1)}) \\ Q_4^{(1)} = V_4^{(1)} I_4^{(1)} \sin(\delta_4^{(1)} - \gamma_4^{(1)}) \end{cases}$$

$I_4^{(1)}$ and $\gamma_4^{(1)} = \delta_4^{(1)} - \tan^{-1}(Q_4^{(1)}/P_4^{(1)})$ are the magnitude and phase angle of the fundamental nonlinear device current, respectively. The diagram of Fig. E8.15.1 demonstrates the phasor relationships.

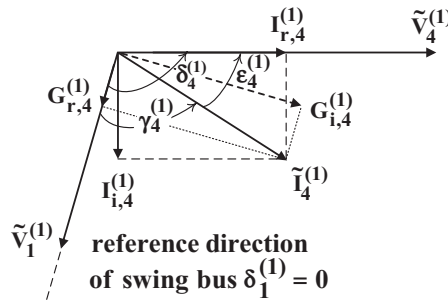


FIG. E8.15.1 Phasor diagram for fundamental quantities, where $\epsilon_4^{(1)} = \tan^{-1}\left(\frac{Q_4^{(1)}}{P_4^{(1)}}\right) = (\delta_4^{(1)} - \gamma_4^{(1)})$ or $\delta_4^{(1)} = \epsilon_4^{(1)} + \gamma_4^{(1)}$.

The real part of the fundamental of the nonlinear device current at bus 4 (referred to the swing bus) is

$$G_{r,4}^{(1)} = I_4^{(1)} \cos \gamma_4^{(1)}$$

where

$$I_4^{(1)} = \frac{P_4^{(1)}}{V_4^{(1)} \cos(\delta_4^{(1)} - \gamma_4^{(1)})}$$

Thus

$$G_{r,4}^{(1)} = \frac{P_4^{(1)} \cos \gamma_4^{(1)}}{V_4^{(1)} \cos (\delta_4^{(1)} - \gamma_4^{(1)})}$$

Correspondingly one obtains for the imaginary part of the fundamental of the nonlinear device current at bus 4 (referred to the swing bus):

$$G_{i,4}^{(1)} = \frac{P_4^{(1)} \sin \gamma_4^{(1)}}{V_4^{(1)} \cos (\delta_4^{(1)} - \gamma_4^{(1)})}$$

The real and imaginary harmonic (5th) nonlinear device currents are given as (referred to bus 4)

$$\begin{cases} g_{r,4}^{(5)} = 0.3 \left(V_4^{(1)} \right)^3 \cos (3\delta_4^{(1)}) + 0.3 \left(V_4^{(5)} \right)^2 \cos (3\delta_4^{(5)}) \\ g_{i,4}^{(5)} = 0.3 \left(V_4^{(1)} \right)^3 \sin (3\delta_4^{(1)}) + 0.3 \left(V_4^{(5)} \right)^2 \sin (3\delta_4^{(5)}) \end{cases}$$

where $\delta_4^{(5)}$ is the angle between $\tilde{V}_4^{(5)}$ and $\tilde{V}_1^{(1)}$ the swing bus voltage, $I_4^{(5)}$ is the fifth harmonic current magnitude

$$I_4^{(5)} = \sqrt{\left(g_{r,4}^{(5)} \right)^2 + \left(g_{i,4}^{(5)} \right)^2}$$

and $\gamma_4^{(5)}$ is the phase angle of $\tilde{I}_4^{(5)}$ with respect to the swing bus voltage $\tilde{V}_1^{(1)}$.

Assuming bus 1 to be the swing bus ($\delta_1^{(1)} = 0$ radians, $|\tilde{V}_1^{(1)}| = 1.00$ pu), the solution procedure is as follows.

Step #1 of harmonic load flow. Using the solution vector $\bar{x}$ of the fundamental power flow analysis (see Application Example 8.13) and assuming harmonic voltage magnitudes and phase angles of 0.1 pu and 0 rad, respectively, the bus vector $\bar{U}^0$ will be

$$\bar{U}^0 = \left(\delta_2^{(1)}, |\tilde{V}_2^{(1)}|, \delta_3^{(1)}, |\tilde{V}_3^{(1)}|, \delta_4^{(1)}, |\tilde{V}_4^{(1)}|, \delta_1^{(5)}, |\tilde{V}_1^{(5)}|, \delta_2^{(5)}, |\tilde{V}_2^{(5)}|, \delta_3^{(5)}, |\tilde{V}_3^{(5)}|, \delta_4^{(5)}, |\tilde{V}_4^{(5)}|, \alpha_4, \beta_4 \right)^t$$

$$\bar{U}^0 = (-2.671 \cdot 10^{-4}, 0.9976, -2.810 \cdot 10^{-3}, 0.9964, -3.414 \cdot 10^{-3}, 0.9960, 0,$$

$$0.1, 0, 0.1, 0, 0.1, 0, 0.1, 0, 0)^t$$

where the angles are measured in radians.

Note that the nonlinear device variables (α_4 and β_4) are assumed to be zero because there are no device variables defined in this example for the nonlinear load at bus 4.

Step #2 of harmonic load flow. Use $\bar{U}^0$ to compute the nonlinear device currents. With $P_4^{(1)} = 250$ W corresponding to 0.25 pu, $Q_4^{(1)} = 100$ VAr corresponding to 0.100 pu, $V_4^{(1)} = 0.9960$ pu, and $\delta_4^{(1)} = -3.414 \cdot 10^{-3}$ rad, one gets

$$\epsilon_4^{(1)} = \tan^{-1} \left(\frac{Q_4^{(1)}}{P_4^{(1)}} \right) = \tan^{-1} \left(\frac{0.1}{0.25} \right) = 0.3805 \text{ rad}$$

$$\gamma_4^{(1)} = \delta_4^{(1)} - \epsilon_4^{(1)} = (-0.003414 - 0.3805) = -0.38391 \text{ rad}$$

$$G_{r,4}^{(1)} = \frac{P_4^{(1)} \cos(\gamma_4^{(1)})}{V_4^{(1)} \cos(\delta_4^{(1)} - \gamma_4^{(1)})} = \frac{0.25 \cdot \cos(-0.38391)}{0.9960 \cdot \cos(-0.003414 + 0.38391)} = 0.2514 \text{ pu}$$

$$G_{i,4}^{(1)} = \frac{P_4^{(1)} \sin(\gamma_4^{(1)})}{V_4^{(1)} \cos(\delta_4^{(1)} - \gamma_4^{(1)})} = \frac{0.25 \cdot \sin(-0.38391)}{0.9960 \cdot \cos(-0.003414 + 0.38391)} = -0.1015 \text{ pu}$$

The fundamental magnitude of the nonlinear current is

$$I_4^{(1)} = \sqrt{(G_{r,4}^{(1)})^2 + (G_{i,4}^{(1)})^2} = \sqrt{(0.2514)^2 + (-0.1015)^2} = 0.2711 \text{ pu with } \gamma_4^{(1)} = -0.38391 \text{ rad}$$

The fifth harmonic current components of the nonlinear load current at bus 4 are (referred to bus 4)

$$\begin{cases} g_{r,4}^{(5)} = 0.3(V_4^{(1)})^3 \cos(3\delta_4^{(1)}) + 0.3(V_4^{(5)})^2 \cos(3\delta_4^{(5)}) \\ g_{i,4}^{(5)} = 0.3(V_4^{(1)})^3 \sin(3\delta_4^{(1)}) + 0.3(V_4^{(5)})^2 \sin(3\delta_4^{(5)}) \end{cases}$$

With $V_4^{(1)} = 0.9960 \text{ pu}$, $\delta_4^{(1)} = -0.003414 \text{ rad}$, $V_4^{(5)} = 0.1 \text{ pu}$, $\delta_4^{(5)} = 0 \text{ rad}$, one obtains

$$\begin{cases} g_{r,4}^{(5)} = 0.3(0.9960)^3 \cos(-3 \cdot 0.003414) + 0.3(0.1)^2 \cos(3 \cdot 0) = 0.2994 \text{ pu} \\ g_{i,4}^{(5)} = 0.3(0.9960)^3 \sin(-3 \cdot 0.003414) + 0.3(0.1)^2 \sin(3 \cdot 0) = -0.003036 \text{ pu} \end{cases}$$

$$I_4^{(5)} = \sqrt{(g_{r,4}^{(5)})^2 + (g_{i,4}^{(5)})^2} = \sqrt{(0.2994)^2 + (-0.003036)^2} = 0.2994 \text{ pu}$$

$$\epsilon_4^{(5)} = \tan^{-1} \left(\frac{|g_{i,4}^{(5)}|}{|g_{r,4}^{(5)}|} \right) = 0.01014 \text{ rad}$$

Therefore, the fifth harmonic currents at bus 4 referred to the swing bus are $G_{r,4}^{(5)} = I_4^{(5)} \cos \gamma_4^{(5)}$ and $G_{i,4}^{(5)} = I_4^{(5)} \sin \gamma_4^{(5)}$.

The phasor diagram for the 5th harmonic is shown in Fig. E8.15.2, where the angles are

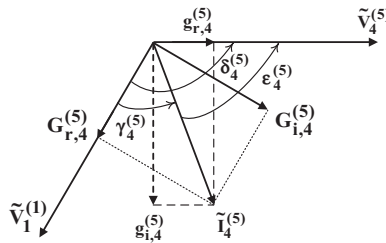


FIG. E8.15.2 Phasor diagram for 5th harmonic.

$$\delta_4^{(5)} = \varepsilon_4^{(5)} + \gamma_4^{(5)}$$

or

$$\gamma_4^{(5)} = \delta_4^{(5)} - \varepsilon_4^{(5)} = 0 - \varepsilon_4^{(5)} = -0.01014 \text{ rad}$$

resulting in $G_{r,4}^{(5)} = 0.2994 \text{ pu}$ and $G_{i,4}^{(5)} = -0.003036 \text{ pu}$.

These nonlinear currents referred to the swing bus are about the same as those referred to bus 4 because the angle $\gamma_4^{(5)}$ is very small for this first iteration.

Note that

$$\begin{cases} P_4^{(1)} = I_4^{(1)} V_4^{(1)} \cos(\delta_4^{(1)} - \gamma_4^{(1)}) = 0.2711 \cdot 0.9960 \cdot \cos(-0.003414 + 0.38391) = 0.250 \text{ pu} \\ Q_4^{(1)} = I_4^{(1)} V_4^{(1)} \sin(\delta_4^{(1)} - \gamma_4^{(1)}) = 0.2711 \cdot 0.9960 \cdot \sin(-0.003414 + 0.38391) = 0.100 \text{ pu} \end{cases}$$

are as expected. Correspondingly,

$$\begin{cases} P_4^{(5)} = I_4^{(5)} V_4^{(5)} \cos(\delta_4^{(5)} - \gamma_4^{(5)}) = 0.2994 \cdot 0.1 \cdot \cos(0 + 0.01014) = 0.02999 \text{ pu} \\ Q_4^{(5)} = I_4^{(5)} V_4^{(5)} \sin(\delta_4^{(5)} - \gamma_4^{(5)}) = 0.2994 \cdot 0.1 \cdot \sin(0 + 0.01014) = 0.000304 \text{ pu} \end{cases}$$

Therefore, the total injected real and reactive powers at the nonlinear bus 4 are

$$\begin{cases} P_4^t = P_4^{(1)} + P_4^{(5)} = 0.250 \text{ pu} + 0.02994 \text{ pu} = 0.27994 \text{ pu} \\ Q_4^t = Q_4^{(1)} + Q_4^{(5)} = 0.100 \text{ pu} + 0.000304 \text{ pu} = 0.100304 \text{ pu} \end{cases}$$

8.4.9 Application Example 8.16: Evaluation of harmonic mismatch vector

Using the results of Application Example 8.15, evaluate the mismatch vector for the system of Fig. E8.14.1.

Solution to Application Example 8.16: Evaluation of harmonic mismatch vector.

Step #3 of harmonic load flow. Evaluation of the mismatch vector

$$\begin{aligned} \Delta \bar{M}^0 &= \left(\Delta \bar{W}, \Delta \bar{I}^{(5)}, \Delta \bar{I}^{(1)} \right)^t \\ &= \left(P_2^{(1)} + F_{r,2}^{(1)}, Q_2^{(1)} + F_{i,2}^{(1)}, P_3^{(1)} + F_{r,3}^{(1)}, Q_3^{(1)} + F_{i,3}^{(1)}, P_4^t + F_{r,4}^{(1)} + F_{r,4}^{(5)}, Q_4^t + F_{i,4}^{(1)} \right. \\ &\quad \left. + F_{i,4}^{(5)}, I_{r,1}^{(5)}, I_{i,1}^{(5)}, I_{r,2}^{(5)}, I_{i,2}^{(5)}, I_{r,3}^{(5)}, I_{i,3}^{(5)}, I_{r,4}^{(5)} + G_{r,4}^{(5)}, I_{i,4}^{(5)} + G_{i,4}^{(5)}, I_{r,4}^{(1)} + G_{r,4}^{(1)}, I_{i,4}^{(1)} + G_{i,4}^{(1)} \right) \end{aligned}$$

To compute these mismatches use equations Eqs. (8.80), (8.81)

$$\Delta P_i = P_i + F_{r,i} = P_i + \sum_{j=1}^n y_{ij} \left| \tilde{V}_j \right| \left| \tilde{V}_i \right| \cos (-\theta_{ij} - \delta_j + \delta_i)$$

$$\Delta Q_i = Q_i + F_{i,i} = Q_i + \sum_{j=1}^n y_{ij} \left| \tilde{V}_j \right| \left| \tilde{V}_i \right| \sin (-\theta_{ij} - \delta_j + \delta_i)$$

and Eq. (8.119a,b)

$$\Delta I_{r,i}^{(h)} = I_{r,i}^{(h)} + G_{r,i}^{(h)} = \sum_{j=1}^n y_{ij}^{(h)} \left| \tilde{V}_j^{(h)} \right| \cos (\theta_{ij}^{(h)} + \delta_j^{(h)}) + G_{r,i}^{(h)}$$

$$\Delta I_{i,i}^{(h)} = I_{i,i}^{(h)} + G_{i,i}^{(h)} = \sum_{j=1}^n y_{ij}^{(h)} \left| \tilde{V}_j^{(h)} \right| \sin (\theta_{ij}^{(h)} + \delta_j^{(h)}) + G_{i,i}^{(h)}$$

Hence,

$$\begin{aligned} \Delta P_2^{(1)} &= P_2^{(1)} + F_{r,2}^{(1)} \\ &= P_2 + y_{21} V_1 V_2 \cos (-\theta_{21} - \delta_1 + \delta_2) + y_{22} V_2 V_2 \cos (-\theta_{22} - \delta_2 + \delta_2) \\ &\quad + y_{23} V_3 V_2 \cos (-\theta_{23} - \delta_3 + \delta_2) + y_{24} V_4 V_2 \cos (-\theta_{24} - \delta_4 + \delta_2) \\ &= -0.0170 \text{ pu} \end{aligned}$$

$$\begin{aligned} \Delta Q_2^{(1)} &= Q_2^{(1)} + F_{i,2}^{(1)} \\ &= Q_2 + y_{21} V_1 V_2 \sin (-\theta_{21} - \delta_1 + \delta_2) + y_{22} V_2 V_2 \sin (-\theta_{22} - \delta_2 + \delta_2) \\ &\quad + y_{23} V_3 V_2 \sin (-\theta_{23} - \delta_3 + \delta_2) + y_{24} V_4 V_2 \sin (-\theta_{24} - \delta_4 + \delta_2) \\ &= 0.083 \text{ pu} \end{aligned}$$

$$\begin{aligned} \Delta P_3^{(1)} &= P_3^{(1)} + F_{r,3}^{(1)} \\ &= P_3 + y_{31} V_1 V_3 \cos (-\theta_{31} - \delta_1 + \delta_3) + y_{32} V_2 V_3 \cos (-\theta_{32} - \delta_2 + \delta_3) \\ &\quad + y_{33} V_3 V_3 \cos (-\theta_{33} - \delta_3 + \delta_3) + y_{34} V_4 V_3 \cos (-\theta_{34} - \delta_4 + \delta_3) \\ &= -0.00325 \text{ pu} \end{aligned}$$

$$\begin{aligned} \Delta Q_3^{(1)} &= Q_3^{(1)} + F_{i,3}^{(1)} \\ &= Q_3 + y_{31} V_1 V_3 \sin (-\theta_{31} - \delta_1 + \delta_3) + y_{32} V_2 V_3 \sin (-\theta_{32} - \delta_2 + \delta_3) \\ &\quad + y_{33} V_3 V_3 \sin (-\theta_{33} - \delta_3 + \delta_3) + y_{34} V_4 V_3 \sin (-\theta_{34} - \delta_4 + \delta_3) \\ &= 0.00192 \text{ pu} \end{aligned}$$

$$\begin{aligned}
\Delta P_4^t &= P_4^t + F_{r,4}^{(1)} + F_{r,4}^{(5)} \\
&= P_4^t + \sum_{j=1}^4 y_{4j} V_j^{(1)} V_4^{(1)} \cos \left(-\theta_{4j} - \delta_j^{(1)} + \delta_4^{(1)} \right) \\
&\quad + \sum_{j=1}^4 y_{4j}^{(5)} V_j^{(5)} V_4^{(5)} \cos \left(-\theta_{4j}^{(5)} - \delta_j^{(5)} + \delta_4^{(5)} \right) \\
&= P_4^t + y_{41} V_1^{(1)} V_4^{(1)} \cos \left(-\theta_{41} - \delta_1^{(1)} + \delta_4^{(1)} \right) \\
&\quad + y_{43} V_3^{(1)} V_4^{(1)} \cos \left(-\theta_{43} - \delta_3^{(1)} + \delta_4^{(1)} \right) \\
&\quad + y_{44} V_4^{(1)} V_4^{(1)} \cos \left(-\theta_{44} - \delta_4^{(1)} + \delta_4^{(1)} \right) \\
&\quad + y_{41}^{(5)} V_1^{(5)} V_4^{(5)} \cos \left(-\theta_{41}^{(5)} - \delta_1^{(5)} + \delta_4^{(5)} \right) \\
&\quad + y_{43}^{(5)} V_3^{(5)} V_4^{(5)} \cos \left(-\theta_{43}^{(5)} - \delta_3^{(5)} + \delta_4^{(5)} \right) \\
&\quad + y_{44}^{(5)} V_4^{(5)} V_4^{(5)} \cos \left(-\theta_{44}^{(5)} - \delta_4^{(5)} + \delta_4^{(5)} \right) \\
&= 0.037 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
\Delta Q_4^t &= Q_4^t + F_{i,4}^{(1)} + F_{i,4}^{(5)} \\
&= Q_4^t + \sum_{j=1}^4 y_{4j} V_j^{(1)} V_4^{(1)} \sin \left(-\theta_{4j} - \delta_j^{(1)} + \delta_4^{(1)} \right) \\
&\quad + \sum_{j=1}^4 y_{4j}^{(5)} V_j^{(5)} V_4^{(5)} \sin \left(-\theta_{4j}^{(5)} - \delta_j^{(5)} + \delta_4^{(5)} \right) \\
&= Q_4^t + y_{41} V_1^{(1)} V_4^{(1)} \sin \left(-\theta_{41} - \delta_1^{(1)} + \delta_4^{(1)} \right) + y_{43} V_3^{(1)} V_4^{(1)} \sin \left(-\theta_{43} - \delta_3^{(1)} + \delta_4^{(1)} \right) \\
&\quad + y_{44} V_4^{(1)} V_4^{(1)} \sin \left(-\theta_{44} - \delta_4^{(1)} + \delta_4^{(1)} \right) + y_{41}^{(5)} V_1^{(5)} V_4^{(5)} \sin \left(-\theta_{41}^{(5)} - \delta_1^{(5)} + \delta_4^{(5)} \right) \\
&\quad + y_{43}^{(5)} V_3^{(5)} V_4^{(5)} \sin \left(-\theta_{43}^{(5)} - \delta_3^{(5)} + \delta_4^{(5)} \right) + y_{44}^{(5)} V_4^{(5)} V_4^{(5)} \sin \left(-\theta_{44}^{(5)} - \delta_4^{(5)} + \delta_4^{(5)} \right) \\
&= -0.188 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
I_{r,1}^{(5)} &= \sum_{j=1}^4 y_{1j}^{(5)} \left| \tilde{V}_j^{(5)} \right| \cos \left(\theta_{1j}^{(5)} + \delta_j^{(5)} \right) \\
&= y_{11}^{(5)} \left| \tilde{V}_1^{(5)} \right| \cos \left(\theta_{11}^{(5)} + \delta_1^{(5)} \right) + y_{12}^{(5)} \left| \tilde{V}_2^{(5)} \right| \cos \left(\theta_{12}^{(5)} + \delta_2^{(5)} \right) + y_{13}^{(5)} \left| \tilde{V}_3^{(5)} \right| \cos \left(\theta_{13}^{(5)} + \delta_3^{(5)} \right) \\
&\quad + y_{14}^{(5)} \left| \tilde{V}_4^{(5)} \right| \cos \left(\theta_{14}^{(5)} + \delta_4^{(5)} \right) \\
&= 0.201 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
I_{i,1}^{(5)} &= \sum_{j=1}^4 y_{1j}^{(5)} \left| \tilde{V}_j^{(5)} \right| \sin \left(\theta_{1j}^{(5)} + \delta_j^{(5)} \right) \\
&= y_{11}^{(5)} \left| \tilde{V}_1^{(5)} \right| \sin \left(\theta_{11}^{(5)} + \delta_1^{(5)} \right) + y_{12}^{(5)} \left| \tilde{V}_2^{(5)} \right| \sin \left(\theta_{12}^{(5)} + \delta_2^{(5)} \right) + y_{13}^{(5)} \left| \tilde{V}_3^{(5)} \right| \sin \left(\theta_{13}^{(5)} + \delta_3^{(5)} \right) \\
&\quad + y_{14}^{(5)} \left| \tilde{V}_4^{(5)} \right| \sin \left(\theta_{14}^{(5)} + \delta_4^{(5)} \right) \\
&= -201.98 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
I_{r,2}^{(5)} &= \sum_{j=1}^4 y_{2j}^{(5)} \left| \tilde{V}_j^{(5)} \right| \cos \left(\theta_{2j}^{(5)} + \delta_j^{(5)} \right) \\
&= y_{21}^{(5)} \left| \tilde{V}_1^{(5)} \right| \cos \left(\theta_{21}^{(5)} + \delta_1^{(5)} \right) + y_{22}^{(5)} \left| \tilde{V}_2^{(5)} \right| \cos \left(\theta_{22}^{(5)} + \delta_2^{(5)} \right) + y_{23}^{(5)} \left| \tilde{V}_3^{(5)} \right| \cos \left(\theta_{23}^{(5)} + \delta_3^{(5)} \right) \\
&\quad + y_{24}^{(5)} \left| \tilde{V}_4^{(5)} \right| \cos \left(\theta_{24}^{(5)} + \delta_4^{(5)} \right) \\
&= 0.000255 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
I_{i,2}^{(5)} &= \sum_{j=1}^4 y_{2j}^{(5)} \left| \tilde{V}_j^{(5)} \right| \sin \left(\theta_{2j}^{(5)} + \delta_j^{(5)} \right) \\
&= y_{21}^{(5)} \left| \tilde{V}_1^{(5)} \right| \sin \left(\theta_{21}^{(5)} + \delta_1^{(5)} \right) + y_{22}^{(5)} \left| \tilde{V}_2^{(5)} \right| \sin \left(\theta_{22}^{(5)} + \delta_2^{(5)} \right) + y_{23}^{(5)} \left| \tilde{V}_3^{(5)} \right| \sin \left(\theta_{23}^{(5)} + \delta_3^{(5)} \right) \\
&\quad + y_{24}^{(5)} \left| \tilde{V}_4^{(5)} \right| \sin \left(\theta_{24}^{(5)} + \delta_4^{(5)} \right) \\
&= -0.000620 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
I_{r,3}^{(5)} &= \sum_{j=1}^4 y_{3j}^{(5)} \left| \tilde{V}_j^{(5)} \right| \cos \left(\theta_{3j}^{(5)} + \delta_j^{(5)} \right) \\
&= y_{31}^{(5)} \left| \tilde{V}_1^{(5)} \right| \cos \left(\theta_{31}^{(5)} + \delta_1^{(5)} \right) + y_{32}^{(5)} \left| \tilde{V}_2^{(5)} \right| \cos \left(\theta_{32}^{(5)} + \delta_2^{(5)} \right) + y_{33}^{(5)} \left| \tilde{V}_3^{(5)} \right| \cos \left(\theta_{33}^{(5)} + \delta_3^{(5)} \right) \\
&\quad + y_{34}^{(5)} \left| \tilde{V}_4^{(5)} \right| \cos \left(\theta_{34}^{(5)} + \delta_4^{(5)} \right) \\
&= 0.000104 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
I_{i,3}^{(5)} &= \sum_{j=1}^4 y_{3j}^{(5)} \left| \tilde{V}_j^{(5)} \right| \sin \left(\theta_{3j}^{(5)} + \delta_j^{(5)} \right) \\
&= y_{31}^{(5)} \left| \tilde{V}_1^{(5)} \right| \sin \left(\theta_{31}^{(5)} + \delta_1^{(5)} \right) + y_{32}^{(5)} \left| \tilde{V}_2^{(5)} \right| \sin \left(\theta_{32}^{(5)} + \delta_2^{(5)} \right) + y_{33}^{(5)} \left| \tilde{V}_3^{(5)} \right| \sin \left(\theta_{33}^{(5)} + \delta_3^{(5)} \right) \\
&\quad + y_{34}^{(5)} \left| \tilde{V}_4^{(5)} \right| \sin \left(\theta_{34}^{(5)} + \delta_4^{(5)} \right) \\
&= 0.0000082 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
I_{r,4}^{(5)} + G_{r,4}^{(5)} &= \sum_{j=1}^4 y_{4j}^{(5)} \left| \tilde{V}_j^{(5)} \right| \cos \left(\theta_{4j}^{(5)} + \delta_j^{(5)} \right) + G_{r,4}^{(5)} \\
&= y_{41}^{(5)} \left| \tilde{V}_1^{(5)} \right| \cos \left(\theta_{41}^{(5)} + \delta_1^{(5)} \right) + y_{43}^{(5)} \left| \tilde{V}_3^{(5)} \right| \cos \left(\theta_{43}^{(5)} + \delta_3^{(5)} \right) \\
&\quad + y_{44}^{(5)} \left| \tilde{V}_4^{(5)} \right| \cos \left(\theta_{44}^{(5)} + \delta_4^{(5)} \right) + G_{r,4}^{(5)} = 0.2996 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
I_{i,4}^{(5)} + G_{i,4}^{(5)} &= \sum_{j=1}^4 y_{4j}^{(5)} \left| \tilde{V}_j^{(5)} \right| \sin \left(\theta_{4j}^{(5)} + \delta_j^{(5)} \right) + G_{i,4}^{(5)} \\
&= y_{41}^{(5)} \left| \tilde{V}_1^{(5)} \right| \sin \left(\theta_{41}^{(5)} + \delta_1^{(5)} \right) + y_{43}^{(5)} \left| \tilde{V}_3^{(5)} \right| \sin \left(\theta_{43}^{(5)} + \delta_3^{(5)} \right) + y_{44}^{(5)} \left| \tilde{V}_4^{(5)} \right| \sin \left(\theta_{44}^{(5)} + \delta_4^{(5)} \right) + G_{i,4}^{(5)} \\
&= -0.00325 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
I_{r,4}^{(1)} + G_{r,4}^{(1)} &= \sum_{j=1}^4 y_{4j}^{(1)} \left| \tilde{V}_j^{(1)} \right| \cos \left(\theta_{4j}^{(1)} + \delta_j^{(1)} \right) + G_{r,4}^{(1)} \\
&= y_{41}^{(1)} \left| \tilde{V}_1^{(1)} \right| \cos \left(\theta_{41}^{(1)} + \delta_1^{(1)} \right) + y_{43}^{(1)} \left| \tilde{V}_3^{(1)} \right| \cos \left(\theta_{43}^{(1)} + \delta_3^{(1)} \right) + y_{44}^{(1)} \left| \tilde{V}_4^{(1)} \right| \cos \left(\theta_{44}^{(1)} + \delta_4^{(1)} \right) + G_{r,4}^{(1)} \\
&= 0.0027 \text{ pu}
\end{aligned}$$

$$\begin{aligned}
I_{i,4}^{(1)} + G_{i,4}^{(1)} &= \sum_{j=1}^4 y_{4j}^{(1)} \left| \tilde{V}_j^{(1)} \right| \sin \left(\theta_{4j}^{(1)} + \delta_j^{(1)} \right) + G_{i,4}^{(1)} \\
&= y_{41}^{(1)} \left| \tilde{V}_1^{(1)} \right| \sin \left(\theta_{41}^{(1)} + \delta_1^{(1)} \right) + y_{43}^{(1)} \left| \tilde{V}_3^{(1)} \right| \sin \left(\theta_{43}^{(1)} + \delta_3^{(1)} \right) + y_{44}^{(1)} \left| \tilde{V}_4^{(1)} \right| \sin \left(\theta_{44}^{(1)} + \delta_4^{(1)} \right) + G_{i,4}^{(1)} \\
&= -0.0054 \text{ pu}
\end{aligned}$$

The mismatch vector $\Delta \bar{M}^0$ is now

$$\begin{aligned}
\Delta \bar{M}^0 &= \left(\Delta \bar{W}, \Delta \bar{I}^{(5)}, \Delta \bar{I}^{(1)} \right)^t \\
&= \left(P_2^{(1)} + F_{r,2}^{(1)}, Q_2^{(1)} + F_{i,2}^{(1)}, P_3^{(1)} + F_{r,3}^{(1)}, Q_3^{(1)} + F_{i,3}^{(1)}, P_4^t + F_{r,4}^{(1)} + F_{r,4}^{(5)}, Q_4^t + F_{i,4}^{(1)} \right. \\
&\quad \left. + F_{i,4}^{(5)}, I_{r,1}^{(5)}, I_{i,1}^{(5)}, I_{r,2}^{(5)}, I_{i,2}^{(5)}, I_{r,3}^{(5)}, I_{i,3}^{(5)}, I_{r,4}^{(5)} + G_{r,4}^{(5)}, I_{i,4}^{(5)} + G_{i,4}^{(5)}, I_{r,4}^{(1)} + G_{r,4}^{(1)}, I_{i,4}^{(1)} + G_{i,4}^{(1)} \right)^t
\end{aligned}$$

or

$$\begin{aligned}
\Delta \bar{M}^0 &= (-0.0170, 0.083, -0.00325, 0.00192, 0.037, -0.188, 0.201, -201.98, 0.000255, \\
&\quad -0.000620, 0.000104, 0.0000082, 0.2996, -0.00325, 0.0027, -0.0054)^t
\end{aligned}$$

Note that for a mismatch residual of 0.0001 pu the solution has not converged yet.

8.4.10 Application Example 8.17: Evaluation of fundamental and harmonic Jacobian submatrices

Using the results of Application Examples 8.15 and 8.16, evaluate the Jacobian matrix for the system of Fig. E8.14.1.

Solution to Application Example 8.17: Evaluation of fundamental and harmonic Jacobian submatrices.

Step #4 of harmonic load flow. The matrix equation shown below makes it easy to identify the entries of the Jacobian matrix:

$$\bar{J}^0 = \begin{bmatrix} \underbrace{\delta_2^{(1)}}_{\downarrow} & \underbrace{\tilde{V}_2^{(1)}}_{\downarrow} & \underbrace{\delta_3^{(1)}}_{\downarrow} & \underbrace{\tilde{V}_3^{(1)}}_{\downarrow} & \underbrace{\delta_4^{(1)}}_{\downarrow} & \underbrace{\tilde{V}_4^{(1)}}_{\downarrow} & \underbrace{\delta_1^{(5)}}_{\downarrow} & \underbrace{\tilde{V}_1^{(5)}}_{\downarrow} & \underbrace{\delta_2^{(5)}}_{\downarrow} & \underbrace{\tilde{V}_2^{(5)}}_{\downarrow} & \underbrace{\delta_3^{(5)}}_{\downarrow} & \underbrace{\tilde{V}_3^{(5)}}_{\downarrow} & \underbrace{\delta_4^{(5)}}_{\downarrow} & \underbrace{\tilde{V}_4^{(5)}}_{\downarrow} & \underbrace{\alpha}_{\downarrow} & \underbrace{\beta}_{\downarrow} & \text{variables} \\ J_{1,1}^0 & J_{1,2}^0 & J_{1,3}^0 & J_{1,4}^0 & J_{1,5}^0 & J_{1,6}^0 & J_{1,7}^0 & J_{1,8}^0 & J_{1,9}^0 & J_{1,10}^0 & J_{1,11}^0 & J_{1,12}^0 & J_{1,13}^0 & J_{1,14}^0 & J_{1,15}^0 & J_{1,16}^0 & \leftarrow \Delta P_2^{(1)} \\ J_{2,1}^0 & J_{2,2}^0 & J_{2,3}^0 & J_{2,4}^0 & J_{2,5}^0 & J_{2,6}^0 & J_{2,7}^0 & J_{2,8}^0 & J_{2,9}^0 & J_{2,10}^0 & J_{2,11}^0 & J_{2,12}^0 & J_{2,13}^0 & J_{2,14}^0 & J_{2,15}^0 & J_{2,16}^0 & \leftarrow \Delta Q_2^{(1)} \\ J_{3,1}^0 & J_{3,2}^0 & J_{3,3}^0 & J_{3,4}^0 & J_{3,5}^0 & J_{3,6}^0 & J_{3,7}^0 & J_{3,8}^0 & J_{3,9}^0 & J_{3,10}^0 & J_{3,11}^0 & J_{3,12}^0 & J_{3,13}^0 & J_{3,14}^0 & J_{3,15}^0 & J_{3,16}^0 & \leftarrow \Delta P_3^{(1)} \\ J_{4,1}^0 & J_{4,2}^0 & J_{4,3}^0 & J_{4,4}^0 & J_{4,5}^0 & J_{4,6}^0 & J_{4,7}^0 & J_{4,8}^0 & J_{4,9}^0 & J_{4,10}^0 & J_{4,11}^0 & J_{4,12}^0 & J_{4,13}^0 & J_{4,14}^0 & J_{4,15}^0 & J_{4,16}^0 & \leftarrow \Delta Q_3^{(1)} \\ J_{5,1}^0 & J_{5,2}^0 & J_{5,3}^0 & J_{5,4}^0 & J_{5,5}^0 & J_{5,6}^0 & J_{5,7}^0 & J_{5,8}^0 & J_{5,9}^0 & J_{5,10}^0 & J_{5,11}^0 & J_{5,12}^0 & J_{5,13}^0 & J_{5,14}^0 & J_{5,15}^0 & J_{5,16}^0 & \leftarrow \Delta P_4^t \\ J_{6,1}^0 & J_{6,2}^0 & J_{6,3}^0 & J_{6,4}^0 & J_{6,5}^0 & J_{6,6}^0 & J_{6,7}^0 & J_{6,8}^0 & J_{6,9}^0 & J_{6,10}^0 & J_{6,11}^0 & J_{6,12}^0 & J_{6,13}^0 & J_{6,14}^0 & J_{6,15}^0 & J_{6,16}^0 & \leftarrow \Delta Q_4^t \\ J_{7,1}^0 & J_{7,2}^0 & J_{7,3}^0 & J_{7,4}^0 & J_{7,5}^0 & J_{7,6}^0 & J_{7,7}^0 & J_{7,8}^0 & J_{7,9}^0 & J_{7,10}^0 & J_{7,11}^0 & J_{7,12}^0 & J_{7,13}^0 & J_{7,14}^0 & J_{7,15}^0 & J_{7,16}^0 & \leftarrow \Delta I_{r,1}^{(5)} \\ J_{8,1}^0 & J_{8,2}^0 & J_{8,3}^0 & J_{8,4}^0 & J_{8,5}^0 & J_{8,6}^0 & J_{8,7}^0 & J_{8,8}^0 & J_{8,9}^0 & J_{8,10}^0 & J_{8,11}^0 & J_{8,12}^0 & J_{8,13}^0 & J_{8,14}^0 & J_{8,15}^0 & J_{8,16}^0 & \leftarrow \Delta I_{i,1}^{(5)} \\ J_{9,1}^0 & J_{9,2}^0 & J_{9,3}^0 & J_{9,4}^0 & J_{9,5}^0 & J_{9,6}^0 & J_{9,7}^0 & J_{9,8}^0 & J_{9,9}^0 & J_{9,10}^0 & J_{9,11}^0 & J_{9,12}^0 & J_{9,13}^0 & J_{9,14}^0 & J_{9,15}^0 & J_{9,16}^0 & \leftarrow \Delta I_{r,2}^{(5)} \\ J_{10,1}^0 & J_{10,2}^0 & J_{10,3}^0 & J_{10,4}^0 & J_{10,5}^0 & J_{10,6}^0 & J_{10,7}^0 & J_{10,8}^0 & J_{10,9}^0 & J_{10,10}^0 & J_{10,11}^0 & J_{10,12}^0 & J_{10,13}^0 & J_{10,14}^0 & J_{10,15}^0 & J_{10,16}^0 & \leftarrow \Delta I_{i,2}^{(5)} \\ J_{11,1}^0 & J_{11,2}^0 & J_{11,3}^0 & J_{11,4}^0 & J_{11,5}^0 & J_{11,6}^0 & J_{11,7}^0 & J_{11,8}^0 & J_{11,9}^0 & J_{11,10}^0 & J_{11,11}^0 & J_{11,12}^0 & J_{11,13}^0 & J_{11,14}^0 & J_{11,15}^0 & J_{11,16}^0 & \leftarrow \Delta I_{r,3}^{(5)} \\ J_{12,1}^0 & J_{12,2}^0 & J_{12,3}^0 & J_{12,4}^0 & J_{12,5}^0 & J_{12,6}^0 & J_{12,7}^0 & J_{12,8}^0 & J_{12,9}^0 & J_{12,10}^0 & J_{12,11}^0 & J_{12,12}^0 & J_{12,13}^0 & J_{12,14}^0 & J_{12,15}^0 & J_{12,16}^0 & \leftarrow \Delta I_{i,3}^{(5)} \\ J_{13,1}^0 & J_{13,2}^0 & J_{13,3}^0 & J_{13,4}^0 & J_{13,5}^0 & J_{13,6}^0 & J_{13,7}^0 & J_{13,8}^0 & J_{13,9}^0 & J_{13,10}^0 & J_{13,11}^0 & J_{13,12}^0 & J_{13,13}^0 & J_{13,14}^0 & J_{13,15}^0 & J_{13,16}^0 & \leftarrow \Delta I_{r,4}^{(5)} \\ J_{14,1}^0 & J_{14,2}^0 & J_{14,3}^0 & J_{14,4}^0 & J_{14,5}^0 & J_{14,6}^0 & J_{14,7}^0 & J_{14,8}^0 & J_{14,9}^0 & J_{14,10}^0 & J_{14,11}^0 & J_{14,12}^0 & J_{14,13}^0 & J_{14,14}^0 & J_{14,15}^0 & J_{14,16}^0 & \leftarrow \Delta I_{i,4}^{(5)} \\ J_{15,1}^0 & J_{15,2}^0 & J_{15,3}^0 & J_{15,4}^0 & J_{15,5}^0 & J_{15,6}^0 & J_{15,7}^0 & J_{15,8}^0 & J_{15,9}^0 & J_{15,10}^0 & J_{15,11}^0 & J_{15,12}^0 & J_{15,13}^0 & J_{15,14}^0 & J_{15,15}^0 & J_{15,16}^0 & \leftarrow \Delta I_{r,4}^{(1)} \\ J_{16,1}^0 & J_{16,2}^0 & J_{16,3}^0 & J_{16,4}^0 & J_{16,5}^0 & J_{16,6}^0 & J_{16,7}^0 & J_{16,8}^0 & J_{16,9}^0 & J_{16,10}^0 & J_{16,11}^0 & J_{16,12}^0 & J_{16,13}^0 & J_{16,14}^0 & J_{16,15}^0 & J_{16,16}^0 & \leftarrow \Delta I_{i,4}^{(1)} \end{bmatrix}$$

The top row, which is not part of the Jacobian, lists the variables:

$$\delta_2^{(1)}, \left| \tilde{V}_2^{(1)} \right|, \delta_3^{(1)}, \left| \tilde{V}_3^{(1)} \right|, \delta_4^{(1)}, \left| \tilde{V}_4^{(1)} \right|, \delta_1^{(5)}, \left| \tilde{V}_1^{(5)} \right|, \delta_2^{(5)}, \left| \tilde{V}_2^{(5)} \right|, \delta_3^{(5)}, \left| \tilde{V}_3^{(5)} \right|, \delta_4^{(5)}, \left| \tilde{V}_4^{(5)} \right|, \alpha, \beta$$

and the right-hand side column, which is not part of the Jacobian, lists the mismatch quantities that must be satisfied:

$$\left[\Delta P_2^{(1)}, \Delta Q_2^{(1)}, \Delta P_3^{(1)}, \Delta Q_3^{(1)}, \Delta P_4^t, \Delta Q_4^t, \Delta I_{r,1}^{(5)}, \Delta I_{i,1}^{(5)}, \Delta I_{r,2}^{(5)}, \Delta I_{i,2}^{(5)}, \Delta I_{r,3}^{(5)}, \Delta I_{i,3}^{(5)}, \Delta I_{r,4}^{(5)}, \Delta I_{i,4}^{(5)}, \Delta I_{r,4}^{(1)}, \Delta I_{i,4}^{(1)} \right]^t$$

These two identifications help in defining the partial derivatives of the Jacobian. For example,

$$\begin{aligned} J_{3,5}^0 &= \frac{\partial(\Delta P_3^{(1)})}{\partial(\delta_4^{(1)})}, & J_{3,10}^0 &= \frac{\partial(\Delta P_3^{(1)})}{\partial(\Delta V_2^{(5)})} \\ J_{8,5}^0 &= \frac{\partial(\Delta I_{i,1}^{(5)})}{\partial(\delta_4^{(1)})}, & J_{8,10}^0 &= \frac{\partial(\Delta I_{i,1}^{(5)})}{\partial(\Delta V_2^{(5)})} \\ J_{9,11}^0 &= \frac{\partial(\Delta I_{r,2}^{(5)})}{\partial(\delta_3^{(5)})}, & \text{and} & \quad J_{12,16}^0 = \frac{\partial(\Delta I_{i,3}^{(5)})}{\partial(\beta)} \end{aligned}$$

In the solution below submatrices are defined, which is an alternative way of defining the Jacobian entries.

Step #4 of harmonic load flow (continued). Evaluate the Jacobian matrix $\bar{J}$ and compute $\Delta \bar{U}^0$. The Jacobian matrix has the following form ($\bar{0}_{n \times m}$ denotes an n by m zero submatrix with zero entries, where $\bar{0}_{12,2} \equiv \bar{0}_{6,2} + \bar{0}_{6,2}$):

$$\bar{J} = \begin{bmatrix} \bar{J}^{(1)} & \bar{J}^{(5)} & \bar{0}_{12,2} \\ \bar{G}^{(5,1)} & \bar{Y}^{(5,5)} + \bar{G}^{(5,5)} & \bar{H}^{(5)} \\ \bar{Y}^{(1,1)} + \bar{G}^{(1,1)} & \bar{G}^{(1,5)} & \bar{H}^{(1)} \end{bmatrix}$$

The Jacobian submatrix for the fundamental is

$$\bar{J}^{(1)} = \begin{bmatrix} 61.68 & 52.932 & -11.764 & -2.944 & 0 & 0 \\ -52.94 & 61.945 & 2.944 & -11.764 & 0 & 0 \\ -11.764 & -2.944 & 51.772 & 22.917 & -40.0076 & -19.98 \\ 2.944 & -11.764 & -22.926 & 51.773 & 19.982 & -40.0076 \\ 0 & 0 & -40.0076 & -19.982 & 80.015 & 39.961 \\ 0 & 0 & 19.982 & -40.0076 & -39.963 & 80 \end{bmatrix}$$

The Jacobian submatrix for the 5th harmonic is

$$\bar{J}^{(5)} = \begin{bmatrix} 0 & 0 & 0 & \bar{0}_{4 \times 8} & 0 & 0 & 0 & 0 \\ -0.099 & -0.099 & 0 & 0 & -0.099 & -0.09 & 0.198 & 0.198 \\ 0.010 & -0.099 & 0 & 0 & 0.010 & -0.99 & -0.020 & 1.98 \end{bmatrix}$$

Also

$$\bar{Y}^{(1,1)} = \begin{bmatrix} 0 & 0 & -39.889 & -19.89 & 79.81 & 39.73 \\ 0 & 0 & -19.81 & 40.06 & 39.56 & -80.14 \end{bmatrix}$$

$$\bar{Y}^{(5,5)} = \begin{bmatrix} 202.91 & 4.84 & -1.92 & -3.85 & 0 & 0 & -0.99 & -0.99 \\ 0.48 & -2029.1 & -0.39 & 19.23 & 0 & 0 & -0.10 & 9.90 \\ -1.92 & -3.846 & 2.17 & 3.97 & -0.25 & -0.13 & 0 & 0 \\ -0.39 & 19.23 & 0.40 & -21.73 & -0.01 & 2.45 & 0 & 0 \\ 0 & 0 & -0.25 & -0.13 & 1.24 & 1.12 & -0.99 & -0.99 \\ 0 & 0 & -0.01 & 2.49 & 0.11 & -12.40 & -0.10 & 9.90 \\ -0.99 & -0.99 & 0 & 0 & -0.99 & -0.99 & 1.98 & 1.98 \\ -0.01 & 9.90 & 0 & 0 & -0.01 & 9.90 & 0.20 & -19.80 \end{bmatrix}$$

In this example, $\bar{H}^{(1)}$ and $\bar{H}^{(5)}$ are zero submatrices since there are no nonlinear device variables defined for the system of Fig. E8.14.1. However, setting $\bar{H}^{(1)}$ and $\bar{H}^{(5)}$ to zero introduces two columns of zeros in the Jacobian matrix, which makes it singular. In order to avoid this situation, $\bar{H}^{(1)}$ and $\bar{H}^{(5)}$ are set to random matrices. Note that the solution does not depend on the values of these submatrices.

In order to compute $\bar{G}^{(1,1)}$ and $\bar{G}^{(1,5)}$, we need to differentiate $G_{r,4}^{(1)}$ and $G_{i,4}^{(1)}$ as follows:

$$\frac{\partial G_{r,4}^{(1)}}{\partial \delta_4^{(1)}} = \frac{P_4^{(1)} \cos \gamma_4^{(1)} \tan(\delta_4^{(1)} - \gamma_4^{(1)})}{V_4^{(1)} \cos(\delta_4^{(1)} - \gamma_4^{(1)})} = 0.1002$$

$$\frac{\partial G_{r,4}^{(1)}}{\partial V_4^{(1)}} = -\frac{P_4^{(1)} \cos \gamma_4^{(1)}}{(V_4^{(1)})^2 \cos(\delta_4^{(1)} - \gamma_4^{(1)})} = -0.2517$$

$$\frac{\partial G_{i,4}^{(1)}}{\partial \delta_4^{(1)}} = \frac{P_4^{(1)} \sin \gamma_4^{(1)} \tan(\delta_4^{(1)} - \gamma_4^{(1)})}{V_4^{(1)} \cos(\delta_4^{(1)} - \gamma_4^{(1)})} = -0.0405$$

$$\frac{\partial G_{i,4}^{(1)}}{\partial V_4^{(1)}} = -\frac{P_4^{(1)} \sin \gamma_4^{(1)}}{\left(V_4^{(1)}\right)^2 \cos \left(\delta_4^{(1)} - \gamma_4^{(1)}\right)} = 0.102$$

The partial derivatives of $G_{r,4}^{(1)}$ and $G_{i,4}^{(1)}$ with respect to $V_4^{(5)}$ and $\delta_4^{(5)}$ are zero. Therefore, $\bar{G}^{(1,5)}$ is a 2×8 submatrix of zeros and

$$\bar{G}^{(11)} = \begin{bmatrix} & 0.1002 & -0.2517 \\ \bar{0}_{2 \times 6} & & \\ & -0.0405 & 0.102 \end{bmatrix}$$

In order to compute $\bar{G}^{(5,1)}$ and $\bar{G}^{(5,5)}$, we need to differentiate $\bar{G}_{r,4}^{(5)}$ and $\bar{G}_{i,4}^{(5)}$ as follows:

$$\frac{\partial G_{r,4}^{(5)}}{\partial \delta_4^{(1)}} = -0.9 \left(V_4^{(1)}\right)^3 \sin \left(3\delta_4^{(1)}\right) = 0.00896$$

$$\frac{\partial G_{r,4}^{(5)}}{\partial V_4^{(1)}} = 0.9 \left(V_4^{(1)}\right)^2 \cos \left(3\delta_4^{(1)}\right) = 0.893$$

$$\frac{\partial G_{i,4}^{(5)}}{\partial \delta_4^{(1)}} = 0.9 \left(V_4^{(1)}\right)^3 \cos \left(3\delta_4^{(1)}\right) = 0.8894$$

$$\frac{\partial G_{i,4}^{(5)}}{\partial V_4^{(1)}} = 0.9 \left(V_4^{(1)}\right)^2 \sin \left(3\delta_4^{(1)}\right) = -0.009$$

Also

$$\frac{\partial G_{r,4}^{(5)}}{\partial \delta_4^{(5)}} = -0.9 \left(V_4^{(5)}\right)^2 \sin \left(3\delta_4^{(5)}\right) = 0.00$$

$$\frac{\partial G_{r,4}^{(5)}}{\partial V_4^{(5)}} = 0.6 V_4^{(5)} \cos \left(3\delta_4^{(5)}\right) = 0.06$$

$$\frac{\partial G_{i,4}^{(5)}}{\partial \delta_4^{(5)}} = 0.9 \left(V_4^{(5)}\right)^2 \cos \left(3\delta_4^{(5)}\right) = 0.009$$

$$\frac{\partial G_{i,4}^{(5)}}{\partial V_4^{(5)}} = 0.6 V_4^{(5)} \sin \left(3\delta_4^{(5)}\right) = 0.00$$

Therefore,

$$\bar{G}^{(5, 1)} = \begin{bmatrix} 0 & \bar{0}_{6 \times 8} & 0 & 0 \\ 0 & 0 & 0.00896 & 0.893 \\ \bar{0}_{2 \times 6} & 0 & 0 & 0 \\ 0 & 0 & 0.8894 & -0.009 \end{bmatrix}$$

$$\bar{G}^{(5, 5)} = \begin{bmatrix} 0 & \bar{0}_{6 \times 8} & 0 & 0 \\ 0 & 0 & 0 & 0.06 \\ \bar{0}_{2 \times 6} & 0 & 0 & 0 \\ 0 & 0 & 0.009 & 0 \end{bmatrix}$$

The Jacobian matrix is

$$\begin{bmatrix} -61.57 & 52.71 & -11.70 & -2.90 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ -52.79 & 61.52 & 2.89 & -11.74 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ -11.69 & -2.69 & 51.37 & 22.86 & -39.71 & -19.90 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 2.95 & -11.72 & -22.77 & 51.58 & 19.82 & -39.87 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 \\ 0 & 0 & -39.66 & -19.94 & 79.45 & 39.59 & -0.099 & -0.099 & 0 & 0 & -0.099 & -0.099 & 0.198 & 0.198 & 0 & 0 \\ 0 & 0 & 19.86 & -39.83 & -39.93 & 79.58 & 0.010 & -0.99 & 0 & 0 & 0.010 & -0.99 & -0.020 & 1.98 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 202.9 & 4.84 & -1.92 & -3.85 & 0 & 0 & -0.99 & -0.99 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0.48 & -2029 & -0.39 & 19.23 & 0 & 0 & -0.10 & 9.90 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & -1.92 & -3.846 & 2.17 & 3.97 & -0.25 & -0.13 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & -0.39 & 19.23 & 0.40 & -21.73 & -0.01 & 2.45 & 0 & 0 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & -0.25 & -0.13 & 1.24 & 1.12 & -0.99 & -0.99 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & -0.01 & 2.49 & 0.11 & -12.40 & -0.10 & 9.90 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0.009 & 0.893 & -0.99 & -0.99 & 0 & 0 & -0.99 & -0.99 & 1.98 & 2.04 & 0 & 0 \\ 0 & 0 & 0 & 0 & 0.889 & -0.009 & -0.01 & 9.90 & 0 & 0 & -0.01 & 9.90 & 0.201 & -19.80 & 0 & 0 \\ 0 & 0 & -39.89 & -19.89 & 79.91 & 39.48 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 1 & 2 \\ 0 & 0 & -19.81 & 40.06 & 39.81 & -80.04 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 3 & 4 \end{bmatrix}$$

8.4.11 Application Example 8.18: Computation of the correction bus vector and convergence of harmonic power flow

Using the results of Application Examples 8.15–8.17, evaluate the correction bus vector $\Delta \bar{U}^0$ for the system of Fig. E8.14.1. Update the mismatch vector and comment on the convergence of the harmonic load flow.

Solution to Application Example 8.18: Computation of the correction bus vector and convergence of harmonic power flow.

Step #5 of harmonic load flow. Evaluate $\Delta \bar{U}^0$ and update $\bar{U}^0$ to become $\bar{U}^1$. The correction bus vector $\Delta \bar{U}^0$ is computed as follows:

$$\Delta \bar{U}^0 = (\bar{J}^0)^{-1} \begin{bmatrix} 3.43472E-6 \\ -1.33365E-6 \\ -7.62939E-6 \\ -3.81470E-6 \\ 2.99421E-2 \\ 2.97265E-4 \\ 4.217029E-6 \\ -200.0 \\ -4.09782E-8 \\ 2.384186E-7 \\ -1.93715E-7 \\ -5.960464E-8 \\ 0.29935 \\ -3.03515E-3 \\ -1.78814E-7 \\ 8.86619E-7 \end{bmatrix} = \begin{bmatrix} 1.20815E-6 \\ -8.59742E-7 \\ 9.552948E-6 \\ 1.54111E-6 \\ 1.184274E-5 \\ 2.3572E-6 \\ 1.46588E-3 \\ 0.10000228 \\ 2.38763E-2 \\ 0.1005407 \\ 0.2042002 \\ 0.1021379 \\ 0.249194 \\ 0.1027635 \\ -- \\ -- \end{bmatrix}$$

The updated bus vector is (Eq. 8.93)

$$\begin{aligned} \bar{U}^1 &= \bar{U}^0 - \Delta \bar{U}^0 \\ &= \left(\delta_2^{(1)}, |V_2^{(1)}|, \delta_3^{(1)}, |V_3^{(1)}|, \delta_4^{(1)}, |V_4^{(1)}|, \delta_1^{(5)}, |V_1^{(5)}|, \delta_2^{(5)}, |V_2^{(5)}|, \delta_3^{(5)}, |V_3^{(5)}|, \delta_4^{(5)}, |V_4^{(5)}|, \alpha_4, \beta_4 \right)^t \\ &= (-2.68332E-4, 0.99759, -2.80029E-3, 0.99640, -3.4257E-3, 0.99594, -1.465844E-3, \\ &\quad -2.28E-6, -2.38763E-2, -5.407E-4, -0.2042, -2.138E-3, -0.24919, -2.7635E \\ &\quad -3, 0, 0)^t \end{aligned}$$

Note that all harmonic voltage magnitudes are negative (e.g., $|V_1^{(5)}| = -2.28E-6$, $|V_2^{(5)}| = -5.407E-4$, $|V_3^{(5)}| = -2.138E-3$, and $|V_4^{(5)}| = -2.7635E-3$). To prevent negative magnitudes, the corresponding phase angles are shifted by π radians. That is:

- $|V_1^{(5)}| = -2.28E-6$, $\delta_1^{(5)} = \pi - 1.465844E-3 = 3.14013$,
- $|V_2^{(5)}| = -5.407E-4$, $\delta_2^{(5)} = \pi - 2.38763E-2 = 3.11772$,
- $|V_3^{(5)}| = -2.138E-3$, $\delta_3^{(5)} = \pi - 0.2042 = 2.93738$, and
- $|V_4^{(5)}| = -2.7635E-3$, $\delta_4^{(5)} = \pi - 0.24919 = 2.89239$.

Therefore,

$$\bar{U}^1 = (-2.68332E-4, 0.99759, -2.80029E-3, 0.99640, -3.4257E-3, 0.99594, 3.14013, 2.28E-6, 3.11772, 5.407E-4, 2.93738, 2.138E-3, 2.89239, 2.7635E-3, 0, 0)^t.$$

The new (updated) nonlinear device currents are $G_{r,4}^{(1)} = 0.256629$, $G_{i,4}^{(1)} = -0.1011142$, $G_{r,4}^{(5)} = 0.2965726$ and $G_{i,4}^{(5)} = -2.59613E-3$. The new (updated) mismatch vector is

$$\Delta \bar{W}^1 = (5.342E-6, -3.800E-7, 5.722E-6, 3.815E-6, -1.403E-3, 4.332E-4, -2.269E-3, -3.300E-2, -2.677E-3, 6.475E-3, -1.021E-3, -2.105E-3, 0.3023, 3.015E-2, -6.264E-4, -1.473E-4)^t.$$

This mismatch vector is not small enough and the solution has not converged. However, the iterative procedure will converge in eight iterations. The final solution is (all magnitudes are in percentage of the base values and all angles are in degrees):

Fundamental power flow output solution (Fig. E8.14.1):

	Bus voltage		Bus generation (G) and load (L) powers					Line power ^a	
	V	δ	P_G	Q_G	P_L	Q_L		P_{line}	Q_{line}
From bus	(%)	(°)	(%)	(%)	(%)	(%)	To bus	(%)	(%)
1	100.0	0.00	35.16	20.90	0.00	0.00	2	13.35	10.81
							4	21.81	10.09
2	99.76	-0.01	0.00	0.00	10.00	10.00	1	-13.33	-10.78
							3	3.32	0.78
3	99.64	-0.16	0.00	0.00	0.00	0.00	2	-3.32	-0.77
							4	3.32	0.77
4	99.58	-0.19	0.00	0.00	25.00	10.00	3	-3.32	-0.77
							1	-21.75	-9.98

^a Fundamental active and reactive powers in the line between "from bus" and "to bus."

HPF output solution for harmonic number 5, frequency = 300 Hz (Fig. E8.14.1):

Bus voltage			Line power ^a		Line current ^a	
	$ V $	δ				
From bus	(%)	(°)	To bus	(%)	(%)	(°)
1	0.0148	−90.57	2	0.000015	−0.000675	4.563896
			4	−0.000015	−0.003707	25.042787
			Neutral shunt	0.000000	0.004382	29.605302
2	0.2472	−102.44	1	0.002067	0.011090	4.563896
			3	−0.002067	−0.011090	4.563895
3	2.0731	−95.66	2	0.006233	0.094407	4.563895
			4	−0.006233	−0.094406	4.563865
4	2.5315	−96.01	3	0.008315	0.115235	4.563865
			1	0.062730	0.630848	25.042787
			Neutral nonlinear	−0.071046	−0.746085	29.605308

^a Harmonic power/current in the line between “from bus” and “to bus.”

Total current/power:

		Line current				Line power			
		Fundamental value	rms value	Peak value	THD _i (%)	P (%)	Q (%)	D (%)	S (%)
From bus	To bus	(%)	(%)	(%)					
1	2	17.18	17.78	19.26	0.9665	13.35	10.81	4.57	17.78
1	4	24.03	34.71	46.94	0.6923	21.81	10.09	25.04	34.71
2	1	17.18	17.78	19.26	0.9665	−13.32	−10.77	4.59	17.73
2	3	3.42	5.70	7.90	0.6000	3.32	0.77	4.56	5.69
3	2	3.42	5.70	7.90	0.6000	−3.32	−0.68	4.57	5.69
3	4	3.42	5.71	7.90	0.6000	3.32	0.68	4.57	5.69
4	3	3.42	5.71	7.90	0.6000	−3.31	−0.65	4.57	5.69
4	1	24.03	34.71	46.94	0.6923	−21.69	−9.35	25.25	34.57
4	Neutral nonlinear	27.04	40.09	54.76	0.6744	24.93	9.25	29.80	39.94

Bus voltage summary:

Bus number	Fundamental value (%)	rms value (%)	Peak value (%)	THD _v (%)
1	100.00	100.00	100.00	1.0000
2	99.76	99.76	99.71	1.0000
3	99.63	99.65	99.97	0.9998
4	99.58	99.61	100.11	0.9997

8.5 Classification of harmonic power flow techniques

Different approaches have been proposed and implemented to solve the HPF problem [6–29]. In this section, the following criteria will be employed to classify some of these algorithms:

- Modeling techniques used to simulate power system and nonlinear loads (time domain, harmonic domain).
- System conditions (single-phase, three-phase, balanced, unbalanced).
- Solution approaches (coupled, decoupled).

Modeling techniques include time-domain, harmonic-domain and hybrid time/harmonic-domain approaches. Time-domain approaches are based on transient analysis and have great flexibility and high accuracy; however, they usually require long computing times (especially for large power systems containing many nonlinear loads with strong harmonic couplings). Harmonic-domain approaches calculate the frequency response of power systems and require shorter computing times; however, it is usually difficult to obtain accurate frequency models for nonlinear loads [13]. Hybrid modeling techniques use a combination of frequency-domain (to limit the computing time) and time-domain (to increase the accuracy) approaches to simulate the power system and nonlinear loads, respectively [9,14]. Therefore, comprehensive hybrid models are employed to achieve the benefits of the accuracy of the time-domain analysis and the simplicity of frequency-domain approach.

It is sufficient to use single-phase harmonic models for single-phase and balanced three-phase systems. Unbalanced harmonic conditions are usually imposed by the system configuration, disturbances, and (non)linear loads. Unbalanced HPF solutions are relatively complicated and require long computing times and considerable memory storage.

Solution approaches may also be classified into coupled and decoupled methods [12]. Most nonlinear loads and power system components impose couplings between (time and/or space) harmonics and call for accurate coupled solution approaches. If harmonic couplings are not too strong, a decoupled approach may be implemented where separate models are used at different harmonic frequencies and superposition is employed to calculate the final solution.

Based on the above-mentioned criteria, HPF algorithms can be classified as follows:

- Newton-based coupled HPF as outlined in Section 8.4 [6].

- Decoupled HPF [16,17,19].
- Fast HPF [17].
- Modified fast decoupled power flow [20].
- Fuzzy HPF [13].
- Probabilistic HPF [12,22].
- Modular HPF [9,11,14,23].

Table 8.3 presents a comparison of HPF algorithms. The remainder of this chapter briefly outlines the solution procedure of these algorithms.

8.5.1 Decoupled harmonic power flow

The Newton-based HPF of Section 8.4 is very accurate because harmonic couplings are included at all frequencies. However, it might encounter convergence problems for large power systems with many nonlinear loads. For such applications, a decoupled approach is more appropriate.

At the fundamental frequency, the conventional power flow algorithm (Section 8.3) is used to model the system. At higher frequencies, harmonic couplings are neglected (to simplify the procedure, to reduce computing time, and to limit memory storage requirements) and the distorted power system is modeled by the harmonic admittance matrix. The general model of a linear load consisting of a resistance in parallel with a reactance is utilized [7,8], and nonlinear loads are modeled with decoupled harmonic current sources. The magnitudes and phase angles of harmonic current sources depend on the nature of the nonlinear loads and can be computed using analytical models or may be estimated based on measured nonsinusoidal current waveforms. This simple approach of nonlinear load modeling is very practical for most industrial loads.

The h th harmonic load admittance at bus i ($y_i^{(h)}$), shunt capacitor admittance at bus i ($y_{ci}^{(h)}$) and feeder admittance between buses i and $(i+1)$ ($y_{i,i+1}^{(h)}$) are [7,8,16,18,19]. Note that the tilde ($\sim$) is omitted in this part of the chapter.

$$y_i^{(h)} = \frac{P}{|V_i^{(1)}|^2} - j \frac{Q}{h |V_i^{(1)}|^2} \quad (8.125)$$

$$y_{ci}^{(h)} = h y_{ci}^{(1)} \quad (8.126)$$

$$y_{i,i+1}^{(h)} = \frac{1}{R_{i,i+1} + jhX_{i,i+1}} \quad (8.127)$$

where P_i and Q_i are the fundamental active and reactive load powers at bus i , $y_{ci}^{(1)}$ is the fundamental frequency admittance of the capacitor bank connected to bus i , and the superscript h indicates harmonic orders.

Nonlinear loads are modeled as decoupled harmonic current sources that inject harmonic currents into the system. The fundamental and the h th harmonic currents of the nonlinear load installed at bus m with fundamental real power P_m and fundamental reactive power Q_m are [8,16,19].

TABLE 8.3 Classification and comparison of harmonic power flow algorithms.

Method	Modeling technique						Solution approach		System condition	
	For the system			For nonlinear loads						
	Time	Frequency	Hybrid	Time	Frequency	Hybrid	Coupled	Decoupled	Balanced	Unbalanced
Newton HPF ^a		×			×	×	×		×	
Decoupled HPF		×			×			×	×	+
Fast HPF		×			×			×	×	×
Modified fast HPF		×			×		×	×	×	
Fuzzy HPF		×		×	×	×	×		×	
Probabilistic HPF		×		×	×	×	×		×	
Modular HPF	×	×	×	×	×	×	×		×	×

^a [Section 8.4](#).

+: The HPF algorithm may be modified to include this feature.

$$I_m^{(1)} = \left[P_m + jQ_m / V_m^{(1)} \right]^* \quad (8.128)$$

$$I_m^{(h)} = C(h) I_m^{(1)} \quad (8.129)$$

where $C(h)$ is the ratio of the h th harmonic current to its fundamental value. A conventional (fundamental) Newton-Raphson algorithm (Section 8.3) is used to solve the system at the fundamental frequency and harmonic voltages are calculated by solving the following decoupled load flow equation (derived from the node equations) [16,17,19].

$$Y^{(h)} V^{(h)} = I^{(h)} \quad (8.130)$$

The flowchart of the decoupled harmonic power flow (DHPF) based on Eqs. (8.125)–(8.130) is shown in Fig. 8.17. This simple and fast approach for the calculation of harmonic voltages and currents provides acceptable solutions as compared with Newton-based HPF (Section 8.4), which considers harmonic couplings [6].

8.5.2 Fast harmonic power flow

This method employs the equivalent current injection transformation and the forward and backward sweep techniques to solve the harmonic load flow problem [17]. For bus i , the complex power S_i is

$$S_i = (P_i + jQ_i), \quad i = 1, \dots, n \quad (8.131)$$

where n is the total number of buses. The equivalent current injection (I_i^k) at the k th iteration is

$$I_i^k = I_i^r(V_i^k) + jI_i^i(V_i^k) = \left(\frac{P_i + jQ_i}{V_i^k} \right)^* \quad (8.132)$$

where V_i^k is the voltage of bus i at the k th iteration.

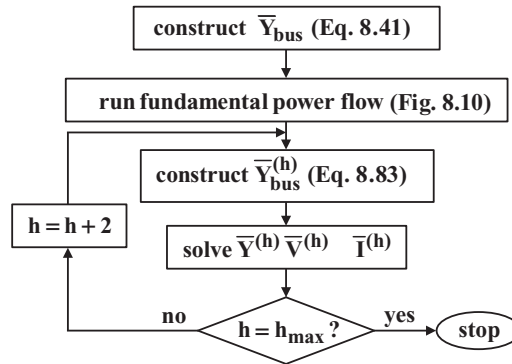


FIG. 8.17 Flowchart of the decoupled harmonic power flow (DHPF).

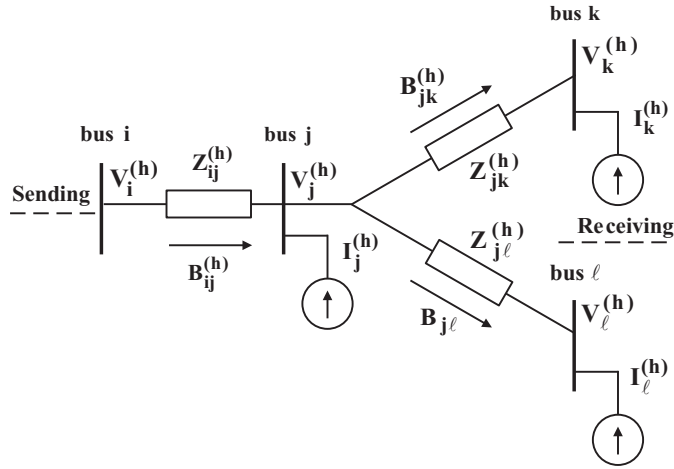


FIG. 8.18 Parts of a distribution system [17].

For fundamental load flow, the equivalent current injection needs to be iteratively transformed (e.g., Eq. 8.132 is used at the end of each iteration to compute the equivalent current injection (I_i^k) from the updated voltage (V_i^k), active (P_i), and reactive (Q_i) powers). However, this transformation is not required for harmonic currents since they have been obtained in a suitable form based on harmonic analysis (which represents nonlinear loads with harmonic current sources).

Fig. 8.18 shows part of a lateral distribution system and the associated harmonic currents. The relationships between branch currents and harmonic currents are

$$B_{jk}^{(h)} = -I_k^{(h)} \quad (8.133)$$

$$B_{jl}^{(h)} = -I_l^{(h)} \quad (8.134)$$

$$B_{ij}^{(h)} = B_{jk}^{(h)} + B_{jl}^{(h)} - I_j^{(h)} \quad (8.135)$$

where B and I are branch and injection (harmonic) currents, respectively.

It can be seen that the relationship between branch currents and harmonic (injection) currents of a radial feeder can be calculated by summing the injection currents from the receiving bus toward the sending bus of the feeder. The general form of the harmonic currents can be expressed as

$$B_{ij}^{(h)} = -I_j^{(h)} + \sum_{\ell=1}^n B_{j\ell}^{(h)} \quad (8.136)$$

On the other hand, the relationship between branch currents and bus voltages can be shown to be

$$\begin{cases} V_j^{(h)} = V_i^{(h)} - B_{ij}^{(h)} Z_{ij}^{(h)} \\ V_k^{(h)} = V_j^{(h)} - B_{jk}^{(h)} Z_{jk}^{(h)} \\ V_l^{(h)} = V_j^{(h)} - B_{jl}^{(h)} Z_{jl}^{(h)} \end{cases} \quad (8.137)$$

where $Z^{(h)}$ is the equivalent impedance of the line section at the h th harmonic frequency.

It is evident for a radial distribution system that if branch currents have been calculated, then the bus voltages can be easily determined from

$$V_j^{(h)} = V_i^{(h)} - B_{ij}^{(h)} Z_{ij}^{(h)} \quad (8.138)$$

The bus voltages can be obtained by calculating the voltage from the sending bus forward to the receiving bus of the feeder. Power system components are adjusted for each harmonic order.

8.5.3 Modified fast decoupled harmonic power flow

This method extends and generalizes the conventional fast decoupled (fundamental) power flow algorithm to accommodate harmonic sources [20]. The reduced and decoupled features of the fast decoupled algorithm is explored for the HPF application. A mathematical nonlinear model is integrated into an existing fast decoupled power flow program. This method allows separate modeling of nonlinear loads and subsequently integrating them in the main algorithm without substantially increasing computation time.

The h th harmonic bus injection current vector is defined as

$$I^{(h)} = Y^{(h)} V^{(h)} \quad (8.139)$$

where $Y^{(h)}$ is the h th harmonic admittance matrix. The injected current at any bus p is given by

$$I_p^{(h)} = \sum_{i=1}^n Y_{p,i}^{(h)} V_i^{(h)} \quad (8.140)$$

This equation provides the change of voltage magnitude and phase angle for each harmonic as a result of the injected currents.

The problem is then solved by the Newton-Raphson method. The current injected by a nonlinear load is assumed to be constant throughout the iteration and is used to modify the solution of voltage amplitudes and angles without reinverting the Jacobian matrix. At the end of each iteration, the device parameters are adjusted to reflect the new voltage magnitudes and phase angles. The harmonic currents and injected power are then reevaluated and the process is repeated until convergence is achieved.

8.5.4 Fuzzy harmonic power flow

All elements of Eq. (8.139) are complex valued. Therefore, it can be reformulated as [13].

$$\begin{bmatrix} \psi^{(h)} \end{bmatrix} \begin{bmatrix} V_r^{(h)} \\ V_i^{(h)} \end{bmatrix} = \begin{bmatrix} I_r^{(h)} \\ I_i^{(h)} \end{bmatrix} \quad (8.141)$$

where $V_r^{(h)}$, $V_i^{(h)}$, $I_r^{(h)}$, and $I_i^{(h)}$ are the real and imaginary parts of the h th harmonic voltage and current, respectively. $\psi^{(h)}$ is a $2n \times 2n$ matrix restructured from $Y^{(h)}$ and n is the bus number.

Fuzzy set theory is employed to represent the injection harmonic currents. For an n bus distribution system, the solution is obtained by solving a set of $4n \times 4n$ linear equations. The fuzzy solution for both harmonic magnitudes and phase angles can be individually expressed by two explicit linear equations. The solutions for any harmonic level can be easily obtained from these equations.

Harmonic sources are represented as (voltage-independent) current sources. Because harmonic penetration is a steady-state phenomenon, monitoring harmonics requires a long period of time for accurate measurements. It can be shown that the value of the harmonic currents at a bus is most likely near the center of a monitored range. Therefore, it is suitable to model the harmonic current source with a triangle fuzzy number, denoted by $\tilde{I}_h$. With a proper fuzzy model, the new fuzzy HPF equations can be expressed in the following form [13]:

$$\left[\psi^{(h)} \right] \begin{bmatrix} \tilde{V}_r^{(h)} \\ \tilde{V}_i^{(h)} \end{bmatrix} = \begin{bmatrix} \tilde{I}_r^{(h)} \\ \tilde{I}_i^{(h)} \end{bmatrix} \quad (8.142)$$

Note that $\psi^{(h)}$ is a constant whereas the harmonic voltages $\tilde{V}_r^{(h)}$ and $\tilde{V}_i^{(h)}$ are fuzzy numbers.

An arbitrary fuzzy number can be represented by an ordered pair of functions ($u_{\min}(r)$, $u_{\max}(r)$), $0 \leq r \leq 1$, which meet the following conditions:

- $u_{\min}(r)$ is a bounded left continuous nondecreasing function over $[0,1]$.
- $u_{\max}(r)$ is a bounded right continuous nonincreasing function over $[0,1]$.
- $u_{\min}(r) \leq u_{\max}(r)$, $0 \leq r \leq 1$.

The fuzzy HPF can then be expressed as follows [13]:

$$\begin{bmatrix} \psi_{11} & \psi_{12} \\ \psi_{21} & \psi_{22} \end{bmatrix} \begin{bmatrix} V_{r \min}^{(h)}(r) \\ V_{i \min}^{(h)}(r) \\ -V_{r \max}^{(h)}(r) \\ -V_{i \max}^{(h)}(r) \end{bmatrix} = \begin{bmatrix} I_{r \min}^{(h)}(r) \\ I_{i \min}^{(h)}(r) \\ -I_{r \max}^{(h)}(r) \\ -I_{i \max}^{(h)}(r) \end{bmatrix} \quad (8.143)$$

where ψ_{11} contains the positive entries of $[\psi]$, ψ_{12} represents the absolute values of the negative entries of $[\psi]$, and $[\psi] = \psi_{11} - \psi_{12}$; moreover $\psi_{12} = \psi_{21}$ and $\psi_{11} = \psi_{22}$. Eq. (8.143) is linear and can then be uniquely solved for $[V_{r \min}^{(h)}(r), V_{i \min}^{(h)}(r), -V_{r \max}^{(h)}(r), -V_{i \max}^{(h)}(r)]^t$ if and only if the matrix $\begin{bmatrix} \psi_{11} & \psi_{12} \\ \psi_{21} & \psi_{22} \end{bmatrix}$ is nonsingular.

8.5.5 Probabilistic harmonic power flow

Unavoidable uncertainties in a power system affect the input data of the modeling for the evaluation of voltage and current harmonics caused by nonlinear loads. These uncertainties are mainly due to time variations of linear load demands, network configurations, and operating modes of nonlinear loads. The variations have a random character and, therefore, are expressed using the probabilistic method. The models available for evaluating voltage distortion are

- direct method, in which the probability functions of harmonic voltages are calculated for assigned probability functions of harmonic currents injected by nonlinear loads,
- integrated method, in which the probability functions of the voltage and current harmonics are calculated together by properly taking into account the interactions between voltage distortions and harmonic currents.

The probabilistic method is employed for HPF analysis to describe the interactions between the supply voltage distortions and the injected harmonic currents. It transfers the deterministic approach, which is based on the solution of a nonlinear equation system, to the field of probability.

To reduce the computational effort and to overcome the convergence problem, this method linearizes the nonlinear equation describing the steady-state behavior around an expected value region. Then, the first-order approximations are used to directly establish the means and covariance matrix of the output probability density function, starting from knowledge of the means and covariance matrix of the input probability density functions.

The following vector is defined as an input parameter (the values of the vector are kept fixed and assigned as input data [21,22]):

$$T_a = [T_1 \ T_2 \ T_3]^t \quad (8.144)$$

where T_1 includes the active generator power at fundamental frequency (with the exception of the slack), T_2 includes the active and reactive linear load powers at fundamental frequency and the total active and apparent nonlinear load powers, and T_3 represents the generator voltage magnitudes. In all cases, some input parameters may be affected by uncertainties; hence, a probabilistic approach is adopted.

Every probabilistic formulation requires, first, the statistical characterization of the input data and, second, the evaluation of the statistical features of the output variables of interest. The statistical characterization of the input data consists of checking

- (i) which components of vector T_a have to be considered as random and which ones can be kept fixed, and
- (ii) what are the statistical features to characterize the randomness of the variables identified in step (i).

The most realistic approach to solve the problem is to refer to past experience, looking at both available historical data collections and technical knowledge of the electrical power system under study. According to (i), the generator voltage magnitudes can be considered deterministic if the set points of the regulator are not deliberately changed. With regard to (ii), the random nature, which appears in T_1 and T_2 , is applied. A probabilistic method can be used to evaluate the statistical features of the output variable and may be based on the linearization around an expected value region of the nonlinear equation. The change of active and reactive linear loads is assumed to be Gaussian (normally distributed).

A probabilistic steady-state analysis of a HPF can be performed by either iterative probabilistic methods (e.g., Monte Carlo) or by analytical approaches. Iterative probabilistic procedures require knowledge of probability density functions of the input variables; for every random input data, a value is generated according to its proper probability density function. According to the generated input values, the operating steady-state conditions of the HPF are

evaluated by solving the nonlinear equations by means of an iterative numerical method. Once convergence has been achieved, the state of the power system is completely known and the values of all the variables of interest are stored. The procedure is repeated to achieve a good estimate of probability of the output variables according to the stated accuracy. Unfortunately, iterative probabilistic procedures require a high computational effort.

An analytical approach is employed to linearize the nonlinear equations describing steady-state behavior of the power system around an expected value region. As a result, it offers a faster solution than the iterative probabilistic method. To evaluate the statistical procedure, the HPF equation is expressed as [21,22].

$$f(N) = T_b \quad (8.145)$$

where N and T_b are the output and input random vector variables, respectively. Let the vector $\mu(T_b)$ be the expected values of T_b . Using $\mu(T_b)$ as input data for the deterministic power flow calculation results in vector N_o as solutions:

$$f(N_o) = \mu(T_b) \quad (8.146)$$

Linearizing the equation around the point N_o results in

$$N \cong N_o + J^{-1} \Delta T_b = N'_o + A T_b \quad (8.147)$$

where

$$\Delta T_b : T_b - \mu(T_b) \quad (8.148)$$

$$N'_o : N_o - J^{-1} \mu(T_b) \quad (8.149)$$

J is the Jacobian matrix. Once the statistical features of the random output vector N are known, the statistics of other variables on which it depends can also be evaluated.

The use of a proper linearized approach allows a drastic reduction of computational effort because the computation required practically consists of the solution of only one deterministic HPF. Since the HPF equations are linearized around an expected value of the input vector, any movement away from this region produces an error. The errors can grow with the variance of the input random vector components, with the entity linked to the nonlinear behavior of the equation system.

8.5.6 Modular harmonic power flow

The coupled HPF calculation (Section 8.4) is established by directly involving nonlinear loads as integral parts of the solution. This makes the calculation complicated. The procedure can be simplified by detaching nonlinear device models from the main program [9,11,14,23]. As most nonlinear devices can be represented by harmonic sources, detaching their models is relatively simple, and due to the iterative nature of the solution, this representation does not limit the accuracy of the results.

In modular approaches, nonlinear loads are included within the HPF as black boxes. In a black box, each node has two quantities: the nodal voltage and the injected current. One quantity is specified and used to calculate the other (unknown) quantity. The

procedure involves the solution of the harmonic bus voltages and using them to compute harmonic current penetration, which is then used to obtain (updated) harmonic bus voltages.

The harmonic modeling of a nonlinear load can be obtained by either a direct or an iterative approach [11,23]. The Newton method may be employed to achieve the solution. For the nonlinear buses, the mismatches are the difference between the calculated nodal values and the transferred values from the nonlinear device models. This formulation simplifies the calculation of the mismatch vector and Jacobian matrix.

The exact modeling of complex components (e.g., nonlinear loads) is carried out individually in the time domain for that particular component using the best-suited method. The calculations are performed in a modular fashion and separately for each component. The components are then assembled via a system-wide harmonic matrix that enables the bus voltages to be corrected so that the current mismatches ΔI at all nodes are iteratively forced to zero.

The modular harmonic power flow (MHPF) is performed iteratively. Each step consists of two stages:

- i. *Updating the periodic steady state of the individual components (black boxes) using voltage corrections from stage (ii).* The inputs to a component are the voltages at its terminals and the outputs are the terminal currents. This stage provides accurate outputs for the given inputs. The initial input voltages (at the first iteration) are usually obtained from the fundamental power flow algorithm.
- ii. *Calculation of voltage corrections for stage (i).* The currents obtained from stage (i) are combined for buses with adjacent components into the current mismatch ΔI , which are expressed in the harmonic domain. These become injections into a system-wide incremental harmonic admittance matrix Y_{bus} , calculated in advance from such matrices for all individual components. The following equation is then solved for ΔV to be used in stage (i) to update all bus voltages:

$$\Delta I = Y_{bus} \Delta V \quad (8.150)$$

The approach is modular in stage (i), but at stage (ii) the voltage correction ΔV is calculated globally for the entire system. The main procedures of the MHPF algorithm are

- a fundamental power flow algorithm is used to obtain initial voltages at all nodes,
- the incremental harmonic admittance matrix Y_{bus} is identified. This is first done separately for each component (black box) and then the system-wide Y_{bus} matrix is assembled,
- currents and their mismatches ΔI are obtained for each node,
- ΔI and Y_{bus} are used to obtain ΔV (Eq. 8.150) and the nodal voltages are finally updated for the next iteration.

The modular approach facilitates the development of new component models and the formation of a wide range of system configurations. It is also appropriate for an unbalanced system with asymmetric loads. In practice, some power quality problems relate to uncharacteristic harmonic frequencies resulting from nonlinear loads and/or system asymmetries and thus requiring three-phase harmonic simulation. The solutions of MHPF algorithms are reported to be accurate as compared with those generated by the conventional (nonmodular)

HPF. The computing times depend of the required accuracy of the solution at harmonic frequencies and the maximum order of harmonics.

8.5.7 Application Example 8.19: Accuracy of decoupled harmonic power flow

Apply the coupled (Section 8.4) and decoupled (Section 8.5.1) HPF algorithm to the distorted 18-bus system of Fig. E8.19.1 and compare simulation results including the fundamental and rms (including harmonics) voltages, distortion factor, and THD_v. The nonlinear load (installed at bus 5) is a 3MW, 5 MVar six-pulse converter. Line and load parameters are provided in [29]. For the DHPF calculations, the converter may be modeled with harmonic current sources (Table E8.19.1).

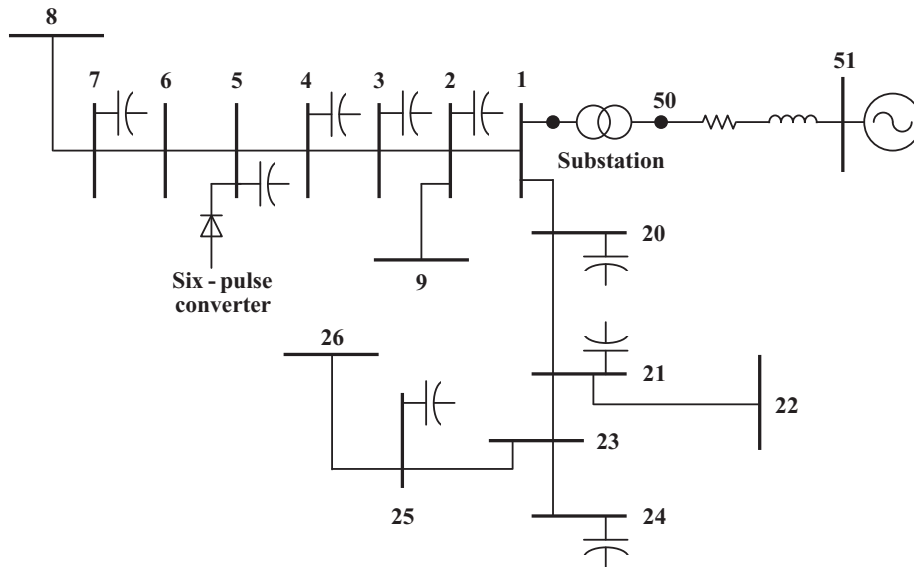


FIG. E8.19.1 The distorted IEEE 18-bus system used for simulation [29].

TABLE E8.19.1 Magnitude of harmonic currents (as a percentage of the fundamental) used to model six-pulse converters. All harmonic phase angles are assumed to be zero.

Harmonic order	Magnitude (%)	Harmonic order	Magnitude (%)	Harmonic order	Magnitude (%)
1	100	19	2.4	37	0.5
5	19.1	23	1.2	41	0.5
7	13.1	25	0.8	43	0.5
11	7.2	29	0.2	47	0.4
13	5.6	31	0.2	49	0.4
17	3.3	35	0.4		

Solution to Application Example 8.19: Accuracy of decoupled harmonic power flow.

The Newton-based HPF (e.g., using an accurate converter model that includes harmonic couplings [6]) and the DHPF (modeling the converter with harmonic current sources of Table E8.19.1) are applied to the 18 bus system. Simulation results are compared in Table E8.19.2. Small levels of the maximum and average deviations (last two rows of Table E8.19.2) show the acceptable accuracy of the decoupled approach.

TABLE E8.19.2 Comparison of simulation results for the 18 bus system (Fig. E8.19.1) using coupled (Section 8.4) and decoupled (Section 8.5.1) harmonic power flow.

Bus	Fundamental voltage (pu)		rms voltage (pu)		Distortion factor D (%)		THD of voltage (%)	
	Decoupled HPF	Coupled HPF	Decoupled HPF	Coupled HPF	Decoupled HPF	Coupled HPF	Decoupled HPF	Coupled HPF
1	1.0545	1.0545	1.0549	1.0548	0.9996	0.9997	2.7159	2.3828
2	1.0511	1.0510	1.0516	1.0516	0.9995	0.9995	3.1353	3.1942
3	1.0456	1.0455	1.0463	1.0465	0.9993	0.9991	3.6591	4.2593
4	1.0425	1.0424	1.0433	1.0436	0.9992	0.9989	3.9386	4.7737
5	1.0359	1.0358	1.0370	1.0377	0.9989	0.9982	4.7701	6.0515
6	1.0348	1.0347	1.0360	1.0367	0.9988	0.9981	4.8692	6.1886
7	1.0326	1.0325	1.0339	1.0347	0.9987	0.9979	5.1238	6.5404
8	1.0268	1.0267	1.0281	1.0289	0.9987	0.9978	5.1528	6.5775
9	1.0496	1.0496	1.0501	1.0501	0.9995	0.9995	3.1397	3.1985
20	1.0505	1.0504	1.0509	1.0509	0.9996	0.9996	2.9329	2.9248
21	1.0496	1.0495	1.0505	1.0506	0.9991	0.9990	4.1782	4.4609
22	1.0479	1.0479	1.0488	1.0489	0.9991	0.9990	4.1847	4.4682
23	1.0451	1.0451	1.0474	1.0477	0.9978	0.9974	6.6676	7.1620
24	1.0485	1.0485	1.0519	1.0523	0.9968	0.9964	7.9886	8.4865
25	1.0419	1.0418	1.0449	1.0452	0.9971	0.9967	7.6002	8.1187
26	1.0415	1.0414	1.0445	1.0449	0.9971	0.9967	7.6029	8.1220
50	1.0501	1.0501	1.0501	1.0501	1.0000	1.0000	0.2482	0.1217
51	1.0500	1.0500	1.0500	1.0500	1.0000	1.0000	0.2482	0.0035
MD ^a	0.0097	—	0.0778	—	0.0009	—	1.42473	—
AD ^b	0.0059	—	0.0278	—	0.0003	—	0.57242	—

^a Maximum deviation with respect to the coupled HPF (%).

^b Average deviation with respect to the coupled HPF (%).

8.6 Summary

After an overview of the interconnected power system and its components, power system matrices are introduced, in particular the bus admittance matrix. Bus-building algorithms are explained, and the concepts of singularity and nonsingularity of matrices and their physical interpretation with respect to power systems are discussed. After a brief review of matrix solution techniques under the aspects of matrix sparsity, the fundamental power flow technique is used to explain the Newton-Raphson solution method. The HPF problem is firmly grounded on the fundamental power flow: additional circuit conditions are introduced for the HPF problem.

Numerous application examples detail for the fundamental power flow analysis the bus-building algorithm, matrix manipulations—such as multiplication and triangular factorization—formation of the Jacobian, definition of mismatch vector, and the recursive application of the Newton-Raphson algorithm. Similarly, the application examples cover the step-by-step approach for one iteration of the harmonic Newton-type solution method. The chapter concludes with a classification of existing power flow techniques.

8.7 Problems

Problem 8.1: Determination of admittance matrices $\bar{Y}_{bus}$

- a. Determine the bus admittance matrices $\bar{Y}_{bus}$ referenced to ground for Figs. P8.1A–P8.1D.

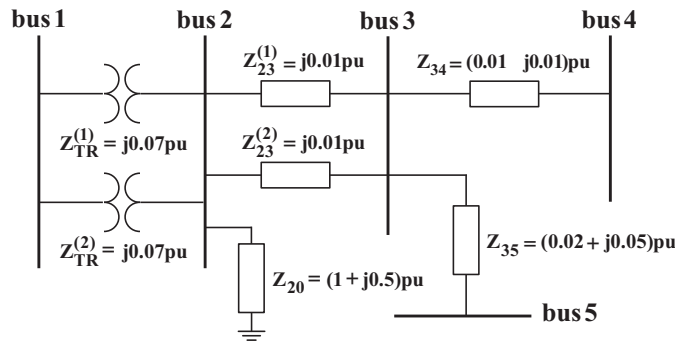


FIG. P8.1A Five-bus system with two transformers and admittances to ground.

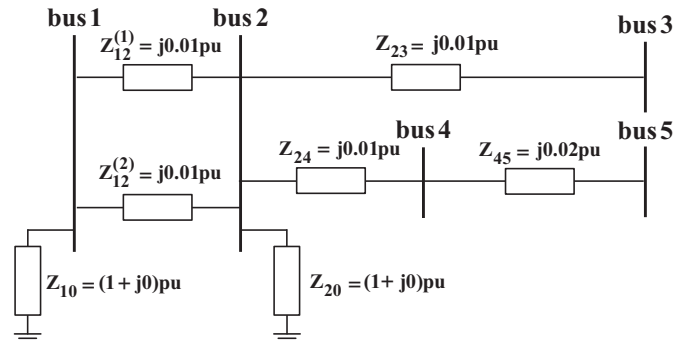


FIG. P8.1B Five-bus system with admittances to ground.

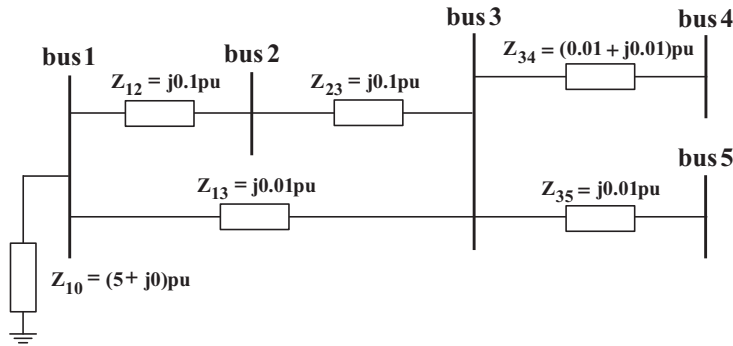


FIG. P8.1C Five-bus system with one admittance to ground.

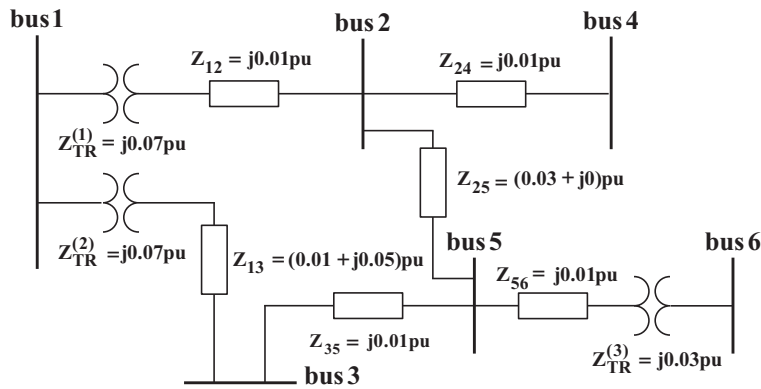


FIG. P8.1D Six-bus system with three transformers and no admittance to ground.

- b. The system of Fig. P8.1D has no admittance connected from any one of the buses to ground. Show that its admittance matrix is singular.

Problem 8.2: Establishing the table of factors

For the real matrix $\bar{A}$

$$\bar{A} = \begin{bmatrix} 1 & 5 & 1 \\ 5 & 2 & 0 \\ 1 & 0 & 1 \end{bmatrix} \quad (\text{P8.2.1})$$

- a. Find the table of factors
b. Solve

$$\begin{bmatrix} 1 \\ 1 \\ 0 \end{bmatrix} = \bar{A} \cdot \bar{x} \quad (\text{P8.2.2})$$

for the vector $\bar{x}$.

Problem 8.3: Voltage control via inductive load (e.g., reactors)

Apply the Newton-Raphson load flow analysis technique to the three-bus power system of Fig. P8.3, provided switch S_1 is closed and switch S_2 is open.

- Find the fundamental bus admittance matrix in polar form.
- Assume that bus 1 is the swing (slack) bus and buses 2 and 3 are PQ buses. Make an initial guess for the bus voltage vector $\bar{x}^{(0)}$ and evaluate the initial mismatch power $\Delta\bar{W}^{(0)}$.
- Find the Jacobian $\bar{J}^{(0)}$ for this power system configuration and compute the bus voltage correction vector $\Delta\bar{x}^{(0)}$.
- Update the bus voltage vector $\bar{x}^{(1)} = \bar{x}^{(0)} - \Delta\bar{x}^{(0)}$ and recompute the updated mismatch power vector $\Delta\bar{W}^{(1)}$.

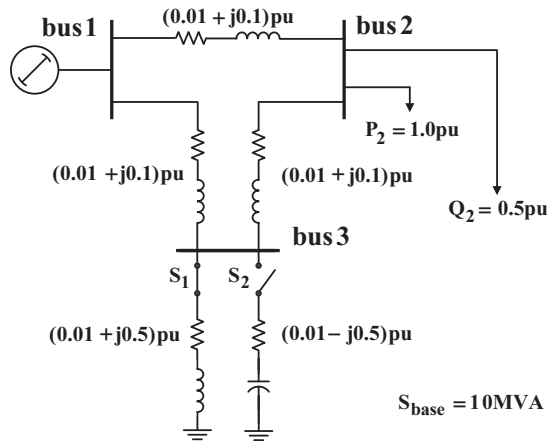


FIG. P8.3 Three-bus power system.

Problem 8.4: Voltage control via capacitive load (e.g., capacitors)

Repeat Problem 8.3 for the condition when switch S_1 is open and switch S_2 is closed.

Problem 8.5: Fundamental power flow exploiting the symmetry of a power system

Apply to the two-bus system of Fig. P8.5.1 the Newton-Raphson load flow analysis technique.

- Simplify the two-bus system.
- Find the fundamental bus admittance matrix in polar form.
- Assume that bus 1 is the swing (slack) bus, and bus 2 is a PQ bus. Make an initial guess for the voltage vector $\bar{x}^{(0)}$ and evaluate the initial mismatch power $\Delta\bar{W}^{(0)}$.
- Find the Jacobian matrix $\bar{J}^{(0)}$ for this power system configuration and compute the bus voltage correction vector $\Delta\bar{x}^{(0)}$.
- Update the bus voltage vector $\bar{x}^{(1)} = \bar{x}^{(0)} - \Delta\bar{x}^{(0)}$ and recompute the updated mismatch power vector $\Delta\bar{W}^{(1)}$.

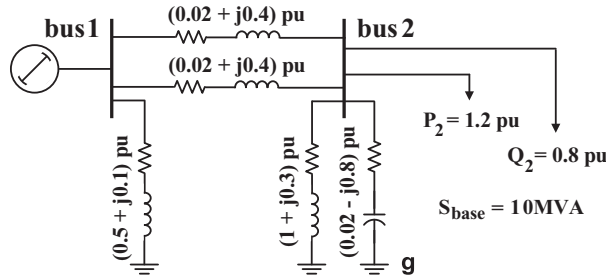


FIG. P8.5.1 Two-bus power system

Problem 8.6: Fundamental power flow in a weak power system

The power system of Fig. P8.6.1 represents a weak feeder as it occurs in distributed generation (DG) with windpower plants and photovoltaic plants as power sources. All impedances are in pu and the base apparent power is $S_{base} = 10 \text{ MVA}$.

- Compute the fundamental admittance matrix for this system.
- Assuming bus 1 is the swing bus ($\delta_1 = 0$ and $|\tilde{V}_1| = 1.0 \text{ pu}$) then we can make an initial guess for bus voltage vector $\tilde{x}^{(0)} = (\delta_2, |\tilde{V}_2|, \delta_3, |\tilde{V}_3|, \delta_4, |\tilde{V}_4|)^t = (0, 1, 0, 1, 0, 1)^t$. Note, the superscript (0) means initial guess. Compute the mismatch power vector for this initial condition.
- Compute the Jacobian matrix.
- Compute the inverse of the Jacobian matrix.
- Compute the correction voltage vector $\Delta\tilde{x}^{(0)}$ update the mismatch power vector, and check the convergence of the load flow algorithm (using a convergence tolerance of 0.0001).

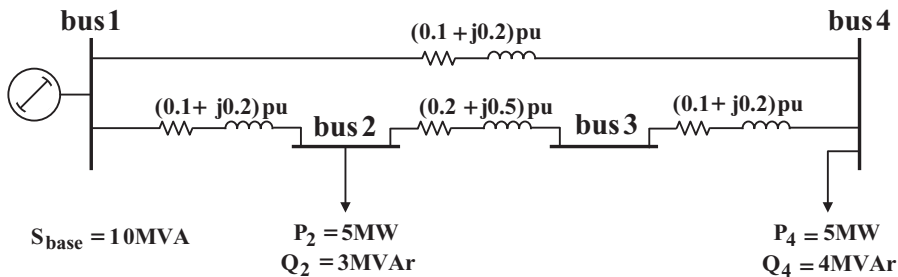


FIG. P8.6.1 Four-bus power system.

Problem 8.7: Harmonic power flow in a weak power system with one nonlinear bus and one set of harmonic nonlinear device currents

The power system of Fig. P8.7.1 represents a weak feeder as it occurs in distributed generation (DG) with windpower plants and photovoltaic plants as power sources. All impedances are in pu and the base apparent power is $S_{base} = 10 \text{ MVA}$. The harmonic $v-i$ characteristic of the nonlinear load at bus 4 (referred to the voltage at bus 4) is given as

$$\begin{aligned}
\tilde{g}_{load,4}^{(5)} &= g_{r,4}^{(5)} + jg_{i,4}^{(5)} \\
g_{r,4}^{(5)} &= 0.3 \left(V_4^{(1)} \right)^3 \cos \left(3\delta_4^{(1)} \right) + 0.3 \left(V_4^{(5)} \right)^2 \cos \left(3\delta_4^{(5)} \right) \\
g_{i,4}^{(5)} &= 0.3 \left(V_4^{(1)} \right)^3 \sin \left(3\delta_4^{(1)} \right) + 0.3 \left(V_4^{(5)} \right)^2 \sin \left(3\delta_4^{(5)} \right)
\end{aligned} \tag{P8.7.1}$$

It will be assumed that the voltage at the swing bus (bus 1) is $|\tilde{V}_1| = 1.00$ pu and $\delta_1^{(1)} = 0$ rad. The fundamental power flow can be based on Fig. P8.6.1. For the 5th harmonic, the synchronous machine impedance Z_1 is replaced by the (subtransient) impedance $Z_2 \approx jX^- = j0.25$ pu at 60 Hz. In this case, the subtransient reactance has been chosen to be that of a synchronous generator in order to approximate bus 1 as a weak bus.

- Compute the fundamental and 5th harmonic admittance matrices.
- Assume an initial value for the bus vector $\bar{U}^{(0)}$ and compute the fundamental and the 5th harmonic currents injected into the system by the nonlinear load.
- Evaluate the mismatch vector.
- Evaluate the Jacobian matrix.
- Evaluate the correction vector $\Delta \bar{U}^{(0)}$.
- Update the mismatch vector and comment on the convergence of the harmonic load flow.

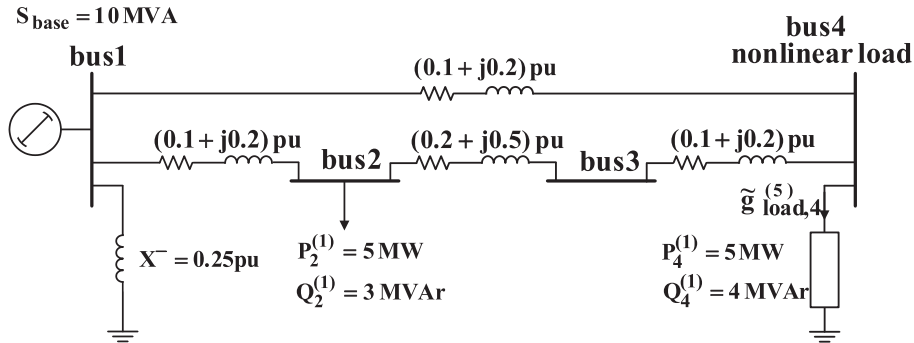


FIG. P8.7.1 Four-bus power system with one nonlinear bus and one set of harmonics.

Problem 8.8: Harmonic power flow with one nonlinear bus and two sets of harmonic nonlinear device currents

To the three-bus system of Fig. P8.8 apply the Newton-Raphson harmonic load flow analysis technique. Assume that bus 1 is the swing or slack bus, bus 2 is a linear PQ bus, and bus 3 is a nonlinear bus, where the fundamental real and reactive powers are specified. In addition, at bus 3 the real and imaginary harmonic nonlinear device currents are given as

$$g_{r,3}^{(5)} = |\tilde{V}_3^{(1)}| \cos \left(\delta_3^{(1)} \right) + |\tilde{V}_3^{(5)}|^2 \cos \left(2\delta_3^{(5)} \right) + |\tilde{V}_3^{(7)}| \cos \left(\delta_3^{(7)} \right) \tag{P8.8.1a}$$

$$g_{i,3}^{(5)} = |\tilde{V}_3^{(1)}| \sin \left(\delta_3^{(1)} \right) + |\tilde{V}_3^{(5)}|^2 \sin \left(2\delta_3^{(5)} \right) + |\tilde{V}_3^{(7)}| \sin \left(\delta_3^{(7)} \right) \tag{P8.8.1b}$$

$$g_{r,3}^{(7)} = \left| \tilde{V}_3^{(1)} \right| \cos \left(\delta_3^{(1)} \right) + \left| \tilde{V}_3^{(5)} \right| \cos \left(\delta_3^{(5)} \right) + \left| \tilde{V}_3^{(7)} \right|^2 \cos \left(2\delta_3^{(7)} \right) \quad (\text{P8.8.2a})$$

$$g_{i,3}^{(7)} = \left| \tilde{V}_3^{(1)} \right| \sin \left(\delta_3^{(1)} \right) + \left| \tilde{V}_3^{(5)} \right| \sin \left(\delta_3^{(5)} \right) + \left| \tilde{V}_3^{(7)} \right|^2 \sin \left(2\delta_3^{(7)} \right) \quad (\text{P8.8.2b})$$

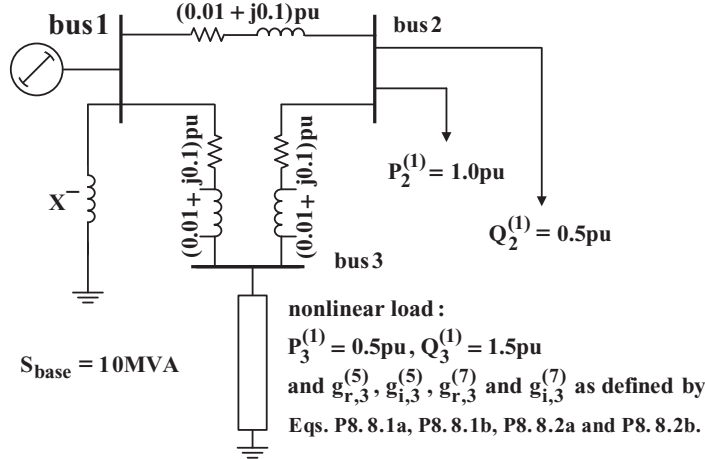


FIG. P8.8 Three-bus system consisting of two linear (swing bus = bus 1, PQ bus = bus 2) buses and one nonlinear bus (bus 3). The negative sequence impedance ($\approx$ subtransient reactance at 60 Hz) of the swing bus is $Z_2 = jX^- = j0.10 \text{ pu}$ and there are two sets of harmonics.

The 5th and 7th nonlinear currents are referred to the harmonic voltages $\tilde{V}_3^{(5)}$ and $\tilde{V}_3^{(7)}$, respectively

- Find the fundamental and harmonic (5th and 7th) bus admittance matrices in polar form.
- Make an initial guess for the bus vector.

$$\bar{U}^{(0)} = \left[\delta_2^{(1)}, \left| \tilde{V}_2^{(1)} \right|, \delta_3^{(1)}, \left| \tilde{V}_3^{(1)} \right|, \delta_1^{(5)}, \left| \tilde{V}_1^{(5)} \right|, \delta_2^{(5)}, \left| \tilde{V}_2^{(5)} \right|, \delta_3^{(5)}, \left| \tilde{V}_3^{(5)} \right|, \delta_1^{(7)}, \left| \tilde{V}_1^{(7)} \right|, \delta_2^{(7)}, \left| \tilde{V}_2^{(7)} \right|, \delta_3^{(7)}, \left| \tilde{V}_3^{(7)} \right| \right]^t$$

and compute the nonlinear load device currents $G_{r,3}^{(1)}, G_{i,3}^{(1)}, G_{r,3}^{(5)}, G_{i,3}^{(5)}, G_{r,3}^{(7)}$, and $G_{i,3}^{(7)}$, which are referred to the swing bus.

- Evaluate the initial mismatch vector $\Delta \bar{M}^{(0)} = \left[\Delta \bar{W}, \Delta \bar{I}^{(5)}, \Delta \bar{I}^{(7)}, \Delta \bar{I}^{(1)} \right]^t$
- Find the Jacobian $\bar{J}^{(0)}$ for this power system configuration and compute the bus correction vector $\Delta \bar{U}^{(0)}$. The Jacobian $\bar{J}^{(0)}$ is of the form

$$\bar{J}^{(0)} = \begin{bmatrix} \bar{J}^{(1)} & \bar{J}^{(5)} & \bar{J}^{(7)} \\ \overline{Y_G}^{(5,1)} & \overline{Y_G}^{(5,5)} & \overline{Y_G}^{(5,7)} \\ \overline{Y_G}^{(7,1)} & \overline{Y_G}^{(7,5)} & \overline{Y_G}^{(7,7)} \\ \overline{Y_G}^{(1,1)} & \overline{Y_G}^{(1,5)} & \overline{Y_G}^{(1,7)} \end{bmatrix} \quad (\text{P8.8.3})$$

In particular, this matrix (Eq. P8.8.3 or P8.8.4) has the following 16 unknowns:

$$\delta_2^{(1)}, \left| \tilde{V}_2^{(1)} \right|, \delta_3^{(1)}, \left| \tilde{V}_3^{(1)} \right|, \delta_1^{(5)}, \left| \tilde{V}_1^{(5)} \right|, \delta_2^{(5)}, \left| \tilde{V}_2^{(5)} \right|, \delta_3^{(5)}, \left| \tilde{V}_3^{(5)} \right|, \delta_1^{(7)}, \left| \tilde{V}_1^{(7)} \right|, \delta_2^{(7)}, \left| \tilde{V}_2^{(7)} \right|, \delta_3^{(7)}, \left| \tilde{V}_3^{(7)} \right|$$

(see identification of columns of Eq. P8.8.4) and the following 16 equations:

$$\Delta P_2^{(1)}, \Delta Q_2^{(1)}, \Delta I_{r,1}^{(5)}, \Delta I_{i,1}^{(5)}, \Delta I_{r,2}^{(5)}, \Delta I_{i,2}^{(5)}, \Delta I_{r,3}^{(5)}, \Delta I_{i,3}^{(5)}, \Delta I_{r,1}^{(7)}, \\ \Delta I_{i,1}^{(7)}, \Delta I_{r,2}^{(7)}, \Delta I_{i,2}^{(7)}, \Delta I_{r,3}^{(7)}, \Delta I_{i,3}^{(7)}, \Delta I_{r,3}^{(1)}, \Delta I_{i,3}^{(1)}$$

(see identification of rows of Eq. P8.8.4). Note there are no $\bar{H}$ matrices (e.g., $\bar{H}^{(1)}$, $\bar{H}^{(5)}$ and $\bar{H}^{(7)}$) related to α_3 and β_3 . This reduces the equation system by two equations. In this case, we can define the matrix $\tilde{f}^{(0)}$ (Eq. P8.8.4).

e. Update the bus vector $\bar{U}^{(1)} = (\bar{U}^{(0)} - \Delta \bar{U}^{(0)})$ and recompute the updated mismatch vector $\Delta \bar{M}^{(1)}$:

Hint: The top row—not part of the Jacobian—of Eq. (P8.8.4) lists the variables:

$$\left[\delta_2^{(1)} \left| \tilde{V}_2^{(1)} \right| \delta_3^{(1)} \left| \tilde{V}_3^{(1)} \right| \delta_1^{(5)} \left| \tilde{V}_1^{(5)} \right| \delta_2^{(5)} \left| \tilde{V}_2^{(5)} \right| \delta_3^{(5)} \left| \tilde{V}_3^{(5)} \right| \delta_1^{(7)} \left| \tilde{V}_1^{(7)} \right| \delta_2^{(7)} \left| \tilde{V}_2^{(7)} \right| \delta_3^{(7)} \left| \tilde{V}_3^{(7)} \right| \right]$$

and the right-hand side column—not part of the Jacobian—lists the mismatch quantities which must be satisfied:

$$\left[\Delta P_2^{(1)} \Delta Q_2^{(1)} \Delta I_{r,1}^{(5)} \Delta I_{i,1}^{(5)} \Delta I_{r,2}^{(5)} \Delta I_{i,2}^{(5)} \Delta I_{r,3}^{(5)} \Delta I_{i,3}^{(5)} \Delta I_{r,1}^{(7)} \Delta I_{i,1}^{(7)} \Delta I_{r,2}^{(7)} \Delta I_{i,2}^{(7)} \Delta I_{r,3}^{(7)} \Delta I_{i,3}^{(7)} \Delta I_{r,3}^{(1)} \Delta I_{i,3}^{(1)} \right]^t$$

These two identifications help in defining the partial derivatives of the Jacobian. For example,

$$J_{3,5}^{(0)} = \frac{\partial(\Delta I_{r,1}^{(5)})}{\partial(\delta_1^{(5)})}, \quad J_{3,10}^{(0)} = \frac{\partial(\Delta I_{r,1}^{(5)})}{\partial(V_3^{(5)})}, \quad J_{8,5}^{(0)} = \frac{\partial(\Delta I_{i,3}^{(5)})}{\partial(\delta_1^{(5)})}, \quad J_{8,10}^{(0)} = \frac{\partial(\Delta I_{i,3}^{(5)})}{\partial(V_3^{(5)})}, \\ J_{9,11}^{(0)} = \frac{\partial(\Delta I_{r,1}^{(7)})}{\partial(\delta_1^{(7)})}, \quad J_{12,16}^{(0)} = \frac{\partial(\Delta I_{i,2}^{(7)})}{\partial(V_3^{(7)})}$$

$$\bar{J}^{(0)} = \left[\begin{array}{cccccccccccccccccc}
\left\{ \delta_2^{(1)} \right\} & \left\{ \tilde{V}_2^{(1)} \right\} & \left\{ \delta_3^{(1)} \right\} & \left\{ \tilde{V}_3^{(1)} \right\} & \left\{ \delta_1^{(5)} \right\} & \left\{ \tilde{V}_1^{(5)} \right\} & \left\{ \delta_2^{(5)} \right\} & \left\{ \tilde{V}_2^{(5)} \right\} & \left\{ \delta_3^{(5)} \right\} & \left\{ \tilde{V}_3^{(5)} \right\} & \left\{ \delta_1^{(7)} \right\} & \left\{ \tilde{V}_1^{(7)} \right\} & \left\{ \delta_2^{(7)} \right\} & \left\{ \tilde{V}_2^{(7)} \right\} & \left\{ \delta_3^{(7)} \right\} & \left\{ \tilde{V}_3^{(7)} \right\} & \text{variables} \\
\downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \downarrow & \\
19.8 & 1.98 & -9.9 & -0.99 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & \leftarrow \Delta P_2^{(1)} \\
-1.98 & 19.8 & 0.99 & -9.9 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & \leftarrow \Delta Q_2^{(1)} \\
0 & 0 & 0 & 0 & J_{3,5}^0 & J_{3,6}^0 & J_{3,7}^0 & J_{3,8}^0 & J_{3,9}^0 & J_{3,10}^0 & 0 & 0 & 0 & 0 & 0 & 0 & \leftarrow \Delta I_{r,1}^{(5)} \\
0 & 0 & 0 & 0 & J_{4,5}^0 & J_{4,6}^0 & J_{4,7}^0 & J_{4,8}^0 & J_{4,9}^0 & J_{4,10}^0 & 0 & 0 & 0 & 0 & 0 & 0 & \leftarrow \Delta I_{i,1}^{(5)} \\
0 & 0 & 0 & 0 & J_{5,5}^0 & J_{5,6}^0 & J_{5,7}^0 & J_{5,8}^0 & J_{5,9}^0 & J_{5,10}^0 & 0 & 0 & 0 & 0 & 0 & 0 & \leftarrow \Delta I_{r,2}^{(5)} \\
0 & 0 & 0 & 0 & J_{6,5}^0 & J_{6,6}^0 & J_{6,7}^0 & J_{6,8}^0 & J_{6,9}^0 & J_{6,10}^0 & 0 & 0 & 0 & 0 & 0 & 0 & \leftarrow \Delta I_{i,2}^{(5)} \\
0 & 0 & 0 & 0 & J_{7,5}^0 & J_{7,6}^0 & J_{7,7}^0 & J_{7,8}^0 & J_{7,9}^0 & J_{7,10}^0 & 0 & 0 & 0 & 0 & 0 & 1 & \leftarrow \Delta I_{r,3}^{(5)} \\
0 & 0 & 0 & 1 & J_{8,5}^0 & J_{8,6}^0 & J_{8,7}^0 & J_{8,8}^0 & J_{8,9}^0 & J_{8,10}^0 & 0 & 0 & 0 & 0 & 0.1 & 0 & \leftarrow \Delta I_{i,3}^{(5)} \\
0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & J_{9,11}^0 & J_{9,12}^0 & J_{9,13}^0 & J_{9,14}^0 & J_{9,15}^0 & J_{9,16}^0 & \leftarrow \Delta I_{r,1}^{(7)} \\
0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & J_{10,11}^0 & J_{10,12}^0 & J_{10,13}^0 & J_{10,14}^0 & J_{10,15}^0 & J_{10,16}^0 & \leftarrow \Delta I_{i,1}^{(7)} \\
0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & J_{11,11}^0 & J_{11,12}^0 & J_{11,13}^0 & J_{11,14}^0 & J_{11,15}^0 & J_{11,16}^0 & \leftarrow \Delta I_{r,2}^{(7)} \\
0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & J_{12,11}^0 & J_{12,12}^0 & J_{12,13}^0 & J_{12,14}^0 & J_{12,15}^0 & J_{12,16}^0 & \leftarrow \Delta I_{i,2}^{(7)} \\
0 & 0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & J_{13,11}^0 & J_{13,12}^0 & J_{13,13}^0 & J_{13,14}^0 & J_{13,15}^0 & J_{13,16}^0 & \leftarrow \Delta I_{r,3}^{(7)} \\
0 & 0 & 1 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & J_{14,11}^0 & J_{14,12}^0 & J_{14,13}^0 & J_{14,14}^0 & J_{14,15}^0 & J_{14,16}^0 & \leftarrow \Delta I_{i,3}^{(7)} \\
-9.90 & -0.99 & 21.3 & 1.48 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & \leftarrow \Delta I_{r,3}^{(1)} \\
-0.99 & 9.9 & -2.51 & -18.3 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & 0 & \leftarrow \Delta I_{i,3}^{(1)}
\end{array} \right]$$

(P8.8.4)

References

- [1] A. Abolins, H. Achenbach, D. Lambrecht, Design and Performance of Large Four-Pole Turbogenerators with Semiconductor Excitation for Nuclear Power Stations, Cigre-Report, 1972 Session, August 28–September, Paper No. 11-04, 1972.
- [2] E.F. Fuchs, Numerical Determination of Synchronous, Transient, and Subtransient Reactances of a Synchronous Machine (Ph.D. Thesis), University of Colorado, Boulder, 1970.
- [3] <http://www.powerfrontiers.com/ngccplants.htm>.
- [4] J. Franck, Transformation of Kinetic Energy of Free Electrons into Excitation Energy of Atoms by Impacts, Nobel Price Lecture, 1925, pp. 79–108.
- [5] E.F. Fuchs, H.A. Fuchs, Introduction to Energy, Renewable Energy and Electrical Engineering: Essentials for Engineering Science (STEM) Professionals and Students, John Wiley & Sons, New York, NY, 2021.
- [6] D. Xia, G.T. Heydt, Harmonic power flow studies, part I—formulation and solution, IEEE Trans. Power Appar. Syst. 101 (6) (1982) 1257–1265. D. Xia, G.T. Heydt, Harmonic power flow studies, part II—implementation and practical application, IEEE Trans. Power Appar. Syst. 101 (6) (1982) 1266–1270.
- [7] Y. Baghzouz, S. Ertem, Shunt capacitor sizing for radial distribution feeders with distorted substation voltage, IEEE Trans. Power Deliv. 5 (2) (1990) 650–657.
- [8] Y. Baghzouz, Effects of nonlinear loads on optimal capacitor placement in radial feeders, IEEE Trans. Power Deliv. 6 (1) (1991) 245–251.
- [9] A. Semlyen, M. Shlash, Principles of modular harmonic power flow methodology, IEE Proc. Gener. Transm. Distrib. 147 (1) (2000) 1–6.
- [10] J. Arrillaga, N.R. Watson, G.N. Bathurst, A multi-frequency power flow of general applicability, IEEE Trans. Power Deliv. 19 (1) (2004) 342–349.
- [11] C.N. Bathurst, B.C. Smith, N.R. Watson, J. Arrillaga, A modular approach to the solution of the three-phase harmonic power-flow, IEEE Trans. Power Deliv. 15 (3) (2000) 984–989.
- [12] M.A. Moreno Lopez de Saa, J. Usaola Garcia, Three-phase harmonic load flow in frequency and time domains, IEE Proc. Electric Power Appl. 150 (3) (2003) 295–300.
- [13] Y.-Y. Hong, J.-S. Lin, C.-H. Liu, Fuzzy harmonic power flow analyses, in: Presented at International Conference on Power System Technology, PowerCon 2000, vol. 1, 4–7 December, 2000, pp. 121–125.
- [14] M. Shlash, A. Semlyen, Efficiency issues of modular harmonic power flow, IEE Proc. Gener. Transm. Distrib. 148 (2) (2001) 123–127.
- [15] S.M. Williams, G.T. Brownfield, J.W. Duffus, Harmonic propagation on an electric distribution system: field measurements compared with computer simulation, IEEE Trans. Power Deliv. 8 (2) (1993) 547–552.
- [16] H.-C. Chin, Optimal shunt capacitor allocation by fuzzy dynamic programming, Electr. Power Syst. Res. 35 (2) (1995) 133–139.
- [17] J.-H. Teng, C.-Y. Chang, A fast harmonic load flow method for industrial distribution systems, in: International Conference on Power System Technology, vol. 3, December, 2000, pp. 1149–1154.
- [18] M.A.S. Masoum, A. Jafarian, M. Ladjevardi, E.F. Fuchs, W.M. Grady, Fuzzy approach for optimal placement and sizing of capacitor banks in the presence of harmonics, IEEE Trans. Power Deliv. 19 (2) (2004) 822–829.
- [19] T.S. Chung, H.C. Leung, A genetic algorithm approach in optimal capacitor selection with harmonic distortion considerations, Int. J. Electr. Power Energy Syst. 21 (8) (1999) 561–569.
- [20] I.M. Elamin, Fast decoupled harmonic load flow method, in: Conference Record of the 1990 IEEE Industry Applications Society Annual Meeting, 1990, 7–12 October, 1990, pp. 1749–1756.
- [21] G. Carpinelli, T. Esposito, P. Varilone, P. Verde, First-order probabilistic harmonic power flow, IEE Proc. Gener. Transm. Distrib. 148 (6) (2001) 541–548.
- [22] T. Esposito, G. Carpinelli, P. Varilone, P. Verde, Probabilistic harmonic power flow for percentile evaluation, in: Canadian Conference on Electrical and Computer Engineering, 2001, vol. 2, 13–16 May, 2001, pp. 831–838.
- [23] G.N. Bathurst, B.C. Smith, N.R. Watson, J. Arrillaga, A modular approach to the solution of the three-phase harmonic power-flow, in: 8th International Conference on Harmonics and Quality of Power, 1998, vol. 2, 14–16 October, 1998, pp. 653–659.
- [24] M. Valcarel, J.G. Mayordomo, Harmonic power flow for unbalanced systems, IEEE Trans. Power Deliv. 8 (4) (1993) 2052–2059.
- [25] Z.A. Marinos, J.L.R. Pereira, S. Carneiro Jr., Fast harmonic power flow calculation using parallel processing, IEE Proc. Gener. Transm. Distrib. 141 (1) (1994) 27–32.

- [26] M.S. Rios, P.R. Castaneda, Newton-Raphson probabilistic harmonic power flow through Monte Carlo simulation, in: Symposium on Circuits and Systems, Midwest, 1995, vol. 2, 13–16 August, 1995, pp. 1297–1300.
- [27] Y. Baghzouz, R.F. Burch, A. Capasso, A. Cavallini, A.E. Emanuel, M. Halpin, A. Imece, A. Ludbrook, G. Montanari, K.J. Olejniczak, P. Ribeiro, S. Rios-Marcuello, L. Tang, R. Thaliyam, P. Verde, Time-varying harmonics. I. Characterizing measured data, *IEEE Trans. Power Deliv.* 13 (3) (1998) 938–944.
- [28] Y. Baghzouz, R.F. Burch, A. Capasso, A. Cavallini, A.E. Emanuel, M. Halpin, A. Imece, A. Ludbrook, G. Montanari, K.J. Olejniczak, P. Ribeiro, S. Rios-Marcuello, L. Tang, R. Thaliyam, P. Verde, Time-varying harmonics. II. Harmonic summation and propagation, *IEEE Trans. Power Deliv.* 17 (1) (2002) 279–285.
- [29] W.M. Grady, M.J. Samotyj, A.H. Noyola, The application of network objective functions for actively minimizing the impact of voltage harmonics in power systems, *IEEE Trans. Power Deliv.* 7 (3) (1992) 1379–1386.

This page intentionally left blank

Impact of poor power quality on reliability, relaying, and security

New technical and legislative developments shape the electricity market, whereby the reliability of power systems and the profitability of the utility companies must be maintained. To achieve these objectives, the evaluation of the power system and, in particular, the distribution system reliability is an important task. It enables utilities to predict the reliability level of an existing system after improvements have been achieved through restructuring and improved design and to select the most appropriate configuration among various available options.

This chapter addresses the impact of poor power quality on reliability, relaying, and security. [Section 9.1](#) introduces reliability indices. Degradation of reliability and security due to poor power quality including the effects of harmonics and interharmonics on the operation of overcurrent and under-frequency relays, electromagnetic field (EMF) generation, corona in transmission lines, distributed generation, cogeneration, and frequency/voltage control are discussed in [Section 9.2](#). Tools for detecting poor power quality and for improving reliability or security are treated in [Sections 9.3 and 9.4](#), respectively. The remainder of this chapter is dedicated to techniques for improving and controlling the reliability of power systems including load shedding and load management ([Section 9.5](#)), energy-storage methods ([Section 9.6](#)), and matching the operation of intermittently operating renewable power plants with energy storage facilities ([Section 9.7](#)).

9.1 Reliability indices

It is worth noting that the reliability indices as defined in the literature [1–9] are not absolute measures, but they provide relative information based on the comparison of alternative solutions. The set of reliability indices can be divided into four categories:

Load-point indices: average failure (fault) rate (λ), average outage time (r), annual outage time (U), repair time (t_r), and switching time (t_s).

Customer-oriented system indices: system average interruption frequency index (SAIFI), system average interruption duration index (SAIDI), customer average interruption duration index (CAIDI), and system average rms (variation) frequency index (SARFI, usually written as SARFI_{%V}).

Load-oriented system indices: average service availability index (ASAI), average service unavailability index (ASUI), energy not supplied (ENS), and average energy not supplied (AENS).

Economical evaluation of reliability: composite customer damage function (CCDF), customer outage cost (COC), and system customer outage cost (SCOC).

In typical distribution systems, radial circuits are formed by a main feeder and some laterals as depicted in Fig. 9.1. The main feeder is supplied by a primary substation (PS or HV/MV) and connects various switching substations (SWSU)_i that do not include power transformers to which the laterals are connected to supply the secondary substations (SS)_i. This radial configuration is simple and economical, but provides the lowest reliability level because secondary substations have only one source of supply. In Fig. 9.1, (PDu)_i and (PDd)_i are upstream and downstream protection devices, respectively, and (LP)_i are load points.

The open-loop configuration of Fig. 9.2 is formed by two main feeders supplied by the same primary substation (PS or HV/MV). Each feeder has eight switching substations that each supply one secondary substation (SS)_i. No laterals are present in this configuration, but each load point (LP)_i is supplied through a connection line of short length. The two feeder ends are typically disconnected by NO (normally open) switches, thus forming an open loop. Under normal conditions the NO switches separate the two main feeders of the system, but in the event of a fault they can be closed in order to supply power to loads that have been disconnected from the primary substation. In Fig. 9.2, (NOSW)₁ and (NOSW)₂ are normally open switches for the two main feeders 1 and 2, respectively.

Ring configurations are similar to open-loop schemes but are not operated in a radial manner. The main feeder is supplied at both ends by one primary substation (PS or HV/MV), but it forms a ring without normally open switches. Appropriate protection schemes allow higher

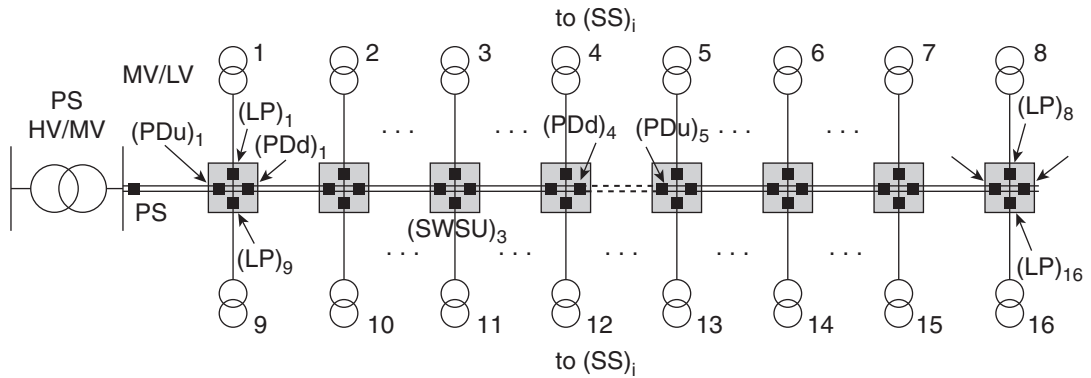


FIG. 9.1 Radial configuration with possible locations for protection devices (PD) at each switching substation (SWSU) with load points (LP).

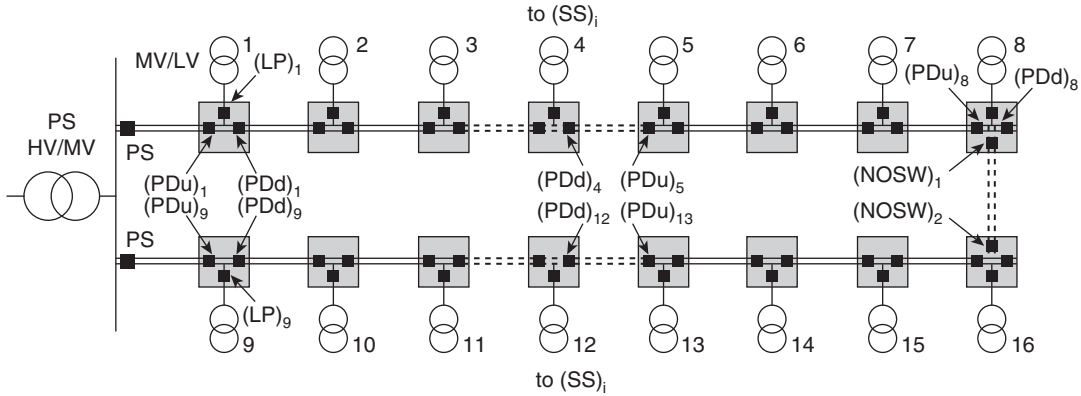


FIG. 9.2 Open-loop configuration with possible locations for protection devices at each switching substation.

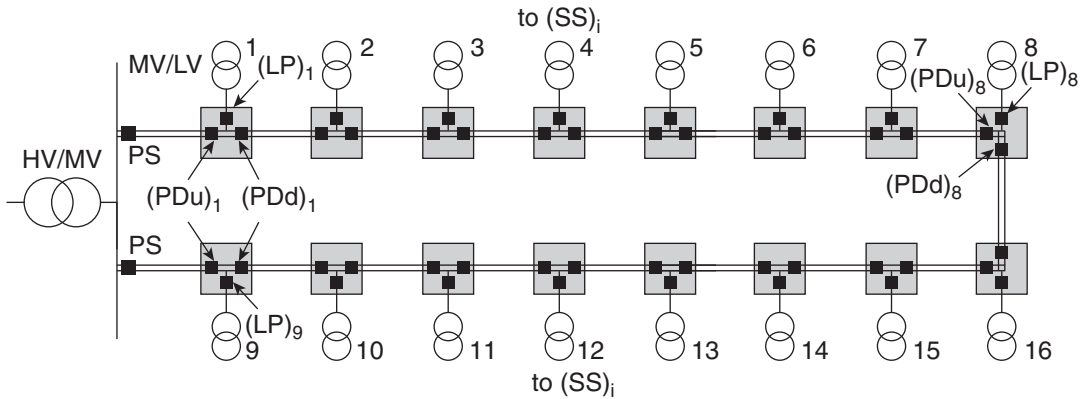


FIG. 9.3 Ring configuration with possible locations for protection devices at each switching substation.

reliability than for radial or open-loop configurations because one fault of the main feeder does not cause power failure at any LP. The ring configuration is shown in Fig. 9.3 whereby the number of load points (LPs), their topology, and their relative positions are the same as for the open-loop scheme.

Flower configurations are formed by ring schemes—resembling flower petals—and are supplied by the same primary substation (PS or HV/MV). Normally, the number of rings ranges from two to four for each PS. The rings belonging to different flower petals can be connected to one another through NO switches, increasing the system reliability. Fig. 9.4 illustrates two flower configurations supplying eight LPs each. Each PS is supposed to be placed at a load center. The number of LPs, their topology, and their relative positions are the same as in the cases previously considered.

The reliability evaluation of power systems concerns besides traditional approaches [4] with the impact of automation on distribution reliability [2,5,7], the reliability worth for

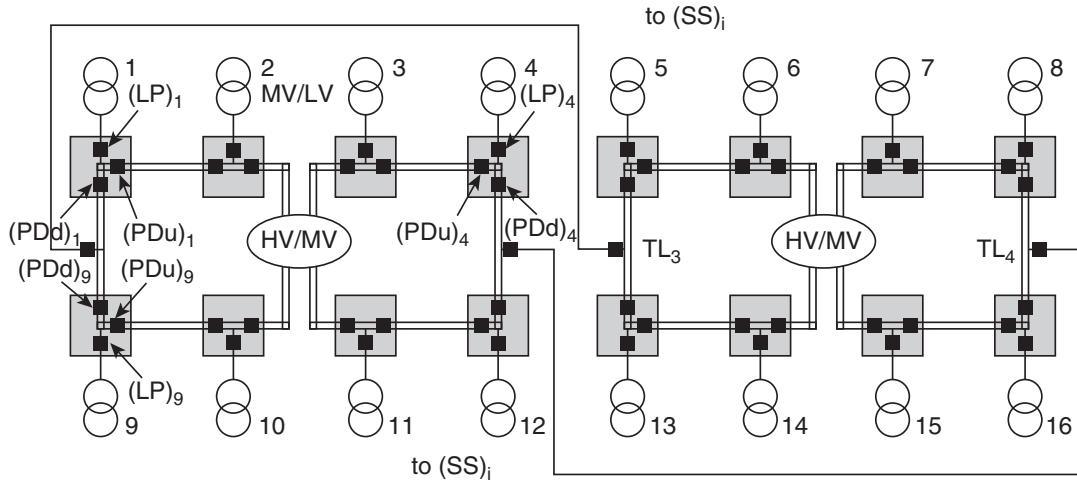


FIG. 9.4 Flower configuration with possible locations for protection devices at each switching substation.

distribution planning [3], and the role of automation on the restoration of distribution systems [6]. Reliability test systems are addressed in [8] and a reliability assessment of traditional versus automated approaches is presented in [9].

9.1.1 Application Example 9.1: Calculation of reliability indices

In this example, July has been chosen because in Colorado there are short-circuit faults, demand overload, line switching, capacitor switching, and lightning strikes as indicated in Table E9.1.1. The total number of customers is $N_T = 40,000$. Calculate the reliability indices

1. SAIDI = (sum of the number of customer interruption durations) / (total number of affected customers),
2. SAIFI = (sum of the number of customer interruptions) / (total number of affected customers), and

$$SARFI_{\%V} = \sum N_i / N_T,$$

3. where $SARFI_{\%V}$ is the number of specified short-duration rms variations per system customer (60 s aggregation). The notation “%V” refers to the bus voltage percent deviation that is counted as an event $SARFI_{\%V} = \sum N_i / N_T$, where %V is the rms voltage threshold to define an event, $\sum N_i$ is the number of customers that see the event, and N_T is the total number of customers in the study.

TABLE E9.1.1 Interruptions and transients during July 2006.

Number of interruptions or transients	Interruption or transient duration	Voltage (% of rated value)	Total number of customers affected	Cause of interruption or transient
4	4.5h	0	1000	Overload
6	3h	0	1500	Repair
25	1 min	90	2000	Switching transients
30	1 s	130	3000	Capacitor switching
50	0.1 s	40	15,000	Short circuits
55	0.1 s	150	4000	Lightning
70	0.01 s	50	3000	Short circuits

Solution to Application Example 9.1: Calculation of Reliability Indices

The reliability indices are

SAIDI = 0.003 h/customer, where interruptions with 0 V are taken into account,

SAIFI = 0.004 interruptions/customer, where interruptions with 0 V are taken into account,

$$SARFI_{\%V} = \frac{\sum N_i}{N_T} = 67.5\%.$$

In this case %V = $\pm 10\%$. For the SARFI index, the voltage threshold allows assessment of compatibility for voltage-sensitive devices. Typical annual value for SARFI is about 15% for a 70% voltage (%V) event.

9.2 Degradation of reliability and security due to poor power quality

9.2.1 Single-time and nonperiodic events

The reliability and security of power systems is impaired by natural and man-made phenomena. Both types change in their severity as the power system protection develops over time. There are single-time, periodic, nonperiodic, and intermittent events. Although before the advent of interconnected systems lightning strikes [10], ice storms [11–18], ferroresonance [19], faults [20], and component failures were mainly a concern, the fact that interconnected systems are predominantly used gave rise to the influence of sunspot cycles [21] on long transmission lines built on igneous rock formations, subsynchronous resonance [22] through series compensation of long lines, nuclear explosions [23], and terrorist attacks [24–27] as well as the increase of the ambient temperature above $T_{amb} = 40^\circ\text{C}$ due to global warming [28,29]. It is interesting to note that utilities install ice monitors [15] on transmission lines and make an attempt to melt ice through dielectric losses [16–18]. Ferroresonance can be avoided by employing gas (SF₆)-filled cables [30] for distribution systems above 20 kV. The effect of

sunspot cycles and those of nuclear explosions can be mitigated through the use of three-limb transformers with a large air gap between the transformer iron core and the tank [31]. The increase of the ambient temperature will necessitate a revision of existing design standards for electric machines and transformers, and an ambient temperature of 50°C is recommended for new designs of electrical components.

9.2.2 Harmonics and interharmonics affecting overcurrent and under-frequency relay operation [32]

The effects of nonsinusoidal voltages and currents on the performance of static under-frequency and overcurrent relays are experimentally studied in [33]. Tests are conducted for harmonics as well as sub- and interharmonics. Most single- and three-phase induction motors generate interharmonics within the rotating flux wave and the terminal currents due to the choice of the stator and rotor slots and because of air-gap eccentricity (spatial harmonics).

9.2.2.1 Under-frequency relays

The increases in operating time due to voltage harmonics from 0 to 15% of the fundamental are shown in Fig. 9.5 for a frequency set point of 58.99 Hz at frequency rate of changes of 1 Hz/s and 2 Hz/s, at a delay time of $T_D = 0$ s. Tests indicate [33] that under-frequency relays are very sensitive to interharmonics of the voltage because of the occurrence of additional zero crossings within one voltage period, and therefore, interharmonics should be limited from this point of view to less than 0.5%.

9.2.2.2 Overcurrent relays

A three-phase solid-state time and instantaneous overcurrent relay is self-contained and can have short time, long time, instantaneous, and ground protection on the options selected. The percentage deviations from the nominal (sinusoidal) rms current values operating the overcurrent relay at lower (e.g., -0.95%) or higher (e.g., +1.43%) (nonsinusoidal) rms current values are listed for various harmonic amplitudes and phase shifts (e.g., min, max) in [33]. One notes that current harmonics cause the overcurrent device in the worst case to pick up at $(100\% \pm 10\%)$ of the nominal rms value based on a sinusoidal wave shape. Similar measurements reveal that the same overcurrent relay has changes at the time delay—for a given pickup rms current setting—up to 45% shorter and up to 26% longer than the nominal time delay with no harmonics. The long-time delay pickup current value is reduced for most harmonics by 20% and increased for certain harmonics by 7%. An electromechanical relay, subjected to similar tests as the solid-state relay, performed in a similar manner as the latter. With regard to the instantaneous pickup, rms current harmonics cause the overcurrent relay to pick up in the worst case at $(100\% + 10\%)$ of the nominal rms value based on a sinusoidal wave shape. With regard to the time delay for given pickup rms current values, harmonics cause the hinged armature overcurrent relay to pick up in the worst case ($I_h/I_1 = 60\%$) at $(100\% + 43\%)$ of the nominal rms value based on sinusoidal wave shape.

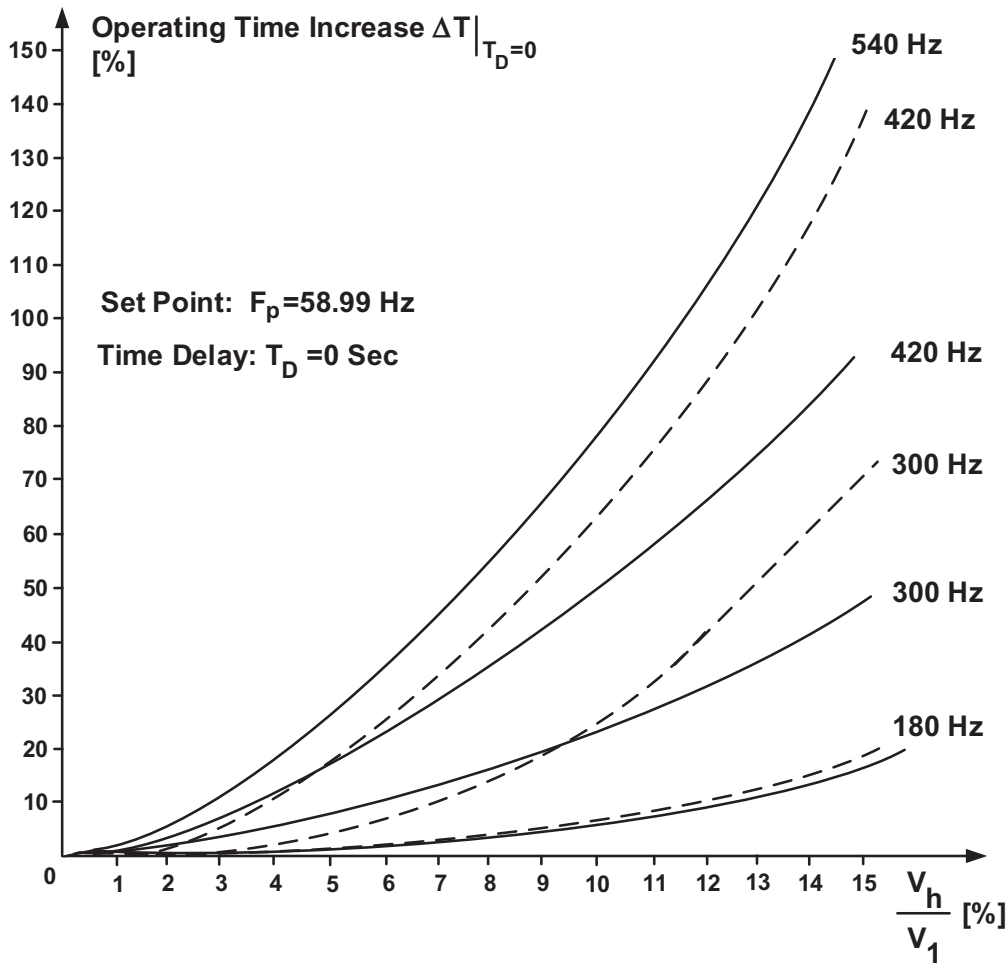


FIG. 9.5 Operating time increase $\Delta T|_{T_D=0}$ due to voltage harmonics for the frequency set point $F_p = 58.99$ Hz. (—) Frequency rate of change of $\Delta f = 1$ Hz/s and an operating time of $T_{T1} = 60.5$ cycles or 1.008 s. (---) Frequency rate of change of $\Delta f = 2$ Hz/s and an operating time of $T_{T2} = 25$ cycles or 0.417 s.

9.2.3 Power-line communication

Power-line carrier applications are described in [34–39]. They consist of the control of non-essential loads (load shedding) to mitigate undervoltage conditions and to prevent voltage collapse. High-frequency harmonics, interharmonics caused by solid-state converters, and voltage fluctuations caused by electric arc furnaces can cause interferences with power-line communication and control. Newer approaches for automatic meter reading [40–42] and load control are based on wireless communication. Reference [43] addresses the issue of optimal management of electrical loads.

9.2.4 Electromagnetic field (EMF) generation and corona effects in transmission lines

The minimization and mitigation of electromagnetic fields (EMFs) and corona effects, e.g., radio and television interference, coronal losses, audible noise, ozone production at or above 230/245 kV high-voltage transmission lines, is important. After addressing the generation of electric and magnetic fields, mechanisms leading to corona, the factors influencing the generation of corona, and its negative effects are explained. Solutions for the minimization of corona in newly designed transmission lines and reduction or mitigation of corona of existing lines are well known but not, however, always inexpensive. California's Public Utilities Commission initiated hearings in order to explore the possibilities of "no-cost/low-cost" EMF mitigation. A review of these ongoing hearings and their outcomes will be given. The difficulties associated with obtaining the right of way for new transmission lines lead to the upgrading of existing transmission lines with respect to higher voltages in order to increase transmission capacity. In the past, high-voltage lines with voltages of up to $V_{L-L} = 200$ kV were considered acceptable in terms of the generation of corona effects [35,44–46]. However, the concern that electromagnetic fields may cause in addition to corona also detrimental health effects leads to renewed interest in reexamining the validity of the stated voltage limit with respect to their impact on the health of the general population. This section presents a brief summary of many publications.

9.2.4.1 Generation of EMFs

Electric field strength $\vec{E}$

The electric field strength $\vec{E}$ of a single conductor having a per-unit length charge of Q is

$$\vec{E} = \frac{1}{4\pi\epsilon_0} \cdot \frac{Q}{r^2} \vec{r}, \quad (9.1)$$

where ϵ_0 and $\vec{r}$ are the permittivity of free space and the unit vector in radial direction of a cylindrical coordinate system, respectively. Note that $\vec{E}$ reduces inversely in a quadratic manner with the radial distance r . For a three-phase system the three electric field components E_a , E_b , and E_c must be geometrically superimposed at the point of interest. Q is proportional to the transmission line voltage V , that is, the absolute value of $\vec{E}$ is proportional to V .

9.2.4.2 Application Example 9.2: Lateral profile of electric field at ground level below a three-phase transmission line

If the calculation of the electric field at ground is repeated at different points in a section perpendicular to the transmission line, the lateral profile of the transmission-line electric field is obtained. Examples of calculated lateral profiles are presented in Fig. E9.2.1. Particularly important for the line design is the maximum (worst case) field and the field at the edge of the transmission corridor. The maximum field occurs within the transmission corridor, though for flat configurations it might occur slightly outside the outer phases. Fig. E9.2.2 shows universal curves using nondimensional quantities that may be used to calculate the maximum electric field at ground for a flat configuration. Results for other configurations are given in [47].

Find the maximum (worst case) electric field at ground for a rated line-to-line voltage of $V_{L-L} = 525 \text{ kV}$, a $3 \times 3.3 \text{ cm}$ conductor bundle with 45 cm spacing, phase-to-phase distance $S = 10 \text{ m}$, the equivalent bundle diameter of $D = 0.3 \text{ m}$, and height of the center of the bundle to ground $H = 10.6 \text{ m}$.

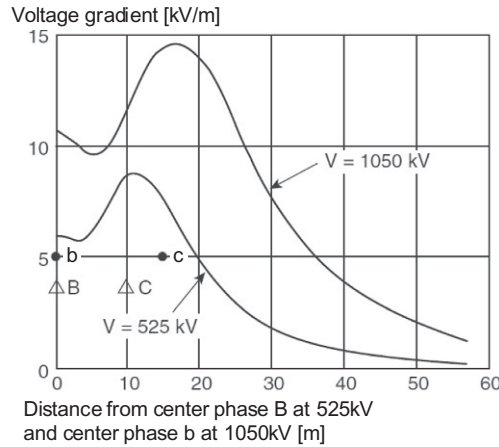


FIG. E9.2.1 Lateral profiles of electric field $|\vec{E}|$ at ground level. Line at $V_{L-L} = 525 \text{ kV}$ with $3 \times 3.3 \text{ cm}$ (bundle) conductors on $D = 30 \text{ cm}$ diameter, 45 cm spacing, spaced 10 m , and 10.6 m above ground, flat configuration (phases B and C). Line at $V_{L-L} = 1050 \text{ kV}$ with $8 \times 3.3 \text{ cm}$ (bundle) conductors on $D = 101 \text{ cm}$ diameter, spaced 18.3 m , and 18.3 m above ground, flat configuration (phases b and c).

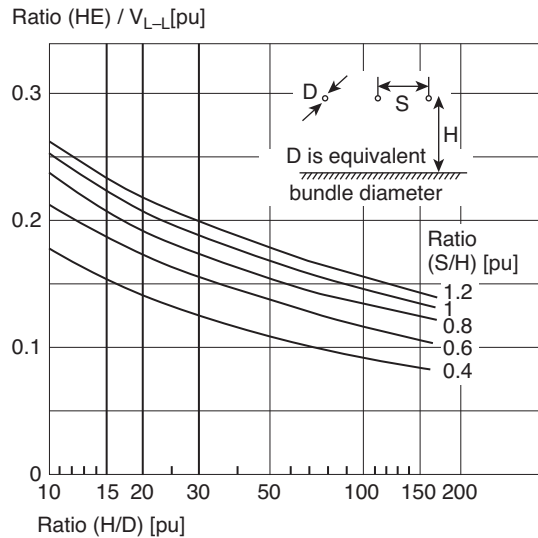


FIG. E9.2.2 Universal curves to calculate the maximum (worst case) electric field $|\vec{E}| = E$ at ground level for lines of flat configuration. H is the height to the center of the bundle.

Solution to Application Example 9.2: Lateral Profile of Electric Field at Ground Level below a Three-Phase Transmission Line

The ratios $H/D = 10.6/0.3 = 35.3$, $S/H = 10/10.6 = 0.94$ result with Fig. E9.2.2 in $HE/V_{L-L} = 0.179$. The maximum (worst case) electric field at ground is then $|\vec{E}| = E = 0.179 \cdot 525 \text{ k}/10.6 = 8.8 \text{ kV/m} = 8.8 \text{ V/mm}$; this value is confirmed by Fig. E9.2.1. Note that the presence of overhead ground wires has a negligible effect on the field at ground.

Magnetic field strength $\vec{H}$

The magnetic field strength $\vec{H}$ of a single conductor carrying a current I is

$$\vec{H} = \frac{1}{2\pi} \cdot \frac{I}{r} \vec{\phi}, \quad (9.2)$$

where $\vec{\phi}$ is the azimuthal unit vector of a cylindrical coordinate system. Note that $\vec{H}$ decreases inversely with the radial distance r . For a three-phase system the three magnetic field components H_a , H_b , and H_c must be geometrically superimposed at the point of interest. The absolute value of the magnetic field $\vec{H}$ is proportional to I [48].

9.2.4.3 Application Example 9.3: Lateral profile of magnetic field at ground level under a three-phase transmission line

In most practical cases, the magnetic field in proximity to balanced three-phase lines may be calculated, considering the currents in the conductors and in the ground wires and neglecting the earth currents. As a result one obtains a magnetic field ellipse with minor and major axes as shown in Fig. E9.3.1. For the worst case (maximum) ground level magnetic field, find the corresponding values of the magnetic-field intensity H and flux density B .

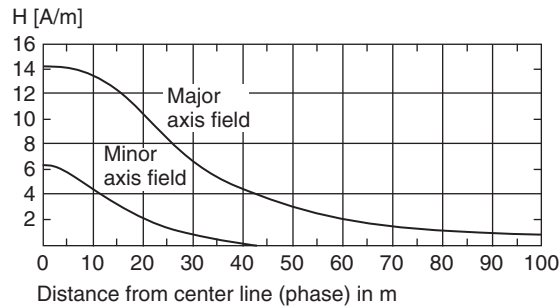


FIG. E9.3.1 Magnetic field strength $|\vec{H}| = H$ at ground level given as magnitudes of the major (real part of $|\vec{H}|$ phasor) and minor (imaginary part of $|\vec{H}|$ phasor) axes of the field ellipse. Conductor currents i_a , i_b , and i_c have a magnitude of 2000 A each.

Solution to Application Example 9.3: Lateral Profile of Magnetic Field at Ground Level under a Three-Phase Transmission Line

Based on Fig. E9.3.1, the maximum (worst case) ground level magnetic field (magnetic-field intensity) occurs at the center line of the transmission line and is $|\vec{H}_{\text{worst}}| = H_{\text{worst}} = 14 \text{ A/m}$, which corresponds to a flux density $|\vec{B}_{\text{worst}}| = B_{\text{worst}} = 0.176 \text{ G} = 176 \text{ mG}$. For comparison, the earth magnetic field is about $B_{\text{earth}} = 0.5 \text{ G} = 500 \text{ mG}$. It should be noted, however, that the earth field is not time-varying, whereas the transmission line field varies with 60 Hz frequency.

9.2.4.4 Mechanism of corona

Electrical discharges are usually triggered by an electric field $\vec{E}$ accelerating free electrons through a gas. When these electrons acquire sufficient energy from an electric field, they may produce fresh ions by knocking electrons from atoms and molecules by collision. This process is called ionization by electron impact. The electrons multiply, as illustrated in Fig. 9.6, where secondary effects from the electrodes make the discharge self-sustaining. The initial electrons that start the ionizing process are often created by photoionization: a photon from some distant source imparts enough energy to an atom so that the atom breaks into an electron and a positively charged ion. During acceleration in the electric field, the electron collides with the atoms of nitrogen, oxygen, and other gases present. Most of these collisions are elastic collisions similar to the collision between two billiard balls. The electron loses only a small part of its kinetic energy with each collision. Occasionally, an electron may strike an atom sufficiently hard so that excitation occurs, and the atom shifts to a higher energy state. The orbital states of one or more electrons changes, and the impacting electron loses part of its kinetic energy. Later, these excited atoms may revert to normal state, resulting in a radiation of the excess energy in the form of light (visible corona) and electromagnetic waves. An electron may also collide (recombine) with a positive ion, converting the ion to a neutral atom. Fig. 9.7 shows the development of corona along an energized wet conductor, and Fig. 9.8 illustrates the frequency of corona discharge.

9.2.4.5 Factors reducing the effects of EMFs

Active shielding or cancellation/compensation of EMFs

Active shielding is possible through compensation of electric and magnetic fields by suspending several transmission-line systems on the same towers (e.g., reverse-phased double circuit). This method is useful for newly designed transmission lines: it mitigates the generation of EMFs and reduces the amount of land used for transmission-line corridors. Fig. 9.9

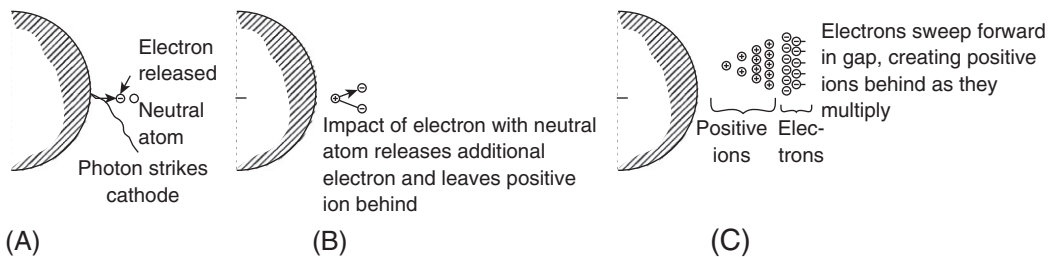


FIG. 9.6 Start of an electron avalanche from a negative electrode: (A) initiation, (B) formation of an electron pair, (C) multiplication of electron pairs or forming of avalanche.

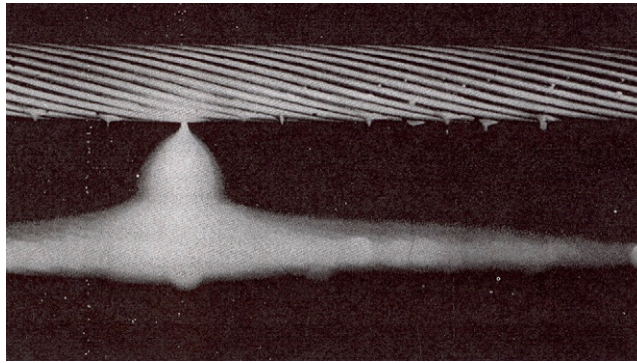


FIG. 9.7 Energized wet conductor with surface dirt or an insect generates plasma during discharge [47].

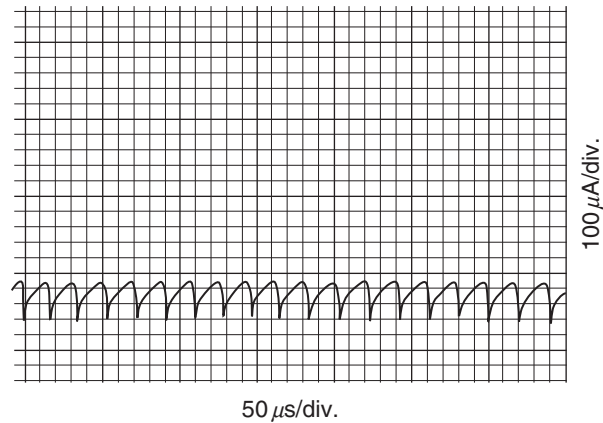


FIG. 9.8 Corona discharge at cathode resulting in 50kHz electric noise signal [47].

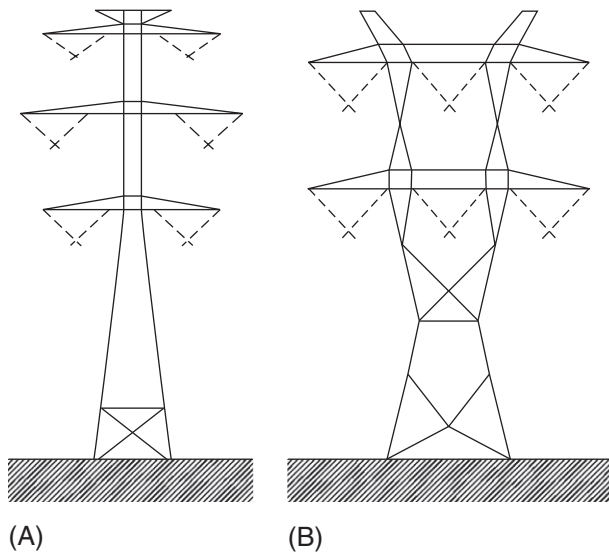


FIG. 9.9 Two transmission line configurations (panels A and B) for line-to-line voltages of 345kV, where the magnetic (as well as electric) fields are partially compensated (e.g., reverse-phased double circuit).

presents two configurations that are frequently used in practice. Within buildings and residences E. A. Leeper [49] explains how the EMFs can be compensated by active circuits.

Passive shielding/mitigation using bypassing networks

Passive shielding can be accomplished by using horizontal and vertical conducting grid (mesh) structures. Natural shields are provided by trees and houses. Conductive suits for linemen can protect individuals working in or near transmission corridors.

9.2.4.6 Factors influencing generation of corona

At a given voltage, corona is determined by conductor diameter, line configuration, type of conductor (e.g., stranded), condition of its surface, and weather. Rain is by far the most important aspect of weather in increasing corona. The effect of atmospheric pressure and temperature is generally considered to modify the critical disruptive voltage (where the corona effects set in) of a conductor directly, or as the $2/3$ exponent of the air density factor, δ , which is given by [35]

$$\delta = \frac{17.9 \cdot (\text{barometric pressure in inches Hg})}{459 + ^\circ \text{ Fahrenheit}} \quad (9.3)$$

The equation for the critical disruptive voltage is

$$V_{L-N_o} = g_o \cdot \delta^{2/3} \cdot r \cdot m \cdot \ln\left(\frac{D}{r}\right), \quad (9.4)$$

where

V_{L-N_o} = critical disruptive voltage in kV from line to neutral,
 g_o = critical gradient in kV per centimeter,
 r = radius of conductor in centimeters,
 D = distance in centimeters between two conductors, and
 m = surface factor.

Corona in fair weather is negligible or moderate up to a voltage near the disruptive voltage for a particular conductor. Above this voltage corona effects increase very rapidly. The calculated disruptive voltage is an indicator of corona performance. A high value of critical disruptive voltage is not the only criterion of satisfactory corona performance. Consideration should also be given to the sensitivity of the conductor to foul weather.

9.2.4.7 Application Example 9.4: Onset of corona in a transmission line

A $V_{\text{rated}} = 345$ kV_{L-L} transmission line with $g_o = 21.1$ kV/cm (e.g., see Fig. E9.4.1B), $r = 1.6$ cm, $D = 760$ cm, $m = 0.84$ where at an altitude of 6000 ft the barometric pressure is 23.98 in. Hg (mercury) results at a temperature of -30°F in an air density factor of $\delta = 1.00$. Calculate the critical disruptive voltage V_{L-N_o} .

Solution to Application Example 9.4: Onset of Corona in a Transmission Line

The critical disruptive voltage is $V_{L-N_o} = 174$ kV. That is, $(V_{L-N_o} \cdot \sqrt{3}) = 300$ kV_{L-L} $< V_{\text{rated}}$ and corona will exist on this 345 kV line—even under fair weather conditions. Under foul

(e.g., dirt, rain, frost) weather conditions the critical value of 300 kV_{L-L} will be further reduced. Fig. E9.4.1A gives the transmission line dimensions in meters for the $V_{L-L} = 362 \text{ kV}$ class. Fig. E9.4.1B presents the conductor surface gradient g_o for a 362 kV class of transmission lines. N is the number of phase (sub) conductors. Similar plots are given in [47] for other classes of transmission lines, e.g., aluminum-cable steel reinforced (ACSR).

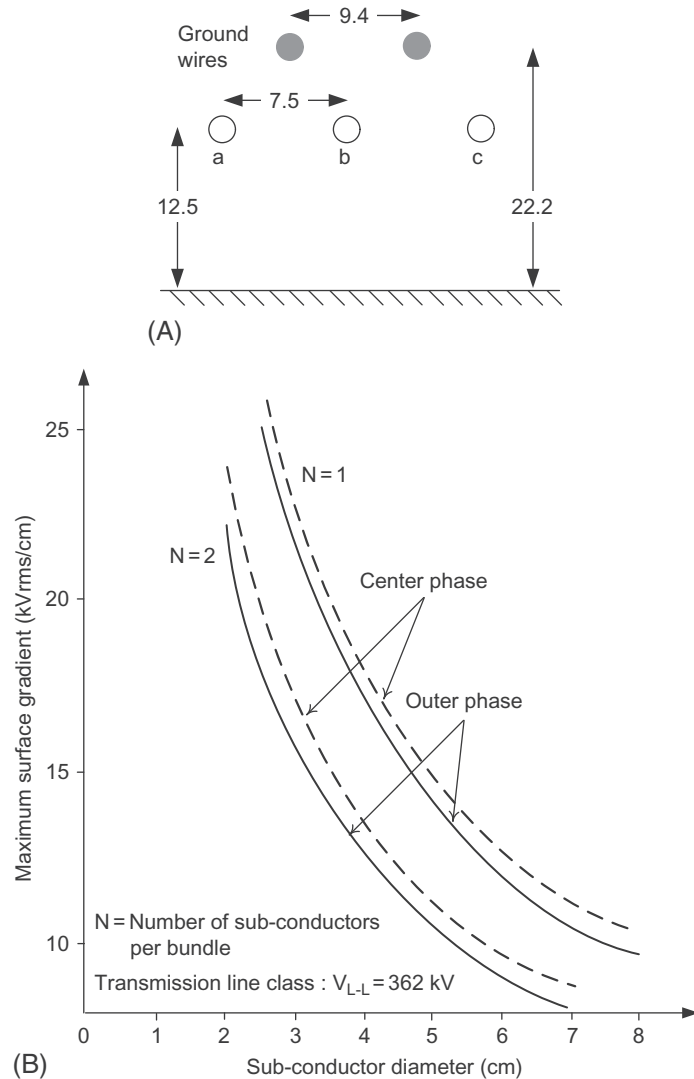


FIG. E9.4.1 (A) Transmission line dimensions in meters for the $V_{L-L} = 362 \text{ kV}$ class. (B) Conductor surface gradient g_o as a function of subconductor diameter, horizontal, $V_{L-L} = 362 \text{ kV}$ class, where N is the number of (sub) conductors within a bundle per phase.

The power loss associated with corona can be represented by shunt conductance. Fig. E9.4.2 presents the coronal loss during fair weather conditions for different types of transmission lines. Corona loss ranges from about 0 up to 35 kW per three-phase mile. For a 500 mile transmission line the latter loss per mile value amounts to 17.5 MW. At line-to-line voltages above 230 kV, it is preferable to use more than one conductor per phase, which is known as bundling of conductors. The bundle can consist of two, three, four, or more subconductors. Fig. E9.4.3 illustrates a flat configuration consisting of three bundles with six subconductors each. Bundling increases the effective radius of the line's conductor per phase and reduces the electric field strength $\vec{E}$ near the conductors, which reduces corona power loss, audible noise, radio and television interference, and the generation of ozone (O_3) and nitrogen oxides (NO_x). Another important advantage of bundling is reduced transmission line reactance, therefore increasing transmission capacity. Table E9.4.1 illustrates bundle dimensions as a function of the number of subconductors.

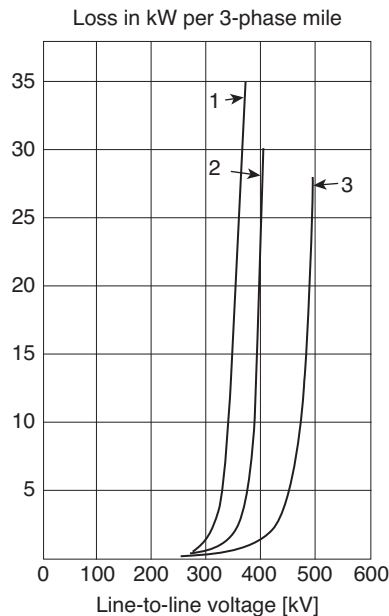


FIG. E9.4.2 Fair weather corona loss curves for smooth conductors at an air density factor $\delta = 1.0$. Curve 1: 1.4 in. hollow copper conductor (HH), $V_{L-L} = 287.5$ kV line; Curve 2: 1.1 in. HH conductor has smooth surface, $V_{L-L} = 230$ kV line; Curve 3: 1.65 in. smooth conductor has poor surface, $V_{L-L} = 230$ kV line.

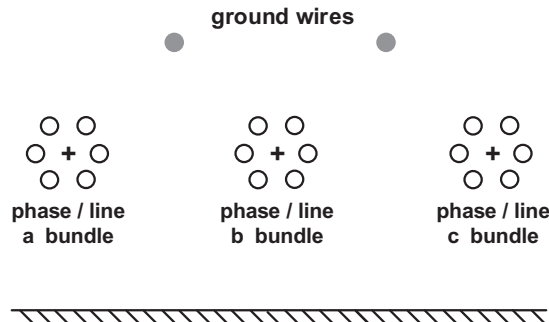


FIG. E9.4.3 Single-circuit horizontal (flat) line configuration.

TABLE E9.4.1 Bundle diameters as a function of number of subconductors.

Conductors per phase	Bundle diameter (cm)
2	45.7
3	52.8
4	64.6
6	91.4
8	101.6
12	127.0
16	152.4

9.2.4.8 Negative effects of EMFs [50,51] and corona

Biological effects of electric fields $\vec{E}$ on people and animals

To date, no specific biological effect of AC electric fields of the type and value applicable to transmission lines has been conclusively found and accepted by the scientific community. It is noteworthy to mention the rules established in the USSR (Union of Soviet Socialist Republics) for extra high voltage (EHV) substations and EHV transmission lines. For substations, limits for the duration of work in a day have been established as indicated in Table 9.1.

For transmission lines, considering the infrequent and nonsystematic exposure, higher values of the electric field strength $\vec{E}$ are accepted:

- 20 kV/m for difficult terrain,
- 15–20 kV/m for nonpopulated region, and
- 10–12 kV/m for road crossing.

Suggested biological effects of magnetic fields $\vec{H}$ and $\vec{B}$ on people and animals

The value of the magnetic field strength $\vec{H}$ at ground level close to transmission lines is of the order of 5–14 A/m corresponding to magnetic field densities of $|\vec{B}|$ from 0.08 to 0.3 G. Note that 1 gauss (G) is equivalent to 10^{-4} tesla (T) or 10^{-4} Wb/m² or 10^{-4} Vs/m² in the meter-kilogram-second-ampere (MKSA) system of units.

TABLE 9.1 Union of Soviet Socialist Republics (USSR) rules for duration of work in substations.

Electric field strength $ \vec{E} $ (kV/m)	Permissible duration (minutes per day)
<5	No restriction
5–10	180
10–15	90
15–20	10
20–25	5

Magnetic AC fields have been reported to affect blood composition, growth, behavior, immune systems, and neural functions. However, at present, there is a lack of conclusive evidence.

Effects of corona

Corona produces in the range of $V_{L-L} = 230\text{kV}$ and higher

- power loss,
- audible (acoustic) hissing sound in the vicinity of the transmission corridor,
- ozone (O_3) and NO_x , where NO_x is a generic term for the mono-nitrogen oxides NO and NO_2 (nitric oxide and nitrogen dioxide), and
- radio and television interference.

The audible noise is an environmental concern. Radio interference (RI) occurs in the AM (amplitude modulation) band. Rain and snow may produce moderate TV interference (TVI) in a low signal area. Note that voice signals are frequency modulated (FM), and video signals are amplitude modulated (AM). More recently high-definition television (HDTV) relies on digital signals which are less impacted by corona.

9.2.4.9 Solutions for the minimization of EMFs, corona, and other environmental concerns in newly designed transmission lines

Designing a transmission line with minimum environmental impact requires a study of five key factors:

1. impact of electric $\vec{E}$ and magnetic fields $\vec{H}$,
2. visual impact of the design,
3. generation of corona and its influence on radio and television interference,
4. air pollution via the generation of ozone O_3 and NO_x , and
5. impact of physical location.

A properly designed transmission line will have almost no perceptible negative environmental effects during fair weather, thus reducing disturbances, if they occur at all, to a small fraction of time.

EMFs

Although electric fields can be more readily reduced by shielding through structures with high conductivity (e.g., fences, trees), the reduction of magnetic fields is more difficult to achieve through shields with high permeability. Compensation or canceling of magnetic fields through the suspension of several transmission-line systems (e.g., reverse-phased double circuits) on the same tower as well as mounting the lines on higher towers near populated areas are frequently employed solutions. The employment of higher transmission-line voltages increases electric fields; however, they reduce the magnetic fields, which are more difficult to deal with.

Visual impact

Reduction of the visual impact of a transmission line requires proper blending of the line with the countryside. Also the design and the location of supporting structures should not be

objectionable to observers. Improvement in visual impact must be evaluated in conjunction with the economic penalty that the design incurs.

Audible noise, radio interference (RI), and television interference (TVI) caused by corona

In the United States, there exist no regulations on a local or federal level that expressly limit the level of radio noise that a transmission line may produce. The Federal Communications Commission (FCC) places power transmission lines in the category of “incidental radiation device.” As such, the FCC requires that the “device shall be operated so that the radio frequency energy that is emitted does not cause any emissions, radiation or induction which endangers the function of a radio navigation service or other safety services, or seriously degrades, obstructs or repeatedly interrupts a radio communication service” operating in accordance with FCC regulations. Fig. 9.10 shows typical frequency spectra of corona-induced radio noise, and Fig. 9.11 illustrates a typical lateral profile of radio noise. Fig. 9.12 illustrates radio noise tolerability criteria caused by corona, one for fair weather and one for foul weather; in addition there exists a 120 Hz hum (at 60 Hz) due to the changing energy content of the lines. Video signals are more affected than sound signals because they are amplitude modulated whereas the latter are frequency modulated. HDTV is less affected by corona. A reduction of the radio noise entails a reduction of corona effects (e.g., bundle conductors). Note that the number of decibels (dB) is defined by $\text{dB} = 20 \log_{10}(v_{\text{out}}/v_{\text{in}})$.

Ozone (O₃) and NO_x generation

NO_x is a generic term for the mono-nitrogen oxides NO and NO₂ (nitric oxide and nitrogen dioxide). Fig. 9.13 shows an example of ozone recordings for a 1300 kV line with large corona loss of 650 kW/km. Although ozone is the primary gaseous corona product, nitrogen oxides (NO_x) may also be generated. The percentage of nitrogen oxide production is about one-sixth of that of ozone. The generation of ozone due to disassociation of oxygen in the corona region

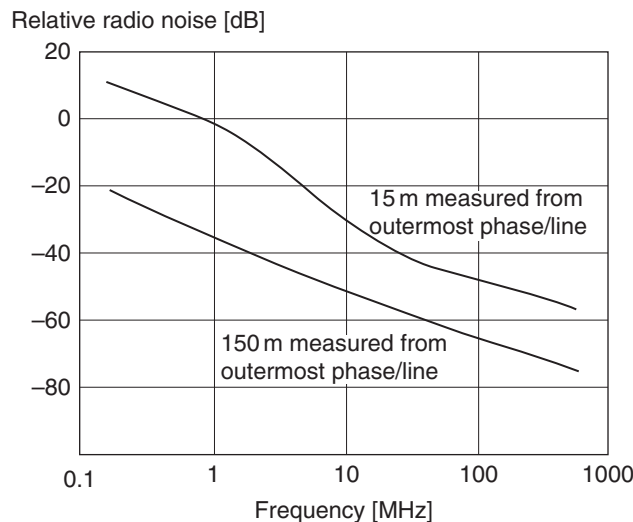


FIG. 9.10 Typical frequency spectra of corona-produced radio noise.

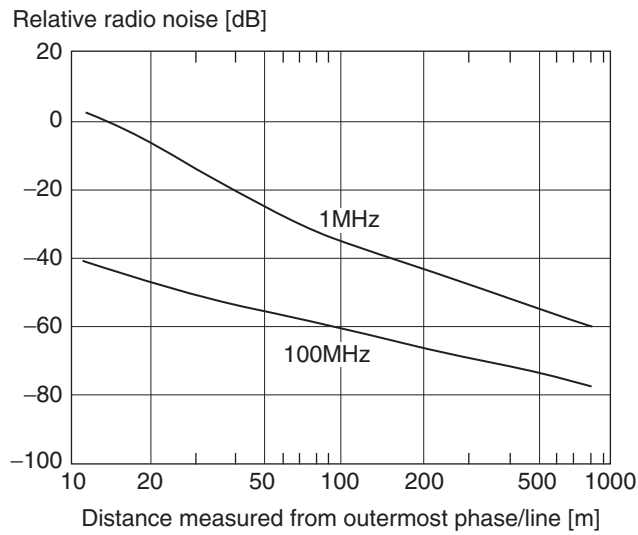


FIG. 9.11 Typical lateral profiles of radio noise.

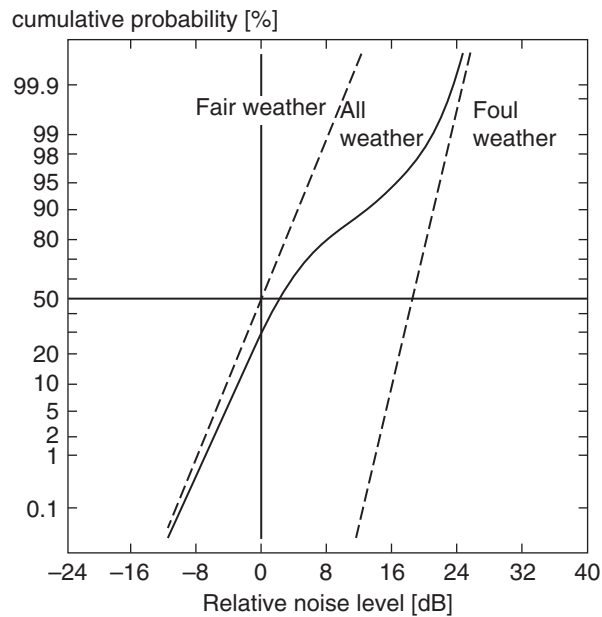


FIG. 9.12 Typical all-weather cumulative frequency distribution of radio noise, and approximation by Gaussian distribution.

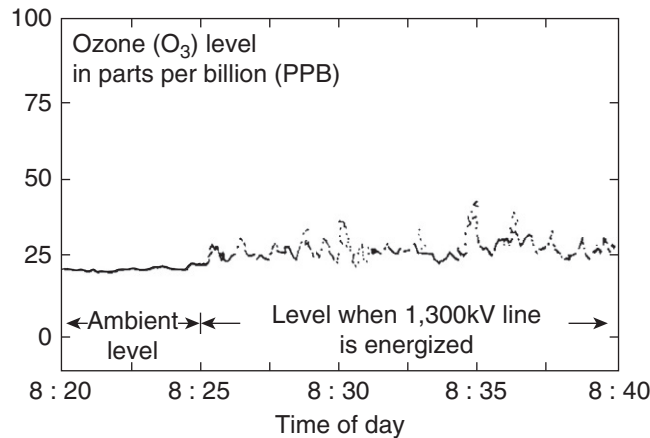


FIG. 9.13 Detection of ozone from a 1300 kV test line. Coronal loss is 650 kW/km and wind velocity is 1.6 m/s with sensors at line height. Ozone (O_3) is measured in parts per billion (ppb).

around the conductor is not of sufficient magnitude to be harmful. At ground level it has been found to be less than the daily natural variation. Conductor bundling is one method of reducing corona and its associated ozone generation.

Impact of physical location of transmission lines

The designer must also consider the environmental effects that the transmission line will have by its presence on certain land. These include the effect on wildlife, use of park areas, access to property, future planning, land values, and existing electromagnetic signal sources (e.g., communication transmitters). This is accomplished by rating each land parcel and selecting a route with a minimum environmental impact.

9.2.4.10 Economic considerations

Corona loss of a well-designed transmission line should be below 1 kW per three-phase mile. This loss can be controlled by selecting proper configurations of bundle conductors (see Fig. E9.4.3 and Table E9.4.1). A bundle conductor is a conductor made up of two or more subconductors, and is used as one-phase conductor. Bundle conductors are not economical at or below 200 kV, but for rated voltages of 400 kV or more they are the best solution for overhead transmission lines. The increase in transmitting capacity justifies economically the use of two-conductor bundles on 220 kV lines.

The advantages of bundle conductors are higher disruptive voltage with conductors of reasonable dimensions, reduced surge impedance and consequent higher power capabilities, and less rapid increase of corona loss and RI with increased voltage. These advantages must be weighed against increased circuit cost and increased charging apparent power (kVA). Theoretically there is an optimum subconductor separation for bundle conductors that will give the minimum crest gradient on the surface of a subconductor and hence highest disruptive voltage.

9.2.4.11 No-cost/low-cost EMF mitigation hearings of PUC of California [52]

Electric fields $\vec{E}$ measured in V/m are created whenever power lines are energized with a voltage, whereas magnetic fields $\vec{H}$ measured in A/m (or $\vec{B}$ measured in milligauss) are created when current flows through the lines. Both electric and magnetic fields attenuate rapidly with distance from the source. Electric fields are effectively shielded by materials such as trees or buildings, whereas magnetic fields are not easily shielded by objects or materials. Therefore, concerns regarding potential power line EMF health effects arise primarily due to exposure to magnetic fields H .

On January 15, 1991, the California Public Utilities Commission (CPUC) began an investigation to consider the Commission's potential role in mitigating health effects, if any, of EMFs created by

1. electric utility power lines, and
2. cellular radiotelephone facilities.

Due to the lack of scientific or medical conclusions about potential health effects from utility electric facilities and power lines, the CPUC adopted seven interim measures that help to address public concern on this subject.

- No-cost and low-cost steps to reduce EMF levels: When regulated utilities design new projects or upgrade existing facilities, approximately 4% of the project's budget may be used for reducing EMFs. The CPUC did not set specific reduction levels for EMFs. It was considered to be inappropriate to set a specific numerical standard until a scientific basis for doing so exists. No-cost measures are those steps taken in the design stage, including changes in standard practice, that will not increase the project cost but will reduce the magnetic flux density. Maximum (worst case) magnetic flux densities that could be permitted are ranging from 1 to 10 mG. Low-cost measures are those steps that will cost about 4% or less of the total project cost and will reduce the magnetic field flux density in an area (e.g., by a school, near residence) by approximately 15% or more at the edge of the right-of-way.
- New designs to reduce EMF levels: The CPUC initiated workshops to establish guidelines for new and rebuilt facilities. These guidelines incorporate alternative sites, increase the size of rights-of-way, place facilities underground, and use other suggested methods for reducing EMF levels at transmission, distribution, and substation facilities.
- Uniform residential and workplace EMF measurement methods are to be established.
- Promotion of education and research: The Department of Health Services (DHS) should manage such programs supported by public and utility funds.

CPUC-regulated utilities and municipal utilities may use ratepayer funds to pay their share of development costs for the following programs:

- EMF education,
- EMF research, and
- other research.

It has been many years since the CPUC devised the above-mentioned seven interim measures. During this time a significant body of scientific research has developed. In 2002, the DHS completed its comprehensive evaluation of existing scientific studies. Although there is still no consensus in the scientific community regarding health risks of EMF exposure, DHS reported troubling indications that EMF exposure may increase risk of certain diseases

(e.g., childhood and to some extent adult leukemia, adult brain cancer, Lou Gehrig's disease) and other health problems.

9.2.4.12 Summary and conclusions

The results of the many papers and books published in the area of generation of EMFs and corona by transmission lines can be summarized as follows:

- Transmission lines with line-to-line voltages of up to 200 kV do not generate any significant amount of corona; however, such lines can generate significant amounts of EMFs. For transmission lines with line-to-line voltages above 200 kV the following conclusions can be drawn: maximum (worst case) AC electric field strength $\vec{E}$ at ground level below transmission line is up to $|\vec{E}_{worst}| = 15 \text{ V/mm}$ at a line-to-line voltage of 1050 kV. The maximum occurs at the edge of transmission corridor. An electric field strength of $|\vec{E}_{acceptable}| = 5 \text{ V/mm}$ is acceptable. Maximum (worst case) AC magnetic field strength $\vec{H}$ at ground level below transmission line is $|\vec{H}_{worst}| = 14 \text{ A/m}$ corresponding to a maximum flux density $|\vec{B}_{worst}| = 0.176 \text{ G} = 176 \text{ mG}$ at a phase current of 2000 A. Note the DC earth field is about $B_{earth} = 0.5 \text{ G}$. A flux density of $|\vec{B}_{acceptable}| = 3 \text{ mG}$ is acceptable.
- Corona depends on construction of transmission towers including type of conductors, e.g., hollow copper cable (e.g., HH) or aluminum cable steel reinforced (ACSR), surface of cable, type of bundle, fair or foul weather conditions, temperature, barometric pressure, and air density.
- Corona loss of 1 kW/three-phase mile is acceptable.
- Radio and television interference occurs within the 0.1 MHz to 1 GHz range.
- Audible noise ranges from 50 Hz to 120 Hz (power-frequency hum) to 10 kHz (hissing noise).
- Additional ozone (O_3) production is in the range of 15 ppb (parts per billion). The naturally occurring level is 25 ppb. That is, O_3 production by power lines is insignificant.
- Nitrogen oxide (NO_x) production is about one-sixth of the ozone generation. That is, NO_x production by power lines is insignificant.
- Active compensation (e.g., through compensation of EMFs by arranging several transmission systems on one tower, by reducing, compensating, or canceling EMFs in houses through compensation circuits) is possible.
- Passive (e.g., horizontal or vertical mesh structures, conductive suits) and natural shielding (e.g., trees, houses) is possible.
- Overall control of EMFs and corona through transmission line (e.g., bundle conductors, reverse-phased double circuit) and tower construction (e.g., height) is feasible; it is, however, more expensive.
- For newly designed transmission lines all environmental concerns (e.g., limits for EMFs, RI, and TVI) and technical constraints (corona loss of 1 kW/three-phase mile) can be satisfied.
- The mitigation of detrimental environmental, technical, or economic effects of existing transmission lines will be difficult to achieve at no or low cost as proposed by the Public Utilities Commission of California.

- The issue has surfaced that corona on transmission lines may create X-rays. A practical lower bound of X-rays is at least 2 keV. However, the electrical discharges of coronal activity on transmission lines can produce electron energies on the order of about 1 to 10 eV. This is sufficient for production of visible light but is orders of magnitude below electron energies necessary for the production of X-rays by transmission line corona [53]. That is, transmission lines do not generate X-rays.

9.2.5 Distributed-, cogeneration, and frequency/voltage control

Renewable energy sources such as solar and windpower [54,55] plants have an intermittent power output. Nevertheless it is desirable to operate them at maximum power output, for example, employment of peak-power tracker for photovoltaic plant [56]. With such peak-power and intermittent-power constraints it is impossible to operate a power system with distributed generation (DG) sources only because the drooping characteristics [57] which are responsible for load sharing require that at least one plant can deliver the additional power as requested by the utility customers, thus serving as base-load plant with spinning reserve capability. This is the reason why in Denmark [58] the control of the power system becomes more difficult as the renewable contribution approaches 50% of the total generation. This is so because the entire system exhibits properties of so-called weak systems with low short-circuit capabilities. As an alternative to a large power plant serving as a frequency leader—which can deliver sufficient additional power so that the frequency control will not be impaired—it is possible to strategically place storage peak-power plants based on pumped-hydro [59,60] or compressed-air facilities [61,62] that can provide peak power for several hours per day, for example, 22 h of continuous generation at 1600 MW.

Related to the availability of spinning reserve—which should be in the neighborhood of about 5% to 10% of the total installed power capacity—is the fast valving [63,64] so that the time constants of the speed control circuit (e.g., governor) can be maintained within certain limits. In addition, near-term [65,66] and long-term [67,68] load forecasts are important for the reliable operation of the power system with intermittently operating renewable energy sources. It is the task of control and dispatch centers to set the load reference points for each and every generation plant within an interconnected power system. From the following application examples one learns that renewable energy sources alone—operated at their maximum-power points [56]—cannot maintain frequency and voltage control. This is so because there must be a spinning reserve of power generation and sufficient facilities to control reactive power.

9.2.5.1 Application Example 9.5: Frequency control of an interconnected power system broken into two areas: The first one with a 300 MW coal-fired plant and the other one with a 5 MW windpower plant

Fig. P4.12.1 of Chapter 4 shows the block diagram of two generating plants interconnected by a tie line (transmission line).

Data for generation set #1 (steam turbine and generator) are as follows:

Angular frequency change ($\Delta\omega_1$) per change in generator output power (ΔP_1) having the droop characteristic of $R_1 = \frac{\Delta\omega_1}{\Delta P_1} = 0.01$ pu, load change (ΔP_{L1}) per frequency change ($\Delta\omega_1$)

resulting in $D_1 = \frac{\Delta P_{L1}}{\Delta \omega_1} = 0.8$ pu, step load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s}$ pu = $\frac{0.2}{s}$ pu, angular momentum of steam turbine and generator set $M_1 = 4.5$, base apparent power $S_{\text{base}} = 500$ MVA, governor time constant $T_{G1} = 0.01$ s, valve changing (charging) time constant $T_{CH1} = 0.5$ s, and (load reference set point)₁ = 0.8 pu.

Data for generation set #2 (wind turbine and generator) are as follows:

Frequency change ($\Delta \omega_2$) per change in generator output power (ΔP_2) having the droop characteristic $R_2 = \frac{\Delta \omega_2}{\Delta P_2}$ pu = 0.02 pu, load change (ΔP_{L2}) per frequency change ($\Delta \omega_2$) resulting in $D_2 = \frac{\Delta P_{L2}}{\Delta \omega_2} = 1.0$ pu, step load change $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s}$ pu = $\frac{-0.2}{s}$ pu, angular momentum of wind turbine and generator set $M_2 = 6$, base apparent power $S_{\text{base}} = 500$ MVA, governor time constant $T_{G2} = 0.02$ s, valve (blade control) changing (charging) time constant $T_{CH2} = 0.75$ s, and (load reference set point)₂ = 0.8 pu.

Data for tie line: $T = \frac{377}{X_{tie}}$ with $X_{tie} = 0.2$ pu.

- List the ordinary differential equations and the algebraic equations of the block diagram of Fig. P4.12.1 of Chapter 4.
- Use either Mathematica or MATLAB to establish transient and steady-state conditions by imposing a step function for load reference set point (s)₁ = $\frac{0.8}{s}$ pu, load reference set point (s)₂ = $\frac{0.8}{s}$ pu, and run the program with zero step load changes $\Delta P_{L1} = 0$, $\Delta P_{L2} = 0$ for 5 s. After 5 s impose the positive step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s}$ pu = $\frac{0.2}{s}$ pu, and after 7 s impose the negative step-load change $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s}$ pu = $\frac{-0.2}{s}$ pu, for the droop characteristics $R_1 = 0.01$ pu and $R_2 = 0.02$ pu to find the transient and steady-state responses $\Delta \omega_1(t)$ and $\Delta \omega_2(t)$.
- Use either Mathematica or MATLAB to establish transient and steady-state conditions by imposing a step function for load reference set point (s)₁ = $\frac{0.8}{s}$ pu, load reference set point (s)₂ = $\frac{0.8}{s}$ pu, and run the program with zero step load changes $\Delta P_{L1} = 0$, $\Delta P_{L2} = 0$ for 5 s. After 5 s impose positive step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s}$ pu = $\frac{0.1}{s}$ pu, and after 7 s impose the negative step-load change $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s}$ pu = $\frac{-0.1}{s}$ pu, for the droop characteristics $R_1 = 0.01$ pu (coal-fired plant) and $R_2 = 0.5$ pu (windpower plant) to find the transient and steady-state responses $\Delta \omega_1(t)$ and $\Delta \omega_2(t)$.

Solution to Application Example 9.5: *Frequency Control of an Interconnected Power System Broken into Two Areas: The First One with a 300 MW Coal-Fired Plant and the Other One with a 5 MW Windpower Plant*

- (a) List of ordinary differential equations

$$\varepsilon_{11} = \text{loadref}_1(s) - \frac{\Delta \omega_1}{R_1} \quad (\text{E9.5.1})$$

$$\Delta P_{\text{valve1}} + T_{G1} \frac{d(\Delta P_{\text{valve1}})}{dt} = \varepsilon_{11} \quad (\text{E9.5.2})$$

$$\Delta P_{\text{mech1}} + T_{CH1} \frac{d(\Delta P_{\text{mech1}})}{dt} = \Delta P_{\text{valve1}} \quad (\text{E9.5.3})$$

$$\varepsilon_{12} = \Delta P_{mech1} - \Delta P_{L1} - \Delta P_{tie} \quad (E9.5.4)$$

$$\Delta \omega_1 D_1 + M_1 \frac{d(\Delta \omega_1)}{dt} = \varepsilon_{12} \quad (E9.5.5)$$

$$\frac{\Delta P_{tie}}{\varepsilon_3} = \frac{T}{s} \quad (E9.5.6)$$

$$s \Delta P_{tie} = T \varepsilon_3 \quad (E9.5.7)$$

$$\frac{1}{T} \frac{d(\Delta P_{tie})}{dt} = \varepsilon_3 \quad (E9.5.8)$$

$$\varepsilon_{22} = loadref_2(s) - \frac{\Delta \omega_2}{R_2} \quad (E9.5.9)$$

$$\Delta P_{valve2} + T_{G2} \frac{d(\Delta P_{valve2})}{dt} = \varepsilon_{22} \quad (E9.5.10)$$

$$\Delta P_{mech2} + T_{CH2} \frac{d(\Delta P_{mech2})}{dt} = \Delta P_{valve2} \quad (E9.5.11)$$

$$\varepsilon_{21} = \Delta P_{mech2} - \Delta P_{L2} + \Delta P_{tie} \quad (E9.5.12)$$

$$\Delta \omega_2 D_2 + M_2 \frac{d(\Delta \omega_2)}{dt} = \varepsilon_{21} \quad (E9.5.13)$$

$$\varepsilon_3 = \Delta \omega_1(s) - \Delta \omega_2(s). \quad (E9.5.14)$$

There are 11 independent equations and 11 unknowns. The latter are ε_{11} , ΔP_{valve1} , ΔP_{mech1} , ε_{21} , ΔP_{tie} , $\Delta \omega_1$, ε_{12} , ΔP_{valve2} , ΔP_{mech2} , ε_{22} , and $\Delta \omega_2$.

(b) and (c) The Mathematica program and the MATLAB program codes are presented in [Table E9.5.1](#) and [Table E9.5.2](#), respectively.

TABLE E9.5.1 Mathematica program list for Application Example 9.5.

```
Remove [Dw1, R1, Loadref1, E11, DPvalve1, DPmech1, DP11, E12, Tg1, Tch1, M1,
D1, Dw2, R2, Loadref 2, E22, DPvalve2, DPmech2, DP12, E21, Tch2, M2, D2,
Sbase, eq1, eq2, eq3, ic1, ic2, ic3, DPtie, E3, Tie, Xtie, ic4, ic5, ic6,
ic7];
Sbase=500000000;
M1=4.5;
Tg1=0.01;
Tch1=0.5;
R1=0.01;
D1=0.8;
M2=6;
Tg2=0.02;
```

Continued

TABLE E9.5.1 Mathematica program list for Application Example 9.5—Cont'd

```

Tch2=0.75;
R2=0.02;
D2=1.0;
Xtie=0.2;
Tie=377/Xtie;
Loadref 1 [t_]:=If [t<0,0,0.8];
Loadref 2 [t_]:=If [t<0,0,0.8];
DP11 [t_]:=If [t<5,0,0.2];
DP12 [t_]:=If [t<7,0,-0.2];
ic1=Dw1[0]= 0;
ic2=DPmech1[0]= 0;
ic3=DPvalve1[0]= 0;
ic5=Dw2[0]= 0;
ic6=DPmech2[0]= 0;
ic7=DPvalve2[0]= 0;
ic4=DPtie [0]= 0;
E11[t_]:=Loadref1[t]-(Dw1[t]/R1);
E12[t_]:=DPmech1[t]-(DP11[t]-DPtie[t]);
E3[t_]:=Dw1[t]-Dw2[t];
E22 [t_]:=Loadref2[t]-(Dw2[t]/R2);
E21[t_]:=DPmech2[t]-(DP12[t]+DPtie [t]);
eq1=Dw1'[t]= (1/M1)*(E12[t]-D1*Dw1[t]);
eq2=DPmech1'[t]= (1/Tch1)*(DPvalve1[t]-DPmech1[t]);
eq3=DPvalve1'[t]= (1/Tg1)*(E11[t]-DPvalve1[t]);
eq5=Dw2'[t]= (1/M2)*(E21[t]-D2*Dw2[t]);
eq6=DPmech2'[t]= (1/Tch2)*(DPvalve2[t]-DPmech2 [t]);
eq7 =DPvalve2'[t]= (1/Tg2)*(E22[t]-DPvalve2[t]);
eq4=DPtie'[t]= =Tie*E3[t];
sol=NSolve [{eq1,eq2,eq3,eq4,eq5,eq6,eq7,ic1,ic2,ic3,ic4,ic5,ic6,ic7},
{Dw1 [t],DPmech1 [t],DPvalve1 [t],DPtie[t],Dw2[t],DPmech2[t], DPvalve2 [t]},
{t,0,100},MaxSteps->1000000];
Plot [Dw1[t]/sol,{t,0,100}, PlotRange-> All, AxesLabel->{"t", "Dw1(t)[pu]"}]
Plot [Dw2 [t]/sol,{t,0,100}, PlotRange->All, AxesLabel->{"t", "Dw2(t)[pu]"}]

```

Note: All calculation statements must be on one line and terminated with a semicolon (;).

TABLE E9.5.2 MATLAB program list for Application Example 9.5.

```

%defining the input
Sbase=500e6;
M1=4.5;
Tg1=0.01;
Tch1=0.5;
R1=0.01;
D1=0.8;
M2=6;
Tg2=0.02;
Tch2=0.75;

```

TABLE E9.5.2 MATLAB program list for Application Example 9.5—Cont'd

```

R2=0.02;
D2=1;
Xtie=0.2;
Tie=377/Xtie;
%time span
T1=0:0.001:20;
T=T1.';
%solving system of equations
opts=odeset('AbsTol',1e-11,'RelTol',1e-7;
[t0,x0]=ode45(@F2,T, [0;0;0;0;0;0;0],opts,M1,Tg1,Tch1,R1,D1,M2,Tg2,Tch2,R2,D2,Tie);
%plot results
figure;
Plot(t0, x0 (:;4));
Grid on, zoom on;
Title('Transient response of \Delta\omega_1(t) vs t');
xlabel('t');
ylabel('\Delta\omega_1(t)');
figure;
Plot(t0,x0 (:;1));
Grid on, zoom on;
Title('Transient response of \Delta\omega_2(t) vs t');
xlabel('t');
ylabel('\Delta\omega_2(t)');
where the function F2 is:
function xprime=F2(t,x,M1,Tg1,Tch1,R1,D1,M2,Tg2,Tch2,R2,D2,Tie);
if t<5;
DP11=0;
else DP11=0.2;
end
if t<7;
DP12=0;
else DP12=-0.2;
end
if t<0;
load1=0;
else load1=0.8;
end
if t<0;
load2=0;
else load2=0.8;
end
xprime=zeros(7,1);
xprime(1)=(1/M1)*(x(2)-DP11-x(7)-(D1*x(1)));
xprime(2)=(1/Tch1)*(x(3)-x(2));
xprime(3)=(1/Tg1)*(load1-(x(1))*(1/R1)-x(3));
xprime(4)=(1/M2)*(x(5)-DP12-x(7)-(D2*x(4)));
xprime(5)=(1/Tch2)*(x(6)-x(5));
xprime(6)=(1/Tg2)*(load2-(x(4))*(1/R2)-x(6));
xprime(7)=(Tie)*(x(12)-x(4));

```

The angular frequency deviations $\Delta\omega_1(t)$ and $\Delta\omega_2(t)$ based on Mathematica for droop characteristics with $R_1 = 0.01$ pu, $R_2 = 0.02$ pu are shown in Figs. E9.5.1 and E9.5.2. Note that there is instability, and both plots result in the same frequency response.

The angular frequency deviations $\Delta\omega_1(t)$ and $\Delta\omega_2(t)$ based on Mathematica for droop characteristics with $R_1 = 0.01$ pu, $R_2 = 0.5$ pu are shown in Figs. E9.5.3 and E9.5.4. Note that there is stability, and both plots result in the same frequency response.

The angular frequency deviations $\Delta\omega_1(t)$ and $\Delta\omega_2(t)$ based on MATLAB for droop characteristics with $R_1 = 0.01$ pu, $R_2 = 0.02$ pu are shown in Figs. E9.5.5 and E9.5.6 confirming the results of Figs. E9.5.1 and E9.5.2.

The angular frequency deviations $\Delta\omega_1(t)$ and $\Delta\omega_2(t)$ based on MATLAB for droop characteristics with $R_1 = 0.01$ pu, $R_2 = 0.5$ pu are shown in Figs. E9.5.7 and E9.5.8 confirming the results of Figs. E9.5.3 and E9.5.4.

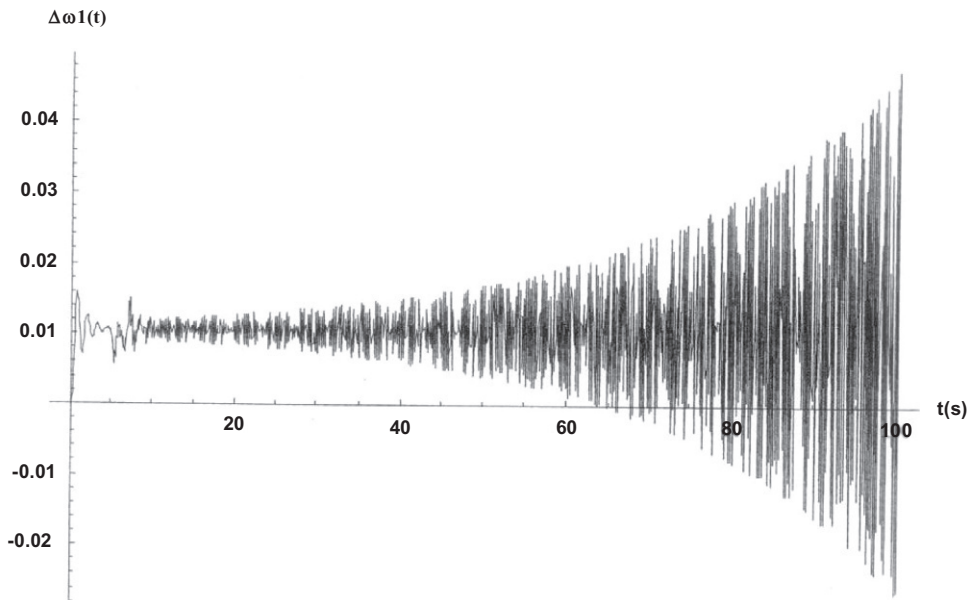


FIG. E9.5.1 Angular frequency deviation $\Delta\omega_1(t)$ indicating the instability of two power plants with similar droop characteristics.

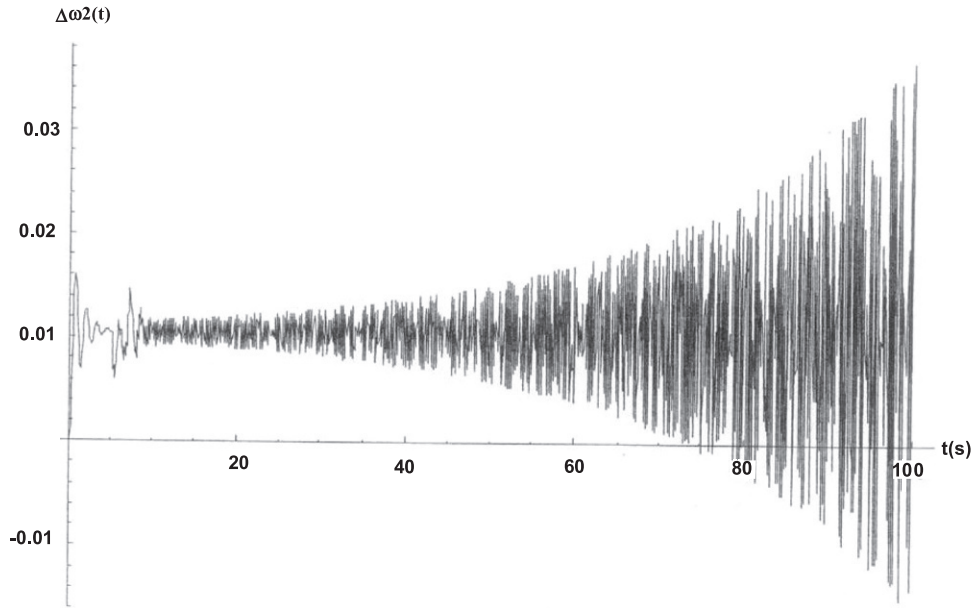


FIG. E9.5.2 Angular frequency deviation $\Delta\omega_2(t)$ indicating the instability of two power plants with similar droop characteristics.

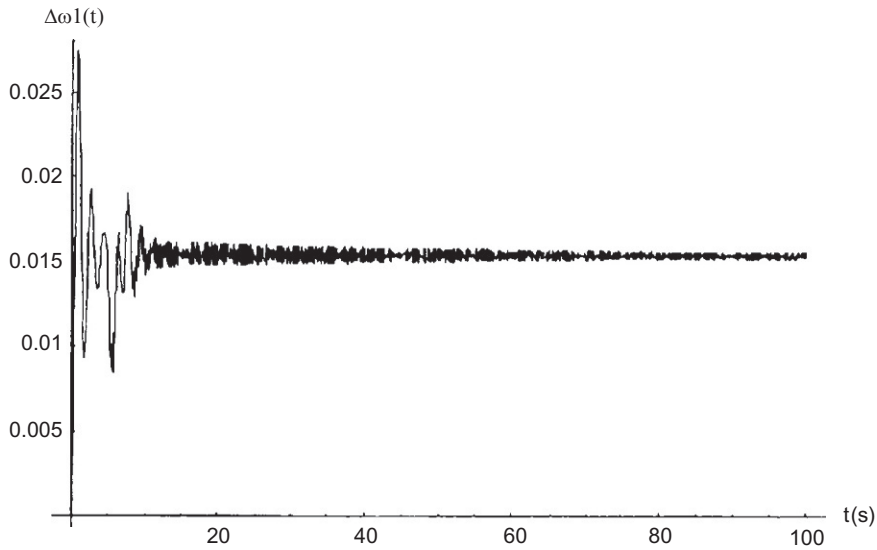


FIG. E9.5.3 Angular frequency deviation $\Delta\omega_1(t)$ indicating the stability of two power plants with dissimilar droop characteristics.

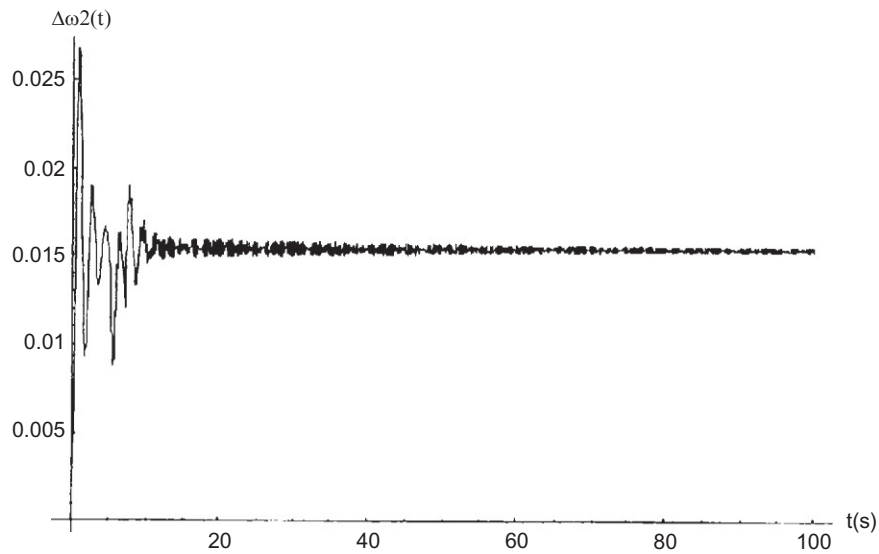


FIG. E9.5.4 Angular frequency deviation $\Delta\omega_2(t)$ indicating the stability of two power plants with dissimilar droop characteristics.

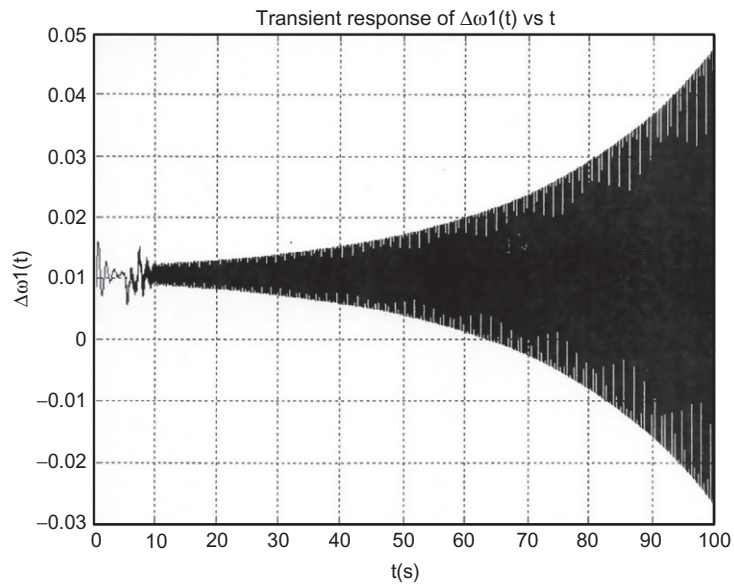


FIG. E9.5.5 Angular frequency deviation $\Delta\omega_1(t)$ indicating the instability of two power plants with similar droop characteristics.

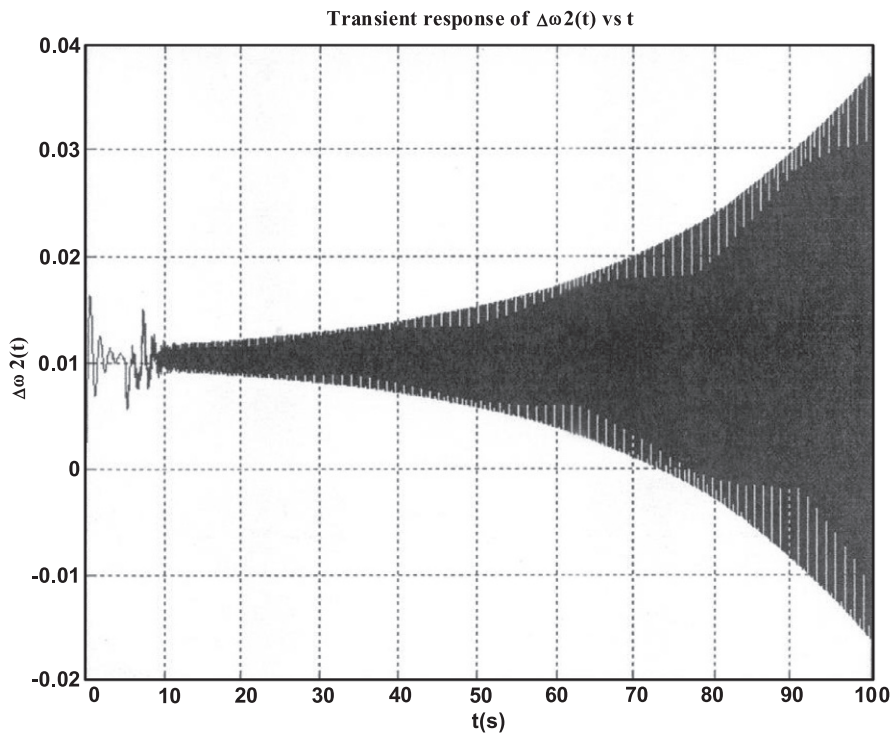


FIG. E9.5.6 Angular frequency deviation $\Delta\omega_2(t)$ indicating the instability of two power plants with similar droop characteristics.

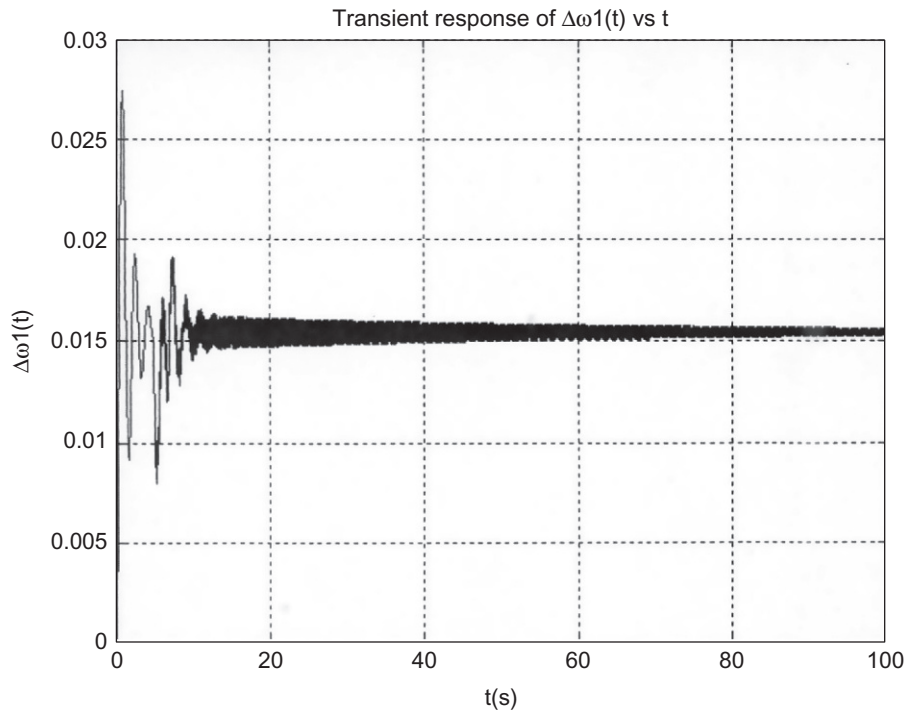


FIG. E9.5.7 Angular frequency deviation $\Delta\omega_1(t)$ indicating the stability of two power plants with dissimilar droop characteristics.

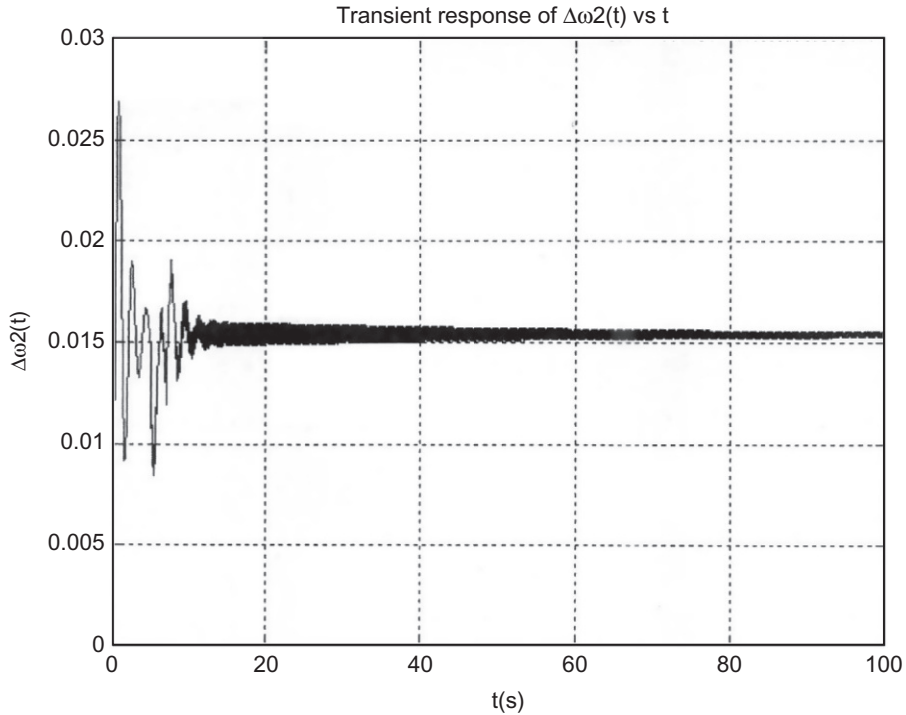


FIG. E9.5.8 Angular frequency deviation $\Delta\omega_2(t)$ indicating the stability of two power plants with dissimilar droop characteristics.

9.2.5.2 Application Example 9.6: Frequency control of an interconnected power system broken into two areas: The first one with a 5 MW windpower plant and the other one with a 5 MW photovoltaic plant

Fig. P4.12.1 of Chapter 4 shows the block diagram of two generators interconnected by a tie line (transmission line).

Data for generation set #1 (wind turbine and generator) as follows:

Frequency change ($\Delta\omega_1$) per change in generator output power (ΔP_1) having the droop characteristic $R_1 = \frac{\Delta\omega_1}{\Delta P_1} \text{ pu} = 0.5 \text{ pu}$, load change (ΔP_{L1}) per frequency change ($\Delta\omega_1$) yields $D_1 = \frac{\Delta P_{L1}}{\Delta\omega_1} = 0.8 \text{ pu}$, step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s} \text{ pu} = \frac{0.1}{s} \text{ pu}$, angular momentum of wind turbine and generator set $M_1 = 4.5$, base apparent power $S_{\text{base}} = 50 \text{ MVA}$, governor time constant $T_{G1} = 0.01 \text{ s}$, valve (blade control) changing (charging) time constant $T_{CH1} = 0.1 \text{ s}$, and (load reference set point) $_1 = 0.8 \text{ pu}$.

Data for generation set #2 (photovoltaic array and inverter):

Frequency change ($\Delta\omega_2$) per change in inverter output power (ΔP_2) having the droop characteristic $R_2 = \frac{\Delta\omega_2}{\Delta P_2} \text{ pu} = 0.5 \text{ pu}$, load change (ΔP_{L2}) per frequency change ($\Delta\omega_2$) yields $D_2 = \frac{\Delta P_{L2}}{\Delta\omega_2} = 1.0 \text{ pu}$, step-load change $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s} \text{ pu} = \frac{-0.1}{s} \text{ pu}$, equivalent angular momentum

$M_2=6$, base apparent power $S_{\text{base}}=50$ MVA, governor time constant $T_{G2}=0.02$ s, equivalent valve changing (charging) time constant $T_{CH2}=0.1$ s, and (load reference set point) $_2=0.8$ pu.

Data for tie line: $T = \frac{377}{X_{\text{tie}}}$ with $X_{\text{tie}} = 0.2$ pu.

Use either Mathematica or MATLAB to establish transient and steady-state conditions by imposing a step function for load reference set point(s) $_1 = \frac{0.8}{s}$ pu, load reference set point(s) $_2 = \frac{0.8}{s}$ pu and run the program with a zero step load changes $\Delta P_{L1}=0$, $\Delta P_{L2}=0$ for 5s. After 5s impose step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s}$ pu $= \frac{0.1}{s}$ pu, and after 7s impose the step-load change $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s}$ pu $= \frac{-0.1}{s}$ pu, to find the transient and steady-state responses $\Delta\omega_1(t)$ and $\Delta\omega_2(t)$.

Solution to Application Example 9.6: *Frequency Control of an Interconnected Power System Broken into Two Areas: The First One with a 5MW Windpower Plant and the Other One with a 5MW Photovoltaic Plant*

The Mathematica program is presented in [Table E9.6.1](#). The resulting plots are shown in [Figs. E9.6.1 and E9.6.2](#).

TABLE E9.6.1 Mathematica program list for Application Example 9.6.

```
Remove[Dw1, R1, Loadref1, E11, DPvalve1, DPmech1, DP11, E12, Tg1, Tch1, M1, D1, Dw2, R2,
  Loadref2, E22, DPvalve2, DPmech2, DP12, E21, Tch2, M2, D2, Sbase, eq1, eq2, eq3,
  ic1, ic2, ic3, DPtie, E3, Tie, Xtie, ic4, ic5, ic6, ic7];
Sbase=5000000000;
M1=4.5;
Tg1=0.01;
Tch1=0.1;
R1=0.5;
D1=0.8;
M2=6;
Tg2=0.02;
Tch2=0.1;
R2=0.5;
D2=1.0;
Xtie=0.2;
Tie=377/Xtie;
Loadref1[t_]:=If[t<0,0,0.8];
Loadref2[t_]:=If[t<0,0,0.8];
DP11[t_]:=If[t<5,0,0.1];
DP12[t_]:=If[t<7,0,-0.1];
ic1=Dw1[0]= 0;
ic2=DPmech1[0]= 0;
ic3=DPvalve1[0]= 0;
ic5=Dw2[0]= 0;
ic6=DPmech2[0]= 0;
```

Continued

TABLE E9.6.1 Mathematica program list for Application Example 9.6—Cont'd

```

ic7=DPvalve2[0]= 0;
ic4=DPtie[0]= 0;
E11[t_]:=Loadref1[t]-Dw1[t]/R1;
E12[t_]:=DPmech1[t]-(DP11[t]-DPtie[t]);
E3[t_]:=Dw1[t]-Dw2[t];
E22[t_]:=Loadref2[t]-(Dw2[t]/R2);
E21[t_]:=DPmech2[t]-(DP12[t]+DPtie[t]);
eq1=Dw1'[t]= (1/M1)*(E12[t]-D1*Dw1[t]);
eq2=DPmech1'[t]= (1/Tch1)*(DPvalve1[t]-DPmech1[t]);
eq3=DPvalve1'[t]= (1/Tg1)*(E11[t]-DPvalve1[t]);
eq5=Dw2'[t]= (1/M2)*(E21[t]-D2*Dw2[t]);
eq6=DPmech2'[t]= (1/Tch2)*(DPvalve2[t]-DPmech2[t]);
eq7=DPvalve2'[t]= (1/Tg2)*(E22[t]-DPvalve2[t]);
eq4=DPtie'[t]= Tie*E3[t];
sol=NDSolve[{eq1,eq2,eq3,eq4,eq5,eq6,eq7,ic1,ic2,ic3,ic4,ic5,ic6,ic7},{Dw1[t],
DPmech1[t],DPvalve1[t],DPtie[t],Dw2[t],DPmech2[t],DPvalve2[t]},
{t,0,100},MaxSteps ->1000000];
Plot[Dw1[t]/.sol[[1]],{t,0,100},PlotRange->All,AxesLabel->{"t[s]","Dw1[t][pu]"}]
Plot[Dw2[t]/.sol[[1]],{t,0,100},PlotRange->All,AxesLabel->{"t[s]","Dw2[t][pu]"}]

```

Note: All calculation statements must be on one line and terminated with a semicolon (;).

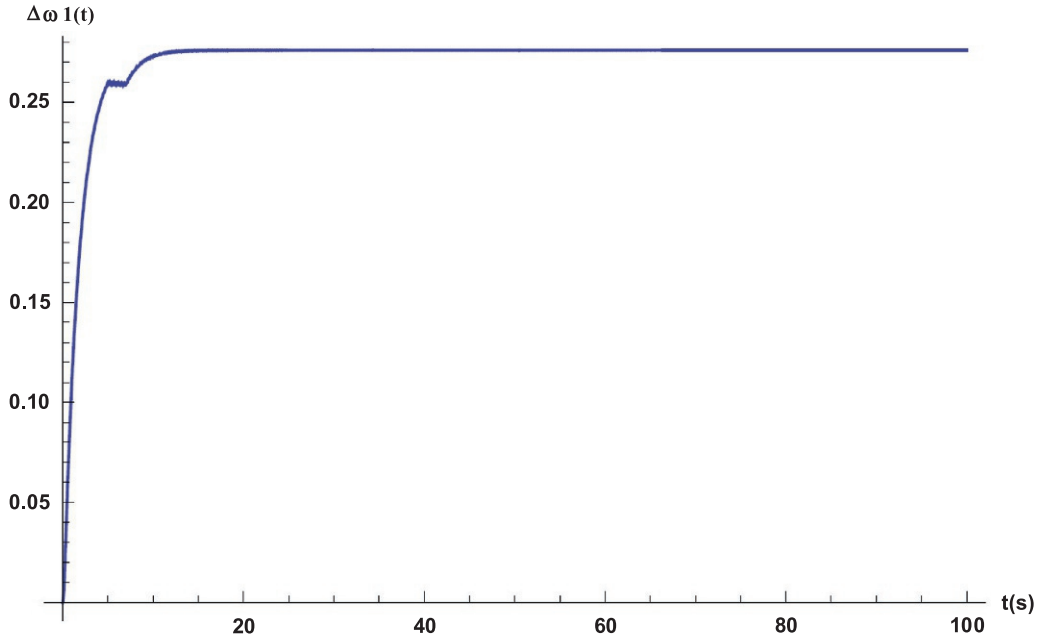


FIG. E9.6.1 Angular frequency deviation $\Delta\omega_1(t)$ indicating the instability of two power plants with similar droop characteristics.

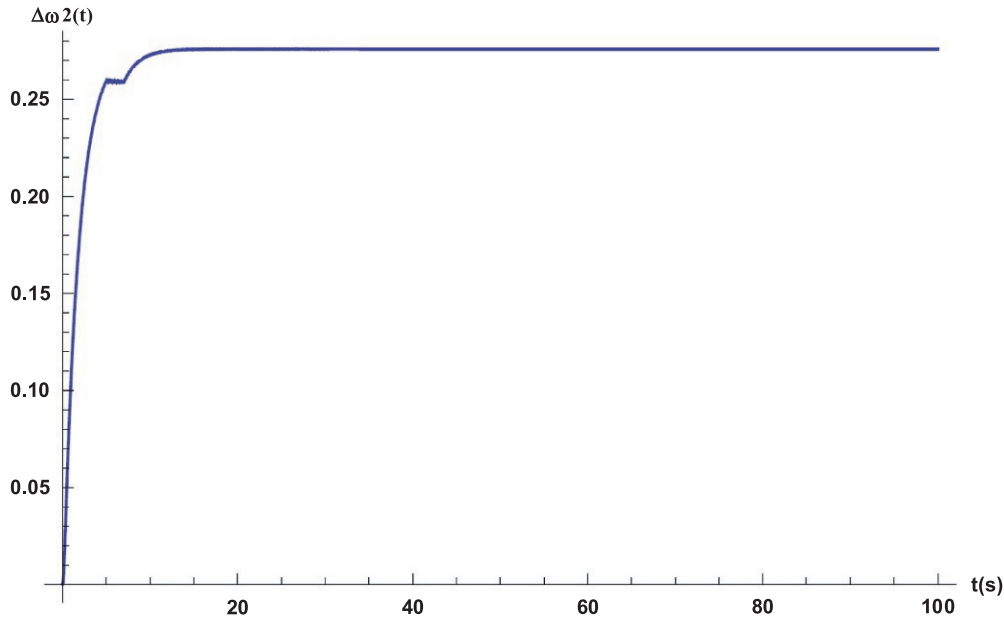


FIG. E9.6.2 Angular frequency deviation $\Delta\omega_2(t)$ indicating the instability of two power plants with similar droop characteristics.

The angular frequency deviations $\Delta\omega_1(t)$ and $\Delta\omega_2(t)$ for droop characteristics with $R_1 = 0.5$ pu, $R_2 = 0.5$ pu are much larger than those in Application Example 9.5, that is, there is instability. See Problems 9.5–9.7.

From Application Examples 9.5 and 9.6 one draws the following conclusions:

1. Renewable energy sources stemming from solar and wind are likely to be operated at their maximum output power. This requires that the slope R of the drooping characteristic of a renewable power source is large as is depicted in Figs. 9.14 and 9.15. As a consequence of the large R , the change in output of the renewable source results in instability or a large frequency change $\Delta\omega$.

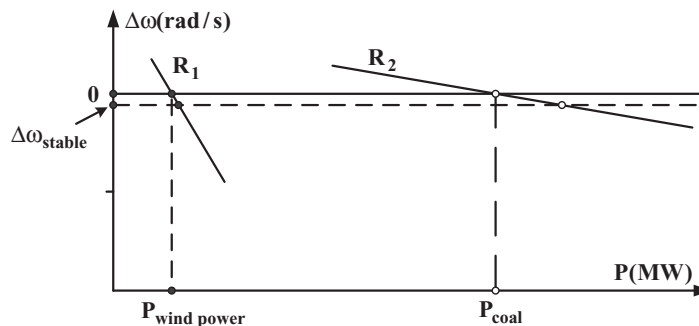


FIG. 9.14 Load sharing of a renewable plant (operated at maximum power with droop characteristic $R_1 = 0.5$ pu) with a coal-fired plant (operated at less than maximum power with droop characteristic $R_2 = 0.01$ pu) for a load increase of 10%, resulting in an acceptable change in angular frequency.

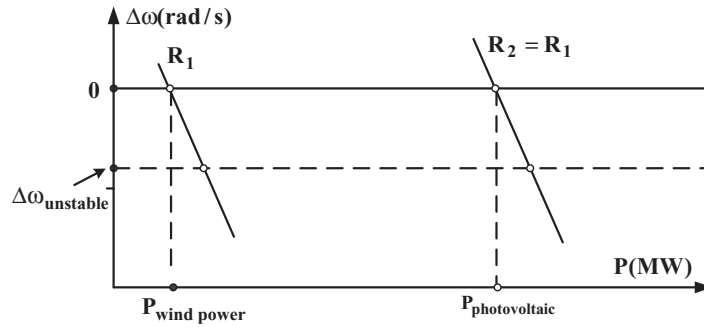


FIG. 9.15 Load sharing of a renewable solar plant (photovoltaic) with a windpower plant for a load increase of 10%. Both types of plants are operated at maximum power to maximize the renewable energy contribution within a power system both with droop characteristics of $R_1 = R_2 = 0.5$ pu, resulting in an unacceptably large change in angular frequency.

2. Solar, wind, and tidal power sources are intermittent in nature and their output power cannot be controlled by the dispatch center of a utility system.
3. Due to issues 1 and 2 distributed generation (DG) based on solar and wind power is not possible unless either a base load plant (e.g., gas- or coal-fired plant) or a storage plant (e.g., pumped hydro, compressed air) is ready to deliver the additional power required. That is, the base load plant or the storage plant acts as a spinning reserve plant.
4. It has been discussed in [Chapter 4 \(Section 4.2.2.3\)](#) that an inverter requires a larger DC input voltage for capacitive/resistive load than for inductive/resistive operation. To utilize inverter components to their fullest unity power (about resistive operation) factor operation is preferred. This means a renewable power plant cannot be very effectively employed for reactive power or voltage control.
5. The governor time constant (e.g., T_{G1} , T_{G2}) and the valve changing (charging) time constant (e.g., T_{CH1} , T_{CH2}) must be small to guarantee stability. The latter time constant is fairly large for steam, hydro, and windpower plants. This issue has been addressed in [\[63,64\]](#).
6. In summary it is not possible to operate a power system solely based on renewable power plants without storage plants because they do not easily lend themselves to frequency and voltage control.

9.3 Tools for detecting poor power quality

9.3.1 Sensors

To be able to detect power quality problems one must rely on voltage and current sensors such as low-inductive voltage dividers for voltage pickup, and low-inductive shunts and Hall sensors for current pickup. Components representing the interface between sensors and measuring instruments are potential and current transformers as well as optocouplers. Voltmeters, amperemeters, oscillographs, spectrum analyzers, and network analyzers are indispensable. Special power quality tools and selection guides have been developed for

detecting power quality for single- and three-phase systems, such as power quality clamp meters, power quality analyzers, voltage event recorder systems, three-phase power loggers, series three-phase power quality loggers, three-phase power quality recorders, AC leakage current clamp meters, series three-phase power quality analyzers, high precision power analyzers, reliable power meters, multipoint power recorders, and other power quality-specific equipment. Some of them [69,70] are useful to analyze steady-state phenomena, and some of them are transient overvoltage/under-voltage meters recording outage time, deviation from rated voltage values (e.g., sags, swells), or the number of outages within a given time period, and an instrument that distinguishes the direction of the harmonic power flow as is described in the following application example.

9.3.2 Application Example 9.7: Detection of harmonic power flow direction at point of common coupling (PCC)

IEEE Standard 519 [76] distinguishes between customer- and power system generated harmonics. If the current harmonics flowing from the power system to the customer are at the point of common coupling (PCC) within given limits [76] and the voltage harmonics at PCC are too large then the customer must install filters to prevent customer-generated current harmonics to enter the grid at PCC. In order to sense and measure customer-generated current harmonics design, a harmonic-current sensing equipment and a programmable filter so that the customer-generated current harmonics can be detected and controlled.

Solution to Application Example 9.7: *Detection of Harmonic Power Flow Direction at Point of Common Coupling (PCC)*

The discrimination between the contributions of the customer and the power system to generated harmonic currents at PCC is based on Fig. E9.7.1 and [70–84]. Fig. E9.7.1A represents the equivalent circuit of one customer connected to the power system at PCC indicated by the terminals $A-A'$ and $B-B'$. To measure individual harmonic currents $i_A^{(h)}$, $i_B^{(h)}$ with respect to direction and amplitude a harmonic current sensing network (see Fig. E9.7.1B), which represents a programmable harmonic filter, is configured and connected by computer commands c_1 , c_2 , and c_3 for a fraction of a second during which measurements take place. For measuring the current $i_{customer}^{(h)}$ the impedance and admittance $Z_{PCCcustomer}^{(h)}$ and $Y_{PCC}^{(h)}$, respectively, will provide a short circuit for $i_{customer}^{(h)}(t)$ during a fraction of a second, whereas the impedance $Z_{PCCsystem}^{(h)}$ is blocking $i_{system}^{(h)}(t)$. For measuring the current $i_{system}^{(h)}(t)$ the impedance and admittance $Z_{PCCsystem}^{(h)}$ and $Y_{PCC}^{(h)}$, respectively, will provide a short circuit for $i_{system}^{(h)}(t)$ during a fraction of a second, whereas the impedance $Z_{PCCcustomer}^{(h)}$ is blocking $i_{customer}^{(h)}(t)$. The harmonic impedance and admittance consists of inductors and capacitors whose very small losses—to achieve a high Q of the programmable filters—will be determined as described in [83]. Current and voltage sensors (e.g., Hall sensors [81] or low-inductive current shunts and voltage dividers [82] with optocouplers) will measure the direction of the harmonic power flow as detailed in [70–74].

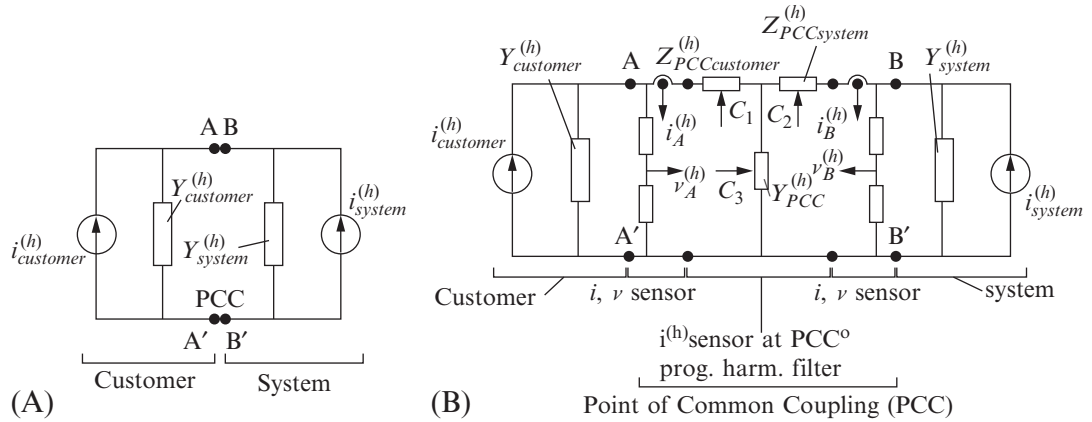


FIG. E9.7.1 (A) PCC without harmonic current sensor, (B) PCC with harmonic current sensor and programmable filter.

The main advantages of this approach are

1. Nonintrusive measurements lasting a fraction of a second. Field tests can be executed in three steps, each step lasting less than 0.1 s. In the first step, the harmonic current $i_{customer}^{(h)}(t)$ will be measured by configuring the programmable filter so that $Z_{PCCcustomer}^{(h)}$ and $Y_{PCC}^{(h)}$ represent a short circuit for a harmonic customer current of hth order, while $Z_{PCCsystem}^{(h)}$ represents an open-circuit for the system harmonic current of hth order. In the second step, $Z_{PCCsystem}^{(h)}$ and $Y_{PCC}^{(h)}$ represent a short circuit for the system harmonic current of hth order, while $Z_{PCCcustomer}^{(h)}$ represents an open circuit for the system current of hth order. In the third step, the total harmonic current will be measured when $Z_{PCCcustomer}^{(h)}$ and $Z_{PCCsystem}^{(h)}$ are bypassed and $Y_{PCC}^{(h)} = 0$ is an open circuit.
2. Real-time measurement while system operates under load.
3. No additional dissipation occurs.
4. Very small ohmic components of inductors and capacitors can be accurately determined [83], resulting in high Q of programmable harmonic filters.
5. In most harmonic standards [76,77] the harmonic current injection from the customer installation is limited. To enforce such limits by utilities these customer-injected harmonic currents at PCC $i_{customer}^{(h)}(t)$ must be reliably and accurately measured. This approach provides a tool for the utilities to measure customer harmonic currents. This will increase the reliability and efficiency of power system operation.

9.3.3 Maximum error analysis

The accurate online or real-time measurement of losses of circuit components such as transformers improves the reliability and security of a power system. Normally circuit components are equipped with temperature sensors (e.g., thermocouples, thermistors). This approach has two disadvantages.

1. Circuit components must be equipped with sensors during their construction, and off-the-shelf components cannot be used.
2. Temperature sensors provide information about the temperature at their location and not necessarily the temperature at the hot spot of an energy conversion device, and any temperature alarm may come too late to prevent an outage due to a fault.

The advantages of the real-time monitoring of losses of components (e.g., transformers) are that loss increases can be sensed or recorded at the time when a fault develops. In addition, the measurement components or instruments can be exchanged, thus minimizing the outage time of the transformer supplying the power system. Such a monitoring of the losses must rely on small maximum errors of the monitoring equipment.

Maximum error analysis has been extensively used in the past [70–73,85–87]. The online measurement of transformer losses under nonsinusoidal operation is discussed in detail in [87]. The real-time monitoring of iron-core and copper losses of single- and three-phase transformers is important, particularly for transformers feeding nonlinear loads. This section devises a new digital data-acquisition method for the separate online measurement of iron-core and copper losses of three-phase transformers under any full or partial load conditions. The accuracy requirements of the instruments employed (voltage and current sensors, volt and current meters) are addressed. The maximum errors are acceptably low if voltage and current sensors with 0.1 to 0.5% errors are used.

9.3.3.1 Review of existing methods

The separate online monitoring of the iron-core and copper losses of single- and three-phase transformers is desirable because additional losses due to power quality problems (e.g., harmonics, DC excitation) can be readily detected before any significant damage due to additional temperature rises occurs. Those losses can accurately and economically be measured for single-phase transformers via computer-aided testing (CAT) [71,88].

The known approaches for on-line loss measurement of high-efficiency transformers (e.g., efficiency greater than 97%) are inaccurate because they measure input and output powers and derive the loss from the difference of these two large values. The usually employed indirect method consisting of no-load (iron-core loss) and short-circuit (copper loss) tests [35] cannot be performed online while the transformer is partially or fully loaded. The same is valid for the loading back method [89].

Arri et al. presented an analog measurement circuit [90]. It is well known that there may occur zero-sequence currents on the Y-grounded side of a three-phase transformer, and these currents will produce corresponding losses in the transformer. The measuring circuit presented by Arri et al. cannot measure these zero-sequence components, and therefore, the method is not suitable for transformers with grounding on any side (either primary or secondary). Moreover, Arri et al. rely on many instrument transformers (nine CTs and nine PTs) to convert the Δ connection to Y connection for a Y/ Δ connected transformer: as a result the measuring accuracy is decreased. In [91], an analog measuring circuit with wattmeters is presented within a single-phase circuit.

This section presents a more accurate real-time method for digitally and separately measuring the steady-state iron-core and copper losses of three-phase transformers with various grounded connections while the transformers are operating at any load condition. This digital

measuring circuit is based on voltage and current sensors (voltage dividers, shunts, PTs, CTs, or Hall devices), A/D converter, and personal computer. Using a computer-aided testing program (CATEA) [70] losses, efficiency, harmonics, derating, and wave shapes of all voltages and currents can be monitored within a fraction of a second.

The maximum measurement errors of the losses are acceptably small and vary in the range from 0.5% to 15%, mainly contingent on the accuracy of the voltage and current sensors used. Depending on the application, voltage dividers with optocouplers [73], current shunts with optocouplers, potential and current transformers (error < 0.1%), as well as Hall sensors [92] (error < 0.5%) can be employed.

When both voltage and current signals are obtained from Hall devices [92], the copper losses will include DC losses, if they exist. Provided voltage and current signals are generated by PT and CT sensors, the DC losses are not included in the copper losses, and must be measured by additional DC voltmeters and ammeters or sensors. In this case, the total loss consists of the iron-core, AC, and DC copper losses.

9.3.3.2 Approach



It is well known that for any Y (ungrounded) or Δ connected three-phase windings, the two-wattmeter method is often used to measure the power based on the voltages and currents of any two phases. For a Y grounded three-phase winding, an additional wattmeter is necessary for the voltage and current of the third phase, or those of the zero sequence. Therefore, for a transformer without grounding on any side (primary or secondary), power loss is measured with eight signals (voltages and currents of two phases for each side). If the primary or/and the secondary are grounded, the power loss can be measured with ten or twelve signals. This section deals with ten- and twelve-channel measuring circuits. The eight-channel measuring circuits for Y/Y ungrounded or Δ/Δ and $\Delta-Y$ ungrounded three-phase transformers are discussed in [73].

A ten-channel CAT circuit applied to $\Delta-Y_0$ (Y_0 means Y grounded) connected three-phase transformers is shown in Fig. 9.16. The flowchart for the ten-channel signals is shown in Fig. 9.17. The output power (at the Y_0 side) is

$$\begin{aligned} P_{out} &= \frac{1}{T} \int_0^T (v'_{an}i'_a + v'_{bn}i'_b + v'_{cn}i'_c) dt = \frac{1}{T} \int_0^T [v'_{an}i'_a + (v'_0 - v'_{bn} - v'_{cn})i'_b + v'_{cn}i'_c] dt \\ &= \frac{1}{T} \int_0^T [v'_{an}i'_{al} - v'_{cn}i'_{bl} + v'_0i'_b] dt, \end{aligned} \quad (9.5)$$

where $i'_{al} = (i'_a - i'_b)$, $i'_{bl} = (i'_b - i'_c)$, and $v'_0 = (v'_{an} + v'_{bn} + v'_{cn})$. The transformer loss is

$$\begin{aligned} P_{in} - P_{out} &= \frac{1}{T} \int_0^T [(v_{AC}i_{Al} + v_{BC}i_{Bl}) - (v'_{an}i'_{al} - v'_{cn}i'_{bl} + v'_0i'_b)] dt \\ &= \frac{1}{T} \int_0^T [v_{AC}(i_{Al} - i'_{al}) + v_{BC}(i_{Bl} - i'_{bl}) + (v_{AC} - v'_{an})i'_{al} \\ &\quad + (v_{BC} + v'_{cn})i'_{bl} - v'_0i'_b] dt. \end{aligned} \quad (9.6)$$



The loss component $(-v'_0 i'_b)$ in Eq. (9.6) is included in the copper loss, which can be proved below:

$$\begin{aligned}
 p_{cu} &= (v_{AC} - v'_{an})i'_a + (v_{CB} - v'_{cn})i'_c + (v_{BA} - v'_{bn})i'_b \\
 &= (v_{AC} - v'_{an})i'_a + (-v_{BC} - v'_{cn})i'_c + (v_{BC} - v_{AC} - v'_0 + v'_{an} + v'_{cn})i'_b \\
 &= (v_{AC} - v'_{an})(i'_a - i'_b) + (v_{BC} + v'_{cn})(i'_b - i'_c) - v'_0 i'_b \\
 &= (v_{AC} - v'_{an})i'_{al} + (v_{BC} + v'_{cn})i'_{bl} - v'_0 i'_b.
 \end{aligned} \tag{9.7}$$

Note that the analog measuring circuit of [90] does not take into account zero-sequence components and, therefore, does not apply to general asymmetric operating conditions.

For Y-Y₀ connected three-phase transformers (see Fig. 9.18), the output power can be written as

$$\begin{aligned}
 P_{out} &= \frac{1}{T} \int_0^T (v'_{an}i'_a + v'_{bn}i'_b + v'_{cn}i'_c) dt = \frac{1}{T} \int_0^T [v'_{an}i'_a + v'_{bn}i'_b + v'_{cn}(i'_0 - i'_a - i'_b)] dt \\
 &= \frac{1}{T} \int_0^T (v'_{ac}i'_a + v'_{bc}i'_b + v'_{cn}i'_0) dt,
 \end{aligned} \tag{9.8}$$

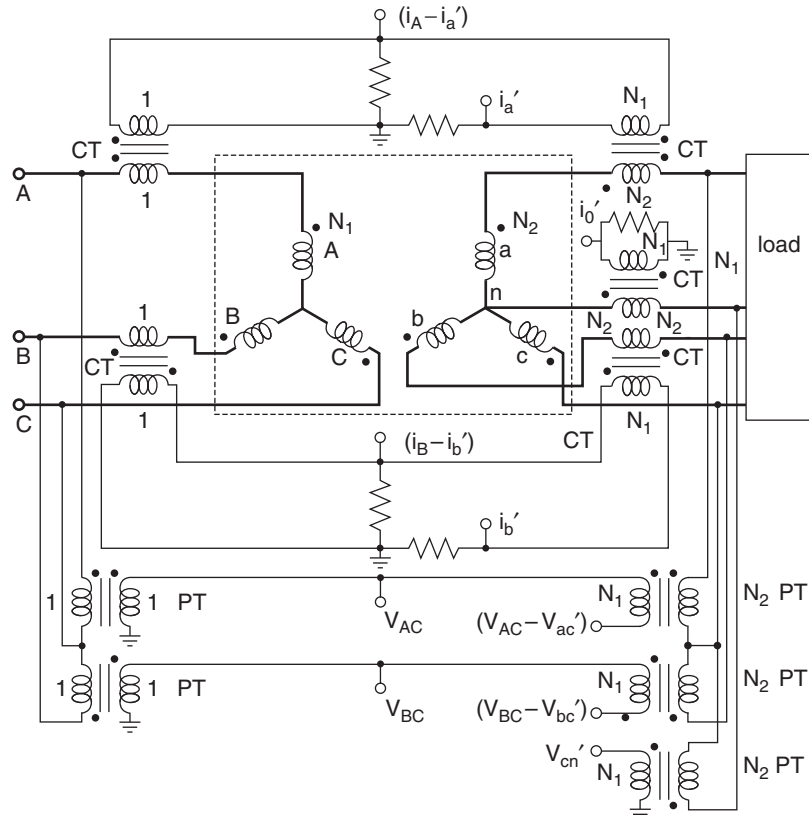


FIG. 9.18 Ten-channel CAT circuit for accurate Y-Y₀ three-phase transformer loss monitoring.

where $i'_0 = (i'_a + i'_b + i'_c)$. The transformer loss can be formulated as

$$\begin{aligned} P_{in} - P_{out} &= \frac{1}{T} \int_0^T [(v_{AC} i_A + v_{BC} i_B) - (v'_{ac} i'_a + v'_{bc} i'_b + v'_{cn} i'_0)] dt \\ &= \frac{1}{T} \int_0^T [v_{AC} (i_A - i'_a) + v_{BC} (i_B - i'_b) - v'_{cn} i'_0 + (v_{AC} - v'_{ac}) i'_a + (v_{BC} - v'_{bc}) i'_b] dt, \end{aligned} \quad (9.9)$$

where $(-v'_{cn} i'_0)$ is included in the iron-core loss. This can be shown as follows:

$$\begin{aligned} p_{fe} &= v_{An} (i_A - i'_a) + v_{Bn} (i_B - i'_b) + v_{Cn} (i_C - i'_c) \\ &= v_{An} (i_A - i'_a) + v_{Bn} (i_B - i'_b) - v_{Cn} (i_A + i_B + i'_0 - i'_a - i'_b) \\ &= (v_{An} - v_{Cn}) (i_A - i'_a) + (v_{Bn} - v_{Cn}) (i_B - i'_b) - v'_{cn} i'_0 \\ &= v_{AC} (i_A - i'_a) + v_{BC} (i_B - i'_b) - v'_{cn} i'_0. \end{aligned} \quad (9.10)$$

For Y_0 - Y_0 connected transformers, a twelve-channel circuit is used as shown in Fig. 9.19. The loss of the transformer can be derived directly from

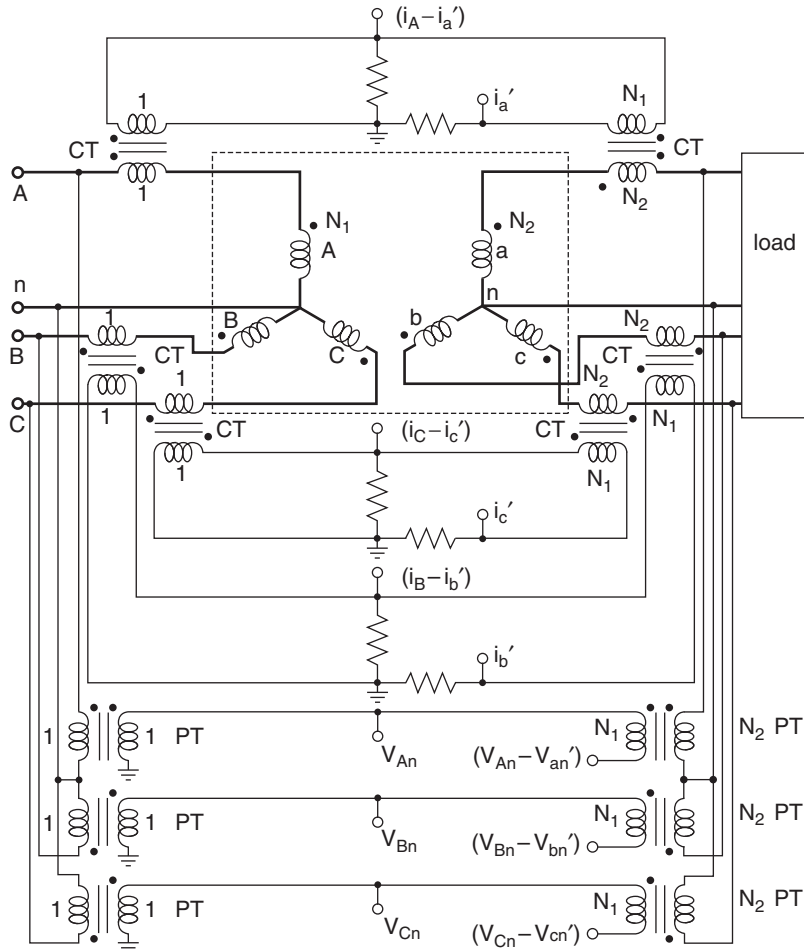


FIG. 9.19 Twelve-channel CAT circuit for accurate Y_0 - Y_0 three-phase transformer loss monitoring.

$$\begin{aligned}
P_{in} - P_{out} &= \frac{1}{T} \int_0^T [(v_{An} i_A + v_{Bn} i_B + v_{Cn} i_C) - (v'_{an} i'_a + v'_{bn} i'_b + v'_{cn} i'_c)] dt \\
&= \frac{1}{T} \int_0^T [v_{An} (i_A - i'_a) + v_{Bn} (i_B - i'_b) + v_{Cn} (i_C - i'_c) + (v_{An} - v'_{an}) i'_a \\
&\quad + (v_{Bn} - v'_{bn}) i'_b + (v_{Cn} - v'_{cn}) i'_c] dt.
\end{aligned} \tag{9.11}$$

The instantaneous expression $p_{fe}(t)$ in Eq. (9.10) includes two power components: the instantaneous iron-core loss and the instantaneous exciting reactive power. Similarly, $p_{cu}(t)$ in Eq. (9.7) includes the instantaneous copper loss and the instantaneous reactive power due to the leakage flux. At steady state, the average value of reactive power during one electric cycle is zero; therefore, the average values of $p_{fe}(t)$ and $p_{cu}(t)$ during one electric cycle reflect the steady-state iron-core and copper losses.

The instantaneous expressions of $p_{fe}(t)$ and $p_{cu}(t)$ of various three-phase transformer connections are listed in Table 9.2, where all current and voltage differences can be calibrated directly under either sinusoidal or nonsinusoidal conditions.

If the neutral line is disconnected, and v'_0 and i'_b are not measured, Fig. 9.16 becomes the eight-channel loss-measuring circuit of Δ -Y connected three-phase transformers (Fig. 9.20), and the transformer loss is obtained from Eq. (9.6) with $v'_0 = 0$ [73]. Similarly, if the neutral line is disconnected, and i'_0 and v'_{cn} are not measured, Fig. 9.18 becomes the eight-channel loss-measuring circuit of Y-Y connected three-phase transformers, and the transformer loss is obtained from Eq. (9.9) with $i'_0 = 0$ [73]. The circuits valid for Δ -Y, Δ -Y₀, and Y-Y₀ connected transformers also apply for Y- Δ , Y₀- Δ , and Y₀-Y connected three-phase transformers, respectively. In these cases, the capital letters A, B, and C represent the secondary, and the lower case letters a, b, and c denote the primary. The corresponding iron-core and copper losses, listed in Table 9.2, are then negative. Table 9.3 shows valid methods for three-phase transformers of various connections.

Note that in Figs. 9.16, 9.18, 9.19, and 9.20, CT and PT ratios on the primary side are 1: 1, whereas on the secondary side they are $N_2: N_1$. In this way, secondary signals are referred to the primary. In Fig. 9.20, only four CTs and five PTs are required for the loss measurement, comparing to the measurement circuit of [90] with nine CTs and nine PTs. Using fewer sensors means having higher measurement accuracy. In summary, the new approach adds the small copper and iron-core losses, while the conventional approach relies on the difference of two large values $P_{in} - P_{out}$.

TABLE 9.2 Iron-core and copper losses of three-phase transformers.

	$p_{fe}(t)$	$p_{cu}(t)$
Y-Y (or Δ - Δ)	$v_{AC}(i_A - i'_a) + v_{BC}(i_B - i'_b)$	$(v_{AC} - v'_{ac})i'_a + (v_{BC} - v'_{bc})i'_b$
Δ -Y	$v_{AC}(i_{Al} - i'_{al}) + v_{BC}(i_{Bl} - i'_{bl})$	$(v_{AC} - v'_{an})i'_{al} + (v_{BC} + v'_{cn})i'_{bl}$
Δ -Y ₀	$v_{AC}(i_{Al} - i'_{al}) + v_{BC}(i_{Bl} - i'_{bl})$	$(v_{AC} - v'_{an})i'_{al} + (v_{BC} + v'_{cn})i'_{bl} - v'_{bl}i'_b$
Y-Y ₀	$v_{AC}(i_A - i'_a) + v_{BC}(i_B - i'_b) - v'_{cn}i'_0$	$(v_{AC} - v'_{ac})i'_a + (v_{BC} - v'_{bc})i'_b$
Y ₀ -Y ₀	$v_{An}(i_A - i'_a) + v_{Bn}(i_B - i'_b) + v_{Cn}(i_C - i'_c)$	$(v_{An} - v'_{an})i'_a + (v_{Bn} - v'_{bn})i'_b + (v_{Cn} - v'_{cn})i'_c$

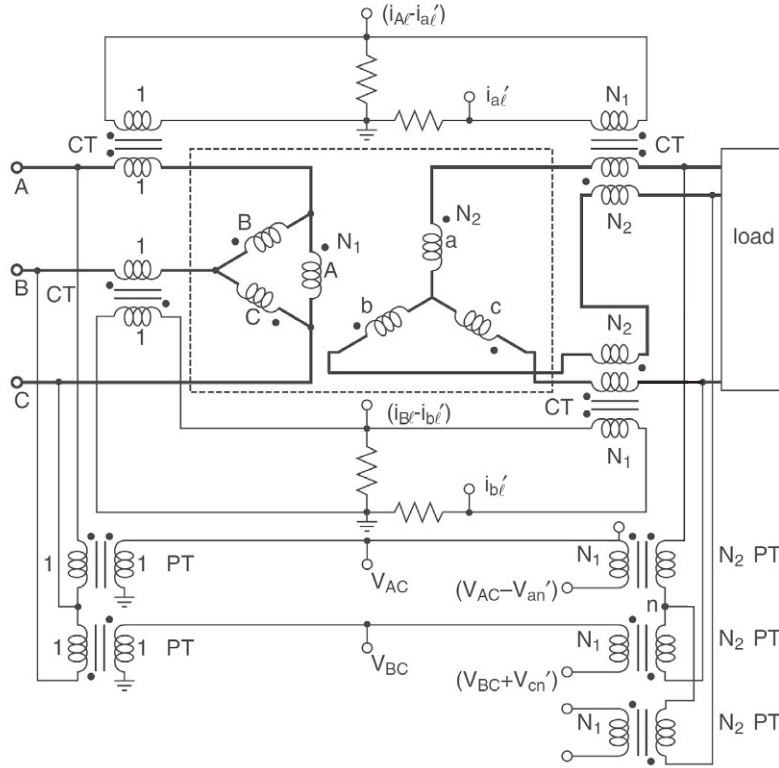


TABLE 9.3 Valid methods for various connections.

Primary/secondary	Δ	Y	Y_0
Δ	Eight-channel method	Eight-channel method	Ten-channel method
Y	Eight-channel method	Eight-channel method	Ten-channel method
Y_0	Ten-channel method	Ten-channel method	Twelve-channel method

The efficiencies of high-power electrical apparatus such as single- and three-phase transformers in the kVA and MVA ranges are about 98% or higher. For a 25 kVA single-phase transformer [88] with an efficiency of 98.46% at rated operation, the total losses are $P_{\text{Loss_accurate}}=390\text{W}$, where the copper and iron-core losses are $P_{\text{cu_accurate}}=325\text{W}$ and $P_{\text{fe_accurate}}=65\text{W}$, respectively [70]. The measurement errors of losses are derived for three different configurations: the conventional, new, and back-to-back approaches as discussed in Application Examples 9.8–9.10.

9.3.3.4 Application Example 9.8: Conventional approach $P_{Loss} = P_{in} - P_{out}$

Even if current and voltage sensors (e.g., CTs, PTs) as well as current and voltmeters with maximum error limits of 0.1% are employed, the conventional approach—where the losses are the difference between the input and output powers—always leads to relatively large maximum errors ($> 50\%$) in the loss measurements of highly efficient transformers.

Determine the maximum error in the measured losses for the 25 kVA, 240 V/7200 V single-phase transformer of Fig. E9.8.1, where the low-voltage winding is connected as primary, and rated currents are therefore $I_{2rat} = 3.472$ A, $I_{1rat} = 104.167$ A [72]. For a 25 kVA single-phase transformer [88] with an efficiency of 98.46% at rated operation, the total losses are $P_{Loss_accurate} = 390$ W, where the copper and iron-core losses are $P_{cu_accurate} = 325$ W and $P_{fe_accurate} = 65$ W, respectively [70].

The instruments and their maximum error limits are listed in Table E9.8.1, where errors of all current and potential transformers (e.g., CTs, PTs) are referred to the meter sides. In Table E9.8.1, error limits for all ammeters and voltmeters are given based on the full-scale errors, and those for all current and voltage transformers are derived based on the measured values of voltages and currents (see Appendix A4.1).

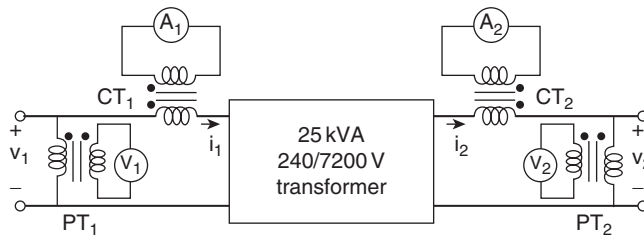


FIG. E9.8.1 Instrumentation for single-phase transformers employing conventional approach for loss measurement.

TABLE E9.8.1 Instruments and their error limits of Fig. E9.8.1.

Instrument	Rating	Error limits
PT ₁	240 V/240 V	$\epsilon_{PT1} = \pm 0.24$ V
PT ₂	7200 V/240 V	$\epsilon_{PT2} = \pm 0.24$ V
CT ₁	100 A/5 A	$\epsilon_{CT1} = \pm 5.2$ mA
CT ₂	5 A/5 A	$\epsilon_{CT2} = \pm 3.47$ mA
V ₁	300 V	$\epsilon_{V1} = \pm 0.3$ V
V ₂	300 V	$\epsilon_{V2} = \pm 0.3$ V
A ₁	5 A	$\epsilon_{A1} = \pm 5$ mA
A ₂	5 A	$\epsilon_{A2} = \pm 5$ mA

Solution to Application Example 9.8: Conventional Approach $P_{Loss} = P_{in} - P_{out}$

The maximum error of losses for the conventional method at unity power factor is based on Fig. E9.8.1 and Table E9.8.1:

$$\begin{aligned} P_{Loss_conventional} &= (240\text{ V} \pm \varepsilon_{PT1} \pm \varepsilon_{V1})(5.20835\text{ A} \pm \varepsilon_{CT1} \pm \varepsilon_{A1})20 \\ &\quad - 30(240\text{ V} \pm \varepsilon_{PT2} \pm \varepsilon_{V2})(3.472\text{ A} \pm \varepsilon_{CT2} \pm \varepsilon_{A2}) \\ &= 240.54\text{ V} \cdot 104.28\text{ A} - 7183.8\text{ V} \cdot 3.4635\text{ A} = 202.5\text{ W}. \end{aligned}$$

For the 25 kVA single-phase transformer [88] with an efficiency of 98.46% at rated operation, the total accurate losses are $P_{Loss_accurate} = 390\text{ W}$, where the copper and iron-core losses are $P_{cu_accurate} = 325\text{ W}$ and $P_{fe_accurate} = 65\text{ W}$, respectively [70]. Therefore,

$$\frac{P_{Loss_conventional}}{P_{Loss_accurate}} = \frac{\pm 202.5}{390} \cdot 100\% = \pm 51.9\%$$

The conventional method results in a maximum loss error of $\pm 51.9\%$.

9.3.4 Application Example 9.9: New approach $p_{cu} = i_2'(v_1 - v_2')$ and $p_{fe} = v_1(i_1 - i_2')$

Determine of the maximum error of the losses for the transformer of Application Example E9.8 from measured voltage and current differences, where the total losses $P_{Loss} = P_{cu} + P_{fe}$. The copper (P_{cu}) and iron-core (P_{fe}) losses are measured based on $p_{cu} = i_2'(v_1 - v_2')$ and $p_{fe} = v_1(i_1 - i_2')$, respectively, as shown in Fig. E9.9.1.

The series voltage drop and exciting current at rated operation referred to the low-voltage side of the 25 kVA, 240 V/7200 V single-phase transformer are $(v_1 - v_2') = 4.86\text{ V}$ and $(i_1 - i_2') = 0.71\text{ A}$, respectively [70,72]. Note that in Table 2 of [70] one-half the losses of two identical 25 kVA single-phase transformers—connected back-to-back—are given while the voltage drop $(v_1 - v_2') = 9.72\text{ V}$ and the current difference $(i_1 - i_2') = 1.41\text{ A}$ pertain to the series connection of both single-phase transformers at linear load; the same applies to the nonlinear loads. The instruments and their full-scale errors are listed in Table E9.9.1.

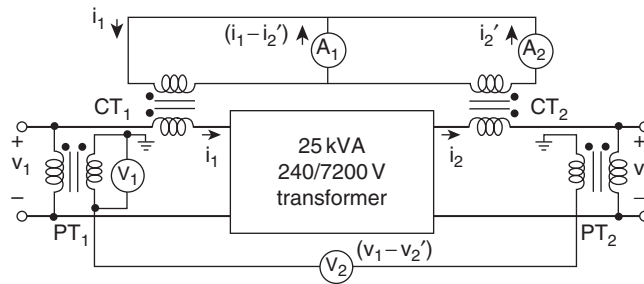


FIG. E9.9.1 Loss measurements of single-phase transformers from voltage and current differences.

TABLE E9.9.1 Instruments and their error limits of Fig. E9.9.1.

Instrument	Rating	Error limits
PT ₁	240 V/240 V	$\varepsilon_{PT1} = \pm 0.24 \text{ V}$
PT ₂	7200 V/240 V	$\varepsilon_{PT2} = \pm 0.24 \text{ V}$
CT ₁	100 A/5 A	$\varepsilon_{CT1} = \pm 5.2 \text{ mA}$
CT ₂	5 A/5 A	$\varepsilon_{CT2} = \pm 3.47 \text{ mA}$
V ₁	300 V	$\varepsilon_{V1} = \pm 0.3 \text{ V}$
V ₂	10 V	$\varepsilon_{V2} = \pm 0.01 \text{ V}$
A ₁	100 mA	$\varepsilon_{A1} = \pm 0.1 \text{ mA}$
A ₂	5 A	$\varepsilon_{A2} = \pm 5 \text{ mA}$

Solution to Application Example 9.9: *New Approach* $p_{cu} = i_2'(v_1 - v_2')$ and $p_{fe} = v_1(i_1 - i_2')$

The exciting current is measured with the error of (taking into account the maximum error limits of the instruments)

$$\frac{\Delta(i_1 - i_2')}{(i_1 - i_2')} = \frac{\varepsilon_{CT1} + \varepsilon_{CT2} + \varepsilon_{A1}}{(i_1 - i_2')/20} = \frac{(\pm 5.2 \pm 3.47 \pm 0.1) \text{ mA}}{35.5 \text{ mA}} = \pm 0.247.$$

The input voltage is measured with the error of

$$\frac{\Delta v_1}{v_1} = \frac{\varepsilon_{PT1} + \varepsilon_{V1}}{v_1} = \frac{\pm 0.24 \pm 0.3}{240} = \pm 0.0023,$$

and the iron-core loss is measured with the error of

$$\frac{\Delta P_{fe}}{P_{fe}} = \frac{\Delta v_1}{v_1} + \frac{\Delta(i_1 - i_2')}{(i_1 - i_2')} = \pm 0.249.$$

The series voltage drop is measured with the error of

$$\frac{\Delta(v_1 - v_2')}{(v_1 - v_2')} = \frac{\varepsilon_{PT1} + \varepsilon_{PT2} + \varepsilon_{V2}}{(v_1 - v_2')} = \frac{(\pm 0.24 \pm 0.24 \pm 0.01)}{4.86} = \pm 0.1008.$$

The output current is measured with the error of

$$\frac{\Delta i_2}{i_2} = \frac{\varepsilon_{CT2} + \varepsilon_{A2}}{i_2} = \frac{\pm 0.00347 \pm 0.005}{3.472} = \pm 0.00244,$$

and the copper loss is measured with the error of

$$\frac{\Delta P_{cu}}{P_{cu}} = \frac{\Delta i_2}{i_2} + \frac{\Delta(v_1 - v_2')}{(v_1 - v_2')} = \pm 0.1032.$$

Therefore, the total loss is measured with the maximum error of

$$\frac{\Delta P_{Loss}}{P_{Loss}} = \frac{\Delta P_{cu} + \Delta P_{fe}}{P_{Loss}} = \frac{\pm 0.1032 \cdot 325 \pm 0.249 \cdot 65}{390} = \pm 0.128 = \pm 12.8\%.$$

This maximum error can be reduced further by using three-winding current and potential transformers, as shown in Fig. E9.9.2A and B, for the measurement of exciting currents and voltage drops. The input and output currents pass through the primary and secondary windings of the current transformer, and the current in the tertiary winding represents the exciting current of the power transformer. Similarly, the input and output voltages are applied to the two primary windings of the potential transformers, and the secondary winding measures the voltage drop of the power transformer. For this 25 kVA single-phase transformer, the turns ratio for both the CT and the PT is $N_{p1}:N_{p2}:N_s = 1:30:1$. The maximum error by using three-winding current and potential transformers can be reduced to as small a value as to that of the back-to-back method, which will be described below.

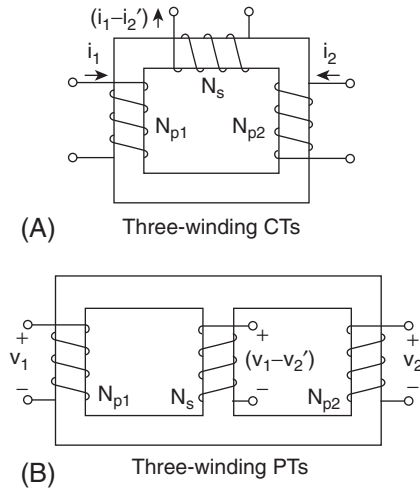


FIG. E9.9.2 (A) Three-winding current and (B) potential transformers as applied to new method of loss measurement.

9.3.5 Application Example 9.10: Back-to-back approach of two transformers measured with CTs and PTs

If two transformers of the same type are available, the copper and iron-core losses can be measured via the back-to-back method. The testing circuit for this method is shown in Fig. E9.10.1. The series voltage drop and exciting current at rated operation referred to the low-voltage side of the two 25 kVA, 240 V/7200 V single-phase transformers are therefore 9.72 V and 1.41 A, respectively (see Table 2 of [70], where the data were measured via the back-to-back approach, and therefore, the exciting currents and voltage drops are those of two transformers in series). The instruments and their full-scale errors are listed in Table E9.10.1.

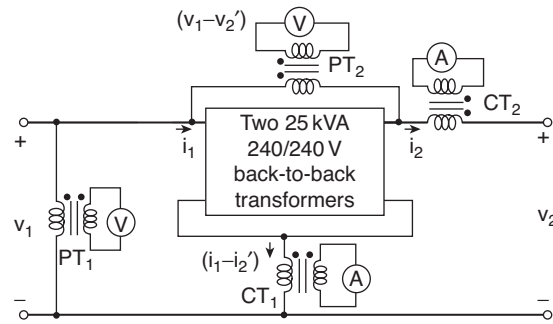


FIG. E9.10.1 Instrumentation for single-phase transformer employing back-to-back method of loss measurement.

TABLE E9.10.1 Instruments and their error limits of Fig. E9.10.1.

Instrument	Rating	Error limits
PT ₁	240 V/240 V	$\epsilon_{PT1} = \pm 0.24 \text{ V}$
PT ₂	12 V/12 V	$\epsilon_{PT2} = \pm 9.7 \text{ mV}$
CT ₁	2 A/2 A	$\epsilon_{CT1} = \pm 1.4 \text{ mA}$
CT ₂	100 A/5 A	$\epsilon_{CT2} = \pm 5.2 \text{ mA}$
V ₁	300 V	$\epsilon_{V1} = \pm 0.3 \text{ V}$
V ₂	10 V	$\epsilon_{V2} = \pm 0.01 \text{ V}$
A ₁	2 A	$\epsilon_{A1} = \pm 2 \text{ mA}$
A ₂	5 A	$\epsilon_{A2} = \pm 5 \text{ mA}$

Solution to Application Example 9.10: Back-to-Back Approach of Two Transformers Measured with CTs and PTs

The exciting current is measured with the error of

$$\frac{\Delta(i_1 - i'_2)}{(i_1 - i'_2)} = \frac{\pm \epsilon_{CT1} \pm \epsilon_{A1}}{(i_1 - i'_2)} = \frac{\pm 0.0014 \pm 0.002}{1.41} = \pm 0.0024.$$

The input voltage is measured with the error of

$$\frac{\Delta v_1}{v_1} = \frac{\pm \epsilon_{PT1} \pm \epsilon_{V1}}{v_1} = \frac{\pm 0.24 \pm 0.3}{240} = \pm 0.0023,$$

and the iron-core loss is measured with the error of

$$\frac{\Delta P_{fe}}{P_{fe}} = \frac{\Delta v_1}{v_1} + \frac{\Delta(i_1 - i'_2)}{(i_1 - i'_2)} = \pm 0.0047.$$

The series voltage drop is measured with the error of

$$\frac{\Delta(v_1 - v'_2)}{(v_1 - v'_2)} = \frac{\pm \varepsilon_{PT2} \pm \varepsilon_{V2}}{(v_1 - v'_2)} = \frac{\pm 0.0097 \pm 0.01}{9.72} = \pm 0.002.$$

The output current is measured with the error of

$$\frac{\Delta i_2}{i_2} = \frac{\pm \varepsilon_{CT2} \pm \varepsilon_{A2}}{i_2/20} = \frac{\pm 0.0052 \pm 0.002}{5.2} = \pm 0.002,$$

and the copper loss is measured with the error of

$$\frac{\Delta P_{cu}}{P_{cu}} = \frac{\Delta i_2}{i_2} + \frac{\Delta(v_1 - v'_2)}{(v_1 - v'_2)} = \pm 0.004.$$

The total loss is measured with the error of

$$\frac{\Delta P_{Loss}}{P_{Loss}} = \frac{\Delta P_{cu} + \Delta P_{fe}}{P_{Loss}} = \frac{\pm 0.004 \cdot 650 \pm 0.0047 \cdot 130}{780} = \pm 0.0041 = \pm 0.41\%.$$

This error analysis shows that the maximum errors of the measurement approach of this section range from 0.5 to 15% mainly depending on the accuracy of the voltage and current sensors (e.g., PTs, CTs). The back-to-back method generates extremely small maximum errors because voltage and current differences are directly measured by one PT and one CT, respectively. In Fig. E9.9.1, the errors of voltage and current differences are large because they are measured by two PTs and two CTs. If three-winding PT and CT (see Fig. E9.9.2A and B) are employed to measure the voltage and current differences, the maximum errors will be as small as those of the back-to-back method—even though instruments with maximum errors of 0.5% are used the maximum errors in loss measurements will not exceed 2.5%. Hall sensors with maximum errors of 0.5% [92] are suitable for low-efficient transformers only.

9.3.6 Application Example 9.11: Three-phase transformer with DC bias current

The losses of a 4.5 kVA three-phase transformer bank supplying power to resistive load under various DC bias conditions are to be measured. The measuring circuit for the Δ - Y_0 connected three-phase transformer bank (see Appendix 4.2) is shown in Fig. 9.16. The transformer is operated at 75% of rated load with various (magnetizing current ranging from 0 to $I_m = 1.25$ A) balanced DC bias currents injected on the Y_0 side, and the DC copper, AC copper, and iron-core losses are to be measured separately. Such DC currents can be generated by either unbalanced rectifiers, geomagnetic storms [31,80,93,94], or nuclear explosions.

Solution to Application Example 9.11: Three-Phase Transformer with DC Bias Current

Measured iron-core and copper losses vary with the DC bias current and are listed in Tables E9.11.1A, E9.11.1B, and E9.11.1C [94].

Tables E9.11.1A, E9.11.1B, and E9.11.1C demonstrates that the DC copper loss due to the DC bias current is negligibly small. However, the AC copper losses and the iron-core losses increase at rated input voltage (240 V) by about 10% and 40%, respectively, due to a DC bias

TABLE E9.11.1A Measured iron-core and copper losses of 4.5 kVA Δ -Y₀ connected transformer with DC bias for a rated line-to-line input voltage of 242 V [94].

DC bias current (A)	Iron-core losses (W)	AC copper losses (W)	DC copper losses (W)	Total losses (W)	Output power (W)
0.00	72.2	78.1	0.0	150.3	3340
0.56	79.9	78.9	0.4	159.2	3327
0.74	83.1	79.1	0.7	162.9	3316
1.01	88.7	81.8	1.3	171.8	3306
1.25	101.7	85.2	1.9	188.7	3293

TABLE E9.11.1B Measured iron-core and copper losses of 4.5 kVA Δ -Y₀ connected transformer with DC bias for a below-rated line-to-line input voltage of 230 V [94].

DC bias current (A)	Iron-core losses (W)	AC copper losses (W)	DC copper losses (W)	Total losses (W)	Output power (W)
0.00	62.9	67.9	0.0	130.8	2958
0.55	68.6	69.3	0.4	138.3	2950
0.76	72.0	72.1	0.7	144.8	2944
1.03	90.7	72.3	1.3	164.3	2940
1.24	95.1	76.2	1.9	173.2	2925

TABLE E9.11.1C Measured iron-core and copper losses of 4.5 kVA Δ -Y₀ connected transformer with DC bias for an above-rated line-to-line input voltage of 254 V [94].

DC bias current (A)	Iron-core losses (W)	AC copper losses (W)	DC copper losses (W)	Total losses (W)	Output power (W)
0.00	82.5	87.0	0.0	169.5	3663
0.56	88.4	86.7	0.4	175.5	3657
0.74	93.9	87.4	0.7	182.0	3658
1.02	103.0	90.0	1.7	194.3	3654
1.25	109.8	93.5	1.9	205.3	3645

current of 100% of the magnetizing current magnitude ($I_m = 1.25$ A) within the Y_0 connected windings; thus the efficiency of the transformer decreases from

$$\frac{3340 \text{ W} \cdot 100\%}{3340 \text{ W} + 150.3 \text{ W}} = 95.71\%$$

to

$$\frac{3293 \text{ W} \cdot 100\%}{3293 \text{ W} + 188.7 \text{ W}} = 94.6\%.$$

9.3.7 Discussion of results and conclusions

New approaches for the real-time monitoring of three-phase transformer power loss have been described and applied under nonsinusoidal operation. Accurate (maximum error of 0.5 to 15%), inexpensive (\$3000 for PC and A/D converter) computer-aided monitoring circuits have been devised and their applications demonstrated.

The digital version of the proposed measuring circuits has the following advantages as compared with the analog circuit of Arri et al. [90]:

- a. Measuring circuits are suitable for three-phase transformers with various commonly used connections (any combination of Y ungrounded, Y grounded, and Δ connections). Because the iron-core and copper losses of grounded three-phase transformers can be correctly measured, the method is also applicable for loss monitoring of power transformers under DC bias that can be generated by either unbalanced rectifiers, geomagnetic storms [31,80,93,94], or nuclear explosions.
- b. Fewer current and voltage transformers are used (only four CTs and five PTs are required, as shown in Fig. 9.20, comparing to nine CTs and nine PTs used in [90]), and therefore, the measurement accuracy is higher.
- c. The software [70] of this monitoring approach does not rely on the discrete Fourier transform (DFT) but on a more accurate transform, which is based on functional derivatives and can also be computed via the fast Fourier transform (FFT). With such online monitoring, the iron-core and copper losses can be sampled within a fraction of a second. Moreover, current and voltage wave shapes, harmonic components, total harmonic distortions, input, output, apparent powers, and the efficiency can be dynamically displayed and updated, and it is quite straightforward to measure the transformer derating under various nonsinusoidal operations [73]. The software is compatible with some commercially available data-acquisition tools [95,96] and other pertinent publications [97–101].

Online measurement of power transformer losses has the following practical applications: apparent power derating, loading guide, prefault recognition, predictive maintenance, and transformer aging and remaining life quantification. The method proposed in this section can be used as a powerful monitoring tool in these applications. The method is suitable for any kind of transformer regardless of size, rating, type, different magnetic circuit (core or shell, three or five limbs), cooling system, power system topology (nonsinusoidal and unbalanced), etc.

9.3.8 Uncertainty analysis [102]

The standard ANSI/NCSL Z540-2-1997 (R2002) recommends that the maximum error analysis as used in Section 9.3.3 be replaced by the expression of uncertainty in measurement.

The rationale is that the growing international cooperation and the National Conference of Standards Laboratories International (NCSLI) have recommended that standard. The standard ANSI/NCSL Z540-2-1997 (R2002) “is an adoption of the International Organization for Standardization (ISO) Guide to the Expression of Uncertainty in Measurement to promote consistent international methods in the expression of measurement uncertainty within US standardization, calibration, laboratory accreditation, and metrology services.” This standard serves the following purposes:

1. It makes the comparison of measurements more reliable than the maximum error method.
2. Even when all of the known or suspected components of error have been evaluated and appropriate corrections have been applied there still remains an uncertainty about the correctness of the stated result.
3. The evaluation and expression of uncertainty should be universal and the method should be applicable to all kinds of measurements.
4. The expression of uncertainty must be internally consistent and transferable.
5. The approach of this standard has been approved by the Bureau International des Poids et Mesures (BIPM).

It is for these reasons that the measurement errors in [74] have been expressed by the uncertainty as recommended by the standard.

9.3.9 SCADA and National Instrument LabVIEW software [103]

Supervisory control and data acquisition (SCADA) plays an important role in distribution system components such as substations. There are many parts of a working SCADA system, which usually includes signal hardware (input and output), controllers, networks, human-machine interface (HMI), communications equipment, and software. The term SCADA refers to the entire central system, which monitors data from various sensors that are either in close proximity or off site. Remote terminal units (RTUs) consist of programmable logic controllers (PLCs). RTUs are designed for specific requirements but they permit human intervention; for example, in a factory, the RTU might control the setting of a conveyer belt, but the speed can be changed or overridden at any time by human intervention. Any changes or errors are usually automatically logged and/or displayed. Most often, a SCADA system will monitor and make slight changes to function optimally and they are closed-loop systems and monitor an entire system in real time. This requires

- data acquisitions including meter reading,
- checking the status of sensors, the data of which are transmitted at regular intervals depending on the system. Besides the data being used by the RTU, it is also displayed to a human who is able to interface with the system to override settings or make changes when necessary.

9.4 Tools for improving reliability and security

SCADA equipment such as RTUs and PLCs are applications of telecommunications principles. Interdisciplinary telecommunications programs (ITPs) [104] combine state-of-the-art technology skills with the business, economic, and regulatory insights necessary to thrive

in a world of increasingly ubiquitous communications networks. ITPs are served by faculties in economics, electrical engineering, computer science, law, business, telecommunications industry, and government. They address research in wireless, cyber-security, network protocols, telecom economics and strategy, current national policy debates, multimedia, and so forth. Key topics by ITPs are

- Security and reliability of utility systems addressing a range of security-related issues on physical and information security as well as vulnerability assessment and management. The major areas discussed include physical security and access control, asset protection, information systems analysis and protection, vulnerability, assessment, risk management, redundancy, review of existing security and reliability in power systems, new security guidelines, threat response plan, and contingency operation.
- Risk analysis and public safety review various kinds of risks ranging from floods, power outages, and shock to biological hazards. Various approaches to setting safety standards and minimizing risks are explored.
- Current, future, and basic technical concepts of telecommunications systems are studied. They include an in-depth look at basic telecom terminology and concepts, introductions to voice and data networks, signaling, modulation/multiplexing, frequency-band and propagation characteristics, spectral analysis of signals, modulation (amplitude modulation AM, frequency modulation FM, phase modulation PM, and pulsecode modulation PCM), digital coding, modulation multiplexing, detection, transmission systems, and switching systems with an introduction to different network configurations and traffic analysis.
- Data communications define data and computer communications terminology, standards, network models, routing and switching technologies, and communication and network protocols that apply to wide-area networks WANs, metropolitan-area networks MANs, community wireless networks CWNs, and local-area networks LANs. Studies therefore focus on asynchronous and synchronous wide-area networks such as frame relay and synchronous optical networks SONETs, the Internet, routers, selected Internet applications, and Ethernets.
- Applied network security examines the critical aspects of network security. A technical discussion of threats, vulnerabilities, detection, and prevention is presented. Issues addressed are cryptography, firewalls, network protocols, intrusion detection, security architecture, security policy, forensic investigation, privacy, and the law.
- The emerging technology of internet access via the distribution system is addressed [105].

The 2003 US-Canada blackout is analyzed in [106] and recommendations are given for prevention of similar failures in the future. Reliability questions are addressed in [1,107]. With the advent of distributed generation [108,109], the control of power systems will become more complicated due to the limited short-circuit capability of renewable sources and their nonsinusoidal voltage and current wave shapes [110].

9.4.1 Fast interrupting switches and fault-current limiters

Fast interrupting switches and fault-current limiters serve to maintain the stability of an interconnected system by isolating the faulty portion or by mitigating the effect of a fault on the healthy part of the power system. Fast interrupting switches are used to prevent

ferroresonance due to the not quite simultaneous closing of the three phases, and to ease reclosing applications. In the first application, the almost simultaneous switching of the three phases prevents the current flows through the capacitance of a cable, which is required for inducing ferroresonant currents (see [Chapter 2](#)), whereas in the latter the reclosing should occur within a few cycles as indicated in [Chapter 4](#).

9.4.1.1 Fast interrupting switches (FIS)

Fast interrupting switches [\[111\]](#) rely on sulfur hexafluoride (SF_6) as a quenching medium resulting in an increased interrupting capability of the circuit breaker. SF_6 is an inorganic compound; it is a colorless, odorless, nontoxic, and nonflammable gas. SF_6 has an extremely great influence on global warming, and therefore, its use should be minimized or entirely avoided. From an environmental point of view a circuit breaker is expected to use smaller amounts of SF_6 or to adopt as a quenching medium a gas that causes no greenhouse effect. Research is performed to substitute SF_6 by a greenhouse benign alternative quenching gas. The series connection of an FIS with a fault-current limiter either reduces the interrupting conditions or makes the substitution of SF_6 with a less effective quenching gas possible. For this reason it is important to investigate the dependence of the interrupting condition on the circuit parameters as will be done in the next section.

9.4.1.2 Fault-current limiters (FCLs)

Fault-current limiters are installed in transmission and distribution systems to reduce the magnitude of the fault current and thereby mitigate the effect of the fault on the remaining healthy network. The fault-current limiter is a device having variable impedance, connected in series with a circuit breaker (CB) to limit the current under fault conditions. Several concepts for designing FCLs have been proposed: some are based on superconductors [\[112–114\]](#), power electronics components [\[115–118\]](#), polymer resistors [\[119\]](#), and control techniques based on conventional components [\[120\]](#). FCLs not only limit the fault currents but can have the following additional functions:

- reduction of voltage sags during short circuits [\[121\]](#),
- improvement of power system stability [\[122,123\]](#),
- reduction of the maximum occurring mechanical and electrical torques of a generator [\[124\]](#), and
- easement of the interrupting burden on circuit breakers by limiting the fault current to a desirable level.

Note that in the latter case the burden on the circuit breaker depends not only on the interrupting current but also on the transient recovery voltage (TRV) appearing across the contacts of a circuit breaker. It is conceivable that a limiting impedance of the FCL and a stray capacitance can result in a change of the TRV and may bring about a more severe interrupting duty than in the absence of an FCL. In the following section, the influence of a resistive and an inductive FCL on the interrupting duty of a circuit breaker will be investigated for various fault locations. First, a fault occurring near an FCL must be addressed because it produces the maximum fault current that a circuit breaker must interrupt. In this case, the TRV across the circuit breaker will be not as severe as compared with the case where the fault occurs a few kilometers from the terminals of the FCL. However, a fault a few kilometers from the FCL

must also be taken into account because the rate of rise of the recovery voltage (rrrv) is higher in this case than for a fault occurring near the FCL.

9.4.2 Application Example 9.12: Insertion of a fault current limiter (FCL) in the power system

The system voltage and frequency of a transmission system are assumed to be $V_{L-L} = 275 \text{ kV}$ (or $V_{L-N} = 159 \text{ kV}$) and 60 Hz , respectively. A symmetrical three-phase to ground short circuit is assumed to occur at a distance ℓ of 0 to 8 km from the load-side terminals of the FCL. Fig. E9.12.1 shows the corresponding single-phase equivalent circuit; on the supply-side the inductance $L_s = 6.69 \text{ mH}$ and the capacitor $C_s = 750 \text{ nF}$ are given. At a fault near the circuit breaker (CB)—in the absence of an FCL—the CB is assumed to interrupt $63 \text{ kA}_{\text{rms}}$ at a rate of rise of the recovery voltage (rrrv) of $2.3 \text{ kV}/\mu\text{s}$. In the absence of an FCL, the current at a distance ℓ of 1 km , 4 km , and 8 km is 90% , 68% , and 51% of $63 \text{ kA}_{\text{rms}}$. $C_{\text{FCL}} = 1 \text{ nF}$ represents the stray capacitance to ground of the FCL, and the transmission line inductance L_{tr} and capacitance C_{tr} per unit length are 0.8 mH/km and 15 nF/km , respectively. The current interruption process of the circuit breaker can be assumed to be that of an ideal switch. Design the $Z_{\text{FCL}} = R_{\text{FCL}} + j\omega L_{\text{FCL}}$ and estimate the stray capacitance C_{stray} connected in parallel with L_{FCL} .

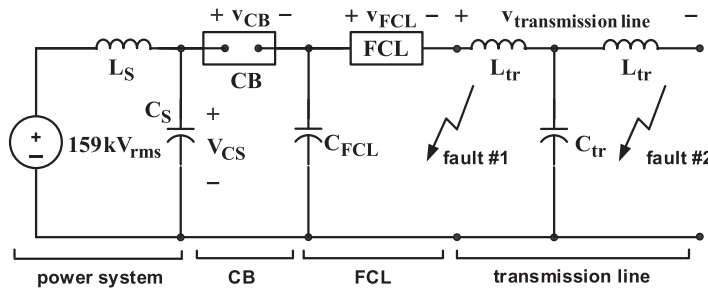


FIG. E9.12.1 Single-phase equivalent circuit of a circuit breaker (CB) connected in series with a fault-current limiter (FCL) with two three-phase to ground faults at different locations.

Solution to Application Example 9.12: Insertion of a Fault Current Limiter (FCL) in the Power System

It is assumed that the FCL produces a limiting impedance Z_{FCL} of either a resistive type or an inductive type as is illustrated in Fig. E9.12.2. The resistance R_{FCL} is in the range of 1 to 9Ω and the inductance L_{FCL} in the range of 2.6 to 23.9 mH ; that is, for 60 Hz the resistive (R_{FCL}) and reactive ($2\pi f \cdot L_{\text{FCL}}$) components are about the same. In the latter case, the capacitance C_{stray} (10 to 100 nF) represents a stray capacitance and is connected in parallel with L_{FCL} .

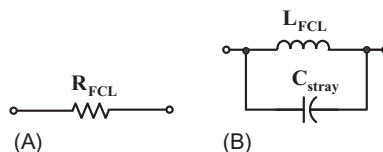


FIG. E9.12.2 Model for resistive (A) and inductive (B) fault current limiter.

9.4.3 Intentional islanding, interconnected, redundant, and self-healing power systems

The present interconnected power system evolved after 1940 and represents an efficient however complicated energy generation, distribution, and utilization network. It is reliable but also vulnerable to sabotage, economic issues, distributed generation, and regulations as well as a lack of appropriately trained or educated engineers. Power systems can be configured in multiple ways: at one extreme we have one large power source that delivers all the required power to multiple loads over transmission lines of varying lengths. At the other extreme there are individual sources that supply the needs for each and every load. In between, we have multiple sources (e.g., distributed generation) and loads of varying size that are connected by many transmission lines to supply the loads. The fundamental issue is how to balance efficiency, reliability, and security. For relatively small systems a single source serving multiple loads that are distributed over relatively small distances has the advantages of being able to share capacity as the demand varies from load to load as a function of time and to take advantage of the efficiencies of size. A single source for either one single load or several loads is the easiest to control (e.g., isochronous control) and, in many respects, the most secure, as possible failure mechanisms are associated with one source only. By connecting given loads to multiple sources (e.g., with drooping frequency-load characteristics, see Problems 4.12–4.14 of [Chapter 4](#)) with multiple transmission lines we increase the reliability, as the failure of any one source or transmission line can be compensated for by picking up the load from other sources or over other transmission lines. However, as the number of lines and sources becomes large, the control problem becomes too large to be managed centrally. This problem of distributed control for complicated power networks is closely related to the same problem in communications, biological, economic, political, and many other systems.

In the case of distributed generation with renewable energy sources (e.g., wind, solar) additional constraints enter the control approach where the renewable sources are operated at near 100% capacity by imposing droop characteristics with steep slopes. The intermittent operation of renewable sources requires that peak-power plants are able to take over when the renewable sources are unable to generate power. In order to minimize peak-power generation (e.g., spinning reserve) capacity, it will be advisable to also rely on energy storage plants (e.g., hydro, compressed air, supercapacitors).

In the following we explore the requirements necessary so that power systems can organize themselves. The information that is required to operate a conventional stand-alone power plant with isochronous control is relatively well known. However, it is much less clear what information one needs to operate a network that is faced with new and changing requirements and constraints that are brought about by new security problems, environmental regulations, distributed generation, competition, etc. Questions to be addressed by the control and dispatch center of a power system include the following: capacity at which each transmission line and power plant is operating, fuel reserves, frequency and phase of the generators, weather forecast, scheduled and nonscheduled power exchanges, times to shed noncritical loads or pick up new loads, repair times for various kinds of damage and maintenance, hierarchy of controls, and design of the system so that if a terrorist has access to a port on the network the damage he can do is limited. How does the probability

that this can happen increase with the number of ports/buses on the network? It is advisable to look at the design of other complex systems that organize themselves as possible models for our power system. Systems that can be considered as role models include the Internet, multistream, multiprocessor computer systems for parallel computing, and biological systems.

The systems with the most closely related set of constraints to the problem of the allocation of generation capacity and the distribution of power for varying loads with the loss of a generator or a transmission line are communications networks. These networks have a large number of sources and sinks for information that may be connected by many transmission or communication lines. Strategies for the design of these networks that take into account the cutting of communication lines or the loss of nodes such as telephone switches have been developed [125]. Typical designs for reliability include dual rings and meshes. Considerable savings can be obtained as well as an increase in reliability by the use of meshes. In order for these networks to be effective under varying levels and patterns of use, each node needs information about the traffic flow and the state of adjacent nodes on the network. If the proper information on the bandwidth and traffic are updated on a continuing basis, then the nodes can be prepared to allocate the traffic around a given fault when it occurs. Thus a given node can know at all times how it will reroute the traffic if a communication line is broken or an adjacent node is lost. This can be done without a central command system and in a sense provides a self-organizing system to correct for communication line outages or the loss of a node. Strategies used in communication theory can be effectively employed or modified to improve the reliability of power systems and their efficient operation.

Biological systems can serve as a role model for the design of power systems. Biological systems are highly adaptive and provide both repair and controls that allow them to deal with a large number of unexpected events. These systems use a hierarchy of control systems to coordinate a large number of processes. The brain typically controls the action of the body as a whole, but individual components such as the heart have local control systems that respond to demand for oxygen as communicated to it by signals from other sensory systems such as the baroreceptors. Thus there are functions that require a global response and there are others that are better dealt with locally. Additionally, different biological control systems respond with different time constants [126]. Similarly, power systems have parameters such as fuel reserves with relatively long time constants and other events such as transmission line short circuits that need to be responded to in fractions of seconds or minutes.

Neural networks are useful ways to approach many complex pattern recognition and control problems that are at least philosophically modeled on biological systems, which use both feedback and feed-forward networks to generate adaptive responses to problems. One of the most common neural networks adjusts the connection weights, using a back propagation algorithm to adapt the network to recognize the desired pattern. This property can be used to develop a control system that has the best response to a wide variety of network problems. Feed-forward networks can be used to anticipate the power system behavior and to prevent problems such as a cascade of network overloads. Power system control and security problems can be formulated in such a way that neural networks can be used as portions of an effective control system. It is to be noted that we can now place computers in the feedback loop of a control system to perform much more complex functions than the classical control systems with a few passive elements.

The three power systems (Western, Eastern, and Texan ERCOT) within the contiguous United States and their DC links operate quite effectively and reliably. This is so because there is distributed control within the transmission system and the distribution feeders: the integrity of the three power systems—including the DC link between the three grids—is maintained through relaying and supervisory control. The everyday operation of power systems takes into account single power plant and single transmission line outages; contingency plans are readily available for the operators. The question arises: what must be done if major emergencies happen? We can identify four types of emergencies:

1. Failure of a major power system component (e.g., power plant, transmission line).
2. Simultaneous failure of more than one major component at different locations such as caused by terrorist attacks.
3. Outage of a power system within an entire region caused by a nuclear explosion or geomagnetically induced currents (GICs) [127].
4. Disruption of the sensing or communication network.

Although the first type of failure can be handled by the present expertise or equipment of power system operators by established contingency plans, the last three failure modes are not planned for because they do not commonly occur. Strategies and countermeasures must be devised so that the power system will be able to survive such major emergencies.

9.4.4 Definition of problem

The problem at hand is multifaceted: it involves behavior, chemical, biological, economic, and engineering sciences. Although interdisciplinary in its nature, only topics involving electrical, telecommunications, and civil or architectural engineering will be addressed.

These sciences will be employed to discuss the following:

1. What can be done to prepare the power system prior to an emergency?
2. What should be done during the failure?
3. What will be done after the failure has occurred?
4. What strategies for efficiency improvements and maintaining regulatory constraints must be addressed?
5. What educational aspects must be highlighted at the undergraduate and graduate levels?

These queries will now be addressed in detail.

9.4.5 Solution approach

There are several approaches for the control of the power networks. The first one draws on the techniques that have been used to control communications networks, that is, to provide each power source with the intelligence to keep track of its local environment and maintain the plans on how it would reroute power if a transmission line is cut or if an adjacent node is either dropped out of the network or has a sudden change in load. This leads to an examination of the power distribution networks to see how the network can be configured to increase

its reliability, and this may well mean adding some new transmission lines that enable loads to be supplied from multiple sources. In addition, it will require multiple communication links between critical loads and generating power plants. A result of this approach is to allow local nodes on the network to have a high degree of independence that lets them control themselves. This gives both the loads and the generators great flexibility. Writing the rules so that such a system is stable, economical, reliable, and secure is major.

A second approach uses biological systems as a model to develop a hierarchy of controls and information processing that will improve the overall efficiency and reliability of the system. The objective of this effort is the separation of the control problems so that the control of each function is handled by a network that functions as efficiently as possible. This means handling local problems locally and scaling up to larger regions only when it leads to improved system performance in terms of efficiency, reliability, and security. It also means finding a way to make the control system respond on the time scale needed to handle the problem; that is, there are multiple control systems that interface and transmit information between them. Biological systems are often extremely good at optimizing the distribution of controls and efficiency; they are a good starting point to look for ideas for solving related problems. For example, sharks and rays can detect electric fields as small as 10^{-7} V/m using a combination of antennas, gain, and parallel processing to detect fish and navigate with signals that at first glance are below the noise level. The way humans use past experience to anticipate future problems may well provide us with an approach to using neural networks as a part of the control system and preventing terrorist attacks.

9.4.5.1 What can be done to prepare the power system prior to an emergency?

This is the most important part for coping with emergencies where several power plants or transmission lines fail or where the power system of an entire region is affected. It is recommended to divide each of the three power pools into independently operating power regions (IOPRs), with distributed intelligence so that in the case of a major emergency—where short circuits occur—fault-current limiters (FCLs) separate [121–124] within a fraction of a 60 Hz cycle the healthy grid from the faulty section. Each of the designated IOPRs must be able to operate independently and maintain frequency and voltage at about their nominal values either with isochronous or drooping frequency-load control. To achieve this, optimal reconfiguration of the power system must occur within milliseconds permitting intentional islanding operation. If necessary, optimal load shedding must take place but maintaining power to essential loads. To ease such an optimal reconfiguration, provisions must be made to relax usually strict requirements such as voltage and power quality constraints. The ability to communicate and to limit short-circuit currents within milliseconds will be an essential feature of this strategy. It is well known that nuclear explosions generate plasma that is similar to that of solar flares and therefore induce low frequency or quasi-DC currents within the high-voltage transmission system. To minimize the impact of nuclear explosions on the transmission system, three-limb, three-phase transformers with small zero-sequence impedances Z_0 will have to be used [31,80,94,127] and DC current compensation networks [94] will have to be installed at key transformers connected to long transmission lines to enforce balanced DC and AC currents.

9.4.5.2 What should be done during the failure?

In an emergency the fault current limiters sense overcurrents and limit these. Thereafter, reclosing switches connected in series with the FCLs will attempt to restore the connection within a few 60Hz cycles. If the fault duration is longer than a few 60Hz cycles then circuit breakers connected in series with the FCLs (see Fig. 9.21) will permanently open the faulty line until the source of the fault has been diagnosed. Reclosing switches are employed first because a great number of faults are temporary in their nature. This even applies to a nuclear explosion that lasts only a few seconds but generates plasma that exists for about 60s. This plasma consists of charged particles that radiate electromagnetic waves and therefore induce low-frequency or quasi-DC currents in the long high-voltage transmission lines. If these quasi-DC currents are balanced within the three phases, the reactive power demand and its associated voltage drops are manageable if the zero-sequence impedance Z_0 of three-limb, three-phase transformers is small. For unbalanced DC currents the reactive power demand and its associated voltage drops are large. For this reason a temporary (seconds) interruption of transmission lines might be beneficial until the plasma has dispersed. This is analogous to a patient who will be rendered unconscious while the operation progresses. Instead of enforcing an interruption another possibility is to enforce a balance of the quasi-DC currents with DC current compensation networks [94].

9.4.5.3 What will be done after the failure has occurred?

It is essential that the IOPRs can operate for a longer period of time (e.g., days) so that essential loads can be supplied. If there is a problem with maintaining frequency and voltage control then optimal load shedding will take place. The protocol for optimal load shedding must be defined before an emergency occurs. Relying on a central clock (e.g., National Institute of Standards and Technology, NIST), the paralleling of individual IOPRs can proceed to restore the integrity of each of the three power systems within the US. An alternate strategy is to have a number of atomic clocks located throughout the networks that can provide both the frequency and phase information.

9.4.5.4 What strategies for efficiency improvements and maintaining regulatory constraints must be addressed?

Efficiency improvement and maintaining power quality and other regulatory constraints will be unimportant while the failure occurs. For all other times an algorithm developed operates the power system efficiently for given constraints. The development of such software combines harmonic load flow [78], power quality [32,110,128–130] constraints, capacitor switching, and optimization where efficiency and cost are components of the objective function [131–134].




FIG. 9.21 Series connection of fault current limiter (FCL) and circuit breaker (CB) where reclosing switch (RCS) is in series to the FCL.

9.4.5.5 Reliability

Most short circuits in power systems occur because of insulation failure. The breakdown of the insulation depends on the voltage stress integrated over time. Although the time component cannot be influenced, the voltage stress across a dielectric can be reduced. With improved semiconductor technology and variable-frequency drives (VFDs) based on pulse-width modulation (PWM), the induction motor has become a viable alternative—as compared with DC motor drives—for many applications. The majority of these applications are usually under the 2 kV and the 1 MW range. Even with advancements in technology, the induction, synchronous, or permanent-magnet motors or generators experience failures of their windings due to large voltage stress when fed by PWM frequency current- or voltage-source converters. Repair work and fault analysis and research show that the majority of insulation failures occur near the last turn of the first coil prior to entering the second coil of the windings. Wave-propagation theory shows that forward- and backward-traveling waves superimpose so that the maximum voltage stress does not necessarily occur at the terminals of a winding but somewhere in between the two terminals. Because of the repetitive nature of PWM pulses the damping due to losses in the winding and iron core cannot be neglected. Work by Gupta [135–137] and many others [138–154] neglect the damping of the traveling waves; therefore, it cannot predict the maximum voltage stress of the winding insulation. Fig. E3.14.1 of [Chapter 3](#) illustrates a part of a machine winding that can be modeled by inductances and capacitances—a model suitable for the traveling wave theory. This model neglecting losses has been used in [135]. By computing and measuring the maximum voltage stress as a function of PWM switching frequency and duty cycle, one finds that current-source inverters and lightning strikes generate the largest voltage stress because of their inherent current spikes resulting in a large $L(di/dt)$.

9.4.5.6 Demand-side management programs

In the upcoming years, utilities continue to face fundamental changes:

- Distributed generation
- Greater access by utilities and others to the transmission systems of other utilities
- Competition for retail customers from other power sources, self-generation or cogeneration, and from other utility suppliers
- Reduction in the cost of renewable resources
- Growing use of demand-side management (DSM) programs as capacity and energy resources
- Increased concern with the environmental consequences of electricity production
- Growing public opposition to construction of new power plants
- Uncertainty about future load growth, fossil-fuel prices and availability, and possible additional regulations

The traditional approach to utility planning with its narrow focus on utility-built power plants is no longer adequate. A new paradigm for utility resource planning has been promoted [155]. The new approach should account for the availability of DSM and renewable-energy technologies and the public concern with environmental qualities.

Demand-side management programs present modest but growing sources of energy and capacity resources. In 1993, DSM programs cut annual electricity sales by 1.5% and potential peak demand by 6.8% [156,157]. DSM programs include a variety of technologies related to energy efficiency, load management, and fuel switching.

A survey of 2321 DSM programs conducted by 666 electric utilities in the United States indicated a wide range of technology alternatives, market implementation techniques, and incentive structures [158]. Of the total programs surveyed, 64% include residential customers, 50% commercial customers, 30% industrial customers, and 13% agricultural customers. Moreover, 56% of the programs emphasize peak-clipping goals and 54% feature energy-efficiency goals. Load-shifting, valley-filling, and load-growth objectives are also associated with reported DSM programs.

Load control programs are the most prevalent forms of demand-side management practiced by utilities interested in peak clipping. Three types of techniques are commonly used by utilities that would want to exercise control over customer loads:

- Direct control techniques by utilizing a communications system to remotely affect load operation. The communication technologies used include VHF radio, power line carrier, ripple, FM-SCA radio, cable TV, and telephone.
- Local control techniques through the promotion and use of demand control equipment that operates according to local conditions. The technologies used in local control include temperature-activated cycling (mostly for the control of air conditioners), timer tripping (on pumps), and various mechanisms that employ timers, interlocks, and/or multiple function demand limiters.
- Distributed control techniques that merge both direct and local control concepts by using a communications system to interface with and/or activate a local control device.

In the EPRI survey [158], a total of 467 load control programs have been reported by 445 different U.S. utilities. The vast majority (440) of reported programs utilize direct control technologies. Only 19 programs employ local control technologies and 8 programs use distributed controls involving interfacing between direct and local control technologies.

A crucial part of any DSM program is electrical load monitoring. Most utilities rely on revenue meters at the point of electrical entrance service to individual buildings or group of buildings. Some DSM programs may require the installation of additional meters for individual electricity-consuming devices such as lighting systems, ventilation fans, or chillers. With these additional meters, controls of targeted equipment can be performed. To make implementation of DSM programs cost-effective, there is an increased interest in monitoring techniques that allow detection and separation of individual loads from measurements performed at a single point (such as the service entrance of a building) serving several electricity-consuming devices. Such techniques have been proposed and have been shown to work relatively well for residential buildings but have not been effective for commercial buildings with irregular and variable loads [159].

Electricity production, transmission, and distribution have substantial environmental costs. Utilities use different methods to assess these impacts [160]. The simplest approach ignores externalities and assumes that compliance with all government environmental regulations yields zero externalities. A more complicated approach consists of ranking and weighting the individual air, water, and terrestrial impacts of different resource options.

Some utilities utilize approaches that require quantification (such as weight measured in ton-force of either sulfur dioxide or carbon dioxide emitted per million BTU of coal) and monetization (dollars of environmental damage per ton-force of either carbon dioxide or sulfur dioxide) of the emissions associated with resource options. However, since the estimates of monetized environmental costs vary so much, many utilities are reluctant to use these approaches to assess the environmental externalities of resource options.

Distribution circuits with high reliability indices (e.g., flower configuration) and the use of self-healing system configurations are more expensive than the radial, open-loop, and ring configurations. At present the distribution system contains not much intelligence if one ignores SCADA. In the future, the subtransmission and distribution system will have to be equipped with intelligent components as well so that the distributed generation can play a role even if central power stations go off-line because of faults.

9.4.6 Voltage regulation, ride-through capabilities of load components; CBEMA, ITIC tolerance curves, and SEMI F47 standard

9.4.6.1 Voltage regulation V_R

Faults (e.g., short circuits), as discussed in [Chapters 1 and 4](#), and environmental (e.g., lightning) events addressed in [Chapter 1](#) cause the voltage to deviate from its rated wave shape (e.g., magnitude and waveform). The steady-state voltage deviation is measured by the voltage regulation [\[161\]](#)

$$V_R = \left(1 - \frac{V_{\text{rated}} - |V|}{V_{\text{rated}}}\right) \cdot 100\%,$$

where V_R is the percent voltage regulation, which is 100% for $|V| = V_{\text{rated}}$. The voltages $|V|$ and V_{rated} are the measured rms voltage and the rated (nominal) voltage, respectively. The voltage regulation is a measure for the strength of a bus, that is, the ability of the bus to supply current without changing its voltage amplitude. The short-circuit ratio ($SCR = I_{\text{sc}}/I_{\text{rated}}$) discussed in [Chapter 1](#) is indicative of the strength of a power system. Renewable sources have a limited short-circuit current capability, and for this reason they lead to weak systems. Typical values of SCR are in the range from 20 to 200 for residential and 1000 or more for industrial circuits. Whereas the voltage regulation characterizes steady-state voltage amplitudes, the voltage-tolerance (also called power-acceptability and equipment-immunity) curves measure the change in bus voltage during a few 60Hz cycles.

9.4.6.2 Voltage-tolerance CBEMA and ITIC curves

The voltage-tolerance curves [\[162–165\]](#) are loci drawn in the bus voltage versus duration time semilogarithmic plane. The loci indicate the tolerance of a load to withstand either low or high voltages of short duration (few 60Hz cycles). [Figure 9.22](#) illustrates the voltage-tolerance curve established by the Computer Business Equipment Manufacturers Association (CBEMA), usually called the CBEMA curve. There are two loci: the overvoltage locus above the rated voltage value and the undervoltage locus below the rated voltage value. The linear vertical axis (ordinate) of [Fig. 9.22](#) represents the percent change in bus voltage from its rated value. The semilogarithmic horizontal (abscissa) axis indicates the duration of the voltage

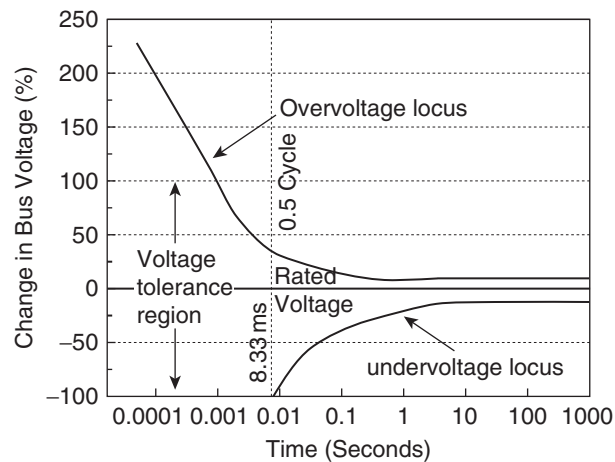


FIG. 9.22 CBEMA voltage-tolerance curve.

disturbance either expressed in 60Hz cycles or seconds. The steady-state value of the undervoltage locus approaches -13% below the rated voltage. Overvoltages of very short duration are tolerable if the voltage values are below the upper locus of the voltage-tolerance curve. The term “voltage tolerance region” in Fig. 9.22 identifies the permissible magnitudes for transient voltage events. Voltage events are due to lightning strikes, capacitor switching, and line switching due to faults.

In 1996 the CBEMA curve was replaced by the ITIC curve of Fig. 9.23 as recommended by the Information Technology Industry Council (ITIC).

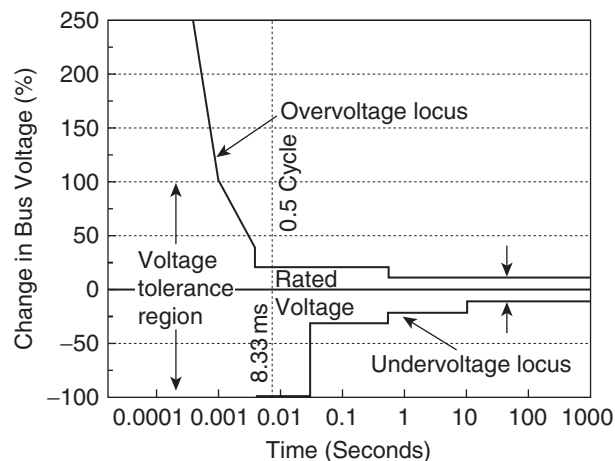


FIG. 9.23 ITIC voltage-tolerance curve.

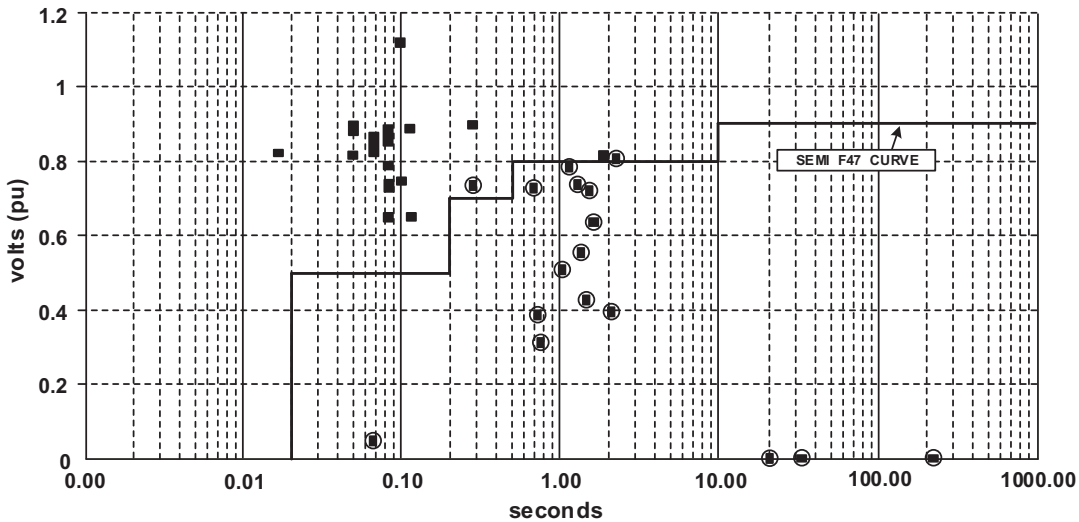


FIG. 9.24 Equipment ride-through standard SEMI F47 curve obtained from $V_{L-L} = 13.8\text{ kV}$ voltage sags; during a time frame of 60s 38 sags are obtained. The circled data points lead to plant outages. $V_{\text{base}} = 13.8\text{ kV}$.

9.4.6.3 SEMI F47 standard

The manufacturing process for semiconductor equipment is very sensitive to voltage sags. For this reason the semiconductor industry joined forces and established criteria for permissible sags that will not affect the manufacturing process. Fig. 9.24 shows measured voltage sags that have been characterized by their magnitudes and durations and are plotted along with the equipment ride-through standard for semiconductor manufacturing equipment [166–169]. The circled data in Fig. 9.24 represent events that resulted in the process interruption of semiconductor manufacturing. In comparison to the CBEMA and ITIC curves, the SEMI F47 curve addresses low-voltage conditions only.

9.4.7 Application Example 9.13: Ride-through capability of computers and semiconductor manufacturing equipment

Determine for the data given in Table E9.1.1 the ride-through capability of

- computers, and
- semiconductor manufacturing equipment.

Solution to Application Example 9.13: Ride-Through Capability of Computers and Semiconductor Manufacturing Equipment

- Ride-through capability based on the CBEMA or ITIC voltage-tolerance curves:
 - 1 min at 90% of rated voltage: ride-through is possible,

- 1 s at 130% of rated voltage: ride-through is not possible,
 - 0.1 s at 40% of rated voltage: ride-through is not possible,
 - 0.1 s at 150% of rated voltage: ride-through is not possible,
 - 0.01 s at 50% of rated voltage: ride-through is possible.
- b. Ride-through capability based on SEMI F47 standard:
- 1 min at 90% of rated voltage: ride-through is possible (borderline),
 - 1 s at 130% of rated voltage: ride-through is possible,
 - 0.1 s at 40% of rated voltage: ride-through is not possible,
 - 0.1 s at 150% of rated voltage: ride-through is possible,
 - 0.01 s at 50% of rated voltage: ride-through is possible.

9.4.8 Backup, emergency, or standby power systems (diesel-generator set, batteries, flywheels, fuel cells, and supercapacitors)

Standard IEEE-446 [170] gives definitions related to emergency and standby power systems, general need guidelines, systems and hardware, maintenance, protection, grounding, and industry applications. An important variable—besides the voltage amplitude characterized by the voltage regulation V_R —for the safe operation of a power system is the frequency regulation $\%R$. The frequency regulation [170] is defined by

$$\%R = \frac{(F_{nl} - F_{fl})}{F_{nl}} \cdot 100\%.$$

It represents the percentage change in frequency from steady-state no-load (nl) operation of an emergency or standby power system to steady-state full-load (fl) operation. The frequency regulation is a function of the prime mover (e.g., diesel engine) and the governing system.

Typical ratings of engine-driven generators are from 5 kW to 1 MW. The engine is mostly of the internal-combustion type—fueled with either diesel, gasoline, or natural gas. There are single- and multiple-engine generator set systems. Some of the emergency and standby power systems use steam or gas turbines. The latter ones are available beyond 3 MW. Simple inertia “ride-through” systems are available powered by induction motors or by batteries with DC machines as an interface between the DC and AC system. Parallel-supplied, parallel-redundant uninterruptible power supplies powered by diesel-driven generators are available up to a few megawatts, mostly used for critical computer loads. Battery-supplied systems with inverters are available as well. Combinations of rectifier/inverter (static), battery, and rotating uninterruptible power supplies provide emergency power within seconds.

9.4.9 Automatic disconnect of distributed generators in case of failure of central power station(s)

The paradigm for controlling existing power systems is based on central power stations with an appropriate spinning reserve of about 5% to 10%. At a total installed power capacity

of about 1200 GW within the United States, the spinning reserve is about 80 to 120 GW. The load sharing of the power plants is governed by drooping characteristics as discussed in Application Examples 9.5 and 9.6 and Problems 9.5–9.7. The use of renewable energy sources such as solar and wind is based on the principle of maximum power extraction. Due to the intermittent nature of such renewable sources the central power stations cannot be dispensed with or they have to be replaced by storage devices/plants in the hundreds of gigawatts range on a nationwide basis. In the present scenario, where at least 70% of the power is generated by coal, gas, and nuclear power plants, the frequency control and to some degree the voltage (reactive power) control is governed by central power stations. Distributed generation (DG) sources can augment or displace the power provided by central power stations, but they cannot increase their output powers on demand because they are operated at the maximum output power point. If now an important central power station (having a drooping characteristic with a small slope)—which controls the frequency—shuts down due to failure then renewable sources must be disconnected from the system because they can neither control the frequency (due to their drooping characteristics with large slopes) nor can they significantly control the voltage. This is one of the drawbacks of distributed generation unless storage (e.g., pumped-storage hydro or compressed-air) plants are available on a large scale. Application Examples 9.5 and 9.6 and Problems 9.5–9.7 address such control issues. The Danish experience with a relatively high penetration of DG indicates that the percentage of DG can assume values in the range of 30% before weak power system effects become dominant.

9.5 Load shedding and load management

Load shedding is an important method to maintain the partial operation of the power system. Some utilities make agreements with customers who do not necessarily require power at all times. In case of a shortage of electrical power due to failures or overloads due to air conditioning on a very hot day, customers will be removed from the load on a temporary basis. Utilities try to entice customers to this program by offering a lower electricity rate or other reimbursement mechanisms.

9.6 Energy-storage methods

Energy storage methods have played an important role in the past and they will even play a more important role in future power system architectures when distributed generation contributes about 30% of the entire electricity production. As long as the DG contribution is well below 30% there will be not much need for an increase in large (e.g., gigawatt range) scale storage facilities. One example for a large-scale storage plant is the Raccoon Mountain hydro pumped-storage plant commissioned around 1978 [60]. Other than hydro-storage plants there are compressed-air storage [61,62], flywheel [171], magnetic storage [172], and supercapacitor, battery, or fuel cell [173,174] storage.

9.7 Matching the operation of intermittent renewable power plants with energy storage

The operation of renewable intermittent energy sources must be matched with energy storage facilities. This is so because the wind may blow when there is no power demand and the wind may not blow when there is demand. A similar scenario applies to photovoltaic plants. It is therefore recommended to design a wind farm of, say, 100MW power capacity together with a hydro pumped-storage plant so that the latter can absorb 100MW during a 3-day period; that is, the pumped-storage plant must be able to store water so that the electricity storage amounts to 7.2 GWh. Similar storage capacity can be provided by compressed-air facilities where the compressed air is stored in decommissioned mines [61].

9.7.1 Application Example 9.14: Peak-power tracker [56] for photovoltaic power plants

Next to wind power, photovoltaic systems have become an accepted renewable source of energy. Sunshine (insolation, irradiation, solar radiation) is in some regions abundant and distributed throughout the earth. The main disadvantages of photovoltaic plants are high installation cost and low energy conversion efficiency, which are caused by the nonlinear and temperature-dependent ($v-i$) and ($p-i$) characteristics, and the shadowing effect due to clouds, dust, snow, and leaves. To alleviate some of these effects many maximum power-point tracking techniques have been proposed, analyzed, and implemented. List and categorize existing maximum power-point tracking techniques.

Solution to Application Example 9.14: Peak-Power Tracker [56] for Photovoltaic Power Plants

Existing maximum power-point tracking techniques can be categorized [56] as:

1. Look-up table methods: Maximum-power operating points of solar plants at different insolation and temperature conditions are measured and stored in “look-up tables.” Any peak-power tracking (PPT) process will be based on recorded information. The problem with this approach is the limited amount of stored information. The nonlinear nature of solar cells and their dependency on insolation and temperature levels as well as degradation (aging) effects make it impossible to record and store all possible system conditions.
2. Perturbation and observation (P&O) methods: Measured cell characteristics (current i , voltage v , power p) are used along with an on-line search algorithm to compute the corresponding maximum-power point, regardless of insolation, temperature, or degradation levels. The problem with this approach is the measurement errors (especially for current), which strongly affect tracker accuracy.
3. Numerical methods: The nonlinear ($v-i$) characteristics of a solar panel is modeled using mathematical or numerical equations. The model must be valid under different insolation, temperature, and degradation conditions. Based on the modeled ($v-i$) characteristics, the corresponding maximum-power points are computed as a function of cell open-circuit voltages or cell short-circuit currents under different insolation and temperature conditions.

In [56] two simple and powerful maximum-power point tracking (PPT) techniques (based on numerical methods)—known as voltage-based PPT and current-based PPT—are modeled, constructed, and compared. Relying on theoretical and experimental results, the advantages and shortcomings of each technique are given and their optimal applications are classified. Unfortunately, none of the existing maximum-power tracking methods can accommodate the partial covering of the solar cells [175] through shadowing effects, and bypass diodes are one means of mitigating these detrimental effects.

9.8 Summary

Well-established reliability indices are reviewed, and their application to frequently occurring feeder configurations within a distribution system are addressed. An estimation of electric and magnetic fields generated by transmission lines and their associated corona effects are important from an environmental and from a power quality point of view, respectively. Distributed generation (DG)—where renewable sources are a significant (e.g., 20%–30%) part of the generation mix—may lead to frequency and voltage control problems. This is so because renewable sources will be operated near their maximum power range and cannot deliver large transient currents during non-steady-state conditions; that is, renewable sources such as solar and windpower plants contribute to the properties of a weak generation system. This in turn makes a power system that consists of only intermittently operating renewable plants inoperable because they are operated at their maximum output powers and cannot deliver additional power when demanded by the loads. In other words, the drooping characteristics of intermittently operating renewable sources have a large slope R , whereas base load plants such as coal-fired, natural-gas, or storage plants can have droop characteristics with small slopes. The droop characteristics with small slopes guarantee that additional power demand can be covered, through spinning reserve, as requested by the loads. This aspect is important when in the case of severe faults or terrorist attacks the interconnected power system must be separated into several independently operating power system regions where each and every part has its own frequency and voltage control resulting in intentional islanding operation. To maintain a stable operation of each independently operating power region, each one must have sufficient spinning reserve. The maximum error and uncertainty principles are introduced to estimate to total measurement error as applied to power system components. Reliable measurement errors are important for the decision making of dispatch and control centers. Fast switches and current limiters play an important role for the stable operation of a utility system because the faulty part of an interconnected system can be isolated before a domino effect sets in, which may bring down the entire system.

In systems with distributed generation—based on renewable intermittently operating energy sources—larger than 20%–30%, storage plants become important to augment the spinning reserve. Long-term storage plants can be put on line within a few (e.g., 6) minutes. This is not fast enough, however, to replace the output of windpower plants, which may reduce as much as 60 MW per minute. Thus the concepts of spinning reserve and short-term storage devices become important, where the delivery of electric energy can be increased/supplied within a few cycles. Peak-power tracking equipment such as batteries for small island photovoltaic plants and peak-power trackers for grid-connected photovoltaic plants are

indispensable for maximizing the output power of intermittently operating renewable energy sources. In case of a blackout or brownout of a local power system, emergency power supplies must be employed; these can be based on the conventional diesel-generator or the fuel-cell type. The CBEMA or the newer ITIC curves will make sure that computer loads will not be affected during short outage periods because the power supplies of these components can provide sufficient energy and override a few cycles of voltage outage, reduction, increase, sags, or swells.

Lastly, various demand-side management (DSM) programs can play an important role in maintaining the reliability and security of a distribution system. These appear to be very effective with rate increases or decreases in managing peak-power conditions without requiring additional generation.

9.9 Problems

Problem 9.1: Reliability, CBEMA, ITIC, and SEMI F47 Calculations

- For interruptions listed in Table P9.1.1 calculate reliability indices (e.g., SAIDI, SAIFI, SARFI_{%V}). The total number of customers is 490,000.
- Determine whether for the interruptions of Table P9.1.1 computer (CBEMA and ITIC voltage-tolerance curves) and semiconductor manufacturing (SEMI F47 curve) equipment have a ride-through capability.

TABLE P9.1.1 Electricity interruptions/transients.

Number of interruptions/transients	Number of interruptions/transients duration	Voltage in % of rated value	Total number of customers affected	Cause of interruption/transient
10	4.5h	0	1000	Overload
15	3h	0	1500	Repair
60	1 min	90	500	Switching transients
90	1 s	130	500	Capacitor switching
110	0.1 s	40	15,000	Short circuits
95	0.1 s	150	4000	Lightning
130	0.01 s	50	3000	Short circuits

Problem 9.2: $|\vec{E}| = E$ Field Calculation

For a $V_{L-L} = 362$ kV transmission line of flat configuration (Fig. E9.2.2) compute the $|\vec{E}| \equiv E$ field measured in V/mm for the transmission-line data: equivalent bundle diameter $D = 0.2$ m, phase-to-phase distance $S = 12$ m, and height of the center of the bundle to ground $H = 15$ m.

Problem 9.3 Voltage Pick-up Through the $\vec{H} \equiv H$ Field from a Transmission Line via a Coil in the Ground

A utility requires a 60 V DC voltage source to transmit data to the control and dispatch center from a distant $V_{L-L} = 262$ kV transmission line operating at a phase rms current of $I_{\text{phase}} = 500$ A resulting at the ground level in the magnetic field strength of $H_{\text{ground}} = 1.4$ A/m or a maximum flux density of $B_{\text{ground_max}} = 17.6$ mG. To avoid any step-down transformer connection attached to the transmission line it was decided to put a single-phase coil into the ground and rectify the induced voltage supplying DC voltage to the transmitter's battery. The transmitter requires a battery current of $I_{\text{DC}} = 1$ A.

- Sketch the transmission line and the location of the single-phase coil buried in the ground.
- Assume that the rectangular single-phase coil has a length of $\ell = 10$ m, a width of $w = 3$ m, and a very small wire cross section. Determine the number of turns N required to obtain a rectified DC voltage of 60 V. You may assume that the magnetic field is tangential to the ground level.

Problem 9.4: Maximum Surface Gradients $E_{L-Louter}$, $E_{L-Lcenter}$ and Critical Disruptive Voltage V_{L-Lo} , Determine the Susceptibility of a Transmission Line to Corona [35]

- For a transmission line with the line-to-line voltage $V_{L-L} = 362$ kV and the basic geometry of the three-phase transmission line (flat configuration) of Fig. E9.4.1A where the phase spacing is $S = 7.5$ m, the subconductor diameter $d = 3$ cm, the conductor height $H = 12.5$ m, the number of conductors per bundle $N = 2$, and the bundle diameter $D_{\text{bundle}} = 45.7$ cm, determine the maximum surface gradients $E_{L-Louter}$ and $E_{L-Lcenter}$ measured in kV_{rms}/cm [47].
- Determine the critical disruptive voltage V_{L-Lo} in kV for the maximum gradients found in part a, where the radius of a subconductor is $r = 1.5$ cm, the equivalent phase spacing (distance) for the three-phase system is $D_{\text{equi}} = 500$ cm, the surface factor $m = 0.84$, and the air density factor $\delta = 0.736$ [35].

Problem 9.5: Frequency and Load Variations within an Interconnected Power System as a Result of Two Load Changes [57]

A block diagram of two interconnected areas of a power system (e.g., area #1 and area #2) is shown in Fig. P4.12.1 of Chapter 4. The two areas are connected by a single transmission line. The power flow over the transmission line will appear as a positive load to one area and an equal but negative load to the other, or vice versa, depending on the direction of power flow.

- List the ordinary differential equations governing the block diagram of Fig. P4.12.1 of Chapter 4.
- For steady-state operation show that with $\Delta\omega_1 = \Delta\omega_2 = \Delta\omega$ the change in the angular velocity (which is proportional to the frequency f) is

$$\Delta\omega = \text{function of } (\Delta P_{L1}, \Delta P_{L2}, D_1, D_2, R_1, R_2) \quad (\text{P9.5.1})$$

and

$$\Delta P_{\text{tie}} = \text{function of the same parameters as in Eq. (P9.5.1)}. \quad (\text{P9.5.2})$$

- (c) Determine values for $\Delta\omega$ (Eq. P9.5.1), ΔP_{tie} (Eq. P9.5.2) the new frequency f_{new} , where the nominal (rated) frequency is $f_{rated} = 60$ Hz, for the parameters $R_1 = 0.01$ pu, $R_2 = 0.02$ pu, $D_1 = 0.8$ pu, $D_2 = 1.0$ pu, $\Delta P_{L1} = 0.2$ pu, and $\Delta P_{L2} = -0.2$ pu, $M_1 = 4.5$, $T_{G1} = 0.01$ s, $L_{r1} = 0.8$ pu, $M_2 = 6$ pu, $T_{G2} = 0.02$ s, $T_{CH1} = 0.5$ s, $T_{CH2} = 0.75$ s, $L_{r2} = 0.8$ pu, and $X_{tie} = 0.2$ pu.
- (d) For a base apparent power $S_{base} = 1000$ MVA compute the power flow across the transmission line.
- (e) How much is the load increase in area #1 (ΔP_{mech1}) and area #2 (ΔP_{mech2}) due to the two load steps?
- (f) Compute with Mathematica from 0 to 100 s the transients at rated frequency $f_{rated} = 60$ Hz for the parameters $R_1 = 0.01$ pu, $R_2 = 0.02$ pu, $D_1 = 0.8$ pu, $D_2 = 1.0$ pu, $\Delta P_{L1} = 0.2$ pu, and $\Delta P_{L2} = -0.2$ pu. Are the transients reaching stable operating points?
- (g) Repeat part (f) with dissimilar droop characteristics $R_1 = 0.01$ pu, and $R_2 = 0.5$ pu to obtain stable operating conditions.
- (h) Repeat part (g) using MATLAB software. Why is there a difference in the results obtained with Mathematica and MATLAB.
- (i) Would it be advisable to increase the dissymmetry of the droop characteristics? Say $R_1 = 0.01$ pu and $R_2 = 1.0$ pu?

Problem 9.6: Load Sharing Control of Wind and Coal-Fired Plants

This problem is concerned with the frequency and load-sharing control of an interconnected power system broken into two areas: the first one with a 50 MW wind power plant (prime mover with $R_1 = 20$ pu) and the other one with a 600 MW coal-fired plant (prime mover with $R_2 = 0.5$ pu). Fig. P4.12.1 of Chapter 4 shows the block diagram of two generators interconnected by a tie line (transmission line).

Data for generation set (wind turbine and generator) #1:

Angular frequency change ($\Delta\omega_1$) per change in generator output power (ΔP_1) having the droop characteristic of $R_1 = \frac{\Delta\omega_1}{\Delta P_1}$ pu = 20 pu, load change (ΔP_{L1}) per frequency change ($\Delta\omega_1$) yielding $D_1 = \frac{\Delta P_{L1}}{\Delta\omega_1} = 0.8$ pu, step load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s}$ pu = $\frac{0.2}{s}$ pu, angular momentum of wind turbine and generator set $M_1 = 4.5$, base apparent power $S_{base} = 600$ MVA, governor time constant $T_{G1} = 0.01$ s, valve changing (charging) time constant $T_{CH1} = 0.5$ s, and (load reference set point)₁ = 0.8 pu.

Data for generation set (steam turbine and generator) #2:

Angular frequency change ($\Delta\omega_2$) per change in generator output power (ΔP_2) having the droop characteristic of $R_2 = \frac{\Delta\omega_2}{\Delta P_2}$ pu = 0.5 pu, load change (ΔP_{L2}) per frequency change ($\Delta\omega_2$) yielding $D_2 = \frac{\Delta P_{L2}}{\Delta\omega_2} = 1.0$ pu, step load change $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s}$ pu = $\frac{-0.2}{s}$ pu, angular momentum of steam turbine and generator set $M_2 = 6$, base apparent power $S_{base} = 600$ MVA, governor time constant $T_{G2} = 0.01$ s, valve (blade control) changing (charging) time constant $T_{CH2} = 0.7$ s, and (load reference set point)₂ = 0.8 pu.

Data for tie line: $T = \frac{377}{X_{tie}}$ with $X_{tie} = 0.2$ pu.

- (a) List the ordinary differential equations and the algebraic equations of the block diagram of Fig. P4.12.1 of Chapter 4.

- (b) Use either Mathematica or MATLAB to establish transient and steady-state conditions by imposing a step function for load reference set point $(s)_1 = \frac{0.8}{s}$ pu, load reference set point $(s)_2 = \frac{0.8}{s}$ pu, and run the program with no load changes $\Delta P_{L1} = 0$, $\Delta P_{L2} = 0$ for 5 s. After 5 s impose step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s}$ pu = $\frac{0.6}{s}$ pu, and after 7 s impose step-load change $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s}$ pu = $\frac{-0.6}{s}$ pu to find the transient and steady-state responses $\Delta\omega_1$ (pu), $\Delta\omega_2$ (pu), ΔP_{tie} (pu), ΔP_{mech1} (pu), and ΔP_{mech2} (pu).
- (c) Repeat part b for $R_1 = 0.01$ pu, $R_2 = 0.5$ pu, $T_{CH1} = 0.1$ s, and $T_{CH2} = 0.1$ s.
- (d) Repeat part b for $R_1 = 0.01$ pu, $R_2 = 0.01$ pu, $T_{CH1} = 0.1$ s, and $T_{CH2} = 0.1$ s.

Problem 9.7: Load Sharing Control of Wind and Photovoltaic Power Plants

This problem addresses the frequency and load-sharing control of an interconnected power system broken into two areas, each having one 5 MW windpower plant and one 5 MW photovoltaic plant. Fig. P4.12.1 of [Chapter 4](#) shows the block diagram of two generators interconnected by a tie line (transmission line).

Data for generation set (wind turbine and generator) #1:

Angular frequency change ($\Delta\omega_1$) per change in generator output power (ΔP_1) having the droop characteristic of $R_1 = \frac{\Delta\omega_1}{\Delta P_1}$ pu = 0.5 pu, load change (ΔP_{L1}) per frequency change ($\Delta\omega_1$) yielding $D_1 = \frac{\Delta P_{L1}}{\Delta\omega_1} = 0.8$ pu, step-load change at 10 s $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s}$ pu = $\frac{1.2}{s}$ pu, angular momentum of wind turbine and generator set $M_1 = 4.5$, base apparent power $S_{base} = 5$ MVA, governor time constant $T_{G1} = 0.01$ s, valve (blade control) changing (charging) time constant $T_{CH1} = 0.1$ s, and (load reference set point) $_1 = 1.0$ pu.

Data for generation set (photovoltaic array and inverter) #2:

Angular frequency change ($\Delta\omega_2$) per change in inverter output power (ΔP_2) having the droop characteristic of $R_2 = \frac{\Delta\omega_2}{\Delta P_2}$ pu = 0.5 pu, load change (ΔP_{L2}) per frequency change ($\Delta\omega_2$) $D_2 = \frac{\Delta P_{L2}}{\Delta\omega_2} = 1.0$ pu, step-load change at 30 s $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s}$ pu = $\frac{0.8}{s}$ pu, equivalent angular momentum $M_2 = 6$, base apparent power $S_{base} = 5$ MVA, governor time constant $T_{G2} = 0.02$ s, equivalent valve changing (charging) time constant $T_{CH2} = 0.1$ s, and (load reference set point) $_2 = 0.8$ pu.

Data for tie line: $T = \frac{377}{X_{tie}}$ with $X_{tie} = 0.2$ pu.

- (a) List the ordinary differential equations and the algebraic equations of the block diagram of Fig. P4.12.1 of [Chapter 4](#).
- (b) Use either Mathematica or MATLAB to establish transient and steady-state conditions by imposing a step function for load reference set point $(s)_1 = \frac{0.8}{s}$ pu, load reference set point $(s)_2 = \frac{0.8}{s}$ pu, and run the program with no load changes $\Delta P_{L1} = 0$, $\Delta P_{L2} = 0$ for 10 s. After 10 s impose step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s}$ pu = $\frac{1.2}{s}$ pu, and after 30 s impose step-load change $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s}$ pu = $\frac{0.8}{s}$ pu, to find the transient and steady-state responses $\Delta\omega_1$ (pu) and $\Delta\omega_2$ (pu).
- (c) Repeat part b for $R_1 = 0.1$ pu and $R_2 = 0.05$ pu.

Problem 9.8: Calculation of Uncertainty of Losses $P_{\text{Loss}} = P_{\text{in}} - P_{\text{out}}$ Based on the Conventional Approach

Even if current and voltage sensors (e.g., CTs, PTs) as well as current meters and voltmeters with error limits of 0.1% are employed, the conventional approach—where the losses are the difference between the input and output powers—always leads to relatively large uncertainties (>15%) in the loss measurements of highly efficient transformers.

The uncertainty of power loss measurement will be demonstrated for the 25 kVA, 240 V/7200 V single-phase transformer of Fig. E9.8.1, where the low-voltage winding is connected as primary, and rated currents are therefore $I_{2\text{rat}} = 3.472$ A, $I_{1\text{rat}} = 104.167$ A [72]. The instruments and their error limits are listed in Table E9.8.1, where errors of all current and potential transformers (e.g., CTs, PTs) are referred to the meter sides. In Table E9.8.1, error limits for all ammeters and voltmeters are given based on the full-scale errors, and those for all current and voltage transformers are derived based on the measured values of voltages and currents (see Appendix A4.1).

Because the measurement error of an ammeter or a voltmeter is a random error, the uncertainty of the instrument is $\varepsilon/\sqrt{3}$ if the probability distribution of the true value within the error limits $\pm\varepsilon$ (as shown in Table E9.8.1) is assumed to be uniform. However, the measurement error of an instrument transformer is a systematic error, and therefore, its uncertainty equals the error limit (see Appendix A4.1).

For the conventional approach, power loss is computed by

$$p_{\text{loss}} = v_1 i_1 - v_2 i_2,$$

where v_1 is measured by PT_1 and voltmeter V_1 (see Fig. E9.8.1). The type B variance of measured v_1 is $u_{v1}^2 = \varepsilon_{PT1}^2 + \varepsilon_{v1}^2/3 = 0.24^2 + 0.3^2/3$.

Similarly, the variances of measured i_1 , v_2 , and i_2 referred to the primary sides of the instrument transformers are, with $k_{CT1} = 100$ A/5 A = 20, $k_{PT2} = 7200$ V/240 V = 30,

$$u_{i1}^2 = k_{CT1}^2 \left(\varepsilon_{CT1}^2 + \frac{\varepsilon_{A1}^2}{3} \right), \quad u_{v2}^2 = k_{PT2}^2 \left(\varepsilon_{PT2}^2 + \frac{\varepsilon_{v2}^2}{3} \right), \quad u_{i2}^2 = \left(\varepsilon_{CT2}^2 + \frac{\varepsilon_{A2}^2}{3} \right).$$

The variance of the measured power loss is

$$\begin{aligned} u_{\text{loss}}^2 &= \left(\frac{\partial p_{\text{loss}}}{\partial v_1} \right)^2 u_{v1}^2 + \left(\frac{\partial p_{\text{loss}}}{\partial i_1} \right)^2 u_{i1}^2 + \left(\frac{\partial p_{\text{loss}}}{\partial v_2} \right)^2 u_{v2}^2 + \left(\frac{\partial p_{\text{loss}}}{\partial i_2} \right)^2 u_{i2}^2 \\ &= (i_1 u_{v1})^2 + (v_1 u_{i1})^2 + (i_2 u_{v2})^2 + (v_2 u_{i2})^2. \end{aligned}$$

Answer: The uncertainty of power loss measurement is 61.4 W, resulting in the relative uncertainty of 15.7%, where $P_{\text{loss_accurate}} = 390$ W (see Application Example 9.8).

Problem 9.9: Calculation of Uncertainty of Losses Based on the New Approach

The determination of the losses from voltage and current differences greatly reduces the relative uncertainty of the power loss measurement. The copper and iron-core losses are measured based on $p_{cu} = i_2'(v_1 - v_2') = i_2' v_0$ and $p_{fe} = v_1(i_1 - i_2') = v_1 i_0$, respectively, as shown in Fig. E9.9.1.

The series voltage drop and exciting current at rated operation referred to the low voltage side of the 25 kVA, 240 V/7200 V single-phase transformer are $(v_1 - v'_2) = 4.86$ V and $(i_1 - i'_2) = 0.71$ A, respectively [70,71]. The instruments and their error limits are listed in Table E9.9.1.

In Fig. E9.9.1, v_1 is measured by PT_1 and voltmeter V_1 . Therefore, the relative uncertainty of the v_1 measurement is

$$\frac{u_{v1}}{v_1} = \frac{1}{v_1} \sqrt{\epsilon_{PT1}^2 + \epsilon_{V1}^2/3}.$$

Similarly, the relative uncertainties of the $(i_1 - i'_2)$, $(v_1 - v'_2)$, and i_2 measurements are, with $k_{CT1} = 100$ A/5 A = 20,

$$\frac{u_{i0}}{i_0} = \frac{k_{CT1}}{(i_1 - i'_2)} \sqrt{\epsilon_{CT1}^2 + \epsilon_{CT2}^2 + \epsilon_{A1}^2/3},$$

$$\frac{u_{v0}}{v_0} = \frac{1}{(v_1 - v'_2)} \sqrt{\epsilon_{PT1}^2 + \epsilon_{PT2}^2 + \epsilon_{V2}^2/3},$$

$$\frac{u_{i2}}{i_2} = \frac{1}{i_2} \sqrt{\epsilon_{CT2}^2 + \epsilon_{A2}^2/3}.$$

The relative uncertainty of iron-core loss measurement is

$$\frac{u_{P_{fe}}}{P_{fe}} = \sqrt{\left(\frac{u_{v1}}{v_1}\right)^2 + \left(\frac{u_{i0}}{i_0}\right)^2}.$$

The relative uncertainty of copper loss measurement is

$$\frac{u_{P_{cu}}}{P_{cu}} = \sqrt{\left(\frac{u_{v0}}{v_0}\right)^2 + \left(\frac{u_{i2}}{i_2}\right)^2}.$$

Answer: The uncertainty of power loss measurement is

$$u_{loss} = \sqrt{(0.176P_{fe})^2 + (0.071P_{cu})^2},$$

and the relative uncertainty is $(25.8/390)100\% = 6.6\%$, where $P_{loss_accurate} = 390$ W (see Application Example 9.8)

The uncertainty of power loss measurements can be reduced further by using three-winding current and potential transformers as shown in Fig. E9.9.2A and B for the measurement of exciting current and series voltage drop. The input and output currents pass through the primary and secondary windings of the current transformer, and the current in the tertiary winding represents the exciting current of the power transformer. Similarly, the input and output voltages are applied to the two primary windings of the potential transformers and the secondary winding measures the voltage drop of the power transformer. For this 25 kVA single-phase transformer, the turns ratio for both the CT and the PT is $N_{P1} : N_{P2} : N_s = 1 : 30 : 1$. The power loss uncertainty by using three-winding current and potential transformers can be reduced to as small a value as to that of the back-to-back method, which will be described next.

Problem 9.10: Calculation of Uncertainty of Losses $P_{\text{Loss}} = P_{\text{in}} - P_{\text{out}}$ Based on Back-to-Back Approach

If two transformers of the same type and manufacturing batch are available, the copper and iron-core losses can be measured via the back-to-back method. The testing circuit for this method is shown in Fig. E9.10.1. The series voltage drop ($v_1 - v'_2$) and exciting current ($i_1 - i'_2$) at rated operation referred to the low-voltage side of the two 25 kVA, 240 V/7200 V single-phase transformers are therefore 9.72 V and 1.41 A, respectively (see Table 2 of [70], where the data were measured via the back-to-back approach, and therefore, the exciting current and series voltage drop are those of two transformers in series). The instruments and their error limits are listed in Table E9.10.1.

The relative uncertainties of ($i_1 - i'_2$), v_1 , ($v_1 - v'_2$), and i_2 measurements are, for $k_{CT2} = 5 \text{ A}/5 \text{ A} = 1$,

$$\begin{aligned}\frac{u_{i0}}{i_0} &= \frac{1}{(i_1 - i'_2)} \sqrt{\varepsilon_{CT1}^2 + \frac{\varepsilon_{A1}^2}{3}}, \\ \frac{u_{v1}}{v_1} &= \frac{1}{v_1} \sqrt{\varepsilon_{PT1}^2 + \varepsilon_{V1}^2/3}, \\ \frac{u_{v0}}{v_0} &= \frac{1}{(v_1 - v'_2)} \sqrt{\varepsilon_{PT2}^2 + \varepsilon_{V2}^2/3}, \\ \frac{u_{i2}}{i_2} &= \frac{k_{CT2}}{i_2} \sqrt{\varepsilon_{CT2}^2 + \varepsilon_{A2}^2/3}.\end{aligned}$$

The relative uncertainty of iron-core loss measurement is

$$\frac{u_{P_{fe}}}{P_{fe}} = \sqrt{\left(\frac{u_{v1}}{v_1}\right)^2 + \left(\frac{u_{i0}}{i_0}\right)^2}.$$

The relative uncertainty of copper loss measurement is

$$\frac{u_{P_{cu}}}{P_{cu}} = \sqrt{\left(\frac{u_{v0}}{v_0}\right)^2 + \left(\frac{u_{i2}}{i_2}\right)^2}.$$

Answer: The uncertainty of power loss measurement is $u_{\text{loss}} = \sqrt{(0.00178P_{fe})^2 + (0.00163P_{cu})^2}$, and the relative uncertainty is $(0.54/390)100\% = 0.14\%$, where $P_{\text{loss_accurate}} = 390 \text{ W}$ (see Application Example 9.8).

Problem 9.11: Fault-current Limiter

Fig. P9.11.1 shows details of the fault-current limiting network of Figs. E9.12.1 and E9.12.2A and B. It represents one phase of a three-phase power system with a line-to-line rms voltage of $V_{\text{L-L}} = 275 \text{ kV}$ at $f = 60 \text{ Hz}$. A symmetrical three-phase line-to-ground short circuit at node 3 occurs with $V_{\text{Rfault1}} = 0$ and subsequently at the load with $V_{\text{Rload}} = V_{\text{Rfault2}} = 0$. The rated parameter values are $v_s(t) = 224,830 \text{ Vsin}(2\pi \cdot 60 \cdot t)$, $L_s = 6.69 \text{ mH}$, $C_s = 750 \text{ nF}$,

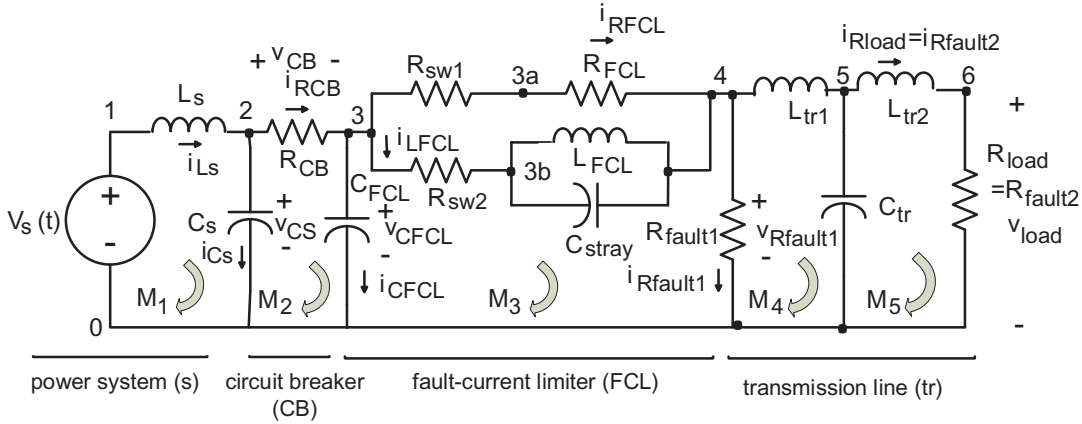


FIG. P9.11.1 Detailed circuit of the single-phase, equivalent circuit of Figs. E9.12.1 and E9.12.2A and B.

$R_{CB} = \{0.01 \, \Omega \text{ at short circuit}, 100 \, \text{k}\Omega \text{ at open circuit}\},$
 $C_{FCL} = 1 \, \text{nF}, C_{\text{stray}} = (10 - 100) \, \text{nF},$
 $R_{sw1} = \{0.01 \, \Omega \text{ at short circuit}, 100 \, \text{k}\Omega \text{ at open circuit}\},$
 $R_{sw2} = \{0.01 \, \Omega \text{ at short circuit}, 100 \, \text{k}\Omega \text{ at open circuit}\},$
 $R_{FCL} = (1-9) \, \Omega, L_{FCL} = (2.6-23.9) \, \text{mH}, R_{\text{fault1}} = \{0.01 \, \Omega \text{ at short circuit}, 100 \, \text{k}\Omega \text{ at open circuit}\},$
 $L_{\text{tr1}} = L_{\text{tr2}} = 0.8 \, \text{mH/km}, C_{\text{tr}} = 15 \, \text{nF/km}, R_{\text{fault2}} = \{0.01 \, \Omega \text{ at short circuit}, 1000 \, \text{k}\Omega \text{ at open circuit}\}$
 for a transmission line when fault1 occurs at $\ell = 0 \, \text{km}$ and fault2 at $\ell = 8 \, \text{km}$ measured from the load-side terminals (e.g., node 4) of the fault-current limiter (CFL). The current interruption process of the circuit breaker (CB) can be assumed to be that of an ideal switch. The same applies to R_{fault1} and R_{fault2}

(a) Operation at rated load:

Using PSpice compute the load current $I(R_{\text{load}})$ for rated operation with $R_{\text{load}} = 3 \, \Omega$, $R_{sw1} = 0.01 \, \Omega$, $R_{FCL} = 5 \, \Omega$, $R_{sw2} = 100 \, \text{k}\Omega$, $L_{FCL} = 10 \, \text{mH}$, $C_{\text{stray}} = 50 \, \text{nF}$, $L_{\text{tr1}} = L_{\text{tr2}} = (0.8 \, \text{mH/km} \cdot 8 \, \text{km}) = 6.4 \, \text{mH}$, and $C_{\text{tr}} = (15 \, \text{nF/km} \cdot 8 \, \text{km}) = 120 \, \text{nF}$.

(b) Operation at short-circuited load:

Repeat Part a) with $R_{\text{fault2}} = R_{\text{load}} = 0.0001 \, \Omega$.

(c) Operation at short-circuited load with ohmic fault-current limiter (FCL):

Repeat Part a) with $R_{\text{fault2}} = R_{\text{load}} = 0.0001 \, \Omega$ and $R_{sw1} = 0.01$, $R_{FCL} = 9 \, \Omega$.

(d) Operation at short-circuited load with inductive fault-current limiter (FCL):

Repeat Part a) with $R_{sw1} = 1000 \, \text{k}\Omega$, $R_{sw2} = 0.01 \, \Omega$, $L_{FCL} = 10 \, \text{mH}$, and $C_{\text{stray}} = 50 \, \text{nF}$.

(e) Operation at short-circuited load with circuit breaker (CB) operating:

Repeat Part a) with $R_{sw1} = 0.01 \, \Omega$, $R_{FCL} = 0.01$, $R_{sw2} = 1000 \, \Omega$, $R_{CB} = 1000 \, \text{k}\Omega$.

(f) Operation at rated load:

Repeat Part a) with $R_{sw1} = 0.01 \, \Omega$, $R_{FCL} = 0.01 \, \Omega$, $R_{sw2} = 1000 \, \text{k}\Omega$, $L_{FCL} = 10 \, \text{mH}$, and $C_{\text{stray}} = 50 \, \text{nF}$.

(g) Mathematica or MATLAB analysis:

- (g1) Show that the set of (ordinary differential) equations for meshes M_1 to M_5 and node 1 to node 4 of Fig. P9.11.1 listed below is correct by deriving them applying KVL and KCL.

$$\begin{aligned}\frac{di_{Ls}(t)}{dt} &= \frac{v_s(t)}{L_s} - \frac{v_{Cs}(t)}{L_s}, \\ \frac{dv_{Cs}(t)}{dt} &= \frac{i_{Ls}(t)}{C_s} - \frac{i_{RCB}(t)}{C_s}, \\ i_{RCB}(t) &= \frac{v_{Cs}(t)}{R_{CB}} - \frac{v_{CFCL}(t)}{R_{CB}}, \\ \frac{dv_{CFCL}(t)}{dt} &= \frac{i_{RCB}(t)}{C_{FCL}} - \frac{i_{LFCL}(t)}{C_{FCL}}, \\ \frac{di_{LFCL}(t)}{dt} &= \frac{v_{CFCL}(t)}{L_{FCL}} - \frac{v_{Rfault1}(t)}{L_{FCL}}, \\ i_{LFCL}(t) &= i_{Rfault1}(t) + i_{Ltr1}(t), \\ \frac{di_{Ltr1}(t)}{dt} &= \frac{(i_{Rfault1}(t) \cdot R_{fault1})}{L_{tr1}} - \frac{v_{Ctr}(t)}{L_{tr1}}, \\ \frac{dv_{Ctr}(t)}{dt} &= \frac{i_{Ltr1}(t)}{C_{tr}} - \frac{i_{Ltr2}(t)}{C_{tr}}, \\ \frac{di_{Ltr2}(t)}{dt} &= \frac{v_{Ctr}(t)}{L_{tr2}} - \frac{i_{Ltr2} \cdot R_{load}}{L_{tr2}}.\end{aligned}$$

- (g2) Using Mathematica or MATLAB compute the load current $I(R_{load})$ for rated operation with $R_{load} = 3 \Omega$, $R_{sw1} = 0.01 \Omega$, $R_{FCL} = 5 \Omega$, $R_{sw2} = 100 \text{ k}\Omega$, $L_{FCL} = 10 \text{ mH}$, $C_{stray} = 0 \text{ nF}$, $L_{tr1} = L_{tr2} = (0.8 \text{ mH/km} \cdot 8 \text{ km}) = 6.4 \text{ mH}$, and $C_{tr} = (15 \text{ nF/km} \cdot 8 \text{ km}) = 120 \text{ nF}$.
- (g3) Operation at short-circuited load:
Repeat Part (a) with $R_{fault2} = R_{load} = 0.0001 \Omega$.
- (g4) Operation at short-circuited load with ohmic fault-current limiter (FCL):
Repeat Part (a) with $R_{fault2} = R_{load} = 0.0001 \Omega$ and $R_{sw1} = 0.01$, $R_{FCL} = 9 \Omega$.
- (g5) Operation at short-circuited load with inductive fault-current limiter (FCL):
Repeat Part (a) with $R_{sw1} = 1000 \text{ k}\Omega$, $R_{sw2} = 0.01 \Omega$, $L_{FCL} = 10 \text{ mH}$, and $C_{stray} = 50 \text{ nF}$.
- (g6) Operation at short-circuited load with circuit breaker (CB) operating:
Repeat Part (a) with $R_{sw1} = 0.01 \Omega$, $R_{FCL} = 0.01$, $R_{sw2} = 1000 \Omega$, $R_{CB} = 1000 \text{ k}\Omega$.
- (g7) Operation at rated load:
Repeat Part (a) with $R_{sw1} = 0.01 \Omega$, $R_{FCL} = 0.01 \Omega$, $R_{sw2} = 1000 \text{ k}\Omega$, $L_{FCL} = 10 \text{ mH}$, and $C_{stray} = 50 \text{ nF}$.

Problem 9.12: Computer Tolerance Curves CBEMA, ITIC, and Semiconductor Manufacturing Ride-Through Standard SEMI F47

- (a) Determine whether the voltage sags or swells of Table P9.12.1 are within the CBEMA and ITIC voltage tolerance regions. That is, can the computing equipment ride-through and withstand the either low or high voltages of short duration? In this problem February has

been chosen because there are line switching, capacitor switching, and snow and ice induced faults as is indicated in Table P9.12.1. The total number of customers is 40,000.

- (b) Determine whether the voltage sags of Table P9.12.1 lead to semiconductor plant outages according to the equipment ride-through standard SEMI F47.

TABLE P9.12.1 Interruptions or transients during February 2006.

Number of interruptions or transients	Interruption or transient duration	Voltage (% of rated value)	Total number of customers affected	Cause of interruption or transient
110	2 s	90	2000	Switching transients
60	1 s	130	3000	Capacitor switching
90	0.5 s	40	15,000	Short circuits due to snow and ice

Problem 9.13: Batteries Used for Peak-power Tracking Connected to a Small Residential Photovoltaic Power Plant

Fig. P9.13.1 shows the circuit diagram of a battery directly connected to a solar generator (array) and Fig. P9.13.2 depicts the 1500 V lead-acid battery and solar-power plant characteristics. The operating points (intersections of battery and solar panel characteristics) can be made rather close to the maximum power points of the solar power plant. Note that a 1500 V lead-acid battery has a rated voltage of $V_{\text{BAT}} = E_0 = 1500 \text{ V}$. A voltage of $V_{\text{BAT}} = E_0 = 1400 \text{ V}$ if almost empty, and a voltage of $V_{\text{BAT}} = V_{\text{BAToc}} + V_{\text{BATover}} = 1600 \text{ V}$ if fully charged, that is, the voltage drops across the electrochemical capacitance C_B and the nonlinear capacitance C_b (V_{BATover}) of battery cells are included.

What are the DC powers delivered for operating points 1–5?

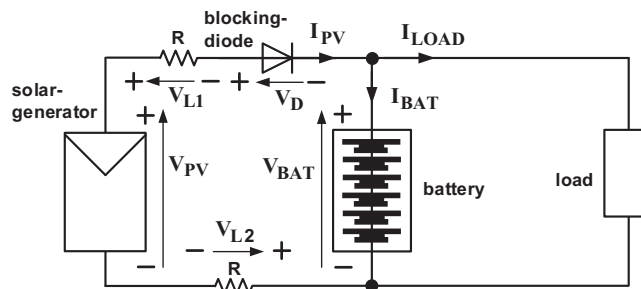


FIG. P9.13.1 Circuit diagram of lead-acid battery directly connected to photovoltaic power plant.

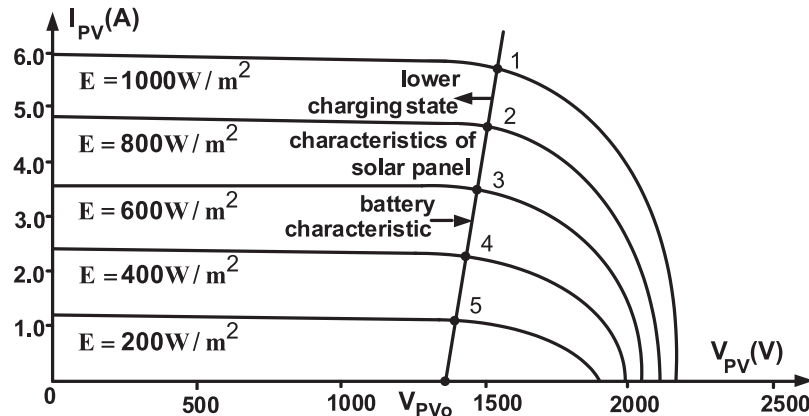


FIG. P9.13.2 Operating points of a lead-acid battery directly connected to a photovoltaic plant. E is the insolation.

Problem 9.14: Emergency Standby Power Supply Based on Diesel-Generator Set

An emergency standby generating set for a commercial building is to be sized. The building has an air-conditioning unit (10 tons, SEER (seasonal energy efficiency ratio) = 14) and air handlers (consisting of two variable-speed drives for the indoor air circulation fan and the outdoor condenser), two high-efficiency refrigerator/freezers (18 cubic feet each), 100 light bulbs, three fans, two microwave ovens, three drip coffee makers, one clothes washer (not including energy to heat hot water), one clothes dryer, one range (with oven), radio, TV and VCR, three computers, three printers, and one 3hp. (1hp.=746W) motor for a water pump.

Find the wattage of the required emergency standby diesel-generator set, provided the typical wattage values of Table P9.14.1 are used.

TABLE P9.14.1 Typical wattage of appliances.

Appliance	Value (W)
Clothes dryer	4800
Clothes washer (not including energy to heat hot water)	500
Drip coffee maker	1500
Fan (ceiling)	100–200
Microwave oven	1450
Range (with conventional oven)	3200
Range (with self-cleaning oven)	4000
High efficiency refrigerator/freezer (18 cubic feet)	300
Radio	60

TABLE P9.14.1 Typical wattage of appliances—Cont'd

Appliance	Value (W)
VCR (including operation of TV)	100
Light bulbs	30–200
Computer	200
Printer	100
Compressor of air conditioning unit (8 tons, SEER=14)	6000
Indoor air handler and outdoor condenser of air conditioning unit	2000

Problem 9.15: Operation of Induction Generator with Injected Voltage in Wound-Rotor Circuit as Used for State-of-the-Art, Variable-Speed Windpower Plants [176]

Induction machines with wound-rotor circuits are used in windpower plants as generators as shown in Fig. P9.15.1. To minimize the rating of the solid-state rectifier and the PWM inverter the three-phase stator winding is directly connected to the power system and the rectifier/inverter combination is supplying or extracting power into or from the rotor circuit of the induction generator. A $P_{\text{out}}=2.5\text{MW}$, $V_{L-L}=12,470\text{V}$, $f=60\text{Hz}$, 8-pole Y-connected wound-rotor induction motor has these parameters: $R_S=0.04\Omega$, $X_S=0.6\Omega$, $R_r'=0.1\Omega$, $X_r'=0.2\Omega$, $X_m\rightarrow\infty$, and a stator-to-rotor turns ratio $a_{T1}=4$. The rated slip of this machine when operation as a motor is $S_{\text{rat}}=0.03$.

When the induction machine is operated as a motor with unexcited rotor, that is $\tilde{V}_r=0\text{V}$, determine the following:

- (a) phase voltage $|\tilde{V}_{s-ph_rat}|$,
- (b) synchronous mechanical speed n_{ms_rat} ,
- (c) synchronous angular velocity ω_{ms_rat} ,

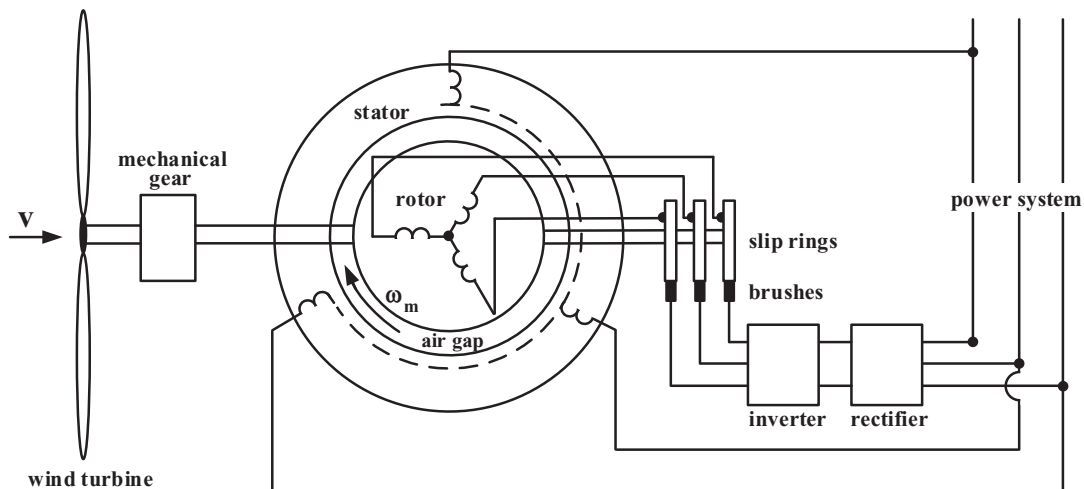


FIG. P9.15.1 Doubly fed induction generator used in a variable-speed windpower plant.

- (d) speed of the shaft n_{m_rat}
 (e) rated stator current and rated torque.
 (f) When the above machine is operated with injected voltage $\tilde{V}'_r = |\tilde{V}'_r| \angle \phi_r$ in the rotor circuit compute the rotor current $\tilde{I}'_r = |\tilde{I}'_r| \angle \theta_r$ and the torque T for the rotor voltage magnitudes $|\tilde{V}'_r| = 350 \text{ V}$, and 700 V and the phase angles $\phi_r = 0^\circ, \pm 15^\circ$, and $\pm 30^\circ$ provided the induction motor operates at $n_{m_new} = 600 \text{ rpm}$. What is the required frequency of the rotor voltages/ currents f_r if the stator frequency is $f = 60 \text{ Hz}$?
 (g) Determine the ratio of the mechanical gear if the rated speed of the wind turbine is $n_{m_wind \text{ turbine}} = 20 \text{ rpm}$.

The doubly fed induction machine (DFIM) has found an important application in wind power generation in the form of the doubly fed induction generator (DFIG) as shown in Fig. P9.15.1. To minimize the rating of the solid-state rectifier and the PWM inverter the three-phase stator winding is directly connected to the power system and the rectifier/inverter combination is supplying/extracting power into/from the rotor circuit of the induction generator. Figs. P9.15.2A and P9.15.2B depict the per-phase equivalent circuit of an induction machine with an injected voltage in the wound-rotor circuit. Fig. P9.15.3 illustrates the speed control by injecting a voltage in the wound-rotor winding of a 10kW motor.

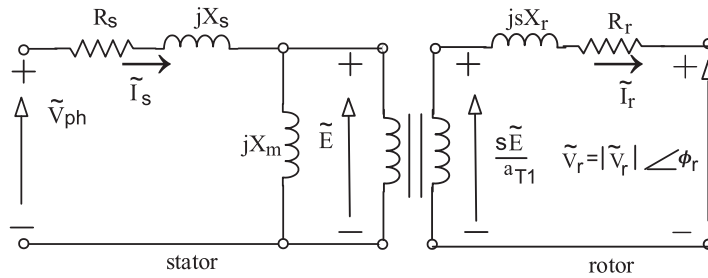


FIG. P9.15.2A Per-phase equivalent circuit of an induction machine with injected voltage in wound-rotor circuit and ideal transformer coupling.

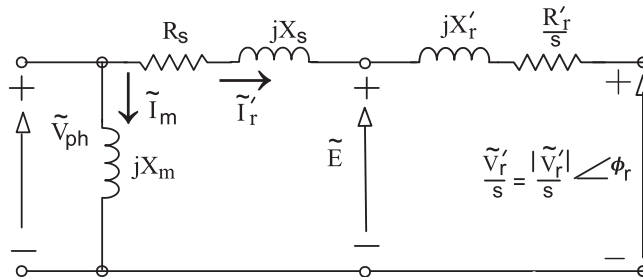


FIG. P9.15.2B Per-phase equivalent circuit of an induction machine with injected voltage in wound-rotor circuit without ideal transformer coupling.

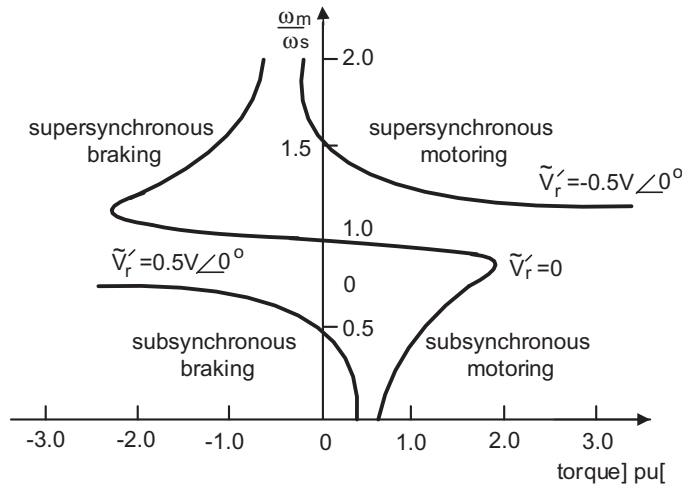


FIG. P9.15.3 Speed control by injection of voltage in wound-rotor winding of a 10kW motor.

Problem 9.16: Steady-state Characteristics of a DC Series Motor Powered by Solar Cells [180]

The performance of a DC series motor supplied by a solar cell array (Fig. P9.16.1) is to be analyzed. Load matching (solar array, DC series motor, and mechanical load) plays an important role. In this case, there is no need for a peak-power tracker because the load matching provides inherent peak-power tracking at steady-state operation.

The solar array is governed by the relation

$$V_g = -0.9I_g + \frac{1}{0.0422} \ln \left(1 + \frac{I_{phg} - I_g}{0.0081} \right), \quad (\text{P9.16.1})$$

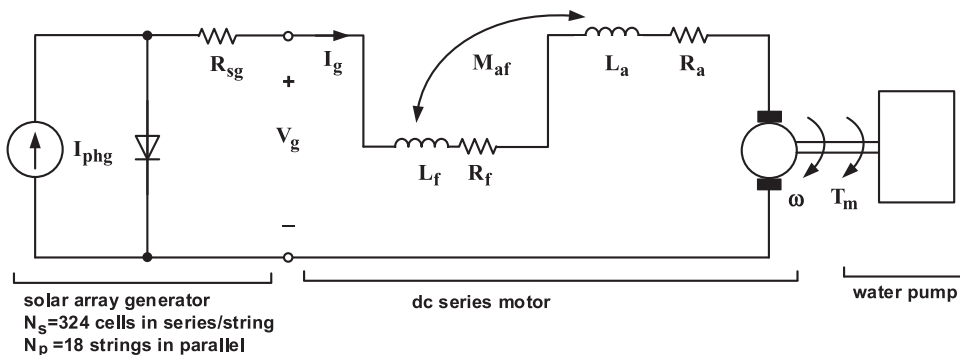


FIG. P9.16.1 Solar array powering a DC series motor that drives an (irrigation) water pump.

where V_g is the output voltage and I_g the output current of the solar array. The current I_{phg} is the photon current, which is proportional to the insolation Q . The value $I_{phg} = 13.6$ A corresponds to 100% of insolation, that is, $Q = 1000 \text{ W/m}^2$.

The series DC motor has the rated parameters $V_{\text{rat}} = 120 \text{ V}$, $I_{\text{rat}} = 9.2 \text{ A}$, $n_{\text{rat}} = 1500 \text{ rpm}$, $R_a = 1.5 \Omega$, $R_f = 0.7 \Omega$, $M_{af} = 0.0675 \text{ H}$ and can be described by the relation

$$\omega = \frac{V_g - \left(\frac{T_m}{M_{af}}\right)^{\frac{1}{2}} \cdot R}{M_{af} \left(\frac{T_m}{M_{af}}\right)^{1/2}}, \quad (\text{P9.16.2})$$

where $R = R_a + R_f$ and $T_m = M_{af} I_a^2$.

The mechanical load (water pump) can be described by the relation

$$T_m = T_{m1} = A + B\omega + T_{L1} = 4.2 + 0.002387\omega, \quad (\text{P9.16.3})$$

where $A = 0.2 \text{ Nm}$, $B = 0.0002387 \text{ Nm/(rad/s)}$, and $T_{L1} = 4.0 \text{ Nm}$.

- Plot the solar array characteristic I_g versus V_g for the three insolation levels of $Q = 100\%$, 80% , and 60% using Eq. (P9.16.1) with I_{phg} as parameter.
- Based on Eqs. (P9.16.2), (P9.16.3) plot the motor torque relation (Eq. P9.16.2) and the water pump torque relation (Eq. P9.16.3) in the angular velocity (ω) versus torque (T_m) plane.
- Using the relations $V_m = V_g = M_{af} I_a \omega + R I_a$ and $T_m = M_{af} I_a^2$, where $I_a = I_g$, plot the load line T_{m1} in the I_g – V_g plane. Does a good load matching exist?
- Calculate the input power of the series DC motor P_{in} from V_{rat} and I_{rat} .
- Calculate the power delivered to the pump by the solar array P_{solar} at $Q = 100\%$, 80% , and 60% insolation.
- How does P_{solar} compare with P_{in} for the three different insolation levels?

Problem 9.17: Design of a 100 MW Flywheel Storage Power Plant

Design a flywheel storage system which can provide for about 12 min a power of 100 MW, that is, energy of 20 MWh. The flywheel power plant consists (see Fig. P9.17.1) of a flywheel, mechanical gear, synchronous machine, inverter-rectifier set and a step-up transformer. The individual components of this plant must be designed as follows:

- Possible flywheel configurations

For the flywheels (made from steel) based on a spherical ($R_{1o} = 1.5 \text{ m}$), cylindrical ($R_{1o} = 1.5 \text{ m}$, $h = 0.9 \text{ m}$), and wheel-type (with 4 spokes) configurations as shown in Fig. P9.17.2 ($h = 0.9 \text{ m}$, $R_{1o} = 1.5 \text{ m}$, $R_{1i} = 1.3 \text{ m}$, $R_{2o} = 0.50 \text{ m}$, $R_{2i} = 0.10 \text{ m}$, $b = 0.2 \text{ m}$),

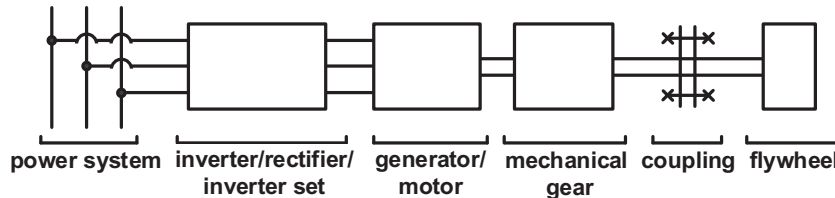


FIG. P9.17.1 Flywheel power plant (start-up time of a few 60Hz cycles).

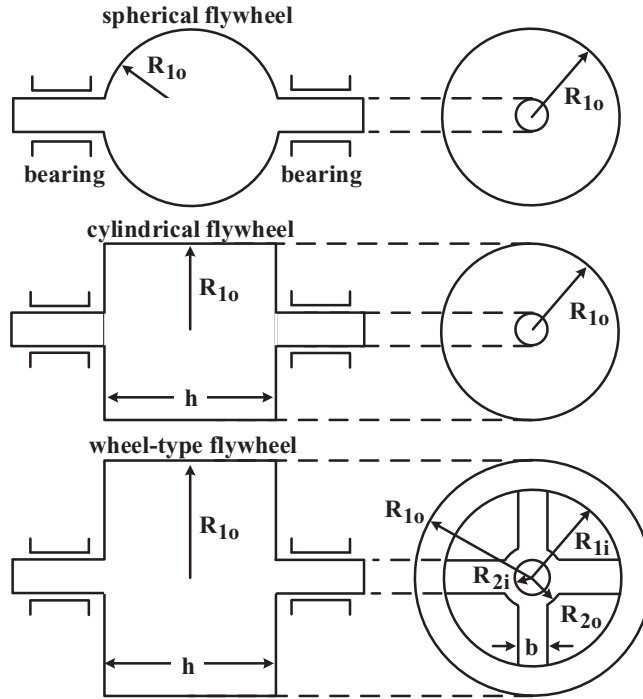


FIG. P9.17.2 Three flywheel configurations.

compute the ratio of inertia (J) to the weight (W) of the flywheel, that is (J/W). You may assume that the flywheel has magnetic bearings; see internet address: <https://www.designnews.com/mag-bearings-dampen-vibration>

The axial moment of inertia of a rotating sphere is:

$$J_{\text{sphere}} = \frac{8}{15} \cdot \pi \cdot \gamma \cdot R_{10}^5 \quad [\text{kgm}^2], \quad (\text{P9.17.1})$$

where the mass density of iron/steel is

$$\gamma_{\text{steel}} = 7.8 \quad [\text{kg/dm}^3]. \quad (\text{P9.17.2})$$

The axial moment of inertia of a rotating cylinder is

$$J_{\text{cylinder}} = \frac{1}{2} \cdot \pi \cdot \gamma \cdot h \cdot R_{10}^4 \quad [\text{kgm}^2]. \quad (\text{P9.17.3})$$

The axial moment of inertia of a rotating wheel-type configuration with 4 spokes is

$$J_{\text{wheel}} = \frac{1}{2} \cdot \pi \cdot \gamma \cdot (R_{10}^4 - R_{1i}^4) + \frac{4}{3} \cdot h \cdot b \cdot \gamma \cdot (R_{1i}^3 - R_{2o}^3) + \frac{1}{2} \cdot \pi \cdot \gamma \cdot h \cdot (R_{2o}^4 - R_{2i}^4) \quad [\text{kgm}^2]. \quad (\text{P9.17.4})$$

- (b) For the given values $h=0.9\text{ m}$, $R_{1o}=1.5\text{ m}$, $R_{1i}=1.3\text{ m}$, $R_{2o}=0.50\text{ m}$, $R_{2i}=0.10\text{ m}$, and $b=0.2\text{ m}$ calculate for the wheel-type configuration the stored energy E_{stored} rated provided the flywheel rotates at $n_{\text{flywheel rated}}=30,000\text{ rpm}$.

Problem 9.18: Design of an 8MW Variable-Speed Windpower Plant for an Altitude of 1600m

Design a windpower plant supplying the rated power $P_{\text{out}}=8\text{ MW}$ into the three-phase distribution system at a line-to-line voltage of $V_{\text{L-L system}}=12.47\text{ kV}$. The windpower plant consists of the following:

- One (Y-grounded/ Δ) three-phase, step-up transformer, N_{inverter} parallel-connected three-phase PWM inverters with an input voltage of $V_{\text{DC}}=1200\text{ V}$, where each inverter delivers an output AC current $I_{\text{phase_inverter}}$ at unity power factor $\cos\theta \approx 1.0$ to the low-voltage winding of the transformer (e.g., the angle θ between the line-to-neutral voltage of the inverter $V_{\text{L-N_inverter}}$ and the phase current of the inverter $I_{\text{phase_inverter}}$ is zero). Because of the high modulation index m of about 1.0 the current $I_{\text{phase_inverter}}$ will lag the voltage $V_{\text{L-N_inverter}}$.
- $N_{\text{rectifier}} (=N_{\text{inverter}})$ three-phase diode rectifiers, each one equipped with 6 diodes. Note that each rectifier feeds one inverter.
- One synchronous generator.
- One mechanical gear.
- One wind turbine.

- (a) The block diagram of the entire windpower plant is shown in Fig. P9.18.1. At rated operation, the efficiencies of (one) gear box, (one) generator, (one) rectifier, (one)

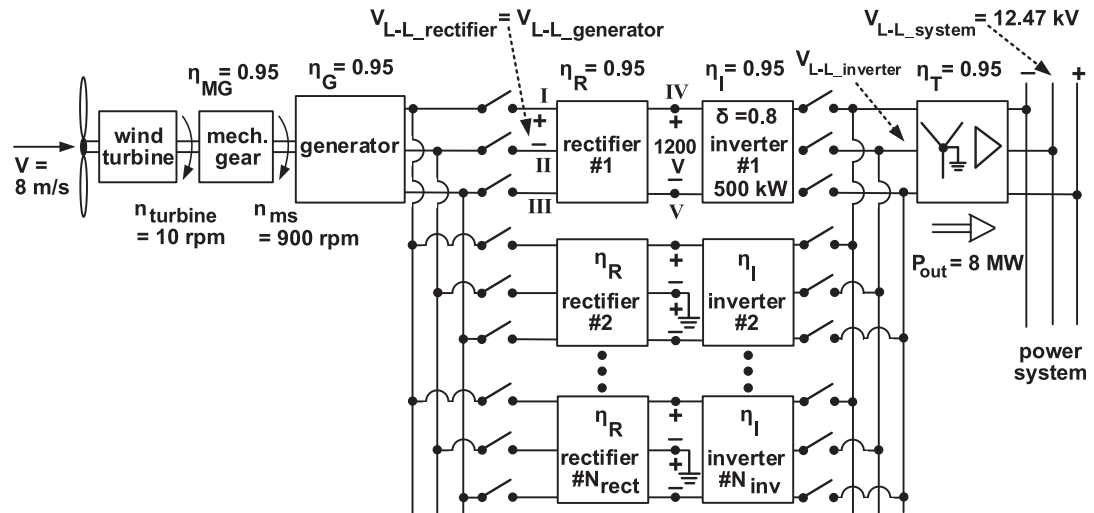


FIG. P9.18.1 Block diagram of an 8MW wind power plant feeding power into the utility distribution system.

inverter, and (one) transformer are $\eta=0.95$, each. Note there are $N_{\text{rectifier}}$ parallel rectifiers (Fig. P9.18.2) and N_{inverter} parallel inverters (Fig. P9.18.3), and each rectifier feeds one inverter. At an operation of less than rated load the efficiencies will be smaller. The parallel configuration of inverters and rectifiers permits an efficiency increase, because at light and medium loads only a few inverters and rectifiers must be operated, and some can be disconnected.

- (b) Determine the output power of each component, e.g., transformer, inverters, rectifiers, generator, gear box, wind turbine, at rated operation.

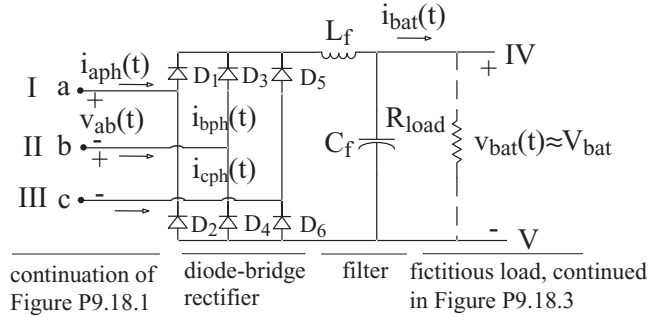


FIG. P9.18.2 Three-phase diode rectifier with $V_{ab}=1700\text{ V}$, $L_f=20\text{ mH}$ with $R_f=1\Omega$, $C_f=10\text{ mF}$, and $R_{load}=2.9\Omega$ resulting in $V_{bat}=1206.7\text{ V}$, $I_{bat}=416.09\text{ A}$, and $P_{out_inverter}=502.1\text{ kW}$.

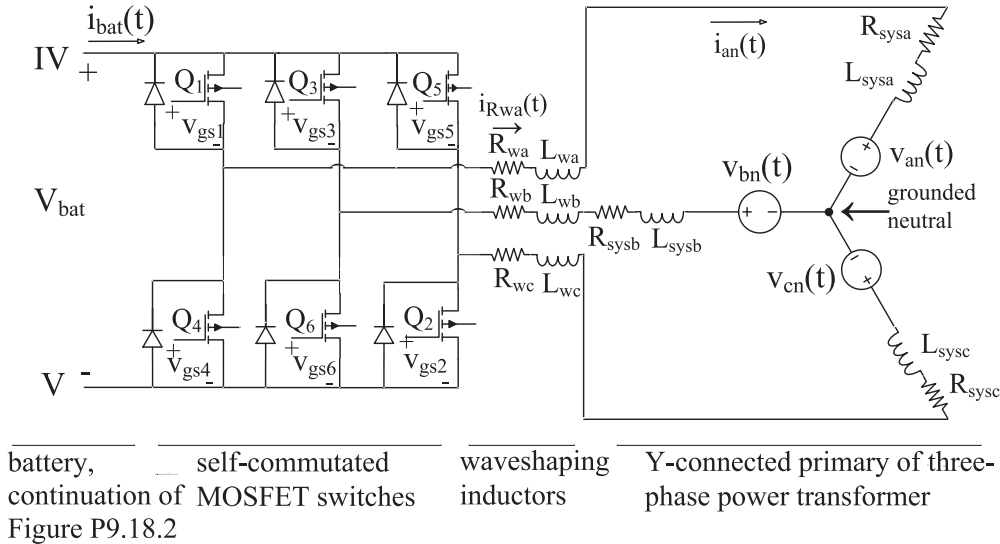


FIG. P9.18.3 Three-phase inverter and Y-connected power system transformer primary with $V_{bat}=1206.7\text{ V}$, $R_{wa}=0.001\text{ m}\Omega$, $L_{wa}=0.5\text{ mH}$, $R_{sysa}=R_{transformer_a}=R_{M1}=0.001\text{ m}\Omega$, $L_{sysa}=L_{M1}=0.1\text{ }\mu\text{H}$, $V_{an}=440\text{ V}$, $V_{bn}=440\text{ V}$, $V_{cn}=440\text{ V}$, $I_{an}=957\text{ A}$, $P_{out_inverter}=631\text{ kW}$, displacement power factor $\cos\theta=1.0$, modulation index $m=1.0$, and duty cycle $\delta=0.9$.


- (c) Determine for a modulation index of $m = 1.0$ the inverter output line-to-neutral voltage $V_{L-N \text{ inverter}}$ such that the inverter (Fig. P9.18.3) can deliver at unity power factor an approximately sinusoidal current to the transformer. N_{inverter} commercially available three-phase PWM inverters are connected in parallel and one inverter has the output power rating $P_{\text{inverter}} \approx 500 \text{ kW}$. What is the number of inverters required? Determine $I_{\text{phase_inverter}}$ of one inverter, the resulting output current of all N_{inverter} inverters, that is, $\Sigma I_{\text{phase_inverter}}$, and the transformation ratio $a = (N_s/N_p)$ of the (Y-grounded/ Δ) step-up transformer. For your (PSpice) calculations you may assume (one) transformer supplying power to power system, where all resistances and leakage inductances are very small including those of the transformer. Why do we use a Y-grounded/ Δ transformer configuration?
- (d) Each of the N_{inverter} inverters is fed by one three-phase rectifier (Fig. P9.18.2) with 6 diodes, and all $N_{\text{rectifier}}$ three-phase rectifiers are fed by (one) three-phase synchronous generator with $p = 8$ poles at $n_s = n_{ms} = 900 \text{ rpm}$, utilization factor $C = 3.5 \text{ kWmin/m}^3$, $D_{\text{rotor}} = 1.0 \text{ m}$, $f = 60 \text{ Hz}$, $B_{sr} = B_{\text{max}} = 0.7 \text{ T}$, $k_{ws} = k_{wr} = 0.8$, torque angle $\delta_r = 30^\circ$, $N_f = 800$ turns or $(N_f/p) = 100$, $k_{fe} = 0.95$, and air gap $g = 0.01 \text{ m}$. The input line-to-line voltage $V_{L-L \text{ rectifier}} = 1.7 \text{ kV}$ of one three-phase diode rectifier results in the DC output voltage (of one rectifier, including filter) $V_{DC} \approx 1200 \text{ V}$. Determine the line-to-line output voltage $V_{L-L \text{ generator}}$ of the nonsalient-pole (round-rotor) synchronous generator such that it matches the required input line-to-line voltage of the rectifier $V_{L-L \text{ rectifier}}$; thus a transformer between synchronous generator and rectifier can be avoided. Find all pertinent parameters of the synchronous generator including its synchronous reactance X_s in per unit and in ohms.
- (e) Analyze the performance of one rectifier-inverter combination with PSpice for the given voltages and power ratings, whereby the inverter is operating at a duty cycle of $\delta = 0.9$.
- (f) Design the mechanical gear between wind turbine and synchronous generator so that the wind turbine can operate at $n_{\text{turbine}} = 10 \text{ rpm}$.
- (g) Determine the geometric dimensions of the wind turbine—using the Lanchester–Betz–Joukowsky equation—for the power efficiency coefficient $c_p = 0.4$ of the wind turbine, and the rated wind velocity of $v = 8 \text{ m/s}$. How could the efficiency of this windpower plant be improved?

Problem 9.19: Design of a 200 MW Compressed-Air Storage Facility [61,62] with Wind/Photovoltaic Power and Biogas Fuel

Design a compressed-air energy storage (CAES) plant for $P_{\text{out_generator}} = P_{\text{rated}} = 200 \text{ MW}$, $V_{L-L} = 13,800 \text{ V}$, and $\cos\theta = 1$ which can deliver rated power for two hours. The overall block diagram of such a plant [61,62] is shown in Fig. P9.19.1. It consists of a compressor, cooler 1, booster compressor, booster cooler (cooler 2), booster-compressor is powered by a three-phase, 2-pole induction motor ($n_m = 3500 \text{ rpm}$) with a 1:4 mechanical gear to increase the compressor speed, underground air storage reservoir, combustor fired by biogas, a modified (without compressor) gas turbine, and a three-phase, 2-pole synchronous generator/motor.

Design data:

Air inlet temperature of compressor is $50^\circ \text{ F} \equiv 283.16 \text{ K}$ at ambient pressure $1 \text{ atm} \equiv 14.696 \text{ psi} \equiv 101.325 \text{ kPa}(\text{scal})$.



It is desirable to store at the underground air storage reservoir the compressed air at a temperature of about $120^{\circ}\text{F} \equiv 322.05\text{ K}$ at a pressure of $3000\text{ psi} \equiv 20,685\text{ kPa}$. The reason for such a large pressure is that valve 2 can control the pressure of the turbine including the combustor for 2 h at $p_i = 10,108.7\text{ kPa}$.

Output temperature of booster cooler: $120^{\circ}\text{F} \equiv 322.05\text{ K}$ at $3000\text{ psi} \equiv 20,685\text{ kPa}$.
 Output temperature of combustor: $T_i = 1500^{\circ}\text{F} \equiv 1089\text{ K}$ at $p_i = 1466.1\text{ psi} \equiv 10,108.7\text{ kPa}$.
 Output temperature of gas turbine: $T_f = 222.62^{\circ}\text{F} \equiv 597.46\text{ K}$ at pressure $p_f = 2249\text{ kPa}$.
 Generation operation: 2 h at 200 MW.
 Recharging (loading) operation of underground air storage reservoir: 16 h at 20 MW.
 Capacity of air storage reservoir: $3.44 \cdot 10^6\text{ ft}^3 \equiv 97.3 \cdot 10^3\text{ m}^3 \equiv (46\text{ m} \times 46\text{ m} \times 46\text{ m})$.
 Start-up time: 6 min.
 Turbine and motor/generator speed: $n_{s\text{ mot/gen}} = 3600\text{ rpm}$
 Compressor speed: $n_{s\text{ comp}} = 14,000\text{ rpm}$.
 Cost per 1 kW installed power capacity: \$3000.

(a) Calculate the Carnot efficiency of the biogas turbine

$$\eta_{\text{carnot biogas turbine}} = \eta_{\text{compressor}} \cdot \eta_{\text{turbine}} = \frac{T_1 - T_2}{T_1}.$$

(b) Note that the compressor of a biogas turbine has usually an efficiency of $\eta_{\text{compressor}} = 0.50$. In this case the compressor is not needed because pressurized air is available from the underground reservoir. The absence of a compressor increases the overall efficiency of the CAES, if “free” wind power is used for charging the reservoir. Provided the synchronous machine (motor/generator set) has an efficiency of $\eta_{\text{generator}} = 0.9$ calculate

(b1) the efficiency of the turbine without the compressor ($\eta_{\text{compressor}} = 1$),

(b2) $P_{\text{out turbine}}$

(b3) $P_{\text{out combustor}}$

(b4) For a heat rate of the combustor of 5500 Btu/kWh, determine the input power of the combustor required (during 2 h) $P_{\text{in combustor}}$.

(b5) (b5) The two air compressors (charging the reservoir during 16 h) including the two coolers require an input power of 40 MW (whereby wind energy is not free) calculate the overall efficiency of the CAES (during 2 h of operation)

$$\eta_{\text{overall}}^{\text{wind energy is not free}} = \frac{P_{\text{out_generator}}}{P_{\text{in_compustor}} + P_{2_compressors+2_coolers}}.$$

(b6) Compute the overall efficiency, if wind energy is free, that is,

$$\eta_{\text{overall}}^{\text{wind energy is free}} = \frac{P_{\text{out_generator}}}{P_{\text{in_combustor}}}.$$

- (c) What is the overall construction cost of this CAES plant, if the construction price is \$3000 per installed power capacity of 1 kW?
- (d) The CAES plant delivers the energy $E = 400\text{ MWh}$ per day (during 2 h) for which customers pay \$0.40/kWh due to peak-power generation. What is the payback period of this CAES plant, if the cost for pumping (loading, recharging) is neglected (free wind power), the cost of 1 cubic foot of biogas fuel is \$6/MBtu, and the interest rate is 3%?
- (e) Repeat the analysis for a heat rate of 4000 Btu/kWh.

Hint: For the calculation of the Carnot efficiency of the gas turbine and of the compressors you may use the software available on the Internet address:

<http://hyperphysics.phy-astr.gsu.edu/hbase/thermo/adiab.html#c3>

Problem 9.20: Steady-State Characteristics of a Battery Powered by Solar Cells

Fig. P9.20.1 shows the circuit diagram of a battery connected to a solar generator (array) via conductors with a total of $2R = 2\Omega$ and Fig. P9.20.2 depicts the 1200 V lead-acid battery and solar-power plant characteristics. The blocking diode prevents that current is injected into the solar array from the remaining circuit: battery, load resistance, and conductor. The operating points (intersections of battery and solar array characteristics) can be made rather close to the maximum power points of the solar power plant [172]. Note that a 1200 V lead-acid battery has a rated voltage of $V_{\text{BAT_rated}} = E_0 = 1200\text{ V}$, if fully charged. A voltage of $V_{\text{BAT}} = E_0 = 1050\text{ V}$ if almost empty, and a voltage of $V_{\text{BAT}} = V_{\text{BAToc}} + V_{\text{BATover}} = 1300\text{ V}$ if fully charged, that is, the voltage drops across the electrochemical capacitance C_B and the nonlinear capacitance C_b (V_{BATover}) of battery cells are included [172]. The relation for the battery characteristic of Fig. P9.20.1 is governed by a linear characteristic

$$V_{\text{PV}} = (V_{\text{PVo}} + R_{\text{battery_characteristic}} \cdot I_{\text{PV}}) \quad (\text{P9.20.1})$$

which does not take into account the influence of the conductor resistance $2R = 2\Omega$ resulting in the operating points 1, 2, ..., 5 as given in Fig. P9.20.2. The evaluation of Eq. (P9.20.1) for the operating point 1 ($V_{\text{PV_operating point1}} = 1200\text{ V}$ / $I_{\text{PV_operation point1}} = 5.6\text{ A}$) and $V_{\text{PVo}} = 1050\text{ V}$ yields for the straight line relation

$$1200 = 1050 + R_{\text{battery_characteristic}} \cdot 5.6\text{ A} \quad (\text{P9.20.2})$$

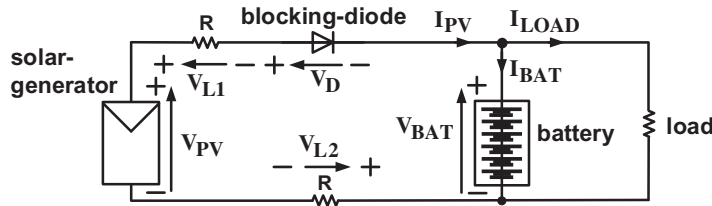


FIG. P9.20.1 Circuit diagram of lead-acid battery directly connected to solar power plant. V_{pv} is the panel voltage.

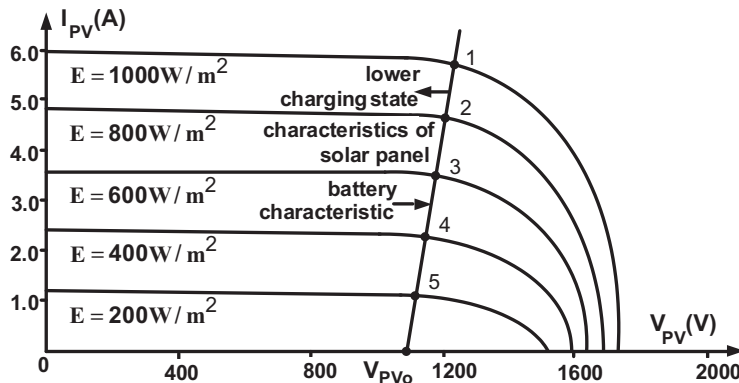


FIG. P9.20.2 Operating points of a lead-acid battery directly connected to solar power plant (requires start-up time of a few 60 Hz cycles). E is the insolation.

the resistance value

$$R_{\text{battery_characteristic}} = 26.79 \, \Omega. \quad (\text{P9.20.3})$$

For the characteristics of the solar panel of Fig. P9.20.2 the loci of the knees change as a function of insolation E . The resistance value $R_{\text{battery_characteristic}} = 26.79 \, \Omega$ of Eq. (P9.20.3) can be used together with an assumed current $I_{\text{PV}i}$ the corresponding voltage $V_{\text{PV}i}$ so that the PV array is operated at the maximum power output for any i^{th} operating point. For example for operating point $i=3$ one gets for $I_{\text{PV}3}=3.5 \, \text{A}$ the voltage $V_{\text{VP}3}=1150 \, \text{V}$ corresponding to an output power $P_{\text{PV}3}=I_{\text{PV}3} \cdot V_{\text{PV}3}=4.03 \, \text{kW}$.

- (a) Augment the circuit of Fig. P9.20.1 with step-down DC converter in series with the 2R resistances supplying energy to battery and load as described in Chapter 5 of [172]. A step-down DC converter is proposed to allow reduction of PV power to the power system, if for some time too much generation occurs [172]. A step-up converter cannot be used because the PV array cannot accept any currents from the external circuit: this is manifested by the blocking diode of Circuit Fig. P9.20.2. Any switching harmonics must not enter the PV array, and therefore, a shunt capacitor must be employed. The battery can be represented by a very large capacitor.
- (b) Augment the circuit of Fig. P9.20.1 with MOSFET in series with the 2R resistances supplying energy to battery and load described in Chapter 5 of [172]. The same considerations with respect to blocking diode, switching harmonics, and battery representation apply as in Part a).
- (c) Design the circuit of Fig. P9.20.1 with MOSFET voltage-source inverter in series with the 2R resistances supplying energy to a single-phase rectifier connected to battery and load as described in Chapter 5 of [172]. The same considerations with respect to blocking diode, switching harmonics, and battery representation apply as in Part a). The advantage of this circuit is the separation of the generation PV potentials from the battery/load potential.

Problem 9.21: Production of Hydrogen Based on Electrolysis and its Application with Respect to Electric Cars with Fuel Cells, or when Hydrogen is Changed into Methane Based on the Sabatier and Senderens [178] Reaction, Suitable Fuel for Combustion Engine Automobiles

A well-known way of splitting water (H_2O) is by electrolysis. A container (trough) contains pure (distilled) water, and two electrodes—the anode (A) and cathode (C) consisting of either platinum or nickel—connected to a DC current source. Pure H_2O is a poor conductor; the addition of H_2SO_4 to the water makes the solution conducting. Although the solution of H_2O and H_2SO_4 heats up—due to the losses caused by the current flowing from anode to cathode—at the anode oxygen O_2 and at the cathode hydrogen H_2 is accumulated. The efficiency of splitting H_2O based on electrolysis is about $\eta_{\text{electrolysis}}=80\%$, that is, 20% of the energy is converted to heat within the electrolysis process. The energy density of hydrogen is about 2.28 times that of gasoline ($E_{\text{gasoline}}=12.3 \, \text{kWh/kg-force}$), that is, $E_{\text{H}_2}=28 \, \text{kWh/kg-force}$. [Note 1 L (dm^3) of water has a mass m of 1 kg at 4°Celsius, and exerts a (force or) weight of 1 kg-force (or 1 kp) on a scale]. The additional energy loss due to the production of distilled water can be

deduced from the definition of 1 kcal: Definition of unit 1 kcal: The energy of 1 kcal is required to heat 1 kg-force of H_2O by $1^\circ C$ (this is approximately true only because the energy required depends upon the temperature range. It is exactly true heating pure water from $14.5^\circ C$ to $15.5^\circ C$). Note that $1 \text{ kcal} = 4.186 \text{ kWs}$.

- (a) The energy of a $P_{\text{out}} = 16 \text{ MW}$ windpower plant (consisting of two wind turbine drives) can be used to generate hydrogen during 8 h of operation per day during 365 days per year. The construction cost of the 16 MW plant, and the generation of pure water including the electrolysis equipment is $\$4000/\text{kW}$ installed power capacity. How much hydrogen energy (expressed in MWh) can be obtained during one year taking into account the above-described losses?
- (b) Calculate the payback period provided one kg-force of hydrogen (weight) can be sold for $\$4.00$. For your payback period calculation you may neglect interest for borrowing the money for the construction cost.
- (c) How many “equivalent-gasoline gallons” of hydrogen can be produced during one year?
- (d) Provided a car owner (on average) travels 15,000 miles per year with an average “mileage” of 40 miles/(gallon “equivalent gasoline”), how many car owners can get the “equivalent gasoline gallons of hydrogen” from the 16 MW plant?
- (e) How could hydrogen produced by the windpower plant be converted to methane (called “methanation”) and then used as fuel in the conventional combustion engine of an automobile?
- (f) Is it possible to use hydrogen directly in combustion engines or a mixture of hydrogen and methane?

Problem 9.22: Calculation of the Efficiency of Polymer Membrane (PEM) Fuel Cell Used as an Energy Source for a Small 5-Passenger Electric Car Including a Battery for Storing Regenerated [172] Braking Energy of 5% of Total Energy Consumption

A PEM fuel cell has the following parameters:

Performance: output power $= P_{\text{rat}} = 48,000 \text{ W}^{(1)}$, output current $= I_{\text{rat}} = 460 \text{ A}^{(1)}$, DC voltage range $= V_{\text{rat}} = 100 \text{ to } 200 \text{ V}$, operating lifetime: $T_{\text{life}} = 1500 \text{ h}^{(2)}$.

Fuel: composition $= C = 99.99\%$ dry gaseous hydrogen, supply pressure $= p = 10 \text{ to } 250 \text{ PSIG}$, consumption $= V = 740 \text{ SLPM}^{(3)}$.

Operating environment: ambient temperature $= t_{\text{amb}} = 3^\circ C \text{ to } 30^\circ C$, relative humidity $= HR = 0\% \text{ to } 95\%$, location = indoors and outdoors⁽⁴⁾.

Physical: length $\times$ width $\times$ height $= 151 \text{ cm} \times 135 \text{ cm} \times 90 \text{ cm}$, weight $= W = 520 \text{ kg-force}$.

Emissions: liquid water $= H_2O = 34.8 \text{ L}$ maximum per hour.

- 1) Beginning of life, sea level, rated temperature range
- 2) CO destroys the proton exchange membrane
- 3) At rated power output, SLPM $\equiv$ standard liters per minute (standard flow)
- 4) Unit must be protected from inclement weather, sand, and dust.

Questions:

- a) Calculate the power efficiency of a PEM fuel cell in two different ways.
- b) Find the specific power density of this PEM fuel cell expressed in W/kg-force .

- c) How does this specific power density compare with that of a lithium-ion battery?
- d) A Lithium-ion battery for storing regenerated braking energy of 5% of total energy consumption is used to support the fuel cell during times of high acceleration, what is the rating of the battery required for a 3-h trip when operated on the average a third of rated output power of $(48/3) \text{ kW} = 16 \text{ kW}$?
- e) What is the total weight of the 5-passenger car at the start (fully loaded hydrogen tank) of a 3-h road trip?
- f) For the figure of merit $FM = \frac{(\text{tons-force}) \cdot \text{miles}}{(\text{energy used at the wheels } E_{\text{wheels}})}$ determine the distance the car can travel with one battery charge taking into account the recovered braking energy stored in the battery.

Hints:

- (1) The nominal energy density of hydrogen is $28 \text{ kWh}/(\text{kg-force})$, which is significantly larger than that of gasoline ($12.3 \text{ kWh}/(\text{kg-force})$). This makes hydrogen a desirable fuel for automobiles,
- (2) The (weight) density of hydrogen is $\gamma_{\text{hydrogen}} = 0.0899 \text{ g-force/liter}$.
- (3) The oxygen atom has 8 electrons, 8 protons and 8 neutrons.

Problem 9.23: Transient Performance of a brushless DC Motor Fed by a PEM Fuel Cell

Electric automobiles can be equipped either with batteries or fuel cells as energy storage components. The question is whether there is a difference in their performance with respect transient and steady-state performances when supplying energy to a six-pulse inverter of a brushless DC Machine. In the following, the performance of the brushless DC motor will be analyzed when either fed by a battery or a fuel cell. The tendency of designing electric cars is to use rather high voltages in the range of $(600\text{--}800) \text{ V}$ for batteries and fuel cells. The paper by Wang et al. [179] analyzes the performance and confirms the analysis by experimental data of a small proton exchange membrane (PEM) fuel cell (fc) with the name plate data $P = 500 \text{ W}$, $E = V_{\text{DC}} = 58.9 \text{ V}$, $R_{\text{concentrate}} = 0.40803 \Omega$, $R_{\text{activation}} = 1.2581 \Omega$, $R_{\text{ohmic}} = 0.2793 \Omega$, $C_{\text{fc}} = 0.1 \text{ F}$, weight = 44 kg-force , and dimensions $W = 56.5 \text{ cm} \times D = 61.5 \text{ cm} \times H = 34.5 \text{ cm}$, with DC voltage variations of $\pm 4.5 \text{ V}$ having a period of $T_{\pm 4.5 \text{ V}} = 1 \text{ s}$. This voltage variation of a fuel cell as a function of time reflects the nonuniform DC voltage generation of a fuel cell.

The permanent magnet, brushless DC motor has the data: Rated motor frequency $f_1 = 1500 \text{ Hz}$ or the switching period is $T = 1/f_1 = 0.6666 \text{ ms}$, ohmic resistances $r_a = r_b = r_c = 0.5 \Omega$, leakage inductances $\ell_a = \ell_b = \ell_c = 50 \mu\text{H}$, with a modulation index $m = 0.8$ the phase rms voltage of the permanent magnet three-phase motor is $V_{\text{phase}} = m V_{\text{DC}} / (2\sqrt{2}) = 0.8 \cdot 58.9 / (2\sqrt{2}) = 16.66 \text{ V}$ or the phase voltages $v_a = 23.56 \text{ V} \sin(2\pi \cdot 1500 \text{ Hz})$, $v_b = 23.56 \text{ V} \sin(2\pi \cdot 1500 \text{ Hz} + 120^\circ)$, $v_c = 23.56 \text{ V} \sin(2\pi \cdot 1500 \text{ Hz} + 240^\circ)$. Fig. P9.23.1 shows the total circuit consisting of fuel cell equivalent circuit, six-pulse inverter and brushless DC motor. The gating signals for the six-pulse inverter are derived from Fig. P9.23.2.

The main objective of this problem is to study the influence of the internal resistances, voltage variation and capacitance of the PEM fuel cell. Most likely similar imperfections will appear if the PEM fuel cell is replaced by a battery.

- (a) Perform a PSpice analysis for $R_{\text{conc}} = R_{\text{concentrate}} = 0 \Omega$, $R_{\text{act}} = R_{\text{activation}} = 0 \Omega$, $R_{\text{ohmic}} = 0 \Omega$, $C_{\text{fc}} = 0.1 \text{ nF}$, $E = V_{\text{DC}} = 58.9 \text{ V}$, and zero voltage variations for the phase angle $\theta = 0^\circ$ and plot voltages and currents of phases a, b, c of the permanent-magnet motor from 0.499 ms to 0.5 ms .

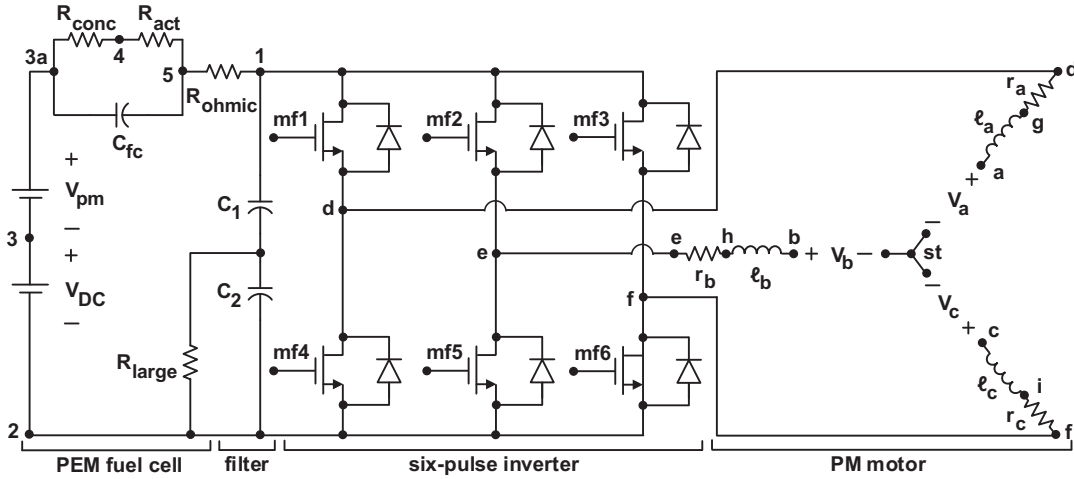


FIG. P9.23.1 Circuit consisting of proton-exchange membrane (PEM) fuel cell equivalent circuit, six-pulse inverter and brushless DC motor [179] where $R_{conc} = R_{concentrator}$, $R_{act} = R_{activation}$.

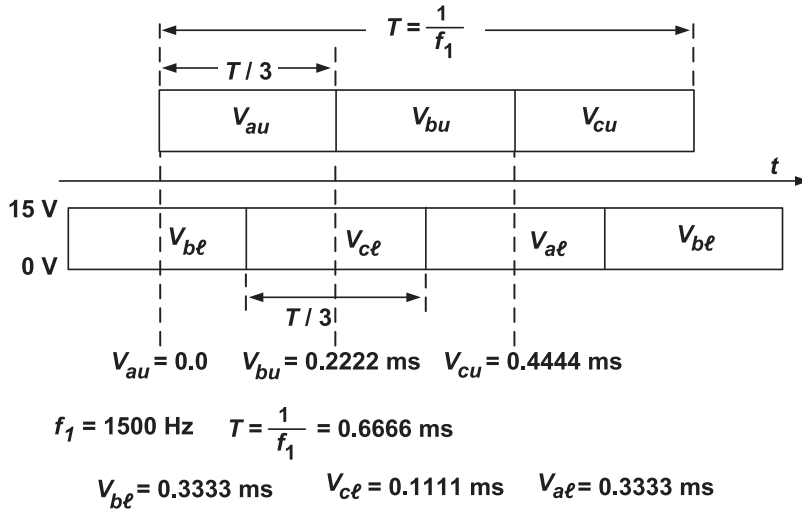


FIG. P9.23.2 Sequence of gating voltage signals for brushless DC motor/machine in six-step (six-pulse or full-on-mode) operation [172,177].

- (b) Perform a PSpice analysis for $R_{conc} = R_{concentrator} = 0.40803\Omega$, $R_{act} = R_{activation} = 1.2581\Omega$, $R_{ohmic} = 0.2793\Omega$, $C_{fc} = 0.1\text{ F}$, $E = V_{DC} = 58.9\text{ V}$, DC voltage variations of $\pm 4.5\text{ V}$ having a period of $T_{\pm 4.5\text{ V}} = 1\text{ s}$, the phase angles $\theta = -60^\circ, -30^\circ, 0^\circ, 30^\circ, 60^\circ$, and plot voltages and currents of phases a, b, c of the permanent-magnet motor from 0.499 ms to 0.5 ms.

Problem 9.24: Analysis of a Small 314 kW Pumped-Storage Hydropower Plant

A pumped-storage hydro-power plant (Fig. P9.24.1) is to be designed [146–148 of Chapter 12] for a rated power $P_{\text{rated}} = 314 \text{ kW}$ operating during 6 h per day yielding a rated energy capacity of $E_{\text{rat_day}} = 314 \text{ kW} \cdot 6 \text{ h} = 1884 \text{ kWh}$ per day, rated frequency $f = 60 \text{ Hz}$. It consists of an upper and a lower reservoir with a water capacity $C_{\text{H}_2\text{O}}$ each. In addition there must be an emergency reserve for $E_{\text{emergency}} = 100 \text{ kWh}$. Water evaporation must be taken into account and is 10% per year for each reservoir, and the precipitation per year is 20 in.. The minimum and maximum elevations of the upper reservoir are 1830 ft. and 1900 ft., respectively. The maximum and minimum elevations for the lower reservoir are 1550 ft. and 1500 ft., respectively. The water turbine is of the Francis type and it is coupled with a salient-pole synchronous machine with $p = 24$ poles, which can be used as a generator for generating electricity by releasing the water from the upper reservoir to the lower one, and as a motor for pumping the water from the lower reservoir to the upper one. A capacity factor of 100% can be assumed: in a real application the capacity factor may vary between 70 and 90%.

- If the power efficiencies of the water turbine, the synchronous generator, and the Y- Δ transformer are $\eta_{\text{turbine}} = 0.7$, $\eta_{\text{synchronous machine}} = \eta_{\text{Y-}\Delta \text{ transformer}} = 0.90$, respectively, compute the required turbine input power $P_{\text{turbine}}^{\text{required}}$.
- Provided the head of the water is $H = (1830 - 1550) \text{ ft.} = 280 \text{ ft.}$, the frictional losses between water and pipe amount to 15%, and the water flow measured in cubic feet per second (cft/s) is $Q = 30 \text{ cft/s}$, compute the mechanical power available at the turbine input $P_{\text{turbine}}^{\text{input}}$ (measured in watts) or P_{kW} (measured in kilowatts) [146–148 of Chapter 12].
- How does $P_{\text{turbine}}^{\text{required}}$ compare with $P_{\text{turbine}}^{\text{input}}$?
- Compute the specific speed N_q [146–148 of Chapter 12]. Is the selection of the Francis turbine justified?
- What other types of water turbines exist?
- What is the amount of water the upper or lower reservoirs must hold to generate $E = (1884 \text{ kWh} + 100 \text{ kWh}) = 1984 \text{ kWh}$ per day during an 11.3 h period?
- Is the given precipitation per year sufficient to replace the evaporated water? If not, what is the required “rain-catch” area to replace the yearly water loss through evaporation?
- The pumped-storage plant delivers the energy $E = (1884 \text{ kWh} + 100 \text{ kWh}) = 1984 \text{ kWh}$ per day for which customers pay $\$0.20/\text{kWh}$ due to peak-power generation. What is the payback period of this pumped storage plant if the construction price is $\$4000$ per installed power capacity of 1 kW, the cost for pumping is $\$0.03/\text{kWh}$, and the interest rate is 3%?

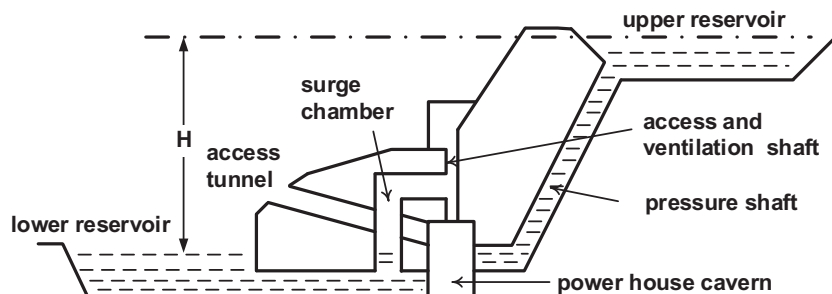


FIG. P9.24.1 Pumped-storage hydro-power plant for peak-power generation (requires start-up time of about 6 min).

Problem 9.25: Design a 50 MWh Supercapacitor Power Plant

One of the major problems in using wind and solar energy is energy storage. Wind/solar energy may not be available when it is needed, for example, a wind farm could lose as much as 300 MW within a minute. For example, there are several scenarios of how the power change of 300 MW per minute can be mitigated through complementary, albeit more expensive power sources: one of them is the combination of a compressed-air power plant with a supercapacitor plant for bridging the time from when the wind power plant output decreases (300 MW per minute) to when the compressed-air storage (CAES) plant [61,62] can take over. A CAES plant requires a start-up time of about 6 min. To bridge this 6 min start-up time required for a 300 MW compressed-air power plant, supercapacitors or ultracapacitors are proposed to provide up to 500 MW during a 6 min interval amounting to a required energy storage of 50 MWh. Inverters fed from supercapacitors can deliver power within milliseconds to the power system replacing the lost power of 300 MW per minute almost instantaneously. This combination of CAES plant and supercapacitors as bridging energy sources can be employed for peak-power operation as well as for improving power quality by preventing short brown/blackouts. Fig. P9.25.1 depicts the block diagram of such a supercapacitor plant consisting of wind turbine, mechanical gear, synchronous generator, 3-phase transformer, 3-phase rectifier, super-capacitor bank, three-phase inverter, 3-phase transformer, and power system.

Recommended voltages are: output line-to-line voltage of generator $V_{L-L}^g = 1354$ V, input DC voltage of inverter $V_{DC} = 1200$ V, output line-to-line voltage of inverter $V_{L-L}^i = 519.6$ V, power system (s) voltage $V_{L-L}^s = 2400$ V, the 2 transformers are of the Δ -Y type connected to the generator and of the Y- Δ type connected to the power system.

- Draw a detailed circuit diagram depicting transformers, rectifier, capacitor, and inverter in more detail as compared to Fig. P9.25.1 and specify the powers, voltages and currents provided 11 rectifier/capacitor/inverter combinations are connected in parallel: this will improve the overall efficiency of the plant, because some of the components can be disconnected, if wind power generation is low. The efficiency for each and every component is about $\eta = 0.90$.
- Determine the specifications of the Y- Δ three-phase transformer between inverter and power system.

Design of PWM (pulse-width-modulated) three-phase current controlled voltage-source inverter feeding power into the utility system via Y- Δ transformer

The inverter circuit of Fig. P9.25.2 is to be analyzed with PSpice, where the DC voltage is $V_{DC} = 1200$ V, output voltage of inverter $V_{L-L}^i = 519.60$ V, power system (s) voltage

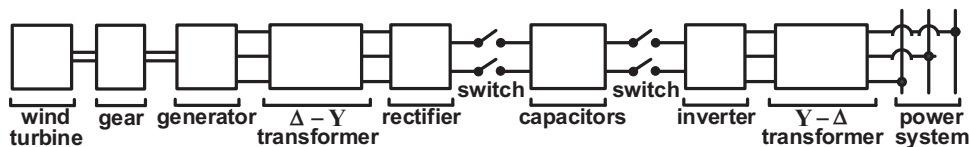


FIG. P9.25.1 Block diagram for charging and discharging supercapacitor bank (requires start-up time of a few 60 Hz cycles).

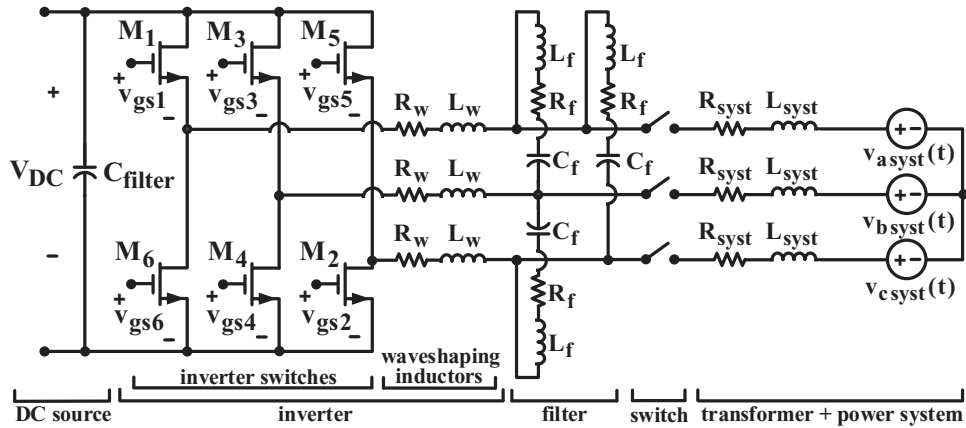


FIG. P9.25.2 PWM (pulse-width-modulated) three-phase current-controlled, voltage-source inverter supplying power to power system.

$V_{L-L}^s = 2400$ V, and the switching frequency of the IGBTs is $f_{\text{switch}} = 7.2$ kHz. The DC input capacitance is $C_{\text{filter}} = 1000$ μ F, the components connected at the output of the inverter bridge are $L_w = 1$ mH, $R_w = 10$ m Ω , $L_f = 45$ μ H, $C_f = 10.3$ μ F, $R_f = 10$ m Ω ; transformer and power system inductance and resistance per phase are $L_{\text{syst}} = 265$ μ H, and $R_{\text{syst}} = 50$ m Ω , respectively, the power system (phase) voltages referred to the secondary (Y) side (output voltages of inverter) of the Y- Δ transformer are $v_{\text{asyst}}(t) = 424.2$ Vsin ωt , $v_{\text{bsyst}}(t) = 424.2$ Vsin($\omega t - 120^\circ$), and $v_{\text{csyst}}(t) = 424.2$ Vsin($\omega t - 240^\circ$) with the reference currents $i_{\text{refa}} = 755.98$ Asin ωt , $i_{\text{refb}} = 755.98$ Asin($\omega t - 120^\circ$), $i_{\text{refc}} = 755.98$ Asin($\omega t - 240^\circ$), at a displacement (fundamental) power factor $\cos\theta = 1.0$.

- Calculate with PSpice (you may ignore the output filter because of the 64-node limit of the PSpice software program) and plot output phase voltage and phase current of the PWM inverter provided the output voltages are sinusoidal/cosinusoidal as given above by the power system voltages. List the PSpice input program.
- Subject the input and output voltages and currents of the inverter to a Fourier analysis up to the 19th harmonic

Design of the controlled three-phase rectifier

Fig. P9.25.3 shows the three-phase rectifier of Fig. P9.25.1 with six diodes and one self-commutated switch, an insulated-gate bipolar transistor (IGBT).

The load resistance is $R_{\text{load}} = 2.11$ Ω neglecting harmonic components. The nominal input phase voltages of the rectifier can be assumed to be $v_{\text{an}} = 1420$ Vsin ωt , $v_{\text{bn}} = 1420$ Vsin($\omega t - 120^\circ$), and $v_{\text{cn}} = 1420$ Vsin($\omega t - 240^\circ$) resulting at a duty cycle of 50% in a DC output voltage of 1200 V. The IGBT is gated with a switching frequency of 3 kHz and you may assume a duty cycle of $\delta = 50\%$. $C_{f2a} = C_{f1} = 200$ μ F, $L_{fa} = L_{f1} = 90$ μ H, $C_{f2b} = C_{f2} = 50$ μ F, ideal diodes D_1 to D_6 and D_f , $v_g = 30$ V magnitude, $R_{\text{sd}} = R_{\text{ss}} = 10$ Ω , $C_{\text{sd}} = C_{\text{ss}} = 0.1$ μ F, $C_f = 1000$ μ F, $L_f = 1$ mH, and $V_{\text{load}} = 1200$ V.

- List the input PSpice program
- Perform a PSpice analysis and plot output voltage of the rectifier $v_{\text{load}}(t) \approx V_{\text{DC}} = V(R_{\text{load}})$, rectifier output current $I_{\text{DC}} = I(R_{\text{load}})$, the rectifier input phase voltage $v_{\text{ph}}(t) = v_{\text{an}}(t)$, and the rectifier input phase current $i_r(t) = I(v_{\text{an}}(t))$,

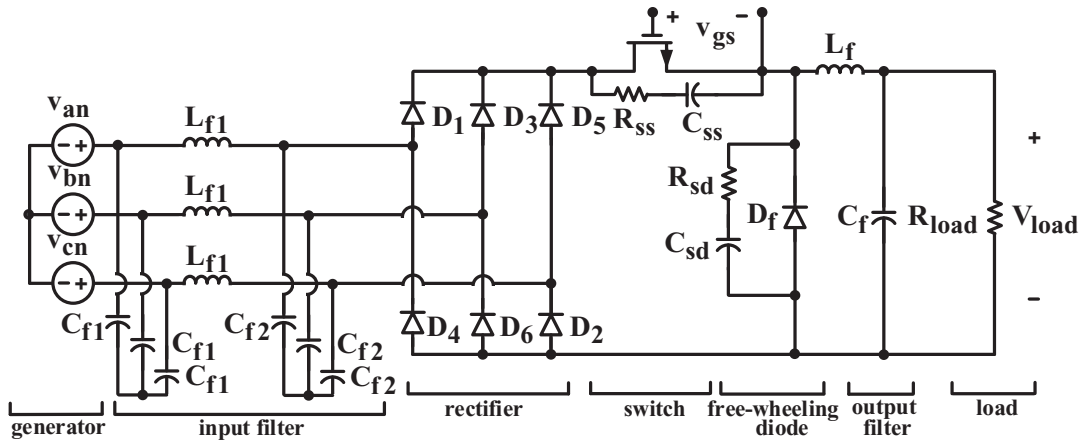


FIG. P9.25.3 Controlled three-phase rectifier.

- (g) Subject the rectifier input voltage $v_{ph}^r(t) = v_{an}(t)$, input current $i_r(t) = I(v_{an}(t))$, output voltage $v_{load}(t) \approx V_{DC} = V(R_{load})$, and output current $I_{DC} = I(R_{load})$, to a Fourier analysis up to the 19th harmonic.
- (h) Determine the specifications of the three-phase transformer between (wind) generator and rectifier.
- (i) Determine the overall costs of this power plant if a specific cost of \$4000/kW installed capacity is assumed. Note that a coal-fired plant has a specific cost of \$2000/kW installed capacity.

Problem 9.26: Transient Performance of an Inverter Feeding into Three-Phase Power System when Supplied by a Fuel Cell

Replace the DC source of Fig. P9.25.2 of Problem 9.25 by the equivalent circuit of the fuel cell as described in Fig. 2 of the paper by Wang et al. [179].

- (a) You may assume that in Fig. 2 of this paper the voltage changes $E = V_{DC} = 3000 \text{ V} \pm 30 \text{ V}$ (that is, $v_{fuel} = 3000 \text{ V}$, and $v_p = \pm 30 \text{ V}$) where the superimposed rectangular voltage $v_p = \pm 30 \text{ V}$ has a period of $T_{\pm 30 \text{ V}} = 1 \text{ s}$. This voltage variation of a fuel cell as a function of time reflects the nonuniform DC voltage generation of a fuel cell. The remaining parameters of the fuel cell equivalent circuit can be extrapolated (e.g., $R_{act} = 6.81 \Omega$, $R_{ohmic} = 1.42 \Omega$, $C_{fuel} = 0.02 \text{ F}$) from Table III of the paper by Wang et al. for $E = V_{DC} = 3000 \text{ V}$. Plot the inverter output voltages and currents as well as the inverter input voltage and current from 470 ms to 500 ms.
- (b) Repeat part (a) and plot one phase of the inverter output current (e.g., $I(RM1)$) from 1 s to 2 s.

References

- [1] R. Billinton, R.N. Allan, Reliability Evaluation of Power Systems, Plenum Press, New York, 1996.
- [2] A. Pahwa, J. Redmon, K. Clinard, Impact of automation on distribution reliability, in: Proc. IEEE Power Engineering Society Summer Meeting, Vancouver, Canada, vol. 1, 2001, p. 736.

- [3] L. Goel, R. Billinton, Determination of reliability worth for distribution system planning, *IEEE Trans. Power Delivery* 9 (3) (1994) 1577–1583.
- [4] L. Goel, A comparison of distribution system reliability indices for different operating configurations, *J. Electr. Mach. Power Syst.* 27 (1999) 1029–1039.
- [5] J.R. Redmon, Traditional versus automated approaches to reliability, in: *Proceedings of the IEEE Power Engineering Society Summer Meeting*, Vancouver, Canada, vol. 1, 2001, pp. 739–742.
- [6] A. Pahwa, Role of distribution automation in restoration of distribution systems after emergencies, in: *Proceedings of the IEEE Power Engineering Society Summer Meeting*, Vancouver, Canada, vol. 1, 2001, pp. 737–738.
- [7] D.M. Rigler, W.R. Hodgkins, R.N. Allan, Quantitative reliability analysis of distribution systems: automation, *Power Eng. J.* 13 (4) (1999) 201–204.
- [8] R.N. Allan, R. Billinton, I. Sjarief, L. Goel, K.S. So, A reliability test system for educational purposes: basis distribution system data and results, *IEEE Trans. Power Syst.* 6 (2) (1991) 813–820.
- [9] S. Conti, G. Tina, Reliability assessment for distribution systems: automated vs. traditional configurations, *Int. J. Power Energy Syst.* (2006), <https://doi.org/10.2316/Journal.203.2006.2.203-3407>.
- [10] L.A. Kraft, Modeling lightning performance of transmission systems using PSpice, *IEEE Trans. Power Syst.* 6 (2) (1991) 543–549.
- [11] X. Jiang, L. Shu, W. Sima, S. Xie, J. Hu, Z. Zhang, Chinese transmission lines' icing characteristics and analysis of severe ice accidents, *Int. J. Offshore Polar Eng.* 14 (3) (2004) (ISSN 1053-5381).
- [12] J.H. Zhang, B.W. Hogg, Simulation of transmission line galloping using finite element method, in: *Proceedings of the IEEE 2nd International Conference on Advances in Power System Control, Operation and Management*, Hong Kong, December, 1993, 5 pages.
- [13] C.R. Sullivan, V.F. Petrenko, J.D. McCurdy, V. Kozliouk, Breaking the ice [transmission line ice], *IEEE Ind. Appl. Mag.* 9 (5) (2003) 49–54.
- [14] <http://www.isope.org/publications/journals/ijope-14-3/ijope-14-3-p196-abst-JC-348-Jiang.pdf>.
- [15] http://tdworld.com/overhead_transmission/power_deutsche_bahn_installs/.
- [16] J.D. McCurdy, C.R. Sullivan, V.F. Petrenko, Using dielectric losses to de-ice power transmission lines with 100 kHz high-voltage excitation, in: *Conf. Rec. of IEEE Industry Applications Society Annual Meeting*, 2001, pp. 2515–2519.
- [17] V.F. Petrenko, R.W. Whitworth, *Physics of Ice*, Oxford University Press, London, 1999.
- [18] V.F. Petrenko, C.R. Sullivan, *Methods and Systems for Removing Ice from Surfaces*, U.S. Patent Application PCT/US99/28330, 1999.
- [19] C. Kieny, G. Le Roy, A. Sbai, Ferroresonance study using Galerkin method with pseudo-arclength continuation method, *IEEE Trans. Power Delivery* 4 (1) (1989) 1841–1847.
- [20] J.J. Grainger, W.D. Stevenson Jr., *Power System Analysis*, McGraw-Hill, 1994.
- [21] D.H. Boteler, R.M. Shier, T. Watanabe, R.E. Horita, Effects of geomagnetically induced currents in the BC Hydro 500 kV system, *IEEE Trans. Power Delivery* 4 (1) (1989) 818–823.
- [22] B.L. Agrawal, R.G. Farmer, Effective damping for SSR analysis of parallel turbine generators, *IEEE Trans. Power Syst.* 3 (4) (1988) 1441–1448.
- [23] B.W. McConnell, P.R. Barnes, T.M. Tesche, D.A. Schafer, Impact of Quasi-Dc Currents on Three-Phase Distribution Transformer Installations, ORNL/Sub/89-SE912/1, *Report Prepared by the Oak Ridge National Laboratory*, Oak Ridge, Tennessee 37831–6285, June 1992.
- [24] M. Amin, Security challenges for the electricity infrastructure, *Computer* 35 (4) (2002) 8–10. ISSN 0018-9162.
- [25] EPRI, *Electricity Infrastructure Security Assessment*, vol. I–II, EPRI, Palo Alto, CA, 2001. November and December.
- [26] M. Amin, EPRI/DOD complex interactive networks/systems initiative: self-healing infrastructures, in: *Proceedings of the 2nd DARPA-JFACC Symposium Advances in Enterprise Control*, IEEE Computer Soc. Press, Los Alamitos, CA, 2000.
- [27] S. Silberman, The energy web, *Wired* 9 (7) (2001).
- [28] P.D. Jones, Recent warming in global temperature series, *Geophys. Res. Lett.* 21 (12) (1994).
- [29] H.W. Ellsaesser, M.C. MacCracken, J.J. Walton, S.L. Grotch, Global climatic trends as revealed by the recorded data, *Rev. Geophys. Space Phys.* 24 (4) (1986) 745–792.
- [30] H. Koch, T. Hillers, Second-generation gas-insulated line, *Power Eng. J.* 16 (2002) 111–116.
- [31] Y. You, E.F. Fuchs, D. Lin, P.R. Barnes, Reactive power demand of transformers with dc bias, *IEEE Ind. Appl. Soc. Mag.* 2 (4) (1996) 45–52.

- [32] E.F. Fuchs, Are harmonic recommendations according to IEEE 519 and CEI/IEC 555 too restrictive? in: *Proceedings of Annual Frontiers of Power Conference*, Oklahoma State University, Stillwater, Oklahoma, October 28–29, 2002, pp. IV-1–IV-18.
- [33] J.F. Fuller, E.F. Fuchs, D.J. Roesler, Influence of harmonics on power system distribution protection, *IEEE Trans. Power Delivery* PWRD-3 (2) (April 1988) 546–554.
- [34] A. Denhart, *Grundzüge der Tonfrequenz-Rundsteuertechnik und ihre Anwendung*, Verlags-und Wirtschaftsgesellschaft der Elektrizitätswerke m.b.H, Frankfurt, 1971.
- [35] *Electrical Transmission and Distribution Reference Book*, Westinghouse Electric Corporation, East Pittsburgh, PA, 1964.
- [36] X. Hui, Z. Xiangjun, F. Shaosheng, W. Xuebin, K. Lang, Medium-voltage power line carrier communication system, in: *Proceedings of the 2004 International Conference on Power System Technology*, PowerCon 2004, vol. 2, 21–24 November, 2004, pp. 1536–1539.
- [37] G.A. Franklin, S.-M. Hsu, Power line carrier interference caused by DC electric arc furnaces, in: *Proceedings of the IEEE Power Engineering Society General Meeting 2004*, vol. 2, July, 2003, pp. 13–17.
- [38] S. Arnborg, G. Andersson, D.J. Hill, I.A. Hiskens, On undervoltage load shedding in power systems, *Int. J. Electr. Power Energy Syst.* 19 (2) (1997) 141–149 (9).
- [39] Z. Feng, V. Ajjarapu, D.J. Maratukulam, A practical minimum load shedding strategy to mitigate voltage collapse, *IEEE Trans. Power Syst.* 13 (4) (1998) 1285–1290.
- [40] N. Ando, M. Takashima, Y. Doi, Y. Sugitate, N. Menda, Automatic meter reading system adopting automatic routing technology, in: *IEEE/PES Transmission and Distribution Conference and Exhibition 2002: Asia Pacific*, Vol. 3, 6–10 October, 2002, pp. 2305–2309.
- [41] S. Thumaty, A. Pham, H. van Wyk, Development of a low-IF receiver and a fixed wireless utility network, in: *Microwave Symposium Digest, 2002 IEEE MTT-S International*, Vol. 2, 2–7 June, 2002, pp. 935–938.
- [42] C.-H. Wu, S.-C. Chang, Y.-W. Huang, Design of a wireless ARM-based automatic meter reading and control system, in: *IEEE Power Engineering Society General Meeting, 2004*, vol. 1, 6–10 June, 2004, pp. 957–962.
- [43] A.J. Gaul, E. Handschin, W. Hoffmann, Evolutionary strategies applied for an optimal management of electrical loads, in: *Proceedings of the International Conference on Intelligent Systems Applications to Power Systems*, 1996, ISAP '96, 28 January–2 February, 1996, pp. 368–372.
- [44] J.R. Marti, F. Castellanos, N. Santiago, Wide-band corona circuit model for transient simulations, *IEEE Trans. Power Syst.* 10 (2) (1995) 1003–1013.
- [45] G.V. Podporkin, A.D. Sivaev, Lightning impulse corona characteristics of conductors and bundles, *IEEE Trans. Power Delivery* 12 (4) (1997) 1842–1847.
- [46] EHV, *Transmission Line Reference Book*, Edison Electric Institute, New York, NY, 1968.
- [47] *Transmission Line Reference Book*, Electric Research Institute, Palo Alto, CA, 1982.
- [48] G. Filippopoulos, D. Tsanakas, Analytical calculation of the magnetic field produced by electric power lines, *IEEE Trans. Power Delivery* 20 (2) (2005) 1474–1482.
- [49] E.A. Leeper, *Silencing the Fields: A Practical Guide to Reducing AC Magnetic Fields*, Symmetry Books, Boulder, CO, 2001.
- [50] F.S. Barnes, Interaction of DC and ELF electric fields with biological materials and systems, in: C. Polk, E. Postow (Eds.), *Handbook on Biological Effects of Electromagnetic Fields*, CRC Press, Boca Raton, FL, 2018, pp. 103–147.
- [51] F.S. Barnes, Typical electric and magnetic field exposures at power-line frequencies and their coupling to biological systems, in: *Electromagnetic Fields*, American Chemical Society, 1995, pp. 37–55.
- [52] Public Utilities Commission of the State of California. n.d. Publications of the Public Utilities Commission of the State of California.
- [53] J.M. Silva, H.H. Fleischmann, C.H. Shih, Transmission line corona and X-rays, *IEEE Trans. Power Delivery* 19 (3) (2004) 1472–1482.
- [54] O. Anaya-Lara, F.M. Hughes, N. Jenkins, G. Strbac, Contribution of DFIG-based wind farms to power system short-term frequency regulation, *IEE Proc. Gener. Transm. Distrib.* 153 (2) (2006) 164–170.
- [55] J. Ekanayake, N. Jenkins, Comparison of the response of doubly fed and fixed-speed induction generator wind turbines to changes in network frequency, *IEEE Trans. Energy Convers.* 19 (4) (2004) 800–802.
- [56] M.A.S. Masoum, H. Dehbonei, E.F. Fuchs, Theoretical and experimental analyses of photovoltaic systems with voltage- and current-based maximum power point tracking, *IEEE Trans. Energy Convers.* 17 (4) (2002) 514–522.

- [57] A.J. Wood, B.F. Wollenberg, *Power Generation Operation and Control*, John Wiley & Sons, Inc., 1984.
- [58] R. Mandelbaum, Reap the wild wind [offshore wind farm], *IEEE Spectr.* 39 (10) (2002) 34–39.
- [59] 90 MW Pumpspeicherwerk Glems, Technische Werke der Stadt Stuttgart A.G., 1964.
- [60] <http://www.tva.gov/sites/raccoonmt.htm>.
- [61] W. Mattick, H.G. Haddenhorst, O. Weber, Z.S. Stys, Huntorf- the world's first 290 MW gas turbine air storage peaking plant, *Proc. Am. Power Conf.* 37 (1975) 322–330.
- [62] K.G. Vosburgh, Compressed air energy storage, *J. Energy* 2 (2) (1978) 106–112.
- [63] R.H. Park, Fast turbine valving, *IEEE Trans. Power Appar. Syst.* PAS-92 (3) (1973) 1065–1073.
- [64] E.W. Cushing, G.E. Drechsler, W.P. Killgoar, H.G. Marshall, H.R. Stewart, Fast valving as an aid to power system transient stability and prompt resynchronization and rapid reload after full load rejection, *IEEE Trans. Power Appar. Syst.* PAS-91 (4) (1972) 1624–1636.
- [65] H.D. Chiang, C.-S. Wang, A.J. Flueck, Look-ahead voltage and load margin contingency selection functions for large-scale power systems, *IEEE Trans. Power Syst.* 12 (1) (1997) 173–180.
- [66] S.S. Sharif, J.H. Taylor, Real-time load forecasting by artificial neural networks, in: *Proceedings of the IEEE Power Engineering Society Summer Meeting 2000*, Vol. 1, 16–20 July, 2000, pp. 496–501.
- [67] M.S. Kandil, S.M. El-Debeiky, N.E. Hasanien, Long-term load forecasting for fast developing utility using a knowledge-based expert system, *IEEE Trans. Power Syst.* 17 (2) (2002) 491–496.
- [68] K. Nagasaka, M. Al Mamun, Long-term peak demand prediction of 9 Japanese power utilities using radial basis function networks, in: *Proceedings of the IEEE Power Engineering Society General Meeting 2004*, Vol. 1, 6–10 June, 2004, pp. 315–322.
- [69] Dranetz Basic Measuring Instruments (BMI), n.d. Dranetz Edison, NJ.
- [70] D. Lin, E.F. Fuchs, M. Doyle, Computer-aided testing program of electrical apparatus supplying nonlinear loads, *IEEE Trans. Power Syst.* 12 (1) (1997) 11–21.
- [71] E.F. Fuchs, R. Fei, A new computer-aided method for the efficiency measurement of low-loss transformers and inductors under non-sinusoidal operation, *IEEE Trans. Power Delivery* PWRD-11 (1) (1996) 292–304.
- [72] E.F. Fuchs, D. Yildirim, T. Batan, Innovative procedure for measurement of losses of transformers supplying nonsinusoidal loads, *IEEE Proc. Gener. Transm. Distrib.* 146 (6) (1999) (IEE Proceedings online no. 19990684).
- [73] E.F. Fuchs, D. Lin, J. Martynaitis, Measurement of three-phase transformer derating and reactive power demand under nonlinear loading conditions, *IEEE Trans. Power Delivery* 21 (2) (2006) 665–672.
- [74] D. Lin, E.F. Fuchs, Real-time monitoring of iron-core and copper losses of three-phase transformers under (non) sinusoidal operation, *IEEE Trans. Power Delivery* 21 (3) (2006) 1333–1341.
- [75] T. Stensland, E.F. Fuchs, W.M. Grady, M. Doyle, Modeling of magnetizing and core-loss currents in single-phase transformers with voltage harmonics for use in power flow, *IEEE Trans. Power Delivery* 12 (2) (1997) 768–774.
- [76] IEEE Standard 519, IEEE Recommended Practices and Requirements for Harmonic Control in Electric Power Systems, IEEE-519, 1992.
- [77] IEC 61000-3-2 (2001-10): Consolidated Edition, Electromagnetic Compatibility – Part 3-2: Limits for Harmonic Current Emissions. n.d.
- [78] G.T. Heydt, W.M. Grady, User Manual HARMFLOW, Version 3.1, Electric Power Research Institute Publication, Palo Alto, CA, 1985.
- [79] E.F. Fuchs, D. Yildirim, W.M. Grady, Measurement of eddy-current loss coefficient p_{EC-R} , derating of single-phase transformers, and comparison with K-factor approach, *IEEE Trans. Power Delivery* 15 (1) (2000) 148–154 (vol. 15, No. 4, October 2000, pp. 1331–1333 (discussions/closure) and p. 1357.).
- [80] E.F. Fuchs, Y. You, Measurement of $(\lambda-i)$ characteristics of asymmetric three-phase transformers and their applications, *IEEE Trans. Power Delivery* 17 (4) (2002) 983–990.
- [81] Current and Voltage Transducer Catalog, third ed., LEM USA, Inc., Milwaukee, WI, 2022.
- [82] S. Rieman, An optically isolated data acquisition system, in: *Independent Study Report*, University of Colorado at Boulder, December 1997.
- [83] D. Yildirim, E.F. Fuchs, Computer-aided measurements of inductor losses at high-frequencies (0 to 6 kHz), in: *Proceedings of the 14th Annual Applied Power Electronics Conference and Exposition*, March 14–18, Dallas, TX, 1999.
- [84] EMTP Program, Electric Power Research Institute, Palo Alto, CA, 2022.

- [85] M. Stöckl, *Elektrische Messtechnik, Reihe 1, Band IV*, second ed., B.G. Teubner Verlagsgesellschaft, Stuttgart, 1961.
- [86] D. Lin, T. Batan, E.F. Fuchs, W.M. Grady, Harmonic losses of single-phase induction motors under nonsinusoidal voltages, *IEEE Trans. Energy Convers.* 11 (2) (1996) 273–286.
- [87] D. Lin, E.F. Fuchs, On-line measurement of transformer losses under nonsinusoidal operation, in: *Proceedings of the IASTED International Conference on Power and Energy Systems (PES 2007)*, Clearwater, Florida, January 2007, pp. 239–247.
- [88] E.F. Fuchs, T. Stensland, W.M. Grady, M. Doyle, Measurement of harmonic losses of pole transformers and single-phase induction motors, in: *Proceedings of the IEEE-IAS Industry Applications Society Annual Meeting*, Denver, CO, October 2–7, 1994, Paper No. EM-03-162, 1994, pp. 128–134.
- [89] American National Standards Institute, IEEE standard test code for liquid-immersed distribution, power, and regulating transformers and IEEE guide for short-circuit testing of distribution and power transformers, in: *ANSI/IEEE C57.12.90–1987*, Institute of Electrical and Electronics Engineers, Inc., New York, NY, 1988.
- [90] E. Arri, N. Locci, F. Mocci, Measurement of transformer power losses and efficiency in real working conditions, *IEEE Trans. Instrum. Meas.* 40 (2) (1991) 384–387.
- [91] F. Mocci, Un nuovo metodo per la determinazione della potenza assorbita dai doppi bipoli, in: *L'Energia Elettrica*, No. 7–8, 1989, pp. 323–329.
- [92] *Current and Voltage Transducer Catalog*, third ed., LEM USA Inc., Milwaukee, WI, 2022.
- [93] E.F. Fuchs, Liquid-filled transformers: design, optimization, and monitoring, in: J. Webster (Ed.), *Encyclopedia of Electrical and Electronics Engineering Online*, John Wiley & Sons, New York, NY, 2017. Manuscript number eeee-17-0002, 50 pp <http://www.interscience.wiley.com>.
- [94] E.F. Fuchs, Y. You, D. Lin, Development and validation of GIC transformer models, in: *Final Report for Contract 19X-SK205V*, Martin Marietta Energy Systems, Inc., Oak Ridge, TN, June 1996.
- [95] Keithley MetraByte Corp, DAS-50, User's Guide, Keithley MetraByte Corp, Taunton, MA, 2022. Part # 24851.
- [96] uCDAS-16G Manual, Keithley MetraByte Corp, Taunton, MA, 2022 (Part # 24845).
- [97] Requirements for Instrument Transformers, IEEE Standard ANSI/IEEE C57.13, 1993.
- [98] Instrument Transformers, Part 8: Electronic Current Transformers (IEC 60044-8-2002-07), 2002.
- [99] Messwandler für Elektrizitätszähler, PTB-A-20.2, Physikalisch-Technische Bundesanstalt (PTB), Braunschweig, 2022.
- [100] AEG-Hilfsbuch, ninth ed., Allgemeine Elektrizitäts-Gesellschaft, Grunewald, Berlin, 1965, pp. 5/97–5/104.
- [101] W.M. Grady, E.F. Fuchs, D. Lin, T.D. Stensland, The Potential Effects of Single-Phase Power Electronic-Based Loads on Power System Distortion and Losses, Volume 2: Single-Phase Transformers and Induction Motors, Technical Report, Electric Power Research Institute, Palo Alto, CA, 2003.
- [102] ANSI/NCSL Z540-2-1997(R2002), American National Standard for Calibration – U.S. Guide to the Expression of Uncertainty in Measurement, American National Standard Institute, November 12, 2002.
- [103] F. Adamo, F. Attivissimo, G. Cavone, N. Giaquinto, SCADA/HMI systems in advanced educational courses, *IEEE Trans. Instrum. Meas.* 56 (1) (2007) 4–10.
- [104] F.S. Barnes, E.F. Fuchs, J.S. Tietjen, J. Silverstein, H.-Y. Ko, T. Lockabaugh, T.X. Brown, D.C. Sicker, A proposal for an integrated utilities engineering management M.E. program, in: *Proceedings of the IASTED International Conference on Power and Energy Systems (EuroPES 2005)*, Paper # 468–153, Benalmadena, Spain, June 15–17, 2005.
- [105] K. Stahlkopf, Dream Jobs 2004, Engineer in Paradise, *IEEE Spectrum*, 2004, p. 32.
- [106] U.S.–Canada Power System Outage Task Force, Final Report on the August 14, 2003 Blackout in the United States and Canada: Causes and Recommendations, 2004. 228 pages.
- [107] P. Fairley, The unruly power grid, *IEEE Spectr.* 41 (8) (2004) 22–27.
- [108] M. Hassan, J. Klein, Distributed Photovoltaic Systems: Utility Interface Issues and their Present Status, Report DOE/ET-20356-3, Jet Propulsion Laboratory, California Institute of Technology, Pasadena, CA, 1981. September 15.
- [109] D. Yildirim, E.F. Fuchs, T. Batan, Test results of a 20 kW, direct drive, variable-speed windpower plant, in: *Proceedings of the International Conference on Electrical Machines*, Istanbul, Turkey, September 2–4, 1998, pp. 2039–2044.
- [110] E.F. Fuchs, D.J. Roesler, M.A.S. Masoum, Are harmonic recommendations according to IEEE and IEC too restrictive? *IEEE Trans. Power Delivery* 19 (4) (2004) 1775–1786.

- [111] K. Ragaller, *Current Interruption in High-Voltage Networks*, Plenum Press, New York, 1978.
- [112] Y.S. Cha, Z. Yang, R. Turner, B. Poeppel, Analysis of a passive superconducting fault current limiter, *IEEE Trans. Appl. Supercond.* 8 (1) (1998) 20–25.
- [113] T. Matsumura, T. Uchii, Y. Yokomizu, Development of flux-lock-type fault current limiter with high T_c superconducting element, *IEEE Trans. Appl. Supercond.* 7 (2) (1997) 1001–1004.
- [114] T. Hara, T. Okuma, T. Yamamoto, D. Ito, K. Takaki, K. Tsurunaga, Development of a new 6.6 kV/1000 A class superconducting fault current limiter for electric power systems, *IEEE Trans. Power Delivery* 8 (1) (1993) 182–191.
- [115] T. Ueda, M. Morita, H. Arita, J. Kida, Y. Kurosawa, T. Yamagiwa, Solid-state current limiter for power distribution system, *IEEE Trans. Power Delivery* 8 (4) (1993) 1796–1801.
- [116] R.K. Smith, P.G. Slade, M. Sarkozi, E.J. Stacey, J.J. Bonk, H. Mehta, Solid state distribution current limiter and circuit breaker: application requirements and control strategies, *IEEE Trans. Power Delivery* 8 (3) (1993) 1155–1164.
- [117] E.F. King, A.Y. Chikhani, R. Hackam, M.M.A. Salama, A microprocessor-controlled variable impedance adaptive fault current limiter, *IEEE Trans. Power Delivery* 5 (4) (1990) 1830–1838.
- [118] S. Sugimoto, J. Kida, C. Fukui, T. Yamagiwa, Principle and characteristics of a fault current limiter with series compensation, *IEEE Trans. Power Delivery* 11 (2) (1996) 842–847.
- [119] J. Skindhoj, J. Glatz-Reichenbach, R. Strümpfer, Repetitive current limiter based on polymer PTC resistor, *IEEE Trans. Power Delivery* 13 (2) (1998) 489–494.
- [120] N. Engelman, E. Schreurs, B. Drugge, Field test results for a multi-shot 12.47 kV fault current limiter, *IEEE Trans. Power Delivery* 6 (3) (1991) 1081–1086.
- [121] F. Tosato, S. Quania, Reducing voltage sags through fault current limitation, *IEEE Trans. Power Delivery* 16 (1) (2001) 12–17.
- [122] S. Lee, C. Lee, T.K. Ko, O. Hyun, Stability analysis of a power system with fault current limiter installed, *IEEE Trans. Appl. Supercond.* 11 (1) (2001) 2098–2101.
- [123] M. Sjöström, R. Cherkaoui, B. Dutoit, Enhancement of power system transient using superconducting fault current limiters, *IEEE Trans. Appl. Supercond.* 9 (2) (1999) 1328–1330.
- [124] D. Iioka, H. Shimizu, Y. Yokomizu, I. Kano, The effect of resistive and inductive fault current limiter on shaft torsional torque of synchronous generator installed in consumer systems, in: *Proceedings of the IASTED International Conference, Power and Energy Systems*, Tampa, FL, November 19–22, 2001, pp. 329–333.
- [125] W. Grover, *Lecture Notes* (2000).
- [126] A. Guyton, *Textbook of Medical Physiology*, eighth ed., W.B. Saunders Co., 1991.
- [127] E.F. Fuchs, Y. You, D.J. Roesler, Modeling, simulation and their validation of three-phase transformers with three legs under DC bias, *IEEE Trans. Power Delivery* 14 (2) (1999) 443–449.
- [128] Military Standards MIL 454, MIL 461C, MIL 1275A, MILB 5087, MIL 220A, and MIL 810E n.d.
- [129] D. Hughes, *Grounding for the Control of EMI*, DWCI Virginia, 1983.
- [130] E.F. Vance, Electromagnetic interference control, *IEEE Trans. Electromagn. Compat.* 22 (EMC-11) (1980) 319–328.
- [131] M.A.S. Masoum, M. Ladjevardi, E.F. Fuchs, W.M. Grady, Optimal placement and sizing of fixed and switched capacitor banks under nonsinusoidal operating conditions, in: *Proceedings of the Summer Power Meeting 2002*, Chicago, July 21–25, 2002, pp. 807–813.
- [132] M.A.S. Masoum, M. Ladjevardi, E.F. Fuchs, W.M. Grady, Application of local variations and maximum sensitivities selection for optimal placement of shunt capacitor banks under nonsinusoidal operating conditions, *Int. J. Electr. Power Energy Syst.* 26 (10) (2004) 761–769.
- [133] M.A.S. Masoum, A. Jafarian, M. Ladjevardi, E.F. Fuchs, W.M. Grady, Fuzzy approach for optimal placement and sizing of capacitor banks in the presence of harmonics, *IEEE Trans. Power Delivery* 19 (2) (2004) 822–829.
- [134] M.A.S. Masoum, M. Ladjevardi, A. Jafarian, E.F. Fuchs, Optimal placement, replacement and sizing of capacitor banks in distorted distribution networks by genetic algorithms, *IEEE Trans. Power Delivery* 19 (4) (2004) 1794–1801.
- [135] B.K. Gupta, et al., Turn insulation capability of large AC motors, part 1 – surge monitoring, *IEEE Trans. Energy Convers.* EC-2 (4) (1987) 658–665.
- [136] B.K. Gupta, et al., Turn insulation capability of large ac motors, part 2 – surge strength, *IEEE Trans. Energy Convers.* EC-2 (4) (1987) 666–673.

- [137] B.K. Gupta, et al., Turn insulation capability of large AC motors, part 3 – insulation coordination, *IEEE Trans. Energy Convers.* EC-2 (4) (1987) 674–679.
- [138] E.P. Dick, et al., Practical calculation of switching surges at motor terminals, *IEEE Trans. Energy Convers.* 3 (4) (1988) 864–872.
- [139] A. Narang, et al., Measurement and analysis of surge distribution in motor windings, *IEEE Trans. Energy Convers.* 4 (1) (1989) 126–134.
- [140] J. Acosta, K.J. Cornick, Field investigations into the factors governing the severity of pre-striking transients, *IEEE Trans. Energy Convers.* EC-2 (4) (1987) 638–645.
- [141] J.L. Guardado, K.J. Cornick, The effects of coil parameters on the distribution of steep-fronted surges in machine windings, *IEEE Trans. Energy Convers.* 7 (3) (1992) 552–556.
- [142] J.L. Guardado, K.J. Cornick, A computer model for calculating steep-fronted surge distribution in machine windings, *IEEE Trans. Energy Convers.* 4 (1) (1989) 95–101.
- [143] B.S. Oyegoke, Voltage distribution in the stator winding of an induction motor following a voltage surge, in: *Electrical Engineering* 82 (2000), Springer-Verlag, 2000, pp. 199–205.
- [144] B.S. Oyegoke, A comparative analysis of methods for calculating the transient voltage distribution within the stator winding of an electric machine subjected to steep-fronted surge, *Electr. Eng.* 82 (2000) 173–182.
- [145] B.S. Oyegoke, Indirect boundary integral equation method as applied for wave propagation in the stator winding of an electric machine, *IEE Proc. Sci. Meas. Technol.* 144 (5) (1997) 223–227.
- [146] B.S. Oyegoke, Effect of the overhang capacitance on the fast-rising surge distribution in winding of a large motor, *IEE Proc. Sci. Meas. Technol.* 146 (6) (1999) 299–303.
- [147] B.S. Oyegoke, A comparative analysis of methods for calculating the transient voltage distribution within the stator winding of an electric machine subjected to steep-fronted surge, in: *IEE 1997 Conference Publication No. 444*, 2022.
- [148] M. Kaufhold, et al., Electrical stress and failure mechanism of the winding insulation in PWM-inverter-fed low-voltage induction motors, *IEEE Trans. Ind. Electron.* 47 (3) (2000) 396–402.
- [149] A.K. Agrawal, et al., Application of modal analysis to the transient response of multi-conductor transmission lines with branches, *IEEE Trans. Electromagn. Compat.* EMC-21 (3) (1979) 256–262.
- [150] J. Wang, S. McInerny, T. Haskew, Insulation fault detection in a PWM-controlled induction motor experimental design and preliminary results, in: *Proceedings of the 9th International Conference on Harmonics and Quality of Power*, Vol. 2, 1–4 October, 2000, pp. 487–492.
- [151] A.H. Bonnet, Analysis of the impact of pulse-width modulated inverter voltage waveforms on ac induction motors, *IEEE Trans. Ind. Appl.* 32 (2) (1996) 386–392.
- [152] H.W. Penrose, Electric motor repair for low voltage induction motors in PWM inverter duty environments, in: *Proceedings of Electrical Insulation and Electrical Manufacturing and Coil Winding Conference* (Cat. No. 97CH36075), 1997, pp. 841–848.
- [153] EPRI Project RP2307 n.d.
- [154] Guide for Testing Turn-to-Turn Insulation on Form-Wound stator Coils for AC Rotating Electric Machines – For Trial Use, *IEEE Standard 522*, 2022.
- [155] E. Hirst, A Good Integrated Resource Plan: Guidelines for Electric Utilities and Regulators, ORNL/CON-354, Oak Ridge National Laboratory, Oak Ridge, TN, 2022.
- [156] J. Eto, E. Vine, L. Shown, R. Sonnenblick, C. Payne, The Cost and Performance of Utility Commercial Lighting Programs, LBL-34967, Lawrence Berkley National Laboratory, Berkeley, CA, 1994.
- [157] S. Hadley, E. Hirst, Utility DSM Programs from 1989 through 1998: Continuation or Crossroad, ORNL/CON-405, Oak Ridge National Laboratory, Oak Ridge, TN, 1995.
- [158] ERPI, 1992 Survey of Utility Demand-Side Management Programs, Plexus Research Inc. and Scientific Communications Inc., Palo Alto, CA, 1993.
- [159] Eco Northwest, Environmental Externalities and Electric Utility Regulation, Report, National Association of Regulatory Utility Commissioners, Washington DC, 1993.
- [160] S.B. Leeb, S. Shaw, J.L. Kirtley, Transient event detection in spectral envelope estimates for non-intrusive load monitoring, *IEEE Trans. Power Delivery* 10 (3) (1995) 1200–1210.
- [161] G.T. Heydt, R. Ayyanar, R. Thallam, Power acceptability, *IEEE Power Eng. Rev.* (2001) 12–15.
- [162] E.R. Collins Jr., R.L. Morgan, Three phase sag generator for testing industrial equipment, *IEEE Trans. Power Delivery* 11 (1996) 526–532.

- [163] T. Key, Predicting behavior of induction motors during service faults and interruptions, *IEEE Ind. Appl. Mag.* 1 (1) (1995) 7.
- [164] R. Waggoner, Understanding the CBEMA curve, *Electr. Constr. Maint.* 90 (10) (1991) 55–57.
- [165] A.E. Turner, E.R. Collins, The performance of AC contactors during voltage sags, in: *Proc. IEEE Int. Conf. Harmonics and Quality of Power*, Las Vegas, NV, October, 1996, pp. 589–595.
- [166] M. McGranaghan, W. Roettger, Economic Evaluation of Power Quality, *IEEE Power Engineering Review*, February 2002, pp. 8–12.
- [167] IEEE Recommended Practice for Monitoring Electric Power Quality, *IEEE Standard 1159*, 1995.
- [168] SEMI F47-0200 Specification for Semiconductor Processing Equipment Voltage Sag Immunity, n.d.
- [169] IEEE Recommended Practice for Evaluating Electric Power System Compatibility with Electronic Process Equipment, *IEEE Standard 1346*, 1998.
- [170] IEEE Std. 446-1980, IEEE Recommended Practice for Emergency and Standby Power Systems for Industrial and Commercial Applications (Orange Book), John Wiley & Sons, Inc., 2022.
- [171] <http://www.upei.ca/~physics/p261/projects/flywheel1/flywheel1.htm>.
- [172] E.F. Fuchs, M.A.S. Masoum, *Power Conversion of Renewable Energy Systems*, Springer, USA, April 2011, ISBN: 978-1-4419-7978-0. 692 pp.
- [173] <http://www.mpoweruk.com/supercaps.htm>.
- [174] <http://energystorage.org/energy-storage/energy-storage-technologies>.
- [175] M.S. Masoum, H. Dehbonei, E.F. Fuchs, Closure of theoretical and experimental analyses of photovoltaic systems with voltage- and current-based maximum power tracking, *IEEE Trans. Energy Convers.* 19 (3) (2004) 652–653.
- [176] G.K. Dubey, *Power Semiconductor Controlled Drives*, Prentice Hall, Englewood Cliffs, NJ, 1989.
- [177] E.F. Fuchs, H.A. Fuchs, *Introduction to Energy, Renewable Energy and Electrical Engineering: Essentials for Engineering Science (STEM) Professionals and Students*, John Wiley & Sons, New York, NY, 2021.
- [178] M. Che. <https://www.sciencedirect.com/science/article/abs/pii/S0920586113003404>.
- [179] C. Wang, M.H. Nehrir, R.S. Shaw, Dynamic models and model validation for PEM fuel cells using electrical circuits, *IEEE Trans. Energy Convers.* 20 (2) (2005).
- [180] J. Appelbaum, Starting and steady-state characteristics of dc motors powered by solar cell generators, *IEEE Trans. Energy Convers.* EC-1 (1) (1986) 17–25.

Additional bibliography

- [181] K.F. Schenk, E.F. Fuchs, F.C. Trutt, Load analysis of nonlinear homopolar inductor alternators, *IEEE Trans. Power Appar. Syst.* PAS-92 (2) (1973) 442–448.
- [182] M. Siegl, E.F. Fuchs, E.A. Erdelyi, Medium frequency homopolar inductor alternators with amortisseur bars connected to rectifiers, part I: saturated position-dependent reactances, in: *Proceedings of the Midwest Power Symposium*, Cincinnati, Ohio, October, 1973.
- [183] M. Siegl, E.F. Fuchs, E.A. Erdelyi, Medium frequency homopolar inductor alternators with amortisseur bars connected to rectifiers, part 2: the effect of reduced subtransient reactance on rectifier operation, in: *Proceedings of the Midwest Power Symposium*, Cincinnati, Ohio, October, 1973.
- [184] E.F. Fuchs, U.V. Frank, High-speed motors with reduced windage and eddy current losses, part I: mechanical design, *ETZ Archiv.* 5 (1983) 17–23 (H.1).
- [185] E.F. Fuchs, U.V. Frank, High-speed motors with reduced windage and eddy current losses, part II: magnetic design, *ETZ Archiv.* 5 (1983) 55–62 (H.2).
- [186] G.W. Hart, Non-intrusive appliance load monitoring, *Proc. IEEE* 80 (12) (1992) 1870–1891.
- [187] M. Krarti, J. Kreider, D. Cohen, P. Curtiss, Estimation of energy savings for building retrofits using neural networks, *J. Solar Energy Eng.* 120 (3) (1998).
- [188] M. Krarti, *Energy Audit for Building Systems: An Engineering Approach*, CRC Press, Boca Raton, FL, 2000.
- [189] E.F. Fuchs, H.A. Fuchs, Distributed generation and frequency/load control of power systems, in: *Proceedings of the 40th Annual Frontiers of Power Conference*, Oklahoma State University, Stillwater, Oklahoma, October 29–30, 2007, pp. II-1–II-9.

- [190] E.F. Fuchs, F.S. Fuchs, Intentional islanding –maintaining power systems operation during major emergencies, in: Proceedings of the 10th IASTED International Conference on Power and Energy Systems (PES 2008), Baltimore, Maryland, April 16–18, 2008 (Paper # 617-061, 7 pp.).
- [191] E.F. Fuchs, H.A. Fuchs, Power quality of electric machines and power systems, in: Proceedings of the 8th IASTED International Conference on Power and Energy Systems (EuroPES 2008), Corfu, Greece 2008, June 16–18, 2008 (paper # 608-035, 9 pages.).

This page intentionally left blank

The roles of filters in power systems and unified power quality conditioners

The implementation of harmonic filters has become an essential element of electric power networks. With the advancements in technology and significant improvements of power electronic devices, utilities are continually pressured to provide high-quality and reliable energy. Power electronic devices such as computers, printers, fax machines, fluorescent and emitting diode (LED) lighting, and most other office equipment generate harmonics. These types of devices are commonly classified as nonlinear loads. These loads/sources (e.g., rectifiers, inverters) create harmonics by drawing/supplying current in short pulses, e.g., six-step, pulse-width modulation (PWM), rather than in a sinusoidal manner.

Harmonic currents and the associated harmonic powers must be supplied from the utility system. The major issues associated with the supply of harmonics to nonlinear loads are severe overheating: increased operating temperatures of generators and transformers degrade the insulation material of their windings. If this heating were continued to the point at which the insulation fails, a flashover would occur. This would partially or permanently damage the device and result in loss of generation or transmission that could cause blackouts. Impacts of harmonics on the insulation of transformers and electrical machines are discussed in [Chapter 7](#).

One solution to this problem is to install a harmonic filter for each nonlinear load/source connected to the power system. There are different types of harmonic filters including passive, active, and hybrid configurations [1–8] including unified power quality conditioners (UPQCs). The installation of active filters proves indispensable for solving power quality problems in distribution networks such as the compensation of harmonic current and voltage, reactive power, voltage sags, voltage flicker, and negative-phase sequence currents. Ultimately, this would ensure a system with increased reliability and better power quality.

Filters can only compensate harmonic currents and/or harmonic voltages at the installed bus and do not consider the power quality of other buses. On the other hand, as the number of nonlinear loads increases, more harmonic filters are required. New generations of active filters are UPQCs and active power line conditioners (APLCs).

This chapter begins with a discussion of the different types of nonlinear loads. [Section 10.2](#) presents a broad classification of filters as they are employed in supply systems, and thereafter the subclassification of filters according to their topology. The next three sections focus on different types of filter topologies including passive, active, and hybrid configurations. Block diagrams of active filters are reviewed in [Section 10.6](#). Detailed discussion and classification of control methods for active and hybrid filters are presented in [Section 10.7](#). The chapter ends with general comments and conclusions. [Sections 10.8 to 10.13](#) discuss the application of UPQCs.

10.1 Types of nonlinear loads

There are three main types of nonlinear loads in power systems: current-source loads, voltage-source loads, and their combinations.

The first category of nonlinear loads includes the current-source (current-fed or current-stiff) loads. Traditionally, most nonlinear loads have been represented as current sources because their current waveforms on the AC side are distorted. Examples of this category include the phase-controlled thyristor rectifier with a filter inductance on the DC side of the rectifier resulting in DC currents ([Fig. 10.1](#)); thyristor rectifiers convert an AC voltage source to a DC current source supplying current-source inverters (CSIs) and high-voltage DC (HVDC) systems, and diode rectifiers with sufficient filter inductance supply DC loads. In general, highly inductive loads are served by silicon-controlled rectifiers (SCRs) converting AC power to DC power. Of course, the inverse operation—where an inverter supplies AC power from a DC power source—results in similar current distortions (e.g., harmonics) on the AC side of the inverter. The transfer characteristics and resulting harmonic currents of current-source nonlinear loads are less dependent on the circuit parameters of the AC side than those on

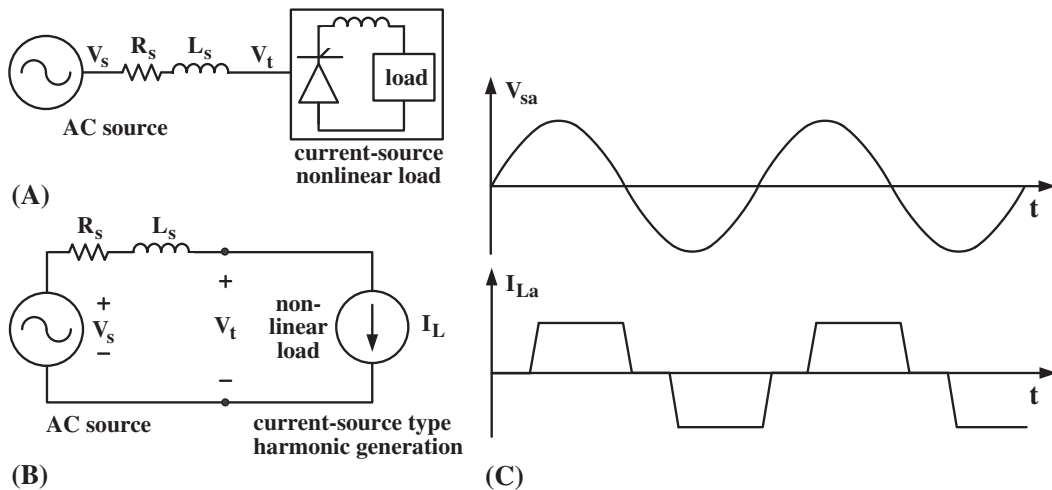


FIG. 10.1 Typical current-source nonlinear load: (A) thyristor rectifier for DC drives, (B) per-phase equivalent circuit of thyristor rectifier, (C) typical phase a voltage (V_{sa}) and line-current (I_{La}) waveforms of thyristor rectifier.

the DC side. Accordingly, passive shunt, active shunt, or hybrid (e.g., a combination of active shunt in series with passive shunt) filters for harmonic compensation are commonly applied on the AC side of the converters serving nonlinear loads. The principle of the passive shunt filter is to provide a low-impedance shunt branch for the harmonic currents caused by the nonlinear load. These passive filters have been applied in [Chapter 1](#). The principle of the active shunt filter is to inject into the power system harmonic currents with the same amplitudes and opposite phases of the harmonic currents due to nonlinear loads, thus eliminating harmonic current flowing into the AC source.

The second category of nonlinear loads comprises voltage-source (or voltage-fed or voltage-stiff) loads, such as diode rectifiers with a capacitive filter at the DC link feeding variable-frequency voltage-source inverter (VSI)-based AC motor drives, power supplies with front-end diode rectifier and capacitive filters installed in computers and other household appliances, battery chargers, etc. These voltage-stiff loads draw discontinuous and nonsinusoidal currents resulting in very high THD_i, low power factor, and distortions of the AC terminal voltage at the point of common coupling (PCC) defined in [Chapter 1](#). These loads generate harmonic voltage sources, rather than harmonic current sources ([Fig. 10.2](#)). Their harmonic amplitudes are greatly affected by the AC side impedance and source voltage imbalance, whereas their rectified voltages are less dependent on the impedance of the AC system. Therefore, diode rectifiers behave like a voltage source, rather than a current source. Accordingly, passive series, active series, or hybrid (e.g., a combination of active series with passive series) filters are relied on to compensate distortions due to nonlinear loads. Current-source and voltage-source nonlinear loads exhibit dual relations to one another with respect to circuits and properties, and can be effectively compensated by parallel and series filters discussed in [Chapter 1](#), respectively [1].

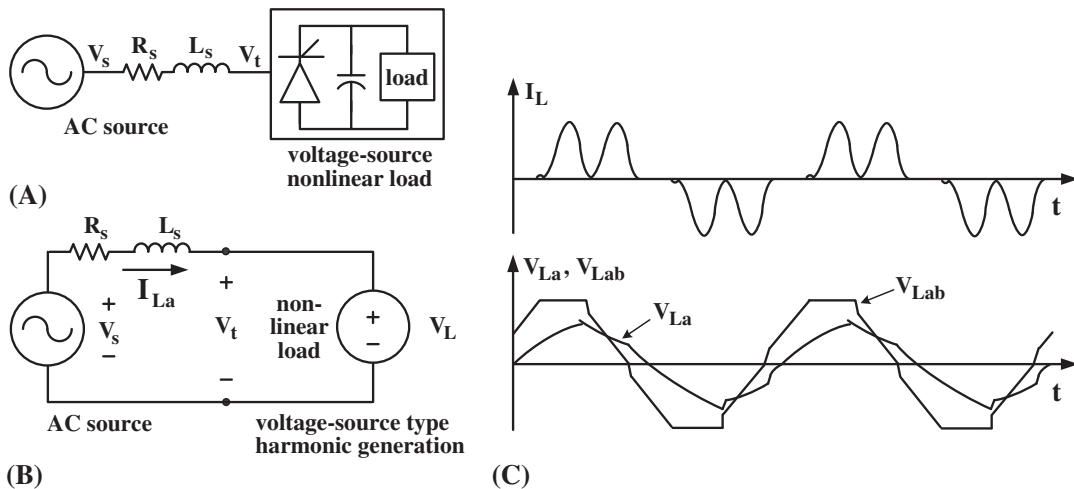


FIG. 10.2 Typical voltage-source nonlinear load: (A) thyristor rectifier for AC drives, electronic equipment, etc., (B) per-phase equivalent circuit of diode rectifier, (C) typical line-current (I_L) and phase a (V_{La}) and line-to-line (V_{Lab}) voltage waveforms of thyristor rectifier.

The third category of nonlinear loads is characterized by the combination of current- and voltage-source loads. They are neither of the current-source nor of the voltage-source type and may contain loads of both kinds. For example, adjustable-speed drives behave as several types of nonlinear loads; variable-frequency VSI-fed AC motors perform as voltage-stiff loads, whereas CSI-fed AC motor drives act as current-stiff loads. For these loads a hybrid topology consisting of active series with passive shunt filter elements is appropriate, provided that the power supply is ideal and adjustable reactive power compensation is not required.

The assessment of harmonic injection of nonlinear loads may not be easy and depends on the following [4]:

- Type and topology of nonlinear loads producing harmonics. A voltage-source converter with diode front end may inject an entirely different harmonic spectrum as compared with a current-source converter. Switching power supplies, PWM drives, cycloconverters, and arc furnaces have their own specific harmonic spectra.
- Interaction of nonlinear loads with the AC system impedance.
- The harmonic spectra may vary as a function of the nonlinear load. For example, the input AC waveform to a current-source converter and its ripple content depends on the firing angle α and the length of the commutation interval—due to the commutating inductance—as pointed out in [Chapter 1](#). In addition, a small amount of noncharacteristic harmonics may be generated. Therefore, worst-case scenarios should be considered for the analyses of these load types.

10.2 Classification of filters employed in power systems

During the past few decades the number and types of nonlinear loads have tremendously increased. This has motivated the utilities and consumers of electric power to implement different harmonic filters. Filters are capable of compensating harmonics of nonlinear loads through current-based compensation. They can also improve the quality of the AC supply, for example, compensating voltage harmonics, sags, swells, notches, spikes, flickers, and imbalances through voltage-based techniques. Filters are usually installed near or close to the points of distortion, for example, across nonlinear loads, to ensure that harmonic currents do not interact with the power system. They are designed to provide a bypass for the harmonic currents, to block them from entering the power system, or to compensate them by locally supplying harmonic currents and/or harmonic voltages. Filters can be designed to trap harmonic currents and shunt them to ground through the use of capacitors, coils, and resistors. Due to the lower impedance of a filter element (at a certain frequency) in comparison to the impedance of the AC source, harmonic currents will circulate between the load and the filter and do not affect the entire system; this is called series resonance as defined in [Chapter 1](#). A filter may contain several of these filter elements, each designed to compensate a particular harmonic frequency or an array of frequencies. Filters are often the most common solution approaches that are used to mitigate harmonics in power systems. Unlike other solutions, filters offer a simple and inexpensive alternative with high benefits.

Classifications of filters may be performed based on various criteria, including the following:

- Number and type of elements (e.g., one, two, or more passive and/or active filters).
- Topology (e.g., shunt-connected, series-connected, or a combination of the two).
- Supply system (e.g., single-phase, three-phase three-wire, and three-phase four-wire).
- Type of nonlinear load such as current-source and/or voltage-source loads.
- Power rating (e.g., low, medium, and high power).
- Compensated variable (e.g., harmonic current, harmonic voltage, reactive power, and phase balancing, as well as multiple compensation).
- Converter type (e.g., VSI and/or CSI to realize active elements of filter).
- Control technique (e.g., open loop, constant capacitor voltage, constant inductor current, linear voltage control, or optimal control).
- Reference estimation technique (e.g., time and/or frequency current/voltage reference estimation).

Various topologies such as passive filter (PF), active filter (AF), and hybrid filter (HF) in shunt, series, and shunt/series for single-phase, three-phase three-wire, and three-phase four-wire systems have been installed using current-source inverters and voltage-source inverters for implementation of the control of active filters. Fig. 10.3 shows the classification of filters as used in power systems based on the supply system with the topology as a subclassification [1–5]. Further classification is made on the basis of the numbers and types of elements employed in different topologies. According to Fig. 10.3, there are 156 valid

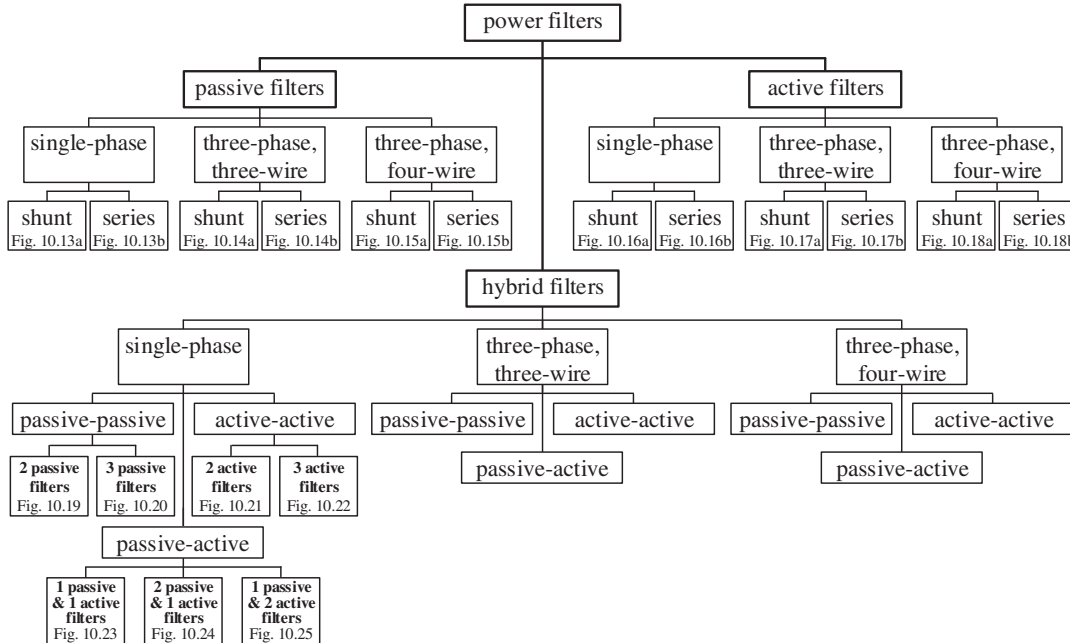


FIG. 10.3 Classification of filters used for power quality improvement [1–5].

configurations of passive, active, and hybrid filters. Each class of filters offers its own unique solution to improve the quality of electric power. The choice of filter depends on the nature of the power quality problem, the required level and speed of compensation, as well as the economic cost associated with its implementation.

10.3 Passive filters as used in power systems

If a nonlinear load is locally causing significant harmonic distortion, passive filters may be installed to prevent the harmonic currents from being injected into the system. Passive filters are inexpensive compared with most other mitigating devices. They are composed of only passive elements (inductances, capacitances, and resistances) tuned to the harmonic frequencies of the currents or voltages that must be attenuated. Passive filters have better performances when they are placed close to the harmonic-producing nonlinear loads. They create a sharp parallel resonance at a frequency below the notch (tuned) frequency as introduced in [Chapter 1](#). The resonant frequency of the power system must be carefully placed far from any significant harmonic distortion caused by the nonlinear load. For this reason, passive filters should be tuned at slightly lower frequency than the harmonic to be attenuated. This will provide a margin of safety in case there is some change in the system parameters. Otherwise, variations in either filter capacitance and/or filter inductance (e.g., with temperature or failure) might shift resonance conditions such that harmonics cause problems in the power system. In practice, passive filters are added to the system starting with the lowest order of harmonics that must be filtered; for example, installing a seventh-harmonic filter usually requires that a fifth-harmonic filter also be included.

There are various types of passive filters for single-phase and three-phase power systems in shunt and series configurations. Shunt passive filters are the most common type of filters in use. They provide low-impedance paths for the flow of harmonic currents. A shunt-connected passive filter carries only a fraction of the total load current and will have a lower rating than a series-connected passive filter that must carry the full load current. Consequently, shunt filters are desirable due to their low cost and fine capability to supply reactive power at fundamental frequency. It is possible to use more than one passive filter in either shunt and/or series configuration. These topologies are classified as passive-passive single- and three-phase hybrid filters ([Fig. 10.3](#)) and will be discussed in [Section 10.5](#). The structure chosen for implementation depends on the type of the dominant harmonic source (voltage source, current source) and the required compensation function (e.g., harmonic current or voltage, reactive power).

10.3.1 Filter transfer function

Transfer functions are extensively used for filter design and system modeling. [Fig. 10.4A](#) shows the single-phase presentation of a balanced three-phase distribution system with a nonlinear load and a passive shunt filter installed at the PCC. At harmonic frequencies, the system can be approximated by the equivalent circuit of [Fig. 10.4B](#). Three main types

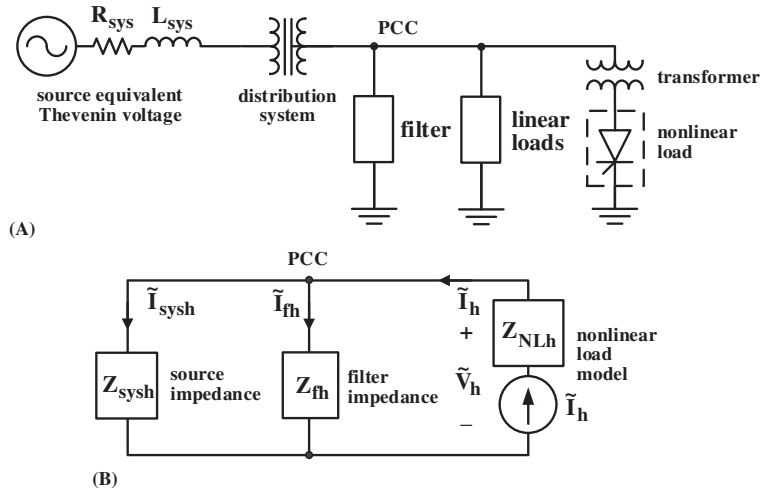


FIG. 10.4 Distribution system with nonlinear load and passive shunt filter; (A) single-phase representation, (B) equivalent circuit for harmonic (of order h) filter installation, see Chapter 1.

of transfer functions can be defined: impedance, current-divider, and voltage-divider transfer functions.

10.3.1.1 Impedance transfer functions

Impedance transfer functions are the most basic blocks for design and modeling of power systems. Two types of filter impedance transfer functions have been defined (Fig. 10.4):

- **Filter impedance transfer function** is the impedance frequency response of the filter expressed in the s domain as

$$H_f(s) = Z_f(s) = \frac{V_f(s)}{I_f(s)}, \quad (10.1a)$$

where $Z_f(s)$, $V_f(s)$, and $I_f(s)$ are the filter impedance, complex voltage, and current, respectively, and $s = j\omega$ is the Laplace operator.

- **Filter system impedance transfer function** is defined after the filter is designed and connected to the network. It is the impedance frequency response of the system (with the filter installed) expressed in the s domain

$$H_{fsys}(s) = Z_{fsys}(s) = \frac{V_{sys}(s)}{I_f(s) + I_{sys}(s)} = \frac{1}{\frac{1}{Z_f(s)} + \frac{1}{Z_{sys}(s)}}, \quad (10.1b)$$

where $Z_{fsys}(s)$ is the impedance of the system after the connection of the filter and $V_{sys}(s)$ and $I_{sys}(s)$ are the system complex voltage and current, respectively.

10.3.1.2 Current-divider transfer functions

Two types of current-divider transfer functions are derived for a filter (Fig. 10.4):

- $H_{cds}(s)$ is the ratio of system (sys) harmonic current to the injected harmonic nonlinear (NL) current

$$H_{cds}(s) = \frac{I_{sys}(s)}{I_{NL}(s)} = \frac{Z_f(s)}{Z_f(s) + Z_{sys}(s)} = \rho_{sys}(s). \quad (10.2a)$$

- $H_{cdf}(s)$ is the ratio of filter (f) harmonic current to the injected harmonic nonlinear current

$$H_{cdf}(s) = \frac{I_f(s)}{I_{NL}(s)} = \frac{Z_{sys}(s)}{Z_f(s) + Z_{sys}(s)} = \rho_f(s). \quad (10.2b)$$

In Eqs. (10.2a), (10.2b) $\rho_{sys}(s)$ and $\rho_f(s)$ are complex quantities that determine the distribution of the harmonic currents in the filter and the system and have been introduced in Chapter 1. A properly designed filter will have $\rho_f(s)$ close to unity, typically 0.995, and $\rho_{sys}(s)$ about 0.045 with the corresponding angles of about 2.6° and 81° , respectively. It is desirable that $\rho_{sys}(s) = \rho_{sys}(j\omega)$ be small at the various occurring harmonics.

According to Eqs. (10.2a), (10.2b) the system impedance plays an important role in the filtering process. Without a filter, all harmonic currents pass through the system. For a large system impedance and a given harmonic frequency, the bypass via the filter is perfect and all current harmonics will flow through the filter impedance. Conversely, for a system of low impedance at a given harmonic frequency most current of harmonic frequency will flow into the system.

It is easy to show that

$$H_{cdf}(s) = \frac{Z_{sys}(s)}{Z_f(s)} H_{cds}(s) = \frac{1}{Z_f(s)} = H_{fsys}(s), \quad (10.3a)$$

$$H_{cds}(s) = \frac{1}{Z_{sys}(s)} H_{fsys}(s). \quad (10.3b)$$

When designing a filter the impedance transfer functions (Eqs. 10.1a, 10.1b) can be used to evaluate the overall system performance. After the filter is installed, computed and measured current-divider ratios (Eqs. 10.2a, 10.2b) can be plotted [7,9] to evaluate filter performance and determine whether harmonic current distortion limits comply with the IEEE-519 Standard [10], as discussed in Chapter 1 (Application Examples 1.8 and 1.9).

10.3.1.3 Voltage-divider transfer functions

Similar transfer functions can be developed for systems with loads that are sensitive to harmonic voltages. Filters are used to provide frequency detuning or voltage distortion control. These transfer functions are based on a voltage division between an equivalent harmonic voltage source—representing nonlinear loads—and harmonic sensitive loads. Applications of

these transfer functions are concerned with the voltage distortion amplification of shunt power factor capacitors due to parallel and series resonances.

10.3.2 Common types of passive filters for power quality improvement

The configuration of a filter depends on the frequency spectrum and nature of the distortion. Fig. 10.5 depicts common types of passive filters.

The first-order damped and undamped high-pass filter (Fig. 10.5A with and without the resistor, respectively) is used to attenuate high-frequency current harmonics that cause telephone interference, reduce voltage notching caused by commutation of SCRs or thyristors, and provide partial displacement power factor correction of the fundamental load current. The single-tuned low-pass (also called band-pass or second-order series resonant band-pass) filter (Fig. 10.5B) is most commonly applied for mitigation of a single dominant low-order harmonic. Fig. 10.5C represents a second-order damped high-pass filter. Most nonlinear loads and devices generate more than one harmonic, however, and one filter is not usually adequate to effectively compensate, mitigate, or reduce all harmonics within the power system. There are different approaches to overcome this problem.

One approach is to use two single-tuned filters with identical characteristics to form a double bandpass filter (Fig. 10.5D). In practice, there is more than one dominant low-order harmonic and combinations of three or more single-tuned filters are applied. Starting with the lowest harmonic order (e.g., 5th), each filter is tuned to one harmonic frequency. This approach is not practical when the number of dominant low-order harmonics is large and/or higher order harmonics are present.

Another approach is to use a first-order high-pass filter (consisting of a resistor connected in series with a capacitor) or a second-order high-pass filter (consisting of a series capacitor and a parallel combination of inductor and resistor; Fig. 10.5C) and set the resonant frequency below the lowest order dominant harmonic frequency. However, the $(Z - \omega)$ plot of a second-order high-pass filter shows that the minimum impedance of this filter (e.g., in the pass-band region) is higher than that of a single-tuned band-pass filter. Therefore, the high-pass filter allows a percentage of all harmonics above its notch frequency to pass through and will result

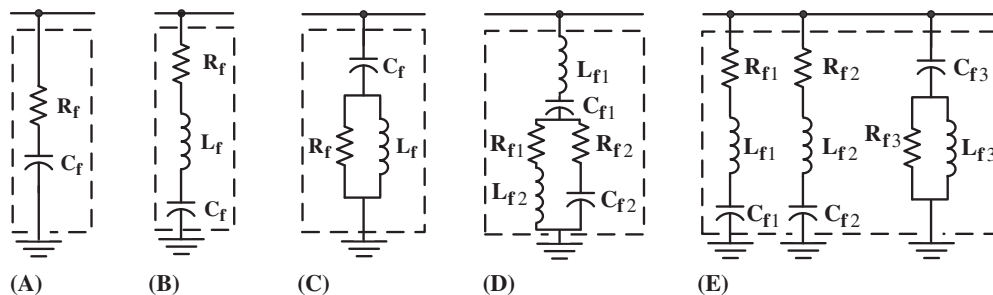


FIG. 10.5 Common types of passive filters; (A) first-order damped high-pass filter, (B) second-order series resonant band-pass filter, (C) second-order damped high-pass filter, (D) fourth-order double band-pass filter, (E) composite filter consisting of two band-pass filters and one high-pass filter.

in large fundamental filter rating and high resistive losses. This filter is commonly applied for higher frequencies and notch reduction.

The third and most implemented approach is to install a composite filter consisting of two or more branches of band-pass filters tuned at low-order harmonic frequencies and a parallel branch of high-pass filter tuned at higher frequencies (called a passive filter element; Figs. 10.5E, 10.11, and 10.12). This configuration is suitable for most residential, domestic, and industrial nonlinear loads such as arc furnaces. In addition, there are other configurations of higher order filters (e.g., third-order damped filter) for transmission systems.

The following section derives the equations and general relations of basic filter types.

10.3.2.1 First-order, high-pass filter

A first-order, high-pass filter consists of a shunt capacitor (Fig. 10.6A) and can be used to attenuate high-frequency harmonic current components causing telephone interference, to reduce voltage notching (e.g., caused by rectifier commutation), and to improve the displacement (fundamental) load power factor. Such filters are amply described in currently available circuit textbooks [11,12].

If the system impedance is purely inductive ($Z_{sys}(s) = sL_{sys}$), filter impedance and filter system impedance transfer functions can be derived using Eqs. (10.1a), (10.1b)

$$H_f(s) = Z_f(s) = \frac{V_f(s)}{I_f(s)} = \frac{1}{sC_f}, \quad (10.4a)$$

$$H_{fsys}(s) = Z_{fsys}(s) = \frac{V_{sys}(s)}{I_f(s) + I_{sys}(s)} = \frac{1}{\frac{1}{Z_f(s)} + \frac{1}{Z_{sys}(s)}} = \frac{1}{sC_f + \frac{1}{sL_{sys}}}. \quad (10.4b)$$

The order of this filter, that is, the highest exponent of the characteristic (denominator) polynomial of $H_f(s)$, is one.

The current-divider transfer function, Eq. (10.2a), can be derived as

$$H_{cds}(s) = H_{cds}(j\omega) = \frac{\frac{1}{j\omega C_f}}{j\omega L_{sys} + \frac{1}{j\omega C_f}}. \quad (10.5)$$

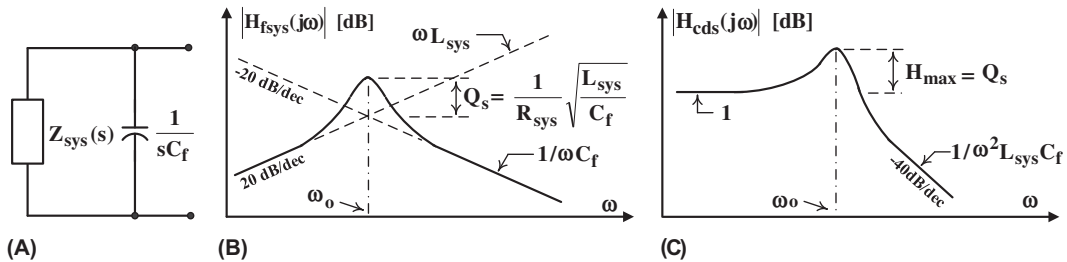


FIG. 10.6 First-order high-pass filter; (A) equivalent circuit, (B) filter system impedance transfer function, (C) current-divider transfer function.

Simple algebra yields analytical (closed-form) expressions for asymptotes, local maxima, and minima of these transfer functions as is illustrated in Fig. 10.6B and C. The procedures for plotting $H_{cds}(j\omega)$ on a logarithm paper as shown in Fig. 10.6C are:

- For low frequencies $\left(\omega \ll \frac{1}{\sqrt{L_{sys}C_f}} \Rightarrow \left|\frac{1}{j\omega C_f}\right| \gg |j\omega L_{sys}|\right)$

$$H_{cds}(j\omega) \approx \frac{\frac{1}{j\omega C_f}}{\frac{1}{j\omega C_f}} = 1.$$

Therefore, the roll-off of the low-frequency components is one or 0 dB per decade.

- For high frequencies $\left(\omega \gg \frac{1}{\sqrt{L_{sys}C_f}} \Rightarrow \left|\frac{1}{j\omega C_f}\right| \ll |j\omega L_{sys}|\right)$

$$H_{cds}(j\omega) \approx \frac{1}{\frac{j\omega C_f}{j\omega L_{sys}}} = \frac{-1}{\omega^2 L_{sys} C_f}.$$

Therefore, the roll-off of the high frequency components is $1/\omega^2$ or -40 dB per decade.

If system resistance is included ($Z_{sys}(s) = R_{sys} + sL_{sys}$), the maximum can be found as

$$H_{cds}(s = j\omega) \Big|_{\omega = \frac{1}{\sqrt{L_{sys}C_f}}} = -j \frac{1}{R_{sys}} \sqrt{\frac{L_{sys}}{C_f}}$$

and

$$H_{\max} = |H_{cds}(s = j\omega) \Big|_{\omega = \frac{1}{\sqrt{L_{sys}C_f}}}$$

with the quality factor

$$Q = \frac{1}{R_{sys}} \sqrt{\frac{L_{sys}}{C_f}}, \text{ therefore, } H_{\max} = Q.$$

Similar procedures are relied on to plot $H_{fsys}(j\omega)$ as shown in Fig. 10.6B.

10.3.2.2 First-order damped high-pass filter

Fig. 10.7A shows the configuration of a first-order damped high-pass filter. A series connected resistance (R_f) is included to provide a damping characteristic.

Filter transfer functions are

$$H_f(s) = Z_f(s) = \frac{V_f(s)}{I_f(s)} = R_f + \frac{1}{sC_f}, \quad (10.6a)$$

$$H_{fsys}(s) = Z_{fsys}(s) = \frac{1}{\frac{1}{R_f + \frac{1}{sC_f}} + \frac{1}{sL_{sys}}}, \quad (10.6b)$$

$$H_{cds}(s) = H_{cds}(j\omega) = \frac{R_f + \frac{1}{j\omega C_f}}{R_f + \frac{1}{j\omega C_f} + j\omega L_{sys}}. \quad (10.6c)$$

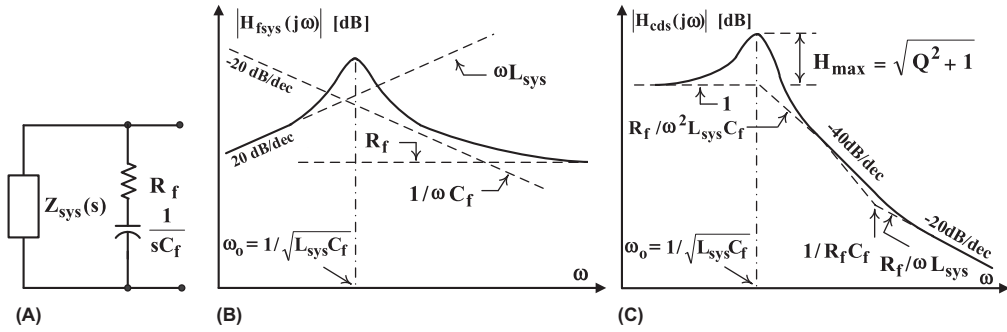


FIG. 10.7 First-order damped high-pass filter; (A) equivalent circuit, (B) filter impedance transfer function, (C) current-divider transfer function.

As discussed in the previous section, $H_{cds}(s)$ can be determined analytically (Fig. 10.7C):

- For low frequencies ($\omega \ll \frac{1}{\sqrt{L_{sys} C_f}} \Rightarrow \left| \frac{1}{j\omega C_f} \right| \gg |j\omega L_{sys}|$)

$$H_{cds}(j\omega) \approx \frac{1}{\frac{j\omega C_f}{1}} = 1.$$

- For moderate high frequencies ($\frac{1}{\sqrt{L_{sys} C_f}} < \omega < \frac{1}{R_f C_f} \Rightarrow \left| \frac{1}{j\omega C_f} \right| \ll |j\omega L_{sys}|$)

$$H_{cds}(j\omega) \approx \frac{1}{\frac{j\omega C_f}{j\omega L_{sys}}} = \frac{-1}{\omega^2 L_{sys} C_f} \Rightarrow \text{roll-off is } \frac{1}{\omega^2} \text{ or } -40 \text{ dB per decade.}$$

- For high frequencies ($\omega \gg 1/R_f C_f \Rightarrow R_f \gg |1/j\omega C_f|$ and $|j\omega L_{sys}| \gg |R_f + 1/j\omega C_f|$)

$$H_{cds}(j\omega) = \frac{R_f + \frac{1}{j\omega C_f}}{j\omega L_{sys} + \left(R_f + \frac{1}{j\omega C_f} \right)} \approx \frac{R_f}{j\omega L_{sys}} \Rightarrow \text{roll-off is } \frac{1}{\omega} \text{ or } -20 \text{ dB per decade.}$$

- If the system resistance is included ($Z_{sys}(s) = R_{sys} + sL_{sys}$), the maximum can be found as

$$H_{cds}(s = j\omega) \Big|_{\omega = \frac{1}{\sqrt{L_{sys} C_f}}} = 1 - j \frac{1}{R_{sys}} \sqrt{\frac{L_{sys}}{C_f}}$$

and

$$H_{\max} = |H_{cds}(s = j\omega) \Big|_{\omega = \frac{1}{\sqrt{L_{sys} C_f}}} = \sqrt{Q^2 + 1} \approx Q$$

with the quality factor $Q = \frac{1}{R_{sys}} \sqrt{\frac{L_{sys}}{C_f}}$.

Similar procedures are employed to plot $H_{f_{sys}}(j\omega)$ as illustrated in Fig. 10.7B. Comparison of Figs. 10.6 and 10.7 indicates the following:

- The damping resistance significantly limits the high-frequency performance (e.g., roll-off of high-frequency components is only $1/\omega$ or -20 dB per decade). Therefore, the damped filter is less desirable for telephone interference reduction applications.
- For parallel resonant conditions (e.g., cancelation of L_{sys} by C_f), if the resonant frequency falls on or near a critical harmonic frequency, a high-pass damping resistance (R_f) can be used to control and reduce the amplification. However, this will increase the fundamental frequency power loss and reduces the effectiveness of the high-pass attenuation above the frequency $1/(R_f C_f)$.

10.3.2.3 Second-order band-pass filter

The second-order band-pass filter (also called single-tuned or series-resonant filter) is a series combination of capacitor (C_f), inductor (L_f), and a small damping resistor (R_f), as depicted in Fig. 10.8A. The damping resistance is usually due to the internal resistance of either the inductor and/or capacitor. This filter is tuned to attenuate one single low-order harmonic. Typically, combinations of band-pass filters are used because the power system contains a number of dominant low-order harmonics.

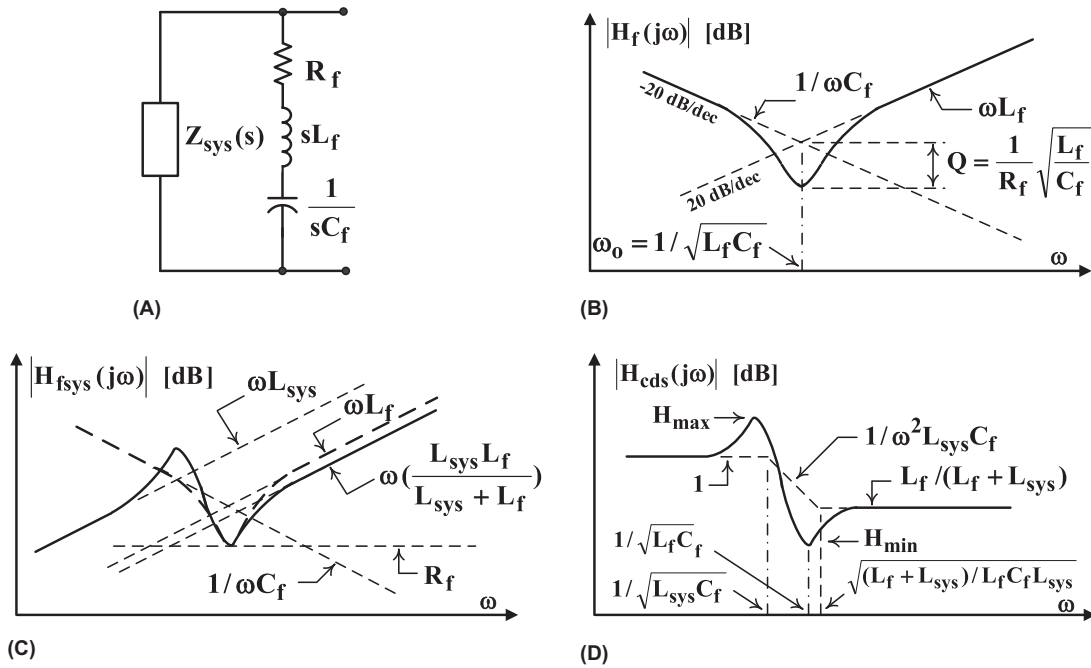


FIG. 10.8 Second-order band-pass filter; (A) equivalent circuit, (B) filter impedance transfer function, (C) filter system impedance transfer function with $L_{sys} > L_f$, (D) current-divider transfer function with $L_{sys} > L_f$.

Assuming a pure inductive system ($Z_{sys}(s) = sL_{sys}$), filter transfer functions can be derived using Eqs. (10.1a), (10.2a)

$$H_f(s) = Z_f(s) = \frac{V_f(s)}{I_f(s)} = R_f + sL_f + \frac{1}{sC_f} = \frac{A}{s} \left[1 + \frac{1}{Q} \left(\frac{s}{\omega_0} \right) + \left(\frac{s}{\omega_0} \right)^2 \right], \quad (10.7)$$

$$H_{cds}(s) = H_{cds}(j\omega) = \frac{R_f + j\omega L_f + \frac{1}{j\omega C_f}}{R_f + j\omega L_f + \frac{1}{j\omega C_f} + j\omega L_{sys}}, \quad (10.8)$$

where A is the gain. The filter quality factor (Q) and the series-resonant frequency (ω_0) are

$$Q = \frac{1}{R_f} \sqrt{\frac{L_f}{C_f}}, \quad (10.9a)$$

$$\omega_0 = \frac{1}{\sqrt{L_f C_f}}. \quad (10.9b)$$

For high-voltage applications, the filter current has a low rms magnitude and does not require large current carrying conductors; therefore, air-core inductors are regularly used and the filter quality factor is relatively large (e.g., $50 < Q < 150$). For low-voltage applications, gapped iron-core inductors and conductors with a large cross section are employed (e.g., $10 < Q < 50$).

The filter impedance transfer function $H_f(j\omega)$ is presented graphically as shown in Fig. 10.8B. It is evaluated at low and high frequencies to determine its asymptotes:

- At low frequencies ($\omega \ll \omega_0 \Rightarrow |1/j\omega C_f| \gg |R_{sys} + j\omega L_{sys}|$), the filter is dominantly capacitive and provides reactive power to the system. Therefore, $H_f(s) \approx 1/j\omega C_f$ and the roll-off of the low frequency components is -20 dB per decade.
- At high frequencies ($\omega \gg \omega_0 \Rightarrow |j\omega L_{sys}| \gg |R_f + 1/j\omega C_f|$), the filter is dominantly inductive and consumes reactive power with little influence on high-frequency distortions. Therefore, $H_f(s) \approx j\omega L_f$ and the roll-off of the high frequency components is $+20$ dB per decade.
- At the resonant frequency ($\omega = \omega_0$), the filter is entirely resistive, that is, $H_f(s) = R_f$. More attenuation is provided with lower filter resistances; however, there are practical limits to the value of R_f .

Similar procedures are applied to plot $H_{fsys}(j\omega)$ and $H_{cds}(j\omega)$ as illustrated in Fig. 10.8C and D, respectively. Note that the minima of the transfer functions (H_{min}) are very close to the series resonant frequency; however, due to the interaction between the capacitive reactance and the filter inductive reactance, H_{max} does not occur at the parallel resonant frequency formed by filter capacitance and system inductance. The derivatives of the transfer functions are usually evaluated numerically to determine frequencies where maxima occur.

The second-order band-pass (series resonant) filters are very popular and have many applications in power system design including transmission (e.g., connected in parallel at the AC terminals of HVDC converters), distribution (e.g., for detuning power factor capacitor banks to avoid parallel resonant frequencies), and utilization (e.g., across terminals of nonlinear loads).

10.3.2.4 Second-order damped band-pass filter

A popular topology of the second-order damped filter is shown in Fig. 10.9A where a bypass resistance (R_{bp}) is included across the inductor to provide attenuation for harmonic frequency components over a wide frequency range. The filter impedance transfer function can be expressed in normalized form

$$\begin{aligned} H_f(s) = Z_f(s) &= \frac{V_f(s)}{I_f(s)} = \frac{1}{\frac{1}{R_{bp}} + \frac{1}{R_f + sL_f}} + \frac{1}{sC_f} \\ &= \frac{A}{s\left(1 + \frac{s}{\omega_p}\right)} \left[1 + \frac{1}{Q_{bp}} \left(\frac{s}{\omega_o} \right) + \left(\frac{1}{\omega_o} \right)^2 \right], \end{aligned} \quad (10.10a)$$

where the gain A , the series resonant angular frequency ω_o , the quality factor Q_{bp} , and the pole frequency ω_p [12] for typical cases (whereby $R_f \ll R_{bp}$) are

$$A = \frac{1}{C_f}, \quad \omega_o = \sqrt{\frac{R_f + R_{bp}}{R_{bp}L_fC_f}} \approx \frac{1}{\sqrt{L_fC_f}}, \quad Q_{bp} = \frac{R_f + R_{bp}}{\omega_o(R_{bp}R_fC_f + L_f)}, \quad \omega_p = \frac{R_f + R_{bp}}{L_f} \approx \frac{R_{bp}}{L_f}. \quad (10.10b)$$

The series resistance R_f is determined by the desired quality factor of the second-order band-pass filter, and R_{bp} is selected to achieve the required high-pass response and series resonant attenuation. Typical values of the bypass quality factor are $0.5 < Q_{bp} < 2.0$. However,

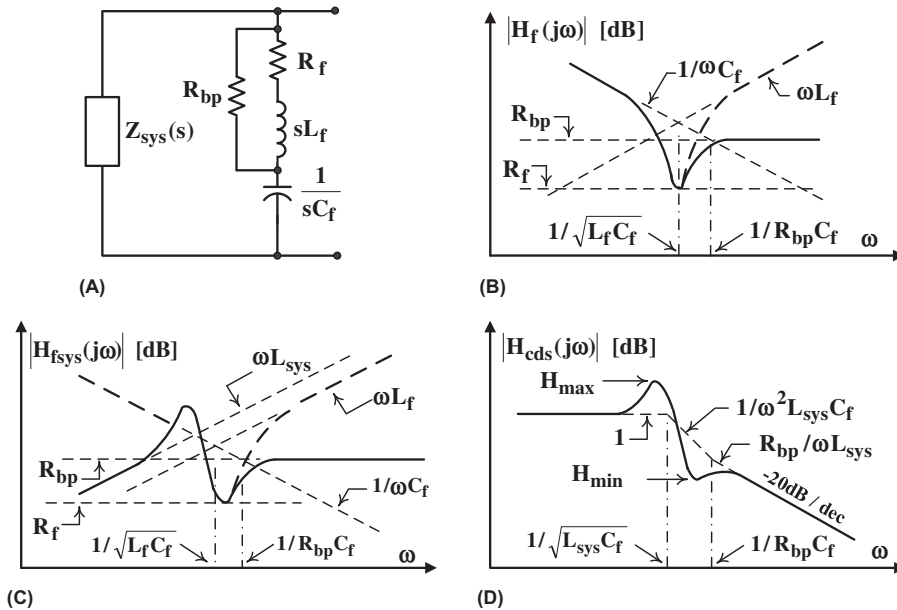


FIG. 10.9 Second-order damped band-pass filter; (A) equivalent circuit, (B) filter impedance transfer function, (C) filter system impedance transfer function, (D) current-divider transfer function.

there is a trade-off between larger values (e.g., more series resonant attenuation and less high-pass response) and smaller values (e.g., less series resonant attenuation and greater high-pass response) of the quality factor.

10.3.2.5 Composite filter

Higher order filters are constructed by increasing the number of storage elements (e.g., capacitors, inductors). However, their application in power systems is limited due to economic and reliability factors.

A third-order filter may be constructed by adding a series capacitance C_{f2} to the inductor bypass resistance (Fig. 10.10A) to limit I_{bp} and reduce the corresponding fundamental frequency losses or by including C_{f2} in series with L_f (Fig. 10.10B) and sizing it to form a series resonant branch at the fundamental frequency to reduce I_{bp} and to increase filter efficiency. If a second inductor L_{f2} is added to the circuit of Fig. 10.10A, a fourth-order double band-pass filter will be obtained, as shown in Fig. 10.10C.

A common type of an n th-order composite filter for power quality improvement is shown in Fig. 10.11. Several band-pass filters are connected in parallel and individually tuned to selected harmonic frequencies to provide compensation over a wide frequency range. The last branch is a high-pass filter attenuating high-order harmonics, which usually are a result of fast switching actions. Composite filters are only applied when even-order harmonics are small since a parallel resonance will occur between any two adjacent band-pass filter branches and cause amplification of the distortion in that frequency range. For example, composite filter systems with shunt branches tuned at the 5th and 7th harmonics will have a resonant frequency at about the 6th harmonic. The impedance transfer function of the n th-order composite filter is

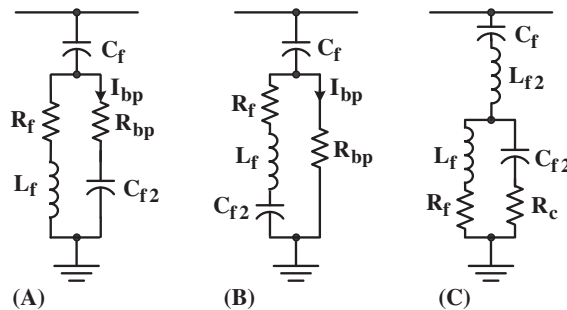


FIG. 10.10 Higher order filters; (A) and (B) third-order filters, (C) fourth-order filter.

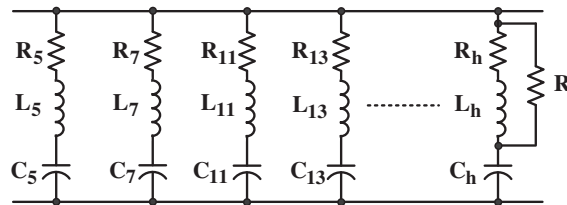


FIG. 10.11 N th-order composite filter.

$$H_f(s) = Z_f(s) = \frac{V_f(s)}{I_f(s)} = \frac{1}{\frac{1}{Z_f^{(5)}} + \frac{1}{Z_f^{(7)}} + \frac{1}{Z_f^{(11)}} + \dots + \frac{1}{Z_f^{(n)}}}. \quad (10.11)$$

It is time-consuming to derive the transfer functions of multiple-order filters in terms of factorized expressions of poles and zeros [12]. Therefore, numerical approaches are typically applied to plot the transfer function, and an iterative design procedure is used to optimize a filter configuration.

10.3.3 Classification of passive power filters

Passive filters cause harmonic currents to flow at their resonant frequency. Due to this resonance, the harmonic currents are attenuated in the power system through the LC filter circuits tuned to the harmonic orders that require filtering. In practice, a single passive filter is not adequate since there is more than one harmonic to be attenuated; therefore, a shunt or series passive composite filter unit (Fig. 10.12) is used. Passive filter units are generally designed to remove a few low-order harmonics, for example, the 5th, 7th, and 11th. Normally passive filter units employ three (or more for high-power applications such as HVDC) tuned filters, the first two being for the lowest dominant harmonics followed by a high-pass filter. In a shunt passive filter unit, two lossless LC components are connected in series to sink harmonic currents and all three (or more) filters are connected in parallel (Fig. 10.12A). However, in a series passive filter unit, two lossless LC components are connected in parallel for creating a harmonic dam and all three (or more) filters are connected in series, as shown in Fig. 10.12B.

The inductors should have high quality factors to reduce system losses and must not saturate in the entire current operating region. Capacitor values are decided by the required reactive power of the system, and then inductor values are calculated by tuning them for the particular harmonic frequencies. Resistor values are calculated by the corresponding quality factors based on the desired sharpness of the characteristics. Similarly, the resistance of the high-pass filter is computed based on the sharpness or attenuation of the higher order harmonics on the one hand, and reducing the losses on the other hand to achieve an optimum value for the quality factor. Passive filter units with shunt and series configurations are extensively used in single-phase (Fig. 10.13), three-phase three-wire (Fig. 10.14), and three-phase four-wire (Fig. 10.15) systems to improve the quality of power and mitigate harmonic currents and voltages.

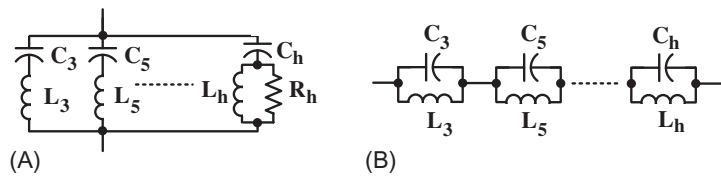


FIG. 10.12 Single-phase, typical passive filter unit employing a number of tuned filter units, the first $(l-1)$ units are tuned to the lowest dominant harmonic frequencies followed by a high-pass element; (A) shunt passive filter block, (B) series passive filter block.

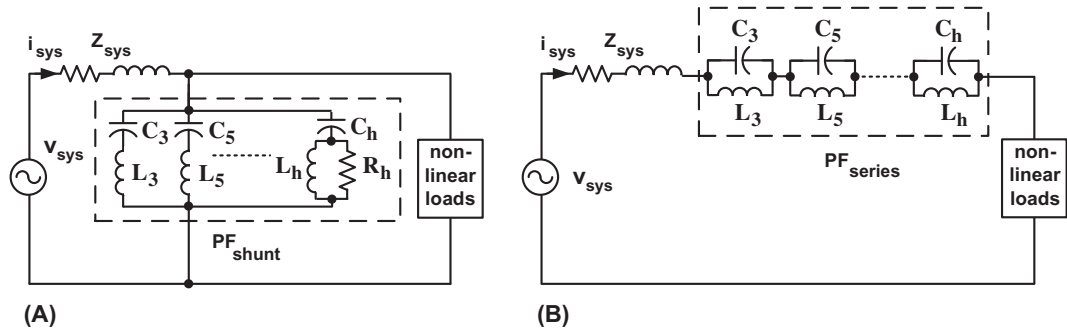


FIG. 10.13 Single-phase passive filter; (A) shunt configuration, (B) series configuration.

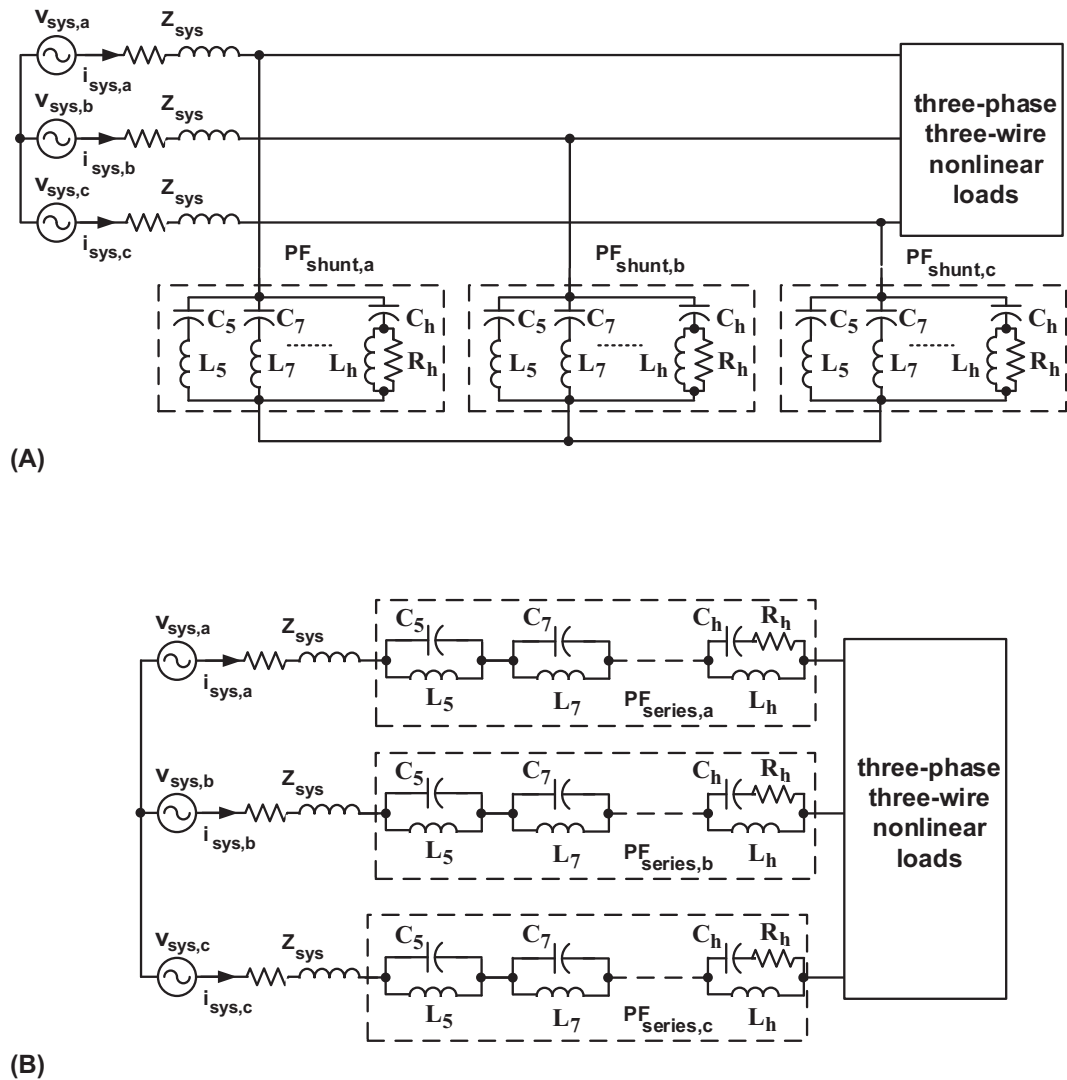


FIG. 10.14 Three-phase three-wire passive filter; (A) shunt configuration, (B) series configuration [4].

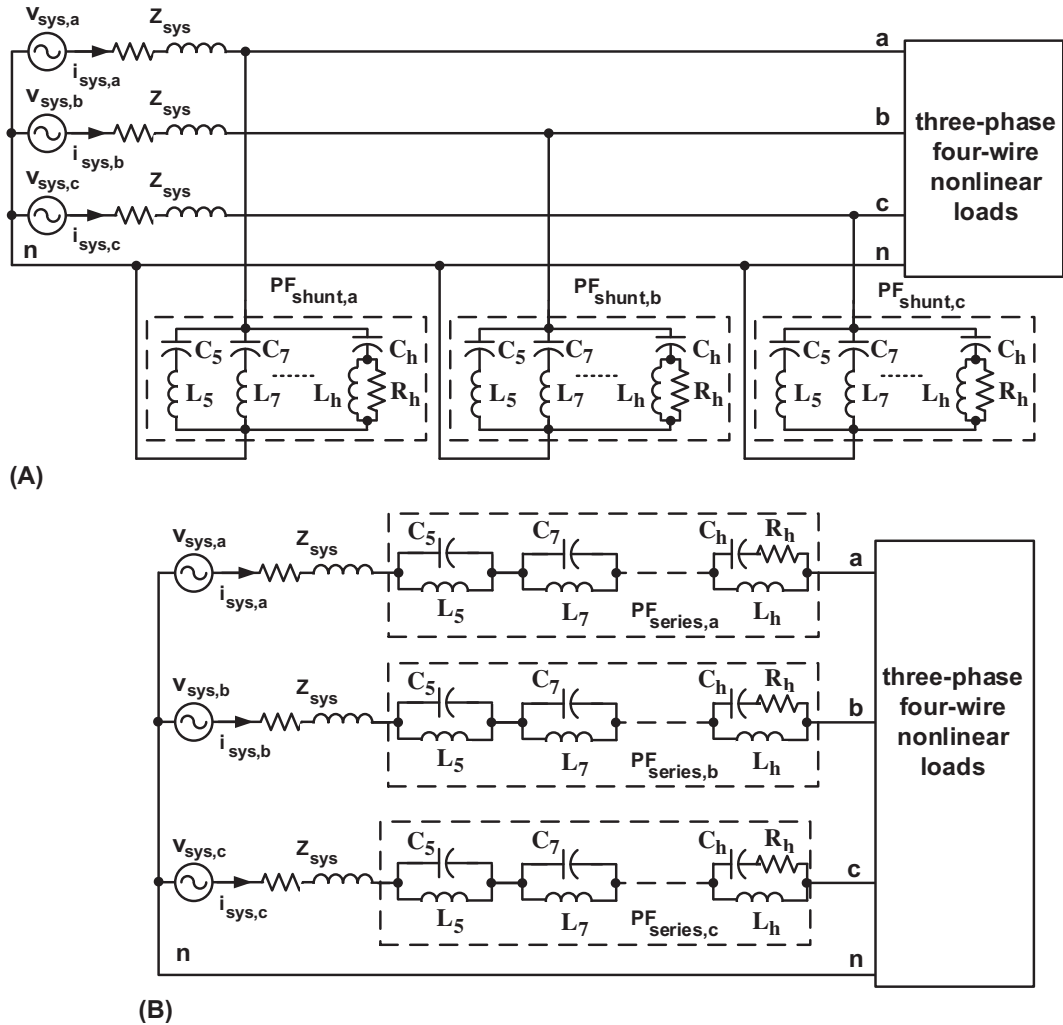


FIG. 10.15 Three-phase four-wire passive filter; (A) shunt configuration, (B) series configuration [4].

10.3.4 Potentials and limitations of passive power filters

Design, construction, and implementation of passive filters are straightforward and easier than their counterparts, for example, synchronous condensers and active filters. They have many advantages:

- They are robust, economical, and relatively inexpensive.
- They can be implemented in large sizes of MVAr and require low maintenance.
- They can provide a fast response time (e.g., one cycle or less with static voltage converter, SVC), which is essential for some power quality problems such as flickering voltage dips due to arc-furnace loads.

- Unlike rotating machines (e.g., synchronous motors or condensers) passive filters do not contribute to the short-circuit currents.
- In addition to power quality improvement, well-designed passive filters can be configured to provide power factor correction, reactive power compensation, or voltage support (e.g., on critical buses in case of a source outage) and reduce the starting impact and associated voltage drops due to large loads (e.g., large induction motors).

These advantages have resulted in broad applications of passive filters in different sectors of power systems. However, power engineers have also encountered some limitations and shortcomings of passive filters, which have called for alternative solutions such as active and hybrid filter systems. Some limitations of passive filters are as follows:

- Fixed compensation or harmonic mitigation, large size, and possible resonance with the supply system impedance at fundamental and/or other harmonic frequencies.
- Compensation is limited to a few orders of harmonics.
- Once installed, the tuned frequency and/or filter size cannot be changed easily.
- Unsatisfactory performance (e.g., detuning) may occur due to variations of filter parameters (caused by aging, deterioration, and temperature effects) and nonlinear load characteristics.
- Change in system operating conditions (e.g., inclusion of capacitors and/or other filters) has large influence on filter designs. Therefore, to be effective, filter impedance should be less than system impedance, which can become a problem for strong or stiff systems [2].
- Resonance between system and filter (e.g., shifted resonance frequency) for single- and double-tuned filters can cause an amplification of characteristics and noncharacteristic harmonic currents. Therefore, the designer has a limited choice in selecting tuned frequencies and ensuring adequate bandwidth between shifted frequencies and integer (even and odd) harmonics [2].
- Special protective and monitoring devices might be required to control switching surges, although filter reactors will reduce the magnitude of the switching inrush current magnitude and its associated high frequency.
- Stepless control (of reactive power, power factor correction, and voltage support) is not possible since the filter can either be switched on or switched off only.

10.3.5 Application Example 10.1: Hybrid passive filter design to improve the power quality of the IEEE 30-bus distribution system serving adjustable-speed drives

Consider the IEEE 23 kV, 30-bus distribution system [13,14] shown in Fig. E10.1.1. System transmission-line data, bus data, and capacitor data are provided in Tables E10.1.1–E10.1.3, respectively. To investigate the impact of large AC drive systems on the power quality of the distribution system, a PWM adjustable-speed drive (675 kW, 439 kVAr) and a variable-frequency drive (350 kW, 175 kVAr) are connected to buses 15 and 18, respectively. Table E10.1.4 depicts the spectra of the current harmonics injected by typical AC drives into the system. Use harmonic current sources to model the two nonlinear loads and utilize the decoupled harmonic power flow algorithm (Chapter 8, Section 8.5.1) to simulate the system.

Determine the total harmonic voltage distortion (THD_v) of the system and at the individual buses before and after the installation of the hybrid passive filter banks listed below. Plot the voltage and current waveforms at bus 15 before and after filtering.

- Two filter banks are placed at the terminals of nonlinear loads (buses 15 and 18). Each bank consists of a number of shunt-connected series resonance passive filters tuned at the respective dominant harmonic frequencies. Assume $R_f = 100\Omega$ and $L_f = 100\text{ mH}$ for all filters and compute the corresponding values of C_f .
- Repeat part *a* with one filter bank at bus 15.
- Repeat part *b* with one filter bank at bus 9.
- Compare the results of parts *a* to *c* and make comments regarding the impact of numbers and locations of filters on the power quality of the system.

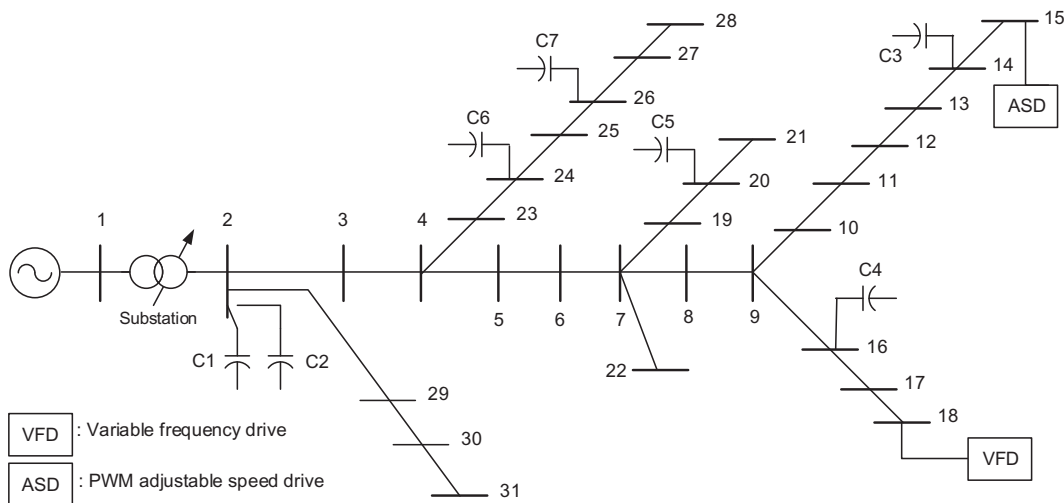


FIG. E10.1.1 IEEE 30-bus system with two nonlinear AC drives [13,14].

TABLE E10.1.1 Line data for the IEEE 30-bus system (base kV = 23 kV, base MVA = 100 MVA).

From bus	To bus	R (ohm)	X (ohm)	R (pu)	X (pu)
1	2	0.0021	0.0365	0.0004	0.0069
2	3	0.2788	0.0148	0.0527	0.0028
3	4	0.4438	0.4391	0.0839	0.0830
4	5	0.8639	0.7512	0.1633	0.1420
5	6	0.8639	0.7512	0.1633	0.1420
6	7	1.3738	0.7739	0.2597	0.1463

Continued

TABLE E10.1.1 Line data for the IEEE 30-bus system (base kV = 23 kV, base MVA = 100 MVA)—Cont'd

From bus	To bus	R (ohm)	X (ohm)	R (pu)	X (pu)
7	8	1.3738	0.7739	0.2597	0.1463
8	9	1.3738	0.7739	0.2597	0.1463
9	10	1.3738	0.7739	0.2597	0.1463
10	11	1.3738	0.7739	0.2597	0.1463
11	12	1.3738	0.7739	0.2597	0.1463
12	13	1.3738	0.7739	0.2597	0.1463
13	14	1.3738	0.7739	0.2597	0.1463
14	15	1.3738	0.7739	0.2597	0.1463
9	16	0.8639	0.7512	0.1633	0.1420
16	17	1.3738	0.7739	0.2597	0.1463
17	18	1.3738	0.7739	0.2597	0.1463
7	19	0.8639	0.7512	0.1633	0.1420
19	20	0.8639	0.7512	0.1633	0.1420
20	21	1.3738	0.7739	0.2597	0.1463
7	22	0.8639	0.7512	0.1633	0.1420
4	23	0.4438	0.4391	0.0839	0.0830
23	24	0.4438	0.4391	0.0839	0.0830
24	25	0.8639	0.7512	0.1633	0.1420
25	26	0.8639	0.7512	0.1633	0.1420
26	27	0.8639	0.7512	0.1633	0.1420
27	28	1.3738	0.7739	0.2597	0.1463
2	29	0.2788	0.0148	0.0527	0.0028
29	30	0.2788	0.0148	0.0527	0.0028
30	31	1.3738	0.7739	0.2597	0.1463

TABLE E10.1.2 Bus data for the IEEE 30-bus system (base kV = 23 kV, base MVA = 100 MVA).

Bus number	P (kW)	Q (kVAr)	P (pu)	Q (pu)
1 ^a	0	0	0	0
2	52.2	17.2	0.522	0.172
3	0	0	0	0
4	0	0	0	0
5	93.8	30.8	0.938	0.308

TABLE E10.1.2 Bus data for the IEEE 30-bus system (base kV = 23 kV, base MVA = 100 MVA)—Cont'd

Bus number	P (kW)	Q (kVAr)	P (pu)	Q (pu)
6	0	0	0	0
7	0	0	0	0
8	0	0	0	0
9	0	0	0	0
10	18.9	6.2	0.189	0.062
11	0	0	0	0
12	33.6	11	0.336	0.11
13	65.8	21.6	0.658	0.216
14	78.4	25.8	0.784	0.258
15	73	24	0.73	0.24
16	47.8	15.7	0.478	0.157
17	55	18.1	0.55	0.181
18	47.8	15.7	0.478	0.157
19	43.2	14.2	0.432	0.142
20	67.3	22.1	0.673	0.221
21	49.6	16.3	0.496	0.163
22	20.7	6.8	0.207	0.068
23	52.2	17.2	0.522	0.172
24	192	63.1	1.92	0.631
25	0	0	0	0
26	111.7	36.7	1.117	0.367
27	55	18.1	0.55	0.181
28	79.3	26.1	0.793	0.261
29	88.3	29	0.883	0.29
30	0	0	0	0
31	88.4	29	0.884	0.29

^a Swing bus.**TABLE E10.1.3** Capacitor data for the IEEE 30-bus system.

Capacitor	C1	C2	C3	C4	C5	C6	C7
Bus location	2	2	14	16	20	24	26
kVAr	900	600	600	600	300	900	900

TABLE E10.1.4 Typical harmonic spectrum of variable-frequency and PWM adjustable-speed drives [15].

Harmonic order h	Variable-frequency drive		PWM adjustable-speed drive	
	Magnitude (%)	Phase angle (degree)	Magnitude (%)	Phase angle (degree)
1	100	0	100	0
5	23.52	111	82.8	-135
7	6.08	109	77.5	69
11	4.57	-158	46.3	-62
13	4.2	-178	41.2	139
17	1.8	-94	14.2	9
19	1.37	-92	9.7	-155
23	0.75	-70	1.5	-158
25	0.56	-70	2.5	98
29	0.49	-20	0	0
31	0.54	7	0	0

Solution to Application Example 10.1: *Hybrid passive filter design to improve the power quality of the IEEE 30-bus distribution system serving adjustable-speed drives*

(a) Case A. Harmonic Compensation with Two Hybrid Passive Filter Banks at Buses 15 and 18.

Harmonic analysis before the installation of passive filters indicates a very high distortion of both voltage and current waveforms (Fig. E10.1.3 and Table E10.1.5) due to the two AC drives with relatively high power ratings. According to the IEEE-519 standard [10], the individual harmonic current injections at bus 15 (for 5th, 7th, 11th, 13th, 17th, and 19th harmonics) and bus 18 (for 5th, 7th, and 11th harmonics) are higher than the allowable level of 4%, and thus the electric utility has the right to disconnect (reject) these nonlinear loads. In addition, propagation of the injected harmonic currents has resulted in

TABLE E10.1.5 Summary of simulation results for the IEEE 30-bus system before and after the installation of filter(s).

	Before filtering		After filtering (Case A)	
	Minimum	Maximum	Minimum	Maximum
rms voltage	0.8382 pu at bus 15	1.0003 pu at bus 1	0.8295 pu at bus 15	1.0003 pu at bus 2
THD _v	1.8492% at bus 5	6.5089% at bus 15	1.0548% at bus 11	2.1691% at bus 18
System THD _v	3.1820%		1.4818%	
	After filtering (Case B)		After filtering (Case C)	
	Minimum	Maximum	Minimum	Maximum
rms voltage	0.8337 pu at bus 5	1.0001 pu at bus 2	0.8469 pu at bus 15	1.0002 pu at bus 2
THD _v	1.2520% at bus 22	1.8629% at bus 18	1.0938% at bus 6	5.8453% at bus 15
System THD _v	1.4950%		1.8707%	

unacceptable voltage THD_v levels (e.g., larger than 5%) at buses 12 to 15. Buses 11 and 16 to 18 are also experiencing relatively high THD_v of more than 4% (see Fig. E10.1.6).

The common procedure is to require the owners of nonlinear loads (at buses 15 and 18) to install passive filter banks at the terminals of the AC drives. Fig. E10.1.3 and Table E10.1.5 list the simulation results after the installation of the following two filter banks (Fig. E10.1.2), tuned at the dominant frequencies:

- **Filter Bank 1:** Passive filter (Fig. E10.1.2) consisting of five shunt branches tuned to the 5th, 7th, 11th, 13th, and 17th harmonic frequencies and installed at bus 15 with (Eq. 10.9b with $f_1 = 50\text{Hz}$)

$$R_f = 100 \Omega, \quad L_f^{(h)} = 100 \text{ mH (for all branches)}, \quad \omega_n^{(h)} = 2\pi hf = \frac{1}{\sqrt{L_f^{(h)} C_f^{(h)}}} \implies$$

$$C_f^{(5)} = 4.053 \mu\text{F}, \quad C_f^{(7)} = 2.068 \mu\text{F}, \quad C_f^{(11)} = 0.837 \mu\text{F}, \quad C_f^{(13)} = 0.680 \mu\text{F}, \quad C_f^{(17)} = 0.351 \mu\text{F}.$$

- **Filter Bank 2:** Passive filters (Fig. E10.1.2) with only two shunt branches tuned to the 5th and 7th harmonic frequencies and installed at bus 18 with (Eq. 10.9b with $f_1 = 50\text{Hz}$)

$$R_f = 100 \Omega, \quad L_f^{(h)} = 100 \text{ mH (for all branches)},$$

$$\omega_n^{(h)} = 2\pi hf = \frac{1}{\sqrt{L_f^{(h)} C_f^{(h)}}} \implies C_f^{(5)} = 4.053 \mu\text{F}, \quad C_f^{(7)} = 2.068 \mu\text{F}.$$

According to Table E10.1.5 the performance of the above filters is satisfactory: the maximum level of THD_v has dropped from 6.51 (at bus 15) to 2.17% (at bus 18) while the average system THD_v is within the permissible limits of the IEEE-519 standard [10].

- (b) **Case B. Harmonic Compensation with One Passive Filter Bank at Bus 15.** This case examines the possibility of meeting IEEE-519 [10] limits with only one filter bank. Simulation results before and after the installation of Filter Bank 1 at bus 15 are shown in Fig. E10.1.4 and Table E10.1.5. Therefore, by performing harmonic load flow analysis, it may be possible to eliminate unnecessary filter banks, and therefore reduce the overall cost of harmonic compensation.
- (c) **Case C. Harmonic Compensation with One Passive Filter Bank at Bus 9.** To show the impact of filter location on the overall power quality of the distribution system, Filter Bank 1 is installed between the two drive systems at bus 9. The resulting voltage and current waveforms are depicted in Fig. E10.1.5 and the corresponding THD_v levels are listed in Table E10.1.5. It is clear that improper placement of filters will not only deteriorate their performances, but might also favor harmonic propagation and cause additional power quality problems in other sectors of the system (e.g., in buses 10 to 15 and 16 to 18 for Case C).
- (d) **Comparison of Results.** A comparison of the THD_v levels as well as the rms voltage values before and after the placement of filters (Cases A, B, and C) is listed in Table E10.1.5 and shown in Fig. E10.1.6.

The decoupled harmonic power flow algorithm (Chapter 8, Section 8.5.1) is used to simulate the distribution system. Nonlinear AC drives are modeled with harmonic current sources. This approach is very practical and convenient for the analysis of large distorted industrial systems with inadequate information about the nonlinear loads (e.g., parameters and

ratings of AC drives). Simulation results of this application example indicate that the common approach of placing filter banks at the terminals of each AC drive system is not always the most economical solution. It might be possible to limit the overall system distortion, as well as the individual bus THD_v levels, with fewer filters. To do this, system conditions before and after compensation need to be carefully studied, which requires fast algorithms, as presented in this example.

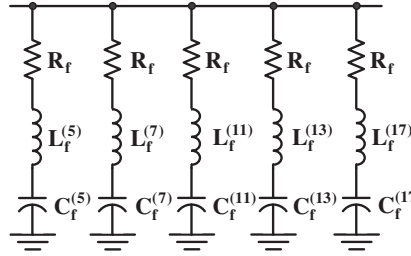


FIG. E10.1.2 Passive filter employing five series-resonance filter branches tuned at 5th, 7th, 11th, 13th, and 17th harmonics.

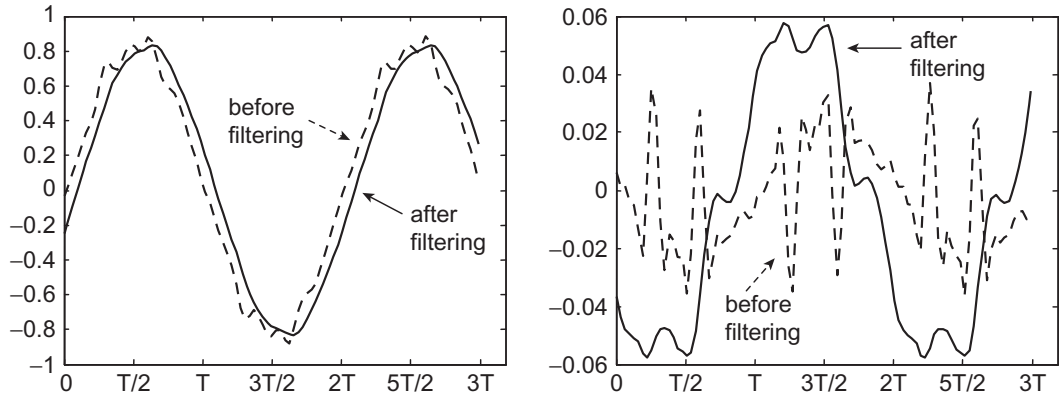


FIG. E10.1.3 Voltage and current waveforms at bus 15 before and after the installation of two filter banks at buses 15 and 18 (Case A).

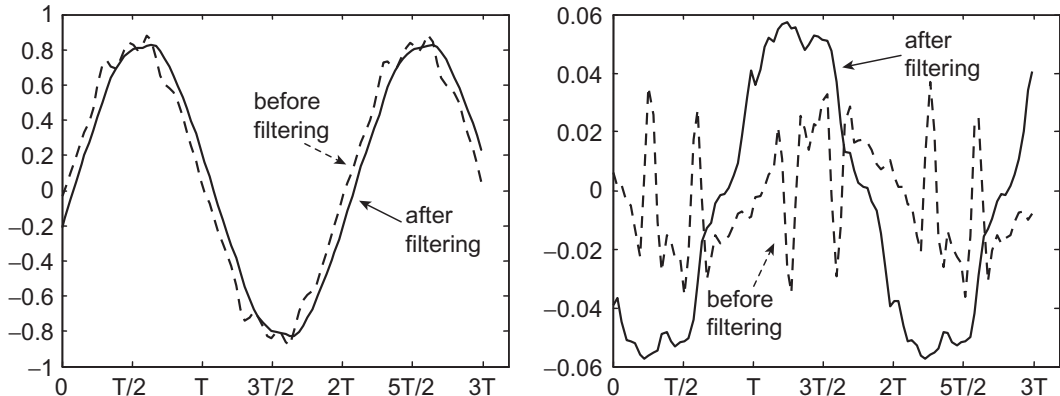


FIG. E10.1.4 Voltage and current waveforms at bus 15 before and after the installation of one filter bank at bus 15 (Case B).

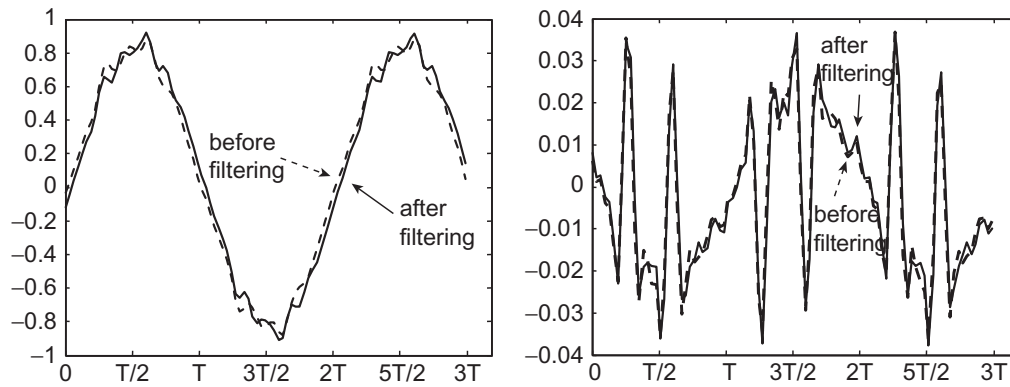


FIG. E10.1.5 Voltage and current waveforms at bus 15 before and after the installation of one filter bank at bus 9 (Case C).

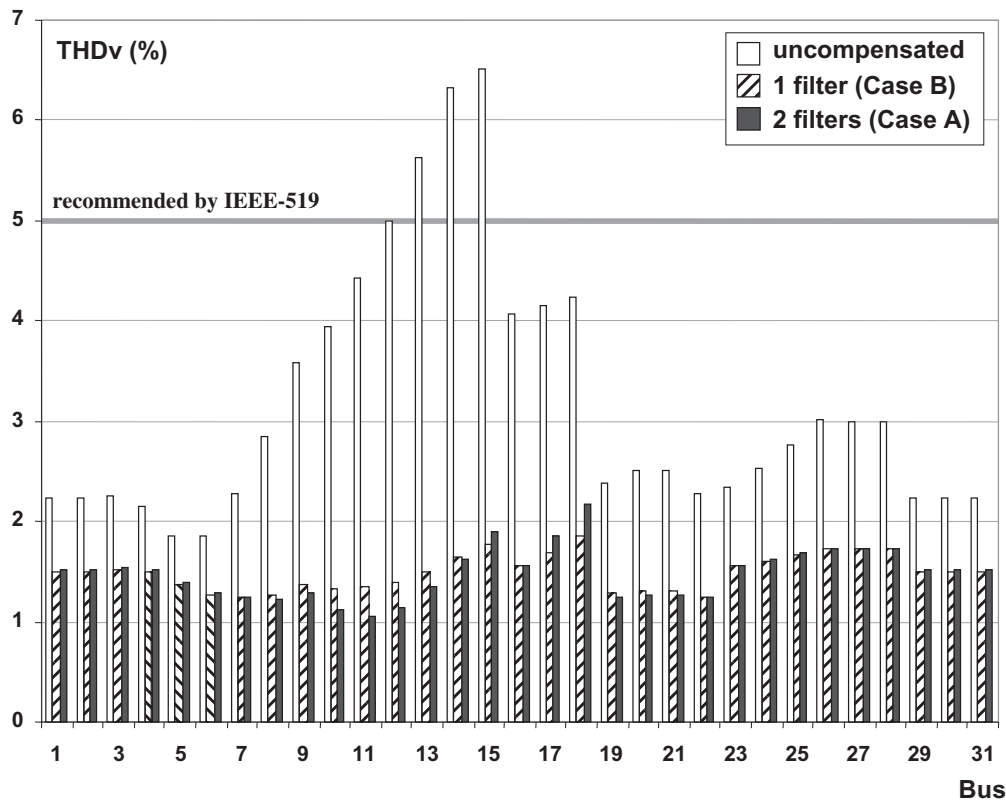


FIG. E10.1.6 Comparison of THD_v levels of the IEEE 30-bus system before and after the installation of one (Case B) and two (Case A) filter banks [15].

10.4 Active filters

Active filters (AFs) are feasible alternatives to passive filters (PFs). For applications where the system configuration and/or the harmonic spectra of nonlinear loads (e.g., orders, magnitudes, and phase angles) change, active elements may be used instead of the passive components to provide dynamic compensation.

An active filter is implemented when the order numbers of harmonic currents are varying. This may be due to the nature of nonlinear loads injecting time-dependent harmonic spectra (e.g., variable-speed drives) or may be caused by a change in the system configuration. The structure of an active filter may be that of series or parallel architectures. The proper structure for implementation depends on the types of harmonic sources in the power system and the effects that different filter solutions would cause to the overall system performance. Active filters rely on active power conditioning to compensate undesirable harmonic currents replacing a portion of the distorted current wave stemming from the nonlinear load. This is achieved by producing harmonic components of equal amplitude but opposite phase angles, which cancel the injected harmonic components of the nonlinear loads. The main advantage of active filters over passive ones is their fine response to changing loads and harmonic variations. In addition, a single active filter can compensate more than one harmonic, and improve or mitigate other power quality problems such as flicker.

Active filters are expensive compared with their passive counterparts and are not feasible for small facilities. The main drawback of active filters is that their rating is sometimes very close to the load (up to 80% in some typical applications), and thus it becomes a costly option for power quality improvement in a number of situations. Moreover, a single active filter might not provide a complete solution in many practical applications due to the presence of both voltage and current quality problems. For such cases, a more complicated filter design consisting of two or three passive and/or active filters (called a hybrid filter) is recommended as discussed in [Section 10.5](#).

10.4.1 Classification of active power filters based on topology and supply system

Active filters have become a mature technology for harmonic and reactive power compensation of single- and three-phase electric AC power networks with high penetration of nonlinear loads. This section classifies active filters based on the supply system taking into consideration their (shunt or/and series) topology. Therefore, there are six types of shunt and series connected active filters for single-phase two-wire, three-phase three-wire, and three-phase four-wire AC networks, as shown in [Figs. 10.16–10.18](#), respectively. Composite filters consisting of two or more active filters are realized as hybrid filters and are discussed in [Section 10.5](#).

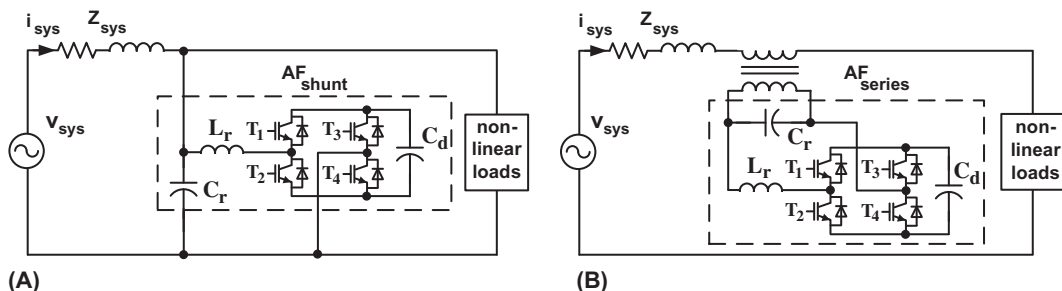


FIG. 10.16 Single-phase active filter (AF); (A) shunt configuration, (B) series configuration [4].

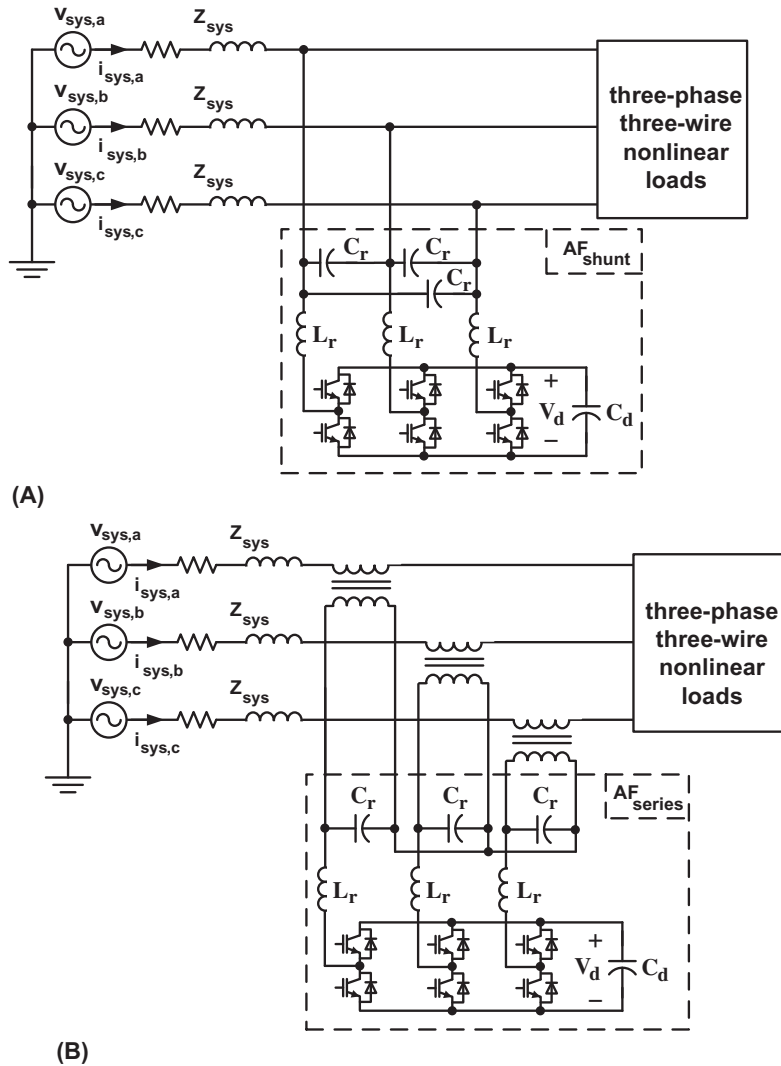


FIG. 10.17 Three-phase three-wire active filter; (A) shunt configuration, (B) series configuration.

10.4.2 Classification of active power filters based on power rating

Active filters can also be classified according to their power rating and speed of response required for their application in a compensated system [5]:

- **Low-Power Active Filters** (with power ratings below 100kVA and response times of about $10\mu s$ to 10ms) are mainly used in residential areas, small to medium-sized factories, electric drives, commercial buildings, and hospitals. These applications require sophisticated dynamic filtering techniques and include single-phase and three-phase systems.

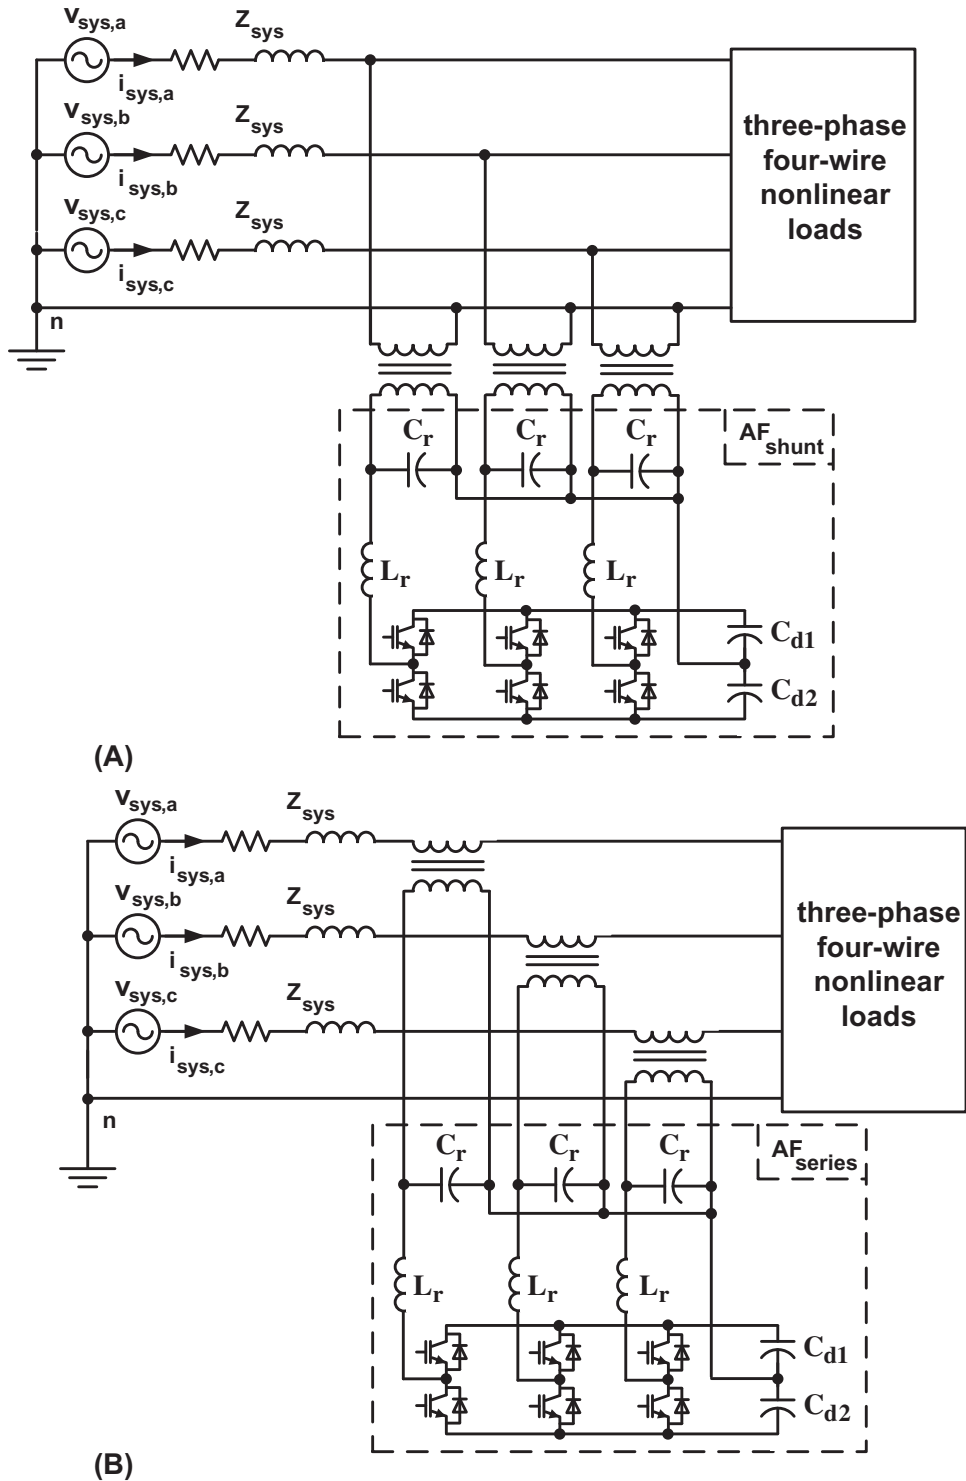


FIG. 10.18 Three-phase four-wire active filter; (A) shunt configuration, (B) series configuration [4].

- Single-phase active filters are mainly available for low power ratings, and hence can be operated at relatively high frequencies leading to improved performance and lower prices. They have many retrofit applications such as commercial and educational buildings with many computer loads.
- For balanced three-phase low power applications a three-phase filter can be used. However, for unbalanced load currents or unsymmetrical supply voltages, especially in three-phase four-wire distribution systems, three single-phase filters or a hybrid filter are usually required.
- **Medium-Power Active Filters** (with power ratings of about 100 kVA to 10 MVA and response times of about 100 ms to 1 s) are mainly associated with medium- to high-voltage distribution systems and high-power, high-voltage drive systems, where the effect of phase imbalance is negligible. Due to economic concerns and problems associated with high-voltage systems (isolation, series or parallel connections of switches, etc.), these filters are usually designed to perform harmonic cancelation, and reactive-power compensation is not included in their control algorithms. At high voltage, other approaches of reactive power compensation such as capacitive or inductive static compensators, synchronous condensers, controlled LC filters, tunable harmonic filters, line-commutated thyristor converters, and VAR compensators should be considered.
- **High-Power Active Filters** (with power ratings above 10 MVA and response times of tens of seconds) are mainly associated with power-transmission grids, ultrahigh-power DC drives, and HVDC. Due to the availability of high switching-frequency power devices with high-voltage and high-power ratings, these filters are not cost effective. It is possible to use series-parallel combinations of low-power switches; however, there are many implementation issues and cost considerations. Fortunately, there are not too many power quality problems associated with high-voltage power systems.

10.5 Hybrid power filters

A major drawback of active filters is their high rating (e.g., up to 80% of the nonlinear load in some practical applications) and associated costs. In addition, a single active filter cannot offer a complete solution for the simultaneous compensation of both voltage and current power quality disturbances. Due to higher ratings and cost considerations, the acceptability of active filters has been limited in practical applications. In response to these factors, different structures of hybrid filters have evolved as a cost-effective solution for the compensation of nonlinear loads. Hybrid filters are found to be more effective in providing complete compensation of various types of nonlinear loads.

10.5.1 Classification of hybrid filters

Hybrid filters combine a number of passive and/or active filters and their structure may be of series or parallel topology or a combination of the two. They can be installed in single-phase, three-phase three-wire, and three-phase four-wire distorted systems. The passive circuit performs basic filtering action at the dominant harmonic frequencies (e.g., 5th or 7th)

whereas the active elements, through precise control, mitigate higher harmonics. This will effectively reduce the overall size and cost of active filtering.

In the literature, there are different classifications of active and hybrid filters based on power rating, supply system (e.g., number of wires and phases), topology (e.g., shunt and/or series connection), number of (passive and active) elements, speed of response, power circuit configuration, system parameter(s) to be compensated, control approach, and reference-signal estimation technique. In this book, classification of hybrid filters is based on the supply system with the topology as a further subclassification. If there are a maximum of three (passive and active) filters in each phase, then 156 types of hybrid filters are expected for single-phase two-wire systems, three-phase three-wire, and three-phase four-wire AC networks. Figs. 10.19–10.25 show the 52 types of hybrid filter topologies for single-phase

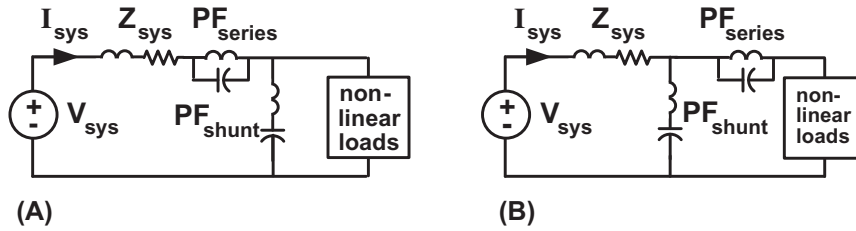


FIG. 10.19 Single-phase hybrid filter (including two passive filters) as a combination of (A) passive-series and passive-shunt filters, (B) passive-shunt and passive-series filters [4].

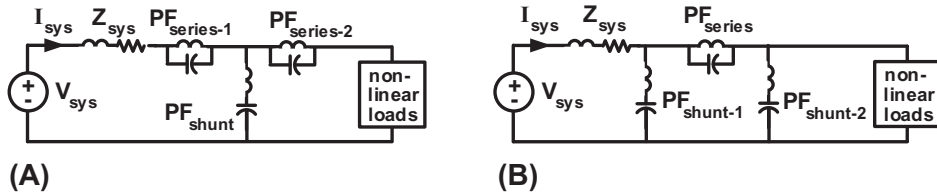


FIG. 10.20 Single-phase hybrid filter (including three passive filters) as a combination of (A) passive-series, passive-shunt, and passive-series filters, (B) passive-shunt, passive-series, and passive-shunt filters [4].

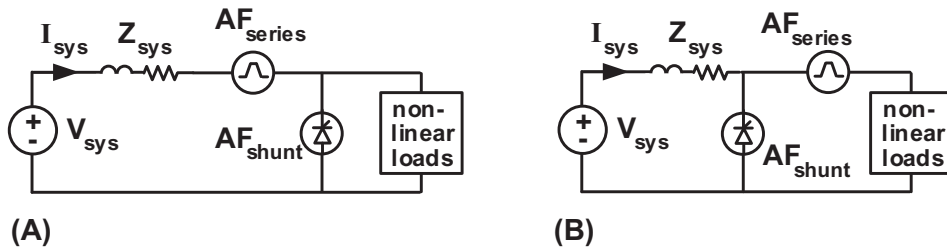


FIG. 10.21 Single-phase hybrid filter (including two active filters) as a combination of (A) active-series and active-shunt filters, (B) active-shunt and active-series filters [4].

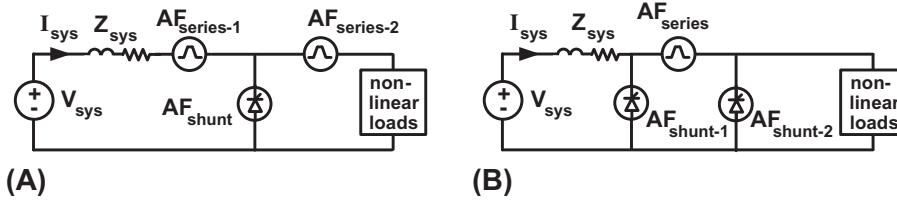


FIG. 10.22 Single-phase hybrid filter (including three active filters) as a combination of (A) active-series, active-shunt, and active-series filters, (B) active-shunt, active-series, and active-shunt filters [4].

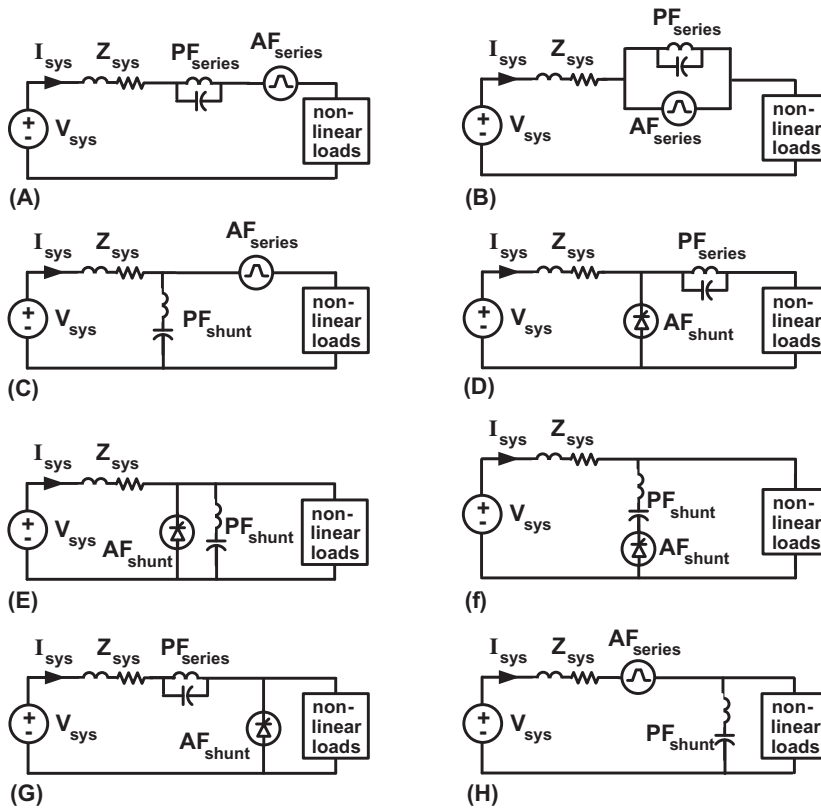


FIG. 10.23 Single-phase hybrid filter (including one passive and one active filter) as a combination of (A) series-connected passive-series and active-series filters, (B) parallel-connected passive-series and active-series filters, (C) passive-shunt and active-series filters, (D) active-shunt and passive-series filters, (E) parallel-connected active-shunt and passive-shunt filters, (F) series-connected passive-shunt and active-shunt filters, (G) passive-series and active-shunt filters, (H) active-series and passive-shunt filters [4].

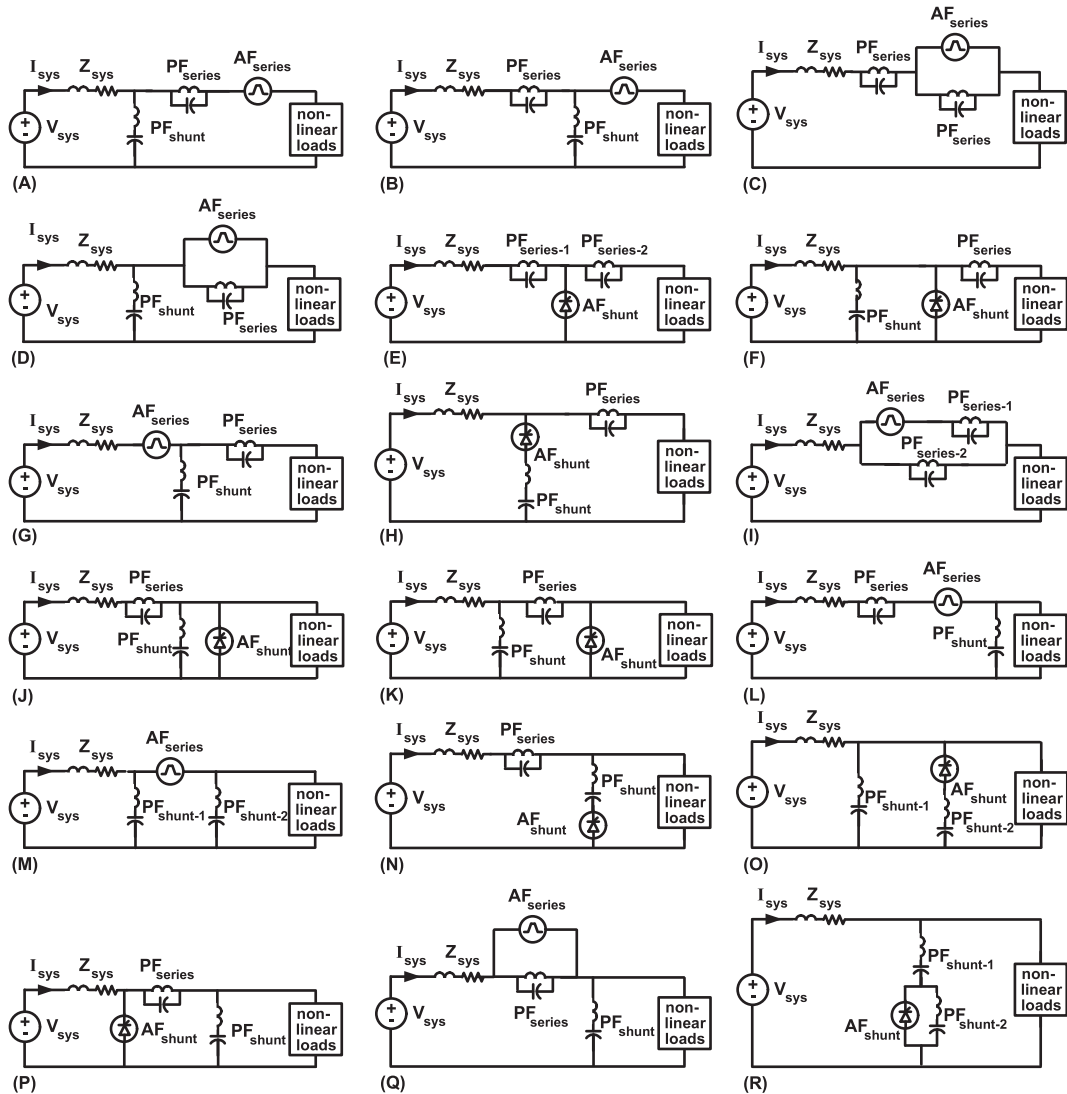


FIG. 10.24 Single-phase hybrid filter (including two passive and one active filter) as a combination of (A) passive-shunt, passive-series, and active-series filters, (B) passive-series, passive shunt, and active-series filters, (C) passive-series in series with parallel-connected active-series and passive-series filters, (D) passive-shunt and parallel-connected active-series and passive-series filters, (E) passive-series, active-shunt, and passive-series filters, (F) parallel-connected passive-shunt with active-shunt and passive-series filters, (G) active-series, passive-shunt, and passive-series filters, (H) series-connected passive-shunt with active-series and passive-series filters, (I) series-connected passive-series with active-series in parallel with passive-series filters, (J) passive-series and parallel-connected passive-shunt with active-shunt filters, (K) passive-shunt, passive-series, and active-shunt filters, (L) series-connected passive-series with active-series and passive-shunt filters, (M) passive-shunt, active-series, and passive-shunt filters, (N) passive-series and series-connected passive-shunt with active-shunt filters, (O) passive-shunt and series-connected active-shunt with passive-shunt filters, (P) active-shunt, passive-series, and passive-shunt filters, (Q) parallel-connected active-series with passive-series and passive-shunt filters, (R) passive-shunt and parallel-connected passive-shunt with active-series filters [4].

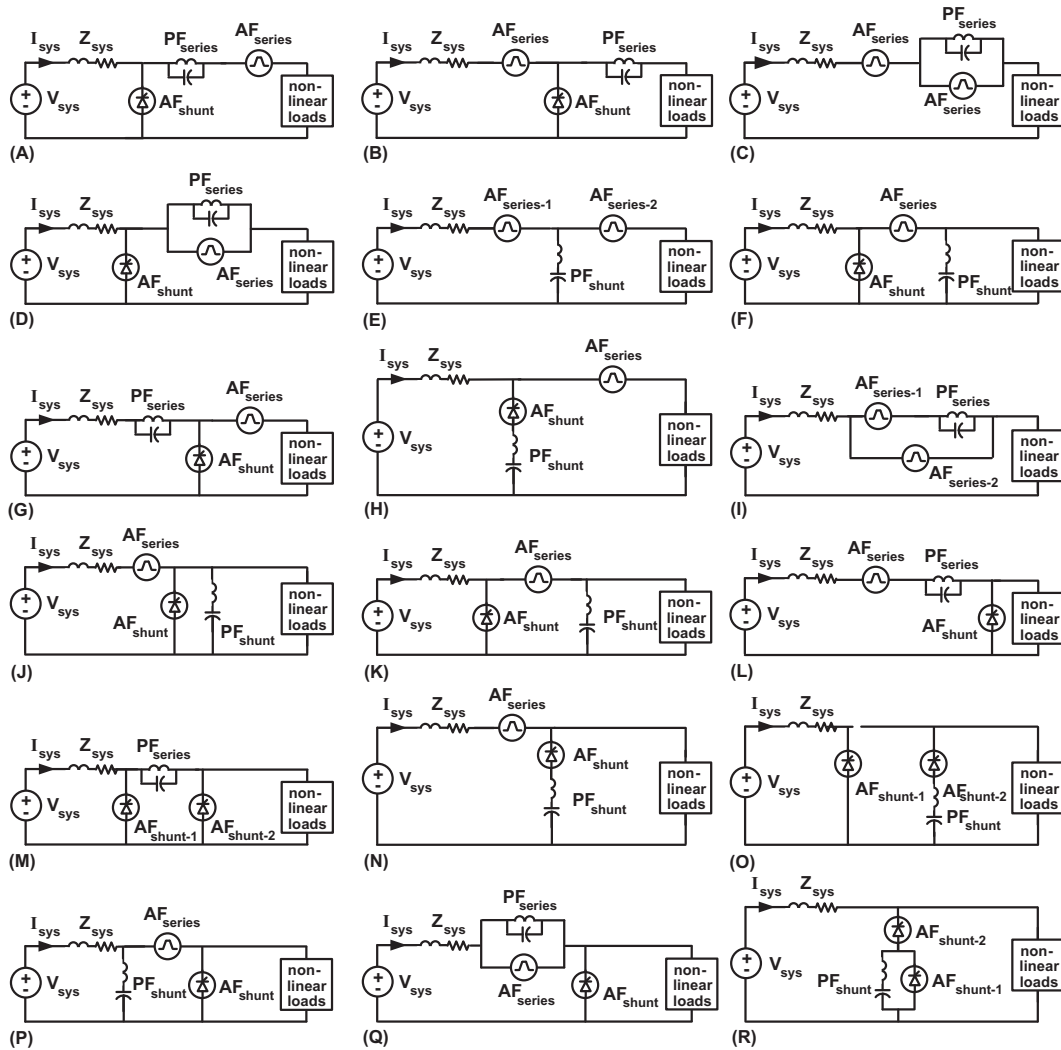


FIG. 10.25 Single-phase hybrid filter (including one passive and two active filters) as a combination of (A) active-shunt, passive-series, and active-series filters, (B) active-series, active-shunt, and passive-series filters, (C) active-series, parallel-connected passive-series with active-series filters, (D) active-shunt, parallel-connected passive-series with active-series filters, (E) active-series, passive-shunt, and active-series filters, (F) active-shunt, active-series, and passive-shunt filters, (G) passive-series, active-shunt, and active-series filters, (H) series-connected active-shunt with passive-shunt and active-series filters, (I) active-series in parallel with passive-series and active-series filters, (J) active-series, active-shunt and passive-shunt filters, (K) active-shunt, active-series, and passive-shunt filters, (L) active-series, passive-series, and active-shunt filters, (M) active-shunt, passive-series, and active-shunt filters, (N) active-series, series-connected active-shunt, and passive-shunt filters, (O) active-shunt, series-connected active-shunt and passive-shunt filters, (P) passive-shunt, active-series, and active-shunt filters, (Q) parallel-connected passive-series with active-series and active-shunt filters, (R) active-shunt in series with parallel-connected active-shunt and passive-shunt filters [4].

two-wire systems. These topologies can be easily extended to illustrate the other 104 types of hybrid filters for three-phase systems.

Figs. 10.19 and 10.20 depict hybrid filters consisting of two and three passive filters, respectively, whereas Figs. 10.21 and 10.22 show similar configurations for two and three active filters. There are 8 topologies of hybrid filters consisting of one passive and one active filter as shown in Fig. 10.23. There are many possible combinations if three filters are combined. Fig. 10.24 illustrates the 18 possible hybrid filters consisting of two passive filters and one active filter. There are also 18 possible hybrid filters consisting of one passive filter and two active filters as represented in Fig. 10.25.

The rating of active filters is reduced through augmenting them by passive filters to form hybrid filters. This reduces the overall cost and in many cases provides better compensation than when either passive or active filters alone are employed. However, a more efficient approach is to combine shunt and series active filters, which can provide both current and voltage compensation. This (active-active) hybrid filter is known as a unified power quality conditioner (UPQC) or universal active filter (Fig. 10.21). Therefore, the development in hybrid filter technology began from the arrangement of (two or three) passive filters (Figs. 10.19 and 10.20) and progressed to the more effective combination of a number of shunt and/or series active filters (Figs. 10.21–10.25), yielding a cost-effective solution and complete compensation.

Hybrid filters are usually considered a cost-effective option for power quality improvement, compensation of the poor power quality effects due to nonlinear loads, or to provide a sinusoidal AC supply to sensitive loads. There are a large number of low-power nonlinear loads in a single-phase power system, such as ovens, air conditioners, fluorescent and LED lamps, TVs, computers, power supplies, printers, copiers, and battery chargers. Low-cost harmonic compensation of these residential nonlinear loads can be achieved using passive filters (Figs. 10.19 and 10.20). Compensation of single-phase high-power traction systems are effectively performed with hybrid filters (Figs. 10.21 and 10.22). Three-phase three-wire power systems are supplying a large number of nonlinear loads with moderate power levels—such as adjustable-speed drives—up to large power levels associated with HVDC transmission systems. These loads can be compensated using either a group of passive filters (e.g., a passive filter unit as shown in Fig. 10.13A) or a combination of active and passive filters of different configurations (Figs. 10.23–10.25) depending on the properties of the AC system.

10.6 Block diagram of active filters

The generalized block diagram of shunt-connected active filters is shown in Fig. 10.26. It consists of the following basic elements [6]:

- **Sensors and transformers** (not shown) are used to measure waveforms and inject compensation signals. Nonsinusoidal voltage and current waveforms are sensed via potential transformers (PTs), current transformers (CTs), Hall-effect sensors, and isolation amplifiers (e.g., optocouplers). Connection transformers in shunt and series with the power system are employed to inject the compensation current (I_{APF} , see Fig. 10.26) and voltage (V_{APF}), respectively.

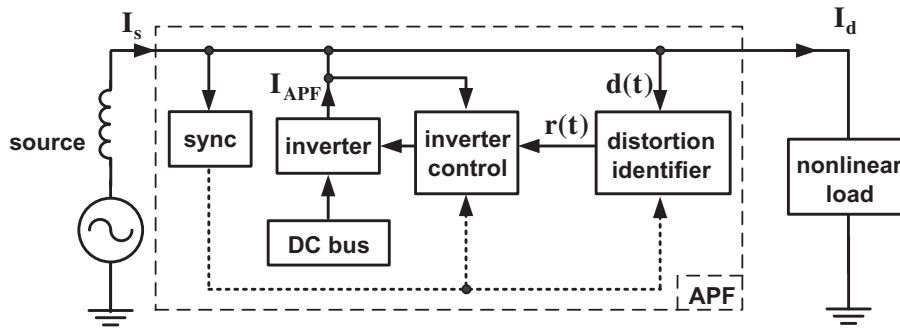


FIG. 10.26 Control diagram of shunt-connected active power filters (APFs) [6]. For series-connected active filters, the inverter injects the series voltage V_{APF} via a series-connected transformer. For hybrid filters, two inverters are used for the simultaneous injection of I_{APF} and V_{APF} .

- **Distortion identifier** is a signal-processing function that takes the measured distorted waveform, $d(t)$ (e.g., line current or phase voltage) and generates a reference waveform, $r(t)$, to reduce the distortion.
- **Inverter** is a power converter (with the corresponding coupling inductance and transformer) that reproduces the reference waveform with appropriate amplitude for shunt (I_{APF}) and/or series (V_{APF}) active filtering.
- **Inverter controller** is usually a pulse-width modulator with local current control loop to ensure I_{APF} (and/or V_{APF}) tracks $r(t)$.
- **Synchronizer** is a signal-processing block (based on phase-lock-loop techniques) to ensure compensation waveforms (I_{APF} and/or V_{APF}) are correctly synchronized with the power system voltage. Certain control methods do not require this block.
- **DC bus** is an energy storage device that supplies the fluctuating instantaneous power demand of the inverter.

The control diagram of the series-connected active filter is identical to that given in Fig. 10.26; however, the inverter injects the series voltage V_{APF} via a series-connected transformer. For the implementation of hybrid filters, the control diagram of Fig. 10.26 can be expanded to include both shunt (I_{APF}) and series (V_{APF}) compensation. Detailed implementation and control of a hybrid filter with active shunt and series converters (UPQC) is presented in Sections 10.8 to 10.13.

The inverter block represents either a voltage-source inverter (VSI) or a current-source inverter (CSI). The VSI configuration includes an AC inductor L_r along with optional small AC capacitor C_r to form a ripple filter (for eliminating the switching ripple and improving the voltage profile) and a self-supporting DC bus with capacitor C_d . The CSI arrangement uses inductive energy storage at the DC link with current control and the shunt AC capacitors form a filter element. However, VSI structures have more advantages (lower losses, smaller size, less noise, etc.) and are usually preferred. Depending on the supply system, the inverter may be a single-phase two-arm bridge, a three-phase three-arm bridge and a three-phase four-arm bridge, or a mid-point or three single-phase (e.g., for a four-wire system) bridge.

The inverter can be connected directly in series with the power system in single phase (to reduce the cost) or through connection transformers (usually with a higher number of turns on the inverter side) to act as a high active-impedance blocking harmonic current and representing a low impedance for the fundamental current. In the same manner, the inverter may be connected in shunt either directly to the power system or through step-down transformers to act as an adjustable sink for harmonic currents.

The solid-state switching device is a MOSFET (metal oxide semiconductor field-effect transistor) for low power ratings, an IGBT (insulated-gate bipolar transistor) for medium power ratings, and a GTO (gate turn-off) thyristor for very high power ratings. These switching devices are manufactured in modular form (with gating, protection, and interfacing elements) to reduce the overall size, cost, and weight.

An essential component of the active filter is the control unit, which consists of a microprocessor. The voltage and current signals are sensed using potential transformers (PTs), current transformers (CTs), Hall-effect sensors, and isolation amplifiers. The control approach (Section 10.7) is implemented online by the microprocessor after receiving input signals through analog-to-digital (A/D) converter channels, phase-lock loop (PLL), and synchronized interrupt signals. All control tasks are carried out concurrently in specially designed processors at a very low cost.

10.7 Control of filters

The initial stage for any filtering process is the selection of the filter configuration. Depending on the nature of the distortion and system structure, as well as the required precision and speed of the compensation, an appropriate filter configuration (e.g., shunt, series, passive, active, or hybrid, as presented in Sections 10.2 to 10.5) is selected. Implementation of passive filters is relatively straightforward, as discussed in Section 10.3. This section presents a classification of control approaches for active and hybrid power filters and identifies their performance strengths.

The control configuration of Fig. 10.26 is open loop because load current I_d (not supply current I_s) is measured, load distortion is identified, and a correction signal is fed-forward to compensate the distortion in the supply current. The open-loop approach has some limitations including inadequate correction (due to errors in calculations and/or inaccuracy in current injection), unstable compensation (e.g., injected current perturbs load and/or source currents such that the distortion is changed), and processing delay (e.g., slow transient response). In contrast, the closed-loop control approach (e.g., measuring the supply current I_s) identifies remaining distortion and updates the injected compensation signal.

The choice of control strategy strongly depends on the required compensation response. Active and hybrid filters have the capability to correct a wide range of power quality problems:

- **Harmonic distortion** is taken as a core function of all filter designs. Shunt and series filters are capable of compensating current and voltage distortion, respectively, whereas hybrid filters (with shunt and series components) can correct both current and voltage waveform distortions.

- **Reactive power control** at fundamental frequency is often included in the performance of active filters. It is possible to include harmonic reactive power control with more sophisticated control strategies.
- **Correction of negative- and zero-sequence components** at fundamental frequency due to imbalance and neutral current may be compensated with three-wire and four-wire three-phase hybrid active filters, respectively.
- **Flicker** (e.g., low irregular modulation of power flow) can also be compensated with active filters.
- **Voltage sag and voltage swell** are usually considered to be compensated by a dynamic voltage restorer (DVR); however, sophisticated hybrid active filters such as the UPQC (Fig. 10.21 and Sections 10.8 to 10.13) can perform these types of compensations as well.

It is possible to consider and include all various types of power quality problems by adding the corresponding control functions to the basic active filter converter circuit; however, power rating and cost factors will become important and will raise challenging issues, especially in high-power applications.

There are three stages for the implementation of active (or hybrid) power filters (Fig. 10.26) [8]:

- **Stage One: Measurement of distorted waveform $d(t)$.** For implementation and monitoring of the control algorithm, as well as recording various performance indices (e.g., either/both voltage or/and current THDs, power factor, active and reactive power), instantaneous distorted voltage and/or current waveforms need to be measured. This is done using voltage transformers (PTs), current transformers (CTs), or Hall-effect sensors including isolation amplifiers. Measured waveforms are filtered to avoid associated noise problems.
- **Stage Two: Derivation of reference signal $r(t)$.** Measured distorted waveforms (consisting of fundamental component and distortion) are used to derive the reference signal (e.g., distortion components) for the inverter. This is done by the distortion identifier block. There are three main control approaches for the separation of the reference signal from the measured waveform, as discussed in Sections 10.7.1 to 10.7.3. The selected control method affects the rating and performance of the filter.
- **Stage Three: Generation of compensation signal I_{APF} (or V_{APF}).** The inverter reproduces the reference waveform with appropriate amplitude for both/either shunt (I_{APF}) and/or series (V_{APF}) active filtering. These compensation signals are injected into the system to perform the required compensation task. The inverter control block uses reference-following techniques (discussed in Section 10.7.5) to generate the gating signals for the solid-state switches of the inverter.

Shunt active filters are often placed in low-voltage distribution networks, where there is usually a considerable amount of voltage distortion due to the propagation of current harmonics injected by nonlinear loads. Nonsinusoidal voltages at the terminals of an active filter will deteriorate its performance and require additional control functions.

Control objectives of filters are classified based on the supply current components to be compensated and by the response required to correct the distorted system voltage. An important question for the selection of filter control is: what is the most desirable response (of the

combined filter and load) to the distortion of the supply voltage? Considering this question, there are three main control categories of compensation (Stage Two, as discussed in [Section 10.7.1](#)):

- **Waveform compensation** is based on achieving a sinusoidal supply current. The combination of filter and load is resistive at fundamental frequency and behaves like an open circuit for harmonic frequencies.
- **Instantaneous power compensation** relies on drawing a constant instantaneous three-phase power from the supply. In response to supply harmonic voltages, significant harmonic currents are drawn that result in nonsinusoidal current flow. The combination of filter and load generates a complicated and nonlinear response to the distorted excitation that cannot be described in terms of impedance.
- **Impedance synthesis** responds to voltage distortion with a resistive characteristic and draws harmonic currents in phase with the harmonic voltage excitation. The combination of filter and load draws power at all harmonic frequencies of the supply voltage and can be made to closely approximate a passive system.

There are a variety of reference-following techniques (Stage Three) that can be implemented to generate the compensation signal I_{APF} , including hysteresis-band, PWM, deadbeat, sliding, and fuzzy control, etc. A number of these control approaches are discussed in [Section 10.7.5](#).

10.7.1 Derivation of reference signal using waveform compensation

The objective of waveform compensation is to achieve a sinusoidal supply current. There are many signal-processing techniques that can be used to decompose the distorted waveform into its fundamental (to be retained) and harmonic (to be canceled) components. This is essentially a filtering task; however, in addition to analytical approaches, there are also pattern-learning techniques that can be implemented.

10.7.1.1 Waveform compensation using time-domain filtering

Distortion identification is a filtering task that can be performed by time-domain techniques or by Fourier-based frequency decomposition. The nonideal properties of real filters such as attenuation (e.g., preserving the identified components and heavily attenuating other components with a narrow bandwidth), phase distortion (e.g., preserving the phase of the identified components), and time response (e.g., considering the time-varying nature of the distortion signal and enforcing rapid filter response without large overshoot) must be recognized. The performance considerations of time-domain filters are linked, for example, smoothness of the magnitude response has to be traded off versus the phase response, and a well-damped transient response is in conflict with a narrow transition region. There are two general approaches to identify the distortion components in the time domain ([Fig. 10.27A](#)):

- **Direct distortion identification** applies a high-pass filter to the distorted signal $d(t)$ to determine the reference $r(t)$. Therefore, the identification process is subject to the transient response of the filter.

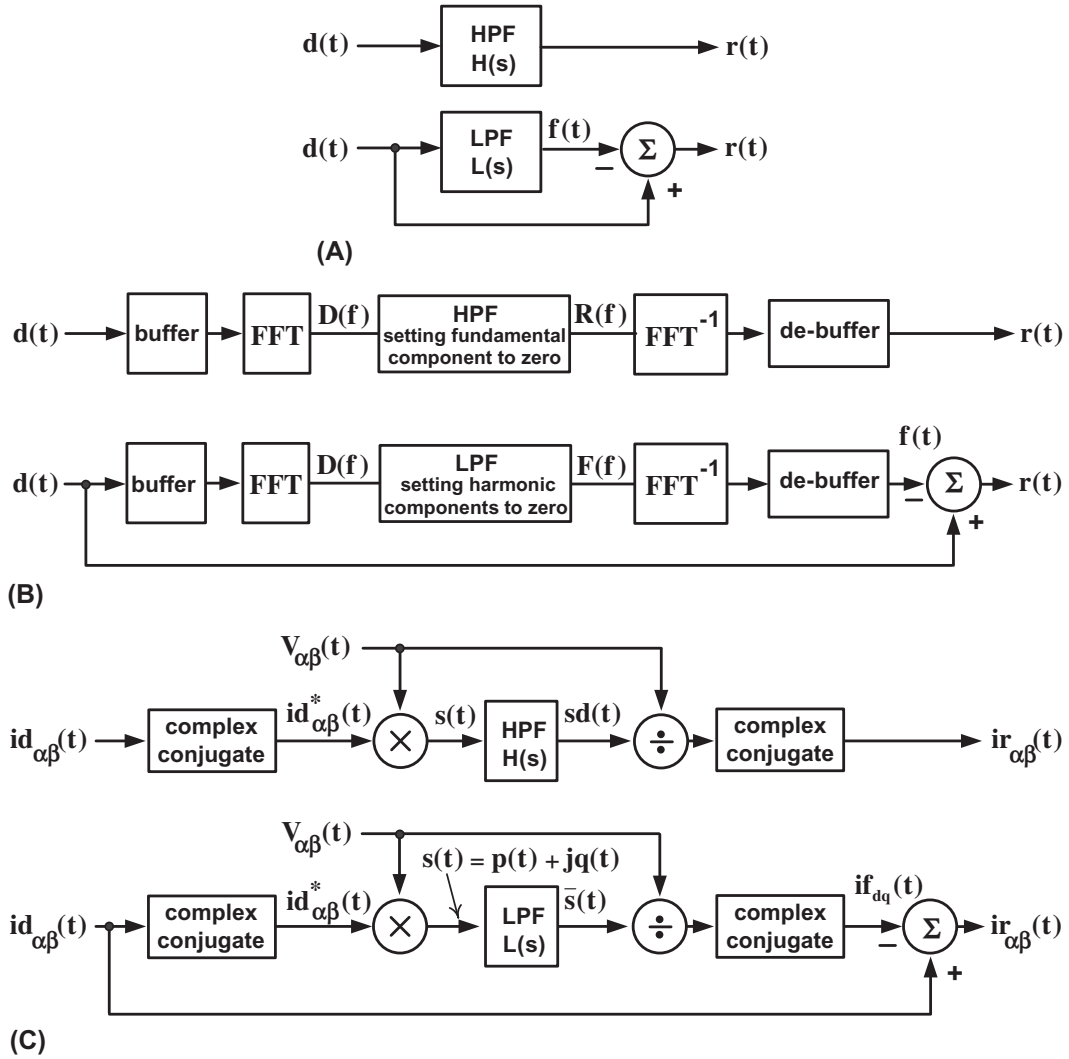


FIG. 10.27 Direct and indirect distortion identification techniques in (A) time domain, where $f(t)$ is the identified fundamental frequency signal that is allowed to remain, (B) frequency domain, where $D(f)$, $R(f)$, and $F(f)$ are the frequency-domain representations of distortion, reference, and fundamental component of the distorted signal, respectively [6], (C) instantaneous power domain.

- **Indirect distortion identification** uses the filter to determine the fundamental component $f(t)$ and subtracts it from the distorted signal $d(t)$ to form the reference $r(t)$.

Due to the inherent time lag of actual filters, the distortion term of the direct method will be out of date and the distortion cancellation will be in error. The disadvantage of the indirect method is the out-of-date fundamental term that requires additional exchange of real power through the inverter, resulting in DC-bus voltage disturbance and increased rating of the

inverter. Most active filters use indirect distortion identification to achieve the best distortion cancelation during transients. Direct methods are preferred in applications where specific ranges of harmonics are to be compensated or where different groups of harmonics are to be treated differently.

To facilitate the separation of fundamental and harmonic components of the signal, active filter control algorithms rely on transformation techniques to transfer the signal from the conventional three-phase abc reference frame to an orthogonal two-phase representation. This will reduce the burden of intensive computations. Two well-known transformations, the stationary $\alpha\beta 0$ reference and the rotating $dq0$ reference (also called Park transformation) frames, are widely employed (see Fig. 10.27). The spectra of a nonlinear load current (supplied by undistorted sinusoidal supply voltage) in abc , $\alpha\beta 0$, and $dq0$ reference frames are shown in Fig. 10.28A–C, respectively. Analysis of these graphs indicates:

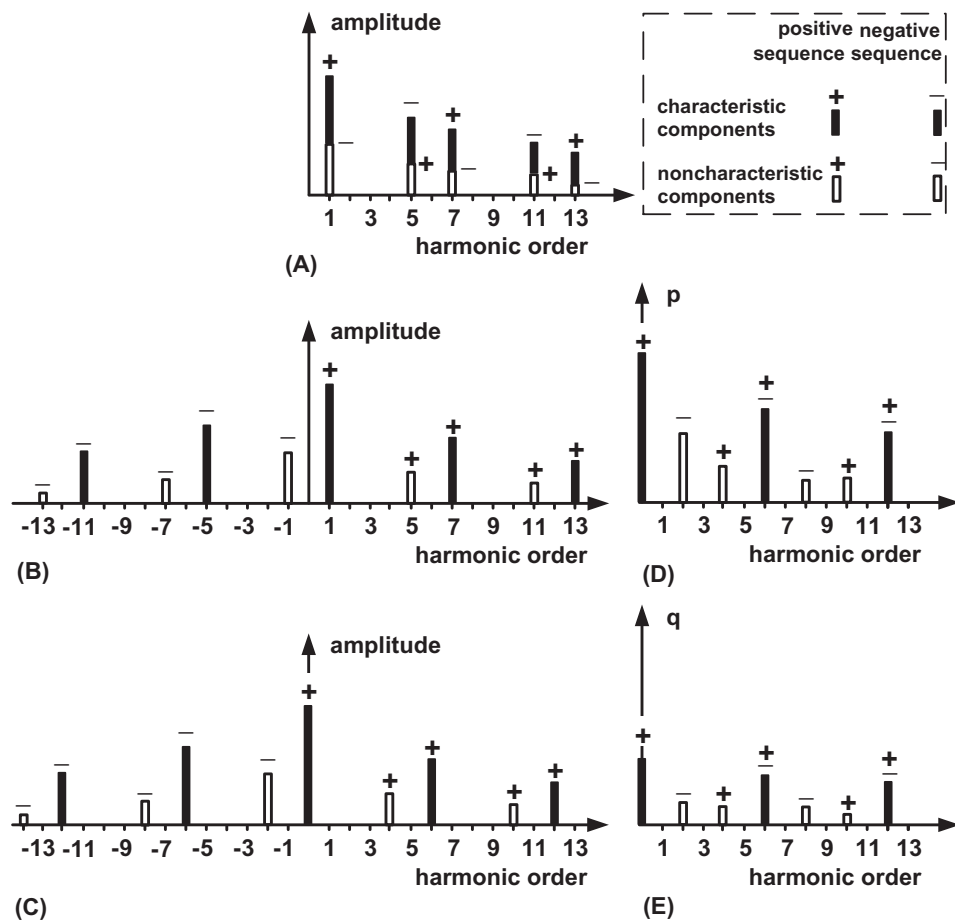


FIG. 10.28 Frequency spectrum of an unbalanced, three-wire three-phase nonlinear load (injecting current harmonics of order $h = (6k \pm 1)$): (A) current in phase domain, (B) current in $\alpha\beta 0$ domain, (C) current in $dq0$ domain, (D) active power (p) in instantaneous power domain, (E) reactive power (q) in instantaneous power domain [6].

- The nonlinear load is assumed to be three-wire, three-phase and unbalanced that injects harmonics of the order $(6k \pm 1)$, where k is any positive integer. This is clearly demonstrated by the frequency spectrum in the abc phase domain (Fig. 10.28A). Note that there is no distinction between harmonic components of the same order with different phase rotation.
- Both $\alpha\beta 0$ and $dq0$ decompositions (Fig. 10.28B and C, respectively) transfer the zero-sequence component into a separate component set. Harmonic components with the same order and opposite phase rotation (e.g., $-h$ and h) are separated because positive and negative sets are shifted to orders $(h-1)$ and $-(h-1)$, respectively.
- The $\alpha\beta 0$ transformation (Fig. 10.28B) has no effect on the frequency spectra and does not separate sequence sets. The sequence can be determined from whether either the “ α ” or the “ β ” component leads. The negative harmonic term of order -1 indicates the imbalance of the fundamental. Balanced nonlinear loads produce characteristic harmonics of order $-5, +7, -11, +13, \dots, 6k+1$. Unbalanced nonlinear loads generate in addition noncharacteristic harmonic components of order $+5, -7, +11, -13, \dots, 6k-1$.
- With the rotating $dq0$ transformation (Fig. 10.28C) all frequency components are shifted downward by one harmonic order. The positive-sequence fundamental becomes a DC term and the negative-sequence fundamental becomes a double-frequency term (order -2). The characteristic and noncharacteristic distortions are of orders $6k$ and $(6k-2)$, respectively.
- There is no difference between filtering in the abc or $\alpha\beta 0$ domains, but the $dq0$ domain is a better alternative because it offers frequency separation of fundamental, positive, and negative sequences, which makes the filtering task simpler. In the abc domain, the fundamental may be separated using a low-pass filter that cuts off between orders 1 and 5 (or 1 and 3 if there is zero-sequence/four-wire harmonic distortion). In the $dq0$ domain, the filter cutoff should be between 0 and 6 for balanced conditions. For unbalanced conditions, a cutoff between 0 and 2 will allow the negative-sequence (unbalanced) fundamental to be corrected and a cutoff between 2 and 4 will not cancel the unbalanced fundamental but will cancel harmonic distortion. Zero-sequence distortion is conveniently placed in a separate component set that may be canceled or retained as required.

10.7.1.2 Waveform compensation using frequency-domain filtering

Filtering in the frequency domain requires discrete or fast Fourier transform (DFT or FFT) over a section of the signal that contains at least one cycle of the lowest frequency of interest and that has been sampled over twice the highest harmonic frequency as prescribed by the Nyquist theorem. The advantage of filtering in the frequency domain is that completely abrupt cutoffs (with no transition band, low-pass band ripple, and phase distortion) can be obtained. The main disadvantage is that the filtering process is not very suitable for real-time filters and sufficient time is required for sampling the signal and performing the transformation. In addition, the signals must be steady state and periodic because FFT implicitly assumes periodicity of the sampled waveform. If the FFT window is properly synchronized to the fundamental signal then the phase and magnitudes of the components can be accurately determined. If the sampling window does not cover an integer number of fundamental cycles, accuracy will be degraded (spectral leakage).

Distortion identification may also be performed with a direct or indirect approach using frequency-domain filtering (Fig. 10.27B). FFT is performed to transfer the distorted signal $d(t)$ to the frequency domain $D(f)$. In the direct method, the fundamental component is set to zero to form a cancellation reference. The filter may also cancel the reactive component if only the real (in-phase) component of the signals are set to zero. In the indirect method, all harmonic terms are set to zero; the fundamental is subtracted from the instantaneous signal to generate the reference signal. The filter may also cancel the reactive component if the imaginary (quadrature) fundamental component is set to zero. The final step is the application of the inverse FFT to generate $r(t)$.

A problem with frequency-domain filtering is that during transient conditions, the periodicity of the distortion is lost and the cancellation is not accurate. There is also time delay in filtering that can affect the distortion identification performance. For most applications, one complete cycle of data is stored in a buffer, processed during the next cycle, and de-buffered for use as a cancellation reference in the following cycle, that is, the cancellation reference is two cycles out of date. For applications requiring fast compensation, shorter update rates are possible by performing a FFT every half-cycle using one half-cycle of fresh data plus data from the previous half-cycle. This will reduce the filtering delay to one cycle.

10.7.1.3 Other methods for waveform compensation

There are other waveform compensation schemes that attempt to overcome the disadvantages of time-domain techniques (e.g., compromises or imperfections in filter design) and the inherent time delay of frequency-domain approaches, such as heterodyne methods and neural networks.

The heterodyne methods of waveform compensation involve multiplying the distorted signal by a sinusoid [6]. If the sinusoid is of fundamental frequency then the fundamental frequency component of the distorted signal will be transformed to DC and double-frequency terms. The DC term can be separated with a low-pass filter. If the heterodyning sinusoid is in phase with the voltage, the fundamental active current is identified; otherwise, the fundamental reactive current can be identified using a quadrature sinusoid. As with the time-domain approaches, a low-order filter provides poor separation of the DC and double-frequency terms and a sharp (high-order) filter will have a long step response. Heterodyne methods of waveform compensation are popular in single-phase systems where $\alpha\beta 0$ and $dq 0$ transformations are not applicable.

Separation of a signal into the fundamental and distorted components can also be performed by using neural networks [6]. Both direct and indirect principles can be implemented. Neural networks can be used as harmonic identifiers to estimate the Fourier coefficients of the distorted signal. They can be trained to learn the characteristics of the load current (or that of the local grid system) to produce the cancellation reference. They may also be employed to provide fast-frequency decomposition to identify the fundamental component (e.g., for indirect algorithms) or low-order harmonics for a range of load current amplitudes.

10.7.2 Derivation of compensated signals using instantaneous power compensation

Another approach to control active filters is to cancel the fluctuating component of instantaneous power and perhaps compensate the fundamental component of the reactive

power. A common approach is to start with the definitions of instantaneous active and reactive powers and express them in terms of average and alternating (fluctuating) components. This can be performed in either the abc , $\alpha\beta 0$, or $dq0$ domain:

- In the $\alpha\beta 0$ domain

$$\begin{bmatrix} v_0 \\ v_\alpha \\ v_\beta \end{bmatrix} = \sqrt{\frac{2}{3}} \begin{bmatrix} \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} \\ 1 & -\frac{1}{2} & -\frac{1}{2} \\ 0 & \sqrt{3}/2 & -\sqrt{3}/2 \end{bmatrix} \begin{bmatrix} v_a \\ v_b \\ v_c \end{bmatrix}. \quad (10.12)$$

Without the zero-sequence component, the instantaneous power can be written as

$$s(t) = p(t) + jq(t) = v_{\alpha\beta} i_{\alpha\beta}^* = (v_\alpha + jv_\beta)(i_\alpha - ji_\beta) = (v_\alpha i_\alpha + v_\beta i_\beta) + j(v_\beta i_\alpha - v_\alpha i_\beta), \quad (10.13a)$$

where the superscript $*$ denotes the complex conjugate. Therefore,

$$\begin{bmatrix} p \\ q \end{bmatrix} = \begin{bmatrix} (v_\alpha i_\alpha + v_\beta i_\beta) \\ (v_\beta i_\alpha - v_\alpha i_\beta) \end{bmatrix} = \begin{bmatrix} v_\alpha & v_\beta \\ v_\beta & -v_\alpha \end{bmatrix} \begin{bmatrix} i_\alpha \\ i_\beta \end{bmatrix}. \quad (10.13b)$$

- In the $dq0$ domain

$$\begin{bmatrix} v_d \\ v_q \\ v_0 \end{bmatrix} = \sqrt{\frac{2}{3}} \begin{bmatrix} \cos \theta_d & \cos(\theta_d - 2\pi/3) & \cos(\theta_d + 2\pi/3) \\ -\sin \theta_d & -\sin(\theta_d - 2\pi/3) & -\sin(\theta_d + 2\pi/3) \\ \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} \end{bmatrix} \begin{bmatrix} v_a \\ v_b \\ v_c \end{bmatrix}. \quad (10.14)$$

In this equation $\theta_d = \omega_d + \varphi$, where ω_d is the angular velocity of voltages and φ is the initial voltage angle. With no zero-sequence components

$$s(t) = p(t) + jq(t) = v_{dq} i_{dq}^* = (v_d + jv_q)(i_d - ji_q) = (v_d i_d + v_q i_q) + j(v_q i_d - v_d i_q). \quad (10.15)$$

In four-wire systems there is the additional term of zero-sequence instantaneous (real or reactive [6]) power; with Eqs. (10.13a), (10.13b), (10.15) the instantaneous power may be written as

$$p(t) = \bar{p} + \tilde{p}(t), \quad q(t) = \bar{q} + \tilde{q}(t). \quad (10.16)$$

Fig. 10.28A, D and E shows the spectra of current, active, and reactive powers for the case of a sinusoidal supply voltage, which is harmonically distorted and generates unbalanced currents. Characteristic harmonics of order $h = 6k + 1$ (e.g., $-11, -5, 7, 13, \dots$, where negative orders represent negative-sequence harmonics) produce power terms of order $6|k|$, whereas noncharacteristic harmonics of order $h = 6k - 1$ (e.g., $-13, -7, 5, 11, \dots$) yield power terms of order $6|k| \pm 2$.

The inverse transform (e.g., conversion from power domain to the phase domain) is

$$i_{\alpha\beta}^* = i_\alpha - ji_\beta = \frac{s}{v_{\alpha\beta}} = \frac{(pv_\alpha + qv_\beta) + j(qv_\alpha - pv_\beta)}{v_\alpha^2 + v_\beta^2}, \quad (10.17)$$

or

$$\begin{bmatrix} i_\alpha \\ i_\beta \end{bmatrix} = \frac{1}{v_\alpha^2 + v_\beta^2} \begin{bmatrix} v_\alpha & v_\beta \\ v_\beta & -v_\alpha \end{bmatrix} \begin{bmatrix} p \\ q \end{bmatrix}. \quad (10.18)$$

Fig. 10.27C depicts direct and indirect distortion identification approaches based on the instantaneous power domain as given by Eq. (10.18). The concept is analogous to that of the frequency domain and similar comments apply.

Eq. (10.18) assumes sinusoidal supply voltages and distorted currents. However, active filter control relying on the instantaneous power method causes harmonic currents to flow when the supply voltage is either distorted or unbalanced (see Application Examples 10.3 and 10.4). The following comments apply to the instantaneous power decomposition:

- Since p and q terms are readily available (e.g., by setting the q -term to zero in the indirect method and not removing it by filtering in the direct method), it is easy to include the compensation of fundamental reactive power in the active filter control algorithm and perform optimal power follow.
- Fundamental-frequency negative-sequence current appears as a second harmonic in the instantaneous power domain and may be easily filtered.
- The instantaneous power method applied in the $\alpha\beta$ domain has low processing burden because it does not require rotational transformation and explicit synchronization.
- The inverse transformation of Eq. (10.18) assumes sinusoidal supply voltages with current distortions. If both the supply voltage and the load current are distorted, active filter (with instantaneous power compensation) will result in harmonic current flow through the supply (Eq. 10.22). A similar scenario occurs when the supply contains negative-sequence voltages introducing imbalance in the currents and harmonic distortion [6]. Efforts such as modifying the inverse transformation and altering the definition of p and q have been made to overcome this problem.
- This section has focused on the control of shunt active filters. Similar discussions apply to the control of series active filters for which dual equations can be generated.

10.7.2.1 Application Example 10.2: Instantaneous power for sinusoidal supply voltages and distorted load currents

Assuming a sinusoidal supply voltage and a distorted load current (with fundamental and a single harmonic component of order h), find the equations for instantaneous power as well as average and fluctuating, pulsating, or oscillating real and reactive powers.

Solution to Application Example 10.2: *Instantaneous power for sinusoidal supply voltages and distorted load currents*

$$\begin{aligned}
 p(t) &= V_1 I_1 + V_1 I_h \cos [(1-h)\omega t] \Rightarrow \{\bar{p} = V_1 I_1, \quad \tilde{p} = V_1 I_h \cos [(1-h)\omega t]\}, \\
 q(t) &= -V_1 I_h \sin [(1-h)\omega t] \Rightarrow \{\bar{q} = 0, \quad \tilde{q} = -V_1 I_h \sin [(1-h)\omega t]\}.
 \end{aligned} \quad (10.19)$$

In Eq. (10.19), the power factor angle is zero and the interaction of V_1 with I_h is due to the nonlinear $v-i$ characteristic of nonlinear load generating harmonic load current with sinusoidal excitation.

10.7.2.2 Application Example 10.3: Instantaneous power consumed by a resistive load subjected to distorted supply voltages

A three-phase distorted voltage waveform consisting of the fundamental and one harmonic component of order h is connected across the terminals of a balanced three-phase resistor bank in ungrounded Y configuration. Compute the components of voltages and currents in the $\alpha\beta 0$ domain and determine the average and the fluctuating active power consumed by the load.

Solution to Application Example 10.3: *Instantaneous power consumed by a resistive load subjected to distorted supply voltages*

The load is balanced and has no zero-sequence terms due to the ungrounded Y . The α and β components are

$$\begin{aligned}
 v_\alpha &= V^{(1)} \cos(\omega t) + V^{(h)} \cos(h\omega t), \quad v_\beta = V^{(1)} \sin(\omega t) + V^{(h)} \sin(h\omega t), \quad \Rightarrow \\
 i_\alpha &= \frac{V^{(1)}}{R} \cos(\omega t) + \frac{V^{(h)}}{R} \cos(h\omega t), \quad i_\beta = \frac{V^{(1)}}{R} \sin(\omega t) + \frac{V^{(h)}}{R} \sin(h\omega t).
 \end{aligned} \quad (10.20)$$

Applying Eqs. (10.13a), (10.13b), (10.16)

$$\begin{aligned}
 p(t) &= (v_\alpha i_\alpha + v_\beta i_\beta) = \bar{p} + \tilde{p}(t) \Rightarrow \bar{p} = \frac{(V^{(1)})^2}{R} + \frac{(V^{(h)})^2}{R}, \\
 \tilde{p}(t) &= 2 \frac{V^{(1)} V^{(h)}}{R} \cos[(1-h)\omega t].
 \end{aligned} \quad (10.21)$$

Note that an oscillatory power with the difference frequency (e.g., $(1-h)f_1$) is generated. Based on these equations, a nonsinusoidal current must be drawn from a distorted supply voltage to maintain a constant instantaneous power. Similarly, a nonsinusoidal current is required to draw constant instantaneous power from an unbalanced supply voltage (containing a fundamental-frequency negative-sequence component). Therefore, both/either distorted and/or unbalanced supply voltages will force the active filter (with instantaneous power based controller) to inject harmonic currents.

10.7.2.3 Application Example 10.4: Supply current distortion caused by active filters with instantaneous power-based controllers

An active filter with an instantaneous power controller is applied to the system of Application Example 10.3. Compute α and β components of the supply current after the filter has been installed and the nonsinusoidal load current (through the resistive load) has been compensated.

Solution to Application Example 10.4: *Supply current distortion caused by active filters with instantaneous power-based controllers*

Relying on Eqs. (10.18), (10.21), the supply current corresponding to constant power is

$$\begin{aligned} i_\alpha &= \frac{pv_\alpha}{v_\alpha^2 + v_\beta^2} = \frac{p[V^{(1)} \cos(\omega t) + V^{(h)} \cos(h\omega t)]}{(V^{(1)})^2 + 2V^{(1)}V^{(h)} \cos[(1-h)\omega t] + (V^{(h)})^2}, \\ i_\beta &= \frac{pv_\beta}{v_\alpha^2 + v_\beta^2} = \frac{p[V^{(1)} \sin(\omega t) + V^{(h)} \sin(h\omega t)]}{(V^{(1)})^2 + 2V^{(1)}V^{(h)} \cos[(1-h)\omega t] + (V^{(h)})^2}. \end{aligned} \quad (10.22)$$

Note the presence of different harmonics in the numerators and denominators which are not of the same order as that of the voltage excitation (e.g., order h). Therefore, a single voltage harmonic distortion gives rise to an infinite series of current harmonics when the active filter controller is based on instantaneous power compensation.

10.7.3 Derivation of compensating signals using impedance synthesis

Impedance synthesis is based on the idea of modifying the inverse transform of the instantaneous power (Eq. 10.17) to prevent injection of higher frequency current harmonics. If Eq. (10.17) is modified using the root-mean-square (rms) value of the current, that is, replace $v_\alpha^2 + v_\beta^2$ with $(v_\alpha)_{\text{rms}} + (v_\beta)_{\text{rms}}$, the denominator will not be time varying and a modulation of the current is avoided. There are two impedance synthesis approaches where the voltage and current are related by a chosen value of the impedance: impedance-based blocking and impedance-based compensation.

10.7.3.1 Impedance-based blocking

Impedance-based blocking control presents resistive characteristics at all frequencies. A filter arrangement with a number of shunt and series (passive and/or active) branches is used to block or enable a signal path. An inverter acting as an impedance relating voltage to current by a simple transfer function can form one branch of the filter. This normally takes the form of a hybrid filter consisting of active and passive elements, although combinations of active units—without passive elements—are also possible.

There are many forms of hybrid filters (Section 10.5) that can be used for impedance-based blocking. For example, a hybrid combination consisting of a series active filter and a shunt passive filter can be used to perform impedance synthesis. The role of the series branch is to block harmonic currents by representing a high impedance. The instantaneous power theory can be utilized to separate the distortion terms of the current. The active filter then injects a voltage proportional to this current to synthesize a moderately high impedance. In practice, the filter employed to separate the oscillatory terms in the instantaneous power may not be perfect and might influence the impedance presented by the overall active filter [6].

10.7.3.2 Impedance-based compensation

A difficulty faced in designing the control of active filters for general purposes (e.g., correcting a group of nonlinear loads) is that the system dynamics are unknown. Furthermore, the compensation current—in response to the detected distortion—might activate one of the system resonances or perturb the voltage and cause instability [6].

One solution is to use a shunt device that draws a current proportional to the voltage. This is done by utilizing a dissipative active filter that absorbs energy at harmonic frequencies; thus voltage harmonics are detected and damped. This is a passive controller because it presents a resistive characteristic. Therefore, the operation of the active filter is stable regardless of the system structure.

10.7.4 DC bus energy balance

The DC buses of inverters in active power filter systems are not DC links but energy storage devices. If a voltage-source inverter is used, the link contains a capacitor; otherwise an inductor acts as the DC link for the current-source inverter.

In practice, the link voltage will not usually remain constant due to various effects:

- Real power exchange between the active filter and the AC grid.
- Converter (conduction and switching) losses.
- Undesirable real power components in the compensation reference signal due to magnitude and phase errors of the distortion identifier or because of time delays in responding to a transient condition.
- The error between the identified correction current and the actual output current of the inverter that may lead to some power exchange.
- Distortion in the grid voltage that might cause some real power exchange.

To overcome these deficiencies, converter power losses are compensated by drawing a balancing power into the DC bus from the AC grid. This may be performed through a DC-bus voltage regulator (Fig. 10.29) as follows:

- The voltage error signal is generated based on a reference DC voltage.
- The error is passed through a controller.

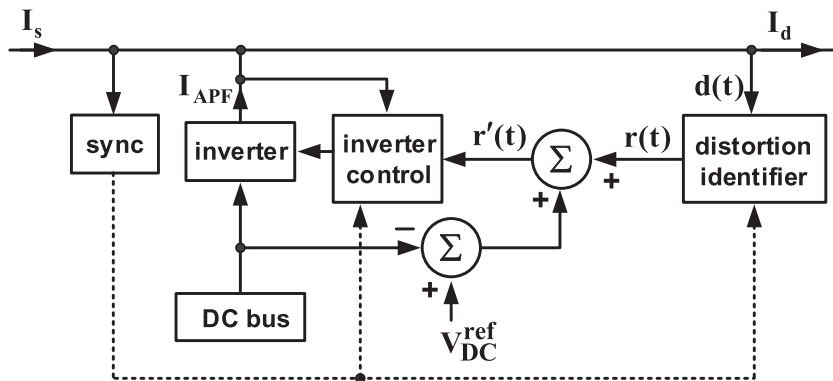


FIG. 10.29 A simple DC-bus voltage regulator [6].

- A PI compensator operates on the voltage error. It should have a low crossover frequency to avoid interaction with the compensation system.
- Controller output is taken as a demand for fundamental active current and is added to the compensation reference.
- The control algorithm can be implemented in any convenient domain (e.g., abc , $\alpha\beta 0$, or $dq0$ domain).
- The bandwidth of the controller must be carefully selected: if it is too high (comparable with the fundamental frequency), the injected balancing current will contain components at harmonic frequencies that will add distortion to the system; if it is too low, the DC-link voltage may deviate from its nominal value.

10.7.5 Generation of compensation signal using reference-following techniques

The identified reference signal (with one of the techniques discussed in [Sections 10.7.1 to 10.7.3](#)) must be generated or reproduced by the inverter ([Fig. 10.26](#)) and injected into the system to eliminate the power quality problem. Generation of the compensation signal that accurately follows the identified reference may be difficult because of the following:

- The high rate of change and the wide bandwidth of the reference signal.
- The errors in the generated reference caused by the di/dt limit of a voltage-source inverter.
- The voltage imposed on the inverter (e.g., difference between the available DC-bus voltage and the instantaneous voltage of the AC system).
- The impact of increasing the DC-bus voltage—to improve the reference following—on the ratings of the inverter.
- The effect of the processing delay on the formation of the reference waveform.

Three approaches to force the inverter output current to follow a reference signal are widely implemented: PWM current regulation, hysteresis regulation, and deadbeat or predictive control.

PWM current regulation. The current error, for example, the difference between identified (reference) and generated signals, is acted on by a PI controller and its output is passed through a PWM or space-voltage vector modulation to define the voltage to be produced by the inverter. The controller may be of the open- or closed-loop type and can be implemented in any convenient (abc , $\alpha\beta 0$, or $dq0$) domain.

Hysteresis regulation. The main idea is to force the compensation signal to follow the reference signal within a given hysteresis band error (e.g., $i_{\text{compensation}} = i_{\text{reference}} \pm \Delta i_{\text{hysteresis}}/2$). The implementation of this controller is easy as it requires an op-amp operating in the hysteresis mode. Hysteresis regulation is unconditionally stable, does not require detailed plant data, and can achieve high rates of change in the controlled variable. Unfortunately, there are several drawbacks such as the unpredictable switching frequency and the broadband switching noise injected by the nonconstant switching frequency. Consequently, different approaches have been considered to maintain constant (or near constant) switching frequency and to synchronize the switching of all three phases.

Deadbeat or predictive control. Deadbeat or predictive control is attractive for following rapidly changing reference signals of active filters because it selects a voltage command for

the inverter that will force the generated current to reach a target value by the end of the next sample period [6]. However, it requires knowledge of the system to accurately model the rate of change of current (di/dt) and to properly select the voltage command. The interface inductance of the inverter is a key parameter and the opposing AC system voltage must be measured or estimated. Deadbeat controllers may be applied when there is some parameter uncertainty (e.g., the coupling inductor). Adaptive filters can be employed to predict the current reference, and the deadbeat controller can use the predicted current at the end of the sample period as the target current [6].

10.7.6 Application Example 10.5: Hybrid of passive and active power filters for harmonic mitigation of six-pulse and twelve-pulse rectifier loads [9,16]

This example demonstrates the application of hybrid filters to compensate harmonics of a nonlinear load consisting of two six-pulse rectifiers. The two rectifiers are connected to the secondary of a (Y/Δ , Y) transformer. The simultaneous operation of the two six-pulse rectifiers represents a twelve-pulse rectifier load. Two arrangements of hybrid filters are considered:

Hybrid filter #1 is composed of a shunt-hybrid filter in parallel with a passive filter as shown in Fig. E10.5.1. The passive filter consists of a set of tuned branches. The hybrid power filter is a series combination of an active filter with a small rating (converter) and a passive branch. Due to the use of a parallel passive filter, the converter rating is decreased and the performance and resonance problems of the passive filter are expected to improve.

Hybrid filter #2 is composed of a shunt-hybrid filter in parallel with two passive filters tuned at the 5th and 7th harmonics as shown in Fig. E10.5.2. The hybrid filter consists of an active filter with a small rating in series with two passive branches and is tuned at the dominant 11th and 13th harmonics.

- Plot the load current waveforms and calculate THD_i with twelve-pulse and six-pulse rectifier configurations.
- Derive the equations for power system and passive and hybrid filter currents.

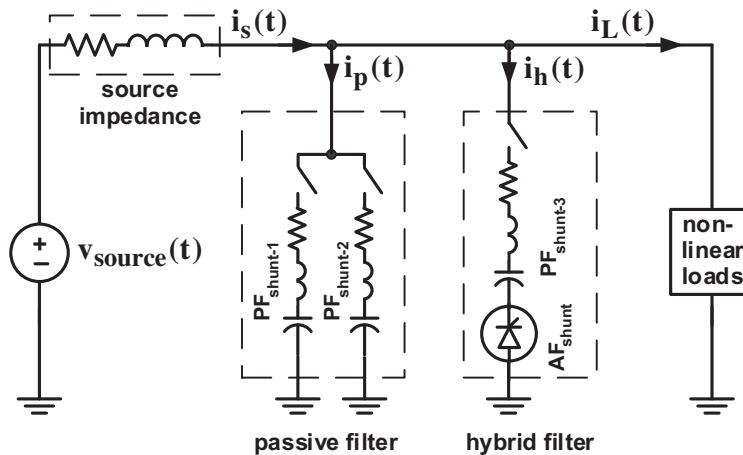


FIG. E10.5.1 Hybrid filter #1, a shunt hybrid power filter (series combination of a small rating active filter and a tuned passive branch) in parallel with tuned passive filters [17].

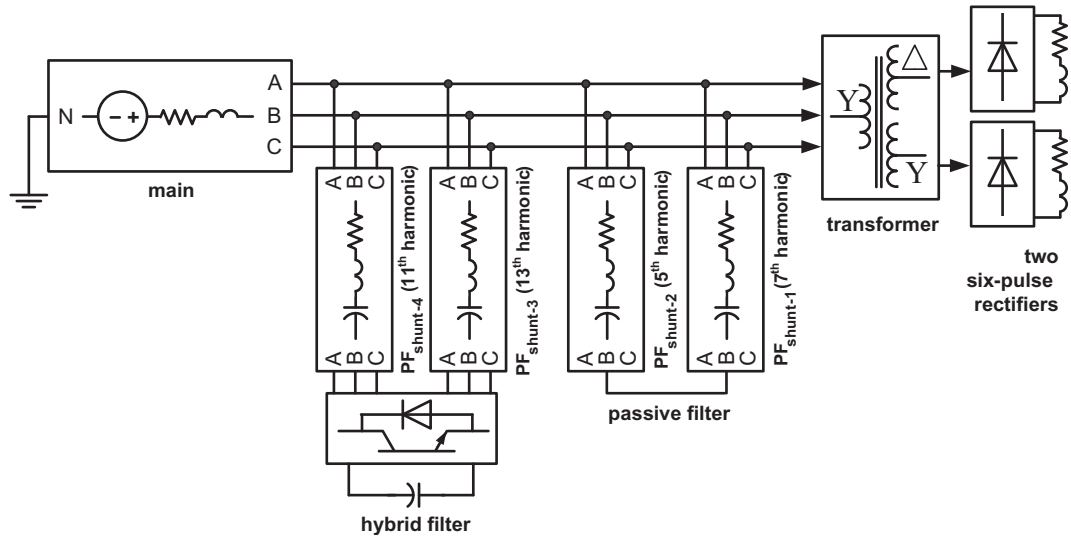


FIG. E10.5.2 Hybrid filter #2, a shunt hybrid power filter (a small rating active filter in series with two passive branches) in parallel with two passive filters [16].

- (c) With a six-pulse rectifier load, plot the waveforms of the power system, load, passive filter, and hybrid filter branch currents before and after the installation of hybrid filters #1 and #2.
- (d) Plot the power system current under resonant conditions before and after the addition of hybrid filter #2.
- (e) Compare the performances of hybrid filters #1 and #2.

Solution to Application Example 10.5: *Hybrid of passive and active power filters for harmonic mitigation of six-pulse and twelve-pulse rectifier loads* [9,16]

- (a) Load-current waveforms without filtering

Fig. E10.5.3 illustrates simulated power system current waveforms for a twelve-pulse rectifier load, indicating a THD_i of 9.36%. Provided one of the rectifiers (Fig. E10.5.2) is out of service (e.g., six-pulse rectifier configuration), the power system current THD_i increases to 26.28%.

- (b) Current equations with hybrid filter #2

The converter of hybrid filter #2 operates at harmonic frequencies like a resistor in series with the power system impedance. Therefore, the effective harmonic impedance of the power system is increased and the resonance of the passive power filter is suppressed. In addition, the filter performance is improved by imposing a voltage harmonic waveform at its terminals with the following amplitude:

$$v_{a1}(t) = K_1 i_{sh}(t), \quad (\text{E10.5.1})$$

where $i_{sh}(t)$ is the harmonic content of the power system current, and K_1 is the converter gain. The power converter consumes fundamental power. This power is stored in the DC capacitor to regulate its voltage and compensate the inverter losses [16,17]. Therefore, DC capacitor voltage regulation is performed without any external power supply. The output voltage can be written as

$$v_a(t) = v_{a1}(t) + v_{a2}(t). \quad (\text{E10.5.2})$$

Hybrid filter #2 is controlled using the synchronous reference frame (e.g., $dq0$ transformation), which changes the conventional three abc rotating phasors into direct (d), quadrature (q), and zero (0) sequence components. The fundamental components are transformed into a DC term and harmonic components are shifted by ω_s in the $dq0$ reference frame (Eq. 10.14).

The block diagram of the control scheme is shown in Fig. E10.5.4 where the control block is divided into two parts:

- The performance improvement block mitigates the resonance problem of the passive power filter and the overall performance of the filtering system. It contains high-pass filters in the $dq0$ frame to filter the fundamental component of the power system current. The output is passed through an amplifier and $v_{a1}(t)$ is obtained.
- The DC voltage regulator block maintains the DC bus voltage at a constant level and reduces possible voltage fluctuations due to the harmonic real power injection (for filter performance improvement) and the power loss of the converter.

A low-pass filter with a cutoff at line frequency is also employed to extract the fundamental component of the DC-link voltage. The DC capacitor voltage is compared with its reference value, and the output of the comparator serves as input to the PI controller. Owing to the use of the PI controller, the DC voltage will be maintained at its desired reference value at steady-state conditions. Finally, the desired voltage $v_a(t)$ (e.g., the summation of $v_{a1}(t)$ and $v_{a2}(t)$) serves as input to the PWM generator to produce the switching gate signals of the converter/inverter. With this arrangement, the converter will generate the desired output voltage.

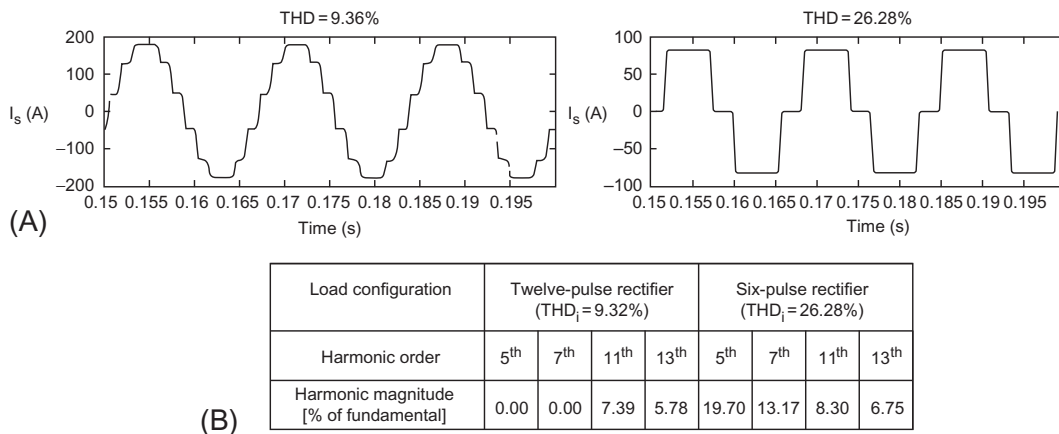


FIG. E10.5.3 Load characteristics for a twelve-pulse rectifier and a six-pulse rectifier: (A) simulated power system current waveforms, (B) harmonic spectra.

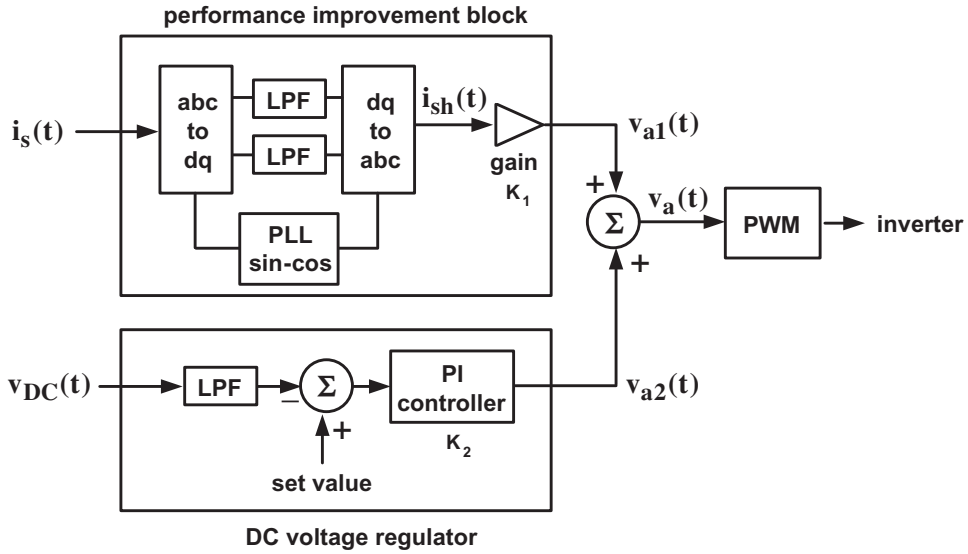


FIG. E10.5.4 Block diagram of the controller for hybrid filter #2. Details of the phase-lock-loop (PLL) block are provided in Fig. 10.33.

Fig. E10.5.5 illustrates the single-phase equivalent circuit of hybrid filter #2. The converter is modeled by the controllable voltage source $v_{ah}(t)$, and the nonlinear load (e.g., twelve- or six-pulse rectifier) is represented as the current source $i_{Lh}(t)$. Z_{sh} , Z_{ph} , and Z_{hh} are the source, passive branch, and hybrid branch impedances, respectively. Harmonic currents of power system, passive filter, and hybrid filter are determined by the following equations [15]

$$i_{sh}(t) = \frac{1}{Z_{sh}} \left(\frac{1}{Z_{eq}} + \frac{1}{Z_{sh}Z_{hh}/K_1} \right)^{-1} \cdot i_{Lh}(t), \quad (\text{E10.5.3})$$

$$Z_{eq} = \frac{Z_{ph}Z_{hh}Z_{sh}}{Z_{ph}Z_{hh} + Z_{sh}Z_{hh} + Z_{sh}Z_{ph}}, \quad (\text{E10.5.4})$$

and

$$i_{ph}(t) = \frac{1}{Z_{ph}} \left(\frac{1}{Z_{eq}} + \frac{1}{Z_{sh}Z_{hh}/K_1} \right)^{-1} \cdot i_{Lh}(t), \quad (\text{E10.5.5})$$

$$i_{hh}(t) = \frac{1}{Z_{hh}} \left(\frac{1}{Z_{eq}} + \frac{1}{Z_{sh}Z_{hh}/K_1} \right)^{-1} \cdot i_{Lh}(t). \quad (\text{E10.5.6})$$

The power system impedance Z_{sh} is usually inductive. Therefore, to avoid parallel resonance and to damp undesired resonant magnitudes, Z_{hh} should be capacitive and the tuned frequency of the hybrid power filter must be larger than the tuned frequency of the passive filter.

In addition, K_1 acts as a resistor to damp parallel resonance between power system and passive filters. Fig. E10.5.6 shows filtering characteristics for three selected cases (e.g., $K_1 = 0$, $K_1 = 1$, and $K_1 = 2$). It is found [15] that if $K_1 \neq 0$, the filtering characteristics are improved for all harmonic frequencies and no parallel resonance is encountered (Figs. E10.5.7–E10.5.10).

(c) Current waveforms with hybrid filters #1 and #2

Hybrid filter #2 consists of a power converter in series with two passive filter branches, tuned at the dominant low-order harmonics (11th, 13th). Although a twelve-pulse rectifier does not produce significant 5th and 7th harmonic currents, a filter tuned at 11th and 13th harmonics cannot completely compensate the distortions of the power system current, because of series and parallel resonances between the line impedance and the passive filter branches that are likely to occur close to the 5th and 7th harmonic frequencies. For this reason, 5th and 7th LC tuned filters are installed to suppress 5th and 7th harmonic frequencies, respectively. In addition, this configuration will have more satisfactory results under the worst operating condition, that is, when only one rectifier is connected to the power system.

Simulated current waveforms for the worst case when only one six-pulse rectifier is activated and the passive branches of the hybrid power filter are tuned at the 5th and 7th harmonics (Table E10.5.1) are shown in Fig. E10.5.7. The rms and THD_i values of these currents are compared in Table E10.5.2. The power system currents for both hybrid filters are about the same. However, the magnitude of the hybrid filter current and the corresponding THD_i is less when hybrid filter #2 is implemented, which results in a smaller inverter rating.

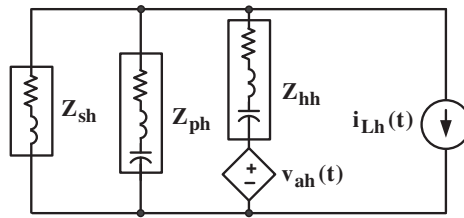


FIG. E10.5.5 Single-phase equivalent circuit of hybrid filter #2 at harmonic order h .

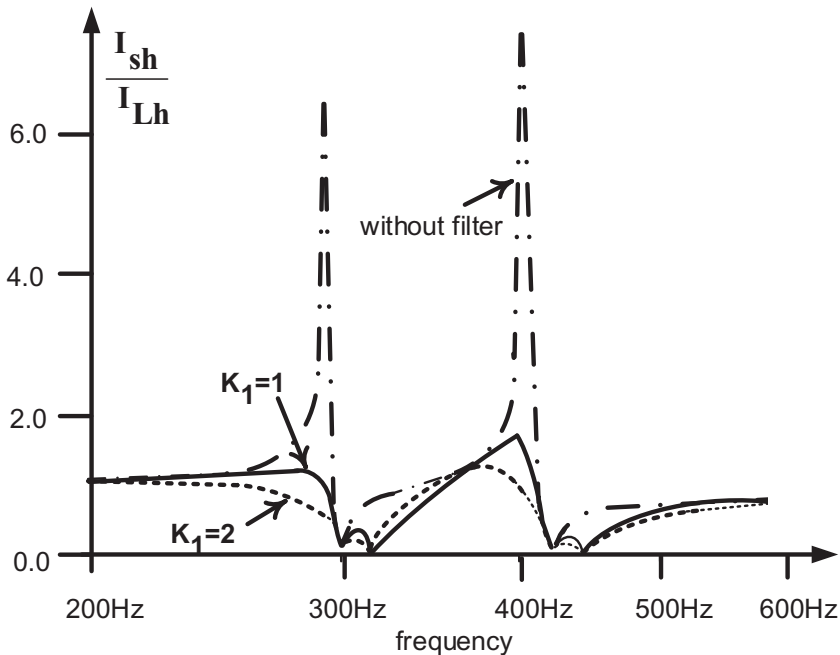


FIG. E10.5.6 System frequency responses of hybrid filter #2 for different values of K_1 .

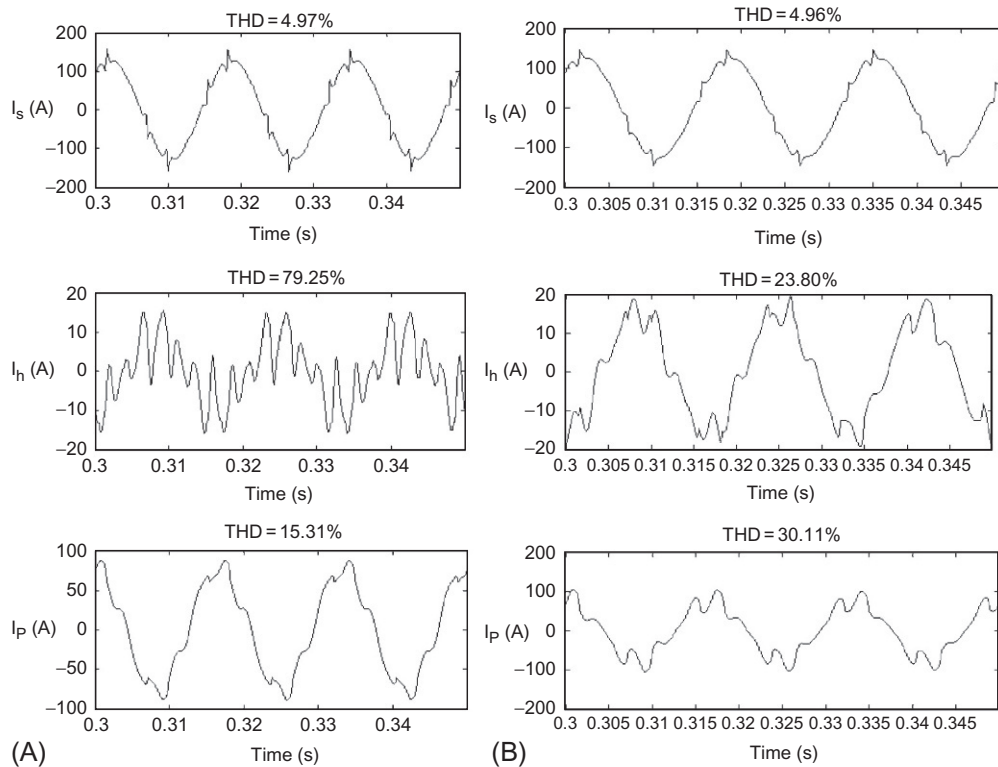


FIG. E10.5.7 Simulation results including power system, hybrid and passive filter currents using (A) hybrid filter #1, (B) hybrid filter #2.

TABLE E10.5.1 Selected parameters for hybrid filter #2 ($C_{DC-link} = 2500 \mu F$, $V_{DC} = 80 V$).

		Passive filter		Hybrid filter	
		5th	7th	5th	7th
L (mH)	0.05	1.13	0.575	5.1	2.6
C (μF)	—	250	250	50	50
R (Ω)	0.003	0.01	0.01	0.02	0.02

TABLE E10.5.2 RMS and THD_i values of currents for hybrid filters #1 and #2.

		RMS (A)	THD_i (%)			RMS (A)	THD_i (%)
Hybrid filter #1	I_s	91.36	4.97	Hybrid filter #2	i_s	90.19	4.96
	I_h	17.74	79.25		i_h	11.12	23.80
	I_p	55.20	15.31		i_p	55.65	30.11

(d) Resonance conditions with hybrid filter #2.

The performance of hybrid filter #2 is simulated and analyzed in the presence of resonance. To do so, the inductance and capacitance of the passive power filter (that were tuned for the 5th harmonic) are now modified (e.g., 125 μ F, 2.2 mH) to produce a resonant condition. Fig. E10.5.8 depicts waveforms of the power system current before and after the installation of hybrid filter #2 with the passive branches tuned at 5th and 7th harmonic frequencies, respectively. Note that the value of current THD_i is decreased from 75.31% to 24.76%.

(e) Comparison of hybrid filters #1 and #2.

Although with hybrid filter #1 the THD_i value of the power system current is limited, the individual magnitudes of 11th and 13th harmonic currents (e.g., 3.6%, 3.11%, respectively) are higher than the harmonic limits of IEEE-519 [10]. In addition, system THD_i under resonant condition is much higher than the above-mentioned limits.

After the installation of hybrid filter #2 (with proper selection of filter parameters, Table E10.5.3), system power quality is considerably improved:

- With both six-pulse rectifiers activated, the THD_i of the power system current is reduced from 9.36% (Fig. E10.5.3) to 1.09% (Fig. E10.5.9A).
- Under the worst operating conditions (e.g., with one six-pulse rectifier in service), the THD_i of the power system current is reduced from 26.28% (Fig. E10.5.3) to 2.26% (Fig. E10.5.9B).
- Individual magnitudes of the 11th and 13th harmonic currents are within the allowable limits of IEEE-519 [10].
- Under resonant condition, the THD_i of the power system currents (Fig. E10.5.10) are improved significantly (e.g., from 6.38% and 75.31% to 1.06% and 6.22% for twelve-pulse and six-pulse rectifier loads, respectively).

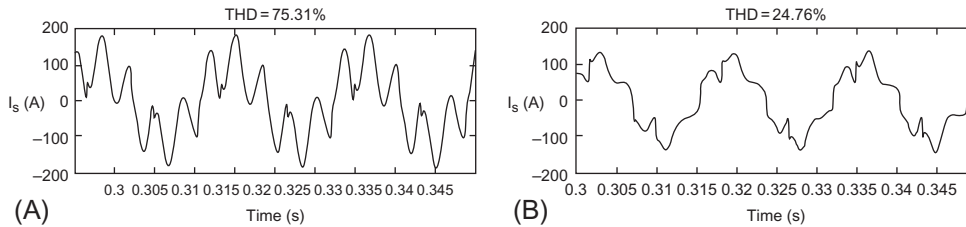


FIG. E10.5.8 Power system current under resonant condition (A) with no filter, (B) with hybrid filter #2 installed.

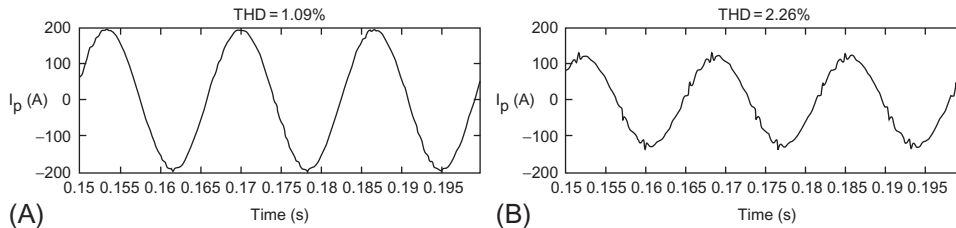


FIG. E10.5.9 Power system current waveform with hybrid filter #2 installed: (A) twelve-pulse rectifier load, (B) six-pulse rectifier load.

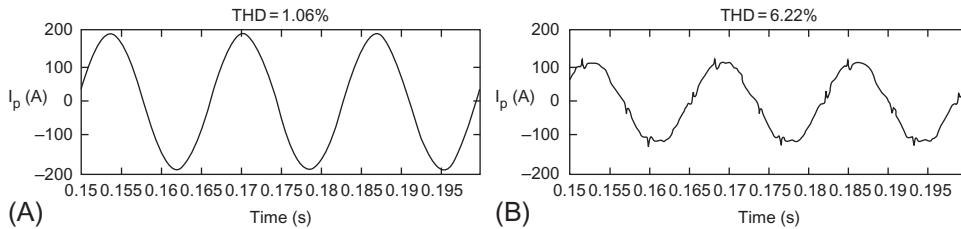


FIG. E10.5.10 Power system current waveform under resonance conditions with hybrid filter #2 installed: (A) twelve-pulse rectifier load, (B) six-pulse rectifier load.

TABLE E10.5.3 Selected parameters of hybrid filter #2 for resonant compensation.

Filter parameter	11th harmonic	13th harmonic
L (mH)	1.85	1.34
C (μ F)	30	30
R (Ω)	0.02	0.02

10.8 Compensation devices at fundamental and harmonic frequencies

One of the main responsibilities of a utility system is to supply electric power in the form of sinusoidal voltages and currents with appropriate magnitudes and frequency for the customers at the points of common coupling (PCC). Design and analysis of system equipment and user apparatus are based on sinusoidal current and voltage waveforms with nominal or rated magnitudes and frequency. Although the generated voltages of synchronous machines in power plants are nearly sinusoidal, some undesired and/or unpredictable conditions—such as lightning and short-circuit faults—and nonlinear loads cause steady-state and/or transient voltage and current disturbances. For example, electric arc furnaces cause voltage fluctuations, power electronic converters generate current harmonics and distort voltage waveforms, and short-circuit faults result in voltage sags and swells. On the other hand, most customer loads such as computers, microcontrollers, programmable logic controllers (PLCs), and hospital equipment are sensitive and unprotected to power quality disturbances and their proper operation depends on the quality of the voltage that is delivered to them.

To optimize the performance and stability of power systems and to overcome power quality problems, many techniques and devices have been proposed and implemented. Conventional devices used for voltage regulation, power factor correction, and power quality improvement include shunt or series power capacitors, phase shifters, and passive or active filters (Sections 10.1 to 10.7). Advanced technical solutions are flexible AC transmission system (FACTS) devices [19,20] to improve voltage regulation, as well as steady-state and instantaneous active and reactive power control at fundamental frequency. Other approaches are

based on custom power devices [21,22] that offer a variety of options including series and shunt active (P) and reactive (Q) power compensation to improve power quality, voltage regulation, as well as steady-state and dynamic performances at fundamental and harmonic frequencies.

The concept of hybrid active filtering with shunt and series branches was introduced by Akagi and colleagues [23–25]. The most complete configuration of hybrid filters is the unified power quality conditioner (UPQC), which is also known as the universal active filter [18,26–30]. UPQC is a multifunction power conditioner that can be used to compensate various voltage disturbances of the power supply, to correct voltage fluctuation, and to prevent the harmonic load current from entering the power system. It is a custom power device designed to mitigate the disturbances that affect the performance of sensitive and/or critical loads. UPQC has shunt and series compensation capabilities for (voltage and current) harmonics, reactive power, voltage disturbances (including sags, swells, flicker, etc.), and power-flow control. Normally, a UPQC consists of two voltage-source converters with a common DC link designed in single-phase, three-phase three-wire, or three-phase four-wire configurations. One converter is connected in series through a transformer between the source and the critical load at the PCC and operates as a voltage-source inverter (VSI). The other converter is connected in shunt at the PCC through a transformer and operates as a current-source inverter (CSI). The active series converter compensates for voltage supply disturbances (e.g., including harmonics, imbalances, negative and zero-sequence components, sags, swells, and flickers), performs harmonic isolation, and damps harmonic oscillations. The active shunt converter compensates for load current waveform distortions (e.g., caused by harmonics, imbalances, and neutral current) and reactive power, and performs the DC link voltage regulation.

UPQC is specifically designed to protect the critical load at the point of installation connected to distorted distribution systems by correcting any of the following shortcomings:

- Harmonic distortions (of source voltage and load current) at the utility-consumer PCC.
- Voltage disturbances (sags, swells, flickers, imbalances, and instability).
- Voltage regulation.
- Reactive power flow at fundamental and harmonic frequencies.
- Neutral and negative-sequence currents.
- Harmonic isolation (e.g., between a subtransmission and a distribution system).

Therefore, UPQC has the capability of improving power quality at the point of installation of power distribution systems. This includes compensation of voltage-based disturbances across the sensitive load (such as voltage harmonics, voltage imbalances, voltage flickers, sags, and swells) and current-based distortions of the system (such as current harmonics, reactive power, and neutral current). However, UPQC is not capable of improving the power quality of the entire system.

The main compensation devices for power quality improvement are introduced, and in Section 10.9 the UPQC structure and operation are discussed. Section 10.10 discusses the control system of the UPQC. Sections 10.11 and 10.12 provide detailed analyses and discussions of two main approaches for implementing UPQC control systems including the Park ($dq0$) transformation and the instantaneous real and reactive power approach. Section 10.13 explores UPQC performance through six application examples.

Over the past several decades the transmission and distribution of electric power has become extremely complicated and subject to very tight operational and power quality specifications: the loads are increasing, power transfer grows, and the power system becomes increasingly more difficult to operate and less secure with respect to major disturbances and outages. The full potential of transmission interconnections may not be utilized due to:

- Large power flow with inadequate control pooling.
- Excessive reactive power in various part of the power system.
- Large dynamic power swings between different parts of the system.

The main problems with interconnected transmission lines are:

- At no-load or light-load condition the voltage increases at receiving ends resulting in reduced stability.
- At loaded conditions the voltage drop increases resulting in the decrease of transmittable power.
- Voltage collapse and voltage instability.
- Power and power angle variation due to small disturbances.
- Transient instability due to sudden and severe power variations or oscillations.

As the length of a line increases these problems become more pronounced. The ultimate solution is the instantaneous control of the bus voltage (V), the active power (P), the reactive power (Q), and the total harmonic voltage distortion (THD_v).

10.8.1 Conventional compensation devices

The conventional approaches for voltage regulation and power compensation at fundamental frequency are relatively simple and inexpensive. They include:

- Shunt compensators (capacitors, reactors).
- Series compensators (series capacitors).
- Phase shifters.

These devices are mechanically controlled at low speed and there are wear-and-tear problems resulting in greater operating margins and redundancies. If conventional compensation devices are employed, the system is not fully controlled and optimized from a dynamic and steady-state point of view.

Conventional devices used for power quality improvement are passive and active power filters, as discussed in [Sections 10.1 to 10.7](#). Passive filters are simple and inexpensive. However, they have fixed (tuned) frequencies and will not perform properly under changing system configurations and/or variable (nonlinear) load conditions. Active filters eliminate harmonics at the point of installation without considering the power quality status of the entire system. In addition, they do not solve the stability problem, and are not generally capable of optimizing the performance (e.g., voltage regulation, reactive power compensation) of power systems.

10.8.2 Flexible AC transmission systems (FACTS)

In order to meet stringent specifications and the established contractual obligations set out in supply agreements, various technologies have been used. Among the newly developed technical solutions are flexible AC transmission systems (FACTS), which were introduced by GyuGyi [19,20]. They offer a variety of options including series and shunt compensation of power at fundamental frequency to achieve instantaneous and individual or simultaneous control of V , P , and Q . FACTS devices are designed to improve the reliability and the quality of power transmission. However, they do not consider the quality of power that is delivered to customers. This section briefly introduces different types of FACTS controllers [20].

10.8.2.1 Shunt FACTS controllers

Three types of shunt FACTS controllers are employed to inject compensation current into the system. An injected current in phase quadrature with the phase voltage results in Q control; other phase relations provide simultaneous control of P and Q .

- **Variable impedance shunt FACTS controllers** are also called static VAR generators (SVGs) or static VAR compensators (SVCs). They are thyristor-controlled reactors and/or thyristor-switched capacitors and consist of the following types:
 - Thyristor-controlled reactors (TCRs) and thyristor-switched reactors (TSRs).
 - Thyristor-switched capacitor (TSC).
 - Fixed capacitor, thyristor-controlled reactor (FC-TCR).
 - Thyristor-switched capacitor, thyristor-controlled reactor (TSC-TCR).
- **Switching converter SVG shunt FACTS controllers** are switching converter based controllable synchronous voltage sources and consist of the following type:
 - Static synchronous compensator (STATCOM).
- **Hybrid SVG and switching converter shunt FACTS controllers** are switching type SVGs with fixed (or controllable) capacitors and/or reactors. They include:
 - STATCOM with fixed capacitors (STATCOM & FC).
 - STATCOM with fixed reactors (STATCOM & FR).
 - STATCOM with TSC and TCR units (STATCOM & TSC-TCR).

10.8.2.2 Series FACTS controllers

There are two basic types of series compensation:

- **Variable impedance series FACTS controllers** use thyristor-switches to provide series variable reactive impedances. They include:
 - Gate turn-off (GTO) thyristor-controlled series capacitor (GCSC).
 - Thyristor-switched series capacitor (TSSC).
 - Thyristor-controlled series capacitor (TCSC).
- **Switching converter series FACTS controllers** use switching converters to provide variable series voltage sources. They include:
 - Static synchronous series compensator (SSSC).

10.8.2.3 Combined shunt-series FACTS controllers

These controllers may consist of a number of shunt, a number of series, or a combination of shunt and series FACTS devices. Three popular combined shunt-series FACTS controllers are:

- Unified power flow controller (UPFC) has one converter in series and the other in shunt with the transmission line.
- Interline power flow controller (IPFC) has both converters in series with usually a different line.
- Back-to-back STATCOM has both converters in shunt, each connected to a different power system.

10.8.2.4 FACTS controllers with storage

Any of the converter-based FACTS devices can generally accommodate storage such as capacitors, batteries, and superconducting coils. These controllers are more effective for controlling system dynamics due to their ability to dynamically provide/extract real power P to/from a system.

10.8.2.5 Development of FACTS controllers

The first generation of FACTS (e.g., SVC, TSSC, TCSC, thyristor controlled phase shifters, etc.) use thyristor controlled switches as control devices. The second generation (e.g., STATCOM, SSSC, UPFC, IPFC, etc.) are converter-based devices and use switching static converters as fast controllable voltage and current sources.

The application of FACTS devices is increasing as their advantages become more evident to power system engineers and researchers. FACTS controllers are primarily designed to operate at fundamental power frequency under sinusoidal conditions and do not necessarily improve the quality of electric power. In fact, most FACTS controllers use switching devices that inject current and voltage harmonics into power systems. Corrective approaches (e.g., sinusoidal PWM techniques) have been proposed to minimize their limitations.

10.8.3 Custom power devices

The introduction of power electronic loads has raised much concern about power quality problems caused by harmonics, distortions, interruptions, and surges. Equipment such as large industrial drives (e.g., cycloconverters) generate significantly high voltage and current (inter-, sub-) harmonics and create extensive voltage fluctuation. This is more evident in power systems that make use of long transmission lines with limited reactive capacities.

The application of harmonic filters and SVCs to radial transmission systems can offer partial solution to high THD levels and voltage fluctuations. Yet, the lack of dynamic capabilities of these devices limits them to bulk correction. In addition, they might be effective in one application but fail to correct other power quality issues.

The concept of custom power was introduced by Hingorani [21] as the solution to V , P , and Q compensation and power quality problems at the expense of high cost and network complexity. As FACTS controllers improve the reliability and quality of power transmission—by simultaneously enhancing both power transfer capacity and stability—custom power devices

enhance the quality and reliability of power delivered to the customer. With a custom power device, a customer (e.g., a sensitive load) will be able to receive a prespecified quality of electric power with a combination of specifications including but not limited to:

- Magnitude and duration of over- and under-voltages with specified limits.
- Low harmonic distortion in the supply, load voltages, and currents.
- Small phase imbalance.
- Low flicker in the supply voltage.
- Control of power interruptions.
- Control of supply voltage frequency within specified limits.

Custom power devices are classified based on their power electronic controllers, which can be either of the network-reconfiguration type or of the compensation type. The network-reconfiguration devices—also called switchgear—include the solid-state and/or static versions of current limiting, current breaking, and current transferring components. The compensation-type custom power devices either compensate a load (e.g., correct its power factor, imbalance) or improve the quality of the supply voltage (e.g., eliminate its harmonics). They are either connected in shunt or in series or a combination of both. Custom power devices are classified as follows [22]:

- **Network-reconfiguration custom power devices** include:
 - Solid-state current limiter (SSCL).
 - Solid-state breaker (SSB).
 - Solid-state transfer switch (SSTS).
- **Compensation-custom power devices** include:
 - Distribution STATCOM (DSTATCOM).
 - Dynamic voltage restorer/regulator (DVR).
 - Unified power quality conditioner (UPQC).

Custom power devices are designed to improve the quality of power at their point of installation of the power distribution systems. They are not primarily designed to improve the power quality of the entire system.

10.8.4 Active power line conditioner (APLC)

The APLC is a converter-based compensation device designed to improve the power quality of the entire distribution system by injecting corrective harmonic currents at selected (sensitive) buses. It is usually necessary to use more than one APLC unit to improve the power quality of the entire distribution system. Therefore, APLC units can be considered as a group of shunt active filters; their placement, sizing, and compensation levels (e.g., orders, magnitudes, and phases of injected current harmonics) are optimally designed to improve the power quality of the entire distribution system. The number of required APLC units depends on the severity of distortion, the nature of the distribution system, and types of nonlinear loads, as well as the required quality of electric power (e.g., as specified by IEEE-519). At present, the design of APLCs does not consider transient distortions and stability issues.

10.8.5 Remark regarding compensation devices

In the absence of saturation and nonlinearity, power system voltage and current waveforms are sinusoidal and FACTS controllers are employed to solve the associated steady-state, transient, and stability problems. Custom power devices are designed to improve the steady-state and transient problems of distorted distribution systems at the point of installation. Power filters and APLCs mitigate power quality problems at a given location and throughout the power system, respectively. However, at present, none of them are designed to simultaneously consider stability and power quality issues. This is highly related to the fact that in conventional centralized power systems, power quality problems are limited to the low- and medium-voltage distribution systems, whereas stability issues are mainly occurring in high-voltage transmission systems. With the introduction of distributed generation (DG) and the fast growing rate of renewable energy sources in today's power system, there will be an overlap between stability and power quality issues. More attention and further research is required to analyze and examine stability issues in decentralized distorted networks, as well as isolated and DG power systems.

10.9 Unified power quality conditioner (UPQC)

Unified power quality conditioners (UPQCs) are viable compensation devices that are used to ensure that delivered power meets all required standards and specifications at the point of installation. The ideal UPQC can be represented as the combination of a voltage-source converter (injecting series voltage v_c), a current-source converter (injecting shunt current i_c), and a common DC link (connected to a DC capacitor). There are two possible ways of connecting the unit to the terminal voltage (v_t) at PCC:

- Right-shunt UPQC (Fig. 10.30A), where the shunt compensator (i_c) is placed at the right side of the series compensator (v_c).
- Left-shunt UPQC (Fig. 10.30B), where the shunt compensator (i_c) is placed at the left side of v_c .

These two structures have similar features; however, the overall characteristics of the right-shunt UPQC are superior (e.g., operation at zero power injection/absorption mode, achieving unity power factor at load terminals, and full reactive power compensation). In this chapter,

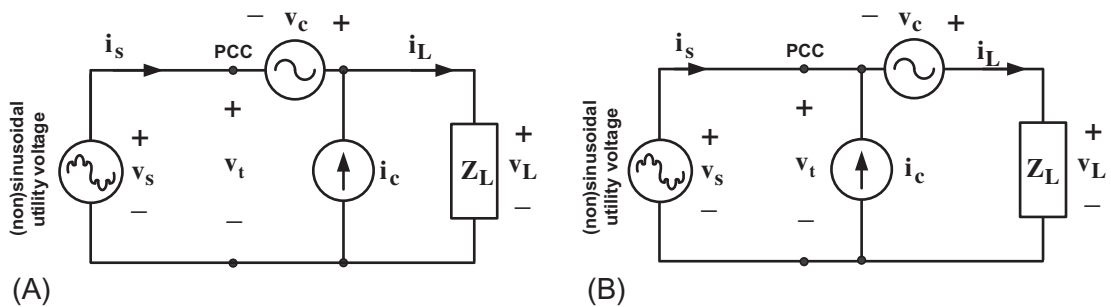


FIG. 10.30 Ideal UPQC structure; (A) the right-shunt UPQC, (B) the left-shunt UPQC [22].

a right-shunt UPQC configuration is assumed and analyzed. References [22] and [18] present detailed analysis of the left-shunt structure.

10.9.1 UPQC structure

The detailed structure of the right-shunt UPQC is shown in Fig. 10.31. Assuming a three-phase, four-wire configuration with an unbalanced and distorted system voltage (v_s) and nonsinusoidal load current (i_L), the UPQC shall perform the following functions:

- Convert the feeder (system) current i_s to balanced sinusoids through the shunt compensator.
- Convert the load voltage v_L to balanced sinusoids through the series compensator.
- Ensure zero real power injection (and/or absorption) by the compensators.
- Supply reactive power to the load (Q compensation).

UPQC employs two converters that are connected to a common DC link with an energy storage capacitor. The main components of a UPQC are series and shunt power converters, DC capacitors, low-pass and high-pass passive filters, and series and shunt transformers:

- **Series converter** is a voltage-source converter connected in series with the AC line and acts as a voltage source to mitigate voltage distortions. It eliminates supply voltage flickers or imbalance from the load terminal voltage and forces the shunt branch to absorb current harmonics generated by the nonlinear load. Control of the series converter output voltage is usually performed using PWM. The gate pulses are generated by the comparison of a fundamental voltage reference signal with a high-frequency triangular waveform.
- **Shunt converter** is a voltage-source converter connected in shunt with the same AC line and acts as a current source to cancel current distortions, to compensate reactive current of the load, and to improve the power factor. It also performs the DC-link voltage regulation,

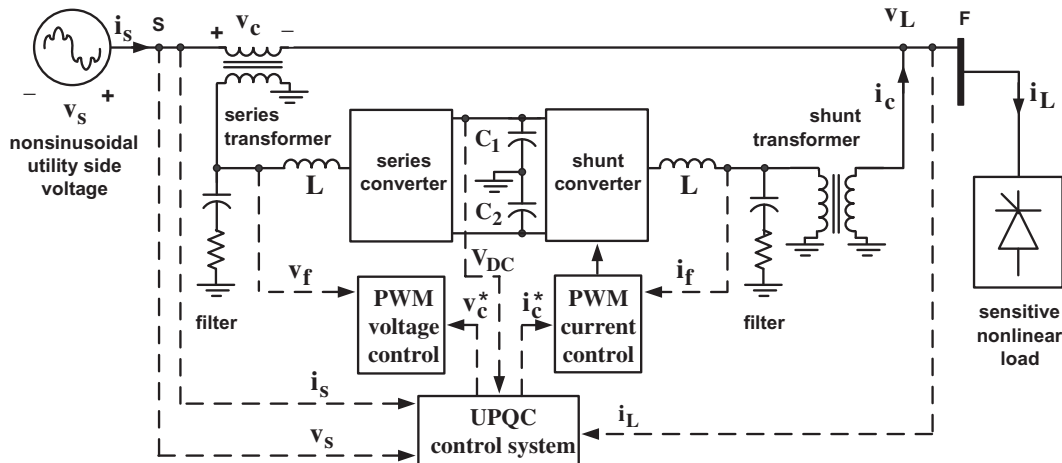


FIG. 10.31 Detailed configuration of the right-shunt UPQC.

resulting in a significant reduction of the DC capacitor rating. The output current of the shunt converter is adjusted (e.g., using a dynamic hysteresis band) by controlling the status of semiconductor switches such that output current follows the reference signal and remains in a predetermined hysteresis band.

- **Midpoint-to-ground DC capacitor bank** is divided into two groups, which are connected in series. The neutrals of the secondary transformers are directly connected to the DC link midpoint. As the connection of both three-phase transformers is Y/Y_0 , the zero-sequence voltage appears in the primary winding of the series-connected transformer in order to compensate for the zero-sequence voltage of the supply system. No zero-sequence current flows in the primary side of both transformers. It ensures the system current to be balanced even when the voltage disturbance occurs.
- **Low-pass filter** is used to attenuate high-frequency components at the output of the series converter that are generated by high-frequency switching.
- **High-pass filter** is installed at the output of shunt converter to absorb current switching ripples.
- **Series and shunt transformers** are implemented to inject the compensation voltages and currents, and for the purpose of electrical isolation of UPQC converters.

The UPQC is capable of steady-state and dynamic series and/or shunt active and reactive power compensations at fundamental and harmonic frequencies. However, the UPQC is only concerned about the quality of the load voltage and the line current at the point of its installation, and it does not improve the power quality of the entire system.

10.9.2 Operation of the UPQC

The shunt converter forces the feeder (system) current to become a balanced (harmonic-free) sinusoidal waveform, while the series converter ensures a balanced, sinusoidal, and regulated load voltage.

10.9.2.1 Operation of the UPQC with unbalanced and distorted system voltage and load current

In most cases the three-phase system voltages and load currents are unbalanced and contain higher order frequency components (harmonics), and a UPQC unit is used to compensate for both types of distortions. The UPQC takes the following two steps to compensate for the imbalance and the distortion of system voltage and line current [22].

Step 1: Obtaining balanced voltage at load terminals

The imbalance or distortion of a three-phase system may consist of positive, negative, and zero-sequence fundamental and harmonic components. The system (utility) voltage at point S (Fig. 10.31) can be expressed as

$$v_s(t) = v_{s+}(t) + v_{s-}(t) + v_{s0}(t) + \sum v_{sh}(t), \quad (10.23)$$

where subscripts +, −, and 0 refer to the positive-, negative-, and zero-sequence fundamental components, respectively; $v_{s+}(t) = V_{s+} \sin(\omega t + \phi_+)$, $v_{s-}(t) = V_{s-} \sin(\omega t + \phi_-)$, and $v_{s0}(t) = V_{s0} \sin(\omega t + \phi_0)$ are positive-, negative-, and zero-sequence fundamental frequency components

of the system voltage; $\sum v_{sh}(t) = v_{sh} \sin(h\omega t + \phi_h)$ represents the harmonics in the voltage, h is harmonic order; and ϕ_+ , ϕ_- , ϕ_0 , and ϕ_h are the corresponding voltage phase angles.

Usually, the voltage at the load at PCC is expected to be sinusoidal with a fixed amplitude V_L

$$v_L(t) = V_L \sin(\omega t + \phi_+). \quad (10.24)$$

Hence the series converter will need to compensate for the following components of voltage

$$v_c(t) = v_L(t) - v_s(t) = (V_L - V_{s+}) \sin(\omega t + \phi_+) - v_{s-}(t) - v_{s0}(t) - \sum v_{sh}(t). \quad (10.25)$$

The control system should automatically control the series converter so that its generated voltage at its output terminals is $v_c(t)$ (in Fig. 10.31) and matched with Eq. (10.25).

Step 2: Obtaining balanced system current through the feeder

The distorted nonlinear load current (Fig. 10.31) can be expressed as

$$i_L(t) = i_{L+}(t) + i_{L-}(t) + i_{L0}(t) + \sum i_{Lh}(t), \quad (10.26)$$

where $i_{L+}(t) = I_{L+} \sin(\omega t + \delta_+)$, $i_{L-}(t) = I_{L-} \sin(\omega t + \delta_-)$, and $i_{L0}(t) = I_{L0} \sin(\omega t + \delta_0)$ are the fundamental frequency positive-, negative- and zero-sequence components of the load current and $\sum i_{Lh}(t) = \sum I_{Lh} \sin(h\omega t + \delta_h)$ represents the harmonics of the load current. δ_+ , δ_- , δ_0 , and δ_h are the corresponding current phase angles.

The shunt converter is supposed to provide compensation of the load harmonic currents to reduce voltage distortion. It should act as a controlled current source and its output current must consist of harmonic, negative-, and zero-sequence currents to cancel the load current distortions. It is usually desired to have a certain phase angle (displacement power factor angle), θ_L , between the positive sequences of voltage and current at the load terminals

$$\theta_L = (\delta_+ - \phi_+) \implies \delta_+ = (\phi_+ + \theta_L). \quad (10.27)$$

Substituting Eq. (10.27) into Eq. (10.26) and simplifying yields

$$i_L(t) = I_{L+} \sin(\omega t + \phi_+) \cos \theta_L + \left[I_{L+} \cos(\omega t + \phi_+) \sin \theta_L + i_{L-}(t) + i_{L0}(t) + \sum i_{Lh}(t) \right]. \quad (10.28)$$

It is clear that the output current of the shunt converter should be controlled and must assume a wave shape as specified by the 2nd, 3rd, 4th, and 5th terms of Eq. (10.28). That is

$$i_c(t) = I_{L+} \cos(\omega t + \phi_+) \sin \theta_L + i_{L-}(t) + i_{L0}(t) + \sum i_{Lh}(t). \quad (10.29)$$

This will ensure that the system (feeder) current has a sinusoidal waveform:

$$i_s(t) = i_L(t) - i_c(t) = (I_{L+} \cos \theta_L) \sin(\omega t + \phi_+). \quad (10.30)$$

Eqs. (10.25), (10.29) demonstrate the principles of an ideal UPQC. If these equations are dynamically implemented by the UPQC controller, terminal load voltage and system current will be sinusoidal. In addition, system voltage and current will be in phase if $\theta_L = 0$ (e.g., unity power factor), and neither positive nor negative reactive power will be supplied by the source.

10.9.2.2 Operation of UPQC with unbalanced system voltages and load currents

Assuming that the system voltages and load currents are unbalanced but not distorted (harmonic-free), one can generate UPQC equations as shown below. The UPQC takes the following four steps to compensate the imbalance of the system voltages and line currents [22].

Step 1: Obtaining balanced voltages at load terminals.

From the structure of the ideal right-hand UPQC (Fig. 10.31) follows

$$v_L(t) = v_s(t) + v_c(t). \quad (10.31)$$

To obtain balanced voltages at the load terminals, $v_c(t)$ must cancel the imbalance of the system voltages; therefore,

$$V_{c0} = -V_{s0}, \quad V_{c-} = -V_{s-}, \quad (10.32)$$

which implies that V_L is of positive sequence. Note that the positive-sequence magnitude of the load voltage (V_L) should be set to the desired regulated voltage, whereas its phase angle depends on the load displacement power factor.

One defines an injected positive-sequence voltage ($|V_{c+}|$) such that the series compensator does not require any positive-sequence (real) power. Because i_s flows through the series compensator, v_{c+} must have a phase difference of 90° with i_{s+} . This implies

$$V_{L+} = V_{s+} + V_{c+}(a + jb), \quad (10.33)$$

where $(a + jb)$ is the unit vector that is perpendicular to I_{s+} . Assuming $V_{L+} = V_L \angle 0^\circ$, Eq. (10.33) results in the following second-order equation

$$|V_{c+}|^2 - 2a|V_L||V_{c+}| + |V_L|^2 - |V_{s+}|^2 = 0. \quad (10.34)$$

If the desired regulated voltage level V_L is achievable, this quadratic equation will have two real solutions for $|V_{c+}|$. The minimum solution should be selected because it will result in less cost (e.g., smaller rating) of the UPQC.

Step 2: Obtaining balanced system currents through the feeder

From the structure of the ideal right-hand UPQC (Fig. 10.31) one gets

$$i_L(t) = i_s(t) + i_c(t). \quad (10.35)$$

To obtain balanced system currents, the injected current $i_c(t)$ must become zero and one gets for the sequence components of the load current

$$I_{c0} = I_{L0}, \quad I_{c+} = 0, \quad I_{c-} = I_{L-}. \quad (10.36)$$

This will ensure that a positive-sequence current (equal to the positive-sequence load current) only is passing through the system.

Step 3: Ensuring zero real power injection/absorption by the compensators

Eqs. (10.31)–(10.36) guarantee that imbalances in both the system voltages and the load currents are canceled by the UPQC. Moreover:

- The series compensator (converter) will consume zero average (real) power because its voltage and current are in quadrature (e.g., $\tilde{V}_{c+}$ is in quadrature with $\tilde{I}_{s+}$).

- The shunt compensator (converter) will also inject zero average (real) power since its positive-sequence injected current is zero ($I_{c+} = 0$) and the load voltage is of positive sequence only.

Therefore, the UPQC does neither inject nor absorb real power.

Step 4: Reactive power injection by the compensators

The UPQC can supply part of the load reactive power through its shunt compensator (converter). To do this Eq. (10.36) has to be modified while keeping in mind that the zero and negative-sequence components of the load current must also be canceled by the shunt converter. The new conditions for the injected shunt currents are now

$$I_{c0} = I_{L0}, \quad I_{c+} \neq 0, \quad I_{c-} = I_{L-}. \quad (10.37)$$

We can divide the average component of the load reactive power between the shunt converter, the series converter, and the system. Due to the fact that the average values of the active and the reactive powers of the shunt converter depend only on the positive-sequence current and its real power consumption (or absorption) must be zero, one gets

$$|V_{L+}| |I_{c+}| \cos \theta = 0 \implies \theta = \pm 90^\circ \quad \text{because } (|V_{L+}| \neq 0 \text{ and } |I_{c+}| \neq 0), \quad (10.38a)$$

$$|V_{L+}| |I_{c+}| \sin \theta = \beta (Q_{L-\text{avg}}), \quad (10.38b)$$

where θ is the angle between V_{L+} and I_{c+} , scalar β indicates how much reactive power must be supplied by the shunt converter, and $Q_{L-\text{avg}}$ is the average of the load reactive power.

For inductive loads (e.g., negative $Q_{L-\text{avg}}$), compensator (converter) current I_{c+} must lag V_L by 90° (to satisfy Eq. 10.38a) and one can write

$$|I_{c+}| = \beta \frac{|Q_{L-\text{avg}}|}{|V_L|}. \quad (10.39)$$

The cancellation of the supply and load current imbalances using an UPQC is addressed in Ref. [22, pp. 383–385] and the reactive power compensation with a UPQC is discussed in Ref. [22, pp. 386–388].

10.10 The UPQC control system

It is possible to distinguish between disturbances related to the quality of the system (supply) voltage and those related to the quality of the load current. The UPQC corrects both problems at the point of installation (e.g., at the terminals of a sensitive or critical load). It combines a shunt active filter together with a series active filter in a back-to-back configuration to simultaneously improve the power quality of the supply current through the power system and the load voltage at PCC. The main functions of the UPQC are summarized in Table 10.1.

The main components of a UPQC are the series and shunt converters representing active filters, high and low-pass passive filters, DC capacitors, and series and shunt transformers, as shown in Fig. 10.31. The shunt converter is a STATCOM that injects nonsinusoidal corrective

TABLE 10.1 Main functions of UPQC controller.

Series converter	Shunt converter
• Compensation of voltage harmonics (including negative- and zero-sequence components at fundamental frequency) • Mitigation of harmonic currents through the power line (harmonic isolation) • Improving system stability (damping) • Controlling active and reactive powers	• Compensation of current harmonics (including negative- and zero-sequence components at fundamental frequency) • Compensation of the reactive power at the load • Regulation of the DC capacitor voltage • Regulation of the load voltage

current to improve the power quality, regulate load voltage, and control the load power factor. It also compensates for the load reactive power demand, corrects supply current harmonics, and regulates the DC-link voltage. The series converter represents a dynamic voltage regulator (DVR) that introduces corrective harmonic voltages to ensure sinusoidal supply current and constant voltage conditions under steady-state and transient operating conditions (e.g., during voltage sags and swells).

The power electronic converters are frequently voltage-source inverters (VSIs) with semiconductor switches. The output current of the shunt converter is adjusted using an appropriate control scheme (e.g., dynamic hysteresis band). The states of semiconductor switches are controlled so that the output current tracks the reference signal and remains in a predetermined hysteresis band. The installed passive high-pass filter—at the output of shunt converter—absorbs the current switching ripples.

Control of the series converter output voltage is performed using PWM techniques. The gate pulses are generated by the comparison of a fundamental voltage reference signal with a high-frequency triangular waveform. The low-pass filter attenuates high-frequency components at the output of the series converter, generated by high-frequency switching.

For the compensation of the zero-sequence components, the split-capacitor scheme is usually used on the DC side of converters and the capacitor's midpoint is connected to the neutral. In order to inject the generated voltages and currents, and for the purpose of electrical isolation of UPQC converters, series and shunt transformers may also be included in the UPQC configuration.

10.10.1 Pattern of reference signals

Provided unbalanced and distorted source voltages and nonlinear load currents exist, then—based on Eqs. (10.23)–(10.39)—the output voltage of the series converter ($v_c(t)$, Fig. 10.31) and the output current of shunt converter ($i_c(t)$, Fig. 10.31) must obey the following equations

$$\begin{cases} v_c(t) = (V_L - V_{s+}) \sin(\omega t + \phi_+) - v_{s-}(t) - v_{s0}(t) - \sum v_{sh}(t) \\ i_c(t) = I_{L+} \cos(\omega t + \delta_+) \sin \theta_L + i_{L-}(t) + i_{L0}(t) + \sum i_{Lh}(t) \end{cases}, \quad (10.40)$$

So that the current drawn from the source and the voltage appearing across the load will be sinusoidal.

Generation, tracking, and observation of these reference signals are performed by the UPQC control system. There are two main classes of UPQC control: the first one is based on the Park transformation [31], and the second one on the instantaneous real and imaginary power theory [18,30,32]. These will be introduced in the following sections. There are other control techniques for active and hybrid (e.g., UPQC) filters as discussed in Section 10.7.

10.11 UPQC control using the Park ($dq0$) transformation

It is clear that the UPQC should first separate the fundamental positive-sequence component from other components (e.g., derivation of reference signal using either waveform compensation, instantaneous power compensation, or impedance synthesis, as discussed in Sections 10.7.1–10.7.3, respectively), and then control the outputs of series and shunt converters according to Eq. (10.40) (e.g., generation of compensation signal using reference-following techniques as discussed in Section 10.7.5). The conventional approach to perform the first task for the UPQC relies on the synchronous $dq0$ reference frame.

10.11.1 General theory of the Park ($dq0$) transformation

In the study of power systems, mathematical transformations are often used to decouple variables, to facilitate the solution of time-varying equations, and to refer variables to a common reference frame. A widely used transformation is the Park ($dq0$) transformation [31]. It is can be applied to any arbitrary (sinusoidal or distorted) three-phase, time-dependent signals.

The Park ($dq0$) transformation is defined as

$$\begin{bmatrix} x_d \\ x_q \\ x_0 \end{bmatrix} = \sqrt{\frac{2}{3}} \begin{bmatrix} \cos \theta_d & \cos (\theta_d - 2\pi/3) & \cos (\theta_d + 2\pi/3) \\ -\sin \theta_d & -\sin (\theta_d - 2\pi/3) & -\sin (\theta_d + 2\pi/3) \\ \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} \end{bmatrix} \begin{bmatrix} x_a \\ x_b \\ x_c \end{bmatrix}. \quad (10.41)$$

In this equation, $\theta_d = \omega_d t + \phi$, where ω_d is the angular velocity of signals to be transformed and ϕ is the initial angle.

As discussed in Section 10.7, the main advantage of the $dq0$ transformation is that the fundamental (positive-sequence) component of waveform will be transferred to a constant DC term under steady-state conditions. In addition, a harmonic component with frequency ω_h will appear as a sinusoidal signal with frequency of $\omega_h - \omega_d$ in the $dq0$ domain.

10.11.2 Control of series converter based on the $dq0$ transformation

The system (supply) voltage may contain negative- and zero-sequence components as well as harmonic distortions that need to be eliminated by the series compensator. The control of the series compensator based on the $dq0$ transformation is shown in Fig. 10.32.

The system voltages are first detected and then transformed into the synchronous $dq0$ reference frame. If the system voltages are unbalanced and contain harmonics, then the Park transformation (Eq. 10.41) results in

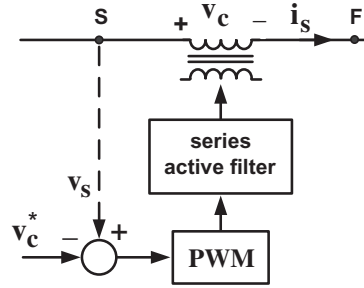


FIG. 10.32 Control block of the UPQC series compensator using Park ($dq0$) transformation [31].

$$\begin{aligned}
 \begin{bmatrix} v_d \\ v_q \\ v_0 \end{bmatrix} &= \sqrt{\frac{2}{3}} \begin{bmatrix} \cos \theta_d & \cos \left(\theta_d - \frac{2\pi}{3} \right) & \cos \left(\theta_d + \frac{2\pi}{3} \right) \\ -\sin \theta_d & -\sin \left(\theta_d - \frac{2\pi}{3} \right) & -\sin \left(\theta_d + \frac{2\pi}{3} \right) \\ \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} \end{bmatrix} \begin{bmatrix} v_a \\ v_b \\ v_c \end{bmatrix} \\
 &= \sqrt{\frac{3}{2}} \left\{ \begin{bmatrix} V_{sp} \cos \phi_p \\ V_{sp} \sin \phi_p \\ 0 \end{bmatrix} + \begin{bmatrix} V_{sn} \cos (2\omega t + \phi_n) \\ -V_{sn} \sin (2\omega t + \phi_n) \\ 0 \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ V_{s0} \cos (2\omega t + \phi_0) \end{bmatrix} \right. \\
 &\quad \left. + \begin{bmatrix} \sum V_{sh} \cos [(h-1)(2\omega t + \phi_h)] \\ \sum V_{sh} \sin [(h-1)(2\omega t + \phi_h)] \\ 0 \end{bmatrix} \right\} = \begin{bmatrix} V_{dp} \\ V_{qp} \\ 0 \end{bmatrix} + \begin{bmatrix} V_{dn} \\ V_{qn} \\ 0 \end{bmatrix} + \begin{bmatrix} 0 \\ 0 \\ V_{00} \end{bmatrix} + \begin{bmatrix} V_{dh} \\ V_{qh} \\ 0 \end{bmatrix}, \quad (10.42)
 \end{aligned}$$

where ϕ_p is the phase difference between the positive-sequence component and the reference voltage. Based on Eq. (10.42), the fundamental positive-sequence component of the voltage is represented by DC terms (e.g., $V_{sp} \cos \phi_p$ and $V_{sp} \sin \phi_p$) in the $dq0$ reference frame.

The load bus voltage should be maintained sinusoidal with constant amplitude even if the source voltage is distorted. Therefore, the expected load voltage in the $dq0$ domain will only consist of one value

$$V_{dq0}^{\text{expected}} = \begin{bmatrix} V_{dF} \\ V_{qF} \\ V_{0F} \end{bmatrix} = [T_{dq0}(\theta_d)] V_{abc}^{\text{expected}} = \begin{bmatrix} V_m \\ 0 \\ 0 \end{bmatrix}, \quad (10.43)$$

where

$$V_{abc}^{\text{expected}} = \begin{bmatrix} V_s \cos(\omega t) \\ V_s \cos(\omega t + 120^\circ) \\ V_s \cos(\omega t - 120^\circ) \end{bmatrix}$$

are sinusoids and the compensation reference voltage is

$$V_{hdq0}^{\text{ref}} = V_{dq0}^{\text{expected}} - V_{sdq0}, \quad (10.44)$$

where V_{sdq0} is the distorted source voltage in the $dq0$ frame (Eq. 10.42). Therefore, V_{dp} of Eq. (10.42) should be maintained at V_m and all other terms must be eliminated by the compensation voltage.

The compensation reference voltage of Eq. (10.44) is then inversely transformed into the abc reference frame. Comparing the compensation reference voltage with a triangular wave, the output voltage of the series converter can be obtained by a PWM voltage control unit.

10.11.3 Control of shunt converter relying on the $dq0$ transformation

Similar transformation as employed for voltages can be applied to current waveforms as well

$$\begin{aligned} \begin{bmatrix} i_d \\ i_q \\ i_0 \end{bmatrix} &= \sqrt{\frac{2}{3}} \begin{bmatrix} \cos \theta_d & \cos \left(\theta_d - \frac{2\pi}{3} \right) & \cos \left(\theta_d + \frac{2\pi}{3} \right) \\ -\sin \theta_d & -\sin \left(\theta_d - \frac{2\pi}{3} \right) & -\sin \left(\theta_d + \frac{2\pi}{3} \right) \\ \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} \end{bmatrix} \begin{bmatrix} i_a \\ i_b \\ i_c \end{bmatrix} \\ &= \sqrt{\frac{3}{2}} \left\{ \begin{bmatrix} I_{Lp} \cos \theta_p \\ I_{Lp} \sin \theta_p \\ 0 \end{bmatrix} + \begin{bmatrix} I_{Ln} \cos (2\omega t + \theta_n) \\ -I_{Ln} \sin (2\omega t + \theta_n) \\ 0 \end{bmatrix} + \begin{bmatrix} \sum I_{Lh} \cos [(h-1)(2\omega t + \theta_h)] \\ \sum I_{Lh} \sin [(h-1)(2\omega t + \theta_h)] \\ 0 \end{bmatrix} \right\}. \end{aligned} \quad (10.45)$$

Unlike the voltage waveforms, which are maintained at their rated values, the load currents will change with the load characteristics at the PCC and it will not be possible to have a fixed expected reference current value. To solve this problem, different techniques are proposed and implemented to extract the fundamental positive-sequence component (which becomes a DC term in the $dq0$ reference frame) and the corresponding harmonic components, as discussed in Sections 10.7.1 to 10.7.3.

Therefore, the expected current in the $dq0$ reference frame has only one value

$$i_{dq0}^{\text{expected}} = \begin{bmatrix} I_{Lp} \cos \theta_p \\ 0 \\ 0 \end{bmatrix}. \quad (10.46)$$

The compensation reference current is

$$i_{hdq0}^{\text{ref}} = i_{dq0}^{\text{expected}} - i_{sdq0}, \quad (10.47)$$

where i_{sdq0} is the distorted load current in the $dq0$ frame (Eq. 10.45).

The shunt converter operates as a controlled current source and different techniques (e.g., hysteresis, predictive, and suboscillation control) are employed to ensure that its output current follows the corresponding reference signal i_{hdq0}^{ref} .

10.11.4 Control of DC link voltage using the $dq0$ transformation

In the UPQC configuration, the DC link voltage is usually divided into two capacitor units C_1 and C_2 connected in series. The voltages of these capacitors are such that $V_{C1} = V_{C2}$ under balanced operation. Normally, the DC link voltage is maintained at a desired/nominal level for all operating conditions.

10.12 UPQC control based on the instantaneous real and imaginary power theory

In this section, the UPQC control technique is based on the $\alpha\beta0$ transformation and the instantaneous active and reactive power theory is introduced [18,30,32].

10.12.1 Theory of instantaneous real and imaginary power

The $\alpha\beta0$ transformation applied to abc three-phase voltages in a four-wire system is

$$\begin{bmatrix} v_0 \\ v_\alpha \\ v_\beta \end{bmatrix} = \sqrt{\frac{2}{3}} \begin{bmatrix} \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} & \frac{1}{\sqrt{2}} \\ 1 & -\frac{1}{2} & -\frac{1}{2} \\ 0 & \sqrt{3}/2 & -\sqrt{3}/2 \end{bmatrix} \begin{bmatrix} v_a \\ v_b \\ v_c \end{bmatrix}. \quad (10.48)$$

The inverse $\alpha\beta0$ transformation is

$$\begin{bmatrix} v_a \\ v_b \\ v_c \end{bmatrix} = \sqrt{\frac{2}{3}} \begin{bmatrix} \frac{1}{\sqrt{2}} & 1 & 0 \\ \frac{1}{\sqrt{2}} & -\frac{1}{2} & \sqrt{3}/2 \\ \frac{1}{\sqrt{2}} & -\frac{1}{2} & -\sqrt{3}/2 \end{bmatrix} \begin{bmatrix} v_0 \\ v_\alpha \\ v_\beta \end{bmatrix}. \quad (10.49)$$

Identical relations hold for the currents.

The instantaneous three-phase active power is given by [32]

$$\begin{aligned} p_{\text{three-phase}}(t) &= v_a i_a + v_b i_b + v_c i_c = p_a(t) + p_b(t) + p_c(t) \\ &= v_\alpha i_\alpha + v_\beta i_\beta + v_0 i_0 \\ &= p_\alpha(t) + p_\beta(t) + p_0(t) = p(t) + p_0(t), \end{aligned} \quad (10.50)$$

where $p(t) = p_\alpha(t) + p_\beta(t) = v_\alpha i_\alpha + v_\beta i_\beta$ corresponds to the instantaneous three-phase real power and $p_0(t) = v_0 i_0$ is the instantaneous zero-sequence power. Note the separation of the zero-sequence component in the $\alpha\beta0$ system.

The instantaneous three-phase reactive power is defined as

$$\begin{aligned} q_{\text{three-phase}}(t) &= q_\alpha(t) + q_\beta(t) = v_\alpha i_\beta - v_\beta i_\alpha \\ &= -[(v_a - v_b)i_c + (v_b - v_c)i_a + (v_c - v_a)i_b]/\sqrt{3}. \end{aligned} \quad (10.51)$$

Therefore, the instantaneous real, reactive, and zero-sequence powers are calculated from

$$\begin{bmatrix} p_0 \\ p \\ q \end{bmatrix} = \begin{bmatrix} v_0 & 0 & 0 \\ 0 & v_\alpha & v_\beta \\ 0 & -v_\beta & v_\alpha \end{bmatrix} \begin{bmatrix} i_0 \\ i_\alpha \\ i_\beta \end{bmatrix}. \quad (10.52)$$

Here, p and q (in the $\alpha\beta 0$ space) are not expressed in the conventional watts and VARs. From Eq. (10.52), the α and β components of currents may be calculated as

$$\begin{bmatrix} i_\alpha \\ i_\beta \end{bmatrix} = \frac{1}{\Delta} \begin{bmatrix} v_\alpha & -v_\beta \\ v_\beta & v_\alpha \end{bmatrix} \begin{bmatrix} p \\ q \end{bmatrix} \quad \text{with} \quad \Delta = v_\alpha^2 + v_\beta^2. \quad (10.53)$$

These are divided into two types of currents

$$\begin{bmatrix} i_\alpha \\ i_\beta \end{bmatrix} = \frac{1}{\Delta} \left\{ \begin{bmatrix} v_\alpha & -v_\beta \\ v_\beta & v_\alpha \end{bmatrix} \begin{bmatrix} p \\ 0 \end{bmatrix} + \begin{bmatrix} v_\alpha & -v_\beta \\ v_\beta & v_\alpha \end{bmatrix} \begin{bmatrix} 0 \\ q \end{bmatrix} \right\} = \begin{bmatrix} i_{\alpha p} \\ i_{\beta p} \end{bmatrix} + \begin{bmatrix} i_{\alpha q} \\ i_{\beta q} \end{bmatrix}, \quad (10.54)$$

where

$i_{\alpha p} = v_\alpha p / \Delta$ is the α -axis instantaneous active current.
 $i_{\alpha q} = -v_\beta q / \Delta$ is the α -axis instantaneous reactive current.
 $i_{\beta p} = v_\beta p / \Delta$ is the β -axis instantaneous active current.
 $i_{\beta q} = v_\alpha q / \Delta$ is the β -axis instantaneous reactive current.

Now, the power components of the phases α and β can be separated as

$$\begin{bmatrix} p_\alpha \\ p_\beta \end{bmatrix} = \begin{bmatrix} v_\alpha i_\alpha \\ v_\beta i_\beta \end{bmatrix} = \begin{bmatrix} v_\alpha i_{\alpha p} \\ v_\beta i_{\beta p} \end{bmatrix} + \begin{bmatrix} v_\alpha i_{\alpha q} \\ v_\beta i_{\beta q} \end{bmatrix} = \begin{bmatrix} p_{\alpha p} \\ p_{\beta p} \end{bmatrix} + \begin{bmatrix} p_{\alpha q} \\ p_{\beta q} \end{bmatrix}, \quad (10.55)$$

where

$$\begin{aligned} p_{\alpha p} &= v_\alpha i_{\alpha p} = \frac{v_\alpha^2 p}{\Delta}, \\ p_{\alpha q} &= v_\alpha i_{\alpha q} = \frac{-v_\alpha v_\beta q}{\Delta}, \\ p_{\beta p} &= v_\beta i_{\beta p} = \frac{v_\beta^2 p}{\Delta}, \\ p_{\beta q} &= v_\beta i_{\beta q} = v_\alpha v_\beta q / \Delta, \end{aligned}$$

because $p_{\alpha q} + p_{\beta q} = 0$, and thus $p_{\text{three-phase}} = p_\alpha + p_\beta + p_0 = p_{\alpha p} + p_{\beta p} + p_0$.

All these instantaneous quantities are valid under steady-state, transient, and nonsinusoidal conditions of voltage and/or current waveforms. Furthermore:

- The conventional concept of reactive power corresponds to the peak value of $p(t)$ that has a zero average value. However, the new concept of instantaneous reactive power in the $\alpha\beta 0$ space corresponds to the parts of $p(t)$ that are dependent on the instantaneous imaginary

power q , which independently exist in each phase but vanish when added (e.g., $p_{\alpha q} + p_{\beta q} = 0$). If these powers ($p_{\alpha q}$ and $p_{\beta q}$) are transformed back to the original abc system, they add up to zero.

- The instantaneous real power (p) represents the net energy per second being transferred from source to load and vice versa at any time. It depends only on the voltages and currents in phases α and β . It does not have any zero-sequence power components.
- The imaginary power (q) does not contribute to the total instantaneous flow of energy. It relates to a block of energy exchanged between the phases. For example, consider a balanced three-phase capacitor bank connected to a balanced three-phase voltage source. The energy stored in each capacitor changes with time $W(t) = Cv^2(t)/2$. However, $v_a^2(t) + v_b^2(t) + v_c^2(t)$ is constant. Therefore,

$$\begin{cases} p_{\text{three-phase}} = p + p_0 = 0 \\ q = \bar{q} = -3V_+ I_+ \sin(\phi_+ - \delta_+) \\ = 3V_+ I_+ = -Q_{\text{three-phase}} \end{cases}$$

10.12.1.1 Application Example 10.6: The $\alpha\beta 0$ transformation for three-phase sinusoidal system supplying a linear load

Use $\alpha\beta 0$ transformation to calculate the load active and reactive power assuming the following sinusoidal system voltages and sinusoidal load currents [32]

$$\begin{cases} v_{as}(t) = \sqrt{2}V_S \sin \omega t \\ v_{bs}(t) = \sqrt{2}V_S \sin(\omega t + 120^\circ) \\ v_{cs}(t) = \sqrt{2}V_S \sin(\omega t - 120^\circ) \end{cases} \quad (\text{E10.6.1a})$$

$$\begin{cases} i_{aL}(t) = \sqrt{2}I_L \sin(\omega t - \phi) \\ i_{bL}(t) = \sqrt{2}I_L \sin(\omega t + 120^\circ - \phi) \\ i_{cL}(t) = \sqrt{2}I_L \sin(\omega t - 120^\circ - \phi) \end{cases} \quad (\text{E10.6.1b})$$

Solution to Application Example 10.6: The $\alpha\beta 0$ transformation for three-phase sinusoidal system supplying a linear load

$$\begin{cases} v_\alpha = \sqrt{3}V_S \sin \omega t \\ v_\beta = \sqrt{3}V_S \cos \omega t \\ v_0 = 0 \end{cases} \quad \text{and} \quad \begin{cases} i_\alpha = \sqrt{3}I_L \sin(\omega t - \phi) \\ i_\beta = \sqrt{3}I_L \cos(\omega t - \phi) \\ i_0 = 0 \end{cases} \quad (\text{E10.6.2})$$

Therefore, from Eq. (10.52)

$$\begin{cases} p = v_\alpha i_\alpha + v_\beta i_\beta = 3V_S I_L \cos \phi = P_{3\text{-phase}} \\ q = v_\alpha i_\beta - v_\beta i_\alpha = 3V_S I_L \sin \phi = Q_{3\text{-phase}} \end{cases} \quad (\text{E10.6.3})$$

Eq. (E10.6.3) is equivalent to the traditional active and reactive power concept.

10.12.1.2 Application Example 10.7: The $\alpha\beta 0$ transformation for three-phase sinusoidal system supplying a nonlinear load

Use $\alpha\beta 0$ transformation to calculate the nonlinear load active and reactive power for the following assuming sinusoidal system voltages of Eq. (E10.6.1a) and the following nonsinusoidal load currents [32]

$$\begin{cases} i_{aL}(t) = \sum_{h=1}^{\infty} \sqrt{2} I_{hL} \sin(h\omega t - \phi_h) \\ i_{bL}(t) = \sum_{h=1}^{\infty} \sqrt{2} I_{hL} \sin[(h\omega t + 120^\circ) - \phi_h] \\ i_{cL}(t) = \sum_{h=1}^{\infty} \sqrt{2} I_{hL} \sin[(h\omega t - 120^\circ) - \phi_h] \end{cases} \quad (\text{E10.7.1})$$

Solution to Application Example 10.7: The $\alpha\beta 0$ transformation for three-phase sinusoidal system supplying a nonlinear load

$$\begin{cases} i_\alpha(t) = \sum_{h=1}^{\infty} \frac{2}{\sqrt{3}} I_{hL} \sin(h\omega t - \phi_h) [1 - \cos(h120^\circ)] \\ i_\beta(t) = \sum_{h=1}^{\infty} 2 I_{hL} \cos(h\omega t - \phi_h) \sin(h120^\circ) \\ i_0(t) = \frac{1}{\sqrt{3}} (i_{aL} + i_{bL} + i_{cL}) = \sum_{h=1}^{\infty} \sqrt{6} I_{3hL} \sin(3h\omega t - \phi_{3h}) \end{cases} \quad (\text{E10.7.2})$$

It is interesting to note that only the triplen harmonics (e.g., $h = 3k$) are present in i_0 . The power components are

$$\begin{cases} p(t) = v_\alpha i_\alpha + v_\beta i_\beta = \bar{p} + \tilde{p} \\ = 3V_S I_{1L} \cos \phi_1 - 3V_S I_{2L} \cos(3\omega t - \phi_2) + \\ 3V_S I_{4L} \cos(3\omega t + \phi_4) - 3V_S I_{5L} \cos(6\omega t - \phi_5) \\ + 3V_S I_{7L} \cos(6\omega t + \phi_7) - \dots \\ \text{and} \\ q(t) = v_\alpha i_\beta - v_\beta i_\alpha = \bar{q} + \tilde{q} \\ = 3V_S I_{1L} \sin \phi_1 - 3V_S I_{2L} \sin(3\omega t - \phi_2) + \\ 3V_S I_{4L} \sin(3\omega t + \phi_4) - 3V_S I_{5L} \sin(6\omega t - \phi_5) \\ + 3V_S I_{7L} \sin(6\omega t + \phi_7) - \dots \\ p_0 = v_0 i_0 \end{cases} \quad (\text{E10.7.3})$$

where the bar ($\bar{}$) and the tilde ($\tilde{}$) correspond to the average value and the alternating components, respectively. In this example, the following relationships exist between the conventional and the instantaneous power theories:

- The average values of power ($\bar{p} = P_{\text{three-phase}}$ and $\bar{q} = Q_{\text{three-phase}}$) correspond to the conventional active and reactive powers, respectively.
- The alternating components of the real power ($\tilde{p}$) represent the energy per second that is being transferred from source to load or vice versa at any time. This is the energy being stored (or released) at the three-phase (abc) or two-phase ($\alpha\beta$) load or source.
- The alternating (fluctuating) component of the imaginary power ($\tilde{q}$) is responsible for the harmonic reactive power (due to the nonlinear nature of the load) in each phase but will vanish when added.
- The instantaneous energy transferred does not depend on the imaginary power ($q = \bar{q} + \tilde{q}$), although reactive currents exist in each phase and flow in the conductor.
- The power H including harmonics can be expressed as $H = \sqrt{\bar{P}^2 + \bar{Q}^2}$ where $\bar{P}$ and $\bar{Q}$ are the root-mean-square values of $\bar{p}$ and $\bar{q}$, respectively.

10.12.1.3 Application Example 10.8: The $\alpha\beta 0$ transformation for unbalanced three-phase, four-wire system supplying a linear load

Unbalanced three-phase system voltages may be expressed in terms of their symmetrical components using [32]

$$\begin{aligned} \begin{bmatrix} V_0 \\ V_+ \\ V_- \end{bmatrix} &= \frac{1}{3} \begin{bmatrix} 1 & 1 & 1 \\ 1 & \alpha & \alpha^2 \\ 1 & \alpha^2 & \alpha \end{bmatrix} \begin{bmatrix} V_a \\ V_b \\ V_c \end{bmatrix} \\ \begin{bmatrix} V_a \\ V_b \\ V_c \end{bmatrix} &= \frac{1}{3} \begin{bmatrix} 1 & 1 & 1 \\ 1 & \alpha^2 & \alpha \\ 1 & \alpha & \alpha^2 \end{bmatrix} \begin{bmatrix} V_0 \\ V_+ \\ V_- \end{bmatrix} \end{aligned} \quad (\text{E10.8.1})$$

where $\alpha = e^{j2\pi/3}$ and subscripts $+$, $-$, and 0 correspond to the positive-, negative-, and zero-sequence components, respectively. Applying these relations to the unbalanced system voltages, we have

$$\begin{cases} v_a = \sqrt{2}V_{S0} \sin(\omega t + \phi_0) + \sqrt{2}V_{S+} \sin(\omega t + \phi_+) + \sqrt{2}V_{S-} \sin(\omega t + \phi_-), \\ v_b = \sqrt{2}V_{S0} \sin(\omega t + \phi_0) + \sqrt{2}V_{S+} \sin(\omega t - 120^\circ + \phi_+) + \sqrt{2}V_{S-} \sin(\omega t + 120^\circ + \phi_-), \\ v_c = \sqrt{2}V_{S0} \sin(\omega t + \phi_0) + \sqrt{2}V_{S+} \sin(\omega t + 120^\circ + \phi_+) + \sqrt{2}V_{S-} \sin(\omega t - 120^\circ + \phi_-) \end{cases} \quad (\text{E10.8.2})$$

Use $\alpha\beta 0$ transformation to calculate the nonlinear load active and reactive power.

Solution to Application Example 10.8: *The $\alpha\beta 0$ transformation for unbalanced three-phase, four-wire system supplying a linear load*

Expressing these instantaneous voltages in terms of the $\alpha\beta 0$ -coordinate system yields

$$\begin{cases} v_\alpha = \sqrt{3}V_{s+} \sin(\omega t + \phi_+) + \sqrt{3}V_{s-} \sin(\omega t + \phi_-), \\ v_\beta = -\sqrt{3}V_{s+} \sin(\omega t + \phi_+) + \sqrt{3}V_{s-} \sin(\omega t + \phi_-), \\ v_0 = \sqrt{6}V_{s0} \sin(\omega t + \phi_0). \end{cases} \quad (\text{E10.8.3})$$

Similarly, the load currents may be expressed in terms of their instantaneous $\alpha\beta 0$ components

$$\begin{cases} i_\alpha = \sqrt{3}I_{L+} \sin(\omega t + \delta_+) + \sqrt{3}I_{L-} \sin(\omega t + \delta_-), \\ i_\beta = -\sqrt{3}I_{L+} \sin(\omega t + \delta_+) + \sqrt{3}I_{L-} \sin(\omega t + \delta_-), \\ i_0 = \sqrt{6}I_{L0} \sin(\omega t + \delta_0). \end{cases} \quad (\text{E10.8.4})$$

For this case, the instantaneous active, reactive, and zero-sequence powers are

$$\begin{cases} p(t) = \bar{p} + \tilde{p}, \\ q(t) = \bar{q} + \tilde{q}, \\ p_0(t) = \bar{p}_0 + \tilde{p}_0, \end{cases} \quad (\text{E10.8.5})$$

where:

- Instantaneous average real power is

$$\bar{p} = 3V_+I_{L+} \cos(\phi_+ - \delta_+) + 3V_-I_{L-} \cos(\phi_- - \delta_-). \quad (\text{E10.8.6a})$$

- instantaneous average imaginary power is

$$\bar{q} = -3V_+I_{L+} \sin(\phi_+ - \delta_+) + 3V_-I_{L-} \sin(\phi_- - \delta_-). \quad (\text{E10.8.6b})$$

- Instantaneous alternating real power is

$$\tilde{p} = -3V_+I_{L-} \cos(2\omega t + \phi_+ + \delta_-) - 3V_-I_{L+} \cos(2\omega t + \phi_- + \delta_+). \quad (\text{E10.8.6c})$$

- Instantaneous alternating imaginary power is

$$\tilde{q} = 3V_+I_{L-} \sin(2\omega t + \phi_+ + \delta_-) - 3V_-I_{L+} \sin(2\omega t + \phi_- + \delta_+). \quad (\text{E10.8.6d})$$

- Instantaneous average zero-sequence power is

$$\bar{p}_0 = 3V_0I_{L0} \cos(\phi_0 - \delta_0). \quad (\text{E10.8.6e})$$

- Instantaneous alternating zero-sequence power is

$$\tilde{p}_0 = -3V_0I_{L0} \cos(2\omega t + \phi_0 + \delta_0). \quad (\text{E10.8.6f})$$

10.12.2 UPQC control system based on instantaneous real and imaginary powers

Operation of the UPQC isolates the utility voltage from current quality problems of the load and, at the same time, isolates load from voltage quality problems of the utility. The most important subject in the UPQC control is the generation of reference compensating currents of the shunt converter (e.g., signal $i_C^* \equiv [i_{ca}^*, i_{cb}^*, i_{cc}^*]$ Fig. 10.31) and the reference compensation voltages of the series converter (e.g., signal $v_C^* \equiv [v_{ca}^*, v_{cb}^*, v_{cc}^*]$ Fig. 10.31). PWM control blocks will use these references to generate corresponding switching signals of the shunt and series converters.

In this section, the concept of instantaneous real and imaginary power will be relied on to generate reference signals i_C^* and v_C^* . The three-phase voltage and current signals are transformed from the abc reference frame to the $\alpha\beta 0$ frame (Eq. 10.48) and the instantaneous real, imaginary, and zero-sequence powers are calculated (Eq. 10.52). The decomposition of voltage and current harmonic components into symmetrical components shows that the average of real ($\bar{p}$) and imaginary ($\bar{q}$) powers consists of interacting components of voltage and current that have the same frequency and sequence order (Eqs. E10.8.6a, E10.8.6b, E10.8.6c, E10.8.6d, E10.8.6e, E10.8.6f). Therefore, with the calculation of instantaneous powers and the derivation of their oscillation parts (e.g., $\tilde{p}$ and $\tilde{q}$), the voltage and current reference signals can be obtained and applied to the PWM controls of power electronic converters (Fig. 10.31). Before analyzing the control systems of the shunt and series converters, the circuits of the phase-lock loop (PLL) and the positive-sequence voltage detector (PSVD) will be introduced.

10.12.2.1 Phase-lock loop (PLL) circuit

The phase-lock loop (PLL) circuit (Fig. 10.33) is one of the components of the positive-sequence voltage detector (Fig. 10.34). It detects the fundamental angular frequency (ω_1) and generates synchronous sinusoidal signals that correspond to positive-sequence auxiliary currents under sinusoidal as well as highly distorted and unbalanced system voltages. The inputs of the PLL are $v_{ab} = (v_a - v_b)$ and $v_{cb} = (v_c - v_b)$.

Operation of PLL is based on the instantaneous active three-phase power theory ($p_{\text{three-phase}} = \bar{p} + \tilde{p} = v_{ab}i_a + v_{cb}i_c$):

- The current feedback signals $i_a(\omega t) = \sin(\omega t)$ and $i_c(\omega t) = \sin(\omega t - 2\pi/3)$ are generated by sine generator circuits through integration of ω at the output of a PI-controller. These currents are 120 degrees out of phase and represent a feedback from a positive-sequence component at angular frequency ω .

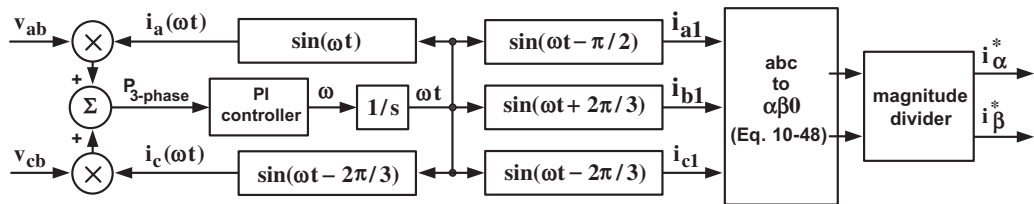


FIG. 10.33 Synchronizing circuit of the phase-lock loop (PLL) [18].

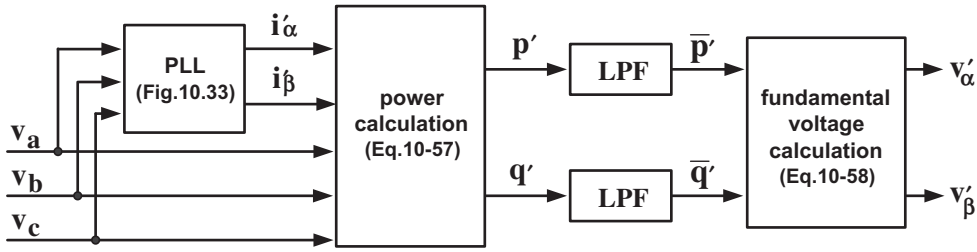


FIG. 10.34 Circuit of the positive-sequence voltage detector (PSVD) [18]; prime (') indicates instantaneous voltages in the $\alpha\beta 0$ reference frame.

- The PLL circuit can reach a stable point of operation only if the input of the PI-controller has a zero average value ($\bar{p} = 0$) with minimized low-frequency oscillations (e.g., small $\tilde{p}$). Because $i_a(\omega t)$ and $i_c(\omega t)$ contain only positive-sequence components and have unity magnitudes, the components of power (Eqs. E10.8.6a, E10.8.6c) simplify to

$$\begin{aligned}\bar{p} &= 3V_+ I_{L+} \cos(\phi_+ - \delta_+) = 0 \\ \tilde{p} &= -3V_- I_{L+} \cos(2\omega t + \delta_+) \approx 0\end{aligned}\quad (10.56)$$

where ϕ_+ and δ_+ are the initial phase angles of the fundamental positive-sequence voltage and current $i_a(\omega t)$, respectively. According to these equations $\phi_+ - \delta_+ = \pi/2$. This means that the auxiliary currents $i_a(\omega t) = \sin(\omega t)$ and $i_c(\omega t) = \sin(\omega t - 2\pi/3)$ become orthogonal to the fundamental positive-sequence component of the measured voltages v_a and v_c , respectively. Therefore, $i_{a1}(\omega t) = \sin(\omega t - \pi/2)$ is in phase with the fundamental positive-sequence component of v_a . Similar relations hold for currents i_{b1} and i_{c1} .

- Finally, signals i_{a1} , i_{b1} , and i_{c1} are transformed to i'_α and i'_β (with unity magnitudes) to the $\alpha\beta 0$ domain by using an $\alpha\beta 0$ block and magnitude divider blocks (which divide each signal by its magnitude).

10.12.2.2 Positive-sequence voltage detector

The positive-sequence voltage detector (PSVD) circuit (Fig. 10.34) is one of the components of the shunt converter controller (Fig. 10.35). It extracts the instantaneous α and β values (v'_α and v'_β) of the fundamental positive-sequence components of the three-phase voltages v_a , v_b , and v_c (Fig. 10.34).

The operation of the positive-sequence voltage detector is as follows:

- A phase-lock loop (PLL) circuit (Fig. 10.33) produces $i'_\alpha = \sin(\omega_1 t)$ and $i'_\beta = \cos(\omega_1 t)$ that correspond to an auxiliary fundamental positive-sequence current transformed into the $\alpha\beta 0$ reference frame.
- Because i'_α and i'_β contain only the positive-sequence component, the average values of real power and imaginary powers comprise only the fundamental positive-sequence components of the voltages, and Eqs. (E10.8.6a), (E10.8.6b), (E10.8.6c), (E10.8.6d), (E10.8.6e), (E10.8.6f) simplifies to

$$\begin{aligned}\bar{p} &= 3V_+ I'_+ \cos(\phi_+ - \delta_+) \\ \bar{q} &= -3V_+ I'_+ \sin(\phi_+ - \delta_+)\end{aligned}\quad (10.57)$$

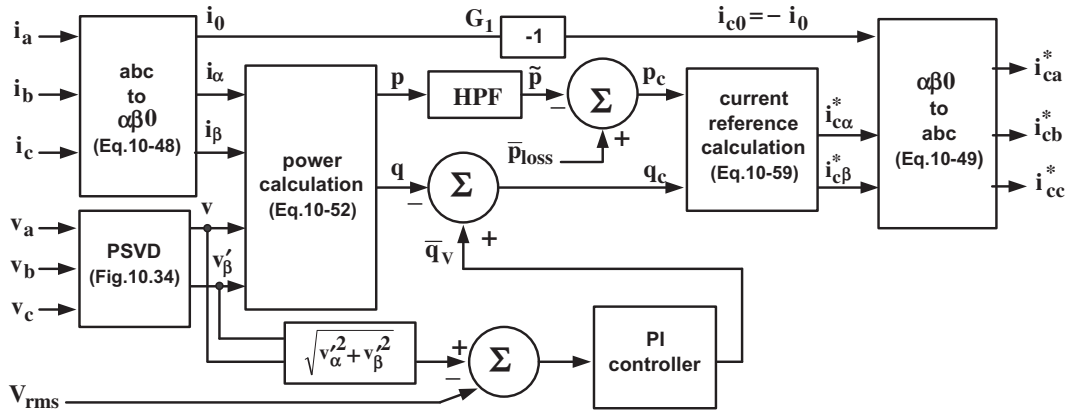


FIG. 10.35 Block diagram of the UPQC shunt converter control system based on instantaneous power theory [18,30].

- The average values of instantaneous powers $\bar{p}'$ and $\bar{q}'$ are extracted using low-pass filters (LPFs). Consequently, the instantaneous values of the positive-sequence voltage can be calculated as

$$\begin{bmatrix} v'_\alpha \\ v'_\beta \end{bmatrix} = \frac{1}{i'^2_\alpha + i'^2_\beta} \begin{bmatrix} i'_\alpha & i'_\beta \\ i'_\beta & -i'_\alpha \end{bmatrix} \begin{bmatrix} \bar{p}' \\ \bar{q}' \end{bmatrix}. \quad (10.58)$$

10.12.2.3 Control of shunt converter using instantaneous power theory

Inputs of the shunt converter control system (Fig. 10.35) are three-phase load voltages (v_a, v_b, v_c) and the currents (i_a, i_b, i_c) and its outputs are the compensating reference currents i_{ca}^*, i_{cb}^* , and i_{cc}^* (e.g., signal i_c^* in Fig. 10.31).

The shunt controller operates as follows:

- A positive-sequence voltage detector (PSVD, Fig. 10.34) is used to generate the instantaneous voltages v'_α and v'_β . Primes indicate instantaneous voltages in the $\alpha\beta 0$ reference frame, which only corresponds to the positive-sequence voltage in the abc reference frame.
- Three-phase load currents are transformed to the $\alpha\beta 0$ space.
- A power calculation block (Eq. 10.52) is relied on for the generation of the instantaneous real and reactive powers. Due to the presence of the PSVD, the average values of the calculated powers (Eqs. E10.8.6a, E10.8.6b) contain only the fundamental positive-sequence component of the voltage (e.g., $\bar{p} = 3 V_+ I_{L+} \cos(\phi_+ - \delta_+)$).
- The shunt converter is supposed to supply the oscillating instantaneous power $\tilde{p}$ and the instantaneous reactive power q to the load while the load receives $\bar{p}$ from the source. Therefore, a high-pass passive filter is used to extract $\tilde{p}$ from the total power ($p = \bar{p} + \tilde{p}$). The oscillating part of the real power ($\tilde{p}$) consists of harmonic and negative-sequence components of the load current. Furthermore, the UPQC must also compensate for losses

$\bar{p}_{\text{loss}}$ that will neutralize DC voltage variations caused by the series converter. Therefore, the amount of necessary instantaneous real power compensation is $p_c = -\tilde{p} + \bar{p}_{\text{loss}}$.

- In addition, the shunt converter will also compensate some reactive power ($\bar{q}_v$) required for the voltage regulation of the series converter. Therefore the amount of necessary instantaneous reactive power is $q_c = -q + \bar{q}_v = -(\bar{q} + \tilde{q}) + \bar{q}_v$. The imaginary power $\bar{q}_v$ is used for regulating the magnitude of the voltage ($|v|$), which is changed by the compensation voltage v_c of the series converter. As shown in Fig. 10.35, the rms voltage value (v_{rms}) can be controlled to match $\bar{q}_v$ with the desired value $\sqrt{v'_\alpha{}^2 + v'_\beta{}^2}$ through a PI controller.
- A current reference calculation block is employed to generate the reference compensation current in the $\alpha\beta 0$ reference frame

$$\begin{bmatrix} i_{c\alpha}^* \\ i_{c\beta}^* \end{bmatrix} = \frac{1}{v'_\alpha{}^2 + v'_\beta{}^2} \begin{bmatrix} v'_\alpha & v'_\beta \\ v'_\beta & -v'_\alpha \end{bmatrix} \begin{bmatrix} -\tilde{p} + \bar{p}_{\text{loss}} \\ -q + \bar{q}_v \end{bmatrix}. \quad (10.59)$$

- To compensate for zero-sequence power, the zero-sequence current that is generated by the shunt converter must be equal to that of the load but negative. The sign is inverted by a gain block (G_1).
- Finally, the $\alpha\beta 0$ transformation block (based on Eq. 10.49) is relied on to generate the reference compensation currents (i_{ca}^* , i_{cb}^* , and i_{cc}^*) in the abc space.

10.12.2.4 Control of DC voltage using instantaneous power theory

Fig. 10.36 illustrates the block diagram of the DC voltage control system. There are two reasons for the variation of the DC capacitor average voltages:

- The first reason is the real power losses of power electronic converters and the power injected into the network by the series branch. When a voltage sag or voltage swell appears, the series branch of the UPQC injects a fundamental component voltage into the network. The required (observed) real power to be injected is generated by the converter via the DC link, causing variation of the DC-link average voltage.
- Another factor that causes a variation of the average DC capacitor voltages is the zero-sequence component of the current, which is injected by the shunt converter into the system. These currents have no effect on the DC-link voltage but make the two capacitor voltages asymmetric.

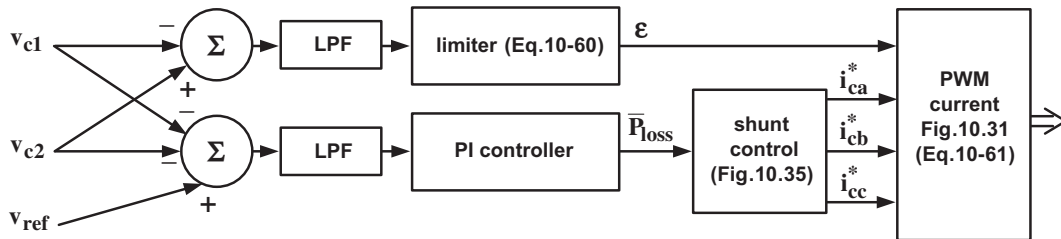


FIG. 10.36 Block diagram of the DC voltage control system based on instantaneous power theory [18,30].

The DC voltage controller performs the following two functions (Fig. 10.36):

- Regulating the DC-link average voltage by adding two capacitor voltages, comparing the sum with the reference DC voltage (V_{ref}), and applying the average voltage error to a PI controller. The output of this controller ($\bar{p}_{\text{loss}}$) is used by the shunt converter control system to absorb this power from the network and regulate the DC-link voltage. Note that the deviation of voltages is filtered by a low-pass passive filter and the PI controller matches the desired $\bar{p}_{\text{loss}}$ that neutralizes the DC bus voltage variations. The low-pass filter makes the voltage regulator insensitive to fundamental frequency voltage variations, which appear when the shunt active filter compensates the fundamental zero-sequence current of the load.
- The correction of the difference between two capacitor average voltages is performed by calculating the difference voltage signal, passing it through a low-pass filter, applying it to a limiter, and adding it (e.g., signal ε in Fig. 10.36) with the upper and the lower hysteresis band limits. This process absorbs a zero-sequence current by the shunt converter and corrects the difference of the capacitor average voltages. Similarly, another low-pass filter is applied to filter the signal $V_{C2} - V_{C1}$. The filtered voltage difference produces ε according to the following limit function

$$\begin{cases} \varepsilon = -1 & \Leftrightarrow \Delta V < -0.05V_{\text{ref}} \\ \varepsilon = \frac{\Delta V}{0.05V_{\text{ref}}} & \Leftrightarrow -0.05V_{\text{ref}} \leq \Delta V \leq 0.05V_{\text{ref}} \\ \varepsilon = 1 & \Leftrightarrow \Delta V \geq 0.05V_{\text{ref}} \end{cases} \quad (10.60)$$

where V_{ref} is the DC bus voltage reference.

- Signal ε and the reference compensation currents ($i_C^* \equiv [i_{ca}^*, i_{cb}^*, i_{cc}^*]$, Fig. 10.35) are employed to generate gating signals for the shunt converter switches (Fig. 10.31). For example, ε can act as a dynamic offset level that is added to the hysteresis-band limits in the PWM current control of Fig. 10.31

$$\begin{cases} \text{upper hysteresis-band limit} = i_C^* + \Delta(1 + \varepsilon) \\ \text{lower hysteresis-band limit} = i_C^* - \Delta(1 - \varepsilon) \end{cases} \quad (10.61)$$

where $i_C^* \equiv [i_{ca}^*, i_{cb}^*, i_{cc}^*]$ are the instantaneous current references (computed by the shunt converter control system) and Δ is a fixed semibandwidth of the hysteresis control.

Therefore, signal ε shifts the hysteresis band to change the switching times of the shunt converter such that

$$\begin{cases} \varepsilon > 0 & \text{increases } V_{C1} \text{ and decreases } V_{C2} \\ \varepsilon < 0 & \text{increases } V_{C2} \text{ and decreases } V_{C1} \end{cases}.$$

10.12.2.5 Control of series converter using instantaneous power theory

Inputs of the series converter control system (Fig. 10.37) are the three-phase supply voltages (v_{sa}, v_{sb}, v_{sc}), load voltages (v_a, v_b, v_c), and the line currents (i_a, i_b, i_c). Its outputs are the reference-compensating voltages v_{ca}^*, v_{cb}^* and v_{cc}^* (e.g., signal v_c^* in Fig. 10.31). The compensating voltages consist of two components:

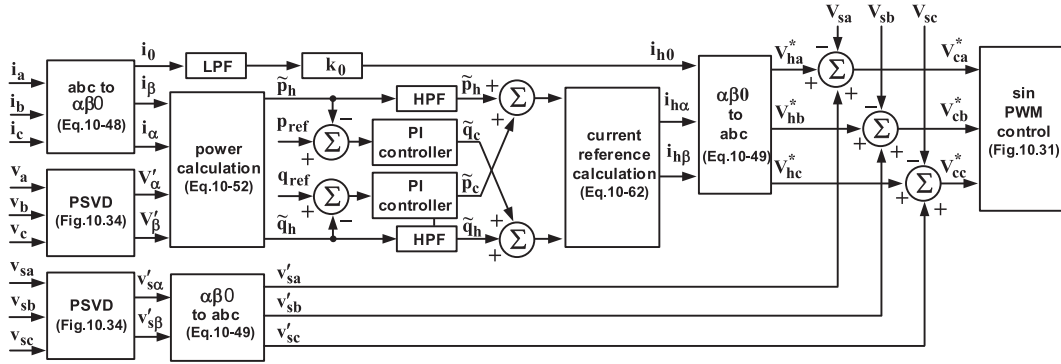


FIG. 10.37 Block diagram of the UPQC series converter control system based on instantaneous power theory [18].

- One is the voltage-conditioning component $v_s' - v_s$ (e.g., the difference between the supply voltage $v_s \equiv [v_{sa}, v_{sb}, v_{sc}]$ and its fundamental positive-sequence component v_s' [$v_{sa}', v_{sb}', v_{sc}'$]) that compensates harmonics, fundamental negative-, and zero-sequence components of voltage, and regulates the fundamental component magnitude.
- The other voltage component ($v_h \equiv [v_{ha}, v_{hb}, v_{hc}]$) performs harmonic isolation and zero-sequence current damping, as well as damping of harmonic oscillations caused by the series resonance due to the series inductances and the shunt capacitor banks. v_h can also compensate for the oscillating instantaneous active and reactive powers ($\tilde{p}_h$ and $\tilde{q}_h$).

The series controller operates as follows (Fig. 10.37):

- PSVD, $\alpha\beta 0$, and power calculation blocks are relied on to compute oscillating instantaneous powers $\tilde{p}_h$ and $\tilde{q}_h$. This procedure is similar to the shunt converter control system.
- $\tilde{p}_h$ and $\tilde{q}_h$ are compared with their reference values (p_{ref} and q_{ref}) to generate the desired compensation powers. The reference active power (p_{ref}) forces the converter to inject a fundamental voltage component orthogonal to the load voltage. This will cause change in the power angle δ (phase angle between the voltages at both ends of transmission line) and mostly affects the active power flow. The reference reactive power (q_{ref}) will cause a compensation voltage in phase with the load voltage. This will change the magnitudes of the voltages and strongly affects the reactive power flow of the system.
- A current reference calculation block is used to generate the reference compensation currents in the $\alpha\beta 0$ space

$$\begin{bmatrix} i_{ha} \\ i_{hb} \end{bmatrix} = \frac{1}{v_{\alpha'}^2 + v_{\beta'}^2} \begin{bmatrix} v_{\alpha'} & -v_{\beta'} \\ v_{\beta'} & v_{\alpha'} \end{bmatrix} \begin{bmatrix} \tilde{p}_h + \tilde{p}_C \\ \tilde{q}_h + \tilde{q}_C \end{bmatrix}. \quad (10.62)$$

Signal i_{h0} , which provides harmonic isolation and damping for zero-sequence currents flowing through the series converter, is separated from the signal i_0 by a low-pass filter.

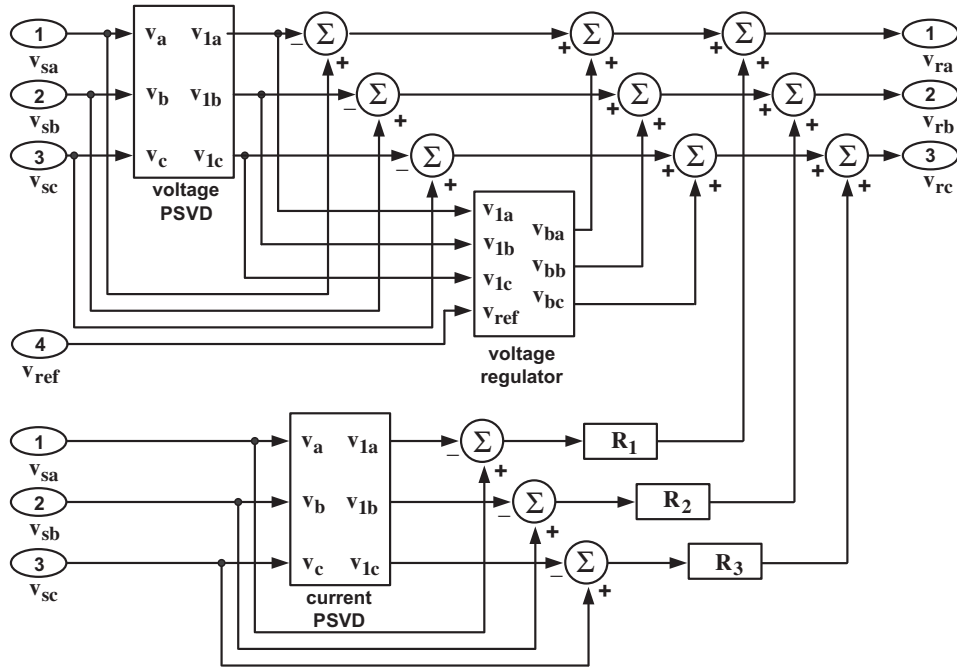


FIG. 10.38 Block diagram of a simplified controller for UPQC series converter [30].

The $\alpha\beta 0$ transformation block is employed to generate the reference compensation voltages for harmonic isolation and harmonic oscillation damping ($v_h \equiv [v_{ha}^*, v_{hb}^*, v_{hc}^*]$). These voltages are added with $v_s' \equiv [v_{sa}', v_{sb}', v_{sc}']$ and subtracted from the supply voltages $v_s \equiv [v_{sa}, v_{sb}, v_{sc}]$ to form the reference compensation voltage for the series converter

$$\begin{cases} v_{ca}^* = v_{ha} + (v_{sa}' - v_{sa}) \\ v_{cb}^* = v_{hb} + (v_{sb}' - v_{sb}) \\ v_{cc}^* = v_{hc} + (v_{sc}' - v_{sc}) \end{cases} \quad (10.63)$$

The reference compensation voltages and a sinusoidal PWM control approach are relied on to produce the gating signals of the series converter (Fig. 10.31).

The UPQC series control system (Fig. 10.37) may be simplified by eliminating the reference compensation currents as shown in Fig. 10.38. Voltage regulation is controlled by V_{ref} . The converter is designed to behave like a resistor at harmonic frequencies to perform damping of harmonic oscillations. To do this, harmonic components of the line current are detected and multiplied by a damping coefficient.

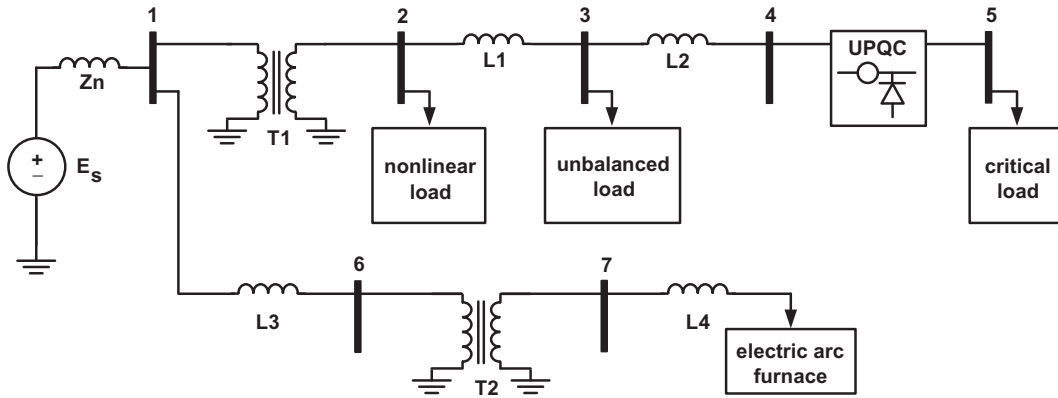


FIG. 10.39 Model distribution network used to analyze the performance of the UPQC [30].

TABLE 10.2 Specifications of the model distribution system (Fig. 10.39).

Medium voltage network	$V_L = 20 \text{ kV}$, $Z_n = (25 + j2.5) \Omega$, $R_g = 10 \Omega$
Distribution transformer (T_1)	$S = 2 \text{ MVA}$, $V: 20 \text{ kV}/400 \text{ V}$, $Z = (0.002 + j0.1) \text{ pu}$
Arc furnace transformer (T_2)	$S = 5 \text{ MVA}$, $V: 20 \text{ kV}/700 \text{ V}$, $Z = (0.01 + j0.1) \text{ pu}$
Nonlinear load	Thyristor-controlled rectifier, $\alpha = 0^\circ$, $I_{DC} = 700 \text{ A}$
Unbalanced linear load	$Z_a = (0.08 + j0.06) \Omega$ $Z_b = (1.0 + j0.7) \Omega$ $Z_c = (0.14 + j0.12) \Omega$
Transmission lines	$Z_{L1} = (0.01 + j0.003) \Omega$ $Z_{L2} = (0.03 + j0.006) \Omega$ $Z_{L3} = (0.1 + j0.3) \Omega$ $Z_{L4} = (0.01 + j0.08) \Omega$

10.13 Performance of the UPQC

To demonstrate the performance of the UPQC in the presence of several current and voltage disturbance sources, the model distribution system of Fig. 10.39 consisting of seven (linear and nonlinear) buses is considered. System specifications are listed in Table 10.2. The loads of this network (Fig. 10.39) are.

Load 1 (Nonlinear Load at Bus 2): a three-phase thyristor-controlled rectifier providing 700 A of DC current. This nonlinear load produces harmonic currents and causes network voltage distortion.

Load 2 (Unbalanced Load at Bus 3): an unbalanced three-phase linear load consists of three different linear impedances. This load draws unbalanced currents and causes a voltage imbalance condition.

Load 3 (Critical Load at Bus 5): a three-phase nonlinear load that is considered to be the critical load to be protected by the UPQC. This load consists of three power electronic converters:

- A three-phase thyristor-controlled rectifier with a firing angle of 30° and a DC current of 10 A.
- A single-phase thyristor-controlled rectifier placed in phase A, with a firing angle of 45° and a DC current of 10 A.
- A single-phase uncontrolled (diode) rectifier placed in phase B, with a DC current of 5 A.

Load 4 (Electric Arc Furnace Load at Bus 7): an electric arc furnace produces voltage fluctuation (flicker). Due to its nonlinear volt-ampere characteristic, this load acts like a time-varying nonlinear resistor. This nonlinearity is considered for the positive half-cycle as follows [33]

$$v_{\text{arc}} = v_t + c/(i_{\text{arc}} + d), \quad (10.64)$$

where v_{arc} and i_{arc} are the voltage and current of the arc furnace, c and d are constant coefficients, and v_t is the threshold voltage

$$v_t = v_e + kL. \quad (10.65)$$

Here, v_e is the voltage drop across the furnace electrodes and kL corresponds to the variable voltage drop proportional to the arc length (L). There are different models for the arc length time variation [30]. In Fig. 10.39, the sinusoidal time variation law is used and arc length is considered as a sinusoidal function of time with a fixed frequency

$$L = L_1 + L_2 \sin \omega t. \quad (10.66)$$

Since human eyes are most sensitive to flickers with a frequency of about 8 to 10 Hz, the frequency is assumed to be $f = 10$ Hz.

Simulation of the model distribution network and UPQC (with the control systems of Figs. 10.35, 10.36, and 10.38) is performed using the MATLAB/Simulink software package. The specifications of UPQC are listed in Table 10.3. UPQC performance is examined in the following six application examples [30].

TABLE 10.3 Specifications of the UPQC components in Fig. 10.39.

Shunt transformer	$S = 4.6 \text{ kVA}$, $V: 230/100 \text{ V}$ $Z = (0.01 + j0.05) \text{ pu}$
Series transformer	$S = 2 \text{ kVA}$, $V: 95/190 \text{ V}$ $Z = (0.01 + j0.05) \text{ pu}$
DC capacitors	$C = 2000 \mu\text{F}$, $V = 300 \text{ V}$
Low-pass filter	$L = 2 \text{ mH}$, $C = 5 \mu\text{F}$, $R = 4 \Omega$
High-pass filter	$C = 15 \mu\text{F}$, $R = 5 \Omega$
Commutation inductance	$L = 3 \text{ mH}$

10.13.1 Application Example 10.9: Dynamic behavior of UPQC for current compensation

In this example, only the critical load at bus 5 (load 3) of Fig. 10.39 is activated. In order to investigate the dynamic behavior of the UPQC, the single-phase and the three-phase controlled rectifiers are operating continuously in the network, while the single-phase diode rectifier is connected and then disconnected at $t = 0.06 \text{ s}$ and $t = 0.12 \text{ s}$, respectively. The gate pulses of the UPQC converter are activated at $t = 0.04 \text{ s}$. Show UPQC performance including compensation of reactive power, harmonic currents and current imbalance.

Solution to Application Example 10.9: *Dynamic behavior of UPQC for current compensation*

The results including load 3 current, shunt converter current, line current, and DC capacitor voltages are shown in Fig. E10.9.1. As expected sinusoidal balanced currents are achieved and the neutral current is reduced to zero, as soon as UPQC is activated. Current THD_i of phase A is reduced from 19.2% to 0.6%. This figure shows the fine dynamic performance of the UPQC for nonlinear and unbalanced load current variations. During the time when the single-phase diode rectifier is activated ($t = 0.06 \text{ s}$ to $t = 0.12 \text{ s}$), the UPQC distributes its load demand between the three phases and, as a result, the line currents increase. Compensation of the oscillatory parts of real power and the zero-sequence current has caused some variation of the DC capacitor voltages, as shown in Fig. E10.9.1D.

10.13.2 Application Example 10.10: UPQC compensation of voltage harmonics

The nonlinear load at bus 2 (load 1) of Fig. 10.39 is connected to the network. Plot the distorted network voltage, UPQC series voltage compensation and the resulting load voltage profile. Find the voltage THD_v before and after UPQC compensation.

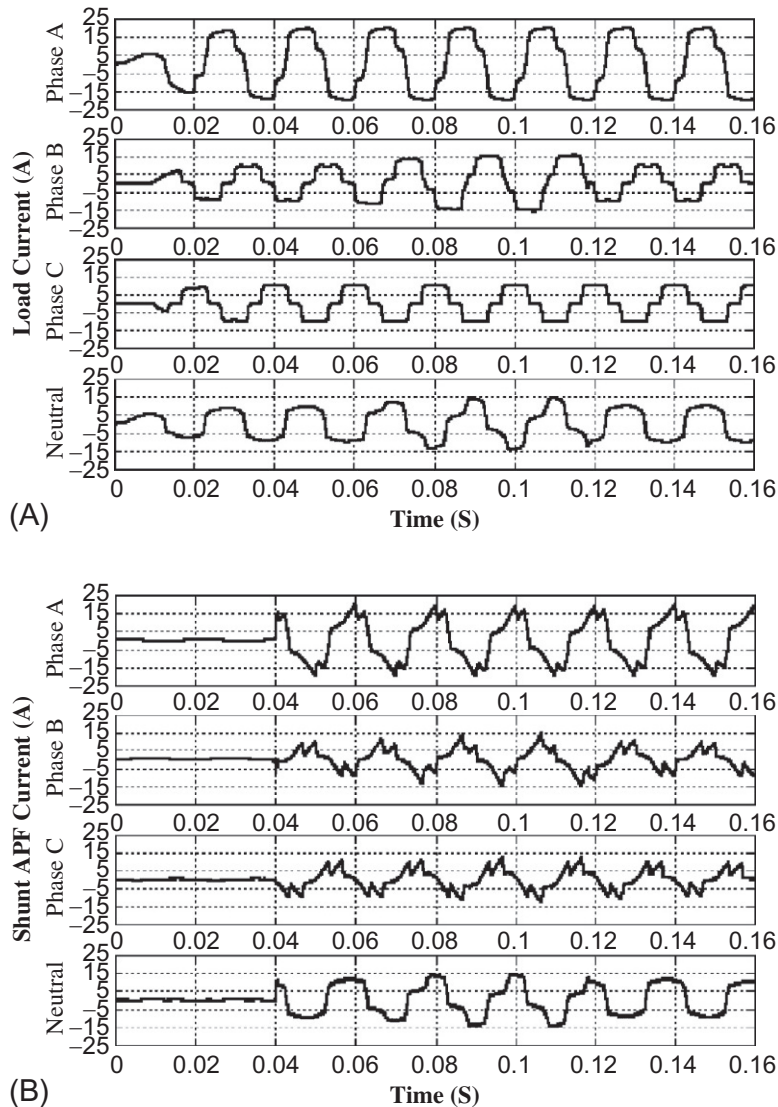


FIG. E10.9.1 UPQC performance including compensation of reactive power, harmonic currents, and current imbalance: (A) load current, (B) shunt converter current,

Continued

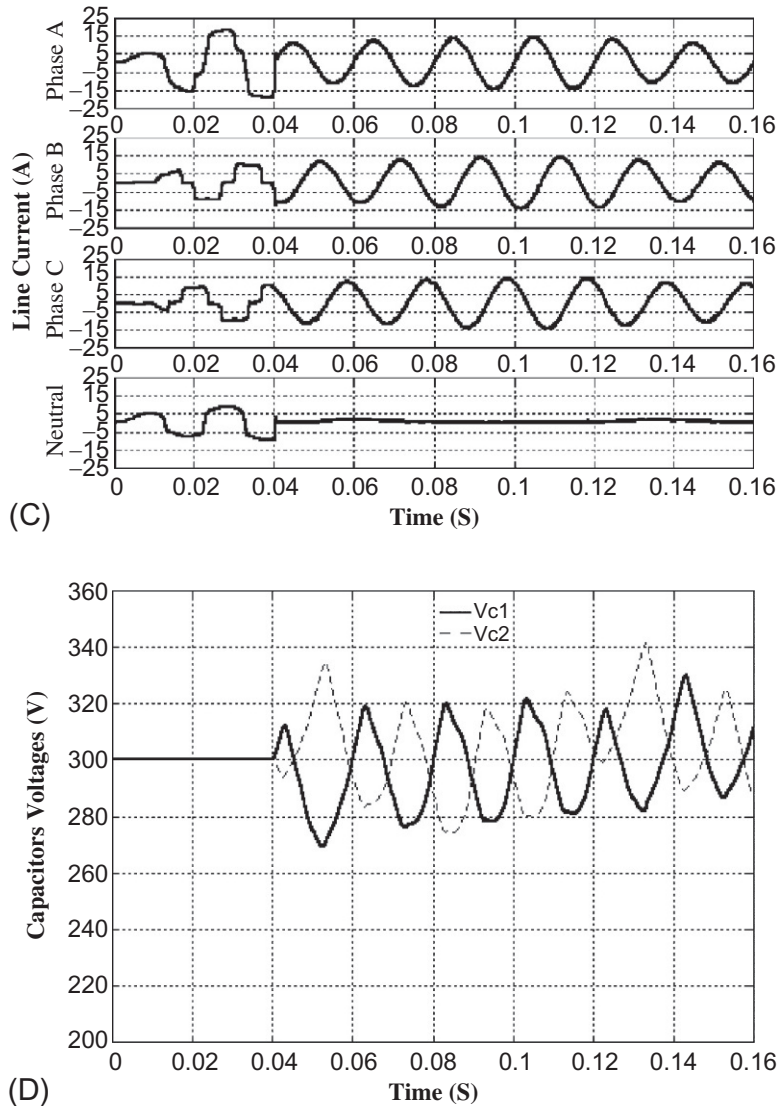


FIG. E10.9.1, CONT'D (C) line current, (D) DC capacitor voltages [30].

Solution to Application Example 10.10: UPQC compensation of voltage harmonics

Simulation results including the distorted network voltages due to the injected harmonic currents are shown in Fig. E10.10.1. As expected, UPQC compensates for voltage harmonics and the load voltage is corrected to a sinusoidal waveform. Voltage THD_v is reduced from 9.1% to 0.1%.

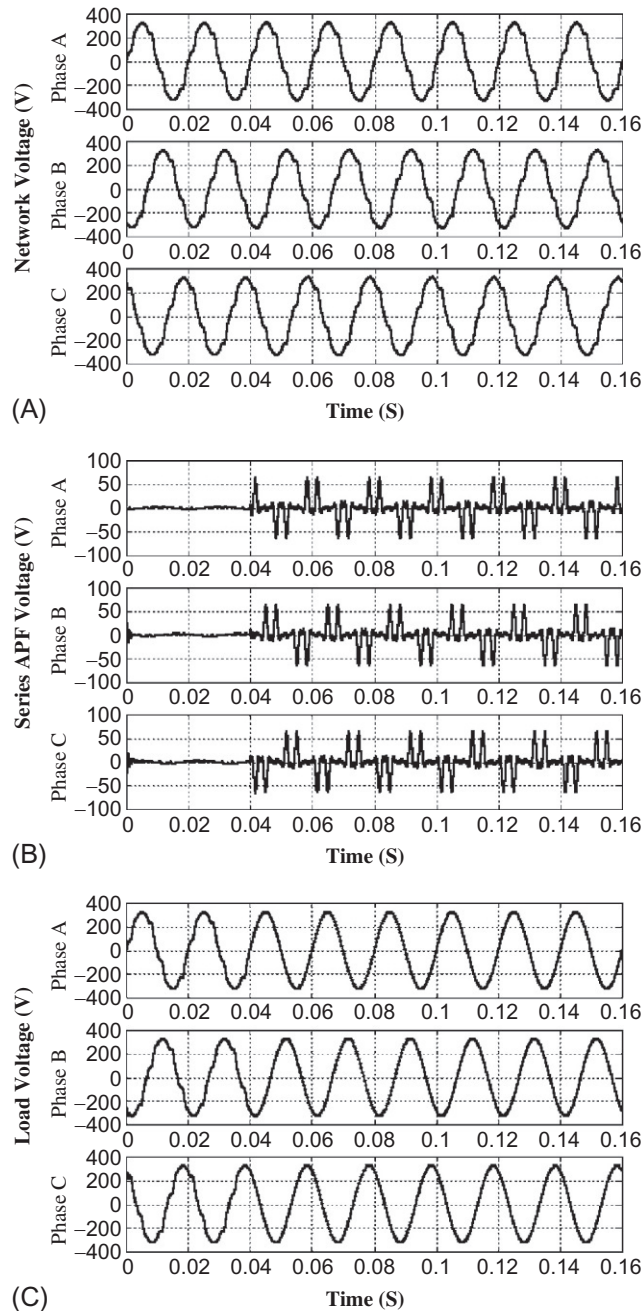


FIG. E10.10.1 UPQC performance including compensation of voltage harmonics: (A) network voltage, (B) series converter voltage, (C) load voltage at bus 5 [30].

10.13.3 Application Example 10.11: UPQC compensation of voltage imbalance

The linear load at bus 3 (load 2) of Fig. 10.39 is connected to the network. Plot the distorted network voltage, UPQC series voltage compensation and the resulting load voltage profile. Find the ratios of negative- and zero-sequence voltages to the positive-sequence voltage before and after UPQC compensation.

Solution to Application Example 10.11: *UPQC compensation of voltage imbalance*

Simulation results including the voltage imbalance are shown in Fig. E10.11.1. Operation of the UPQC and compensation of negative- and zero-sequence currents results in the balanced voltage conditions at bus 4. The ratios of negative- and zero-sequence voltages to the positive-sequence voltage are reduced from 24% and 8.4% to about 0.

10.13.4 Application Example 10.12: Dynamic performance of UPQC for sudden voltage variation

With loads 2 and 3 connected (e.g., imbalance and harmonic distortion) in Fig. 10.39, a single-phase short circuit with a fault resistance of 45Ω is imposed at phase B of bus 6 at $t = 0.06\text{s}$ and is cleared at $t = 0.12\text{s}$. Plot the distorted network voltage, UPQC series voltage compensation and the resulting load voltage profile. Find the voltage THD_v before and after UPQC compensation. What are the impacts of this asymmetrical fault on the three-phase voltages?

Solution to Application Example 10.12: *Dynamic performance of UPQC for sudden voltage variation*

Simulation results are presented in Fig. E10.12.1. The asymmetrical fault causes a voltage sag in phase B and voltage swells in phases A and C. However, the fast response of the UPQC (e.g., a delay of only 1 ms) does not allow any disturbances in the voltage of bus 5.

10.13.5 Application Example 10.13: Damping of harmonic oscillations using a UPQC

In this example, a 1kVAr three-phase capacitor bank is installed at bus 5 of Fig. 10.39 for reactive power compensation. Loads 1, 2, and 3 are activated. As a result, harmonic distortion and voltage imbalance are imposed on the network. Shunt and series branches of the UPQC start to operate at $t = 0.04\text{s}$ and $t = 0.08\text{s}$, respectively. Show the UPQC performance in damping of harmonic resonance in load voltage and line current.

Solution to Application Example 10.13: *Damping of harmonic oscillations using a UPQC*

Fig. E10.13.1 shows the voltage of bus 5 and the current of line 2. Although the harmonic components of load 3 are compensated by the shunt converter, the line current includes a high-frequency component before the operation of series branch occurs. This is so because of a series resonance between the series inductances and the shunt capacitor bank due to

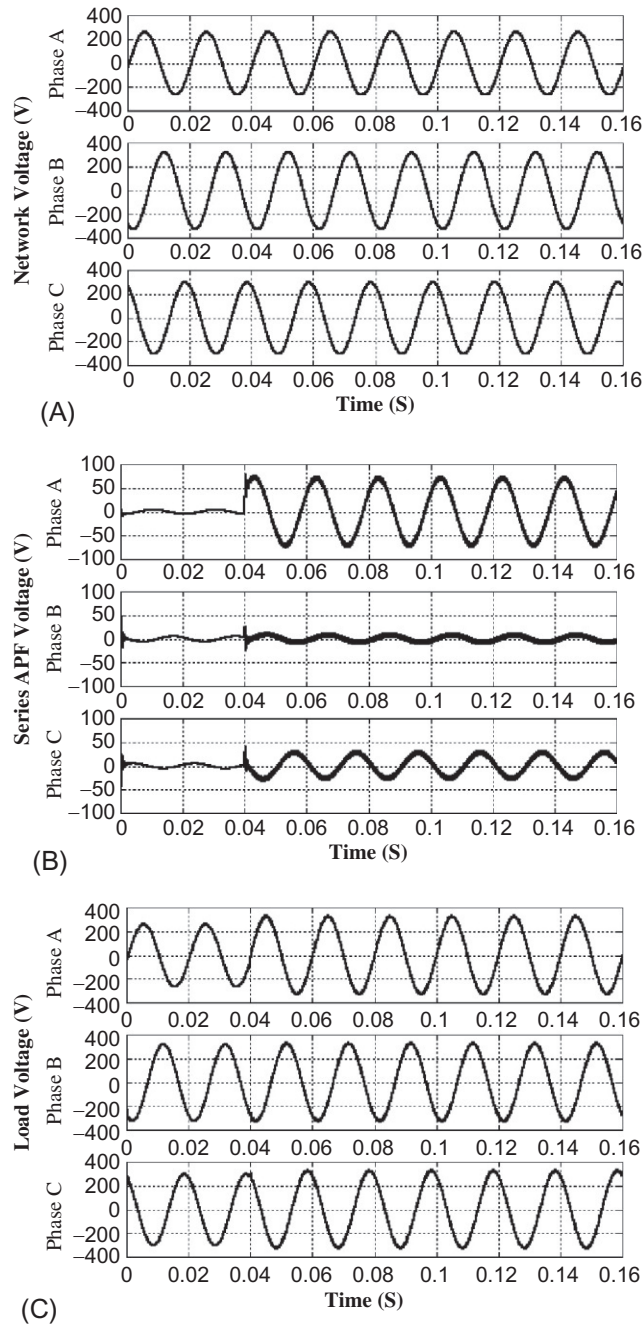


FIG. E10.11.1 UPQC performance including compensation of voltage imbalance: (A) network voltage, (B) series converter voltage, (C) load voltage at bus 5 [30].

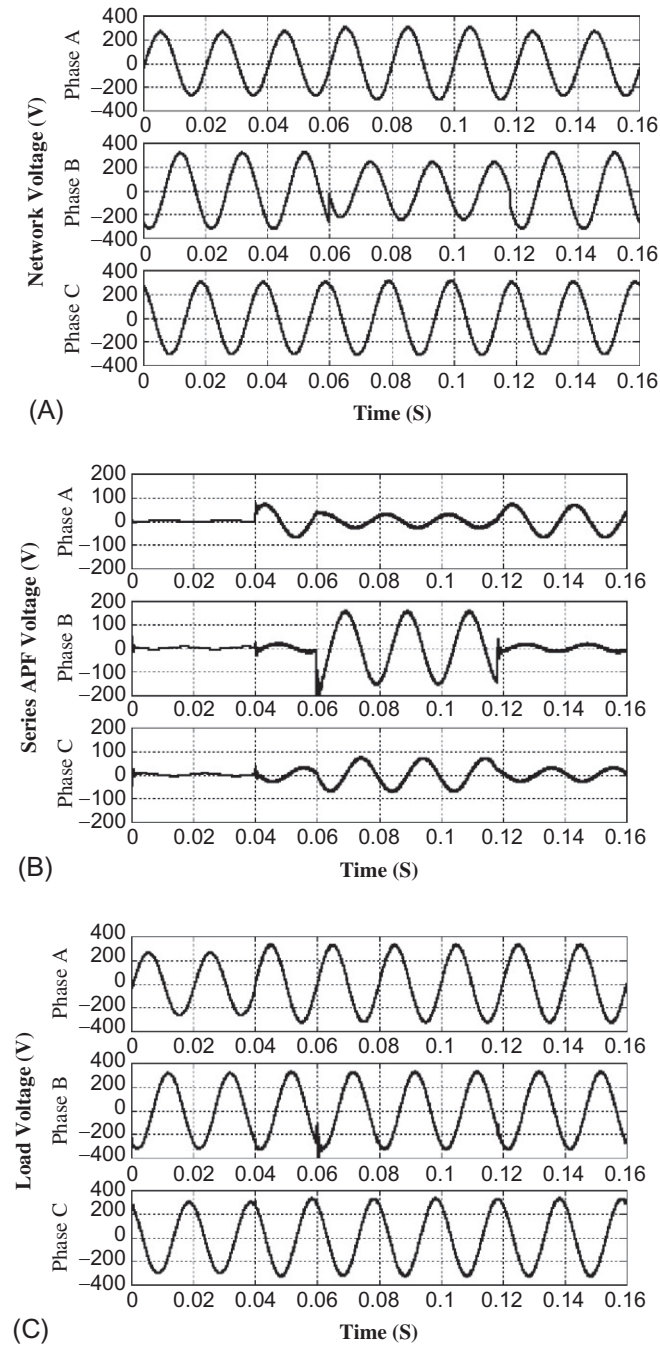


FIG. E10.12.1 UPQC performance including compensation of voltage sag and swell: (A) network voltage, (B) series converter voltage, (C) load voltage at bus 5 [30].

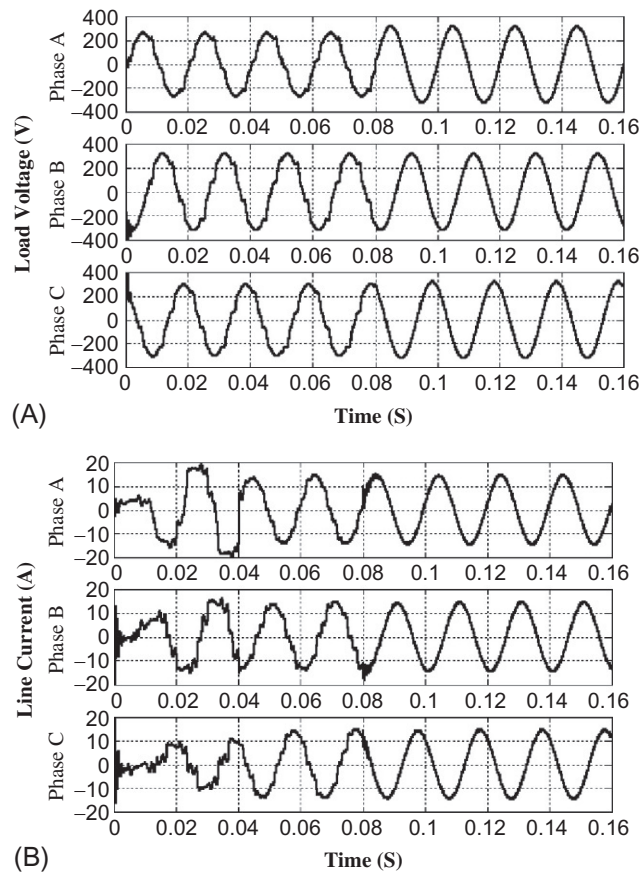


FIG. E10.13.1 UPQC performance including damping of harmonic resonance: (A) load voltage at bus 5, (B) line current [30].

voltage distortion at bus 2. This condition occurs frequently in distribution networks where significant harmonic distortion exists. Because the capacitor bank currents are not recorded by shunt branch current sensors, no compensation is performed. After the operation of the series converter has occurred at $t = 0.08$ s, resonant currents are damped significantly because the series branch acts like a resistor and increases the impedance of the resonance path.

10.13.6 Application Example 10.14: UPQC compensation of flicker

In the presence of all three loads of Fig. 10.39, the electric arc furnace (load 4) is connected to the network. Show the resulting network voltage fluctuation. Show the UPQC performance if its series branch starts to operate at $t = 0.04$ s.

Solution to Application Example 10.14: UPQC compensation of flicker

Simulation results are presented in Fig. E10.14.1. The electric arc furnace causes fluctuation of the voltage with a magnitude change of 20% at a frequency of 10Hz (Fig. E10.14.1). At $t = 0.04$ s, the series branch of the UPQC starts to operate, injecting voltage harmonics of high order (to correct voltage harmonic distortion) and low order (to compensate for voltage fluctuation) into the network. As a result, the voltage of bus 5 is restored to a sinusoid.

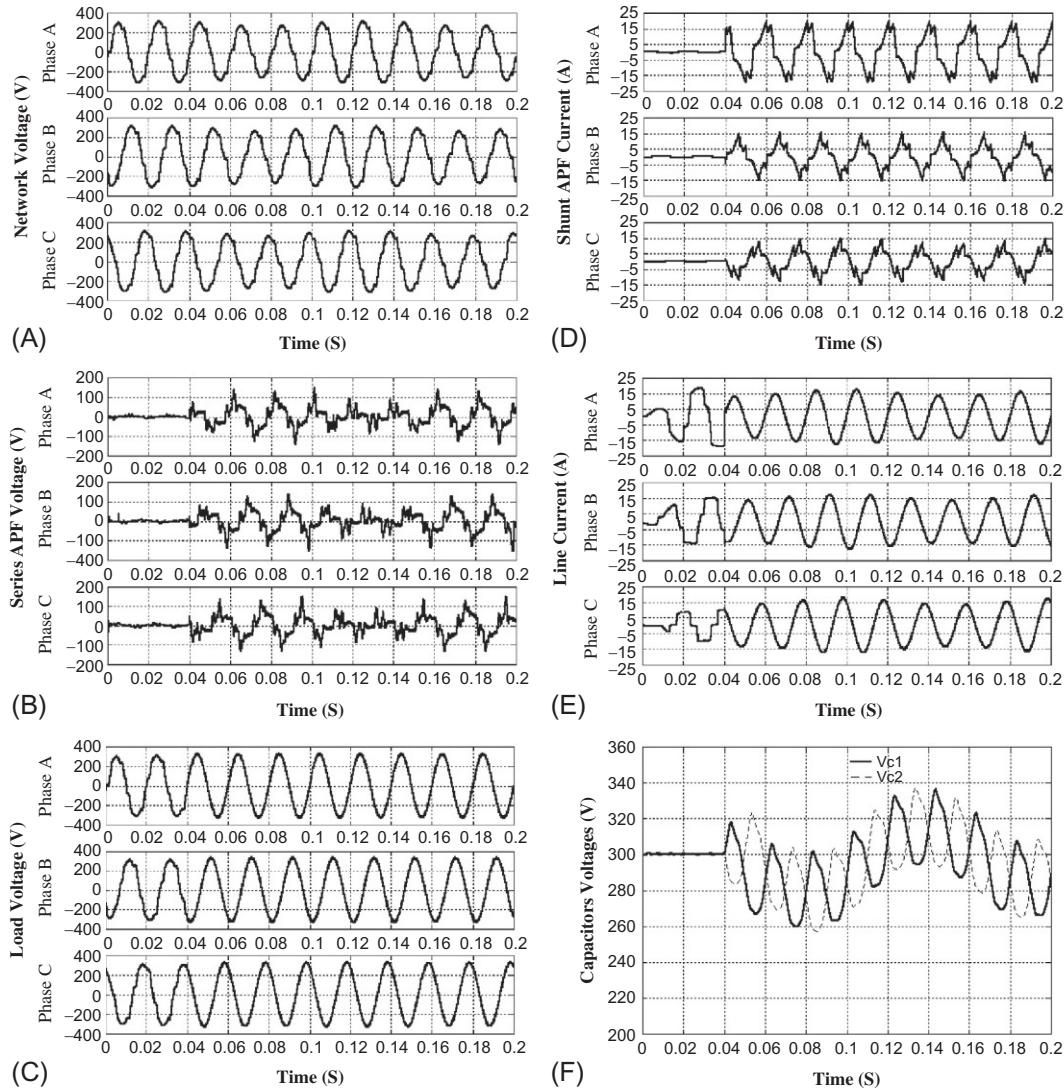


FIG. E10.14.1 UPQC performance including compensation of flicker: (A) network voltage, (B) series converter voltage, (C) load voltage at bus 5, (D) shunt converter current, (E) line current, (F) DC capacitor voltages [30].

Fig. E10.14.1D–F illustrates shunt converter current, line 2 current, and DC capacitor voltages, respectively. By compensating harmonics, and negative- and zero-sequence components of the nonlinear load currents, balanced three-phase sinusoidal line currents are achieved. Some small fluctuations appear in the line currents because the UPQC requires a variable power to compensate voltage fluctuations. This power is provided by the DC capacitors and, as a result, the DC-link voltage includes low-frequency oscillations (Fig. E10.14.1F). This slow variation is sensed by the DC-voltage control system, and for its compensation the UPQC absorbs an oscillatory power from the network. Therefore, both the shunt branch current and the line current will have low frequency variations.

Other application examples discussed in Refs. [22, pp. 117–129] and [21, pp. 129–130] include:

- Operation of solid-state current limiters (SSCLs).
- Load compensation (with stiff source) using a STATCOM.
- Load compensation (with nonstiff source) using a STATCOM.
- Voltage regulation using a STATCOM.
- Protecting sensitive loads using a DVR.

10.14 Summary

With the increase of harmonic currents and voltages in present-day power systems, the installation of passive, active, and hybrid filters gains in importance. In the future, recommended practices such as IEEE-519 [10] will result in further increased use of filters within the distribution system. There are a great variety of filter configurations (Figs. 10.3 and 10.13–10.25). Classification of filters can be based on different criteria such as supply type, filter connection, number of filter elements, power rating, compensation type, speed of response, and control technique. In this chapter, the classification of power filters is performed based on the type of supply (Fig. 10.3) and the control method (Section 10.7). Proper selection of filter configurations depends primarily on the properties of nonlinear loads, type of supply, and system rating:

- Passive filter blocks (Figs. 10.12 and 10.13) and a combination of passive filters (Figs. 10.19 and 10.20) are the most qualified candidates for single-phase systems—with high penetration of nonlinear loads—and low-power applications.
- Hybrid filters (Figs. 10.21 and 10.22) are considered as a cost-effective option for power quality improvement, compensation of the poor power quality effects of nonlinear loads, or to provide a sinusoidal AC supply to sensitive loads, especially for high-power applications. They are also good options for compensation of single-phase systems and high-power applications.
- A group of passive filters (Fig. 10.13A) or a combination of active and passive filters in different configurations (Figs. 10.23–10.25) should be used for the compensation of three-phase three-wire power systems that have a great amount of current or voltage harmonics due to a large number of small-and moderate-rating nonlinear loads, as well as feeding terminals of HVDC transmission systems.

Selection of the control approach (Sections 10.7.1 to 10.7.3 and 10.7.5) greatly depends on the choice of the control objective, for example, the required waveform of the supply current after compensation. The selection of the domain (e.g., time or frequency) and the reference frame (e.g., $dq0$ or $\alpha\beta0$) will affect the computational burden required to implement appropriate filters. All active filters perform harmonic mitigation. However, depending on the selected control strategies, additional forms of compensation (e.g., fundamental reactive power, negative-sequence, zero-sequence, phase balancing, sag, swell, and flicker) can be accommodated within the apparent power rating of an active filter. There exist three different definitions for the control objective:

First definition: Supply currents (after filtering) should contain only fundamental frequency components. This is the main task of active filter controllers using waveform compensation (Section 10.7.1).

Second definition: Supply currents (after filtering) should be such that the instantaneous active power is constant while the instantaneous reactive power is zero. This is performed by active filter controllers that use instantaneous power compensation (Section 10.7.2).

Third definition: Supply currents (after filtering) should be entirely active. This is the main function of active filter controllers using impedance-based compensation (Section 10.7.3).

If the supply voltage is not distorted (with nearly sinusoidal waveform), the following remarks should be considered for the selection of the control method:

- The three aforementioned objective definitions are equivalent and the choice of the control method should be based on the ease of their implementation and their instrumentation requirements.
- Given the harmonic limits provided by relevant guidelines, recommended practices, or standards such as IEEE-519 [10], waveform compensation (first definition) is the most important approach. The techniques for this approach separate the fundamental from the harmonic components. Time-domain filters have the advantage of continuity during transient conditions, whereas frequency-domain filters have a better selectivity under steady-state conditions. The synchronous $dq0$ reference frame can ease the filter implementation of three-phase systems at the expense of longer processing time.
- The instantaneous power methods (second definition) are beneficial in three-phase systems due to their ease of filter design without the need for $dq0$ transformation.
- The active current approaches (third definition) are relatively easy to implement because they require only the identification of the (average) real power. These approaches are implicit in controllers that use the energy balance at the DC bus to identify the desired current.

Further complications regarding the selection of the control method for active filters arise if the supply voltage (before filtering) is distorted. This is the case for most practical power quality problems, for example, when active filters are operating on weak feeders of the distribution network. If the supply voltage is distorted, the following guidelines should also be considered for the selection of the control method:

- Distorted supply voltage may increase the apparent power rating of the active power filter.
- Waveform compensation approaches only draw fundamental current and do not generate extra distortion; however, they will not provide damping of the existing distortion.

- Instantaneous active power methods respond to harmonic supply voltages by introducing additional harmonic currents at other frequencies (Eq. 10.22). In particular, a negative-sequence fundamental voltage will cause these controllers to inject harmonic currents.
- Controllers with impedance-based compensation—resulting in active supply current—represent resistive characteristics at all frequencies, and therefore convert nonlinear loads into linear loads. They inherently provide damping and reduce the propagation of harmonic voltages. However, the design of active filters will have to be coordinated with existing approaches for the damping of network resonances.

Active filters can be designed to perform phase balancing if the exchange of instantaneous power between phases is within their ratings.

- All three control approaches (waveform compensation, instantaneous power compensation, and impedance synthesis) can enforce phase balancing. Waveform compensation and impedance synthesis (active current) methods can be implemented on a phase-by-phase basis to avoid rebalancing.
- Instantaneous power methods (in their original form) have an unacceptable response under unbalanced operating conditions, and will inject additional harmonic currents at different frequencies. Modifications (e.g., redefining the inverse transformation) are necessary to control harmonic generation.
- Waveform compensation methods result in balanced currents despite unbalanced voltages.
- Impedance synthesis methods present balanced impedances to unbalanced voltages. As a result, they draw the least current from the smallest phase voltage. In contrast, the constant instantaneous power approaches draw the greatest current from the smallest phase voltage.

The unified power quality conditioner (UPQC) is an advanced hybrid filter that consists of a series active power filter for compensation of voltage disturbances and a shunt active power filter for eliminating current distortions. This custom power device is mainly employed to protect a critical nonlinear load by improving the quality of voltage across it, and to improve the waveform of the supply current. Different control approaches may be implemented to simultaneously perform these tasks. This chapter introduces two commonly relied on UPQC control approaches based on the $dq0$ transformation and the instantaneous real and reactive powers. Detailed UPQC block diagrams are provided for these approaches and application examples are used to demonstrate their effectiveness. Using an appropriate control algorithm, a UPQC can improve the utility current and protect the critical load at the point of installation in distorted distribution systems by taking a number of actions including reducing harmonic distortions, voltage disturbance compensation, voltage regulation, reactive (harmonic) power flow, harmonic isolation, and neutral and negative-sequence current compensations.

References

- [1] F.Z. Peng, Harmonic sources and filtering approaches, *IEEE Ind. Appl. Mag.* 7 (2001) 18–25.
- [2] J.C. Das, Passive filters—potentialities and limitations, *IEEE Trans. Power Ind. Appl.* 40 (1) (2004) 232–241.

- [3] H. Akagi, Active harmonic filters, *Proc. IEEE* 93 (12) (2005) 2128–2141.
- [4] B. Singh, V. Verma, A. Chandra, K. Al-Haddad, Hybrid filters for power quality improvement, *IEE Proc. Gener. Transm. Distr.* 152 (3) (2005) 365–378.
- [5] M. El-Habrouk, M.K. Darwish, P. Mehta, Active power filters: a review, *IEE Proc. Electr. Power Appl.* 147 (5) (2000) 403–413.
- [6] T.C. Green, J.H. Marks, Control techniques for active power filters, *IEE Proc. Electr. Power Appl.* 152 (2) (2005) 369–381.
- [7] J.K. Phipps, A transfer function approach to harmonic filter design, *IEEE Ind. Appl. Mag.* (1997) 68–82.
- [8] B. Singh, K. Al-Haddad, A. Chandra, A review of active filters for power quality improvement, *IEEE Trans. Ind. Electron.* 46 (5) (1999) 960–971.
- [9] J.K. Phipps, Phase Shifting Transformers and Filters: Interfacing for Power Electronic Motor Drive Converters (MS thesis), University of Colorado at Denver, May 1993.
- [10] IEEE, Recommended Practice and Requirements for Harmonic Control in Electric Power Systems, *IEEE Standard* 519, 1992.
- [11] J.W. Nilsson, *Electric Circuits*, Addison-Wesley Publishing Company, Reading, Massachusetts, 1983.
- [12] R.E. Thomas, A.J. Rosa, *The Analysis and Design of Linear Circuits*, fourth ed., John Wiley & Sons, 2004.
- [13] J.J. Grainger, S. Civanlar, Volt/VAr control on distribution systems with lateral branches using shunt capacitors and voltage regulators. Part III: the numerical result, *IEEE Trans. Power Syst.* 104 (11) (1985) 3291–3297.
- [14] Z. Hu, X. Wang, H. Chen, G.A. Taylor, Volt/VAr control in distribution systems using a time-interval based approach, *IEE Proc. Gener. Transm. Distr.* 150 (5) (2003) 548–554.
- [15] M.A.S. Masoum, A. Ulinuha, S. Islam, K. Tan, Hybrid passive filter design for distribution systems with adjustable speed drives, in: *The Seventh International Conference on Power Electronics and Drive Systems (PEDS-2007)*, November 27–30, 2007. Bangkok, Thailand.
- [16] M. Gholamrezaei, M.A.S. Masoum, M. Kalantar, Parallel combination of passive and hybrid power filters for harmonic mitigation, in: *18th International Power System Conference*, vol. 1, 2003, pp. 7–15. PSC.
- [17] H.L. Jou, J.C. Wu, K.D. Wu, Parallel operation of passive power filter and hybrid power filter for harmonic suppression, *IEE Proc. Gener. Transm. Distr.* 148 (1) (2001) 8–14.
- [18] M. Aredes, K. Heumann, E.H. Watanabe, An universal active power line conditioner, *IEEE Trans. Power Delivery* 13 (2) (1998) 545–551.
- [19] L. GyuGyi, A unified flow control concept for flexible AC transmission systems, *Proc. Inst. Elect. Eng.* 139 (1992) 323–331. Part C, No. 4.
- [20] N.G. Hingorani, L. GyuGyi, *Understanding FACTS—Concepts and Technology of Flexible Transmission Systems*, IEEE Press, 2000.
- [21] N.G. Hingorani, Introducing custom power, *IEEE Spectr.* 32 (6) (1995) 41–48.
- [22] A. Ghosh, G. Ledwich, *Power Quality Enhancement Using Custom Power Devices*, Kluwer Academic Publishers, Boston, 2002.
- [23] F.Z. Peng, H. Akagi, A. Nabae, A new approach to harmonic compensation in power system—a combined system of shunt passive and series active filters, *IEEE Trans. Ind. Appl.* 26 (6) (1990) 983–990.
- [24] H. Akagi, New trends in active filters for power conditioning, *IEEE Trans. Ind. Appl.* 32 (6) (1996) 1312–1322.
- [25] H. Fujita, H. Akagi, The unified power quality conditioner: the integration of series and shunt-active power filters, *IEEE Trans. Power Electron.* 13 (2) (1998) 315–322.
- [26] F. Kamran, T.G. Habetler, Combined deadbeat control of a series-parallel converter combination used as universal power filter, in: *Proceedings of the IEEE Power Electronic Specialist Conference (PESC)*, pp. 196–201, 1995, *IEEE Transactions on Power Electronics*, vol. 13, Jan. 1998, pp. 160–168. No. 1.
- [27] L.M. Tolbert, F.Z. Peng, A multilevel converter-based universal power conditioner, *IEEE Trans. Ind. Appl.* 36 (6) (2000) 596–603.
- [28] D. Graovac, V. Katic, A. Rufer, Power quality compensation using universal power quality conditioning system, *IEEE Power Eng. Rev.* (2000) 58–60.
- [29] A. Ghosh, G. Ledwich, A unified power quality conditioner (UPQC) for simultaneous voltage and current compensation, *Electr. Power Syst. Res.* 59 (2001) 55–63.
- [30] S.A. Mosavi, M.A.S. Masoum, Mitigation of temporary and sustained power quality disturbances by UPQC, *Int. J. Eng.* 15 (3) (2004) 109–120.

- [31] M. Vilathgamuwa, Y.H. Zhang, S.S. Choi, Modeling, analysis and control of unified power quality conditioner, in: *Proceedings of the 8th International Conference on Harmonics and Quality of Power*, vol. 2, 1998, pp. 1035–1040. 14–16 Oct.
- [32] E.H. Watanabe, R.M. Stephan, M. Aredes, New concepts of instantaneous active and reactive powers in electrical systems with generic loads, *IEEE Trans. Power Delivery* 8 (2) (1993) 697–703.
- [33] G.C. Montanari, M. Loggini, A. Cavallini, L. Pitti, D. Zaninelli, Arc furnace model for the study of flicker compensation in electrical networks, *IEEE Trans. Power Delivery* 9 (1994) 2026–2036.

Optimal placement and sizing of shunt capacitor banks in the presence of harmonics

At the distribution level, about 13% of the total generated power consists of losses due to active and reactive current components. Research over the past several decades has shown that proper placement of shunt-capacitor banks can reduce the losses caused by reactive currents [1–33]. In addition to the reduction of energy and peak-power losses, effective capacitor installation can also release additional reactive power capacity within the distribution system and can improve the system voltage profile. Studies [23,34–44] indicate that the proper placement of shunt capacitors in the presence of voltage and current harmonics can also improve power quality and reduce the total voltage harmonic distortion (THD_v) of distribution systems. Thus, the problem of capacitor allocation involves the determination of the optimal locations, sizes, and number of capacitors to be installed within a distribution system such that maximum benefits are achieved, while all operational constraints (e.g., voltage profile, THD_v , and total number of capacitor banks at each bus and the entire system) are satisfied at different loading levels. There are a great many papers describing capacitor placement algorithms: The Capacitor Subcommittee of the IEEE Transmission and Distribution Committee has published 10 bibliographies on power capacitors from 1950 to 1980 [32]. Moreover, the VAR Management Working Group of the IEEE System Control Subcommittee has published another bibliography on reactive power and voltage control [33]. The total publication count listed in these bibliographies is over 400, and many of the papers are specific to the problem of optimal capacitor allocation [1–44]. Recent efforts mainly focus on the capacitor placement under nonsinusoidal operating conditions.

In power systems, the predominantly inductive nature of loads and distribution feeders as well as transformers and lines accounts for significant power losses due to lagging currents. The introduction of strategically sized and placed shunt capacitors within the distribution system helps to reduce the losses created by an inductive system, thus increasing the system capacity, reducing system losses, and improving the voltage profile. Due to the fact that there are many constraints and variables present, the process for calculating the placement and

sizing of shunt capacitors involves the evaluation of an optimization function. Often this function will not only address technical aspects of a problem, but will evaluate its cost as well. Therefore, it becomes necessary to design an approach that will optimize the solution at minimal cost.

Analyses of this chapter are restricted to the application of shunt capacitor banks for reactive power compensation of distribution systems under sinusoidal as well as nonsinusoidal operating conditions. The capacitor placement problem of a distribution system consists of determining the optimal locations, sizes, and types of capacitor banks in order to achieve maximum annual benefits within the permissible region of constraints (e.g., bus voltage deviation, total harmonic distortion, number of capacitor banks at each bus and the entire system). Various techniques and algorithms have been proposed and implemented for solving this problem under normal sinusoidal conditions and in the presence of voltage and current harmonics. All such methods have their own advantages, disadvantages, and limitations as stated by their assumptions.

The goal of this chapter is to show the progression of research in optimal capacitor placement for sinusoidal operating conditions and to introduce a number of algorithms for solving this problem in the presence of harmonics. [Section 11.1](#) presents the concept of reactive power compensation based on capacitors. [Section 11.2](#) addresses common types of shunt capacitor banks as used in power systems. A survey of various optimization algorithms for the placement and sizing of shunt capacitor banks under sinusoidal operating conditions is presented in [Section 11.3](#). The last part of the chapter includes analysis and comparison of various solution approaches for the optimal placement and sizing of fixed capacitor banks in the presence of voltage and current harmonics.

11.1 Reactive power compensation

Reactive power compensation is an important issue in electric power systems involving operational, economic, and quality of service aspects. Consumer loads (residential, commercial, industrial, service sector, etc.) impose active and reactive power demands. Active power is converted into useful energy, such as light, heat, and rotary motion. Reactive power must be compensated to guarantee an efficient delivery of active power to loads.

Capacitor banks are widely employed in distribution systems for reactive power compensation in order to achieve power and energy loss reduction, system capacity release, and acceptable voltage profiles. The extent of these benefits depends on the location, size, type, and number of shunt capacitors (sources of reactive power) and also on their control settings. Hence an optimal solution for placement and sizing of shunt capacitors in a distribution system is a very important aspect of power system analysis.

11.1.1 Benefits of reactive power compensation

Shunt capacitors applied at the receiving end of a power system feeder supplying a load at lagging power factor have several benefits, which may be the reason for their extensive applications. This section highlights some advantages of reactive power compensation.

11.1.1.1 Improved voltage profile

Highly utilized feeders with high reactive power demands have poor voltage profiles and experience large voltage variations when loading levels change significantly. In a power system, it is desirable to regulate bus voltages within a narrow range (e.g., +5%, −8% of their nominal values) and to have a balanced load on all three phases (eliminating negative- and zero-sequence currents with undesirable consequences such as equipment heating and torque pulsations in generators and turbines). However, loads of the power system fluctuate and can result in voltage deviations beyond their acceptable limits. In view of the fact that the internal impedance of the AC system is mainly inductive, it is the reactive power change of the load that has the most adverse effect on voltage regulation.

Traditionally, line voltage drop is compensated with distributed capacitors along a feeder, and by switching them according to the reactive power demand a rather constant voltage profile is achieved. Furthermore, by keeping the power factor close to unity along the section in question, the number of expensive voltage regulators can be minimized.

Impacts of active and reactive current variations on the terminal load voltage (V_t) are demonstrated in Fig. 11.1. An increase of ΔQ in the lagging VARS drawn by the load (indicated by quantities with primes in Fig. 11.1B) causes the reactive current component to increase to $(I_q + \Delta I_q)$, while the active current component I_p is assumed to be unchanged. This will result in a terminal voltage drop of ΔV_t and decreases the real power. Fig. 11.1C shows the phasor diagram where the active current component increases to $(I_p + \Delta I_p)$ with $\Delta I_p = \Delta I_Q$ (of Fig. 11.1B) while I_q is assumed to be unchanged. Comparison of phasor diagrams indicates that variations in reactive power (Fig. 11.1B) have more impact on voltage regulation as compared with active power variations (Fig. 11.1C).

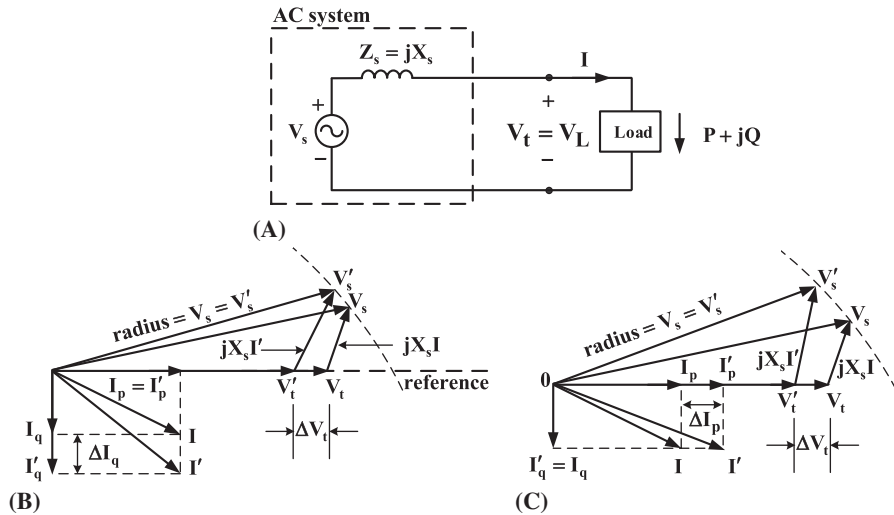


FIG. 11.1 Effect of active (I_p) and reactive (I_q) current on terminal voltage V_t ; (A) Thevenin's equivalent circuit of the AC system with a purely inductive internal impedance, (B) change in I_q , (C) change in I_p [45].

11.1.1.2 Reduced power system losses

Correcting the power factor can substantially reduce network losses in between the point in the network where the correction is performed and the source of generation. This can result in an annual gross return of as much as 15% on the capacitor investment [46]. To maximize benefits, power factor correction should be implemented as close to the customer load as possible. However, due to economies of scale, installation of capacitors at the low-voltage (LV) level is very costly when compared with high-voltage (HV) options.

In most industrial plant power distribution systems, the I^2R losses vary from 2.5% to 7.5% of the load kWh. This depends on the hours of full-load and no-load plant operation, wire size, and length of the main and branch feeder circuits. Capacitors are effective in reducing only that portion of the losses that is due to the reactive current. Losses are proportional to the current squared, and since current is reduced in direct proportion to power factor improvement, the losses are inversely proportional to the square of the power factor. Hence, as the power factor is increased with the addition of capacitor banks to the system, the amount of the losses is reduced. The connected capacitor banks have losses, but they are relatively small. Losses account for approximately one-third of 1% of the reactive power rating [46].

11.1.1.3 Released power system capacity

When capacitors are placed in a power system, they deliver reactive power and furnish magnetizing current for motors, transformers, and other electromagnetic devices. This increases the power factor and it means that for a lower current (or apparent power) level a higher real power utilization occurs. Therefore, capacitor banks can be used to reduce overloading or permit additional load to be added to the existing system. Release of system capacity by power factor improvement due to capacitors is becoming extremely important because of the associated economic and system benefits.

Reactive power compensation improves network utilization; that is, capacity is released and it allows more customers to be connected to what could have been a highly utilized feeder, without going to the costly extreme of adding an additional feeder.

11.1.1.4 Increased plant ratings

Another undesirable effect of a network with poor power factor is a possible reduction in plant ratings. This is often noticeable when transformer ratings are limited by overvoltage available from tapping. Correcting power factor to unity at the zone substation will maximize the realpower rating of transformers by providing access to thermal emergency ratings.

11.1.1.5 Capital deferment

As ratings are based on apparent power rather than active power, reduced apparent power utilization reduces operating risks and can therefore defer expenditure related to the network expansion. This deferment can be applied from the distribution feeder, back to the zone substation, subtransmission, terminal station, transmission network, and generation.

11.1.2 Drawbacks of reactive power compensation

Although capacitor banks can undoubtedly provide many benefits to a power system, there are several situations where they can cause deterioration of the power system. They may result in power quality problems, and in damage of connected equipment. In some situations, capacitor banks themselves may also become victims of unfortunate circumstances. Optimal placement and sizing of shunt capacitor banks as discussed in [Sections 11.3 and 11.4](#) will prevent most of these problems. This section highlights some drawbacks of reactive power compensation.

11.1.2.1 Resonance

Resonance is the condition where the capacitive and inductive reactances of a system cancel each other, thus leaving the resistive elements in the system as the only form of impedance. The frequency at which this offsetting effect takes place is called the resonant frequency of the system. Resonance conditions will cause unacceptable high currents and overvoltages to occur with the potential to damage not only the installed capacitor but also other equipment operating on the system. In case of resonance, large power losses could be experienced by the system.

11.1.2.2 Harmonic resonance

If the resonant frequency happens to coincide with one generated by a harmonic source (e.g., nearby nonlinear load) then voltages and currents will increase disproportionately, causing damage to capacitors and other electrical equipment. Harmonic resonance may cause capacitor failure due to harmonic overvoltages and overcurrents.

11.1.2.3 Magnification of capacitor-switching transients

Capacitor-switching transients typically occur when a large capacitor on the high-voltage side of the power system (usually at the utility side) is energized. This results in magnification of transients at low-voltage capacitors. The magnified transient at a low-voltage remote end can reach up to 400% of its rated values.

11.1.2.4 Overvoltages

The voltages of a power system are often maintained within a specified upper and lower limit of the rated value. Capacitors, especially switched types, can cause overvoltage problems by increasing the voltage beyond its maximum desired value. This causes complications in the power system and can damage and deteriorate the system.

11.2 Common types of distribution shunt capacitor banks

There are many reasons and benefits for utilizing distribution capacitors; reactive power compensation remains one of the most effective solutions for permitting growth in a network. It has long been popular to have reactive compensation based at zone substations. However, there has been a growing trend to distribute reactive compensation (e.g., along high-voltage overhead feeders). Moving capacitor banks closer to the load is an effective way to reduce

network losses, defer costly capital expenditure, and improve network utilization as well as voltage profiles of the distribution network.

Pole-mounted capacitor banks can be of either the switched or fixed type. They have the ability to be distributed along overhead feeders with ease and as such are a very popular choice for reactive compensation. Fixed capacitors are usually sized for minimum base-load conditions, whereas switched units are designed for loads above the minimum. Switched capacitor banks provide the capability and the flexibility to control the reactive power along the feeder as the load changes. Table 11.1 shows some of the different advantages of distributed versus zone substation capacitors.

There are several control strategies available for switched capacitors, the number of which is mainly constrained by the needs and the complexity of the capacitor bank. Some of the more well used and documented techniques are:

- Voltage control: Capacitor switching relies on a known upper and lower voltage limit set by the utility. The bank is switched in and switched out at those voltage limits.
- Time control: It does not require any measured values, as capacitor switching is solely based on time. This approach is often used with well-known, time-dependent load conditions.
- Reactive-power control: Capacitor switching is performed when the measured reactive power flow of the line exceeds a preset level.

TABLE 11.1 Advantages and disadvantages of distributed (pole-mounted) capacitors over zone substation installations.

Component	Distributed capacitors	Zone substation capacitors
Initial capital outlay	Less expensive	More expensive
Reduction in losses	More effective	Less effective
Network-utilization improvement	More effective	Less effective
Voltage-profile improvement	Effective	Ineffective
Capital deferment	More effective	Less effective
Remote monitoring and control	More expensive	Less expensive
Maintenance and setting review	More expensive	Less expensive
Accommodation/space	Overhead network required	Space required at zone substation
Failure of a capacitor unit	Small impact on apparent power load	Large impact on apparent power load

11.2.1 Open-rack shunt capacitor bank

The open-rack shunt capacitor bank [47] is one of the most common types of capacitor banks used by utilities. It is available with internally fused, externally fused, or fuseless capacitor units (Table 11.2). The major advantage with this type of capacitor bank is its compact design, small footprint, and ease of maintenance.

TABLE 11.2 Typical ratings and locations of distribution shunt capacitor banks [47].

Type of shunt capacitor bank		Maximum power (MVar)	Maximum voltage (kV)	Location
Open-rack	Internally fused	Up to 600	Up to 700	Outdoor
	Externally fused	1.2–600	2.4–765	Outdoor
	Fuseless	1.2–600	35–765	Outdoor
Pole-mounted		150–3600	2.4–36	
Modular		Up to 100	5–138	
Enclosed fixed		15	24	
Enclosed switched		1000 kVAr/step	24	

11.2.1.1 Internally fused open-rack capacitor bank

These banks have internal fuses for the current-limiting action; one fuse is connected in series with each element within the capacitor. They are designed and coordinated to isolate internal faults at the capacitor-element level and allow continued operation of the remaining elements of that capacitor unit. A very small part of the capacitor is being disconnected (self-healing), and therefore, the capacitor bank remains in service. The designs are customized per customer specifications and generally include racks, capacitors, insulators, switches, imbalance protection scheme, and current-limiting reactors. An internally fused open-rack capacitor bank provides the following main advantages:

- cost-effective,
- utilizes large kVAr size units,
- few live parts are exposed,
- well-known technology (over 80 years of experience), and
- decreased installation and maintenance time and cost with proven reliability in the field.

11.2.1.2 Externally fused open-rack capacitor bank

These open-rack capacitor banks [47] are typically used at substations and utilize an external fuse (current limiting) as a means of unit protection. The designs are customized per customer specifications and generally include racks, capacitors, insulators, fuses, elevation structures, switches, imbalance protection scheme, and current-limiting reactors. An externally fused open-rack capacitor bank provides the following main advantages:

- visual indication of blown fuses,
- utilizes small kVAr size units, and
- well-known technology (over 100 years of experience).

11.2.1.3 Fuseless open-rack capacitor bank

These types of open-rack substation banks [47] utilize an imbalance protection scheme as the primary means of protection. There are no internal or external fuses in this design.

The “string” configuration provides a very reliable and cost-effective design for banks rated 35kV and above. A fuseless open-rack capacitor bank provides the following main advantages:

- cost-effective and compact size,
- utilizes large kVAr size units,
- few live parts are exposed,
- reduced installation and maintenance time as well as reduced cost, and
- proven reliability in the field.

11.2.2 Pole-mounted capacitor bank

Pole-mounted capacitor banks [47] provide an economical way to apply capacitors to a distribution feeder. The aim is to provide voltage support, lower system losses, release system capacity, and eliminate power-factor penalties. They are normally factory prewired and assembled, ready for installation. Table 11.2 outlines some of the typical ratings of pole-mounted capacitor banks.

Pole-mounted capacitor banks are typically supplied with the following set of options:

- aluminum or galvanized steel rack,
- oil or vacuum switches,
- junction box,
- switching controller,
- wildlife guards,
- insulated conductor,
- control power transformer,
- distribution class arresters,
- fused cutout, and
- current-limiting reactors.

11.2.3 Modular capacitor bank

The modular capacitor bank [47] is preengineered with a power circuit breaker, protection, and control panel, all factory mounted and tested on a steel structure. A modular capacitor bank requires minimal field installation and commissioning work. Table 11.2 outlines some of the typical power and voltage ratings of a modular capacitor bank.

A modular capacitor bank provides the following main advantages:

- many standardized configurations with flexibility to fit customer needs,
- factory tested and assembled, reducing environmental project delays and enhancing quality,
- available as a stand-alone unit or integrated into preexisting substation,
- easily relocatable, and
- future expandability with lower costs than traditional banks.

11.2.4 Enclosed fixed capacitor bank

The enclosed fixed bank [47] is a fully insulated and fixed reactive compensation system. Its compact design and its full insulation makes the enclosed fixed bank easy to place and it requires no fencing or extra protection. Table 11.2 outlines some of the typical power and voltage ratings of an enclosed fixed capacitor bank.

11.2.5 Enclosed switched capacitor bank

The enclosed switched bank [47] is a reactive compensation system with modular, multi-stage switched capacitor steps that will automatically compensate the network to maintain a preset power-factor level. Table 11.2 outlines some of the typical power and voltage ratings of an enclosed switched capacitor bank.

The enclosed switched bank is available with the following options:

- inrush or detuning reactor,
- cooling or heating,
- imbalance protection,
- stainless steel,
- user defined step sizes,
- switched or fixed,
- indoor or outdoor, and
- automatic or manual.

11.3 Classification of capacitor allocation techniques for sinusoidal operating conditions

The problem of capacitor allocation for loss reduction in electric distribution systems has been extensively researched and many documents have been published [1]. Solution techniques for the capacitor allocation problem can be classified into following categories:

- analytical methods,
- numerical programming (including dynamic programming (DP), local variations (LV), mixed integer programming, and integer quadratic programming),
- heuristic approaches,
- artificial intelligence-based algorithms (including expert systems, simulated annealing, artificial neural networks, fuzzy set theory, and genetic algorithms),
- graph search algorithm,
- particle swarm algorithm,
- tabu search algorithm, and
- sequential quadratic programming.

This section introduces each method and presents their merits and shortcomings.

11.3.1 Analytical methods

All early works on optimal capacitor allocation under sinusoidal operating conditions with linear loads used analytical methods. These algorithms were devised when computing resources were unavailable or expensive. These methods mainly rely on analytical approaches and calculus to determine the maximum of a capacitor savings function. The savings function has often been given by

$$S = K_E \Delta E + K_P \Delta P - K_C C, \quad (11.1)$$

where $K_E \Delta E$ and $K_P \Delta P$ are the economic energy and peak-power loss reductions due to capacitor placement, respectively, and $K_C C$ is the capacitor installation cost.

Initial techniques (by Neagle and Samson [2], Cook [3], Schmill [4], Chang [5], and Bae [6]) achieved simple closed-form solutions to maximize some form of the cost function (Eq. 11.1) based on unrealistic assumptions such as constant feeder conductor sizes and uniform current loading. This early work established the famous *two-thirds rule* loss reduction, a capacitor rated at two-thirds of the peak-reactive load, and installed at a position two-thirds of the distance along the total feeder length. Despite these unrealistic assumptions on which the two-thirds rule relies, some utilities today still implement their capacitor placement program based on this rule and some capacitor manufacturers list this rule in their application guides.

Later techniques (Grainger et al. [7] and Salama et al. [8]) achieve more accurate results by formulating equivalent normalized feeders with sections of different conductor sizes and nonuniformly distributed loads, as well as the inclusion of switching capacitors and load variations.

11.3.1.1 Drawbacks of analytical methods

One drawback of all analytical methods is the assumption of continuous variables. The calculated capacitor sizes may not match the available standard sizes and the optimized placements may not coincide with the physical node locations in the distribution system. The results would need to be rounded up or down to the nearest practical value and may result in an overvoltage situation or a loss saving less than the calculated one.

Therefore, the earlier works provide a rough rule of thumb for capacitor placement on feeders with evenly distributed loads. More sophisticated analytical methods are suitable for distribution systems of considerable sizes, but they require more distribution system information and more time to implement.

11.3.2 Numerical programming methods

Various numerical programming methods were devised to solve the capacitor allocation problem as computing power became more readily available and computer memory less expensive. These are iterative optimization techniques used to maximize (or minimize) an objective function of decision variables. The values of the decision variables must also satisfy a set of constraints. For optimal capacitor allocation, the saving represents the objective function, and operational restrictions (e.g., locations, sizes, and numbers of capacitors, bus voltages, and currents) are the decision variables that must all satisfy operational constraints. Numerical programming methods allow the use of more elaborate cost functions for the

optimal capacitor placement problem and the objective functions can consider all voltage and line loading constraints, discrete sizes of capacitors, and physical locations of nodes. Using numerical programming methods, the capacitor allocation problem can be formulated as follows:

$$\text{maximize } S = K_L \Delta L - K_C C \quad \text{subject to } \Delta V \leq \Delta V_{\max}, \quad (11.2)$$

where C is the size of capacitor, $K_L \Delta L$ is the cost saving, which may include energy and peak-power loss reductions and released capacity, $K_C C$ is the installation cost of the capacitors, and ΔV is the change in voltage due to capacitor installation, which must not exceed a maximum of $\Delta V_{\max}$.

The first applications of dynamic programming (DP) to the capacitor placement problem (by Duran [9] and Fawzi et al. [10]) were simple algorithms considering only the energy-loss reduction, released apparent power, and the discrete nature of capacitor sizes. Later works include applications of local variations (by Ponnavaikko and Rao [11]), mixed integer programming and integer quadratic programming (by Baran and Wu [12]) to account for the effects of load growth, switched capacitors for varying load, and regulators in a distribution system.

11.3.2.1 Drawbacks of numerical programming methods

The level of sophistication and the complexity of the numerical programming models increase in chronological order of their publication time. This progression concurs with the advancement in computing capability. At the present time, computing is relatively inexpensive and many general numerical optimization packages are available to implement any of the above algorithms. Some of the numerical programming methods have the advantage of considering feeder node locations and capacitor sizes as discrete variables, which is an advantage over analytical methods. However, the data preparation and interface development for numerical techniques may require more time than for analytical methods. The main drawback of all numerical programming approaches is the possibility of arriving at a local optimal solution. Therefore, one must determine the convexity of the capacitor placement problem to determine whether the result yielded by a numerical programming technique is either a local or global extreme.

11.3.3 Heuristic methods

Heuristics are rules of thumb that are developed through intuition, experience, and judgment. They produce fast and practical strategies that reduce the exhaustive search space and can lead to a solution that is near optimal with a good level of confidence. In applying heuristic search strategies to the optimum placement and sizing of capacitors in a distribution system, often a small number of nodes, named sensitive nodes, are selected for installing capacitors that optimize the net savings while achieving a large overall loss reduction. This is to decrease the exhaustive search space, while keeping the end result (objective function) at an optimal or near optimal value. Heuristic approaches, due to the reduced computational time compared to other techniques, can be suitable for large distribution systems and also in on-line implementation.

Abdel-Salam et al. [13] proposed a heuristic technique to determine the sensitive nodes in sections of the distribution system that have the greatest effect on loss reduction and then maximized the power-loss reduction from capacitor compensation. Chis et al. [14] improved on the work of [13] by determining the sensitive nodes that have the greatest impact on loss reduction for the entire distribution system and the effect of load variations.

11.3.3.1 Drawbacks of heuristic methods

Heuristic methods are intuitive, easier to understand, and simpler to implement than other optimization techniques such as analytical and numerical programming approaches. However, the results produced by heuristic algorithms are not guaranteed to be optimal. Other disadvantages associated with the use of a heuristic search algorithm are as follows:

- The criterion of selecting the nodes with the highest impact on the losses in a feeder section is not totally representative for the state of the power losses of the whole system and may result in inaccurate results;
- Compensation is based on loss reduction in the system rather than net dollar savings;
- It requires a large number of power flow runs;
- It only considers fixed capacitors; and
- It does not have the flexibility to control the balance between the global and local exploration of the search space, and its results may not be globally optimal.

11.3.4 Artificial intelligence-based (AI-based) methods

The popularity of artificial intelligence (AI) has led many researchers to investigate its applications in power system engineering and electrical machines. In particular, genetic algorithms (GAs), simulated annealing (SA), expert systems (ESs), artificial neural networks (ANNs), and fuzzy set theory (FST) have been proposed and implemented for optimal placement and sizing of shunt capacitor banks.

All of the above AI methods can be implemented using commercially available AI development shells or be hardcoded using any programming language with relative ease.

Drawbacks of AI-based methods

The user may encounter convergence problems with GAs, SA, and ANNs methods. For on-line applications, ANNs can only be used for a particular load pattern. ANNs would need to be retrained for every different set of load curves that are characteristic of the distribution system. However, the use of ESs is better suited for on-line and dynamic applications.

11.3.4.1 Genetic algorithms

The progressive introduction of genetic algorithms (GAs) as powerful tools allows complicated, multi-nodal, discrete optimization problems to be solved. Genetic algorithms use biological evolution to develop a series of search space points toward an optimal solution. Similar to the natural evolution of life, GAs tend to evolve a group of initial poorly generated solutions to a set of acceptable solutions through successive generations. This approach involves coding of the parameter set rather than working with the parameters themselves. GAs operate by selecting a population of the coded parameters with the highest fitness levels

(e.g., parameters yielding the best results) and performing a combination of mating, crossover, and mutation operations on them to generate a better set of coded parameters.

Most traditional optimization methods move from one point in the decision hyperspace to another using some deterministic rule. The problem with this is that the solution is likely to get trapped at a local optimum. Genetic algorithms start with a diverse set (population) of potential solutions (hyperspace vectors). This allows for the exploration of many optima in parallel, lowering the probability of getting trapped at a local optimum. Genetic algorithms are simple to implement and are capable of locating the global optimal solution.

Boone and Chiang [15] devised a method based on GAs to determine optimal capacitor sizes and locations. The sizes and locations of capacitors are encoded into binary strings, and crossover is performed to generate a new population. However, their problem formulation only considered the costs of the capacitors and the reduction of peak-power losses. Sundhararajan and Pahwa [16] performed a similar work with the exception of including energy losses and implementing an elitist strategy whereby the coded strings chosen for the next generation do not undergo mutation or crossover procedures. Miu et al. [17] revisited the GA formulation to include additional features of capacitor replacement and control for unbalanced distribution systems.

There are five components that are required to implement a genetic algorithm: representation, initialization, evaluation function, genetic operators, and genetic parameters.

Genetic representation

Genetic algorithms are derived from a study of biological systems. In biological systems, evolution takes place on organic components used to encode the structure of living beings. These organic components are known as chromosomes. A living being is only a decoded structure of the chromosomes. Natural selection is the link between chromosomes and the performance of their decoded structures. In genetic algorithms, the design variables or features that characterize an individual are represented in an ordered list called a string. Each design variable corresponds to a gene and the string of genes corresponds to a chromosome. A group of chromosomes is called a population. The number of chromosomes in a population is usually selected to be between 30 and 300. Each chromosome is a string of binary codes (genes) and may contain substrings. The merit of a string is judged by the fitness function, which is derived from the objective function and is used in successive genetic operations. During each iterative procedure (referred to as generation), a new set of strings with improved performance is generated using three GA operators (namely, reproduction, crossover, and mutation).

Structure of chromosomes

Fig. 11.2 shows an example illustrating the basic structure of a chromosome. Bit strings consisting of 0's and 1's have been found to be most effective in representing a wide variety

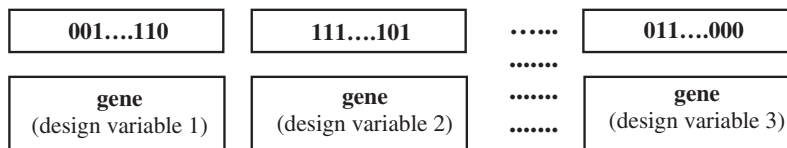


FIG. 11.2 Basic chromosome structure.

of information in the problem domain involving function optimization. Many other representation schemes such as ordered lists, embedded lists, and variable-element lists have been developed for specific industrial applications of genetic algorithms.

Initialization

Genetic algorithms operate with a set of strings instead of a single string. This set of strings is known as a population and is put through the process of evolution to produce new individual strings. To begin with, the initial population could be seeded with heuristically chosen strings or at random. In either case, the initial population should contain a wide variety of structures to ensure the complete problem space is covered.

Evaluation (fitness) function

The evaluation function is a procedure to determine the fitness of each chromosome in the population and is very much application orientated. Since genetic algorithms proceed in the direction of evolving the fittest chromosomes, and the fitness value is the only information available to the algorithm, the performance is highly sensitive to the fitness values. In the case of optimization routines, the fitness is the value of the objective function to be optimized. Genetic algorithms are basically unconstrained search procedures in the given problem domain. Any constraints associated with the problem can be incorporated into the objective function as penalty functions.

Genetic operators

Genetic operators are the stochastic transition rules applied to each chromosome during each generation procedure to generate a new improved population from an old one. A genetic algorithm usually consists of reproduction, crossover, and mutation operators.

- *Reproduction* is a probabilistic process for selecting two parent strings from the population of strings on the basis of roulette-wheel mechanism, using their fitness values. This process is accomplished by calculating the fitness function for each chromosome in the population and normalizing their values. A roulette wheel is constructed where each section of the wheel represents a certain chromosome and its relative fitness value. This ensures that the expected number of times a string is selected is proportional to its fitness relative to the rest of the population. Therefore, strings with higher fitness values have a higher probability of contributing offspring and are simply copied on into the next generation.
- *Crossover* is the process of selecting a random position in the string and swapping the characters either left or right of this point with another similarly partitioned string. This random position is called the crossover point. For example, if two parent strings are $x_1 = 1010: 11$ and $x_2 = 1001: 00$ and the crossover point has been selected as shown by the colon, then if swapping is implemented to the right of this point, the resulting offspring structures would be $y_1 = 1010: 00$ and $y_2 = 1001: 11$ (e.g., the two digits “11” to the right of the colon in x_1 are swapped with the two digits “00” to the right of the colon in x_2). The probability of crossover occurring for two parent chromosomes is usually set to a large value in range of 0.7–1.0.
- *Mutation* is the process of random modification of a string position by changing “0” to “1” or vice versa, with a small probability. It prevents complete loss of genetic material through

reproduction and crossover by ensuring that the probability of searching any region in the problem space is never zero. The probability of mutation is usually assumed to be small (e.g., between 0.01 and 0.1).

Genetic parameters

Genetic parameters are the entities that help to regulate and improve the performance of a genetic algorithm. Some of the parameters that can characterize the genetic space are as follows:

- *Population size* affects the efficiency and performance of the genetic algorithm. A smaller population would not cover the entire problem space, resulting in poor performance. A larger population would cover more space and prevent premature convergence to local solutions; however, it requires more evaluations per generation and may slow down the convergence rate.
- *Crossover rate* affects the rate at which the process of crossover is applied. In each new population, the number of strings that undergo the process of crossover can be depicted by a chosen probability (crossover rate). A higher crossover rate introduces new strings more quickly into the population; however, if the rate is too high, high-performance strings are eliminated faster than selection can produce improvements. A low crossover rate may cause stagnations due to the lower exploration rate, and convergence problems may occur.
- *Mutation rate* is the probability with which each bit position of each string in the new population undergoes a random change after the selection process. A low mutation rate helps to prevent any bit position from getting stuck to a single value, whereas a high mutation rate can result in essentially random search.

Convergence criterion

The iterations (regenerations) of genetic algorithms are continued until all generated chromosomes become equal or the maximum number of iterations is achieved. Due to the randomness of the GA method, the solution tends to differ for each run, even with the same initial population. For this reason, it is suggested to perform multiple runs and select the “most acceptable” solution (e.g., with most benefits, within the permissible region of constraints).

Flowchart of genetic algorithm for capacitor placement and sizing

Fig. 11.3 shows a simplified flowchart of an iterative genetic algorithm for optimal placement and sizing of capacitor banks in distribution system under sinusoidal operating conditions. An initial population is randomly selected, genetic operators are applied, and the old population is replaced with the new generation. This process is repeated until the algorithm has converged.

Drawbacks of genetic algorithms

There are disadvantages associated with the use of a genetic algorithm:

- It does not have flexibility to control the balance between global and local exploration of search space;
- It requires relatively large computational time and effort; and

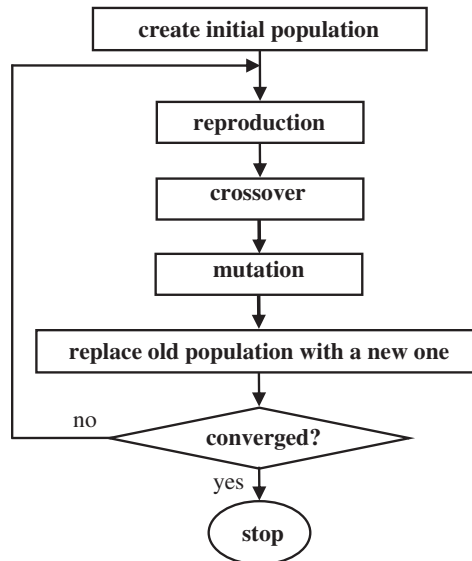


FIG. 11.3 Simplified flowchart of a typical genetic algorithm structure.

- Convergence problems may occur, which may be overcome by solving the problem a number of times with different initial populations and selecting the best solution.

11.3.4.2 Expert systems

Expert systems (ESs) or knowledge-based systems consist of a collection of rules, facts (knowledge), and an inference engine to perform logical reasoning. The ES concept has been proposed and implemented for many power system problems that require decision-making, empirical judgments, or heuristics such as fault diagnosis, planning, scheduling, and reactive power control.

Salama and colleagues [18] developed an ES containing technical literature expertise (TLE) and human expertise (HE) for reactive power control of a distribution system. The TLE includes the capacitor allocation method based on [8] for maximum savings from the reduction of peak-power and energy losses. The HE component of the knowledge base contains information to guide the user to perform reactive power control for the planning, operation, and expansion stages of distribution systems. Application of ESs for the capacitor placement problem is yet to be explored and requires more attention.

11.3.4.3 Simulated annealing

Simulated annealing (SA) is an iterative optimization algorithm that is based on the annealing of solids. When a material is annealed, it is heated to a high temperature and slowly cooled according to a cooling schedule to reach a desired state. At the highest temperature, particles of the material are arranged in a random formation. As the material is cooled, the particles become organized into a lattice-like structure, which is a minimum energy state.

For the capacitor allocation problem, a total cost function is formulated instead of a savings function. Analogous to reaching a minimum energy state of the annealing of solids, Ananthapadmanabha et al. [19] used SA to minimize a total cost function given by

$$T_{\text{loss}} = K_p P_{\text{loss}} + K_E E_{\text{loss}} + K_C C, \quad (11.3)$$

where C is the size of capacitor, $K_p P_{\text{loss}}$ is the cost of peak-power losses, $K_E E_{\text{loss}}$ is the cost of energy losses, and $K_C C$ is the capacitor installation cost. Also, $K_C = K_{cfp}$ (see Table 11.3) is the cost of kVAr.

11.3.4.4 Artificial neural networks

Application of artificial neural networks (ANNs) in power engineering is gaining interest. An ANN is the connection of artificial neurons that simulates the nervous system of a human brain. The potential advantage of the ANN is its ability to handle the nonlinear mapping of an input-output space. The difficulty in designing an ANN is to generate the training patterns. To overcome this problem, a reinforcement learning process is usually proposed. An ANN typically consists of three types of layers: an input layer, one or more hidden layers, and an output layer. The ANN accepts given input data and minimizes the difference between known output data and generated output information. The relationships between inputs and outputs are embedded as parameters in the hidden layer. Correct output patterns can be generated by the ANN provided that there are enough hidden layers and nodes to encode the input-output pattern, and enough known data to train the ANN. Once an ANN is trained, it can provide very fast results for any given set of inputs.

Santoso and Tan [20] used ANNs for the optimal control of switched capacitors. In their work, two neural networks are designed and trained. One network predicts the load profile from a set of previous load values obtained from direct measurement at various buses. A second network determines the optimal capacitor tap positions based on the load profile as predicted by the first network. The first network is trained with a set of prerecorded load profiles and the second network is trained to maximize the energy loss reduction for a given load condition. To reduce the complexity of training, the distribution system is partitioned into many smaller subsystems.

TABLE 11.3 Yearly costs of fixed capacitors [36,43].

Q_p (kVAr)	150	300	450	600	750	900
K_{cfp} (\$/kVAr)	0.500	0.350	0.253	0.220	0.276	0.183
Q_p (kVAr)	1050	1200	1350	1500	1650	1800
K_{cfp} (\$/kVAr)	0.228	0.170	0.207	0.201	0.193	0.187
Q_p (kVAr)	1950	2100	2250	2400	2550	2700
K_{cfp} (\$/kVAr)	0.211	0.176	0.197	0.170	0.189	0.187
Q_p (kVAr)	2850	3000	3150	3300	3450	3600
K_{cfp} (\$/kVAr)	0.183	0.180	0.195	0.174	0.188	0.170

Drawbacks of artificial neural networks

ANNs may not be suitable for a large distribution system since many smaller subsystems are required and the training time becomes excessive. However, once networks are trained, iterative calculations are no longer required, and a fast solution for a given set of inputs can be provided. Gu and Rizy [21] followed the method of [20] and included an additional functionality of regulator control.

11.3.4.5 Fuzzy set theory

The concept of fuzzy set theory (FST) was introduced by Zadeh [22] in 1965 as a formal tool for dealing with uncertainty and soft modeling. A fuzzy variable is modeled by a membership function, which assigns a degree of membership to a set. Usually, this degree of membership varies from zero to one.

Chin [23] used FST for the capacitor allocation problem. Three membership functions (for power loss, bus voltage deviation, and harmonic distortion) are defined. A fuzzy decision variable (e.g., the intersection of the three membership functions for each node in the distribution system) is calculated to determine the most appropriate buses for capacitor placement. However, no mathematical optimization procedure is provided for capacitor sizing. Ng et al. [24,25] applied FST to the capacitor placement problem by using fuzzy approximate reasoning. Voltage and power loss indices of the distribution system buses are modeled by membership functions, and a fuzzy expert system (FES) containing a set of heuristic rules performs the inferencing to determine a capacitor placement suitability index of each node. Capacitors are placed at the nodes with the highest suitability.

Fuzzy logic and fuzzy inference system

Fuzzy logic in terms of fuzzy sets is about mapping an input space to an output space. The main operation to achieve this end is through the use of if-then statements called rules. These rules are used to refer to variables and the adjectives that describe those variables. This is the main theory behind the operation of a fuzzy inference system. For the system to interpret these rules, they must first be defined in terms of the data they will control and the adjectives that will be used. A good example of this is a system defining how hot the water is coming out of a hot water system. We need to define the range of the expected water temperatures, as well as what is meant by the word “hot.”

Fuzzy sets

A fuzzy set is a set without a crisp, clearly defined boundary. It can contain elements with partial, full, or no membership. This differs quite dramatically from the notion of a classical set, which is defined by the inclusion or exclusion of certain elements.

Fuzzy logic is based on the fact that the truth of any statement becomes a matter of degree. The true power of using fuzzy logic is not that it is an extremely complex tool which can give a direct answer, rather that it can model human perception, language, and thinking, thus being able to use linguistic descriptors to answer a problem that would normally need or expect a yes-no answer with a not-quite-yes-no answer. This is done by expanding the familiar Boolean logic of 1 for yes and 0 for no. This means that if absolute truth is defined by 1 and that absolute falsehood is defined by 0, fuzzy logic will permit alternative logical answers between

the range of [0 1] such as 0.35 or 0.6521 and by doing so be able to recreate such linguistic descriptors in relation to an element's relationship to a set as medium, high, low, very low, very high, and so on. Now with the possibility of a range of logical answers a more descriptive set can be created. A plot mapping an input space to an output space is considered to be a membership function.

Membership function

A membership function is a curve that defines how each point in the input space is mapped to a membership value (or degree of membership) between 0 and 1. The main requirement for a membership function is that it varies between 1 and 0. The shape of membership functions are created from such requirements as simplicity, convenience, speed, and efficiency.

A fuzzy set is an extension of a classical set. If X is the universe of discourse and its elements are denoted by x , then a fuzzy set A in X is defined as a set of ordered pairs

$$A = \{(x, \mu_A(x)) \mid x \in X\},$$

where $\mu_A(x)$ (called the membership function of x in A) maps each element of X to a membership value between 0 and 1.

Many types of membership functions have been proposed and implemented. They can be created from scratch or even tailored or trained to conform to a set of data. There are many types of membership functions such as triangular, trapezoidal, symmetric Gaussian (defines a $f(x; \sigma, c) = \exp(-(x-c)^2/2\sigma^2)$) and sigmoidal. The possibility of creating membership functions based on already existing mathematical formulas and functions is endless, such as membership functions created from the difference and/or product of two sigmoidal functions.

Fuzzy logic operators

The logical operations associated with fuzzy logic can be described as a superset of standard Boolean logic. The operations in Boolean known as AND, OR, and NOT can all be repeated in fuzzy logic. Shown in Table 11.4 are these three integral Boolean operations with their related logical operations in fuzzy.

Fuzzy if-then rules

If-then rules are used to define the relationships between variables based on defined logic and membership functions. An if-then rule is created in the form

If x is A then y is B .

TABLE 11.4 Comparison of Boolean and fuzzy logic operations in terms of two sets A and B .

Boolean operation	Fuzzy logic operation
$A \text{ AND } B$	$\min(A, B)$
$A \text{ OR } B$	$\max(A, B)$
$\text{NOT } A$	$1 - A$

A and B are linguistic values defined by fuzzy sets on the ranges (universes of discourse) X and Y , respectively. The if-part of the rule is called the antecedent (or premise), whereas the then-part of the rule (y is B) is called the consequent (or conclusion).

Interpreting if-then rules is a three-part process:

- Fuzzify inputs: Resolve all fuzzy statements in the antecedent to a degree of membership between 0 and 1. If there is only one part to the antecedent, this is the degree of support for the rule.
- Apply fuzzy operator to multiple part antecedents: If there are multiple parts to the antecedent, apply fuzzy logic operators and resolve the antecedent to a single number between 0 and 1. This is the degree of support for the rule.
- Apply implication method: Use the degree of support for the entire rule to shape the output fuzzy set. The consequent of a fuzzy rule assigns an entire fuzzy set to the output. This fuzzy set is represented by a membership function that is chosen to indicate the qualities of the consequent. If the antecedent is only partially true (i.e., is assigned a value less than 1), then the output fuzzy set is truncated according to the implication method.

Implication

Implication is the method used to create a final consequent function or set. The if-then rule is often not sufficient enough and more rules may be necessary to create a satisfying result. Consider an extension to this rule shown below,

If x is A OR y is B then z is C .

This *expanded if-then* statement now has two rules involved that are controlled by the logical operation OR. Implication becomes the means by which the consequent is created from this rule, which is the “ z is C ” part.

Two main methods of implication are often used. These are entitled minimum (similar to the AND operation previously discussed) and the product methods. The minimum method will truncate the output fuzzy set, and the product method will scale the output fuzzy set deriving an aggregated output from a set of triggered rules.

Fuzzy inference

The Mamdani implication methods [48] are usually used for inferencing. Two implication methods are relied on to determine the aggregated output from a set of triggered rules:

- *The Mamdani max-min implication method* of truncating the consequent membership function of each discarded rule (at the minimum membership value of all the antecedents) and determining the final aggregated membership function.
- *The Mamdani max-prod implication method* of scaling the consequent membership function of each discarded rule (to the minimum membership value of all the antecedents) and determining the final aggregated membership function.

Defuzzification

Defuzzification is the process of obtaining a single number from the output of the aggregated fuzzy set. It is used to transfer fuzzy inference results into a crisp output. In other

words, defuzzification is realized by a decision-making algorithm that selects the best crisp value based on a fuzzy set. There are several forms of defuzzification including center of gravity (COG), mean of maximum (MOM), and center average methods. The COG method returns the value of the center of area under the curve and the MOM approach can be regarded as the point where balance is obtained on a curve.

Fuzzy expert system for capacitor placement and sizing

A fuzzy expert system based on approximate reasoning is defined and relied on to determine suitable candidate buses in a distribution system for capacitor placement. Voltages and power loss reduction indices of distribution system buses are modeled by fuzzy membership functions. A fuzzy expert system (FES) containing a set of heuristic rules is then employed to determine the capacitor placement suitability of each bus in the distribution system. Capacitors are then placed on the nodes with the highest suitability using the following steps:

- A load flow program calculates the power-loss reduction (PLR) of the system with respect to each bus when the reactive load current at that bus is compensated. The PLRs are then linearly normalized into a $[0, 1]$ range with the highest loss reduction being 1 and the lowest being 0.
- The PLR indices along with the per-unit nodal voltages (before PLR compensation) are the two inputs that are used by the fuzzy expert system. The FES then determines the most suitable node for capacitor installation by fuzzy inferencing.
- A savings function relating to the annual cost of the capacitor (determined by size) and the savings achieved from the power-loss reduction is maximized to determine the optimal sizing of capacitor bank to be placed at that node.
- The above process will be repeated, finding another node for capacitor placement, until no more financial savings can be realized (Fig. 11.4).

Drawbacks of fuzzy set theory

The fuzzy optimization approach is very simple and naturally fast as compared to other optimization methods. However, for some problems, the procedure might get trapped in a local optimal point and fail to converge to the global (or near global) optimal solution.

11.3.5 Graph search algorithm

In a graph search algorithm a graph is commonly defined by a set of nodes connected by arcs. Each node corresponds to a possible combination of capacitor sizes and locations for a given number of capacitors to be placed within the system. A separate graph is used for each possible number of capacitors to be placed at a certain location. This makes it possible to search the nodes of a graph in an attempt to determine the optimal solution. Beginning with some minimum number of capacitors to be placed (user-defined parameter), a search is performed to locate the node in the graph that produces maximum savings. The mathematical simplicity of this method makes it possible to include many features (e.g., capacitor location constraints) in the algorithm that would be rather difficult with other solution methods. Carlisle [26] developed graph search algorithms for the capacitor placement and sizing problem.

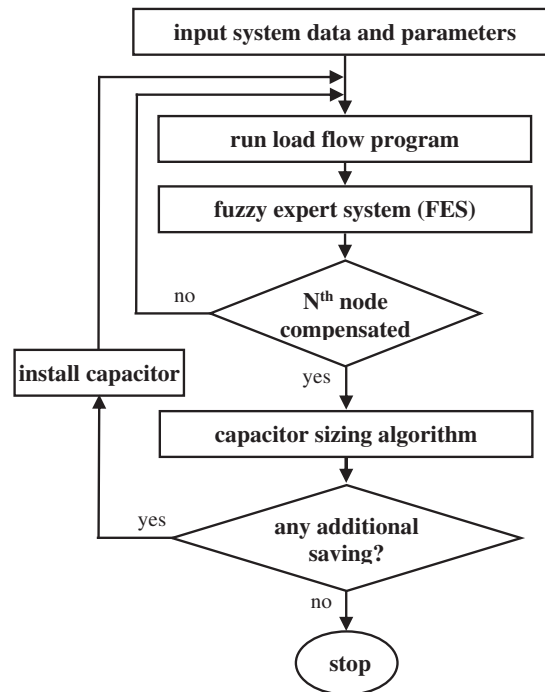


FIG. 11.4 Flowchart of an iterative fuzzy algorithm for optimal placement and sizing of capacitor banks in distribution system under sinusoidal operating conditions.

11.3.5.1 Drawbacks of graph search algorithm

Many assumptions and constraints are required to obtain an optimal solution. This is not always possible for the operating conditions of actual distribution systems. Therefore, solutions based on graph search algorithms may not be very accurate.

11.3.6 Particle swarm algorithm

Similar to an evolutionary algorithm, the particle swarm optimization (PSO) technique conducts searches using a population of particles, corresponding to individuals. PSO systems combine two models:

- A social-only model suggesting that individuals ignore their own experience and adjust their behavior according to the successful beliefs of the individual in their neighborhood.
- A cognition-only model treating individuals as isolated beings.

A particle (representing a candidate solution to the optimal reactive power problem) changes its position in a multidimensional search space using these models. PSO uses payoff (performance index or objective function) information to guide the search in the problem space and can easily deal with nondifferentiable objective functions. Additionally, this property relieves PSO of many assumptions and approximations that are often required by traditional optimization models. Mantawy [27] proposed a particle swarm optimization algorithm for reactive power optimization problem.

11.3.6.1 Drawbacks of particle swarm algorithm

The performance of particle swarm optimization is not competitive with respect to some problems. In addition, representation of the weights is difficult and the genetic operators have to be carefully selected or developed.

11.3.7 Tabu search algorithm

The tabu search strategy is a metaheuristic search method superimposed on another heuristic approach and is employed for solving combinatorial optimization problems. It has been applied for various problems and its capability to obtain high-quality solutions with reasonable computing times has been demonstrated. The approach is to avoid entrainment in cycles by penalizing moves that take the solution to points in the solution space previously visited (hence “tabu”). This ensures new regions of solution space will be investigated with the goal of avoiding local minima and ultimately capturing the optimal solution. The tabu search method is built on a descent mechanism of a search process that biases the search toward points with a lower objective function, while special features are added to avoid being trapped at a local minimum. To avoid retracing previous steps, recent moves (iterations) are recorded in one or more tabu lists (memories). The basic differences between various implementations of the tabu method are the size, variability, and adaptability of the tabu memory to a particular problem domain. Yang et al. [28], Mori [29], and Chang [30] applied the tabu search algorithm to the capacitor placement problem in radial distribution systems.

11.3.7.1 Drawbacks of tabu search algorithm

The main disadvantage of tabu approach is its low solution speed. In addition, it uses certain control parameters that may be system dependent and difficult to determine.

11.3.8 Sequential quadratic programming

Sequential quadratic programming is a generalized Newton method for constrained optimization. This algorithm replaces the objective function with quadratic approximation and constraint functions with linear approximations to solve a quadratic programming problem at each iteration.

Abril [31] presents an application of the sequential quadratic programming algorithm to find the optimal sizing of shunt capacitors and/or passive filters for maximizing the net present value resulting from energy-loss reduction while taking investment cost into account and complying with set standards. The approach considers fixed and switched reactive power (VAR) compensators by considering a characteristic load variation curve for each linear and nonlinear load.

11.3.8.1 Drawbacks of sequential quadratic programming

Large numbers of computations are involved in sequential quadratic programming. Many mathematical assumptions have to be made in order to simplify the problem; otherwise it is very difficult to calculate the variables.

11.3.9 Application Example 11.1: Fuzzy capacitor placement in an 11 kV, 34-bus distribution system with lateral branches under sinusoidal operating conditions

Application of the fuzzy set theory for the capacitor allocation problem will be demonstrated for the 34-bus, three-phase, 11 kV radial distribution system of Fig. E11.1.1. The line and load data of this system are given in Tables E11.1.1 and E11.1.2, respectively [24]. One load level with fixed (not switched) capacitors under balanced operating conditions is assumed. The cost of fixed capacitor banks are listed in Table 11.3 where the size of the capacitor (Q_P in kVAr) as a function of the yearly cost (F_{cost} in \$/kVAr) is given by K_{cfp} (e.g., $F_{\text{cost}} = K_{cfp} Q_P$).

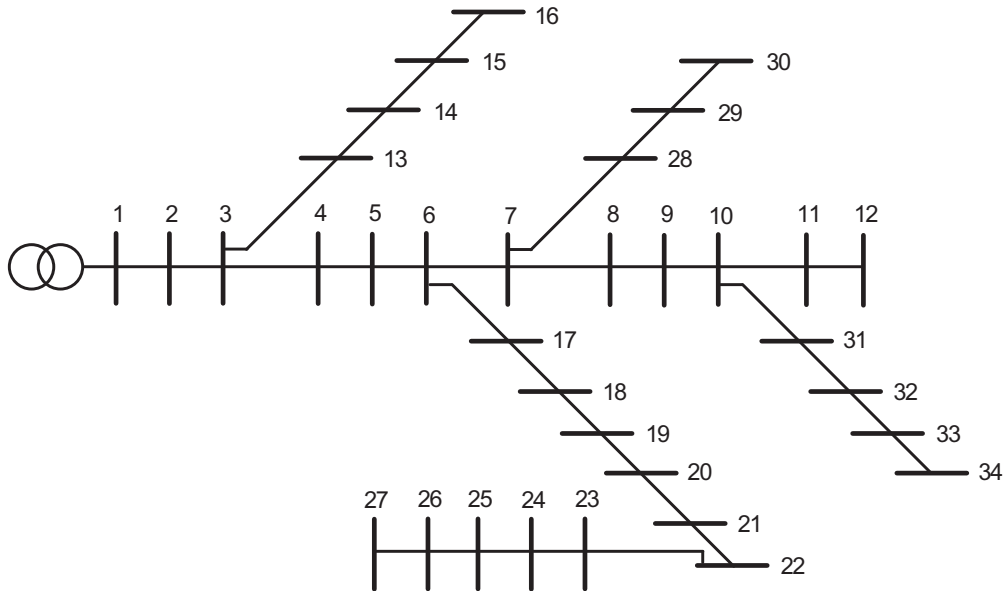


FIG. E11.1.1 Single-line diagram of the 11 kV, 34-bus, three-phase, radial distribution system [24].

TABLE E11.1.1 Bus data [24] of the 11 kV, 34-bus, three-phase, radial distribution system (Fig. E11.1.1).

Bus number	Load		Generator				Injected MVar
	MW	MVar	MW	MVar	Qmin	Qmax	
1	0.0000	0.0000	0	0	0	0	0
2	0.2300	0.1425	0	0	0	0	0
3	0.0000	0.0000	0	0	0	0	0
4	0.2300	0.1425	0	0	0	0	0
5	0.2300	0.1425	0	0	0	0	0
6	0.0000	0.0000	0	0	0	0	0
7	0.0000	0.0000	0	0	0	0	0

TABLE E11.1.1 Bus data [24] of the 11 kV, 34-bus, three-phase, radial distribution system (Fig. E11.1.1)—Cont'd

Bus number	Load		Generator				Injected MVar
	MW	MVar	MW	MVar	Qmin	Qmax	
8	0.2300	0.1425	0	0	0	0	0
9	0.2300	0.1425	0	0	0	0	0
10	0.0000	0.0000	0	0	0	0	0
11	0.2300	0.1425	0	0	0	0	0
12	0.1370	0.0840	0	0	0	0	0
13	0.0720	0.0450	0	0	0	0	0
14	0.0720	0.0450	0	0	0	0	0
15	0.0720	0.0450	0	0	0	0	0
16	0.0135	0.0075	0	0	0	0	0
17	0.2300	0.1425	0	0	0	0	0
18	0.2300	0.1425	0	0	0	0	0
19	0.2300	0.1425	0	0	0	0	0
20	0.2300	0.1425	0	0	0	0	0
21	0.2300	0.1425	0	0	0	0	0
22	0.2300	0.1425	0	0	0	0	0
23	0.2300	0.1425	0	0	0	0	0
24	0.2300	0.1425	0	0	0	0	0
25	0.2300	0.1425	0	0	0	0	0
26	0.2300	0.1425	0	0	0	0	0
27	0.1370	0.0850	0	0	0	0	0
28	0.0750	0.0480	0	0	0	0	0
29	0.0750	0.0480	0	0	0	0	0
30	0.0750	0.0480	0	0	0	0	0
31	0.0570	0.0345	0	0	0	0	0
32	0.0570	0.0345	0	0	0	0	0
33	0.0570	0.0345	0	0	0	0	0
34	0.0570	0.0345	0	0	0	0	0

TABLE E11.1.2 Line data [24] of the 11 kV, 34-bus, 3-phase, radial distribution system (Fig. E11.1.1).

Line		R_{line} (pu)	X_{line} (pu)	Tap setting
From bus	To bus			
1	2	0.0967	0.0397	1
2	3	0.0886	0.0364	1
3	4	0.1359	0.0377	1
4	5	0.1236	0.0343	1
5	6	0.1236	0.0343	1
6	7	0.2598	0.0446	1
7	8	0.1732	0.0298	1
8	9	0.2598	0.0446	1
9	10	0.1732	0.0298	1
10	11	0.1083	0.0186	1
11	12	0.0866	0.1488	1
3	13	0.1299	0.0223	1
13	14	0.1732	0.0298	1
14	15	0.0866	0.1488	1
15	16	0.0433	0.0074	1
6	17	0.1483	0.0412	1
17	18	0.1359	0.0377	1
18	19	0.1718	0.0391	1
19	20	0.1562	0.0355	1
20	21	0.1562	0.0355	1
21	22	0.2165	0.0372	1
22	23	0.2165	0.0372	1
23	24	0.2598	0.0446	1
24	25	0.1732	0.0298	1
25	26	0.1083	0.0186	1
26	27	0.0866	0.1488	1
7	28	0.1299	0.0223	1
28	29	0.1299	0.0223	1
29	30	0.1299	0.0223	1
10	31	0.1299	0.0223	1
31	32	0.1732	0.0298	1
32	33	0.1299	0.0223	1
33	34	0.0866	0.1488	1

Solution to Application Example 11.1: Fuzzy capacitor placement in an 11 kV, 34-bus distribution system with lateral branches under sinusoidal operating conditions

The following savings function is used to maximize the economic savings associated with capacitor placement (after a suitable bus is found):

$$S = K_P \Delta L_P + K_E \Delta L_E - K_C C, \quad (\text{E11.1.1})$$

where ΔL_P and ΔL_E are the loss reductions in peak demand and energy, respectively, due to capacitor installation. C is the size of capacitor in kVAr, and $K_P = 120$, $K_E = 50$, $K_C = K_{\text{eff}}$ (see Table 11.3) are the costs of peak demand, energy, and capacitors per kW, kWh, and kVAr, respectively. The savings function is based on annual savings and thus the cost of energy per hour is multiplied with the hours in a year, namely, 8760h.

The fuzzy algorithm consists of the following steps (Figs. 11.4 and 11.14):

Step 1. Input system parameters: Input system parameters (Fig. E11.1.1, Tables E11.1.1 and E11.1.2). Run load flow and compute the savings function.

Step 2. Fuzzification: Fuzzy rules and membership functions (for power loss index (PLI), voltage (pu), and capacitor suitability) are shown in Table E11.1.3 and Fig. E11.1.2, respectively.

Step 3. Inferencing: For inferencing, the *Mamdani max-prod method* [48] is used to determine the capacitor suitability membership function $\mu_s(i)$. Therefore, the capacitor placement suitability membership function for bus i becomes:

$$\mu_s = \max [\mu_P(i) \cdot \mu_V(i)], \quad (\text{E11.1.2})$$

where $\mu_P(i)$ and $\mu_V(i)$ are the membership functions of the power loss index and voltage level of bus i , respectively.

Step 4. Defuzzification: For defuzzification, the *center of gravity (COG)* method is used. Therefore, the final capacitor placement suitability index is determined by the following formula:

$$S = \frac{\int \mu_s(z) \cdot z dz}{\int \mu_s(z) dz} \quad (\text{E11.1.3})$$

where S is the suitability index and $\mu_s(z)$ is the capacitor placement suitability membership function.

Step 5. Final solution: The final solution of the fuzzy placement and sizing of capacitor banks for the distribution system of Fig. E11.1.1 is shown in Table E11.2.2.

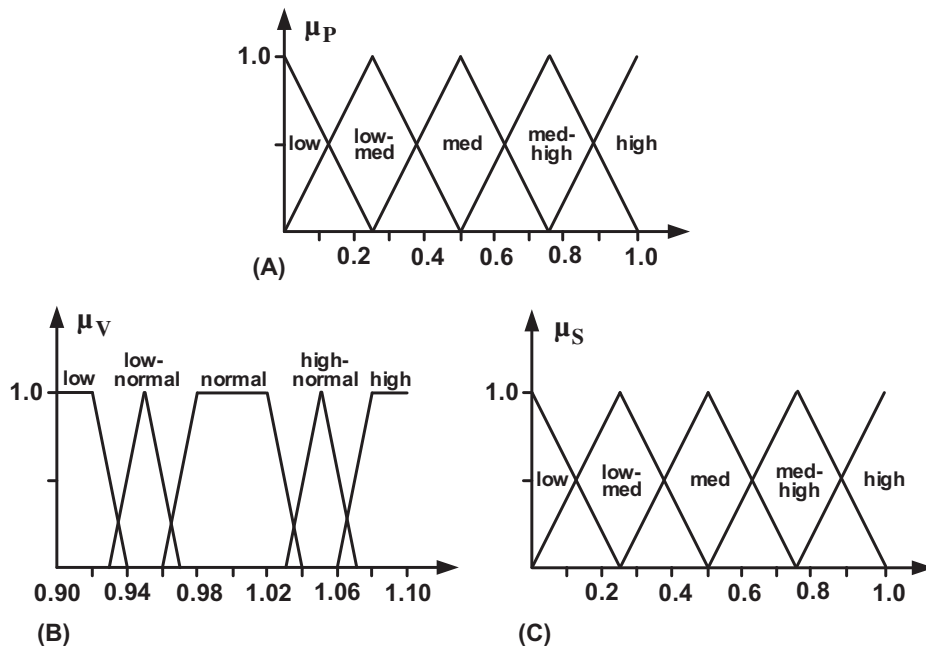


FIG. E11.1.2 Membership functions of Application Example 11.1 defined for (A) power loss index, (B) voltage (pu), and (C) capacitor suitability.

TABLE E11.1.3 Decision matrix for Application Example 11.1, determining suitable capacitor locations.

AND		Voltage				
		Low	Low-normal	Normal	High-normal	High
Power loss index (PLI)	Low	Low-medium	Low-medium	Low	Low	Low
	Low-medium	Medium	Low-medium	Low-medium	Low	Low
	Medium	High-medium	Medium	Low-medium	Low	Low
	High-medium	High-medium	High-medium	Medium	Low-medium	Low
	High	High	High-medium	Medium	Low-medium	Low-medium

11.3.10 Application Example 11.2: Genetically optimized placement of capacitor banks in an 11 kV, 34-bus distribution system with lateral branches under sinusoidal operating conditions

Solve Application Example 11.1 using a genetic algorithm.

Solution to Application Example 11.2: *Genetically optimized placement of capacitor banks in an 11 kV, 34-bus distribution system with lateral branches under sinusoidal operating conditions*

The selected chromosome structure consists of N substrings (genes) of binary numbers (Fig. E11.2.1). N denotes the number of possible compensation (candidate) buses for shunt capacitor placement within the entire feeder. The binary numbers indicate the size of the installed capacitors at the bus under consideration. Candidate locations for capacitor placement are assumed to be buses 5, 7, 17, 18, 20, 24, 26, and 32. The 3-bit binary numbers (Fig. E11.2.1) indicate the size of the installed capacitor in terms of units. Only 250 kVAr banks are assumed to be available (Table E11.2.1).

000	001	010	011	100	101	110	111
bus 5 0 units	bus 7 1 unit	bus 17 2 units	bus 18 3 units	bus 20 4 units	bus 24 5 units	bus 26 6 units	bus 32 7 units

FIG. E11.2.1 Selected chromosome structure for Application Example 11.2.

The selected fitness function (incorporating energy and power losses in the system as well as the cost of the installed capacitor banks) is

$$\text{Fitness} = K_e \sum_{i=1}^n T_i P_i + K_p P_o + \frac{K_c}{L} K_c \sum_{j=1}^M C_j, \quad (\text{E11.2.1})$$

where $K_e = 0.03\$/\text{kWh}$, $K_p = 120\$/\text{kW}/\text{year}$, and $K_c = 5\$/\text{kVAr}$ are constants for energy, peak power, and capacitor costs, respectively. P_i is the power loss at load level i with a time duration T_i . P_o represents the peak power loss of the system. C_j represents the size of the capacitor units to be installed at each of the $M=8$ candidate buses. The constant denoted by L ($= 10$ years) represents the life of the capacitor. Therefore, a chromosome that consists of a large number of capacitor banks and a high energy and power loss will result in an undesirable high fitness value.

The genetic algorithm consists of the following steps (Fig. 11.3):

Step 1. Input system parameters: Input system parameters (Fig. E11.1.1, Tables E11.1.1 and E11.1.2) and an initial random population with N_{chrom} chromosomes.

Step 2. Fitness process:

Step 2A: Run load flow algorithm for chromosome N_{ch} , save value of total active power loss and the computed fitness function (FF).

Step 2B: Calculate $1/FF$ for chromosome N_{ch} .

Step 2C: If $N_{ch} \leq N_{chrom}$ go to Step 2A.

Step 3. Reproduction process:

Step 3A: Define total fitness as a sum of values obtained in Step 2B for all chromosomes.

Step 3B: Select a percentage of the “roulette wheel” for each chromosome that is equal to the ratio of its fitness value to the total fitness value.

Step 3C: Normalize the values on the “roulette wheel” to be between zero and one.

Step 3D: Choose random numbers (R_1) between 0.0 and 1.0 to select an individual parent chromosome N_{parent} .

Step 3E: If $N_{parent} \leq N_{chrom}$ go to Step 3D.

Step 4. Crossover process:

Step 4A: Select a random number (R_2) for mating two parent chromosomes.

Step 4B: If R_2 is between 0.6 and 1.0 then combine the two parents to generate two offsprings and go to Step 4C. Else, transfer the chromosome with no crossover.

Step 4C: Repeat Steps 4A to 4B for all chromosomes.

Step 5. Mutation process:

Step 5A: Select a random number (R_3) for mutation of one chromosome.

Step 5B: If R_3 is between 0.01 and 0.1 then apply the mutation process at a random position in the string and go to Step 5C. Else, transfer the chromosome with no mutation.

Step 5C: Repeat Steps 5A to 5B for all chromosomes.

Step 6. Updating population: Replace the old population with the new improved population generated by Steps 2–5.

Step 7. Convergence: If all chromosomes are the same or the maximum number of iterations have been reached ($N_{iterations} = N^{max}$) print the solution and stop, else go to Step 2.

Step 8. Final solution: The final solution of the genetic placement and sizing of capacitor banks for the distribution system of Fig. E11.1.1 is shown in Table E11.2.2.

TABLE E11.2.1 Binary representation of capacitor bank sizes for Application Example 11.2.

Binary representation	Number of 250 kVAr units	Capacitor bank size (kVAr)
000	0	0
001	1	250
010	2	500
011	3	750
100	4	1000
101	5	1250
110	6	1500
111	7	1750

TABLE E11.2.2 Simulation results for placement and sizing of capacitor banks in the 34-bus system (Fig. E11.1.1) under sinusoidal operating conditions using different optimization methods.^a

	Before optimization	After optimization				
		Heuristic algorithm [1]	Expert systems [1]	Fuzzy [24]	Fuzzy (Section 11.4.6)	Genetic (Section 11.4.8)
Capacitor bank locations and sizes (kVAr)	No compensation	Q12 = 400	Q5 = 750	Q7 = 450	Q11 = 750	Q17 = 250
		Q20 = 70	Q22 = 900	Q17 = 750	Q18 = 450	Q20 = 500
		Q21 = 250		Q24 = 1500	Q24 = 1350	Q24 = 1000
		Q26 = 700				Q32 = 500
Total capacitance (kVAr)	$Q_t = 0$	$Q_t = 1420$	$Q_t = 1650$	$Q_t = 2700$	$Q_t = 2550$	$Q_t = 2250$
Minimum voltage (pu)	0.942	0.948	0.947	0.951	0.951	0.950
Maximum voltage (pu)	1.000	1.000	1.000	1.000	1.000	1.000
Average voltage (pu)	0.966	0.969	0.968	0.971	0.971	0.971
Total losses (kW)	221.68	169.136	173.579	168.990	164.158	162.034
Power loss reduction (kW)	0	52.544	48.101	52.69	57.52	59.646
Capacitor cost (\$/year)	0	710.00	825.00	1350.00	1275.00	1125.00
Total cost (\$/year)	84,859.10	65,455.26	67,271.04	66,039.37	64,114.68	63,151.61
Benefits (\$/year)		19,403.84	17,588.06	18,819.73	20,744.42	21,707.49

^a All capacitors were removed before the optimization process.

11.4 Optimal placement and sizing of shunt capacitor banks in the presence of harmonics

The problem of shunt capacitor allocation in distribution networks for reactive power compensation, voltage regulation, power factor correction, and power or energy loss reduction is discussed in the previous section. Optimal capacitor bank placement is a well-researched subject. However, limited attention is given to this problem in the presence of voltage and current harmonics.

With the increasing application of nonlinear loads and (power electronic and electromagnetic) devices causing voltage and current harmonics in distribution networks, special attention should be given to placement and sizing of capacitors in such systems with nonsinusoidal voltages and currents. If (shunt) capacitor banks are not properly sized and

placed in such a power system, they may cause various operational and power quality problems:

- amplification and propagation of current and voltage harmonics,
- deterioration of power quality to unacceptable levels,
- increased losses at fundamental and harmonic frequencies,
- extensive reactive power demand and overvoltages at fundamental and harmonic frequencies,
- decreased capacities of distribution lines and transformers,
- poor power-factor conditions, and
- harmonic parallel resonances.

The problem of optimal capacitor placement and sizing under nonsinusoidal operating conditions is a newly researched area with limited publications that requires more attention. Early works by Baghzouz [34,35], Gou [36], Hsu et al. [38], Wu [39], and Chin [23] capture local optimal points and ignore harmonic couplings. This will result in inaccurate solutions. More recent documents by Masoum et al. [40–44] achieve accurate (near) global optimal solutions by incorporating artificial intelligence-based (AI-based) techniques and relying on a harmonic power flow that takes into account harmonic couplings caused by nonlinear loads. Document [37] addresses the problem under unbalanced three-phase conditions.

Proposed solution techniques for the capacitor allocation problem in the presence of harmonics can be classified into following categories:

- exhaustive search [34],
- local variations [35],
- mixed integer-nonlinear programming [36,37],
- heuristic methods [38],
- maximum sensitivities selection [39–41],
- fuzzy set theory [23,42],
- genetic algorithms [43], and
- genetic algorithm with fuzzy logic (approximate reasoning) [44].

Most of these techniques are fast, but they suffer from the inability to escape local optimal solutions. Simulated annealing (SA), tabu search (TS), and genetic algorithms (GAs) are three near global optimization techniques that have demonstrated fine capabilities for capacitor placement, but the computational burden is heavy. This section introduces some of these methods and presents their merits and shortcomings.

11.4.1 Reformulation of the capacitor allocation problem to account for harmonics

11.4.1.1 System model at fundamental and harmonic frequencies

A harmonic load flow algorithm is required to model the distribution system with nonlinear loads at fundamental and harmonic frequencies. This book relies on the Newton-based harmonic load flow formulation and notations of [Chapter 8](#) (Section 8.4). System solution is achieved by forcing total (fundamental and harmonic) mismatch active and

reactive powers as well as mismatch active and reactive fundamental and harmonic currents to zero.

Define bus 1 to be the swing bus, buses 2 through $m - 1$ to be the linear (PQ and PV) buses, and buses m through n as nonlinear buses (n =total number of buses). We assume that nonlinear load models—representing the coupling between harmonic voltages and currents—are given either in the frequency domain (e.g., $\tilde{V}^{(h)}$ and $\tilde{I}^{(h)}$ characteristics) or in the time domain (e.g., $v(t)$ and $i(t)$ characteristics). These models are available for many nonlinear loads and systems such as power electronic devices, nonlinear transformers, discharge lighting, and EHV and HVDC networks [42]. In the above formulation of harmonic power flow, we assume that the capacitors are shunt capacitor banks with variable reactances, and capacitor placement is possible for MC number of buses (candidate buses). We also use the proposed formulation of [34] in the harmonic power flow for the admittance of linear loads at harmonic frequencies:

$$y_i^{(h)} = \frac{P_i^{(1)} - jQ_i^{(1)}/h}{|\tilde{V}_i^{(1)}|^2} \text{ for } i = 2, \dots, m - 1. \quad (11.4)$$

11.4.1.2 Constraints

Voltage constraints will be taken into account by specifying upper (e.g., $V_{\text{rms}}^{\text{max}} = 1.1$ pu) and lower (e.g., $V_{\text{rms}}^{\text{min}} = 0.9$ pu) bounds of rms voltage (n =total number of buses, i = bus number, h = harmonic order):

$$V_{\text{rms}}^{\text{min}} \leq \sqrt{\sum_h^H \left(V_i^{(h)}\right)^2} \leq V_{\text{rms}}^{\text{max}} \text{ for } i = 1, \dots, n. \quad (11.5)$$

The distortion of voltage is considered by defining the maximum total harmonic distortion (THD_v) of voltages:

$$THD_{v,i} = \frac{\sqrt{\sum_{h \neq 1}^H \left(V_i^{(h)}\right)^2}}{V_i^{(1)}} \cdot 100\% \leq THD_v^{\text{max}} \text{ for } i = 1, \dots, n. \quad (11.6)$$

Bounds for Eq. (11.6) are specified by the IEEE-519 standard [49]. Let u^{max} denote the maximum number of capacitor units allowed at each bus. The number of capacitors on bus i is limited by

$$u = u_{fi} \leq u^{\text{max}} \text{ for } i \in MC, \quad (11.7)$$

where u_{fi} denotes the number of fixed capacitor banks at bus i and MC is the set of possible buses for capacitor placement.

11.4.1.3 Objective function (cost index)

The objective function (*cost*) selected for capacitor placement in the presence of harmonics is [34–36,42–44]

$$\begin{aligned} \min F = F_{\text{loss}} + F_{\text{cap.}} + F_{\text{capacity}} = & K_E T P_{\text{loss}} \left(V^{(1)}, \dots, V^{(L)}, C \right) \\ & + \sum_{i \in MC} K_{cfp} C_{fi} + K_A P_{\text{loss}} \left(V^{(1)}, \dots, V^{(L)}, C \right), \end{aligned} \quad (11.8)$$

where

F_{loss} = energy loss cost,

$F_{\text{cap.}}$ = cost of fixed capacitors,

F_{capacity} = cost corresponding to losses (e.g., used capacity of the system),

P_{loss} = total system losses,

$V^{(h)}$ = bus voltage at harmonic h ,

L = highest order of harmonics considered,

C = size of connected capacitors,

T = duration of load (hours/year),

MC = set of possible shunt capacitor buses,

K_{cfp} = cost per unit of fixed capacitance (Table 11.3 [36,43]),

K_E = cost per MWh (e.g., $K_E = 50$ \$/MWh [39,43]), and

K_A = saving per MW for reduction in losses (e.g., $K_A = 120,000$ \$/MW [39]).

Total losses can be computed using harmonic power flow output results

$$P_{\text{loss}} = \sum_{h=1}^L \left[\sum_{i=1}^n \sum_{\substack{j=1 \\ i \neq j}}^n V_i^{(h)} V_j^{(h)} y_{ij}^{(h)} \cos \left(\theta_i^{(h)} - \theta_j^{(h)} - \delta_{ij}^{(h)} \right) \right], \quad (11.9)$$

where $V_i^{(h)}$ and $\theta_i^{(h)}$ are magnitude and phase of the h th harmonic voltage at bus i and $y_{ij}^{(h)}$ and $\delta_{ij}^{(h)}$ are magnitude and phase of h th harmonic line admittance between buses i and j , respectively.

11.4.2 Application of maximum sensitivities selection for the capacitor allocation problem

This section outlines the application of maximum sensitivities selection (MSS) in conjunction with a Newton-based harmonic load flow program to generate the local solution of the capacitor placement and sizing problem in the presence of voltage and current harmonics. If the initial condition is near the global point, the MSS algorithm will generate a near global solution. Otherwise, the MSS algorithm has a high chance of getting stuck at a local point. This section introduces the application of MSS for the capacitor allocation problem as proposed by Masoum et al. [40].

11.4.2.1 Sensitivity functions for MSS

Sensitivities of the objective function (Eq. 11.8) to capacitance values at compensation buses can be computed using partial derivatives:

$$\frac{\partial P_{\text{loss},k}}{\partial Q} = \sum_{h=1}^L W_h \frac{\partial P_{\text{loss},k}^{(h)}}{\partial Q^{(h)}} \text{ and } \frac{dF_{\text{cost}}}{dQ_p} = \frac{F_{\text{cost}}^{(p+1)} - F_{\text{cost}}^{(p)}}{Q_{(p+1)} - Q_p}, \quad (11.10)$$

where $W_h = 1/h$ is the weight function at harmonic h , and $P_{\text{loss},k}^{(h)}$ are the total system losses at harmonic h for load level k and $F_{\text{cost}}^{(p+1)}$ is the cost corresponding to capacitor of size $Q_{(p+1)}$. Subscript p indicates the discrete step sizes of capacitor cost as listed in Table 11.3 (e.g., $Q_1 = 150 \text{ kVAR}$, $Q_2 = 300 \text{ kVAR}$, ...). Note the application of linear interpolation in Eq. (11.10) due to the discrete nature of the capacitor cost (Table 11.3).

The partial derivatives of $P_{\text{loss},k}^{(h)}$ are computed as follows:

$$\begin{bmatrix} \frac{\partial P_{\text{loss},k}^{(h)}}{\partial P^{(h)}} \\ \frac{\partial P_{\text{loss},k}^{(h)}}{\partial Q^{(h)}} \\ \frac{\partial P_{\text{loss},k}^{(h)}}{\partial I_r^{(h)}} \\ \frac{\partial P_{\text{loss},k}^{(h)}}{\partial I_i^{(h)}} \end{bmatrix} = \begin{bmatrix} \frac{\partial P^{(h)}}{\partial \theta^{(h)}} \frac{\partial Q^{(h)}}{\partial \theta^{(h)}} \frac{\partial I_r^{(h)}}{\partial \theta^{(h)}} \frac{\partial I_i^{(h)}}{\partial \theta^{(h)}} \\ \frac{\partial P^{(h)}}{\partial V^{(h)}} \frac{\partial Q^{(h)}}{\partial V^{(h)}} \frac{\partial I_r^{(h)}}{\partial V^{(h)}} \frac{\partial I_i^{(h)}}{\partial V^{(h)}} \end{bmatrix}^{-1} \begin{bmatrix} \frac{\partial P_{\text{loss},k}^{(h)}}{\partial \theta^{(h)}} \\ \frac{\partial P_{\text{loss},k}^{(h)}}{\partial V^{(h)}} \end{bmatrix}, \quad (11.11)$$

where all right-hand side matrix entries are easily computed using the outputs of the harmonic power flow, as outlined in Chapter 8 (Section 8.4). The subscripts r and i denote real and imaginary components, respectively.

11.4.2.2 The MSS algorithm

The shunt capacitor placement and sizing problem in the presence of linear and nonlinear loads is an optimization problem with discrete variables (e.g., discrete values of capacitors). This problem is solved using the harmonic power flow algorithm and the MSS method as follows (Fig. 11.5):

Step 1: Input system parameters (e.g., line and load specifications, system topology, and number of load levels). Select the first load level (e.g., $k = 1$) and set initial capacitance values at all possible compensation nodes to zero. For other load levels ($k \geq 2$), use the capacitor values, computed for the preceding load levels, as the initial capacitor values of the compensation buses.

Step 2: Calculate harmonic power flow at load level k and compute the objective function (Eq. 11.8).

Step 3: Calculate sensitivities of the objective function with respect to capacitances at compensation buses (Eqs. 11.10–11.11).

Step 4: Select SC candidate buses with maximum sensitivities.

Step 5 (temporary change of system topology): Add one unit of capacitor to one of the candidate buses. Calculate harmonic power flow and the related objective function. Remove the newly added capacitor unit from the corresponding candidate bus.

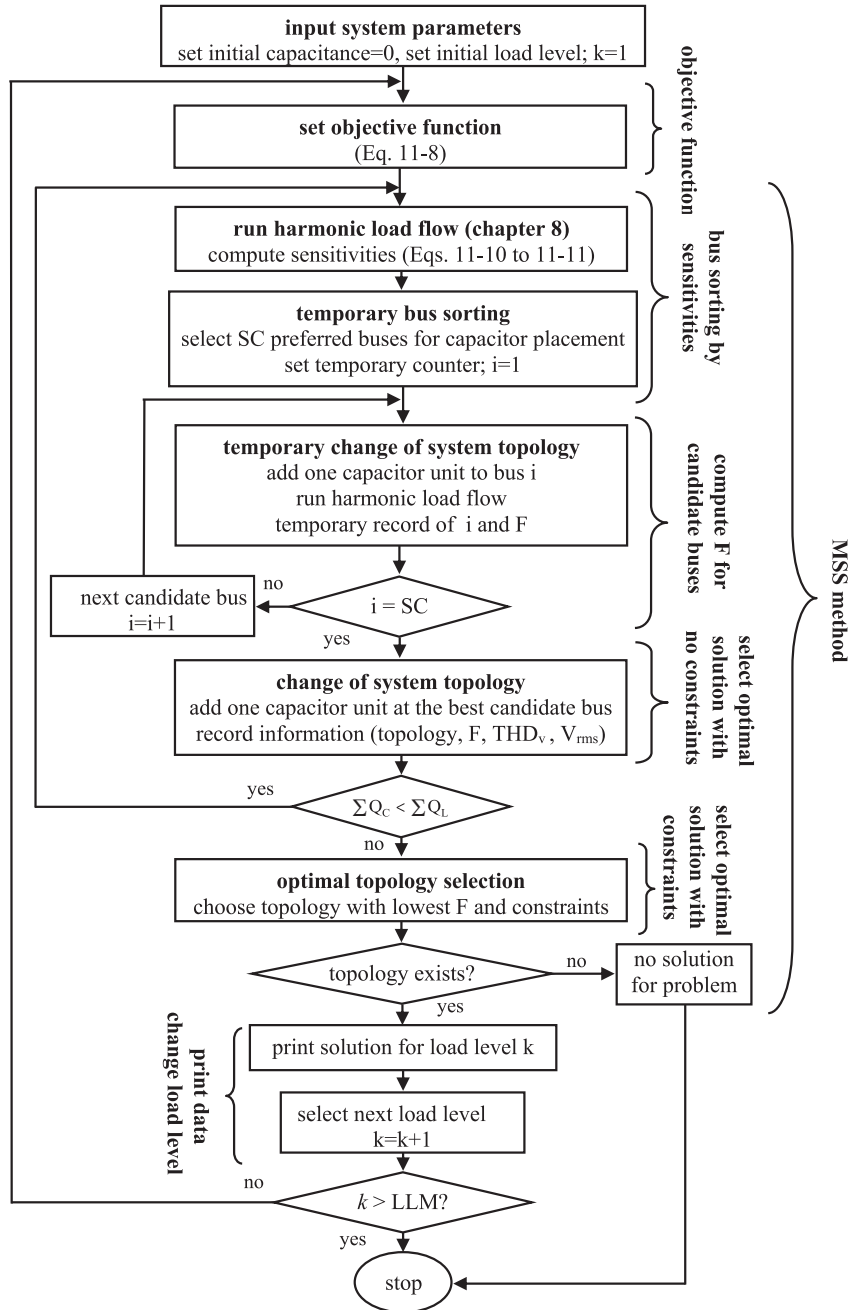


FIG. 11.5 Iterative algorithm for optimal placement and sizing of shunt capacitor banks under nonsinusoidal operating conditions using harmonic power flow and MSS method. SC refers to the preferred (candidate) buses for capacitor placement.

Step 6: Repeat Step 5 for all candidate buses.

Step 7 (change of system topology): Among all candidate buses, select the one with the minimum objective function value and place one unit of capacitor at this bus. Record the corresponding system topology, F , THD_v , and V_{rms} .

Step 8 (check convergence): If the reactive power of the total capacitance of shunt capacitors does not exceed the sum of reactive loads, the algorithm has not converged; go to Step 3.

Step 9: According to the calculated information (objective functions, THD_v , and V_{rms} values), select the topology with the minimum objective function that satisfies the problem constraints (Eqs. 11.5–11.7). This is the optimal solution at load level value k . If such topology does not exist, that is, there is no solution at load level k , go to Step 11.

Step 10: Print the solution for this load level. If the final load level is not reached, select the next load level and go to Step 2.

Step 11: Stop.

11.4.2.3 Convergence of the MSS algorithm

The burden of calculation in the MSS algorithm is much less than those of the analysis and dynamic programming (DP) methods. Assuming N_c number of capacitor units and K_c number of compensation buses, the average number of power flow calculations in DP algorithm is $K_c(K_c + 1)(N_c + 1)$. Total number of power flow calculations of the MSS algorithm is $N_c K_c$, which is much less than that of the DP method, especially when N_c is large.

11.4.3 Application of local variation for the capacitor allocation problem

The shunt capacitor placement and sizing problem in the presence of linear and nonlinear loads is solved using the harmonic power flow algorithm (Chapter 8, Section 8.4) and the local variations (LV) method [35]. The solution procedure as proposed by [41] is as follows (Fig. 11.6):

Step 1: Input system parameters (e.g., line and load specifications, system topology, and number of load levels). Select the first load level (e.g., $k = 1$).

Step 2: Select SC buses as optimal (or preferred) locations for capacitor bank placements. If such locations are not available, select all buses. Set iteration, capacitor location, and step interval numbers ($i = 1, j = 1, L_j = 1$). Set initial value for the optimal objective function ($F^* = 0$).

Step 3: Start with a random combination of capacitor sizes $Q^C = \{Q_1^C, Q_2^C, \dots, Q_{SC}^C\}$.

Step 4: Set the objective function (Eq. 11.8).

Step 5: Perform harmonic power flow to compute fundamental and harmonic bus voltages.

Step 6: If power quality constraints (Eqs. 11.5 and 11.6) are satisfied go to Step 7, else:

Step 6a: If $i = 1$, go to Step 3 and repeat Steps 3–5 until a feasible combination is found.

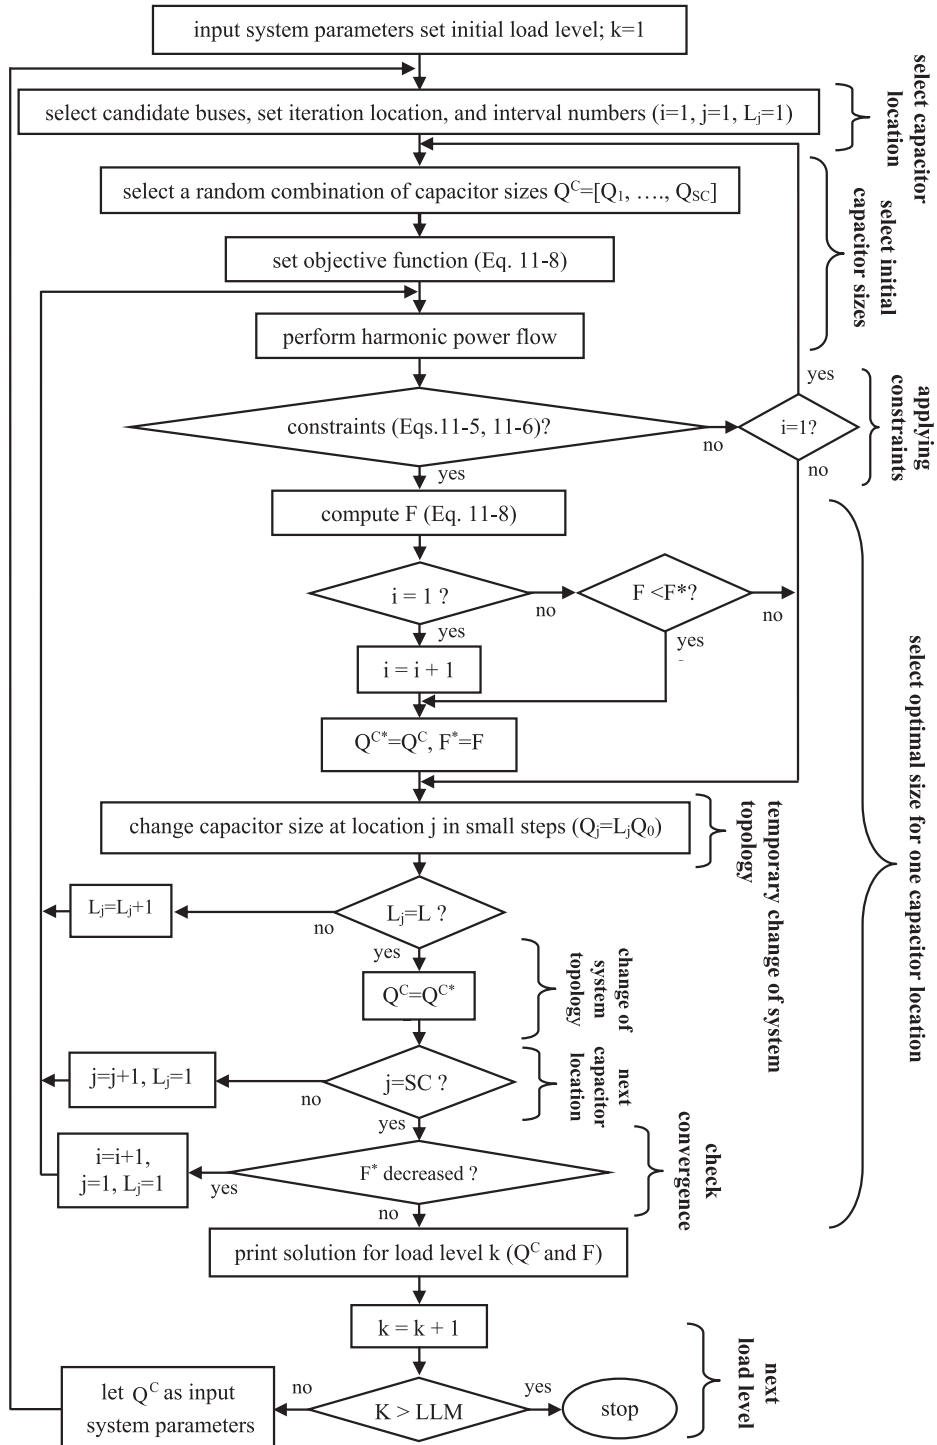


FIG. 11.6 Iterative algorithm for optimal placement and sizing of capacitor banks under nonsinusoidal operating conditions using harmonic power flow and the local variations (LV) method.

Step 6b: If $i \neq 1$ go to Step 8.

Step 7: Compute objective function (Eq. 11.8). If $i = 1$, increase i , save the objective function value ($F^* = F$) and capacitor locations $Q^{C*} = \{Q_1^C, Q_2^C, \dots, Q_{SC}^C\}$. Else, compare F with F^* .

Step 7a: If $F \geq F^*$, go to Step 8.

Step 7b: Else, set $F^* \geq F$ and $Q^{C*} = \{Q_1^C, Q_2^C, \dots, Q_{SC}^C\}$.

Step 8: Change capacitor size at capacitor location j in small steps from Q_o to LQ_o while keeping the capacitance of other capacitor locations unchanged. Repeat Steps 5–7 for each step change ($Q_j = L_j Q_o$, $L_j = 1, \dots, L$).

Step 9: Select a combination of capacitor sizes that corresponds to the lowest objective function ($Q^C = Q^{C*}$). This will be the starting point of Step 10.

Step 10: Repeat Steps 8 and 9 for each capacitor location (e.g., $j \in MC$).

Step 11: If solution has not converged (e.g., F^* is changing in two subsequent iterations), set $i = i + 1$, $j = 1$ and repeat Steps 8–10.

Step 12: This is the optimal solution at load level k . If the final load level is reached, go to Step 14.

Step 13: Select the next load level ($k = k + 1$), put Q^C as system parameters and go to Step 2.

Step 14: Print the solution and stop.

11.4.4 A hybrid MSS-LV algorithm for the capacitor allocation problem

Reference [41] presents a hybrid algorithm based on a combination of MSS (to direct solution toward the permissible region by selecting candidate buses) and local variations (to improve accuracy). MSS is used as a fast technique to obtain the proper initial conditions for the LV method. Therefore, this algorithm takes advantage of MSS speed and LV accuracy. Unlike the LV scheme, however, its solution does not strongly depend on the initial conditions and is not limited to a local optimum. Therefore, solution accuracy is improved at the expense of more computing time.

If the initial conditions generated by the MSS method do not satisfy the power quality constraints (e.g., MSS algorithm fails to locate a solution), the proposed algorithm will apply these constraints in the second iteration of the LV algorithm.

11.4.5 Application Example 11.3: Optimal placement and sizing of capacitor banks in the distorted 18-bus IEEE distribution system by MSS and MSS-LV methods

Apply the MSS and MSS-LV algorithms of Figs. 11.5 and 11.6 to the 23 kV, 18-bus, distorted IEEE distribution system of Fig. E11.3.1. Specifications of this system are given in Ref. [41].

Solution to Application Example 11.3: *Optimal placement and sizing of capacitor banks in the distorted 18-bus IEEE distribution system by MSS and MSS-LV methods*

Simulation results are shown in Table E11.3.1 and Fig. E11.3.2 for the following three operating conditions:

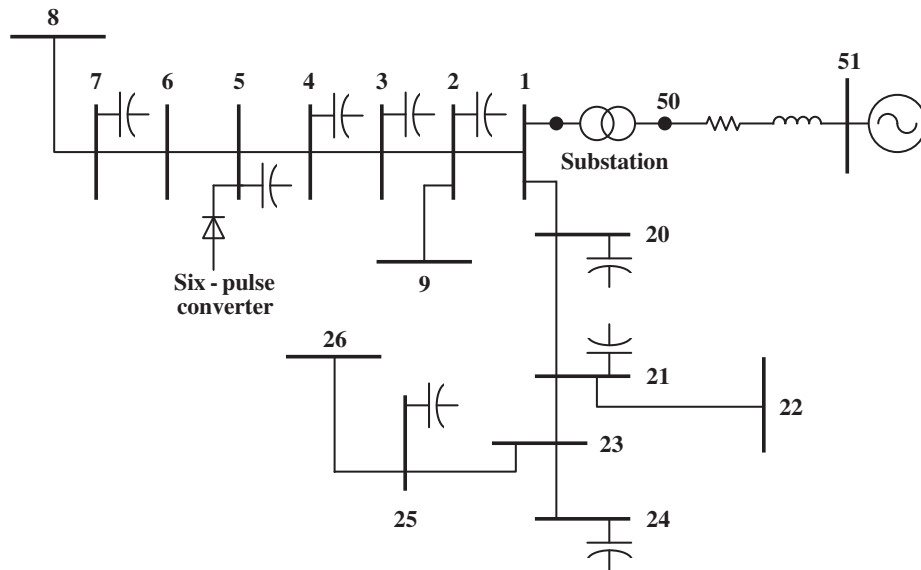


FIG. E11.3.1 Single-line diagram of the 18-bus IEEE distorted system.

Case 1: High harmonic distortion

The nonlinear load in Fig. E11.3.1 is a six-pulse rectifier with active and reactive powers of 0.3 pu (3 MW) and 0.226 pu (2.26 MVar), respectively. Results based on harmonic power flow show for this system a maximum voltage THD_v of 8.48%. The MSS and MSS-LV algorithms are applied to this system for optimal placement and sizing of capacitor banks.

Results of the MSS method show a yearly benefit of \$20,360 (last row of Table E11.3.1) and different locations and sizes of capacitor banks before (column 2 of Table E11.3.1) and after (column 3 of Table E11.3.1) optimization. The maximum voltage THD_v is only reduced to 6.37% (row 19 of Table E11.3.1 and Fig. E11.3.2). Therefore, considerable yearly benefit is achieved but power quality constraints are not satisfied.

By applying the MSS-LV algorithm, we can decrease the level of voltage THD_v to 4.72% (row 19 of Table E11.3.1). As expected (due to power quality improvement), yearly benefit is slightly decreased (to \$18,162). If in highly harmonic distorted systems the MSS-LV algorithm does not satisfy power quality constraints, the application of passive filters and active filters (Chapter 10) before capacitor placement is recommended.

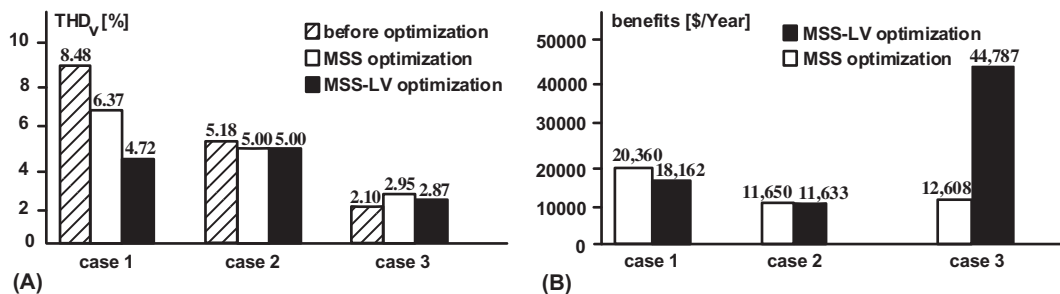


FIG. E11.3.2 Simulated results of Fig. E11.3.1: (A) maximum voltage THD_v before and after optimal capacitor placement, (B) yearly benefit after optimal sizing and placement of capacitor banks.

TABLE E11.3.1 Simulation results for the 18-bus, distorted IEEE distribution system (Fig. E11.3.1) at different distortion levels with per unit VA = 10 MVA, per unit V = 23 kV, and swing bus voltage = 1.05 pu.^a

	Case 1 (high distortion)			Case 2 (medium distortion)			Case 3 (low distortion)		
	Before optimization	MSS optimization	MSS-LV optimization	Before optimization	MSS optimization	MSS-LV optimization	Before optimization	MSS optimization	MSS-LV optimization
Capacitor bank locations and sizes (pu)					Q1 = 0.090	Q1 = 0.090			
	Q2 = 0.105	Q2 = 0.030	Q2 = 0.120	Q2 = 0.105	Q2 = 0.120	Q2 = 0.120	Q2 = 0.105	Q2 = 0.090	Q2 = 0.090
	Q3 = 0.060	Q3 = 0.090	Q3 = 0.060	Q3 = 0.060	Q3 = 0.060	Q3 = 0.060	Q3 = 0.060		Q3 = 0.120
	Q4 = 0.060	Q4 = 0.180	Q4 = 0.180	Q4 = 0.060	Q4 = 0.060	Q4 = 0.060	Q4 = 0.060	Q4 = 0.060	Q4 = 0.030
	Q5 = 0.180	Q5 = 0.240	Q5 = 0.240	Q5 = 0.180	Q5 = 0.180	Q5 = 0.180	Q5 = 0.180	Q5 = 0.180	Q5 = 0.180
	Q7 = 0.060	Q7 = 0.120	Q7 = 0.120	Q7 = 0.060	Q7 = 0.060	Q7 = 0.060	Q7 = 0.060	Q7 = 0.060	Q7 = 0.060
					Q8 = 0.060	Q8 = 0.060			
					Q9 = 0.030	Q9 = 0.030			
	Q20 = 0.06	Q20 = 0.09	Q20 = 0.09	Q20 = 0.06	Q20 = 0.06	Q20 = 0.06	Q20 = 0.06	Q20 = 0.03	Q20 = 0.09
	Q21 = 0.12	Q21 = 0.12	Q21 = 0.12	Q21 = 0.12	Q21 = 0.12	Q21 = 0.12	Q21 = 0.12		
	Q24 = 0.15			Q24 = 0.15	Q24 = 0.15	Q24 = 0.15	Q24 = 0.15	Q24 = 0.18	Q24 = 0.06
	Q25 = 0.09	Q25 = 0.03		Q25 = 0.09			Q25 = 0.09	Q25 = 0.03	Q25 = 0.09
	Q50 = 0.12			Q50 = 0.12	Q50 = 0.03		Q50 = 0.12		Q50 = 0.09
Total capacitor (pu)	Qt = 1.005	Qt = 0.900	Qt = 0.930	Qt = 1.005	Qt = 1.020	Qt = 0.990	Qt = 1.005	Qt = 0.630	Qt = 0.810
Minimum voltage (pu)	1.029	1.016	1.013	1.044	1.048	1.043	1.050	1.020	1.065
Maximum voltage (pu)	1.055	1.056	1.059	1.062	1.074	1.071	1.073	1.050	1.05
Maximum THD _v (%)	8.48^b	6.37	4.72	5.18	5.00	5.00	2.10	2.95	2.87
Losses (kW)	282.93	246.43	250.37	213.69	192.81	192.84	189.91	167.32	109.64
Capacitor cost (\$)	2432.70	2204.7	2206.8	2432.70	2535.3	2430.3	2432.70	1754.70	1830.6
Total cost (\$/year)	157,872.98	137,512.00	139,710.47	119,237.90	107,587.47	107,604.72	105,969.20	93,361.15	61,181.74
Benefits (\$/year)		20,360	18,162.51		11,650.43	11,633.18		12,608	44,787.46

^a All capacitors were removed before the optimization process.

^b THD_v and Benefits are bold because they are of great importance to the design of a distribution system.

Case 2: Medium harmonic distortion

The size of the nonlinear load is reduced such that its active and reactive powers are 0.12 and 0.166 pu, respectively. After optimal placement and sizing of capacitor banks by the MSS method, voltage THD_v decreases from 5.18% to 5.00% and a yearly benefit of \$11,650 is achieved. Applying the hybrid MSS-LV algorithm causes minor changes (e.g., eliminating one capacitor unit). Therefore, the performances of the two algorithms are similar for this case. This means that the output of MSS algorithm is near the system global solution.

Case 3: Low harmonic distortion

The size of the nonlinear load is further decreased such that its active and reactive powers are 0.02 and 0.046 pu, respectively. After optimal placement and sizing of capacitor banks by the MSS method, voltage THD_v increases from 2.1% to 2.95% (which is lower than the desired limit of 3%), total capacitance of capacitor banks decreases from 1.005 to 0.63 pu, and a yearly benefit of \$12,608 results. By applying the MSS-LV algorithm, considerable benefit is achieved (\$44,787), while voltage THD_v is at 2.87%.

11.4.6 Fuzzy approach for the optimal placement and sizing of capacitor banks in the presence of harmonics

All mathematical optimization methods require that the objective function be (pseudo-) convex and the constraints be (quasi-) convex. Only if convexity exists is there one optimal solution within the feasible or permissible multidimensional region. Experience teaches that the above-mentioned conditions of convexity are not necessarily met. The method of the steepest decent or ascent may lead to a conditional optimum of which several may exist due to the violation of convexity of the objective and constraint functions.

To avoid a trajectory leading to a conditional but not necessarily best conditional optimum, fuzzification of the objective and constraint functions has been introduced [42]. This process makes it possible that the solution trajectory—consisting of a band which is broad—avoids a conditional optimum, which exists due to the pseudo- or quasi-convex objective and constraint functions.

11.4.6.1 Sensitivity of objective function and THD_v

Sensitivities of constraints and objective function are used to limit the number of calculations while a fuzzy combination of constraints and objective function is constructed to guarantee the monotonous convergence of the solution.

Sensitivity of objective function

Sensitivities of objective function (Eq. 11.8) to capacitance values at compensation buses can be computed using Eqs. (11.10) and (11.11).

Sensitivity of THD_v

Sensitivities of THD_v (Eq. 11.6) to capacitance values at compensation buses is computed using the partial derivatives

$$s_{THD_{v,j}} = \frac{\partial THD_{v,j}}{\partial Q} = \sum_{h=1}^L W_h \frac{\partial THD_{v,j}}{\partial Q^{(h)}}, \quad (11.12)$$

where $W_h = 1/h$ is the proposed weighting function for harmonic order h . The partial derivatives of $THD_{v,j}$ are computed as follows:

$$\begin{bmatrix} \frac{\partial THD_{v,j}}{\partial P^{(h)}} \\ \frac{\partial THD_{v,j}}{\partial Q^{(h)}} \\ \frac{\partial THD_{v,j}}{\partial I_r^{(h)}} \\ \frac{\partial THD_{v,j}}{\partial I_i^{(h)}} \end{bmatrix} = \begin{bmatrix} \frac{\partial P^{(h)}}{\partial \theta^{(h)}} & \frac{\partial Q^{(h)}}{\partial \theta^{(h)}} & \frac{\partial I_r^{(h)}}{\partial \theta^{(h)}} & \frac{\partial I_i^{(h)}}{\partial \theta^{(h)}} \\ \frac{\partial P^{(h)}}{\partial V^{(h)}} & \frac{\partial Q^{(h)}}{\partial V^{(h)}} & \frac{\partial I_r^{(h)}}{\partial V^{(h)}} & \frac{\partial I_i^{(h)}}{\partial V^{(h)}} \end{bmatrix} \begin{bmatrix} \frac{\partial THD_{v,j}}{\partial \theta^{(h)}} \\ \frac{\partial THD_{v,j}}{\partial V^{(h)}} \end{bmatrix}, \quad (11.13)$$

where all right-hand-side matrix entries are easily computed using results from the application of a harmonic power flow program.

11.4.6.2 Fuzzy implementation

Fuzzy set theory (FST) is relied on to determine the candidate buses and to select the most suitable bus for capacitor placement.

Fuzzification of sensitivities

For the sensitivities of objective function (Eqs. 11.10 and 11.11) and constraints (Eqs. 11.12 and 11.13) with respect to the reactive power injection at each bus, the exponential fuzzifier functions $\mu_F^{\text{sensitivity}}$, $\mu_{THD_{v,j}}^{\text{sensitivity}}$, $\mu_{v,j}^{\text{sensitivity}}$ are employed. Fig. 11.7A shows the fuzzifier for the sensitivity of $THD_{v,j}$. S_{THD}^{max} is a large number, that is, buses with higher sensitivities have higher values of membership.

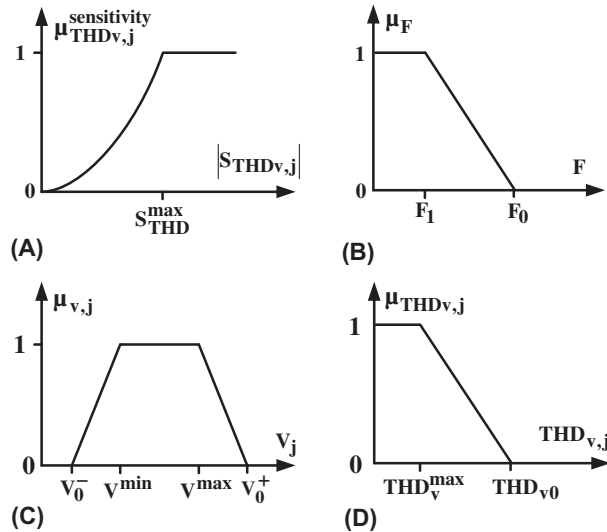


FIG. 11.7 Membership functions for (A) sensitivity of the voltage $THD_{v,j}$ is S_{THD}^{max} (other sensitivity membership functions are similar), (B) objective function F , (C) rms voltage V_j , (D) voltage $THD_{v,j}$ at bus j .

Fuzzification of objective function and constraints

For the objective function (Eq. 11.8) a membership function (μ_F) is defined as depicted in Fig. 11.7B. F_o is the initial value of objective function and F_1 is the value of objective function after compensating the total reactive (inductive) loads at every bus of the distribution system. High objective values are given a low membership function value, whereas low objective values are assigned a high membership function value.

For voltage constraints, it is suitable to use a membership function ($\mu_{v,j}$) with trapezoidal form, as shown in Fig. 11.7C. $V^{\min}$ and $V^{\max}$ correspond to Eq. (11.5) such that buses with voltages values between the two limit values $V^{\min}$ and $V^{\max}$ have full membership. V_o^- and V_o^+ correspond to initial values of the bus effective voltage. Therefore, a bus with high rms voltage deviation (Eq. 11.5) is given a low value and a bus with low rms voltage deviation is given a high value.

For $THD_{v,j}$, a membership function ($\mu_{THD_{v,j}}$) is defined as illustrated in Fig. 11.7D. $THD_v^{\max}$ and THD_{v0} are the limit and the initial value of $THD_{v,j}$ corresponding to Eq. (11.6), respectively. Buses are given a high value (e.g., $\mu_{THD_{v,j}} = 1$) unless their THD_v are higher than the IEEE-519 limits.

Fuzzy combination of membership functions

The algebraic product of the membership functions is used such as the t-norm for $THD_{v,j}$:

$$\mu_{THD_v} = t_1(\mu_{THD_{v,1}} \cdot \mu_{THD_{v,2}} \cdots \mu_{THD_{v,n}}) = \prod_{j=1}^n \mu_{THD_{v,j}}. \quad (11.14)$$

The same formulations apply to t-norms of the bus voltages, sensitivity of $THD_{v,j}$ and sensitivity of voltage constraints, the combination of objective function and constraints, as well as their sensitivities to reactive power injection:

$$\mu_{\text{total}}^{\text{sensitivity}} = t_2(\mu_{THD_v}^{\text{sensitivity}}, \mu_V^{\text{sensitivity}}, \mu_F^{\text{sensitivity}}), \quad (11.15a)$$

$$\mu_{\text{total}} = t_3(\mu_{THD_v}, \mu_V, \mu_F). \quad (11.15b)$$

Alpha-cut process

In order to direct the algorithm toward the permissible region bordered by constraints, the α -cut process is used at each iteration. To do this, the values of α for F , THD_v , and V are set to their corresponding membership values in the previous iteration (e.g., $\alpha_F^{\ell+1} = \alpha_F^{\ell}$ where ℓ is the iteration number).

Analysis

The initial starting point of Eq. (11.8) (e.g., the initial compensation buses) does not usually reside inside the permissible solution region. Therefore, some type of criteria (based on simultaneous improvements of F , THD_v , and V in consecutive iterations) is required to direct the solution toward the permissible region and to select the most appropriate buses for capacitor placement. The section uses the fuzzy set theory to measure individual improvements, generate a single criterion to direct the solution, and guarantee the monotonous convergence of

the solution at each iteration. Other approaches with similar characteristics (e.g., analytical hierarchy process) could also be used.

Note that the locations of candidate buses as indicated by the sensitivities of F , THD_v , and V are usually different. A single criterion—a fuzzy combination—is employed to determine the optimal locations of candidate buses. The exponential sensitivity functions of Fig. 11.7A are solely used for ranking of candidate buses. Other methods could be employed for this ranking (e.g., weighted average, statistical methods). The selected method will not have any impact on the capacitor placement algorithm. However, the selected trapezoidal membership functions of Fig. 11.7B–D for F , V , and THD_v have major impacts on the solution process (e.g., improving or deteriorating convergence).

The inclusion of sensitivity functions and fuzzification of objective and power quality constraints will automatically eliminate all solutions generating extreme values of voltages and/or currents and prevents fundamental and harmonic parallel resonances.

11.4.6.3 Solution methodology

The shunt capacitor placement and sizing problem in the presence of linear and nonlinear loads is an optimization problem with discrete variables (e.g., discrete values of capacitors). This problem is solved using the harmonic power flow algorithm and the fuzzy set theory (Fig. 11.8) as follows:

Step 1: Input system parameters (e.g., line and load specifications and system topology). Initial capacitor values of all possible compensation buses are set to zero.

Step 2: Calculate harmonic power flow.

Step 3: Evaluate the objective function (Eq. 11.8), sensitivities of objective function, constraints, and their fuzzy combination (Eq. 11.15a) in order to determine the list of candidate buses.

Step 4: Sort candidate buses (CB) and from among them select several buses with maximum sensitivities and total number of installed capacitor banks less than $u^{\max}$.

Step 5: Apply α -cut process and compute the membership functions for the objective function and constraints with respect to the present topology.

Step 6: Add one unit of capacitor to one of the candidate buses. Calculate harmonic power flow and record the values of related membership functions. Remove the newly added capacitor unit from the corresponding candidate bus.

Step 7: Repeat Step 6 for all other candidate buses.

Step 8: If all total membership functions are zero, go to Step 11.

Step 9: Among all candidate buses, select the one with maximum value of total membership function and place one unit of capacitor at this bus.

Step 10: If the reactive power of the total capacitance of shunt capacitors does not exceed the sum of reactive loads and the total number of installed capacitor banks are less than $U^{\max}$, go to Step 2.

Step 11: Print the solution and stop.

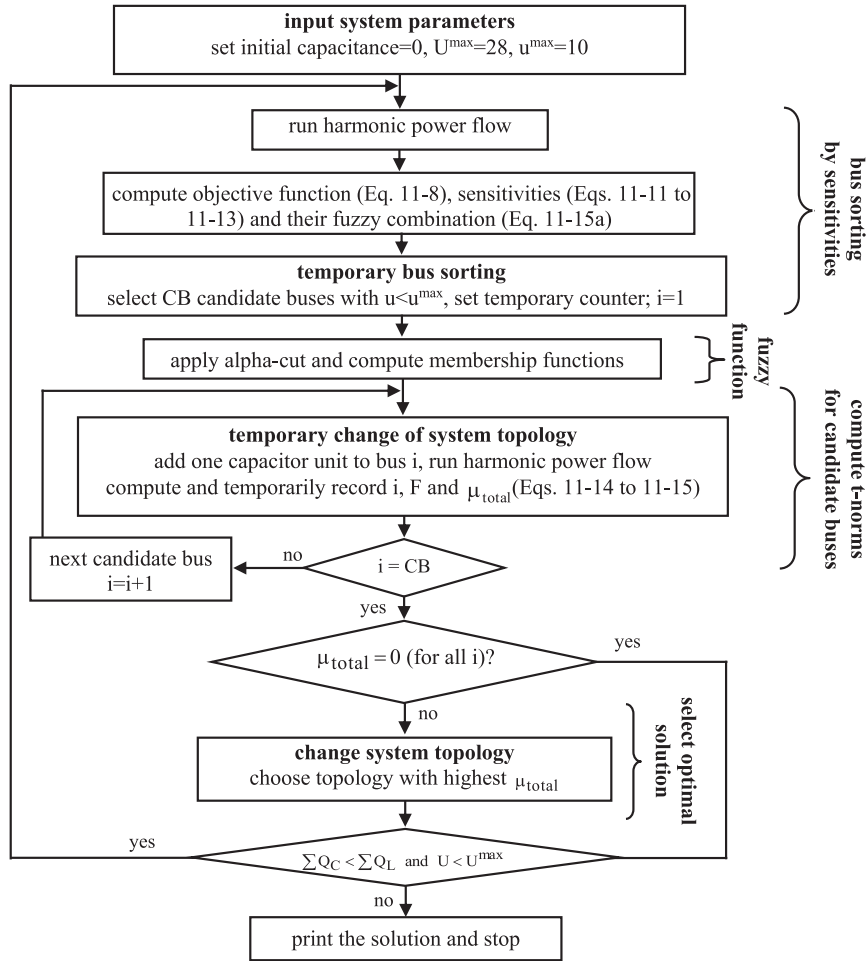


FIG. 11.8 Iterative fuzzy algorithm for optimal placement and sizing of capacitor banks in the presence of harmonics.

11.4.7 Application Example 11.4: Optimal placement and sizing of capacitor banks in the distorted 18-bus IEEE distribution system by fuzzy expert system

Apply the MSS and fuzzy algorithms of Figs. 11.5 and 11.8 for capacitor placement and sizing to the 23kV, 18-bus, distorted IEEE distribution system of Fig. E11.3.1.

Solution to Application Example 11.4: Optimal placement and sizing of capacitor banks in the distorted 18-bus IEEE distribution system by fuzzy expert system

Simulation results are compared in Table E11.4.1 for the following operating conditions.

TABLE E11.4.1 Simulation results for the 18-bus, distorted IEEE distribution system (Fig. E11.3.1) at different distortion levels with per unit $S = 10$ MVA, per unit $V = 23$ kV, and swing bus voltage = 1.05 pu.^a

	Case 1 (high distortion)			Case 2 (low distortion)		
	Before optimization	After MSS optimization	After fuzzy optimization	Before optimization	After MSS optimization	After fuzzy optimization
Capacitor bank locations and sizes (pu)	Q2=0.105	Q2=0.030	Q2=0.015	Q2=0.105	Q2=0.090	
	Q3=0.060	Q3=0.090	Q3=0.030	Q3=0.060		Q3=0.255
	Q4=0.060	Q4=0.180	Q4=0.060	Q4=0.060	Q4=0.060	Q4=0.030
	Q5=0.180	Q5=0.240	Q5=0.240	Q5=0.180	Q5=0.180	Q5=0.060
	Q7=0.060	Q7=0.120	Q7=0.210	Q7=0.060	Q7=0.060	Q7=0.030
	Q20=0.060	Q20=0.090	Q20=0.090	Q20=0.060	Q20=0.030	Q20=0.165
	Q21=0.120	Q21=0.120	Q21=0.120	Q21=0.120		Q21=0.015
	Q24=0.150			Q24=0.150	Q24=0.180	Q24=0.075
	Q25=0.090	Q25=0.030		Q25=0.090	Q25=0.030	Q25=0.045
	Q50=0.120			Q50=0.120		
Total capacitor (pu)	Qt=1.005	Qt=0.900	Qt=0.765	Qt=1.005	Qt=0.630	Qt=0.675
Minimum voltage (pu)	1.029	1.016	0.998	1.050	1.020	1.021
Maximum voltage (pu)	1.055	1.056	1.050	1.073	1.050	1.054
Max. THD_v (%)	8.48	6.37	4.89	2.10	2.95	2.63
Losses (kW)	282.93	246.43	257.46	189.91	167.32	160.48
Capacitor cost (\$/year)	1978.2	1692	1458.30	1978.20	1311.90	1538.25
Total cost (\$/year)	159,853.14	139,199.94	145,120.98	107,947.98	94,676.46	91,086.09
Benefits (\$/year)		20,653	14,732		13,271	16,861

^a All capacitors were removed before the optimization process.

Case 1: High harmonic distortion

The nonlinear load in Fig. E11.3.1 is a six-pulse rectifier with active and reactive powers of 0.3 pu (3 MW) and 0.226 pu (2.26 MVar), respectively. Results of harmonic power flow indicate a maximum voltage THD_v of 8.48% for this system (column 2 of Table E11.4.1).

Application of the MSS method to Fig. E11.3.1 shows that optimal capacitor placement results in considerable yearly benefit (e.g., \$20,653 per year) but it does not limit THD_v to the desired level of 5% (column 3 of Table E11.4.1). This is expected from the MSS method dealing

with rich harmonic configurations, where capacitor placement is not the primary solution for harmonic mitigation.

The fuzzy algorithm of Fig. E11.3.1 is also applied to this system for optimal placement and sizing of capacitor banks. Results show a yearly benefit of \$14,732 per year (last row of Table E11.4.1) and different locations and sizes of capacitor banks before (column 2 of Table E11.4.1) and after (column 4 of Table E11.4.1) the fuzzy optimization. In addition, maximum voltage THD_v is reduced to 4.89% (row 16 of Table E11.4.1), and total capacitance is decreased by 24%.

Case 2: Low harmonic distortion

The size of the nonlinear load is decreased such that its active and reactive powers are 0.02 and 0.046 pu, respectively. After optimal placement and sizing of capacitor banks with MSS method, THD_v increases from 2.1% to 2.95% (which is lower than the desired limit of 5%), total capacitance of capacitor banks is decreased from 1.005 to 0.630 pu and a yearly benefit of \$13,271 is achieved (column 6 of Table E11.4.1).

Application of the fuzzy algorithm results in THD_v increase from 2.1% to 2.63% (which is in the permitted region) and also total capacitance decreases from 1.005 to 0.675 pu (column 7 of Table E11.4.1). In addition, annual savings are increased to \$16,861 (e.g., 27% greater savings than that of the MSS method). These results demonstrate the fine capability of the fuzzy method for capacitor placement in the presence of harmonics.

11.4.8 Optimal placement, replacement, and sizing of capacitor banks in distorted distribution networks by genetic algorithms

Most traditional optimization methods move from one point in the decision hyperspace to another using some deterministic rule. The problem with this is that the solution is likely to get stuck at a local optimum. Genetic algorithms (GAs) start with a diverse set (population) of potential solutions (hyperspace vectors). This allows for exploration of many optima in parallel, lowering the probability of getting stuck at a local optimum. Even though GAs are probabilistic, they are not strictly random searches. The stochastic operators used on the population direct the search toward regions of the hyperspace that are likely to have higher fitness values.

This section presents a genetic method to formulate the capacitor placement and sizing problem in the presence of voltage and current harmonics, taking into account fixed capacitors with a limited number of capacitor banks at each bus and the entire feeder [43]. Operational and power quality constraints include bounds for rms voltage, THD_v , and the number and size of installed capacitors.

11.4.8.1 Genetic algorithm

Genetic algorithms use the principles of natural evolution and population genetics to search and arrive at a near global solution. The required design variables are encoded into a binary string as a set of genes corresponding to chromosomes in biological systems. Unlike traditional optimization techniques that require one starting point, GAs use a set of points as initial conditions. Each point is called a chromosome. A group of chromosomes is called a

population. The number of chromosomes in a population is usually selected to be from 30 to 300. Each chromosome is a string of binary codes (genes) and may contain substrings. The merit of a string is judged by the fitness function, which is derived from the objective function and is used in successive genetic operations. During each iterative procedure (referred to as a generation), a new set of strings with improved performance is generated relying on three GA operators (i.e., reproduction, crossover, and mutation).

Structure of chromosomes

Different types of chromosomes for GAs have been proposed and implemented. This section employs the chromosome structure of Fig. 11.9 consisting of MC substrings of binary numbers, where MC denotes the number of possible compensation (candidate) buses for capacitor placement in the entire feeder. The binary numbers indicate the size of the installed capacitor at the bus under consideration.

Fitness functions

The inverse algebraic product of penalty functions (Fig. 11.10) is used as the fitness function combining objective and constraint functions:

$$F_{\text{fitness}} = \frac{1}{(F_F \cdot F_{THDv} \cdot F_V \cdot F_U)}, \quad F_{THDv} = \prod_{j=1}^n F_{THDv,j}, \quad F_v = \prod_{j=1}^n F_{v,j}, \quad (11.16)$$

where penalty functions F_F , $F_{THDv,j}$, $F_{v,j}$, and F_U are shown in Fig. 11.10.

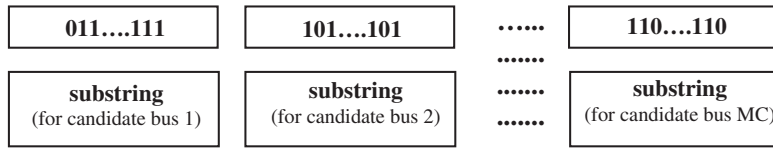


FIG. 11.9 A typical chromosome structure for the genetic algorithm.

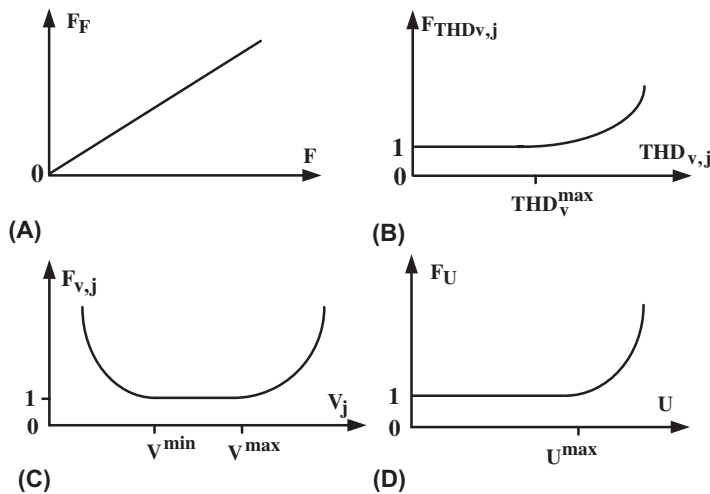


FIG. 11.10 Penalty functions of the GA used to compute fitness (Eq. 11.16): (A) for the objective function F , (B) for $THD_{v,j}$, (C) for v_j , (D) for total number of capacitors of the entire feeder (U).

Genetic operators

Three genetic operators including reproduction (based on the roulette-wheel mechanism), crossover (with crossover probability of 0.6–1.0), and mutation (with mutation probability of 0.01–0.1) are established.

Convergence criterion

The iterations (regenerations) of the genetic algorithm are continued until all generated chromosomes become equal or the maximum number of iterations ($N^{\max}=40$) is reached. Due to the randomness of the GA method, the solution tends to differ for each run, even with the same initial population. For this reason, it is suggested to perform multiple runs and select the “most acceptable” solution (e.g., with most benefits, within the permissible region bounded by constraints).

11.4.8.2 Solution methodology

The shunt capacitor placement and sizing problem in the presence of linear and nonlinear loads is solved based on the genetic algorithm of Fig. 11.11 as follows:

Step 1: Input system parameters (e.g., system topology, line and load specifications). Input the initial population with N_{ch} chromosomes.

Step 2: Set initial counter and parameter values (e.g., $N_{ch}=N_{it}=N_R=1$ and F_{MIN} = a high number).

Step 3 (Fitness process):

Step 3a: Run harmonic power flow for N_{ch} chromosomes and save results.

Step 3b: Compute proposed penalty functions (Fig. 11.10) employing data generated by harmonic power flow program. Compute fitness functions (Eq. 11.16) for chromosome N_{ch} . Set $N_{ch}=N_{ch}+1$.

Step 3c: If $N_{ch} \leq N_{chrom}$ go to Step 3a.

Step 4 (Reproduction process):

Step 4a: Define total fitness as the sum of all fitness values for all chromosomes.

Step 4b: Select a percentage of “roulette wheel” for each chromosome that is equal to the ratio of its fitness value to the total fitness value.

Step 4c: Improve generation by rolling the roulette wheel N_{ch} times. Select a new combination of chromosomes.

Step 5 (Crossover process):

Step 5a: Select a random number (R_1) for mating two parent chromosomes.

Step 5b: If R_1 is between 0.6 and 1.0 then combine the two parents, generate two offspring, and go to Step 5d.

Step 5c: Else, transfer the chromosome with no crossover.

Step 5d: Repeat Steps 5a–5c for all chromosomes.

Step 6 (Mutation process):

Step 6a: Select a random number (R_2) for mutation of one chromosome.

Step 6b: If R_2 is between 0.01 and 0.1 then apply the mutation process at a random position and go to Step 6d.

Step 6c: Else, transfer the chromosome with no mutation.

Step 6d: Repeat Steps 6a–6c for all chromosomes.

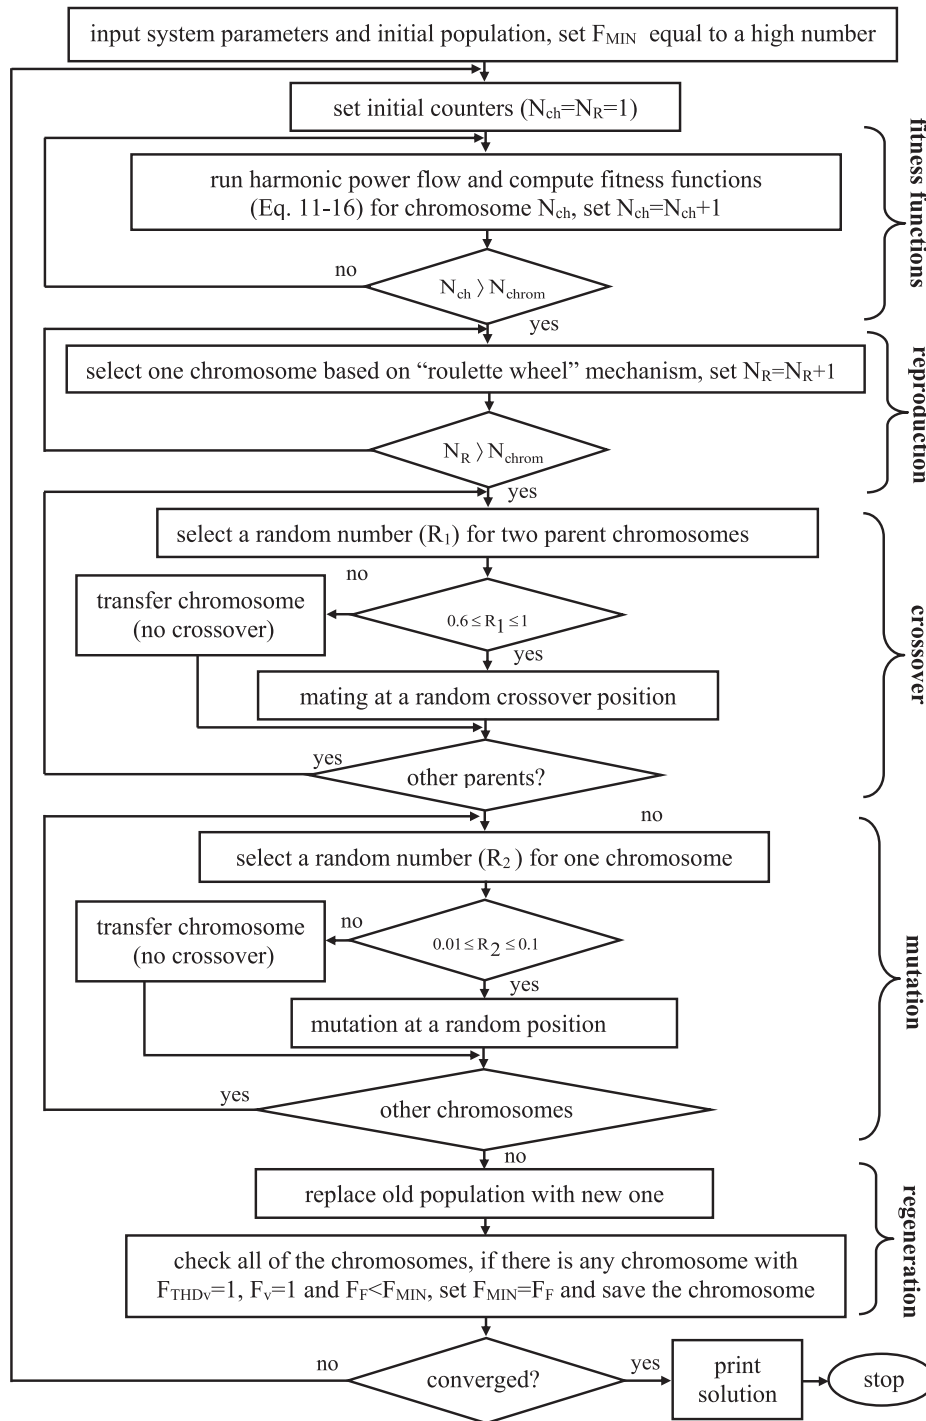


FIG. 11.11 Iterative genetic algorithm for optimal placement and sizing of capacitor banks in the presence of harmonics.

Step 7 (Updating populations): Replace the old population with the improved population generated by Steps 2–6. Check all chromosomes; if there is any chromosome with $F_{THD_v} = 1$, $F_v = 1$, and $F_F < F_{MIN}$, set $F_{MIN} = F_F$ and save it. Set $N_{it} = N_{it} + 1$.

Step 8 (Convergence): If all chromosomes are the same or the maximum number of iterations is reached ($N_{it} = N^{max}$), then print the solution and stop, else go to Step 2.

11.4.9 Application Example 11.5: Optimal placement and sizing of capacitor banks in the 6-bus IEEE distorted system

Apply the MSS, MSS-LV, fuzzy, and genetic algorithms of Figs. 11.5, 11.6, 11.8 and 11.11 for capacitor placement and sizing to the 69 kV, 6-bus, distorted IEEE distribution system of Fig. E11.5.1. Specifications of this system are given in Ref. [41].

Solution to Application Example 11.5: *Optimal placement and sizing of capacitor banks in the 6-bus IEEE distorted system*

Simulation results are compared in Table E11.5.1. The nonlinear load in Fig. E11.5.1 is a six-pulse rectifier with active and reactive powers of 0.2 pu (2 MW) and 0.25 pu (2.5 MVAR), respectively. Results of a harmonic power flow program indicate a maximum voltage THD_v of 5.270% (column 2 of Table E11.5.1).

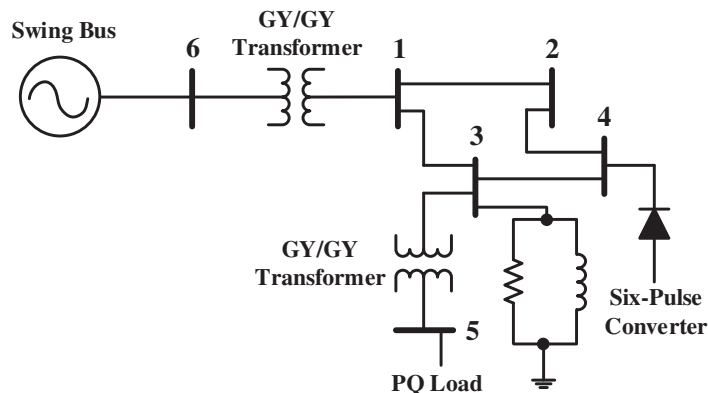


FIG. E11.5.1 Single-line diagram of the 6-bus [23] IEEE distorted system used for simulation and analysis. GY is a grounded transformer.

TABLE E11.5.1 Simulation results for the 6-bus, distorted IEEE system of Fig. E11.5.1 with base apparent power $S = VA = 10$ MVA, base voltage $V = 69$ kV, and swing bus voltage $= 1.00$ pu.^a

	Before optimization	After MSS optimization	After MSS-LV optimization	After fuzzy optimization	After GA optimization
Capacitor bank locations and sizes (pu)	Q1 = 0.000	Q1 = 0.000	Q1 = 0.405	Q1 = 0.000	Q1 = 0.120
	Q2 = 0.000	Q2 = 0.000	Q2 = 0.000	Q2 = 0.000	Q2 = 0.000
	Q3 = 0.000	Q3 = 0.000	Q3 = 0.315	Q3 = 0.000	Q3 = 0.45
	Q4 = 0.000	Q4 = 0.000	Q4 = 0.000	Q4 = 0.000	Q4 = 0.00
	Q5 = 0.000	Q5 = 0.150	Q5 = 0.150	Q5 = 0.135	Q5 = 0.405
	Q6 = 0.000	Q6 = 0.000	Q6 = 0.000	Q6 = 0.000	Q6 = 0.000

TABLE E11.5.1 Simulation results for the 6-bus, distorted IEEE system of Fig. E11.5.1 with base apparent power $S = VA = 10$ MVA, base voltage $V = 69$ kV, and swing bus voltage = 100 pu—Cont'd

	Before optimization	After MSS optimization	After MSS-LV optimization	After fuzzy optimization	After GA optimization
Total capacitor (pu)	$Q_t = 0.000$	$Q_t = 0.150$	$Q_t = 0.870$	$Q_t = 0.135$	$Q_t = 0.405$
Minimum voltage (pu)	0.935	0.965	1.000	0.962	0.996
Maximum voltage (pu)	1.005	1.013	1.070	1.012	1.044
Maximum THD_v (%)	5.270	5.007	4.970	4.990	4.943
Losses (kW)	360	295	285.2	299	276.7
Capacitor cost (\$/year)	0.00	301.50	1640.7	279.45	725.85
Total cost (\$/year)	200,880.0	164,911.5	160,782.0	167,121.45	155,101.85
Computing time (s) ^b	—	6	115	10	639
Benefits (\$/year)		35,968.5	40,098.0	33,758.55	45,778.15

^a All capacitors were removed before the optimization process.^b Using a Pentium III (550 MHz) personal computer.

After optimal placement and sizing of capacitor banks with the MSS algorithm, the voltage THD_v decreases to 5.007% by allocating 0.15 pu capacitor banks and a yearly benefit of \$35,968 is achieved (column 3 of Table E11.5.1). Applying the MSS-LV algorithm to the system yields a yearly benefit of \$40,098 and a voltage THD_v of 4.970 (column 4 of Table E11.5.1). Optimization of the system based on the fuzzy set algorithm generates voltage THD_v of 4.990% and a yearly benefit of \$33,758 (column 5 of Table E11.5.1). Application of the genetic algorithm (with $N_{ch} = 100$) results in about the same voltage THD_v (e.g., 4.943%), and the annual savings are increased to \$45,778 (column 6 of Table E11.5.1).

11.4.10 Application Example 11.6: Optimal placement and sizing of capacitor banks in the 18-bus IEEE distorted system

Apply the MSS, MSS-LV, fuzzy, and genetic algorithms of Figs. 11.5, 11.6, 11.8 and 11.11 for capacitor placement and sizing to the 23 kV, 18-bus, distorted IEEE distribution system of Fig. E11.3.1. Specifications of this system are given in reference [41]. The nonlinear load in Fig. E11.3.1 is a six-pulse rectifier with active and reactive powers of 0.3 pu (3 MW) and 0.226 pu (2.26 MVar), respectively.

Solution to Application Example 11.6: *Optimal placement and sizing of capacitor banks in the 18-bus IEEE distorted system*

Results of a harmonic power flow program show a maximum voltage THD_v of 8.486% for this system (column 2 of Table E11.6.1). Application of MSS method to Fig. E11.3.1 shows that optimal capacitor placement results in considerable yearly benefit (e.g., \$20,653 per year), but it does not limit voltage THD_v to the desired level of 5% (column 3 of Table E11.6.1). Applying the MSS-LV algorithm yields a yearly benefit of \$17,939 and voltage THD_v is reduced to 4.72% (column 4 of Table E11.6.1). Application of the fuzzy algorithm results in an acceptable voltage THD_v level and benefits (4.899% and \$14,732, column 5 of Table E11.6.1).

TABLE E11.6.1 Simulation results of MSS, MSS-LV, fuzzy, and genetic algorithms for the 18-bus, distorted IEEE distribution system (Fig. E11.3.1) with per unit VA = 10 MVA, per unit V = 23 kV, and swing bus voltage = 1.05 pu.^a

	Before optimization	After MSS optimization	After MSS-LV optimization	After fuzzy optimization	After GA optimization
Capacitor bank locations and sizes (pu)	Q2 = 0.105	Q2 = 0.030	Q2 = 0.120	Q2 = 0.015	Q2 = 0.030
	Q3 = 0.060	Q3 = 0.090	Q3 = 0.060	Q3 = 0.030	Q3 = 0.000
	Q4 = 0.060	Q4 = 0.180	Q4 = 0.180	Q4 = 0.060	Q4 = 0.165
	Q5 = 0.180	Q5 = 0.240	Q5 = 0.240	Q5 = 0.240	Q5 = 0.330
	Q7 = 0.060	Q7 = 0.120	Q7 = 0.120	Q7 = 0.210	Q7 = 0.105
	Q20 = 0.060	Q20 = 0.090	Q20 = 0.090	Q20 = 0.090	Q20 = 0.060
	Q21 = 0.120	Q21 = 0.120	Q21 = 0.120	Q21 = 0.120	Q21 = 0.090
	Q24 = 0.150	Q24 = 0.000	Q24 = 0.000	Q24 = 0.000	Q24 = 0.015
	Q25 = 0.090	Q25 = 0.030	Q25 = 0.000	Q25 = 0.000	Q25 = 0.015
	Q50 = 0.120	Q50 = 0.000	Q50 = 0.000	Q50 = 0.000	Q50 = 0.030
Total capacitor (pu)	Qt = 1.005	Qt = 0.900	Qt = 0.930	Qt = 0.765	Qt = 0.840
Minimum voltage (pu)	1.029	1.016	1.013	0.998	1.003
Maximum voltage (pu)	1.055	1.056	1.059	1.050	1.050
Maximum THD_v (%)	8.486	6.370	4.720	4.899	4.883
Losses (kW)	282.93	246.43	250.37	257.46	249.31
Capacitor cost (\$/year)	1978.20	1692.00	2206.80	1458.30	1788.75
Total cost (\$/year)	159,853.14	139,199.94	141,913.26	145,120.98	140,903.73
Computing time (s) ^b	–	96	141	48	2780
Benefits (\$/year)		20,653.6	17,939.88	14,732.16	18,949.41

^a All capacitors were removed before the optimization process.

^b Using a Pentium III (550 MHz) personal computer.

The genetic algorithm (GA) of Fig. 11.11 is also applied to this system for optimal placement and sizing of capacitor banks ($N_{ch}=250$). Results reveal a yearly benefit of \$18,949 per year (last row of Table E11.6.1); maximum voltage THD_v is limited to 4.880% (column 6 of Table E11.6.1), and the total allocated capacitance is decreased by 16%.

Greater power quality control mitigation is achieved with the GA at the expense of lower benefits compared with the MSS solution. The GA yields greater yearly benefits while the power quality conditions are the same than those of the MSS-LV solution. Compared with the fuzzy solution, the same power quality conditions result (rows 12–15 of Table E11.6.1), but greater benefits (e.g., 28% greater savings) are achieved with GA.

The results of [Tables E11.5.1 and E11.6.1](#) indicate that the genetic algorithm captures more advantageous solutions than the MSS, MSS-LV, and fuzzy algorithms. This is expected because the genetic algorithm has the capability of computing the near global solution.

11.4.10.1 Computing time

Unfortunately, the application of GAs often looks like a never-ending process. In fact, only a compromise between population size, mutation rate, and so on can lead to an adequate algorithm that finds good solutions in a relatively short time. However, capacitor bank placement is usually considered a planning problem and its computing time is not of great concern. The computational burden associated with the genetic algorithm is included and compared with those of the MSS, MSS-LV, and fuzzy methods as shown in row 15 of [Table E11.5.1](#) and row 19 of [Table E11.6.1](#). As expected, the computing times of the genetic algorithm are much longer.

11.4.11 Genetically optimized fuzzy placement and sizing of capacitor banks in distorted distribution networks

This section presents a genetic algorithm in conjunction with fuzzy logic (GA-FL) to formulate the capacitor placement and sizing problem in the presence of voltage and current harmonics, taking into account fixed capacitors with a limited number of capacitor banks at each bus [\[44\]](#). Operational and power quality constraints include bounds for rms voltage, THD_v , and the number as well as the size of installed capacitors. In this hybrid global optimization method, fuzzy approximate reasoning is introduced to determine the suitability (fitness function) of each GA chromosome for capacitor placement. This will improve the evolution process of the GA, lowering the probability of getting stuck at local optima. Fuzzy logic has shown good results for capacitor bank allocation when combined with genetic algorithms under sinusoidal operating conditions [\[1\]](#).

11.4.11.1 Solution method

Suitability of THD_v and voltage are defined for each chromosome based on fuzzy approximate reasoning. These variables are used with a cost index to determine the suitability (fitness function) of each GA chromosome for capacitor placement.

Fuzzy set theory (FST) contains a set of rules that are developed from qualitative descriptions. When suitability of THD_v , voltage, and cost of the distribution system are studied, an engineer can choose the most appropriate locations and sizes of shunt capacitor banks. These rules are defined to determine the suitability of each chromosome (S_{chrom}) and may be executed employing fuzzy inferencing. S_{chrom} serves as the fitness function in the GA to further improve the evolution process, reducing the probability of converging to a local optimum.

Structure of chromosomes

The chromosome structure of [Fig. 11.9](#) is used.

Fuzzy fitness (suitability) functions

The suitability level of each chromosome (S_{chrom}) is computed by defining fuzzy membership functions for suitability of total harmonic distortion ($\mu_{S_{THDv}}$), voltage (μ_{sv}), and cost (μ_{cost}). A fuzzy expert system (FES) uses the number of buses with high THD_v and voltage values and the average of the THD_v and voltage deviation (at these buses) to determine the suitability of THD_v and voltage.

A concern for the development of fuzzy expert systems is the assignment of appropriate membership functions, which could be performed based on intuition, rank ordering, or probabilistic methods. However, the choice of membership degree in the interval $[0, 1]$ does not matter, as it is the order of magnitude that is important [1].

Suitability of THD_v (S_{THDv})

For a given chromosome, define the average unacceptable value of THD_v as

$$THD_{v \text{ avg}}^{\text{high}} = \sum_{j=1}^{N_{THDv}} THD_{v,j} / N_{THDv}, \quad (11.17)$$

where N_{THDv} is the number of buses with high total voltage harmonic distortions (e.g., $THD_{v,j} > THD_v^{\text{max}}$). The following steps are performed to compute S_{THDv} :

- Fuzzification of $THD_{v \text{ avg}}^{\text{high}}$ and N_{THDv} (based on membership functions of Fig. 11.12A and B, respectively) to compute the corresponding membership values (μ_{THDv} and $\mu_{N_{THDv}}$).
- Fuzzy inferencing and defuzzification based on the decision matrix of Table 11.5, the membership function of Fig. 11.13, Mamdani max-prod implication, and center average methods [48]:

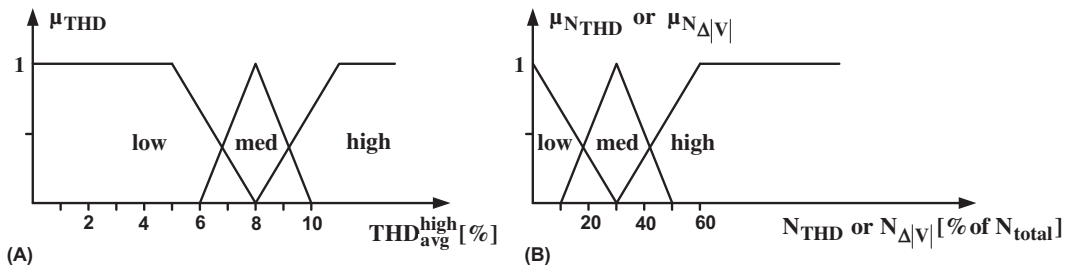


FIG. 11.12 Membership functions for (A) the average of unacceptable (high) $THD_{v \text{ avg}}^{\text{high}}$ values (Eq. 11.17), (B) number of buses with unacceptable N_{THD} or voltage, where avg means average.

TABLE 11.5 Decision matrix for determining suitability of THD_v (and V).

AND		THD_v (or $\Delta V $)		
		Low	Medium	High
N_{THDv} (or $N_{\Delta V }$)	Low	High	Medium	Medium
	Medium	Medium	Low	Low
	High	Medium	Low	Low

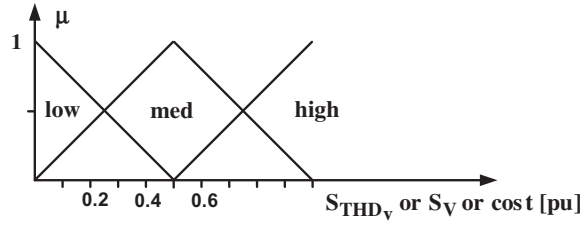


FIG. 11.13 Membership functions for suitability of S_{THDv} , S_v , or cost.

$$S_{THDv} = \frac{\sum \bar{y} \mu_{N_{THDv}} \mu_{THDv}}{\sum \mu_{N_{THDv}} \mu_{THDv}}. \quad (11.18)$$

Suitability of voltage (S_v)

For a given chromosome, define the average unacceptable value of voltage deviation as

$$\Delta V_{avg} = \frac{\sum_{j=1}^{N_{\Delta|V|}} \Delta V_j}{N_{\Delta|V|}}, \quad \begin{cases} \Delta V_j = |V| - V^{\max} & (\text{if } |V| > V^{\max}) \\ \Delta V_j = V^{\min} - |V| & (\text{if } |V| < V^{\min}) \end{cases} \quad (11.19)$$

where $N_{\Delta|V|}$ is the number of buses with unacceptable (high) values of voltage. $V^{\max} = 1.1$ pu and $V^{\min} = 0.9$ pu are upper and lower bounds of rms voltage, respectively. The following steps are performed to compute S_v

- Fuzzification of ΔV_{avg} and $N_{\Delta|V|}$ (based on membership functions of Fig. 11.14A and B, respectively) to compute the corresponding membership values ($\mu_{\Delta|V|}$ and $N_{\Delta|V|}$).
- Fuzzy inferencing and defuzzification (using the decision matrix of Table 11.5, Fig. 11.13, and Eq. 11.18) to determine the suitability of voltage (S_v).

Cost index (cost) Compute the cost for all chromosomes (Eq. 11.8) and linearly normalize them into $[0, 1]$ range with the largest cost having a value of one and the smallest one having a value of zero.

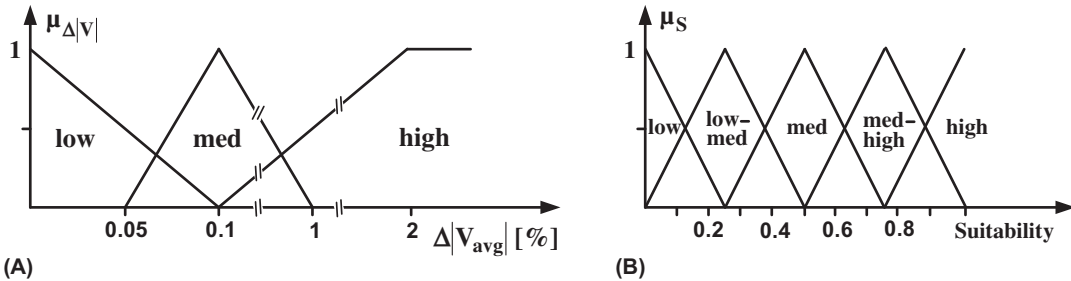


FIG. 11.14 Membership functions for (A) voltage deviation, (B) suitability of a chromosome (S_{chrom}).

TABLE 11.6 Decision matrix for determining suitability of a chromosome (S_{chrom}).

		S_{THD_V}							
		Low			Medium			High	
S_V	Low	“Cost”			“Cost”			“Cost”	
	Low	Medium	High	Low	Medium	High	Low	Medium	High
	Low-medium	Low	Low	Medium	Low-medium	Low	Medium-high	Medium	Low-medium
	Medium	“Cost”			“Cost”			“Cost”	
	Low	Medium	High	Low	Medium	High	Low	Medium	High
	Medium	Low-medium	Low	Medium-high	Medium	Low-medium	Medium-high	Medium	Medium
High	“Cost”			“Cost”			“Cost”		
	Low	Medium	High	Low	Medium	High	Low	Medium	High
	Medium	Low-medium	Low	Medium-high	Medium-high	Medium	High	High	Medium-high

Fitness (suitability) of a chromosome (S_{chrom}) Suitability level for a given chromosome is computed from S_{THD_v} , S_V , and cost using the following steps:

- Fuzzification of S_{THD_v} , S_V , and cost (based on Fig. 11.13) to compute the corresponding membership values ($\mu_{S_{THD_v}}$, μ_{S_V} and μ_{cost}).
- Fuzzy inferencing and defuzzification (using the decision matrix of Table 11.6, Fig. 11.14B, and Eq. 11.18) to determine the suitability of the chromosome (S_{chrom}).

Genetic operators

Three genetic operators including reproduction (based on the "roulette-wheel" mechanism), crossover (with crossover probability of 0.6–1.0), and mutation (with mutation probability of 0.01–0.1) are used.

Fig. 11.15 illustrates the block diagram of the fuzzy expert system for the determination of the suitability of a chromosome for capacitor placement.

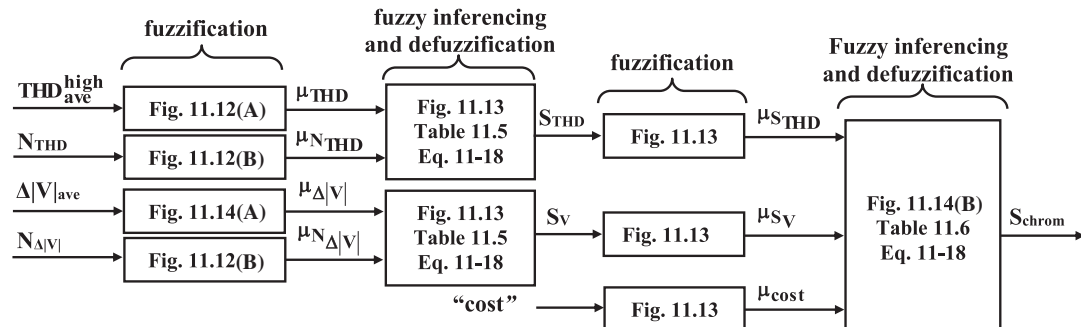


FIG. 11.15 Fuzzy expert system (FES) to determine suitability of a chromosome (S_{chrom}) for capacitor placement from total harmonic distortion (THD_v), voltage deviation ($\Delta|V|_{\text{avg}}$), cost, number of buses with unacceptable THD_v (N_{THD}) and unacceptable $|V|$ ($N_{\Delta|v|}$) [44].

11.4.11.2 Solution methodology

The shunt capacitor placement and sizing problem in the presence of linear and nonlinear loads is solved using the GA-FL algorithm of Fig. 11.16 as follows:

Step 1: Input system parameters and the initial population.

Step 2: Fuzzy fitness or suitability. Perform the following steps for all chromosomes (Fig. 11.15):

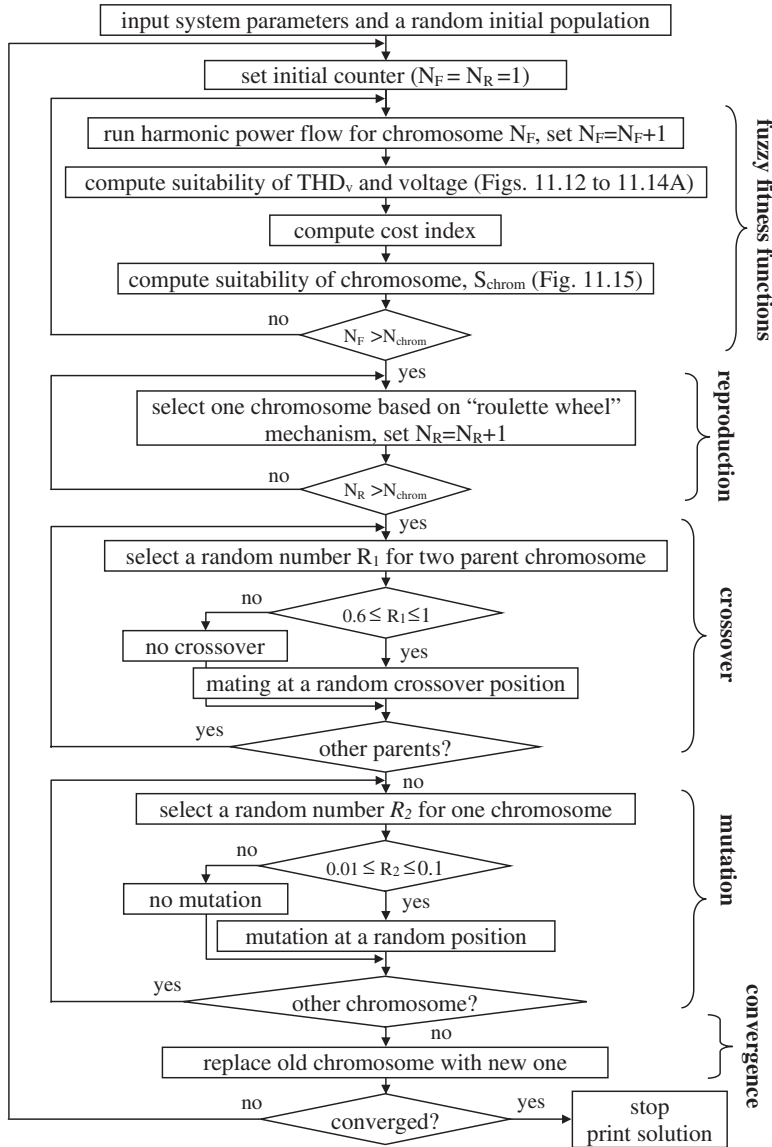


FIG. 11.16 Iterative GA-FL method for optimal placement and sizing of capacitor banks in the presence of harmonics.

Step 2a: Run the Newton-based harmonic power flow program.

Step 2b: Compute suitability of THD_v and voltage (Fig. 11.13, Table 11.5, and Eq. 11.18).

Step 2c: Compute cost index.

Step 2d: Compute suitability, S_{chrom} (Fig. 11.14B, Table 11.6, and Eq. 11.18).

Step 3: Reproduction process. Select a new combination of chromosomes by rolling the roulette wheel.

Step 4: Crossover process. Select a random number for mating two parent chromosomes. If it is between 0.6 and 1.0 then combine the two parents, and generate two offspring. Else, transfer the chromosome with no crossover.

Step 5: Mutation process. Select a random number for mutation of one chromosome. If it is between 0.01 and 0.1 then apply the mutation process at a random position. Else, transfer the chromosome with no mutation.

Step 6: Updating populations. Replace the old population with the improved population generated by Steps 2–5. Check all chromosomes and save the one with minimum cost, satisfying all constraints.

Step 7: Convergence. If all chromosomes are the same or the maximum number of iterations is achieved ($N_{max} = 40$), then print the solution and stop, else go to Step 2.

11.4.12 Application Example 11.7: Genetically optimized fuzzy placement and sizing of capacitor banks in the 18-bus IEEE distorted system

Apply the hybrid GA-FL method (Fig. 11.16) and the capacitor placement techniques of prior sections (MSS, MSS-LV, fuzzy, and genetic) to the 23 kV, 18-bus, distorted IEEE distribution system of Fig. E11.3.1. The six-pulse rectifier (with $P = 0.3 \text{ pu} \equiv 3 \text{ MW}$ and $Q = 0.226 \text{ pu} \equiv 2.26 \text{ MVAR}$) causes a maximum voltage THD_v of 8.486% (column 2 of Table E11.7.1).

TABLE E11.7.1 Simulation results of MSS, MSS-LV, fuzzy, genetic and GA-FL algorithms for the 18-bus, distorted IEEE distribution system of Fig. E11.3.1 with per unit VA = 10 MVA, per unit V = 23 kV, and swing bus voltage = 1.05 pu.^a

	Before optimization	Local optimization			(Near) global optimization	
		After MSS optimization	After MSS-LV optimization	After fuzzy optimization	After GA optimization	After GA-FL optimization
Capacitor bank locations and sizes (pu)	Q2 = 0.105	Q2 = 0.030	Q2 = 0.120	Q2 = 0.015	Q2 = 0.030	Q2 = 0.030
	Q3 = 0.060	Q3 = 0.090	Q3 = 0.060	Q3 = 0.030	Q3 = 0.000	Q3 = 0.000
	Q4 = 0.060	Q4 = 0.180	Q4 = 0.180	Q4 = 0.060	Q4 = 0.165	Q4 = 0.195
	Q5 = 0.180	Q5 = 0.240	Q5 = 0.240	Q5 = 0.240	Q5 = 0.330	Q5 = 0.300
	Q7 = 0.060	Q7 = 0.120	Q7 = 0.120	Q7 = 0.210	Q7 = 0.105	Q7 = 0.105
	Q20 = 0.060	Q20 = 0.090	Q20 = 0.090	Q20 = 0.090	Q20 = 0.060	Q20 = 0.090

TABLE E11.7.1 Simulation results of MSS, MSS-LV, fuzzy, genetic and GA-FL algorithms for the 18-bus, distorted IEEE distribution system of Fig. E11.3.1 with per unit VA = 10 MVA, per unit V = 23 kV, and swing bus voltage = 105 pu—Cont'd

	Before optimization	Local optimization			(Near) global optimization	
		After MSS optimization	After MSS-LV optimization	After fuzzy optimization	After GA optimization	After GA-FL optimization
	Q21 = 0.120	Q21 = 0.120	Q21 = 0.120	Q21 = 0.120	Q21 = 0.090	Q21 = 0.075
	Q24 = 0.150	Q24 = 0.000	Q24 = 0.000	Q24 = 0.000	Q24 = 0.015	Q24 = 0.015
	Q25 = 0.090	Q25 = 0.030	Q25 = 0.000	Q25 = 0.000	Q25 = 0.015	Q25 = 0.015
	Q50 = 0.120	Q50 = 0.000	Q50 = 0.000	Q50 = 0.000	Q50 = 0.030	Q50 = 0.000
Total capacitor (pu)	Qt = 1.005	Qt = 0.900	Qt = 0.930	Qt = 0.765	Qt = 0.840	Qt = 0.825
Minimum voltage (pu)	1.029	1.016	1.013	0.998	1.003	1.005
Maximum voltage (pu)	1.055	1.056	1.059	1.050	1.050	1.050
Maximum THD _v (%)	8.486	6.370	4.720	4.899	4.883	4.982
Losses (kW)	282.93	246.43	250.37	257.46	249.31	248.18
Capacitor cost (\$/year)	1978.20	1692.00	2206.80	1458.30	1788.75	1817.55
Total cost (\$/year)	159,853.14	139,199.94	141,913.26	145,120.98	140,903.73	140,302.8
Benefits (\$/year)		20,653.6	17,939.88	14,732.16	18,949.41	19,550.34

^a All capacitors were removed before the optimization process.

Solution to Application Example 11.7: Genetically optimized fuzzy placement and sizing of capacitor banks in the 18-bus IEEE distorted system

Simulation results for the MSS, MSS-LV, fuzzy, and genetic algorithms are listed in columns 3–6 of Table E11.7.1, respectively. Among these algorithms, the GA approach results in a near global solution with the best yearly benefit of \$18,949 per year (column 6 of Table E11.7.1).

The GA-FL approach of Fig. 11.16 is also applied to this system for optimal placement and sizing of capacitor banks. Results show a yearly benefit of \$19,550 per year (last row of Table E11.7.1) and maximum voltage THD_v is limited to 4.982% (column 7 of Table E11.7.1). Compared to the GA approach, total yearly benefit is increased by \$600 (e.g., 3.2%), and the total allocated capacitance is decreased by 0.015 pu.

11.4.12.1 Analysis and convergence criterion of the GA-FL algorithm

The iterations of the GA-FL algorithm are continued until all generated chromosomes become equal or the maximum number of iterations is reached.

At each iteration, a fuzzy expert system (Fig. 11.15) is used to compute the fitness function of each chromosome and to select the parent population. As a result, new generations have more variety of chromosomes and higher probability of capturing the global solution. As demonstrated in Fig. E11.7.1, the relatively narrow search band of the conventional GA does not allow a large variation of chromosomes between iterations and the solution (e.g., benefits) is trapped at a near global point after the 14th iteration. However, the larger search space of the GA-FL approach (allowing large variations of benefits in consecutive iterations) has resulted in a better near global solution at the 35th iteration.

The inclusion of objective function and power quality constraints will automatically eliminate all solutions generating extreme values for voltages and/or currents and prevents fundamental and harmonic parallel resonances.

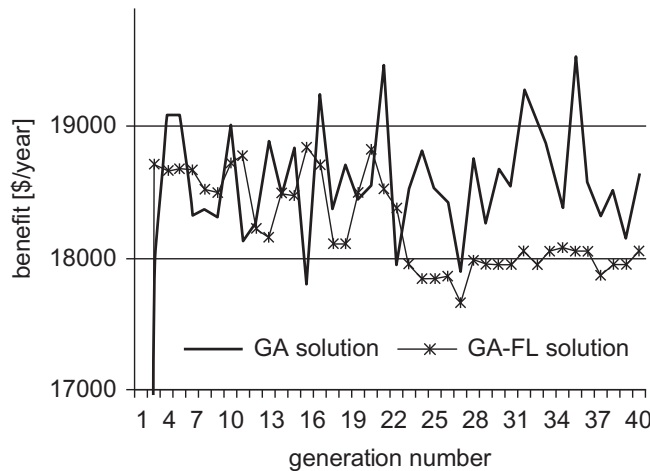


FIG. E11.7.1 Comparison of the solution progress for the GA-FL and the GA methods (Table E11.7.1) for the 18-bus, distorted IEEE distribution system (Fig. E11.3.1) using the same initial population.

11.4.13 Application Example 11.8: Genetically optimized fuzzy placement and sizing of capacitor banks in the 123-bus IEEE system with 20 nonlinear loads

Apply the GA (Fig. 11.11) and GA-FL (Fig. 11.16) methods to the 4.16 kV, 123-bus IEEE radial distribution network of Fig. E11.8.1. Specifications of this system are given in Ref. [49]. To introduce harmonic distortion, include 20 nonlinear loads (Table E11.8.1) with different harmonic spectra (Table E11.8.2). Model these loads as harmonic current sources. The coupling between harmonics is not considered and the decoupled harmonic power flow algorithm of Chapter 8 (Section 8.5.1) can be used.

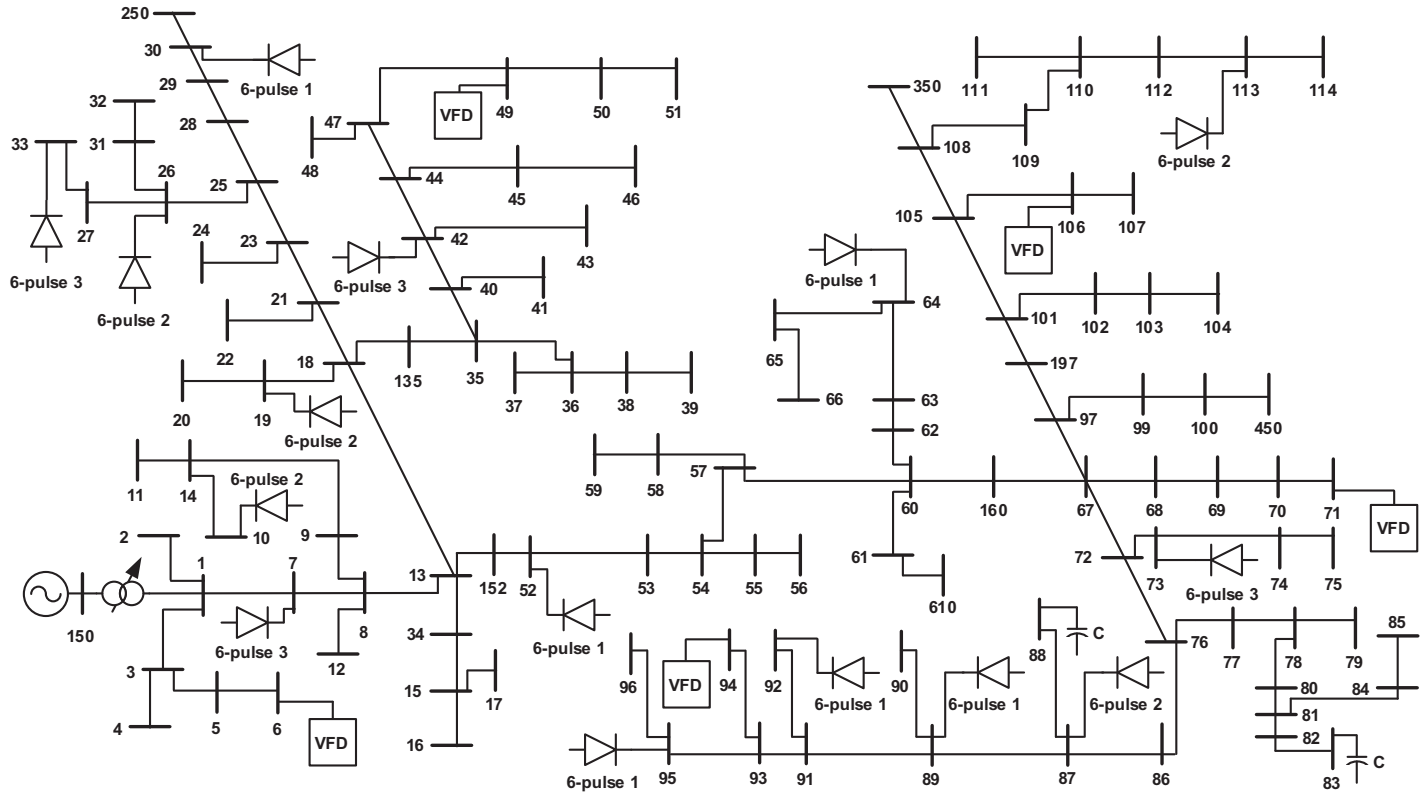


FIG. E11.8.1 The IEEE 123-bus distribution system [49] with 20 nonlinear loads.

TABLE E11.8.1 Nonlinear load data for the IEEE 123-bus system (Fig. E11.8.1).

Nonlinear bus	Nonlinear load type (Table E11.8.2)	kW	kVAr
6	Six-pulse variable-frequency drive	15	10
7	Six-pulse 3	15	10
10	Six-pulse 2	24	3
19	Six-pulse 2	24	3
26	Six-pulse 2	15	10
30	Six-pulse 1	24	3
33	Six-pulse 3	24	3
42	Six-pulse 3	15	10
49	Six-pulse variable-frequency drive	60	45
52	Six-pulse 1	24	3
64	Six-pulse 1	24	3
71	Six-pulse variable-frequency drive	15	10
73	Six-pulse 3	24	3
87	Six-pulse 2	60	45
89	Six-pulse 1	24	3
92	Six-pulse 1	24	3
94	Six-pulse variable-Frequency drive	15	10
95	Six-pulse 1	24	3
106	Six-pulse variable-frequency drive	15	10
113	Six-pulse 2	24	3

TABLE E11.8.2 Harmonic spectra of nonlinear loads for the IEEE 123-bus system (Fig. E11.8.1).

Order	Nonlinear load							
	Six-pulse 1		Six-pulse 2		Six-pulse 3		Six-pulse VFD	
	Magnitude (%)	Phase (deg)	Magnitude (%)	Phase (deg)	Magnitude (%)	Phase (deg)	Magnitude (%)	Phase (deg)
1	100	0	100	0	100	0	100	0
5	20	0	19.1	0	20	0	23.52	111
7	14.3	0	13.1	0	14.3	0	6.08	109
11	9.1	0	7.2	0	9.1	0	4.57	−158

TABLE E11.8.2 Harmonic spectra of nonlinear loads for the IEEE 123-bus system (Fig. E11.8.1)—Cont'd

Order	Nonlinear load							
	Six-pulse 1		Six-pulse 2		Six-pulse 3		Six-pulse VFD	
	Magnitude (%)	Phase (deg)	Magnitude (%)	Phase (deg)	Magnitude (%)	Phase (deg)	Magnitude (%)	Phase (deg)
13	7.7	0	5.6	0	0	0	4.2	−178
17	5.9	0	3.3	0	0	0	1.8	−94
19	5.3	0	2.4	0	0	0	1.37	−92
23	4.3	0	1.2	0	0	0	0.75	−70
25	4	0	0.8	0	0	0	0.56	−70
29	3.4	0	0.2	0	0	0	0.49	−20
31	3.2	0	0.2	0	0	0	0.54	7
35	2.8	0	0.4	0	0	0	0	0
37	2.7	0	0.5	0	0	0	0	0

Solution to Application Example 11.8: *Genetically optimized fuzzy placement and sizing of capacitor banks in the 123-bus IEEE system with 20 nonlinear loads*

The high penetration of these nonlinear loads causes a maximum THD_v of 8.03% (column 2, Table E11.8.3). The results of the GA-FL algorithm show a 5.5% increase in total annual benefit compared with those generated by the GA method (last row of Table E11.8.3), whereas the maximum THD_v is significantly limited to 2.76%.

TABLE E11.8.3 Simulation results of GA (Fig. 11.11) and GA-FL (Fig. 11.16) algorithms for the 123-bus, distorted IEEE distribution system (Fig. E11.8.1) using decoupled harmonic power law (Chapter 8, Section 8.5.1).

	Before optimization	GA optimization	GA-FL optimization
Capacitor bank locations and sizes (kVar)	Q83 = 200 Q88 = 50	Q26 = 150 Q42 = 300 Q72 = 150 Q76 = 300	Q42 = 300 Q52 = 300 Q72 = 300 Q105 = 150
Total capacitor (kVar)	Qt = 350	Qt = 900	Qt = 1050
Minimum voltage (pu)	0.874	0.904	0.915
Maximum voltage (pu)	0.980	0.980	0.980
Maximum THD_v (%)	8.0319	3.1018	2.7603
Losses (kW)	94.96	82.021	81.28
Capacitor cost (\$/year)	125	360	390
Total cost (\$/year)	53,114.5	46,127.72	45,744.24
Benefits (\$/year)		6986.8	7370.3

11.4.13.1 Analysis and convergence criterion

The generations (iterations) of the GA-FL algorithm are continued until all chromosomes of the population become equal or the maximum number of generations is achieved. The initial conditions for Eq. (11.8) (e.g., the initial capacitor values) do not usually reside inside the permissible solution region. In this section, a GA-FL approach is used to minimize the objective function while directing the constraints toward the permissible region.

To select the parent population at each generation, a fuzzy expert system (Fig. 11.15) is used to compute the fitness function of each chromosome considering the uncertainty of decision making based on the objective function and constraints. As a result, new generations have a higher probability of capturing the global solution.

As demonstrated in Fig. E11.8.2, the relatively narrow search band of the conventional GA does not allow a large variation of chromosomes between generations, and thus it is more difficult to escape from local optima. For the 18-bus and 123-bus systems, the solution is trapped at a near global point after the 14th and 22nd iterations, respectively. In the GA-FL approach, there is more variety in the generated parent population as the chromosome evaluation is based on fuzzy logic. The larger search space (allowing large variations of benefits in consecutive iterations) has resulted in a better near global solution at the 35th and 29th iterations for the 18-bus and 123-bus systems, respectively.

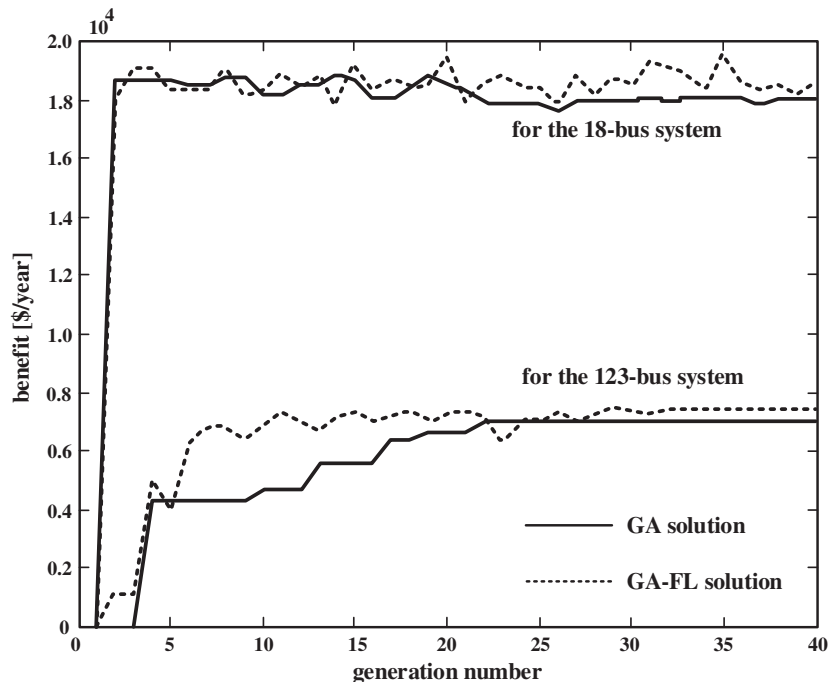


FIG. E11.8.2 Solution progress of the GA-FL and the GA methods for the 18-bus (Fig. E11.3.1) and 123-bus (Fig. E11.8.1) distorted IEEE distribution systems (Table E11.8.3).

The inclusion of objective function and power quality constraints will automatically eliminate all solutions that generate extreme values for voltages and/or currents and prevents fundamental and harmonic parallel resonances.

11.5 Summary

Related to reactive power compensation is the placement and sizing of capacitor banks so that the transmission efficiency can be increased at minimum cost. First filter designs are addressed for sinusoidal conditions. Various optimization methods are described such as analytical methods, numerical programming, heuristic approaches, and artificial intelligence (AI-based) methods. The latter ones comprise genetic algorithms, expert systems, simulated annealing, artificial neural networks, and fuzzy set theory. Furthermore, graph search, particle swarm, tabu search, and sequential quadratic programming algorithms are explained. Thereafter, the optimal placement and sizing of capacitor banks is studied under the influence of harmonics relying on some of the same optimization methods as used for sinusoidal conditions. Thus, the nonsinusoidal case is an extension of the sinusoidal approach. It is recommended that the reader first applies some of the optimization procedures to the sinusoidal case and then progresses to nonsinusoidal conditions.

Eight application examples highlight the advantages and disadvantages of the various optimization methods under given constraints (e.g., THD_v , V_{rms}) and objective functions (e.g., cost). Unfortunately, there is not one single method that incorporates all the advantages and no disadvantages. It appears that the more advanced methods such as fuzzy set theory, genetic algorithms, artificial neural networks, and particle swarm methods are more able to identify the global optimum than the straightforward search methods where the gradient (e.g., steepest decent) is employed guiding the optimization process. This is so because the more advanced methods proceed not along a single trajectory but search for the global optimum within a certain region in a simultaneous manner.

References

- [1] H.N. Ng, M.M.A. Salama, A.Y. Chikhani, Classification of capacitor allocation techniques, *IEEE Trans. Power Deliv.* 15 (1) (2000) 387–392.
- [2] N.M. Neagle, D.R. Samson, Loss reduction from capacitors installed on primary feeders, *AIEE Trans.* 75 (1956) 950–959.
- [3] R.F. Cook, Optimizing the application of shunt capacitors for reactive-voltampere control and loss reduction, *AIEE Trans.* 80 (1961) 430–444.
- [4] J.V. Schmill, Optimum size and location of shunt capacitors on distribution feeders, *IEEE Trans. Power Appar. Syst.* 84 (9) (1965) 825–832.
- [5] N.E. Chang, Locating shunt capacitors on primary feeder for voltage control and loss reduction, *IEEE Trans. Power Appar. Syst.* 88 (10) (1969) 1574–1577.
- [6] Y.G. Bae, Analytical method of capacitor allocation on distribution primary feeders, *IEEE Trans. Power Appar. Syst.* 97 (11) (1978) 1232–1238.
- [7] S.H. Lee, J.J. Grainger, Optimum placement of fixed and switched capacitors on primary distribution feeders, *IEEE Trans. Power Appar. Syst.* 100 (1) (1981) 345–352.
- [8] M.M.A. Salama, A.Y. Chikhani, R. Hackam, Control of reactive power in distribution systems with an end-load and fixed load conditions, *IEEE Trans. Power Appar. Syst.* 104 (10) (1985) 2779–2788.
- [9] H. Duran, Optimum number, location, and size of shunt capacitors in radial distribution feeders, a dynamic programming approach, *IEEE Trans. Power Appar. Syst.* 87 (9) (1968) 1769–1774.
- [10] T.H. Fawzi, S.M. El-Sobki, M.A. Abdel-Halim, New approach for the application of shunt capacitors to the primary distribution feeders, *IEEE Trans. Power Appar. Syst.* 102 (1) (1983) 10–13.
- [11] M. Ponnavaikko, K.S. Prakasa Rao, Optimal choice of fixed and switched shunt capacitors on radial distributors by the method of local variations, *IEEE Trans. Power Syst.* 102 (6) (1983) 1607–1615.

- [12] M.E. Baran, F.F. Wu, Optimal sizing of capacitors placed on a radial distribution system, *IEEE Trans. Power Deliv.* 4 (1) (1989) 735–743.
- [13] T.S. Abdel-Salam, A.Y. Chikhani, R. Hackam, A new technique for loss reduction using compensating capacitors applied to distribution systems with varying load condition, *IEEE Trans. Power Deliv.* 9 (2) (1994) 819–827.
- [14] M. Chis, M.M.A. Salama, S. Jayaram, Capacitor placement in distribution systems using heuristic search strategies, *IEEE Proc. Gener. Transm. Distrib.* 144 (2) (1997) 225–230.
- [15] G. Boone, H.D. Chiang, Optimal capacitor placement in distribution systems by genetic algorithm, *Electr. Power Energy Syst.* 15 (3) (1993) 155–162.
- [16] S. Sundhararajan, A. Pahwa, Optimal selection of capacitors for radial distribution systems using a genetic algorithm, *IEEE Trans. Power Syst.* 9 (3) (1994) 1499–1507.
- [17] K.N. Miu, H.D. Chiang, G. Darling, Capacitor placement, replacement and control in large-scale distribution systems by a GA-based two-stage algorithm, *IEEE Trans. Power Syst.* 12 (3) (1997) 1160–1166.
- [18] J.R.P.R. Laframboise, G. Ferland, A.Y. Chikhani, M.M.A. Salama, An expert system for reactive power control of a distribution system, part 2: system implementation, *IEEE Trans. Power Syst.* 10 (3) (1995) 1433–1441.
- [19] T. Ananthapadmanabha, A.D. Kulkarni, A.S. Gopala Rao, K.R. Rao, Knowledge-based expert system for optimal reactive power control in distribution system, *Electr. Power Energy Syst.* 18 (1) (1996) 27–31.
- [20] N.I. Santoso, O.T. Tan, Neural-net based realtime control of capacitors installed on distribution systems, *IEEE Trans. Power Deliv.* 5 (1) (1990) 266–272.
- [21] Z. Gu, D.T. Rzy, Neural networks for combined control of capacitor banks and voltage regulators in distribution systems, *IEEE Trans. Power Deliv.* 11 (4) (1996) 1921–1928.
- [22] L.A. Zadeh, Fuzzy sets, *Inf. Control.* 8 (1965) 338–353.
- [23] H.C. Chin, Optimal shunt capacitor allocation by fuzzy dynamic programming, *Electr. Power Syst. Res.* 35 (1995) 133–139.
- [24] H.N. Ng, M.M.A. Salama, A.Y. Chikhani, Capacitor allocation by approximate reasoning: fuzzy capacitor placement, *IEEE Trans. Power Deliv.* 15 (1) (2000) 393–398.
- [25] H.N. Ng, M.M.A. Salama, Fuzzy optimal capacitor sizing and placement, in: *Proceedings of Canadian Conference on Electrical and Computer Engineering*, vol. 2, 1995, pp. 680–683.
- [26] J.C. Carlisle, A.A. El-Keib, A graph search algorithm for optimal placement of fixed and switched capacitors on radial distribution systems, *IEEE Trans. Power Deliv.* 15 (1) (2000) 423–428.
- [27] A.H. Mantawy, M.S. Al-Ghamdi, A new reactive power optimization algorithm, in: *IEEE Conference, Bologna, Italy*, 2003.
- [28] H.T. Yang, Y.C. Huang, C.L. Huang, Solution to capacitor placement in a radial distribution system using tabu search method, in: *Proceedings of International Conference on Energy Management and Power Delivery, EMPD 95*, vol. 1, 1995, pp. 388–393.
- [29] H. Mori, Y. Ogita, Parallel tabu search for capacitor placement in radial distribution systems, in: *Proceedings of the IEEE Power Engineering Society Winter Meeting 2000*, 23–27 January 2000, vol. 4, 2000, pp. 2334–2339.
- [30] C.S. Chang, L.P. Lenn, Application of tabu search strategy in solving non-differentiable savings function for the calculation of optimum savings due to shunt capacitor installation in a radial distribution system, in: *Proceedings of the Power Engineering Society Winter Meeting 2000*, 23–27 January 2000, vol. 4, 2000, pp. 2323–2328.
- [31] I.P. Abril, J.A.G. Quintero, VAR compensation by sequential quadratic programming, *IEEE Trans. Power Syst.* 18 (1) (2003) 36–41.
- [32] Capacitor Subcommittee of the IEEE Transmission and Distribution Committee, Bibliography on power capacitors 1975–1980, *IEEE Trans. Power Syst.* 102 (7) (1983) 2331–2334.
- [33] IEEE VAR Management Working Group of the IEEE System Control Subcommittee, Bibliography on reactive power and voltage control, *IEEE Trans. Power Syst.* 2 (2) (1997) 361–370.
- [34] Y. Baghzouz, Effects of nonlinear loads on optimal capacitor placement in radial feeders, *IEEE Trans. Power Deliv.* PD-6 (1) (1991) 245–251.
- [35] Y. Baghzouz, S. Ertem, Shunt capacitor sizing for radial distribution feeders with distorted substation voltage, *IEEE Trans. Power Deliv.* PD-5 (2) (1990) 650–657.
- [36] B. Gou, A. Abur, Optimal capacitor placement for improving power quality, in: *Proceedings of the IEEE Power Engineering Society Summer Meeting 1999*, 18–22 July 1999, vol. 1, 1999, pp. 488–492.
- [37] G. Carpinelli, P. Varilone, V.D. Vito, A. Abur, Capacitor placement in three-phase distribution systems with nonlinear and unbalanced loads, *IEEE Proc. Gener., Transm. Distrib.* 152 (1) (2005) 47–51.

- [38] C.T. Hsu, Y.H. Yan, C.S. Chen, S.L. Her, Optimal reactive power planning for distribution systems with nonlinear loads, in: IEEE Region 10 International Conference on Computer, Communication, Control and Power Engineering TENCON '93, 1993, pp. 330–333.
- [39] Z.Q. Wu, K.L. Lo, Optimal choice of fixed and switched capacitors in radial distributions with distorted substation voltage, *IEE Proc. Gener., Transm. Distrib.* 142 (1) (1995) 24–28.
- [40] M.A.S. Masoum, M. Ladjevardi, E.F. Fuchs, W.M. Grady, Optimal sizing and placement of fixed and switched capacitor banks under nonsinusoidal operating conditions, in: *Proceedings of the IEEE Summer Power Meeting 2002*, 2002, pp. 807–813.
- [41] M.A.S. Masoum, M. Ladjevardi, E.F. Fuchs, W.M. Grady, Application of local variations and maximum sensitivities selections for optimal placement of shunt capacitor banks under nonsinusoidal operating conditions, in: *34th Annual North American Power Symposium*, 2002, pp. 507–515.
- [42] M.A.S. Masoum, A. Jafarian, M. Ladjevardi, E.F. Fuchs, W.M. Grady, Fuzzy approach for optimal placement and sizing of capacitor banks in the presence of harmonics, *IEEE Trans. Power Deliv.* 19 (2) (2004).
- [43] M.A.S. Masoum, M. Ladjevardi, M. Jafarian, E.F. Fuchs, Optimal placement, replacement and sizing of capacitor banks in distorted distribution networks by genetic algorithms, *IEEE Trans. Power Deliv.* 19 (4) (2004).
- [44] M. Ladjevardi, M.A.S. Masoum, Genetically optimized fuzzy placement and sizing of capacitor banks in distorted distribution networks, *IEEE Trans. Power Deliv.* 23 (1) (2008) 449–456, <https://doi.org/10.1109/TPWRD.2007.911185>.
- [45] N. Mohan, T.M. Undeland, W.P. Robbins, *Power Electronics, Converters, Applications and Design*, John Wiley & Sons, USA, 2003.
- [46] A.T. Saric, M.S. Calovic, M.B. Djukanovic, Fuzzy optimization of capacitors in distribution systems, *IEE Proc. Gener., Transm. Distrib.* 144 (5) (1997) 415–422.
- [47] <http://www.abb.com>, Retrieved: Feb. 2005.
- [48] E.H. Mamdani, S. Asilian, An experiment in linguistic synthesis with a fuzzy logic controller, *Int. J. Man Mach. Stud.* 7 (1975) 1–13.
- [49] *IEEE recommended practices and requirements for harmonic control in electric power systems*, IEEE Standard 519-1992, New York, NY, 1993.

This page intentionally left blank

Power quality solutions for renewable energy systems

12.1 Energy conservation and efficiency

The rationale for introducing renewable energy systems lies in the global warming issue [1]. Although the construction and deployment of photovoltaic (PV) and wind power (WP) systems are important, equally significant is energy conservation and energy storage to guarantee a reliable and safe operation of interconnected power systems and stand-alone (micro) grids. In both types of systems voltages, real and reactive powers, as well as frequency must be controllable including the realization of minimum power quality requirements. Important aspects, in addition to the improvement of the efficiency of power system components including lighting equipment and appliances, are the reduction of energy requirements for residential dwellings, office buildings, manufacturing facilities, and efficient transportation via automobiles and rail systems. Note that an energy unit saved means it does not need to be generated by renewable sources. Heating in winter amounts on average to about 70% of the energy consumption in households [2].

12.1.1 Future plans for implementation of renewable energy sources: Europe

Provided Germany reduces its energy consumption by 35% within the next 10 years then the cost/kWh would be reduced from 0.28 to 0.15 Euro, excluding value-added tax. Investments for conventional (natural gas) power plant would be minimized, and newly to be installed high-voltage AC and DC transmission lines could be reduced from 8500 km to 1750–5000 km. The energy efficiency is called in [3] a “sleeping giant.” To make the European Union (EU) countries less dependent upon imported natural gas and oil, the EU’s recommendation is to increase the renewable energy portfolio to 27% by 2030 [4]. This will be very challenging because in 2013 the total renewable energy consumption was in the EU 14% [5] and in Germany 11.5% [6]. The renewable energy portfolio can be increased by installing storage plants and reducing base-load power plants, otherwise Northern Europe’s storms send wind

turbines spinning and help strengthen a new phenomenon for the region—negative electricity prices [7]. In Germany, 23.4% of the electricity generated originated in solar, hydro, and biomass plants in 2013 [8]. The first international off-shore grid is planned with the name “Offshore Interkonnektor” [9]: electricity between Central Europe and the Scandinavian countries Denmark and Sweden will be generated in the Baltic Sea connecting for the first time two national off-shore wind farms. The EU is determined to increase by 2020 the renewable energy percentage to 20% [5]. The EU parliament intends to accelerate climate protection by reducing electricity consumption: in 2030 EU’s energy consumption should be reduced by 40% and the CO₂ output could be reduced by the same percentage [10]. It is interesting to note that the United Kingdom plans to increase the nuclear and PV plant capacities, while France intends to scale back [11]. To make all plants work in unison time-synchronized measurement are employed to improve grid performance and reliability. Using time-synchronized measurements [12], one can improve local- and wide-area protection and control, state monitoring, power system modeling, and forensic event analysis.

12.1.2 Application example 12.1: Efficient residence in Germany where photovoltaic (PV) generation exceeds total energy consumption

A very good example for energy consumption reduction of a residential dwelling, a single-family house, is presented in Fig. E12.1.1 illustrating a 220m² house with traditional three levels (basement, 1st and 2nd floors) built in 2013 with insulated clay bricks combined with humidity-absorbing plaster [13], rated peak power PV plant of 6.48 kW_p @ US\$3600/kW, and triple-pane large windows [14].



FIG. E12.1.1 High-efficiency, single-family dwelling with PV system and ground-water heat pump. (Courtesy of E. F. Fuchs).

The energy passport of this building [15] is depicted in Fig. E12.1.2, where the “energy consumption in house” (Endenergiebedarf) per square meter is $18 \text{ kWh}/(\text{m}^2 \cdot \text{a})$ and the “primary energy consumption” (Primärenergiebedarf), which represents the energy consumption in house for heating and cooling as well as energy required to process and provide the energy consumption in house (e.g., energy required for natural gas drilling and pipeline operation) and is $46 \text{ kWh}/(\text{m}^2 \cdot \text{a})$. These two values represent predicted values—based on calculations—before the house was constructed. Note “a” means annual.

As of 2014 the energy savings regulations (Energieeinsparverordnung, EnEV) in Germany requires that the total energy consumption of newly constructed residences be reduced by 25%, and furnaces/boilers more than 30 years old must be replaced by more efficient ones.

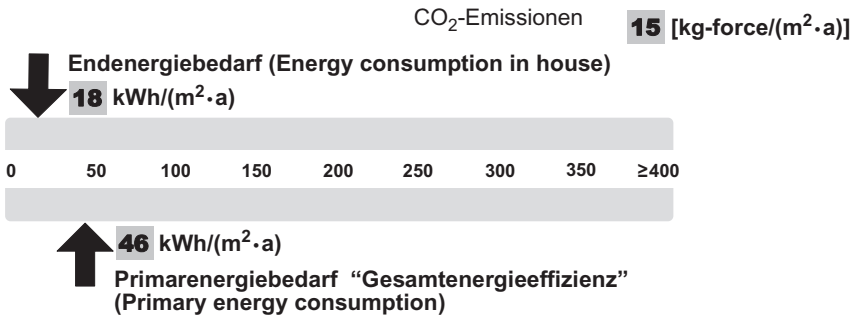


FIG. E12.1.2 Energy disclosure for single-family dwelling of Fig. E12.1.1 without PV system [15].

To check the energy (E) generation and consumption of the house, daily readings of the following energy components were recorded and averaged for each week during 1 year from July 14, 2013, to July 14, 2014:

- (a) generated DC energy (EL_i) by PV system feeding two inverters (I) during week i ,
- (b) supplied energy (EG_i) to the utility grid (G) by PV system during week i ,
- (c) consumed energy (EHC_i) for heating (H) and cooling (C) during week i , and
- (d) consumed energy (ELA_i) by lighting (L) and appliances (A) during week i .

The floor-heating of the house maintained the bedroom temperatures at $17\text{--}20^\circ\text{C}$ and all other rooms at $20\text{--}22^\circ\text{C}$. The residence is equipped with a 7.64 kW ground-water heat pump [16]. During summer the cooling of the house is via floor-cooling using ground-water (e.g., $8\text{--}11^\circ\text{C}$) maintaining room temperatures at less than 24°C . The above described generation (EL_i), energy fed-into grid (EG_i), energy requirements for both heating (including hot water heating during entire year for kitchen and baths) and cooling modes (EHC_i) as well as the energy supplied by the utility (ELA_i) are reflected in Fig. E12.1.3 and Table E12.1.1, where 7 corresponds to the days per week:

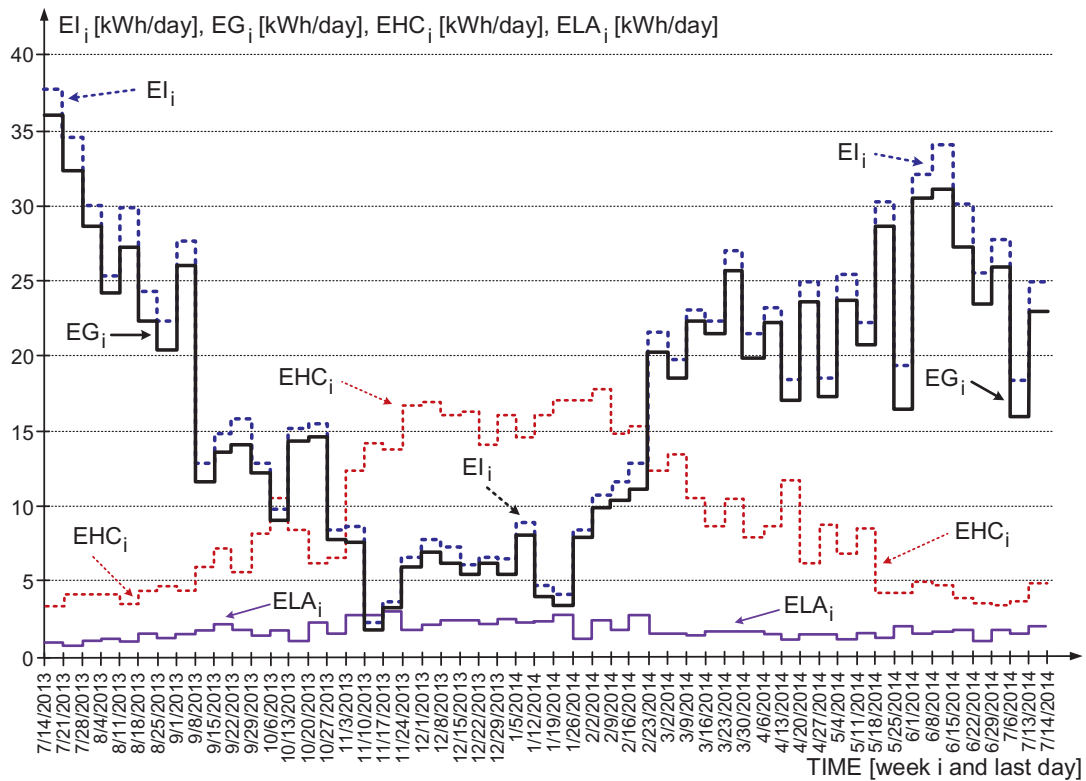


FIG. E12.1.3 Weekly average energy readings per day for EI_i , EG_i , EHC_i , and ELA_i taken over 1 year from July 14, 2013, to July 14, 2014, where cost of high tariff for EHC_i is €0.18/kWh = US\$0.25/kWh, cost of low tariff for EHC_i is €0.16/kWh = US\$0.22/kWh, and cost for ELA_i is €0.27/kWh = US\$0.37 at a flat rate/base price of €67/year = US\$94/year, without value-added tax of 19%.

TABLE E12.1.1 Daily average energy readings per week from July 14, 2013, to July 13, 2014, and on 14 July.

Week i	EI_i (kWh/day)	EG_i (kWh/day)	EHC_i (kWh/day)	ELA_i (kWh/day)
7/21/2013	37.57	36.14	3.29	0.86
7/28/2013	33.86	32.43	3.86	0.71
8/4/2013	29.86	28.57	3.86	0.86
8/11/2013	25.43	24.29	3.86	1.00
8/18/2013	29.14	27.43	3.43	0.86
8/25/2013	24.14	22.29	4.29	1.57
9/1/2013	21.86	20.43	4.71	1.14
9/8/2013	27.57	26.14	4.29	1.43
9/15/2013	12.86	11.43	6.14	1.71

TABLE E12.1.1 Daily average energy readings per week from July 14, 2013, to July 13, 2014, and on 14 July—cont'd

Week i	EL_{i} (kWh/day)	EG_{i} (kWh/day)	EHC_{i} (kWh/day)	ELA_{i} (kWh/day)
9/22/2013	14.86	13.57	7.00	1.86
9/29/2013	15.57	14.14	5.57	1.71
10/6/2013	12.89	12.11	7.60	1.31
10/13/2013	9.83	9.03	10.54	1.69
10/20/2013	15.14	14.29	8.29	1.14
10/27/2013	15.29	14.43	6.14	2.14
11/3/2013	8.43	7.86	6.29	1.43
11/10/2013	8.71	7.57	12.29	2.86
11/17/2013	2.43	1.86	13.86	2.57
11/24/2013	3.43	2.57	13.71	2.86
12/1/2013	6.57	5.86	16.57	1.71
12/8/2013	7.57	6.86	16.71	1.86
12/15/2013	7.14	6.14	15.86	2.43
12/22/2013	6.14	5.29	16.00	2.43
12/29/2013	6.71	6.00	13.86	1.71
1/5/2014	6.29	5.14	16.00	2.43
1/12/2014	8.86	7.86	14.43	2.00
1/19/2014	4.57	3.86	16.14	2.14
1/26/2014	4.14	3.29	16.71	2.57
2/2/2014	8.43	8.00	16.71	1.14
2/9/2014	10.57	9.57	17.57	2.43
2/16/2014	11.71	10.43	14.57	1.71
2/23/2014	12.71	11.14	15.29	2.71
3/2/2014	21.33	20.38	12.38	1.43
3/9/2014	19.52	18.33	13.33	1.43
3/16/2014	23.14	22.14	10.43	1.29
3/23/2014	22.43	21.29	8.57	1.43
3/30/2014	26.86	25.57	10.29	1.43
4/6/2014	21.29	19.86	7.86	1.43
4/13/2014	23.14	22.00	8.57	1.29

Continued

TABLE E12.1.1 Daily average energy readings per week from July 14, 2013, to July 13, 2014, and on 14 July—cont'd

Week <i>i</i>	EI _{<i>i</i>} (kWh/day)	EG _{<i>i</i>} (kWh/day)	EHC _{<i>i</i>} (kWh/day)	ELA _{<i>i</i>} (kWh/day)
4/20/2014	18.29	16.86	11.29	1.14
4/27/2014	24.86	23.71	6.14	1.29
5/4/2014	18.57	17.00	8.71	1.29
5/11/2014	25.43	23.71	6.29	1.14
5/18/2014	22.14	20.57	8.43	1.29
5/25/2014	31.00	28.57	3.86	1.14
6/1/2014	19.43	16.29	5.86	1.86
6/8/2014	32.00	30.43	4.86	1.43
6/15/2014	34.00	31.14	4.71	1.43
6/22/2014	30.29	27.14	3.86	1.57
6/29/2014	25.46	23.51	3.63	1.14
7/6/2014	28.26	25.91	3.37	1.57
7/13/2014	18.29	16.00	3.71	1.43
Day 7/14/2014	25.00	23.00	5.00	2.00

Readings were taken at the end of each day for 52 weeks and 1 day resulting in 365 days.

Note that $EI = 7 \cdot \sum_{i=1}^{52} EI_i + EI_{7/14/2014} = 6577 \text{ kWh/year}$, $EG = 7 \cdot \sum_{i=1}^{52} EG_i + EG_{7/14/2014} = 6088 \text{ kWh/year}$, $EHC = 7 \cdot \sum_{i=1}^{52} EHC_i + EHC_{7/14/2014} = 3376 \text{ kWh/year}$, and $ELA = 7 \cdot \sum_{i=1}^{52} ELA_i + ELA_{7/14/2014} = 593 \text{ kWh/year}$.

The predicted value of $18 \text{ kWh}/(\text{m}^2 \cdot \text{a})$ can be checked using some of the values (EHC_i) related to either Fig. E12.1.3 or Table E12.1.1 as follows, where 7 corresponds to the days per week:

With $7 \cdot \sum_{i=1}^{52} EHC_i + EHC_{7/14/2014} + 7 \cdot \sum_{i=1}^{52} ELA_i + ELA_{7/14/2014} = (3376 + 593) \text{ kWh/year} = 3969 \text{ kWh/year}$,

energy consumption in house without PV system

$$\begin{aligned}
 &= \{\text{energy input or energy consumption in house on July 14, 2014}(EHC + ELA) \\
 &\quad - \text{energy input or energy consumption in house on July 14, 2013}(EHC + ELA)\} / 220 \text{ m}^2 \cdot \text{a} \\
 &= \{5982 \text{ kWh} - 2013 \text{ kWh}\} / 220 \text{ m}^2 = 3969 \text{ kWh} / 220 \text{ m}^2 \\
 &= 18.04 \text{ kWh}/\text{m}^2 \cdot \text{a}, \text{ where "a" stands for annum} \quad (\text{E12.1.1a})
 \end{aligned}$$

This measured value is about the same as predicted by the energy disclosure ($18 \text{ kWh}/(\text{m}^2 \cdot \text{a})$) of Fig. E12.1.2 based on calculations of König [15], where the energy saving through the heat pump (COP_H = coefficient of performance) is disregarded. If the generation of the PV system is taken into account via net metering—discussed later—then the energy coefficient of the house will be greatly reduced. Fig. E12.1.3 (EI_i) depicts the generation of the PV system as a function of time from July 14, 2013, to July 14, 2014. The $\text{CO}_2 = 15 \text{ (kg-force)}/(\text{m}^2 \cdot \text{a})$ emission (Fig. E12.1.2) will be greatly reduced as well, and will approach zero.

The total generated electric energy EI is for this time span 6577 kWh/year taking the inverter efficiency of 0.96 into account one obtains the generated energy available at the meter $EI_{\text{meter}} = EI_{\text{out}} = 0.96 \cdot 6577 \text{ kWh/year} = 6313.9 \text{ kWh/year}$. Therefore, one obtains:

energy consumption in house taking PV generation into account

$$= \left\{ \text{energy consumption on July 14, 2014 (EHC + ELA)} - \text{energy consumption on July 14, 2013 (EHC + ELA)} - \text{generation of PV system (EI}_{\text{out}}) \right\} / (220 \text{ m}^2 \cdot \text{a})$$

$$= (5982 \text{ kWh} - 2013 \text{ kWh} - 6313.9 \text{ kWh}) / (220 \text{ m}^2 \cdot \text{a}) = -10.66 \text{ kWh} / (\text{m}^2 \cdot \text{a}),$$

again the energy saving through the heat pump ($\text{COP}_H = \text{coefficient of performance}$) is disregarded (E12.1.1b)

This modified energy coefficient corresponds to that of the “passive house” construction [17], and it is negative which is even better. Because of utility policy, the PV system does not supply the water-to-water heat pump system with electricity.

The average coefficient of performance [1] of the heat pump is from April 2013 to November 2014 with the measured heat energy $Q_H = 25,070 \text{ kWh}$ as provided by the heat pump and $(P_{\text{compressor}} + P_{\text{water handlers}}) = \text{EHC} = (P_{\text{compressor}} + P_{\text{water handlers}}) = 6299 \text{ kWh}$

$$\text{COP}_H = Q_H / (P_{\text{compressor}} + P_{\text{water handlers}}) = 25,070 / 6299 = 3.98, \quad (\text{E12.1.2a})$$

corresponding to a seasonal energy efficiency ratio (SEER) of

$$\text{SEER} = 3.413 \cdot \text{COP}_H = 13.58 \quad (\text{E12.1.2b})$$

which corresponds to a low-efficiency heat pump. However, if the $P_{\text{water handlers}}$ required for cooling is neglected in (E12.1.2a) during the summer season then the COP_H will be somewhat above 4. High-efficiency [1] heat pumps have $\text{COP}_H = 5.57$ or $\text{SEER} = 19$. This means there is still room for efficiency increase, requiring higher investment costs.

The feed-in compensation of the PV power fed-into the public utility system is Euro symbol 0.18€/kWh = US\$ 0.25/ kWh: of this amount a value-added tax of 19% must be paid in Germany. The feed-in arrangement is shown in Fig. E12.1.4 where the supply ELA from utility is the all-time available electricity, EHC includes the high- and low-tariff electricity available from utility only at certain times during working days, nights, weekends and holidays.

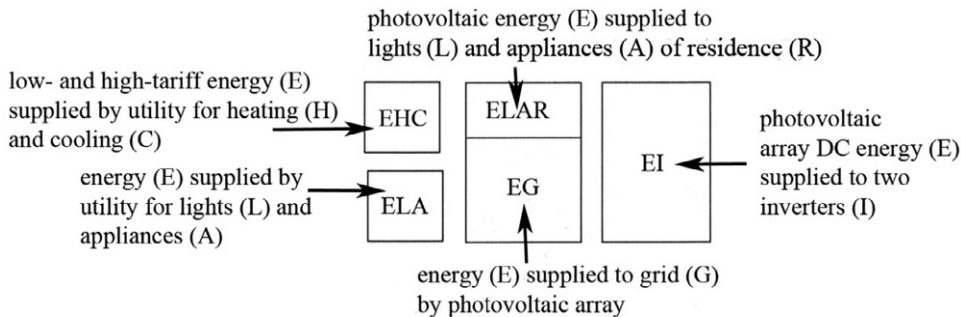


FIG. E12.1.4 Feed-in tariff arrangement: supply of energy by utility at any time ELA, photovoltaic array DC generation EI consisting of self-consumption ELAR and energy delivered to utility EG. The low- and high-tariff energy for heating and cooling EHC is supplied by utility at certain times only. (Courtesy of Stadtwerke München).

The ELA is about 1.65 kWh/day and in addition about 0.6 kWh/day are supplied by the PV plant, that is, self-consumption (e.g., lights, appliances, outlets, electronic equipment) is about 2.25 kWh/day, which amounts to about 13% of the total generated PV power $0.96 \cdot EI = 6313.9$ kWh/year. Comparing the graphs of Fig. E12.1.3, one notes that energy consumption EHC is highest and energy generation (EI or EG) is lowest during winter. Correspondingly, during summer, energy consumption is lowest—even if cooling is employed—and energy generation is highest. This oppositeness calls for long-term storage facilities such as hydro-pump [18,19] and compressed-air [20,21]. According to Fig. E12.1.3 from October to February (EHC + ELA) is larger than $\{EG + (ELAR = 365 \text{ days} \cdot 0.6 \text{ kWh/day} = 219 \text{ kWh/year})\}$ requiring storage plant at the residence such as batteries or fuel cells. New hydro pump-storage plants are planned in the Black Forest [22] and the Bavarian alpine regions of Germany [23,24]. As expected in both cases recreationists oppose these new necessary storage plants.

Comparing the annual energy yield of the 6.15 kW_p PV plant with one inverter in Boulder, Colorado [1] with the 6.48 kW_p PV plant with two inverters in Munich, Germany, one concludes that for the same array conditions (although the peak power limitation of 70% in Munich is disregarded, which is effective on very sunny days only)

$$(\text{energy yield in Munich})/(\text{energy yield in Boulder})_{\text{measured}} = 6242.1/7953 = 0.785, \quad (\text{E12.1.3a})$$

where the measured energy yield EI in Boulder [1] during 1 year (12/31/2008 to 12/31/2009) for the 6.15 kW_p plant = $18,370 \text{ kWh} - 10,417 \text{ kWh} = 7953 \text{ kWh/year}$, and the measured energy yield EI in Munich (7/14/2013 to 7/14/2014) for an equivalent 6.15 kW_p plant is $(6.15 \text{ kW}_p / 6.48 \text{ kW}_p) \cdot 6577 \text{ kWh/year} = 6242.1 \text{ kWh/year}$. The ratio (E12.1.3a) is approximately confirmed through calculations using National Renewable Energy (NREL) software [25] resulting in

$$(\text{energy yield in Munich})/(\text{energy yield in Boulder})_{\text{predicted by NREL software}} \approx 0.65. \quad (\text{E12.1.3b})$$

The above significant difference may lie in the use of two inverters in the Munich plant minimizing cloud influence as compared to using one inverter in Boulder, whereby in the Munich 6.48 kW_p residential PV plant two inverters each process approximately half the rated power. In addition the environmental conditions (temperature, snow coverage, clouds) might be somewhat different during 2008/2009 and 2013/2014 time frames. Inverters have an efficiency of about 96%. This was measured when there was no electrical consumption in the house during a sunny day (7/21/2013) in Munich when the generated power was $EI_{7/21/2013} = 37.57 \text{ kWh}$ and the corresponding delivered power to the grid was $EG_{7/21/2013} = 36.14 \text{ kWh}$ resulting in a total inverter efficiency of $\eta_{\text{inverter}} = 36.14/37.57 \approx 0.96$.

12.1.3 Application Example 12.2: Energy conservation within residences

The appliances, e.g., LED (light emitting diode) lights [26], refrigerator, induction-type stove in a dwelling consume very little energy as compared to heating of the house. As for the induction-type stove, one must be aware that the induced energy in the bottom of pots

is based on a frequency in the range of 20–50 kHz [27]. For control of the induction heat either burst-current (Fig. E12.2.1) or phase-angle current (Fig. E12.2.2A,B) control schemes are applied. Both methods cause power quality problems due to the generation of integer and noninteger current (sub) harmonics. Also, persons with heart pacemakers should keep some distance from the induction-type stove [28]. LED lights are equipped with peak rectifiers [29] generating all odd current harmonics when connected to a single-phase voltage including a dominant 3rd current harmonic. The high efficient residence exhibits a greater current harmonic total distortion THD_i than low efficient houses equipped with incandescent light bulbs and resistive electric stoves representing linear loads.

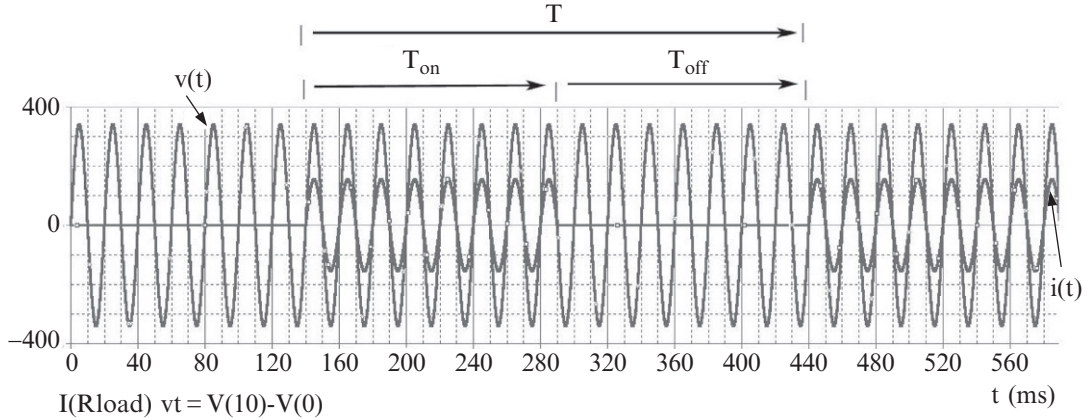


FIG. E12.2.1 Burst-current $i(t)$ control where T_{on} is the on time and $T = T_{on} + T_{off}$ is the time of the burst period; $v(t) = V(10) - V(0)$ is the terminal voltage of Fig. E12.2.2A.

Calculation of the output power P as a function of the duty ratio/cycle T_{on}/T and rated power P_{rat} :

$$P = P_{rat} \frac{T_{on}}{T}. \quad (E12.2.1)$$

Calculation of the root-mean-squared (rms) voltage V_{t_rms} as a function of the duty ratio T_{on}/T and the rated voltage $V_{t_rms_rat}$:

$$V_{t_rms} = V_{t_rms_rat} \sqrt{\frac{T_{on}}{T}}. \quad (E12.2.2)$$

Fig. E12.2.2A represents a simple circuit for phase-angle current control. The firing angle α can be generated by implementing the gating circuits of the thyristors which are modeled by self-commutating switches (MOSFETs) and diodes (D) in series, as described in [1, Chapter 5].

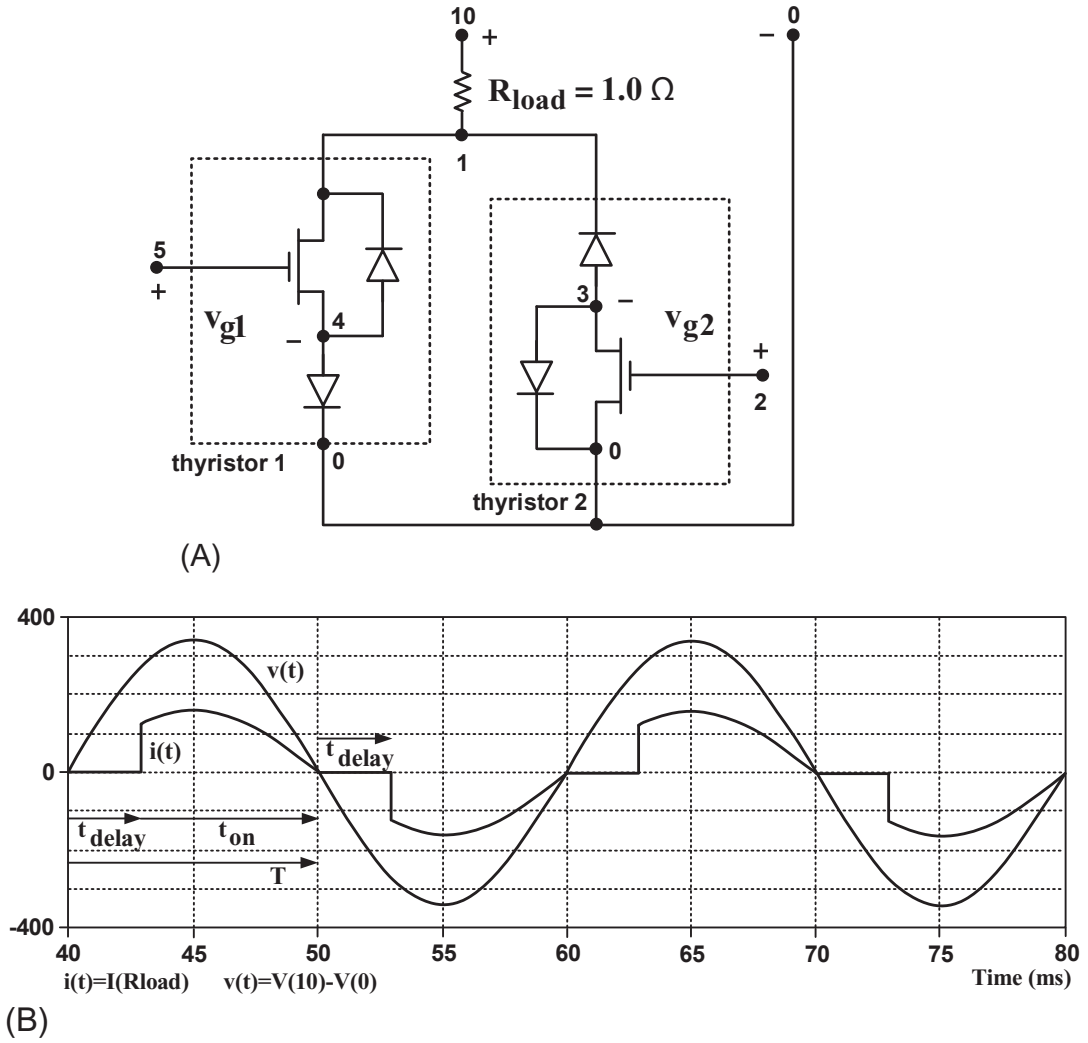


FIG. E12.2.2 (A) Circuit for single-phase, phase-angle current control where thyristors are modeled by a self-commutating switch (MOSFET) in series with a diode (D), see Chapter 5 of [1]. (B) Phase-angle current control of a $v(t) = V(10) - V(0) = V_{t_rms_rat} = |\tilde{V}_{t-n}| = 240$ V AC voltage after a current delay time of $t_{delay} = 3$ ms corresponding at $f = 50$ Hz to a firing angle of $\alpha = (3 \text{ ms} / 20 \text{ ms}) \cdot 360 = 54^\circ$, and $v_{t_max} = \sqrt{2} V_{t_rms_rat}$ where t stands for terminal. $T = t_{delay} + t_{on}$.

Calculation of the root-mean-squared (rms) voltage V_{t_rms} as a function of the ratio t_{delay} / T and the rated voltage $V_{t_rms_rat}$ for phase-angle voltage control:

$$V_{t_rms} = V_{t_rms_rat} \sqrt{1 - \frac{t_{delay}}{T/2} + \frac{1}{2\pi} \sin \left(2\pi \frac{t_{delay}}{T/2} \right)}. \quad (\text{E12.2.3})$$

The 7.64kW groundwater (at about 10°C ground-water temperature during the entire year) heat pump provides the floor-heating system with warm water between 24°C and 30°C, and the hot water tank with 45–50°C, whereby the cold season outside temperatures varied mostly between –10°C and +15°C. Air heat pumps appear not to be very efficient during very cold spells (less than 0°C outdoor temperature [30]). To further increase the heating efficiency of the house, heat exchangers can be employed where ventilated warm air heats the incoming fresh air [31]. This is especially important to avoid mold [32] in houses due to humidity generated by humans. During the warm season when the outside temperature varies between 25°C and 40°C the groundwater is circulated via heat exchangers through the piping within the floor and used for cooling, maintaining the room/house temperature below 24°C. The increase of the thermal efficiency of a house is important because about 20% of the total energy consumption in Germany is used for residences, and 40% of the total consumed energy is used for heating and cooling of all buildings—residential, commercial, and industrial [33]. This is the reason why the German Renewable Energy Act [34, Appendix 1, A] (Erneuerbare-Energien-Gesetz, EEG) was designed to encourage cost reductions based on improved energy efficiency from economies of scale over time. The EU and German Requirements on Energy Efficiency of Residential Buildings—the Energy Conservation Act (Energieeinspargesetz, EnEG) complement the EEG providing Energy Savings Regulations (Energieeinsparverordnung, EnEV) [34]. As of November 1, 2020 the (Gebäudeenergiegesetz) GEG replaces the EnEG and the EnEV. To date residential consumers in Germany pay about additional €0.0624/kWh for the switch from conventional electric energy generation based on coal, gas and nuclear plants to renewable sources, the so-called energy turnaround (Energiewende) amounting to an electricity price of about 0.33 Euro/kWh including value-added tax. In 2013 renewable energy generation represents 24.5%, and it is anticipated that by 2025 renewable generation will be 45%.

Lesser sources of energy are the geothermal sources, which have water temperatures of about 93°C [35] and are mainly used for district heating. Cogeneration (either electricity and heat or electricity and cooling) as well as tri-generation (electricity, heat, and cooling) [36] are part of the generation portfolio. Environmentally sound approaches are biomass [37] and nonrecyclable trash power plants [38] in the range of 10MW.

The deployment of PV and WP plants entails the use of rectifiers and inverters generating harmonics and unwanted electrical noise such as reverse-recovery currents [1]. The magnitude of the DC input voltage of inverters determines the displacement (power) factor angle of the output current: the larger the DC voltage the greater a leading (consumer system) displacement (power) factor angle is possible. To keep the DC voltage of an inverter as low as possible, a power factor of $\cos \varphi \approx 1$ is generally preferred. The distributed nature of the renewable sources makes harmonic compensation and elimination more difficult than in a conventional power system with central power stations, where fewer harmonic sources make voltage control through optimal placement of capacitors easier. The large conventional sources such as natural gas, coal and nuclear plants serve as frequency leaders, even in systems employing renewable distributed sources.

Recent publications [39–41] address the issue of supplying residences with DC power directly from PV and WP systems without DC/AC conversion, therefore avoiding the losses in transformers and rectifier/inverter systems. These losses can amount to about 8% at rated operation.

12.1.4 Tiered energy rates

To encourage conservation of energy in residences within the European countries progressive energy rates could be introduced. As a function of persons living in a residence, their energy consumption, and their income level " $f(y)$ " the lowest tier of energy should pay " $f(y) \cdot \text{Euro}/(\text{unit of energy})$," the second tier should pay " $2f(y) \cdot \text{Euro}/(\text{unit of energy})$," the n th tier should pay " $nf(y) \cdot \text{Euro}/(\text{unit of energy})$." This tiered structure of energy rates will encourage conservation so that less wealthy households have access to a minimum amount of energy while wealthy households will have to pay for their excessive energy consumption. Energy is a good which must be available to all populations, not only for the richest group. Of course such a tiered structure should be introduced in some form in all countries, not only in Europe.

12.1.5 Solutions to power quality problems

Conservation of energy is taking place in Germany: the total electrical energy consumption in 2008 was 641 TWh while in 2013 it was 629 TWh [42], where T stands for tera (10^{12}). The above tiered energy rates may hasten this conservation process. In a complementary manner, the generated electricity originating in solar, wind, hydro, and biomass power plants increased in 2013 to (average) 23.4% [43–45]. Transients due to reverse-recovery currents and switching actions as well as (sub)harmonic currents and voltages caused by burst-current/voltage and phase-angle current/voltage controls can be eliminated by passive and active filters as discussed in Chapter 10. The design of highly efficient drives (e.g., pumping) relies on variable-speed drives causing harmonic currents and voltages as well. Utilities impose in Germany a 70% limit of the peak power of a PV plant [34] in order to limit the variability of the PV power plant output. The solution to this restriction is the construction of short- and long-term storage plants discussed later which rely on rectifiers and inverters causing harmonics in the power network.

12.2 Photovoltaic and thermal solar (power) systems

12.2.1 System integrated mode

At present, the integration of renewable energy sources into the interconnected power system is the predominant mode of operation. This represents challenges for the engineer such as harmonic current/voltage control, power-factor compensation associated with fundamental voltage [46–48] and frequency control [49]. Before 1940 the interconnected power system was not generally in use. Major advantages of interconnection are the power exchange between neighboring power companies and the reduction of reserve capacity. The transmission of renewable energy from high-energy density generation areas (e.g., hydro plants, off-shore wind farms) to high-energy density consumption areas (e.g., cities, manufacturing facilities) is possible with AC and DC high-voltage transmission lines. The latter is in operation, for example, from the Northwest USA to the Los Angeles area [50] at a maximum transmission power capability of 2000 MW. Interconnected systems are more prone to cascaded failure than stand-

alone systems, as has been experienced in the past [51], if sufficient safety and reliability measures are not in place. In addition the susceptibility to geomagnetic disturbances is greater for wide-area interconnected grids [52–54] near igneous rock formations (e.g., Rocky Mountains). For this reason provisions for security, self-healing, reliability, and intentional islanding maintaining power system operation during major emergencies must be in place [55]. Thermal solar systems on roofs in residences [56] in the kW range or on industrial buildings in the 100MW range are relied on for preheating warm water. Thermal systems in the MW range using mirrors [57] are mostly employed for large-scale applications.

12.2.2 Stand-alone mode

Stand-alone or micro grids in particular have the advantage of higher efficiency than interconnected systems because the transmission losses are 8% to 15% smaller. To date WP sources are not tolerated within city limits due to visual impact and acoustic noise [58]. Thermal [56,57] and PV sources are acceptable. However, they require back-up sources such as diesel generators [59] and long-term storage facilities [60] such as batteries (e.g., flow batteries) and short-term storage such as batteries, DC capacitor banks or flywheels [61]. In micro grids, inverters mostly supply the currents from renewable sources operating preferably at unity power factor/displacement factor to keep the DC input voltage of the inverters as low as possible. The frequency control becomes more difficult compared with an interconnected system due to the lack of a clear frequency leader [49].

12.2.3 Solutions to power quality problems of photovoltaic and thermal solar systems

To accommodate wind, PV and thermal solar power plants located at distant locations from the consumers it is recommended to build additional AC and DC transmission lines. This calls for the application of fundamental, harmonic [46–50] and transient [62] power flow programs which are readily available. Although some engineers have the vision of a grid with completely renewable but intermittently operating sources, the question of the frequency leader within the power pool must be addressed. This can be done by either natural-gas fired, hydro or long-term storage plants, as will be discussed later.

12.2.4 Custom power devices

The most important components for renewable energy systems containing PV and variable-speed WP plants are rectifiers and inverters where the harmonic content and the displacement [1] and power factors can be controlled. Note the displacement factor refers to fundamental voltages and currents while the power factor takes into account harmonics as addressed in preceding chapters.

12.2.4.1 *Pulse-width-modulated (PWM) rectifier*

Rectifiers are an integral part for the conversion of AC to DC of most intermittently operating renewable sources such as PV, WP, and storage plants. Fig. 12.1 shows one type of

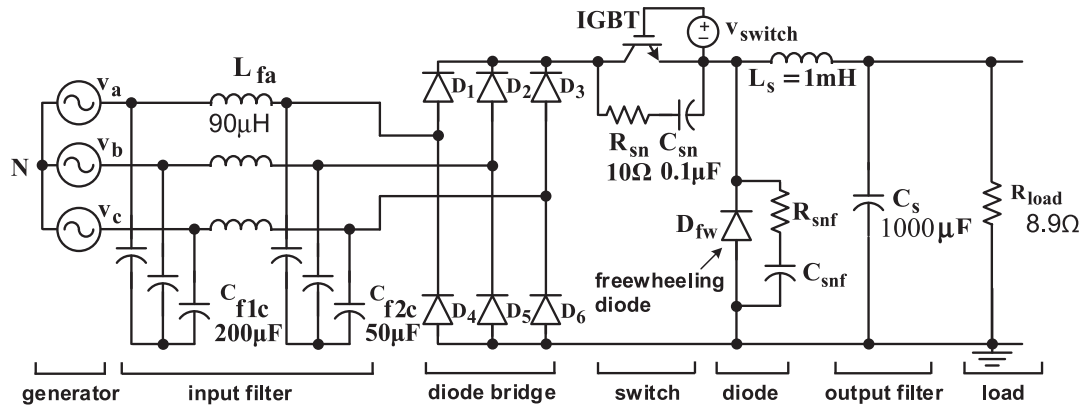


FIG. 12.1 Controlled three-phase rectifier with self-commutated switch.

rectifier which is used within a three-phase power system. This rectifier is analyzed with PSpice [63] where the input output voltages can be determined as a function of the duty cycle [1,64]. The PSpice program is listed in Table 12.1 and the computed results are given in Table 12.2. Fig. 12.2A and B illustrate some of the results of Table 12.2.

Reverse-recovery currents [1]: When semiconductor switches (e.g., diodes, thyristors, MOSFETs, IGBTs) are experiencing a change of polarity of applied voltage (e.g., from forward biased to reverse biased, and vice versa) reverse-recovery currents occur due to the device (parasitic) capacitances. For the circuit of Fig. 12.3A the input current i_{in} , and input and output voltages are computed, where $R = 10 \Omega$, $C = 100 \mu F$, and firing angle $\alpha = 30^\circ$; all other data can be found in the PSpice program listed in Chapter 5 of [1]. In Fig. 12.3B, the input current i_{in} exhibits large negative current spikes. These large reverse-recovery currents of the thyristors can be reduced by introducing small inductances in the range of nH between T_1 and T_4 , as well as between T_3 and T_2 of Fig. 12.3A.

TABLE 12.1 PSpice input program for PWM rectifier operation.

```
*Controlled three-phase rectifier
*input voltages
VaN 1 0 sin(0 465 60 0 0 0)
VbN 2 0 sin(0 465 60 0 0 -120)
VcN 3 0 sin(0 465 60 0 0 -240)
*switch gating signal of 3kHz
vg 15 12 pulse(0 50 10u 0n 0n 166.6u 333u)
*diodes
D1 5 9 ideal
D2 10 7 ideal
D3 6 9 ideal
D4 10 5 ideal
D5 7 9 ideal
D6 10 6 ideal
Df 10 12 ideal
*input filter
```

TABLE 12.1 PSpice input program for PWM rectifier operation—cont'd

```

Lfa 1 5 90u
Lfb 2 6 90u
Lfc 3 7 90u
Cfa 1 4 200u
Cfb 2 4 200u
Cfc 3 4 200u
Rf1 4 10 10meg
Cf2a 5 8 50u
Cf2b 6 8 50u
Cf2c 7 8 50u
Rf2 8 10 10meg
*switch
MOS 9 15 12 12 SMM
*snooper resistors and capacitors
Rsn 9 11 10
Csn 11 12 0.1u
Rsnf 12 13 10
Csnf 13 10 0.1u
*output filter and load resistor
Ls 12 14 0.001
Cs 14 10 1000u
Rload 14 10 8.9
*Model for MOSFET
.model SMM NMOS(level=3 gamma=0 kappa=0 tox=100n rs=0 kp=20.87u l=2u w=2.9
+delta=0 eta=0 theta=0 vmax=0 xj=0 uo=600 phi=0.6 vto=0 rd=0 cbd=200n pb=0.8
+mj=0.5 cgso=3.5n cgdo=100p rg=0 is=10f)
*diode model
.model ideal d(is=1p)
*options for improvement of convergence
.options abstol=10u chgtol=10p reltol=0.1 vntol=100m itl4=200 itl5=0
.tran 0.5u 350m 300m 0.5m
*plotting software
.probe
*fourier analysis
.four 60 60 I(Rload)
.end

```

TABLE 12.2 Dependency of the input voltage $V_{aN \max}$ of a three-phase rectifier for a given output voltage and current $V_{DC \text{ load}}$ and $I_{DC \text{ load}}$, respectively, as a function of the duty cycle δ .

$\delta = 0.05$	$I_{DC \text{ load}} = 45.05 \text{ A}$	$V_{DC \text{ load}} = 400.95 \text{ V}$	$V_{aN \max} = 3000 \text{ V}$
$\delta = 0.25$	$I_{DC \text{ load}} = 45.29 \text{ A}$	$V_{DC \text{ load}} = 403.08 \text{ V}$	$V_{aN \max} = 890 \text{ V}$
$\delta = 0.50$	$I_{DC \text{ load}} = 45.22 \text{ A}$	$V_{DC \text{ load}} = 402.46 \text{ V}$	$V_{aN \max} = 465 \text{ V}$
$\delta = 0.75$	$I_{DC \text{ load}} = 45.40 \text{ A}$	$V_{DC \text{ load}} = 404.06 \text{ V}$	$V_{aN \max} = 320 \text{ V}$
$\delta = 0.95$	$I_{DC \text{ load}} = 45.16 \text{ A}$	$V_{DC \text{ load}} = 401.92 \text{ V}$	$V_{aN \max} = 256 \text{ V}$

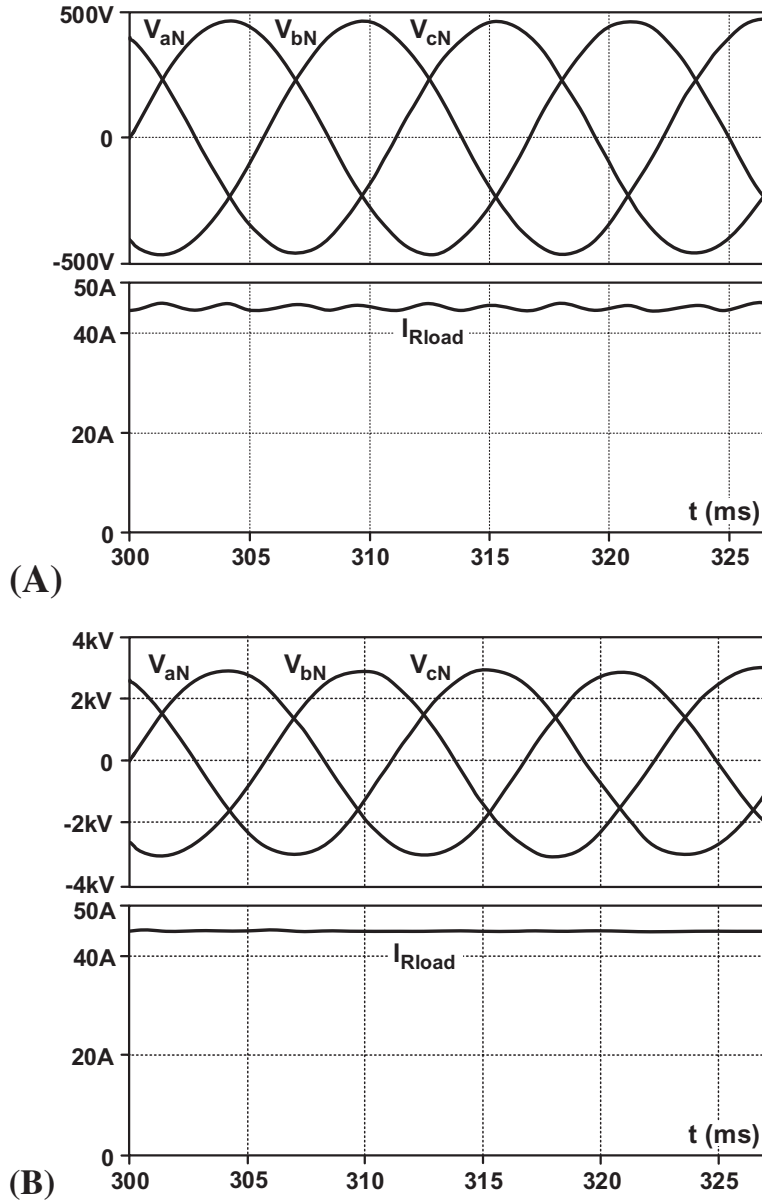


FIG. 12.2 Rectifier input AC voltages v_{aN} , v_{bN} , v_{cN} , and output DC current $I_{Rload} = I_{DC \text{ load}}$ (A) for a duty cycle of $\delta = 50\%$; (B) for a duty cycle of $\delta = 5\%$ (see Table 12.2).

Experimental determination of reverse-recovery current: In the circuit of Fig. 12.3C the input voltage at the gate of MOSFET Q_2 consists of two pulses, each having an amplitude of 15 V and a duration (pulse width) of $15 \mu s$; the gate resistance is $R_G = 100 \Omega$.

The time in between the two pulses is $15 \mu s$ as well. The rise and fall times t_r and t_f , respectively, of the two pulses one may assume to be $t_r = t_f = 0.01 \mu s$. This circuit is simulated using

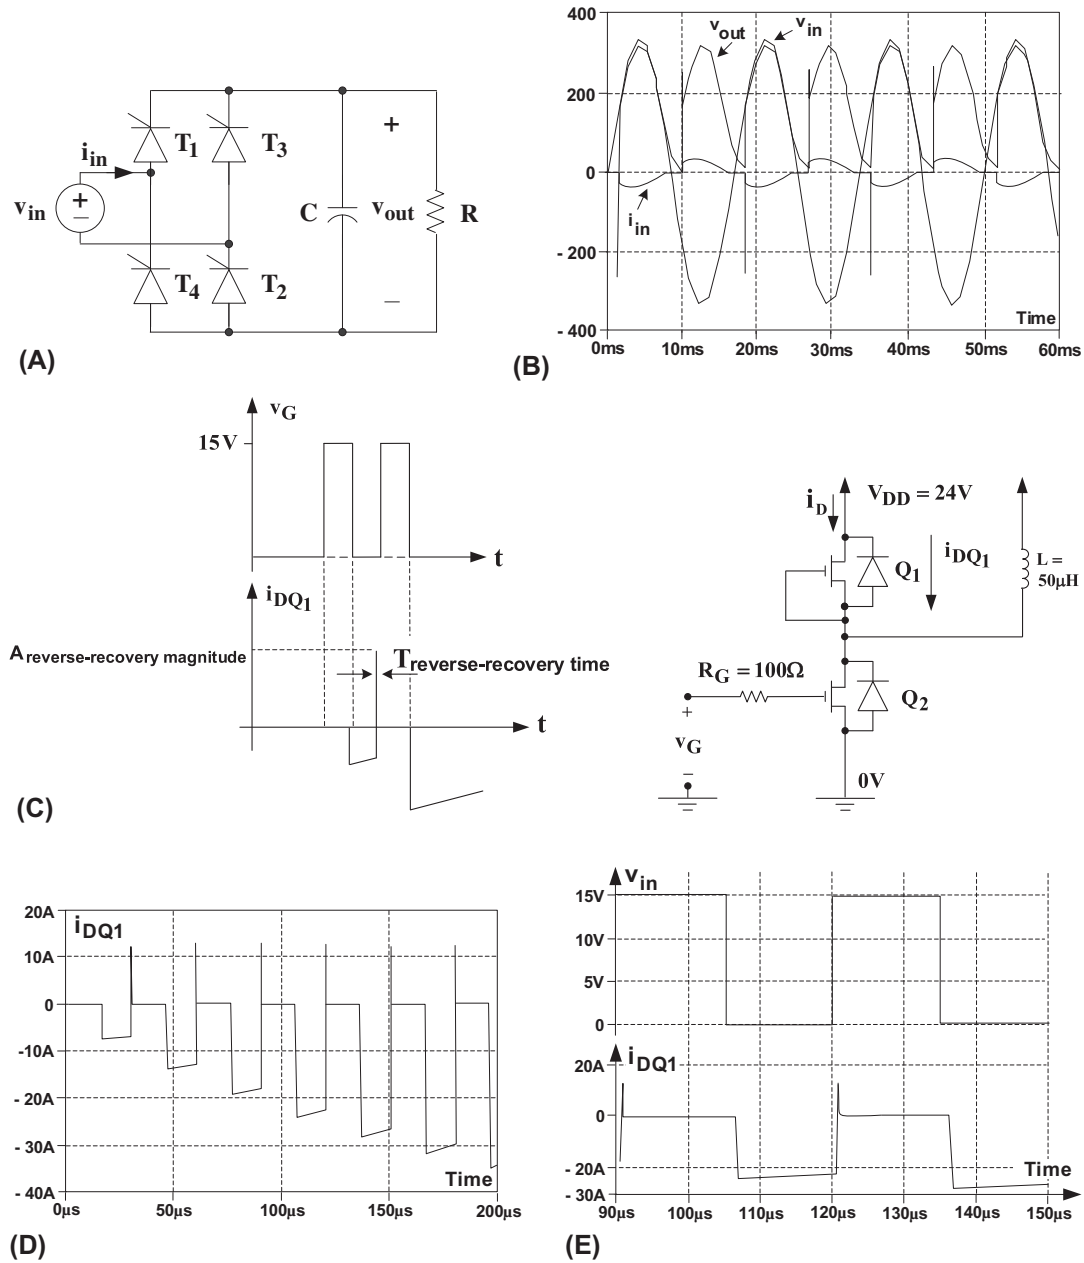


FIG. 12.3 (A) Controlled single-phase rectifier with line-commutated switches (thyristors). (B) PSpice plots of input voltage v_{in} , input current i_{in} , and output voltage v_{out} of Fig. 12.3A. (C) Set up for computation/measurement of reverse-recovery current magnitude $A_{reverse-recovery}$ and reverse-recovery time $T_{reverse-recovery}$. (D) Current i_{DQ1} through MOSFET Q_1 during 200 μs . (E) Gating voltage v_{in} and the current i_{DQ1} through MOSFET Q_1 from 90 to 150 μs .

(Continued)

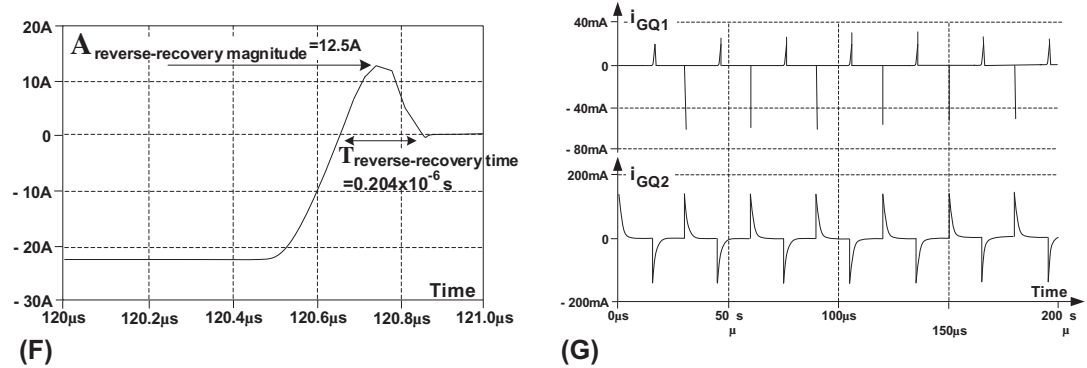


FIG. 12.3—Cont'd (F) Reverse-recovery magnitude $A_{\text{reverse-recovery magnitude}}$ and reverse-recovery time $T_{\text{reverse-recovery time}}$ of MOSFET Q1. (G) Currents i_{GQ1} and i_{GQ2} of gates of Q1 and Q2, respectively [1].

PSpice in Chapter 5 of [1] determining the magnitude $A_{\text{reverse-recovery magnitude}}$ and the duration $T_{\text{reverse-recovery time}}$ of the reverse-recovery current i_{DQ1} through enhancement MOSFET Q1.

Fig. 12.3D shows the current i_{DQ1} through MOSFET Q1 during 200μs and Fig. 12.3E depicts the gating voltage v_{in} and the current i_{DQ1} through MOSFET Q1 from 90 to 150μs. Fig. 12.3F shows the reverse-recovery magnitude $A_{\text{reverse-recovery magnitude}}$ and the reverse-recovery time $T_{\text{reverse-recovery time}}$, and Fig. 12.3G represents the current in the gate of Q1 and that of Q2. From these plots one obtains $A_{\text{reverse-recovery magnitude}} = 12.5\text{A}$, and $T_{\text{reverse-recovery time}} = 0.204\mu\text{s}$.

Differential-mode and common-mode electrical noise: Differential-mode noise is the most common one and can be removed or mitigated through passive or active filters discussed in Chapter 10. Common-mode noise occurs frequently in gating circuits for semiconductor switches and for internet connections as well as power supply leads for computers operating at low voltage levels (e.g., 3.3V). Common-mode noise is caused through poor grounding conditions and is a function of the lengths of wires/cables. Differential-mode and common-mode noise is explained in Fig. 12.4A–G [65] and the arrangement of a core-type filter with very high permeability μ is illustrated in Fig. 12.5A and B.

The differential-mode current is (see Fig. 12.4B) by definition

$$i_{\text{differential}} = (i_s - i_{g2})/2, \quad (12.1a)$$

and the common-mode current is by definition

$$i_{\text{common}} = (i_s + i_{g2})/2. \quad (12.1b)$$

By definition

$$i_{sd} = -i_{g2d}, \quad (12.1c)$$

where i_{sd} is the differential-mode current of the signal current i_s and i_{g2d} is the differential-mode current of the ground current i_{g2} , and

$$i_{sc} = i_{g2c}, \quad (12.1d)$$

where i_{sc} is the common-mode current of the signal current i_s and i_{g2c} is the common-mode current of the ground current i_{g2} .

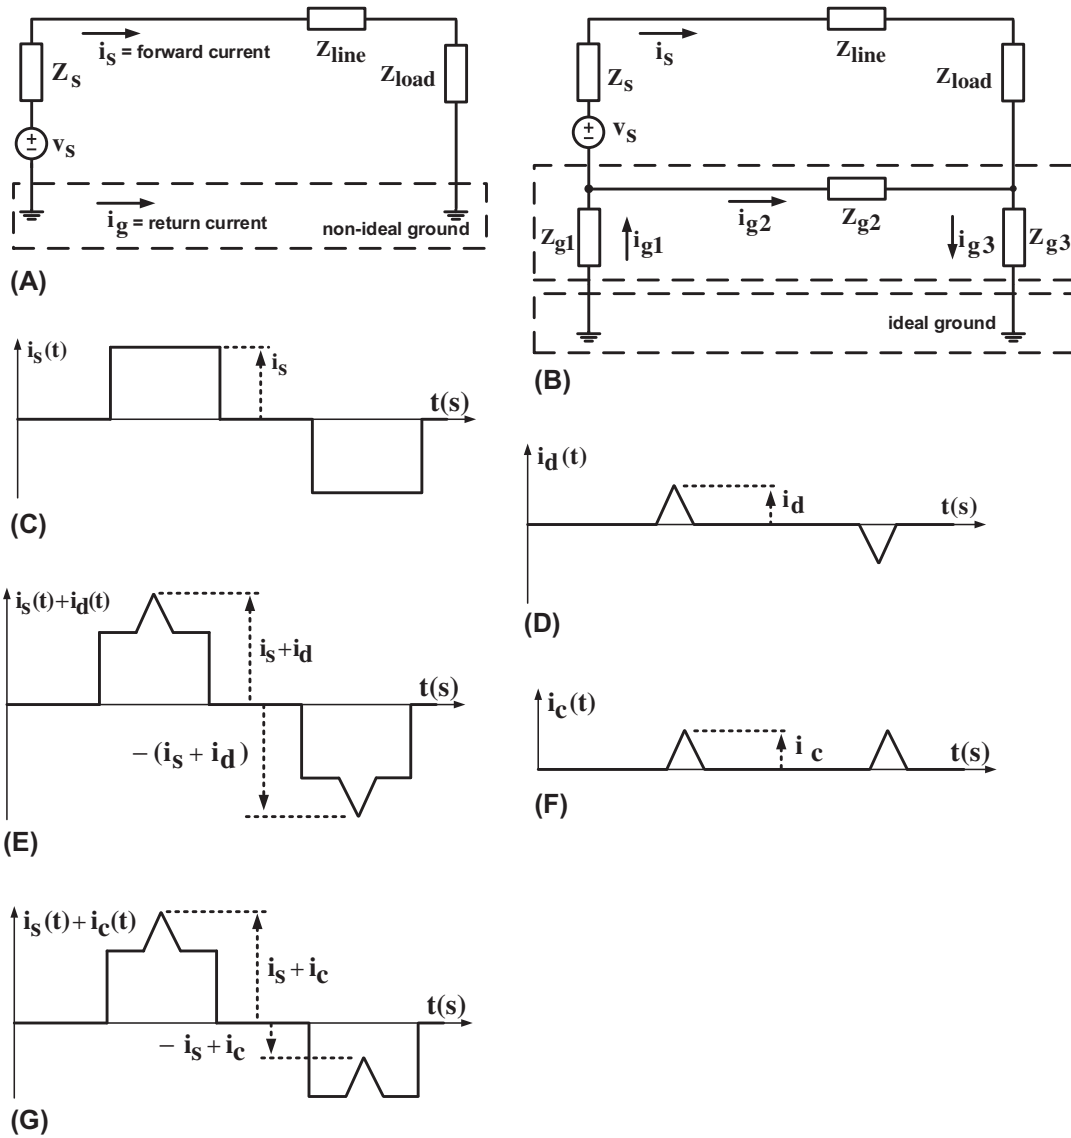


FIG. 12.4 (A) Circuit components for definition of differential-mode and common-mode noise with nonideal ground. (B) Circuit components for definition of differential-mode and common-mode noise with ideal ground. (C) Definition of useful signal current $i_s(t)$. (D) Definition of nonuseful differential-mode noise current $i_d(t)$. (E) Superposition of differential-mode noise and signal currents $i_s(t) + i_d(t)$. (F) Definition of nonuseful common-mode noise current $i_c(t)$. (G) Superposition of common-mode noise and signal currents $i_s(t) + i_c(t)$. The total magnitude of $i_s(t) + i_c(t)$ at any time corresponds always to that of $i_s(t)$.

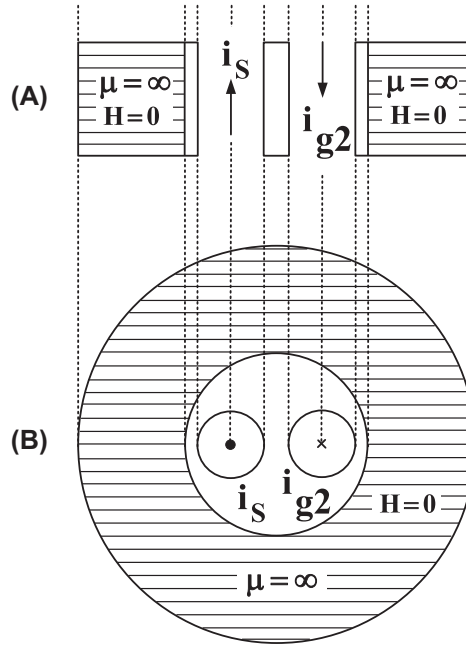


FIG. 12.5 Suppression of common-mode noise based on magnetic core-type filter with large permeability μ at $N=1$ number of turns: (A) Front view cross-section, (B) Birds-eye view.

With

$$i_{g3} = i_s + i_{g2} = (i_{\text{differential}} + i_{\text{common}}) + (-i_{\text{differential}} + i_{\text{common}}) = 2i_{\text{common}} = i_{g1} \quad (12.1e)$$

one obtains due to the ideal ground condition $i_{g3} = i_{g1}$. This shows that the common-mode current can only exist for poor grounding conditions.

A popular filter for the suppression of differential-mode noise is the low-loss capacitor. If the differential-mode noise current i_d through capacitor C is proportional to $h\omega C$ and the signal current i_s through capacitor C is proportional to ωC then

$$i_d/i_s = h, \quad (12.1f)$$

if h is very large (e.g., $h \rightarrow \infty$) then the differential current i_d is short-circuited by the capacitor, or in other words for a finite v_s across the capacitor, the capacitor provides a short circuit for i_d .

In contrast, a good filter for the suppression of common-mode noise is a doughnut/core type high permeability ring as illustrated in Fig. 12.5A and B. For high permeability ($\mu = \mu_r \mu_o \rightarrow \infty$) one obtains from Ampere's law applied to Fig. 12.5A, see Eq. (12.1e), for a finite flux density due to the finite voltage v_s , the finite core length ℓ , and with the number of turns $N=1$:

$$(i_s + i_{g2}) \cdot N = 2i_{\text{common}} \cdot N = H \cdot \ell = (B/\mu) \cdot \ell \rightarrow 0, \quad \text{or } i_{\text{common}} \approx 0. \quad (12.1g)$$

12.2.4.2 Current-controlled PWM inverter

Similar to rectifiers, inverters (see for example Fig. 12.6A and B) must be employed for some renewable energy sources and for storage plants to convert DC to AC. Table 12.3 lists

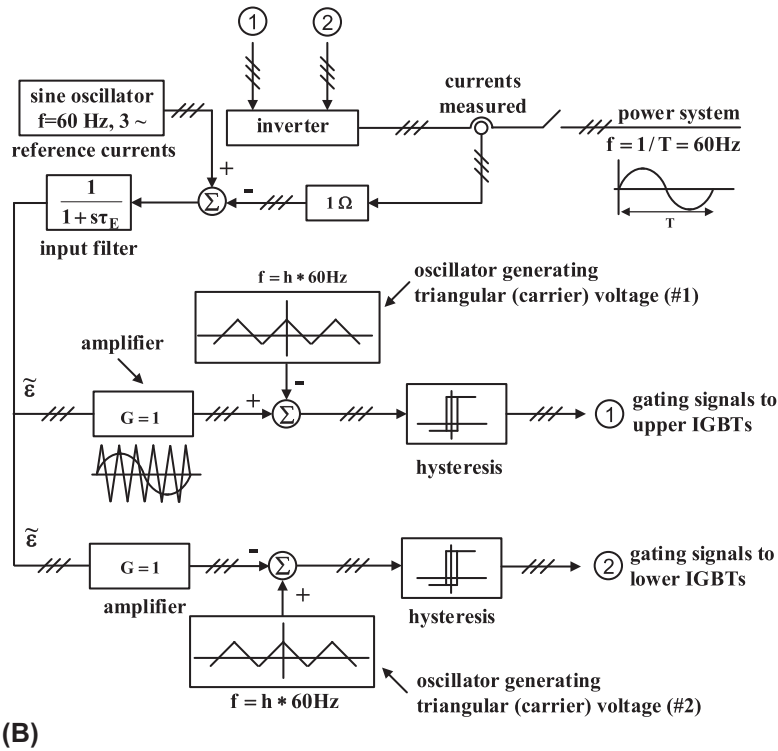
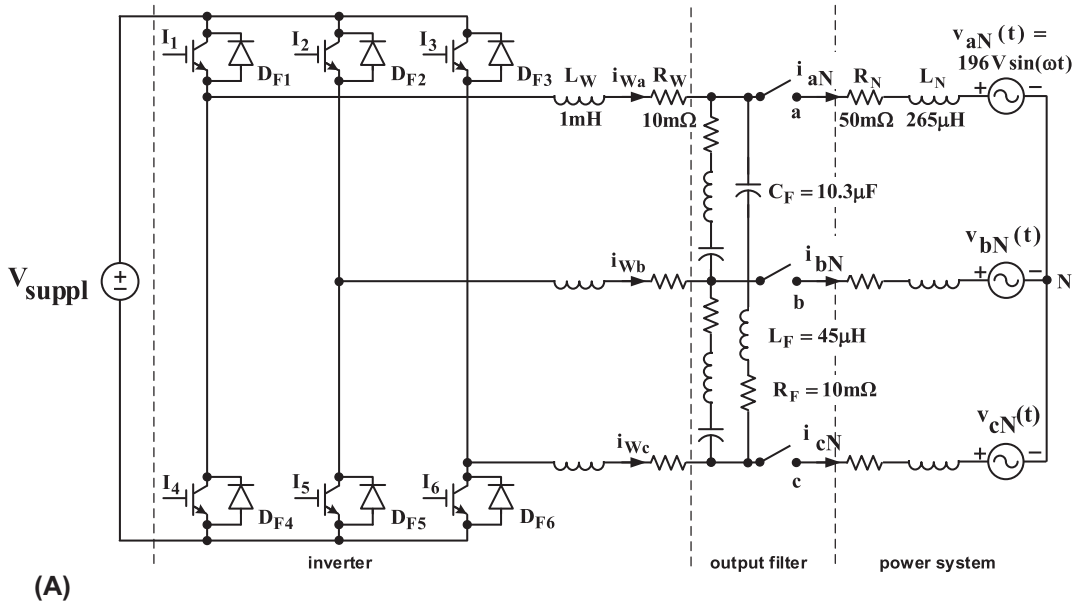


FIG. 12.6 (A) Current-controlled PWM voltage-source inverter feeding power into utility system. (B) Block diagram of control circuit for current-controlled PWM voltage-source inverter based on P-control.

TABLE 12.3 PSpice input program for PWM inverter operation at a gating signal voltage (vtrial) frequency of 5.76 kHz at lagging displacement (power) factor (generator notation, over-excited, delivering reactive power to system).

```

*Current-controlled pulse-width-modulated (PWM) voltage-source inverter
vsupl 2 0 360
*switches
msw1 2 11 10 10 qfet
dsw1 10 2 diode
msw5 2 21 20 20 qfet
dsw5 20 2 diode
msw3 2 31 30 30 qfet
dsw3 30 2 diode
msw4 10 41 0 0 qfet
dsw4 0 10 diode
msw2 20 51 0 0 qfet
dsw2 0 20 diode
msw6 30 61 0 0 qfet
dsw6 0 30 diode
*waveshaping inductors
l_w1 10 15 1m
l_w2 20 25 1m
l_w3 30 35 1m
R_w1 15 16 10m
R_w2 25 26 10m
R_w3 35 36 10m
*current references in terms of voltages
vref1 12 0 sin(0 56.6 60 0 0 0)
vref2 22 0 sin(0 56.6 60 0 0 -120)
vref3 32 0 sin(0 56.6 60 0 0 -240)
eout1 13 0 15 16 100
eout2 23 0 25 26 100
eout3 33 0 35 36 100
*errorsignals produced as difference between vref and eout
rdiff1 12 13a 1k
rdiff2 22 23a 1k
rdiff3 32 33a 1k
cdiff1 12 13a 1u
cdiff2 22 23a 1u
cdiff3 32 33a 1u
rdiff4 13a 13 1k
rdiff5 23a 23 1k
rdiff6 33a 33 1k
ecin1 14 0 12 13a 2
ecin2 24 0 22 23a 2
ecin3 34 0 32 33a 2
vtrial 5 0 pulse(-10 10 0 86.5u 86.5u 0.6u 173.6u)
*gating signals for upper switches
xgs1 14 5 11 10 comp
xgs2 24 5 21 20 comp

```

TABLE 12.3 PSpice input program for PWM inverter operation at a gating signal voltage (vtrial) frequency of 5.76 kHz at lagging displacement (power) factor (generator notation, over-excited, delivering reactive power to system)—cont'd

```

xgs3 34 5 31 30 comp
*gating signals for lower switches
egs4 41 0 poly(1) (11,10) 50 -1
egs5 51 0 poly(1) (21,20) 50 -1
egs6 61 0 poly(1) (31,30) 50 -1
*Filter is deleted because PSpice is limited to 64 nodes
*lfil 16 15b 45u
*lfi2 26 25b 45u
*lfi3 36 35b 45u
*rfil 15b 15c 0.01
*rfi2 25b 25c 0.01
*rfi3 35b 35c 0.01
*cfil 15c 26 10.3u
*cfi2 25c 36 10.3u
*cfi3 35c 16 10.3u
*parameters of power system with a line-to-line voltage of 340 V
RM1 16 18 50m
LM1 18 19 265u
Vout1 19 123 sin(0 196 60 0 0 -30)
RM2 26 28 50m
LM2 28 29 265u
Vout2 29 123 sin(0 196 60 0 0 -150)
RM3 36 38 50m
LM3 38 39 265u
Vout3 39 123 sin(0 196 60 0 0 -270)
*subcircuit for comparator
.subckt comp 1 2 9 10
rin 1 3 2.8k
r1 3 2 20meg
e2 4 2 3 2 50
r2 4 5 1k
d1 5 6 zenerdiode1
d2 2 6 zenerdiode2
e3 7 2 5 2 1
r3 7 8 10
c3 8 2 10n
r4 3 8 100k
e4 9 10 8 2 1
*models for zener diodes
.model zenerdiode1 D (Is=1p BV=0.1)
.model zenerdiode2 D (Is=1p BV=50)
.ends comp
*model for switch
.model qfet nmos(level=3 gamma=0 kappa=0 tox=100n rs=42.69m kp=20.87u l=2u
+w=2.9 delta=0 eta=0 theta=0 vmax=0 xj=0 uo=600 phi=0.6 vto=3.487 rd=0.19
+cbd=200n

```

Continued

TABLE 12.3 PSpice input program for PWM inverter operation at a gating signal voltage (vtrial) frequency of 5.76 kHz at lagging displacement (power) factor (generator notation, over-excited, delivering reactive power to system)—cont'd

```
+pb=0.8 mj=0.5 cgso=3.5n cgdo=100p rg=1.2 is=10f)
*model for diodes
.model diode d(is=1p)
*options to aid convergence
.options abstol=0.01m chgtol=0.01m reltol=50m vntol=1m itl5=0 itl4=200
*transient analysis
.tran 5u 350m 300m 5u
*plotting of traces
.probe
*Fourier analysis
.four 60 12 I(l_w1)
.end
```

TABLE 12.4 Dependency of the input DC voltage V_{DC} of inverter as a function of the output displacement (power) factor angle Φ (generator notation, lagging displacement power factor, where a negative Φ corresponds to over-excited operation delivering reactive power to the system) is the angle between phase current of inverter $I_{rms\ ph}$ and phase line-to-neutral voltage $V_{rms\ l-n}$ of power system and m is the modulation index of inverter.

$\Phi = 90^\circ$	$V_{rms\ l-n} = 139\text{ V}$	$I_{rms\ ph} = 58.18\text{ A}$	$V_{DC} = 375\text{ V}$	$I_{THDi} = 0.107\%$	$m = 1.04$
$\Phi = 60^\circ$	$V_{rms\ l-n} = 139\text{ V}$	$I_{rms\ ph} = 54.17\text{ A}$	$V_{DC} = 368\text{ V}$	$I_{THDi} = 0.093\%$	$m = 1.07$
$\Phi = 30^\circ$	$V_{rms\ l-n} = 139\text{ V}$	$I_{rms\ ph} = 50.44\text{ A}$	$V_{DC} = 360\text{ V}$	$I_{THDi} = 0.131\%$	$m = 1.09$
$\Phi = 0^\circ$	$V_{rms\ l-n} = 139\text{ V}$	$I_{rms\ ph} = 49.03\text{ A}$	$V_{DC} = 388\text{ V}$	$I_{THDi} = 0.117\%$	$m = 1.01$
$\Phi = -30^\circ$	$V_{rms\ l-n} = 139\text{ V}$	$I_{rms\ ph} = 49.74\text{ A}$	$V_{DC} = 410\text{ V}$	$I_{THDi} = 0.060\%$	$m = 0.96$
$\Phi = -60^\circ$	$V_{rms\ l-n} = 139\text{ V}$	$I_{rms\ ph} = 52.06\text{ A}$	$V_{DC} = 415\text{ V}$	$I_{THDi} = 0.085\%$	$m = 0.95$
$\Phi = -90^\circ$	$V_{rms\ l-n} = 139\text{ V}$	$I_{rms\ ph} = 55.46\text{ A}$	$V_{DC} = 415\text{ V}$	$I_{THDi} = 0.073\%$	$m = 0.95$

the PSpice program on which the results of [Table 12.4](#) are based. This table illustrates the dependency of the input DC voltage V_{DC} of inverter as function of the output displacement (power) factor angle φ , that is, the angle between the fundamental of the phase current of inverter i_{aN} and the fundamental of the line-to-neutral voltage v_{aN} of power system as well as the modulation index m [1,64]. [Fig. 12.7A](#) and [B](#) illustrate some of the results of [Table 12.4](#). According to IEEE Standard 519 [66] and IEC 61000-3-2 (2001–10) [67] a total harmonic distortion of the inverter output current I_{THDi} of about 3%—ignoring the switching ripple which can be mitigated by an output filter as indicated in [Fig. 12.6A](#)—is acceptable. By decreasing the modulation index $0 < m < 1.00$, say to $m = 0.5$ which increases V_{DC} , and by increasing the wave-shaping inductance L_w an almost ideal sinusoid for the output current can be achieved and reactive power can be supplied to the power system. However, this approach might not be feasible in most cases, resulting in low real power output of inverter.

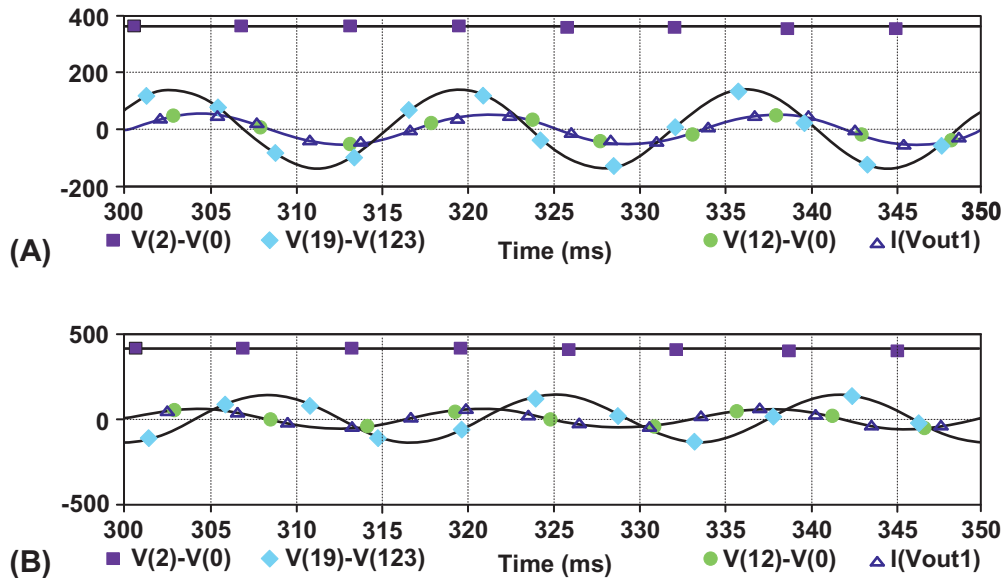


FIG. 12.7 (A) Inverter phase reference and output currents and inverter output voltage, see Table 12.4; $\Phi = 30^\circ$ (generator notation: leading power factor, underexcited, absorbing reactive power). (B) Inverter phase reference and output currents and inverter output voltage, see Table 12.4; $\Phi = -90^\circ$ (generator notation: lagging power factor, overexcited, delivering reactive power).

12.2.5 Operation at maximum power point

PV arrays [68] as well as wind turbines [69] must be operated at the maximum power point to increase the yield of such plants. Many schemes for searching the maximum power point exist, however to operate at the maximum-power point without searching for such a point is very difficult. Searching for the maximum point entails a change in output of such sources causing frequency variations in the grid which might not be acceptable. PV power plants operate mostly intermittently due to changing insolation as is shown in Fig. 12.8 recorded at the

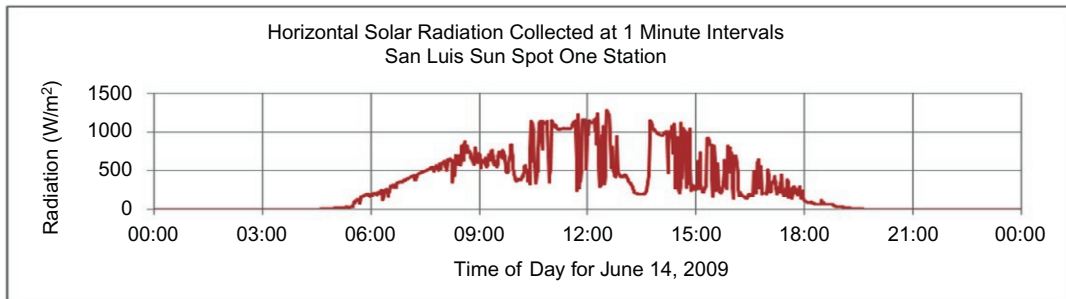


FIG. 12.8 Intermittent insolation in the San Luis Valley of Colorado [70]. Courtesy of the National Renewable Energy Laboratory (NREL), Golden, Colorado, USA.

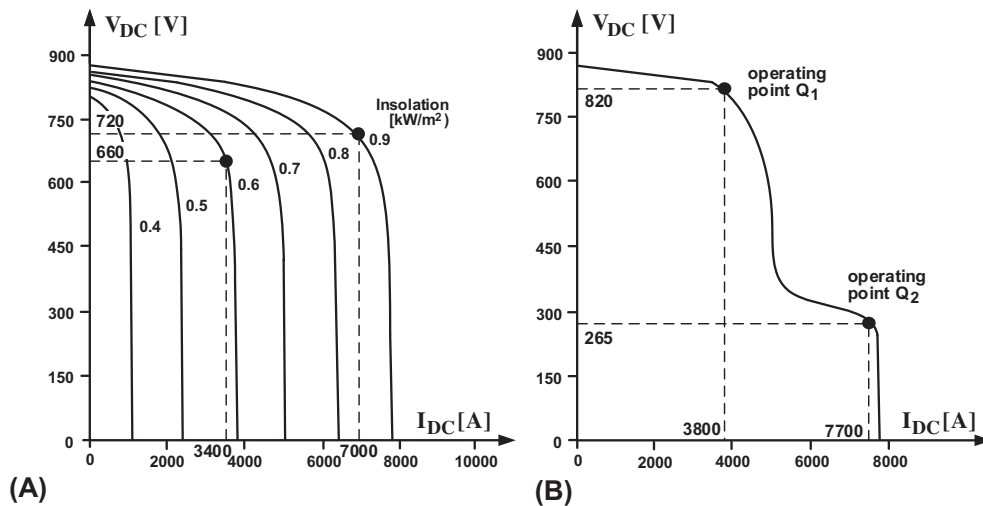


FIG. 12.9 Two maxima for PV power plant [1]: (A) without shadowing for various insolation values, (B) with shadowing at an insolation of 0.9 kW/m^2 .

San Luis Valley of Colorado [70]. Fig. 12.9 explains that for a PV power plant under certain conditions where two maxima may exist.

12.2.6 Safety considerations

Renewable sources are mostly of smaller rating (100MW or less) while for conventional power plants units from 100 to 600MW or even 1200MW are presently employed. The first one of the conventional plants is the output of a natural gas turbine, the second one that of a coal-fired plant, and the latter one that of a nuclear plant [71]. The reason for large ratings is efficiency—the larger the unit the larger the efficiency. Single units have an efficiency of about 28%–35%, while combined-cycle power plants—where natural gas/oil turbines and steam turbines connected in series have efficiencies of about 60% [72]. In a combined-cycle plant, the natural gas is combusted in the gas turbine and the high-temperature exhaust of the gas turbine heats steam for a steam turbine. Gas turbine power plants become important for distributed generation including renewable energy sources due to their fast cycle properties, that is, they can change their output quickly.

Due to the smaller rating of renewable sources many distributed plants must be operated on the grid, aggravating the control of the voltage associated with reactive power/load flow and frequency. In almost all cases the distributed source relies on the voltage of the power system, that is, the voltage cannot be changed by an individual renewable source of small rating and the current fed into the grid can only be controlled. In other words, as soon as the voltage of the grid is below or above certain limits the renewable source of small rating must be disconnected for safety reasons from the grid. No matter how good the solar panels on the roof are, they are not good enough to collect energy at night. But researchers at the

Japan Aerospace Exploration Agency have hatched a plan to harvest the sun's energy nearly 24 h a day. The idea is to launch solar-energy collectors into geosynchronous orbit. The special satellites would beam microwave energy down to an array of tiny rectifying antennas that would convert microwaves into DC electricity [73]. Problems with this approach are the microwave beams in certain areas of the globe, which must be avoided by air planes, animals, and humans. In residential areas the glare of reflecting light from solar arrays might be a problem for some of the neighboring residences [74]. In particular in urban areas birds (e.g., pigeons) might find the gap between the solar arrays and the roof tiles an ideal nesting place in particular during cold seasons due to the warmth radiated from PV systems. These bird populations can cause damage on the structure of the building, the excrements of the birds cause a smell, parasitic bugs might be transmitted, and damage the wiring under the PV arrays [75].

12.2.7 Solutions to power quality problems of custom power devices with switching action

Any switching action causes transients due to parasitic capacitances of either a mechanical or semiconductor switch, resulting in the latter case in reverse-recovery currents. The suppression of these in thyristors, metal-oxide-field-effect transistors (MOSFETs), insulated-gate bipolar transistors (IGBTs) and others is discussed in [1] through the insertion of small inductors or through the minimization of parasitic capacitances. The differential-mode noise can be reduced by either passive or active filters (Chapter 10) and common-mode noise is minimized through reduction of grounding resistance through common-mode filters, e.g., ferromagnetic coil wrapped around a high-permeability core enclosing the positive and negative leads. Rectifiers and inverters can generate integer and noninteger or fractional harmonics as well as inter- and subharmonics. The displacement (fundamental power) factor of inverters can be made leading (consumer system of notation) by increasing the input DC voltage of the inverter. This calls for multilevel inverters where switches must be connected in series due to their limited maximum permissible reverse voltages. For the reduction of the switching harmonics a low modulation index m (e.g., 0.5–0.8) is recommended. Although many papers on maximum power point tracking for PV plants exist, no single approach is completely satisfactory. More work in this respect must be done, especially for PV plants with output power in the MW range: searching for the maximum power point induces frequency variations due to large varying output powers. Safety in distributed power systems with many sources can be improved through internet and power-line carrier control.

12.3 Horizontal and vertical-axes wind power (WP) plants

12.3.1 Mechanical and electronic gears

WP plants operate mostly intermittently due to changing wind conditions as is shown in Fig. 12.10.

Some WP plants do not employ mechanical gears [1] and permanent-magnet synchronous generators (PMSG) with many poles (e.g., 40 or larger) [77,78] are used resulting in

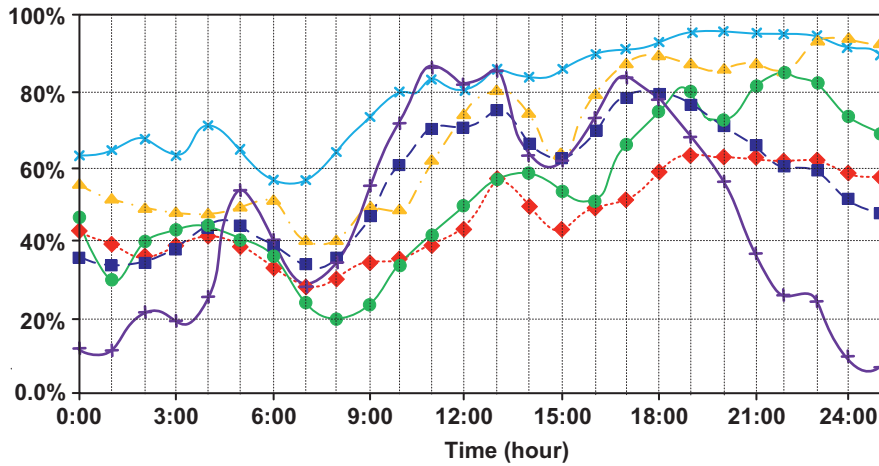


FIG. 12.10 Changing wind conditions [76].

pancake-type generators with a short axial length, large diameters and weights—they are called direct-drive plants. Some WP plant designs, however, employ mechanical gears because WP blades rotate at low speed (e.g., 0.2 rps) while generators must be designed—to reduce their weight—for high speed (3600 rpm corresponding to 60 rps). The changing speed conditions of WP plants wear out the mechanical gear and therefore, electrical gears can be employed based on pole-changing and series-turns techniques [79,80]. When a sudden change of the pole numbers occurs through mechanical switching of poles, say from 8 to 4 poles, sudden transient torques stress the mechanical gear. To mitigate these stresses, pole-changing techniques combined with a change in the number of series turns of the generator by electric means, supplying rectifiers/inverters, are recommended resulting in electronic gears which also can be used for electric vehicles permitting a large gear ratio and therefore high efficiency at high speed.

It is possible to build on-shore 175 m tall [81] and off-shore 6 MW 100 m [82] WP plants. In Spain a 195 m tall chimney rose above the plain in Manzanares south of Madrid: the solar up-draft tower [83], which had turbines at its base, rose from the middle of a 46,000 square-meter greenhouse-like collection area; it generated up to 50 kW.

12.3.2 Basic principle of $(V \cdot p)/f$ and $(V/f \cdot N)$ control of electronic gear [79,80]

The induced voltage E of an alternating current electric machine

$$E = 4.44 \cdot f \cdot B_{\max} \cdot N_{\text{rated}} \cdot 4 \cdot R \cdot L/p \quad (12.2)$$

is related to the rated maximum flux density $B_{\max}$, the rated number of series turns per phase N_{rated} , the radius of the location of the stator winding R , the active (core) machine length L , the frequency of the voltages and currents f , and the pole number p . For rated induced voltage E_{rated} the frequency f and the maximum flux density assume rated values. If $E < E_{\text{rated}}$ then

the flux density is less than its rated value, and for $E > E_{\text{rated}}$ the flux density will be above its rated value. The relation

$$\frac{E}{f} = 4.44 \cdot B_{\text{max}} \cdot N_{\text{rated}} \cdot 4 \cdot R \cdot \frac{L}{p} = \text{const.} \quad (12.3)$$

must be maintained for all operating conditions where $E \leq E_{\text{rated}}$ and $f \leq f_{\text{rated}}$. For $f > f_{\text{rated}}$ the induced voltage can be at the most $E = E_{\text{rated}}$ and the flux density will be less than its rated value, called flux-weakening operation. In this case, the induced voltage E can be replaced in the above formula by the terminal voltage V_t . By changing the number of series turns per phase N and the pole number p of the machine flux weakening can be compensated and the machine can be operated under rated flux density under most operating conditions. This results in superior performance above rated speed (e.g., increased output power) and below rated speed (e.g., increased torque) of variable-speed drives.

It is well-known that the torque-speed characteristic of commonly available variable-speed electric machines employing field (flux) weakening may not match the load torque because the load torque may be proportional to the square of the speed, and that of a variable-speed electric machine is inversely proportional to the speed in the field-weakening region. This applies to variable-speed drives where the critical (maximum) speed is limited by the reduction of the developed torque, resulting in less than the rated output power. This mismatch can be mitigated by an electronic change in the number of poles p and/or a change in the number of series turns per phase N of the stator winding via application-specific-integrated circuit (ASIC). The change in the number of poles p is governed by

$$\frac{E \cdot p}{f} = 4.44 \cdot B_{\text{max}} \cdot N_{\text{rated}} \cdot 4 \cdot R \cdot L. \quad (12.4)$$

The change in the number of series turns per phase N is governed by

$$\frac{E}{f \cdot N} = 4.44 \cdot B_{\text{max}} \cdot 4 \cdot R \cdot L/p. \quad (12.5)$$

The introduction of an additional degree of freedom—either by a change of p or N or both—permits an extension of the rated flux density (B_{max}) region up to a multiple of the rated speed. Fig. 12.11 illustrates in a qualitative manner the speed n_m , torque T (locus of maximum torque), and power P increase due to the change in the number of turns from N_{rated} to $N_{\text{rated}}/2$.

12.3.2.1 Starting and motoring operation

Some WP turbines must be brought up to speed by the generator acting as a motor. The overall speed-torque diagram of a 1kW induction machine—which circuit data are listed below—is shown in Fig. 12.12 with four natural speed-torque characteristics and the characteristic which will be important for starting at $V_{\text{line-line-rated}}$ and $f_{\text{start}} < f_{\text{base}}$ (characteristics in quadrant I) where $p_1 = 8$ poles, $n_{\text{base}} = 750$ rpm, and $T_{\text{rated}} = 2.8$ Nm. In Fig. 12.12 characteristic 1 pertains to f_{base} , $N_{\text{rated}}^{p_1}$ and p_1 ; characteristic 2 is valid for f_{base} , $N_{\text{rated}}^{p_2} = N_{\text{rated}}$ and p_2 ; characteristic 3 is based on $1.5 \cdot f_{\text{base}}$, $N_{\text{reduced}} = N_{\text{rated}}/2$ and p_2 ; characteristic 4 is computed for $2 \cdot f_{\text{base}}$, $N_{\text{reduced}} = N_{\text{rated}}/2$ and p_2 , and the starting characteristic is computed for f_{start} , which

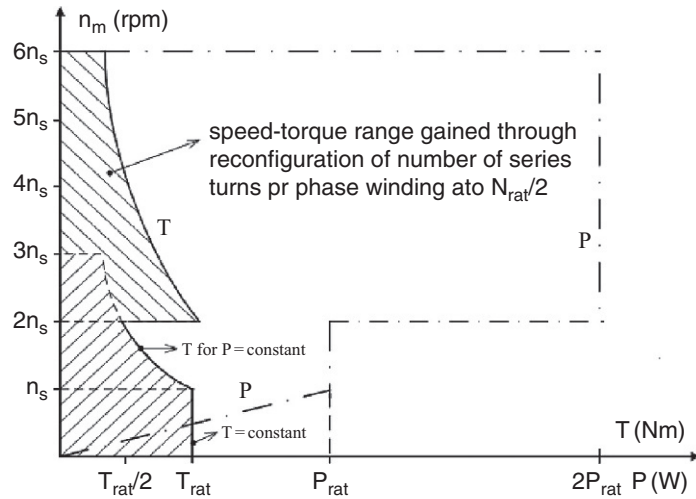


FIG. 12.11 Variable-speed drive, torque-speed characteristic, and power-speed characteristic of an induction machine by changing the number of series turns of the stator winding from N_{rated} to $N_{rated}/2$.

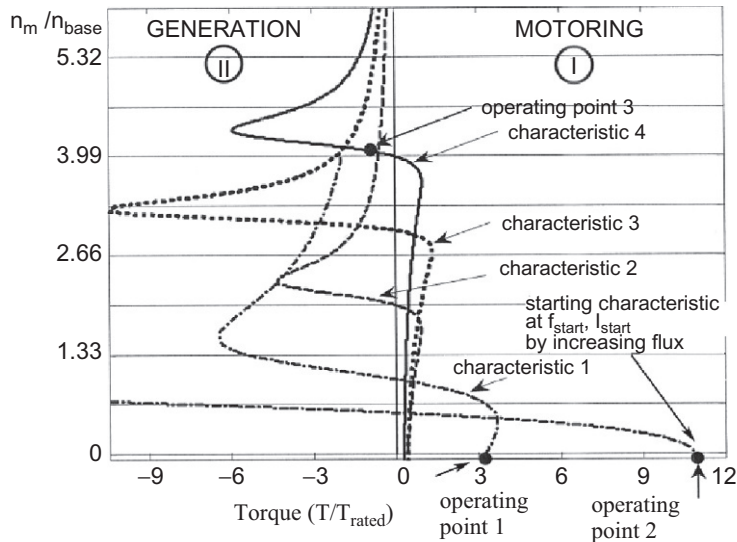


FIG. 12.12 Speed-torque characteristics 1, 2, 3, 4, and the starting characteristic, whereby the terminal voltage is about constant $V_{line-to-line-rated}$ for all 5 characteristics. The base speed n_{base} corresponds to the p_1 configuration and the rated torque $T_{rated} = T_{rated}^{p1}$.

is less than f_{base} . The current drawn at zero speed is $I_{start} > I_{rated}$. As start-up occurs the starting current will decrease due to the frequency and the associated speed increase, and the machine in motor operation reaches at the base frequency $f_{base} = 50\text{Hz}$ the base speed. The transition from (natural) characteristic #1 to (natural) characteristic #2 occurs through pole switching

from p_1 poles to p_2 poles [79,80]. The transition from the natural characteristic #2 to the characteristic #3 occurs based on flux weakening (V/f) control, whereby the flux density is reduced to below its rated value. At the characteristic #3 the number of series turns $N_{rated}^{p_2} = N_{rated}$ will be reduced to $N_{reduced} = N_{rated}/2$ by a relay (having normally closed, NC, and normally open, NO, contacts) or electronic switches, thus effectively restoring the flux density to its rated (or larger) value and therefore increasing the torque and the output power of the motor. This increase in torque is about proportional to the ratio ($N_{rated}/N_{reduced}$). From characteristic #3—at an increased (about rated) flux density and at, for example, 3 times the base speed—to characteristic #4 (at about 4 times the base speed) flux weakening (V/f) control with $N_{reduced}$ is performed. It is advisable to minimize the speed range between characteristics 2 and 3, as depicted in Fig. 12.12. The frequency $1.5 \cdot f_{base}$ has been chosen to clearly illustrate the effect of the reduction in the number of turns, but an optimization of the dynamics of the drive requires that $1.5 \cdot f_{base}$ should be less, say $1.1 \cdot f_{base}$ at reduced terminal voltage V_t .

The data of analyzed 3-phase induction machine of Fig. 12.12 are $P_{rat} = 1 \text{ kW}$, number of poles $p = 4$, $f_{rated} = 50 \text{ Hz}$, $V_{L-N}/V_{L-L} = 220/380 \text{ V}$, $\eta = 0.735$, $\cos\Phi = 0.705$, $B_{max} = 0.68 \text{ T}$, $X_m = 130 \Omega$, $X_s = 9.45 \Omega$, $R_s = 7.55 \Omega$, $X_r' = 9.47 \Omega$, $R_r' = 6.65 \Omega$, stator bore diameter = 0.074 m, stator core length = 0.095 m.


12.3.2.2 Generator operation

The alternator or regenerative braking operation occurs in quadrant II of characteristic 4 (see Fig. 12.12). Once the machine has gained about the base speed the only stringent requirement is an efficiency of $\eta = 75\% - 95\%$ which depends upon the output power rating of the drive. At regenerative operation of the alternator the pulse-width-modulated (PWM) inverter acts as a PWM rectifier providing AC excitation for the (induction) generator if necessary, and delivering generator power to the battery or the power source at a DC voltage of V_{DC} . Alternatively the excitation of the induction generator can be provided by an appropriate capacitor bank.

12.3.2.3 Experimental verification [84]

For testing, a 4-pole, 1 kW induction machine was purchased off the shelf and rewound to accommodate the three different configurations (e.g., Δ at $p_1 = 8$ poles, Y at N_{rated} and $p_2 = 4$ poles, and Y at $N_{rated}/2$ and $p_2 = 4$ poles) so that the number of poles and turns could be externally changed. This machine is about comparable to the machine data listed above except that the tested machine has a rated frequency of 60 Hz. The equivalent circuit of this three-phase induction machine at the rated phase voltage of 70 V during motoring operation is depicted in Fig. 12.13. Table 12.5 lists the measured circuit parameters for all 3 configurations based on open-circuit and short-circuit tests at $f = 60 \text{ Hz}$. Note that for all applications the terminal (line-to-line) voltages were below or equal to the rated value of about 120 V. This is important for electric car applications where for safety reasons the source voltage must be below a certain value (e.g., battery voltage of 600 V). A flux weakening compensation via increase of the battery voltage from 600 to 900 V is not desirable for road vehicle applications.

Fig. 12.14 depicts the measured starting torque (T_{start}) as a function of the starting current (I_{start}) for 10 and 60 Hz operations. It is well known that induction machines cannot operate at a very low frequency (e.g., 3 Hz) applied to the stator because of the increase in the magnetizing current due to the decrease of the magnetizing reactance X_m .

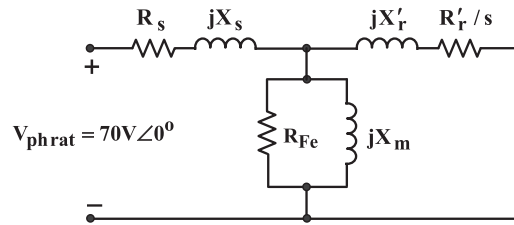FIG. 12.13 Equivalent circuit of tested machine at $f = 60\text{Hz}$.TABLE 12.5 Measured equivalent circuit parameters for 8-pole and 4-pole configurations at $f = 60\text{ Hz}$.

Configuration	R_s (Ω)	X_s (Ω)	X'_r (Ω)	R'_r (Ω)	R_{Fe} (Ω)	X_m (Ω)
8-pole (N_{rated})	3.13	0.84	0.84	0.077	12	3.49
4-pole (N_{rated})	1.79	2.37	2.37	1.418	288	34.9
4-pole ($N_{\text{rated}}/2$)	0.56	0.67	0.67	0.389	63	8.66

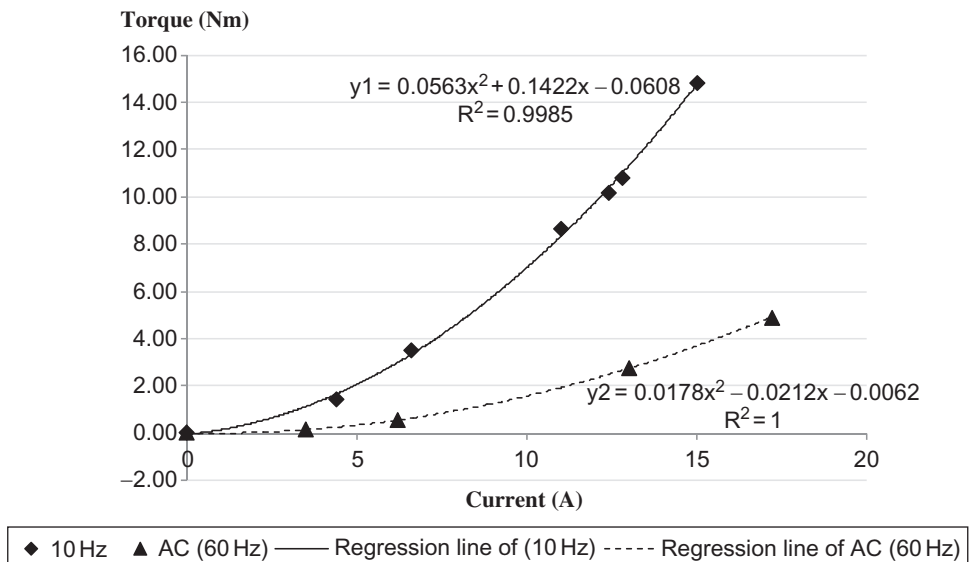


FIG. 12.14 Measured starting torque as a function of the starting current.

In this application the lowest stator frequency that could be applied while maximizing the starting torque was 10 Hz. Unfortunately the inverter used could not deliver more than 15 A which is why the torque curve at 10 Hz is limited to 15 Nm. The 60 Hz operation was limited by the autotransformer to about 18 A. The current during starting can greatly exceed the rated current for a short time (few seconds) because the thermal time constant of an electric machine is in the range of a few hours [85].

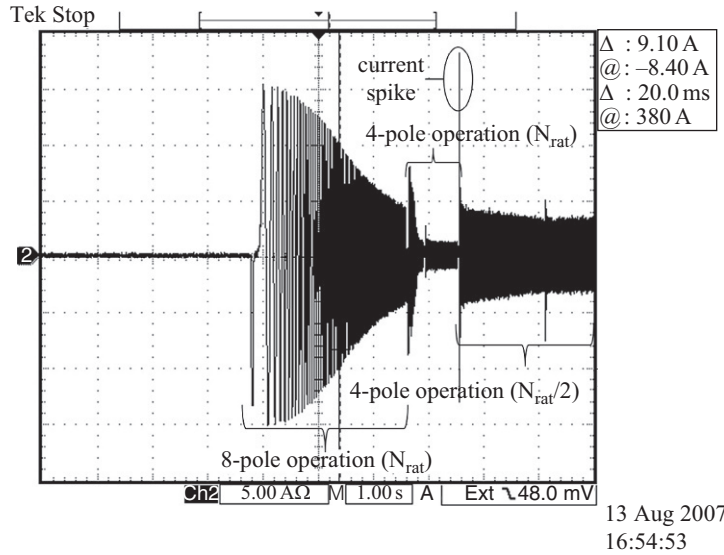


FIG. 12.15 Measured line-current waveform of the induction motor during start-up with $p_1 = 8$ poles at $N_{rated}^{p_1}$ then switching to $p_2 = 4$ poles at $N_{rated}^{p_2} = N_{rated}$, and after short time reducing at $p_2 = 4$ poles the number of turns from N_{rated} to $N_{rated}/2$.

The start-up current transient for motoring operation is shown in Fig. 12.15. This oscillogram demonstrates the switchover from $p_1 = 8$ with N_{rated} to $p_2 = 4$ with N_{rated} , and from $p_2 = 4$ with N_{rated} to $p_2 = 4$ with $N_{rated}/2$. The latter switchover as shown in Fig. 12.15 can be controlled, in other words, the torque can be increased as a function of the switching instant and the applied voltage and frequency. It is advisable to minimize the operating time of the p_2 pole, N_{rated} configuration. At the time of switching from $p_2 = 4$ poles at N_{rated} to $p_2 = 4$ poles at $N_{rated}/2$ operation the current spike increases when the $p_2 = 4$ and $N_{rated}/2$ operation is starting at low frequency. $N_{rated}/2$ operation (at low frequency) corresponds to low reactance and resistance circuit values of the machine. Therefore, maintaining the terminal voltage at the low impedances results in an increased input current.

12.3.2.4 Optimization of torque production during start-up

In most electric machines the torque is about proportional to the square of the current I_{start} neglecting the magnetizing current [86]. During experimental verification of the reduction of the number of series turns from N_{rated} to $N_{rated}/2$, the starting torque and the line current were measured: the starting torque increased with the starting current $I = I_{start}$. At low saturation there exists about a square relationship between starting torque and the starting current, that is, $T_{start} \approx \text{constant1} \cdot I_{start}^2$, however, at high saturation this relationship is about linear, that is $T_{start} \approx \text{constant2} \cdot I_{start}$ and the starting torque may increase [86] due to the reduction of the stator/rotor leakage inductances caused by saturation, and the reduction of reactances due to the applied reduced frequency. From Fig. 12.15 one concludes that the $p_2 = 4$ pole, N_{rated} operation produces the smallest current amplitude. Therefore, reducing the operating time of

the $p_2=4$ pole, N_{rated} configuration as much as possible will produce the optimum torque (current). In order to do this $p_2=4$ pole, $N_{\text{rated}}/2$ operation must be performed at a frequency as low as possible (e.g., $1.1f_{\text{base}}$).

The start-up current from zero to maximum speed is depicted in Fig. 12.15, where the reduction in the number of turns occurs about 1s after the switchover from p_1 to p_2 . The minimization of the operation region with $p_2=4$ poles and $N_{\text{rated}}^{p_2} = N_{\text{rated}}$ is beneficial from a torque production point of view: this can be achieved by operating at $p_1=4$ poles and reduced terminal voltage for a few cycles after the switchover from p_1 to p_2 has occurred. From this figure one concludes that the starting current (or torque) corresponds to about 3 units while the maximum occurring current (or torque) with $N_{\text{reduced}} = N_{\text{rated}}/2$ corresponds to 1 unit. Comparing this to the operation with N_{rated} —where the maximum current (or torque) at maximum speed is 0.25 units—one finds that the reduction in the number of turns by a factor of 2 increases the maximum current (or torque) by a factor of about 3–4, assuming a proportionality between torque T and current I .

12.3.2.5 The need for current snubbers

To minimize the inverter power/current rating the current spikes of Fig. 12.15 can be either suppressed by current snubbers or the maximum inverter output current is limited via inverter design.

12.3.2.6 Generator operation

Fig. 12.16 shows the output voltage of the motor (upper oscillogram) which is the input voltage to the rectifier, and the output voltage of the rectifier (lower oscillogram) measured

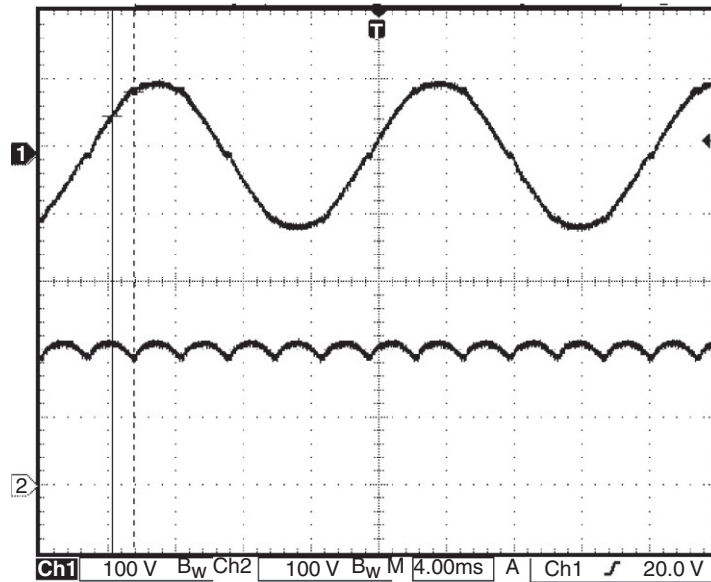


FIG. 12.16 Measured rectifier input (1) and rectifier output (2) voltages.

at about the rated power of the induction machine of 1 kW. The rectifier input voltage is 152 V_{rms}, the rectifier output voltage is 202.5 V, and rectifier output current is 4.84 A.

12.3.2.7 Conclusions with respect to electronic gears

The two key concepts to achieve this performance—increase in speed, torque, and power—are

- switching of the stator winding from p_1 to p_2 poles, and [87,88]
- switching of the number of series turns of the stator winding [79,80,84].

These two concepts can be either separately or jointly implemented in a variable-speed drive. The maximum flux density $B_{\max}$ of the machine at any operation should be within the range $0.3 T \leq B_{\max} \leq 1.1 T$. On the one hand if $B_{\max}$ is too small, the torque will be reduced to an unacceptably low level, the machine operation may be sluggish and the desired speeds and torques might not be obtained as it occurs in the flux-weakening mode. On the other hand, if $B_{\max}$ is too large, the machine saturates and the losses will become too large.

- (1) It is possible to design a poly-phase electric machine capable of delivering starting torque within the range $(5-11) \cdot T_{\text{rated}}$. The lower range $(5 \cdot T_{\text{rated}})$ can be obtained, for example, with standard-type (e.g., squirrel-cage induction) machines and the upper range $(11 \cdot T_{\text{rated}})$ is obtained with machine designs having reduced stator resistance and stator/rotor leakage inductances combined with a large mutual inductance L_m . In the case of an induction machine a double-squirrel cage rotor winding may increase the torque production due to the reduced leakage inductance and the increased resistance of the outer squirrel cage [89], and may improve the dynamic performance during winding switching.
- (2) Using (V_{rated}/f) control the output power above base speed is the rated output power up to the critical speed, while relying on $V_{\text{rated}}/(f \cdot N)$ control the output power (or torque) can be increased, for example, by a factor of 2 at 2–3 times the base speed (of p_1 configuration) through the reduction in the number of series stator winding turns per phase N , therefore, increasing the critical speed.
- (3) While with (V_{rated}/f) control the maximum obtainable speed is about 3 times the base speed, with $(V_{\text{rated}} \cdot p)/(f \cdot N)$ control a maximum speed of about 6–8 times the base speed can be obtained. This speed increase may make mechanical gears obsolete.
- (4) The $(V_{\text{rated}} \cdot p)/(f \cdot N)$ control appears to be suitable for hybrid/electric propulsion applications because the reduction in the number of turns N per phase of the stator winding is equivalent to an increase of the applied voltage V_{rated} without actually increasing the voltage of the power supply (e.g., battery). This is advantageous for vehicle applications where the battery voltage is limited to, say 300 V_{DC} because of safety considerations. For example, although the electric machine is supplied with 300 V_{DC} only, it behaves like a machine fed by 600 V_{DC}, resulting in larger output power per unit of weight (5 kW/kg-force) [79,80,84] than a conventional [89–91] design (3 kW/kg-force) at an output power rating of about 50 kW. Note, (kg-force) is equivalent to the international unit kp (kilopond) as the unit of weight.

- (5) The increased torque range at low and high speeds can eliminate a mechanical transmission shifting from a low gear to a high gear range.
- (6) Inverter switches (conducting in reverse direction) or a separate diode bridge can be employed to operate the electric (induction) machine as a generator supplying regenerated energy to battery or DC source. Thus the (e.g., induction) machine operating as a generator can either be excited via the PWM inverter from the battery or via AC capacitors.
- (7) For automobiles with internal combustion engine only, the starter and the generator can be integrated in one machine [80,84].

12.3.2.8 Solutions to power quality problems of wind power plants with mechanical gears

The deployment of mechanical gears is not satisfactory, in particular in off-shore wind farms. The introduction of electronic gears, where the speed and torque can be controlled seamlessly, is desirable. This requires the deployment and design of appropriate electronic converters operating as an inverter for motoring and rectifier when regeneration occurs, whereby the rectifier must excite the induction generator to set up the magnetic field.

12.3.3 Influence of tower on energy production and flicker

In horizontal WP plants the rotor blades rotate in the wind shadow of the tower and therefore the blade's torque is periodically changed at low frequencies causing flicker due to changing (wind) shadowing [92,93]. In addition, this flicker effect must be eliminated within the output voltage of the generator due to causing ill effects in humans such as nausea and epilepsy [94].

12.3.4 Constant-speed wind power (WP) plants

Constant-speed wind machines were used in the first generation of WP plants [95]; it turned out they are less efficient and prone to mechanical failure due to mechanical transient stresses caused by changing wind conditions. On-shore WP towers can now be 175 m high due to the availability of large cranes [81] which increases the efficiency and decreases fluctuation due to wind conditions.

12.3.5 Variable-speed wind power plants

These machines can handle changing wind speeds due to the combination of either permanent-magnet synchronous generators (PMSG) [77,96–103], or doubly fed induction generators (DFIG) with transformer/rectifier/inverter combinations for rotor excitation [89] where the variable generator frequency of the rotor f_{rot} is transformed via AC-DC-AC conversion from the systems frequency of nominally f_{syst} (e.g., 60 Hz). The required power of the rotor AC-DC-AC conversion system is only about 8% of the stator output power and the speed of the rotor can be controlled $n_{\text{rot}} = n_{\text{rat}} \pm 30\%$.

12.3.6 Operation of wind farms

Wind farms—based on the horizontal drive—built in remote areas due to their visual impact [104,105] and acoustic noise [106] represent a significant part (about 15% of total energy generated) of renewable energy development as compared to solar thermal and PV plants contributing about 5% [107,108] of renewable energy generated or 0.7% of total energy generated. Wind farms consist of a great number—a few hundred to thousands—of individual plants in the 1 to 8 MW range resulting in outputs of a few hundred megawatts [109] provided the wind drives them at rated power. If properly located, managed and operated wind farms behave like a large plant similar to a conventional plant: this is especially true when wind farms are located on-shore near the ocean or on islands e.g., Ireland [110]. The construction of wind farms off-shore appears to be more complicated due to the rapid drop of the shelf in the southern and western shores [111] of the United States and due to local opposition [112] near the eastern shore. An attempt has been made to construct WP plants/farms in different parts of the United States in order to exploit their different wind conditions: for example in the northern and the southern parts of Colorado [113]. The operation of WP plants is not possible at low and high wind conditions. At low wind speeds there is not sufficient torque and at high wind conditions the blades must be protected by furling [114]. The optimal wind speed depends upon the design (e.g., constant, variable-speed) and output power rating of the plant and is in the range of 3.5–25 m/s [115]. It is best to operate wind plants at sea level due to the highest density of the air. WP plants built on very high mountain ridges are more costly: wind conditions are not as steady and the air is not as dense as in the plains [116] resulting in more difficult power quality problems through changing wind conditions.

The control of power plants in general—including WP facilities—is based on the recently developed principle of synchronized phasors (synchrophasors) [12,117,118]. Synchrophasors make real-time measurement of electrical quantities such as voltages, currents, various (reactive, real, apparent) powers, displacement power factor, (total) power factor including harmonics, transients, and frequencies from across the power system possible. Applications include wide-area control [119], system model validation [120], determining stability margins [121], maximizing stable system loading [122], islanding detection [123], system-wide disturbance recording, and visualization of dynamic system response. The basic system building blocks are Global Positioning System (GPS) satellite-synchronized clocks [124], phasor measurement units (PMUs) [125], a phasor data concentrator (PDC), communication equipment, and visualization software as outlined in [126] by Schweitzer Engineering Laboratories (SEL).

Siemens finalized the construction contract [127] of a wind farm with the Cape Wind project in New England, on Horseshoe Shoal, Massachusetts that could be a significant step to advance wind farm activity in the United States. The wind turbines are to be spaced 500–900 m apart. Siemens will supply 130 offshore turbines, each 3.6 MW. One of the reasons the off-shore wind industry in the United States has not matched its WP potential has been opposing groups' objections to "visual pollution" and harm to birds, just two of the arguments that have been used against such initiatives. Another reason is the sharp drop-off of the shelf in the southern part of the United States.

For the first time an off-shore interconnected system is planned [9] involving the Scandinavian (Denmark, Sweden) and Central European (Germany) countries within the Baltic Sea connecting two off-shore wind farms operated by different countries. This interconnection

(Interkonnektorenloesung) will serve as a pilot project for Europe about 30 km northwest of the island of Rügen. Via a converter station, starting in 2018, two parallel 150 kV cables will connect a Danish wind farm of 600 MW with the Energie Baden Württemberg (EnBW) wind farm “Baltic 2” of 288 MW. Both wind farms lay 15 km apart. This technical concept may be extended and include additional connections. The varying generated electricity can be utilized either in Scandinavia or in Germany without the need to curtail WP generation. Until now when there are strong wind conditions some of the wind turbines must reduce generation in order to prevent that the generation will be larger than the consumption, leading to stability problems. Any connection to other consumers is a contribution to the optimization of the grid. During low wind conditions the electricity generated through hydropower in Scandinavian countries can be supplied to Germany.

Vertical axis WP plants have not been used in wind farms due to their lower output powers. However, such plants might be acceptable for operation near residences. One problem with such designs is the nonconstant torque development [128] which can be mitigated through power electronic and storage components.

12.3.7 Control of wind power systems

Constant-speed induction generators have lower power efficiency than variable-speed generators of the PMSG (Figs. 12.17–12.22) and DFIG (doubly-fed induction generator) types [130] which have pitch-blade control. The advantages of variable-speed control include maximum power extraction and improvement in dynamic behavior of turbine. The PMSG (permanent magnet synchronous generator) and DFIG are the most widely employed variable-speed wind generator systems. Note that the power coefficient $C_p(\lambda, \beta)$ of wind energy conversion systems (WECS) depends upon the tip-speed ratio λ and the blade pitch angle β [131]. The DFIGs are simpler and less expensive due to the smaller rating (about 8% of the rated stator output power) of the rotor converters (rectifier, inverter) but require regular maintenance of slip rings and carbon brushes. Any grid voltage fluctuation may produce oscillations in stator output power and can cause rotor torque pulsations. PMSG systems have a higher efficiency with reduced size and higher power density but require more complicated control circuitry to maintain converter voltages. In both cases a mechanical gear is not

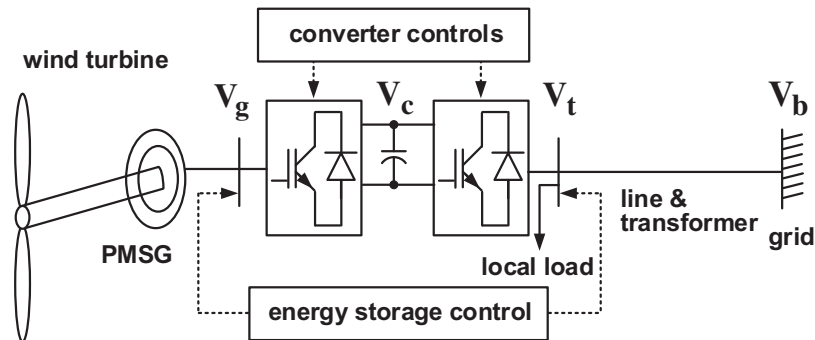


FIG. 12.17 Permanent-magnet synchronous generator (PMSG) with energy storage control [129].

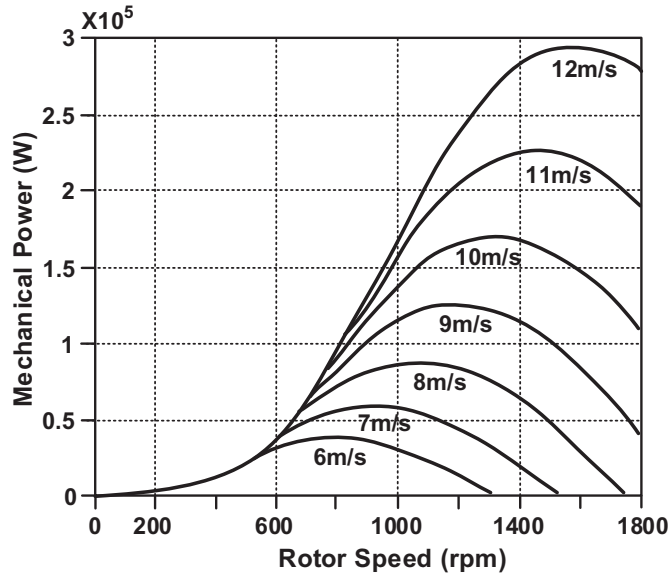


FIG. 12.18 Speed of PMSG as a function of power output of wind turbine [129].

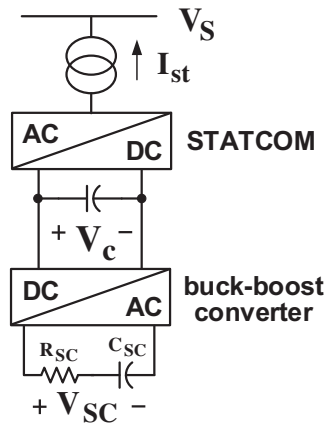


FIG. 12.19 Static synchronous compensator (STATCOM) with super-capacitor (SC) energy storage system [129].

required: the pole number of the PMSG is large and the rotor converter frequency control of the DFIG can accommodate at least $\pm 30\%$ speed deviation from rated speed. One of the important aspects of variable-speed WECS is to capture maximum energy from wind. Maximum power point tracking (MPPT) is important similar to PV systems. It can be achieved through an intelligent adaptive radial basis function neural network (RBFNN) controller [132] for PMSG wind systems. A superconducting magnetic energy storage system (SMES)

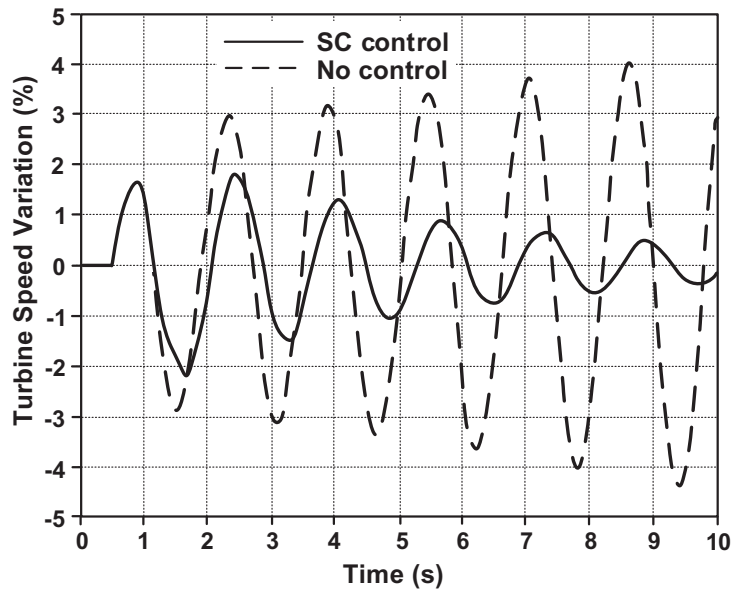


FIG. 12.20 Speed variation of wind turbine following a torque pulse of 0.5 pu and of 0.5 s duration with and without super-capacitor (SC) control [129].

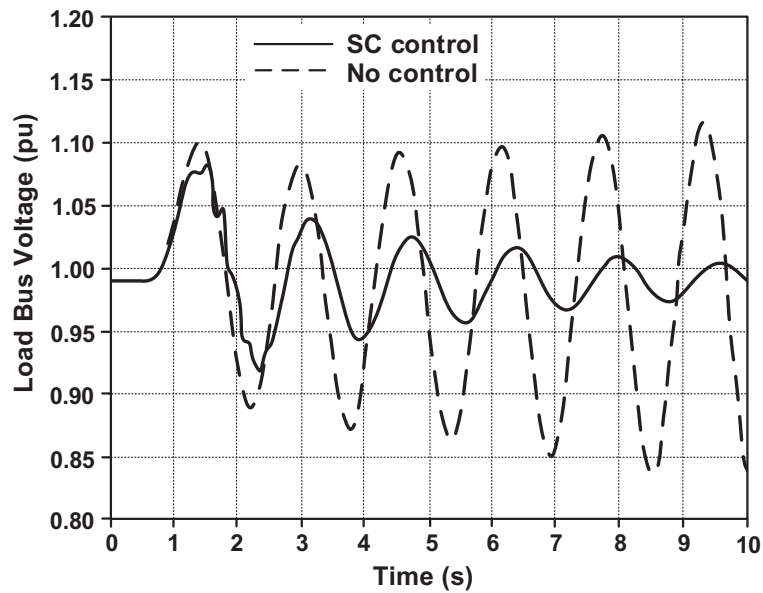


FIG. 12.21 PMSG terminal voltage variation following a three-phase fault of 0.5 s duration at the point of common coupling (PCC) with and without super-capacitor (SC) control [129].

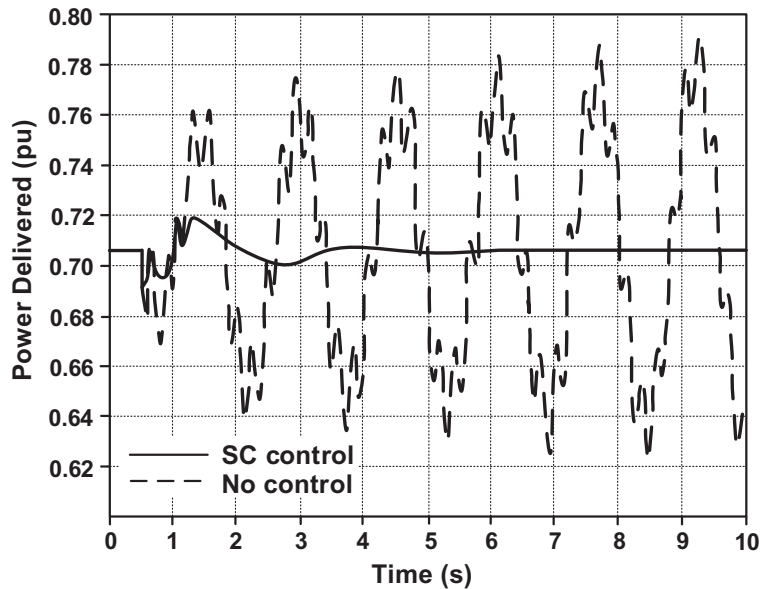


FIG. 12.22 Developed power of the PMSG following a 0.5s three-phase fault with and without super-capacitor (SC) control [129].

is proposed next to the grid-side inverter [133]. Use of storage capacitors [132] are proposed as well to compensate the power fluctuation of the WECS. In [134], the stable operation of doubly fed induction generators (DFIGs) is analyzed when installed in weak and islanding/standalone power systems utilizing the swing equation [135], equal area criterion [135], and the 1.5MW DFIG model of General Electric Company [136].

12.3.8 Maximum power extraction from horizontal-axis wind turbine

The Lanchester–Betz–Joukowski [1] limit—and the maximum efficiency for horizontal axis wind turbines—is discussed in [137–139]. Unfortunately, it does not apply to vertical-axis wind turbines addressed next.

12.3.9 Vertical-axis wind turbines

This type of wind turbine [140–142] might be suitable for either urban or remote areas. The key to their use is the reduction of audible noise, visual acceptance limiting their output to less than 50kW, the management of the nonconstant torque, and the employment of electronic gears and electrical storage to mitigate their nonconstant power output.

12.3.10 Solutions to power quality problems of wind power plants

The consequences (e.g., acoustic noise, height restrictions, and visual pollution) of operating vertical-axis WP plants within residential areas should be researched. With respect to

horizontal-axis plants off-shore WP farms/parks appear to be costlier to construct and to operate. The on-shore approach should be therefore favored until the mechanical stresses on the wind turbine blades are better understood due to strong wind conditions in off-shore regions. Permanent-magnet synchronous generators (PMSG) require expensive rare earth material (e.g., neodymium) making them expensive. For this reason it is proposed to rely on inexpensive squirrel-cage induction generators where the power factor/magnetizing current can be provided and controlled by the PWM rectifier feeding the PWM inverter. PMSG and DFIG require no mechanical gear, however, are very heavy due to the large pole numbers. Research into electronic gears should be supported in order to operate generators with low pole numbers resulting in low weight at variable speed.

12.3.11 Short- and long-term energy storage systems

Electric storage components can store electricity in DC form only [143]. For this reason AC-DC converters (rectifiers), DC-AC converters (inverters), and DC-DC converters (step-down and step-up) must be relied on. All types of converters are discussed in [1].

12.3.12 Role and design of short-term and long-term storage plants [144]

Short-term storage devices such as conventional battery, super-capacitor, and flywheel can be put online within a few 60 Hz cycles but cannot provide energy for more than about 10 min; however, flow batteries and variable-speed hydro plants (with DFIGs) can change their load within a few 60 Hz cycles and are able to deliver power for days. Long-term storage plants such as constant speed (pump-)hydro storage and compressed air plants require a start-up time of about 6–10 min (due to synchronization), but can operate for several hours or even days. Two short-term storage plants will be analyzed below.

12.3.13 Storage devices for short-term and long-term plants

Conventional batteries, super-capacitors, ultra-capacitors, and flywheels serve as short-term storage devices, while compressed air, (constant and variable speed) hydro plants, and thermal storage are used as long-term storage facilities. Variable-speed drives [77,79] are proposed for short- and long-term storage plants in order to eliminate mechanical gears.

12.3.14 Hydro-storage or pump-storage plants

Hydro pump-storage plants require upper and lower reservoirs at different altitudes, where the water can be recycled during a pumping-generation cycle. Of course a sufficiently large source of water replenishing the loss of water due to evaporation must be available at either the upper or lower reservoir. This type of storage is of the long-term type with a fairly quick response (e.g., seconds) if variable generators, e.g., doubly fed induction generators (DFIGs) for pump-storage, hydro plants similar to WP plants [145] are employed.

12.3.14.1 Application Example 12.3: Design of a 250 MW pumped-storage, hydro-power plant [1]

A pumped-storage, hydro-power plant (Fig. E12.3.1) is to be designed [18,19,146–148] for a rated power $P_{\text{rated}} = 250 \text{ MW}$ and a rated energy capacity 1500 MWh per day. It consists of an upper and a lower reservoir with a water capacity $C_{\text{H}_2\text{O}}$ each. In addition there must be an emergency reserve for 625 MWh. Water evaporation must be taken into account and is 10% per year for each reservoir, and the precipitation per year is 20 in.. The maximum and minimum elevations of the upper reservoir are 1050 and 1000 ft, respectively. The maximum and minimum elevations for the lower reservoir are 200 and 150 ft, respectively. The water turbine is of the Francis type and it is coupled with a salient-pole synchronous machine with $p = 24$ poles, which can be used as a generator for generating electricity by releasing the water from the upper reservoir to the lower one, and as a motor for pumping the water from the lower reservoir to the upper one. A capacity factor of 100% can be assumed: in a real application the capacity factor may vary between 70% and 90%.

- If the power efficiencies of the water turbine, the synchronous generator, and the Y- Δ transformer are $\eta_{\text{turbine}} = 0.8$, $\eta_{\text{synchronous machine}} = \eta_{\text{Y-}\Delta \text{ transformer}} = 0.95$, respectively, compute the required turbine input power $P_{\text{turbine_input}}^{\text{required}}$.
- Provided the head of the water is $H = 850 \text{ ft}$., the frictional losses between water and pipe amount to 15%, and the water flow measured in cubic feet per second (cft/s) is $Q = 6000 \text{ cft/s}$, compute the mechanical power available at the turbine input $P_{\text{turbine}}^{\text{input}}$ (measured in watts) or P_{kW} (measured in kilowatts) [146–148].
- How does $P_{\text{turbine_input}}^{\text{required}}$ compare with $P_{\text{turbine}}^{\text{input}}$?
- Compute the specific speed N_q [146–148]. Is the selection of the Francis turbine justified?
- What other types of water turbines exist?
- What is the amount of water the upper or lower reservoirs must hold to generate $E = (1500 \text{ MWh} + 625 \text{ MWh}) = 2125 \text{ MWh}$ per day during an 11.3 h period?
- Is the given precipitation per year sufficient to replace the evaporated water? If not, what is the required “rain-catch” area to replace the yearly water loss through evaporation?
- The pumped-storage plant delivers the energy $E = (1500 \text{ MWh} + 625 \text{ MWh}) = 2125 \text{ MWh}$ per day for which customers pay \$0.20/kWh due to peak-power generation. What is the payback period of this pumped storage plant if the construction price is \$3000 per installed power capacity of 1 kW, the cost for pumping is \$0.03/kWh, and the interest rate is 3%?

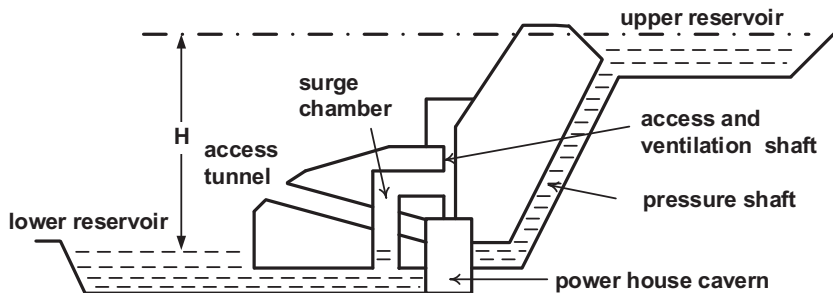


FIG. E12.3.1 Pumped-storage hydro-power plant for peak-power generation (requires start-up time of about 6 min).

Solution to Application Example 12.3 *Design of a 250MW Pumped-Storage, Hydro-Power Plant [1].*

(a) Computation of the turbine input power $P_{turbine_input}^{required}$:

$$P_{turbine_input}^{required} = \frac{P_{rated}}{\eta_{turbine} \cdot \eta_{synchronous_machine} \cdot \eta_{Y-\Delta_transformer}} = \frac{250 \text{ MW}}{0.8 \cdot 0.95 \cdot 0.95} = 346.25 \text{ MW}.$$

(b) Computation of the mechanical power available at the turbine input P_{kW} [146–148] measured in kilowatts, while $P_{turbine}^{input}$ is measured in watts.

The effective head $H_{effective}$ including the frictional losses of the water is

$$H_{effective} = (1050 - 200) \text{ ft} \cdot 0.85 = 722.5 \text{ ft}$$

$$\begin{aligned} P_{turbine}^{input} [\text{watts}] &= \frac{H_{effective} \cdot Q \cdot W \cdot 746}{550} = \frac{722.5 \cdot 6000 \cdot 62.4 \cdot 746}{550} = 366.9 \cdot 10^6 \text{ watts} \\ &= 366.9 \text{ MW}, \end{aligned}$$

or measured in kilowatts $P_{kW} [kW] = 366,900$,

where $H_{effective}$ is measured in ft., Q is measured in cubic feet per second (cft/s), W is the weight of 1 cubic foot of water measured in 62.4 (lb-force)/(ft)³, 746 W = 1 hp., and 550 is a constant converting ft · (lb-force)/s to horse power (hp).

(c) How does $P_{turbine_input}^{required}$ compare with $P_{turbine}^{input}$?

$$P_{turbine_input}^{required} \leq P_{turbine}^{input}.$$

(d) Computation of the specific speed. Is the selection of the Francis turbine justified?

$$\text{Synchronous speed of generator } n_s = \frac{120 \cdot f}{p} = 300 \text{ rpm}, Q = 6000 \cdot 0.0283 = 169.8 \text{ m}^3/\text{s},$$

$$H_{effective} = 722.5 \cdot 0.3048 = 220.22 \text{ m. Specific speed of a water turbine is now } N_q =$$

$$n_s \frac{Q^{0.5}}{H_{effective}^{0.75}} = 68.38, \text{ which means a Francis turbine (see Fig. 5.63, reference [1]) is satisfactory.}$$

(e) What other types of water turbines exist?

Pelton wheel, Kaplan turbine, bulb-type turbine, mixed-flow turbine, propeller turbine, and Gorlov turbine.

(f) The amount of water the upper or lower reservoirs must hold:

$Q = 6000 \text{ cft/s}$, therefore, the water required during 1 day is $\text{Capacity}_{H_2O} = 6000 \cdot 0.0283 \cdot 3600 \cdot 11.3 = 6.908 \cdot 10^6 \text{ m}^3$, this requires two (an upper and lower) reservoirs of 20m depth, 588m long and 588m wide, each. As is well known the water inlets at the upper and lower reservoirs will be in the middle of the reservoir depths in order to prevent that sand and rocks enter the turbine and the pump. This is to say the 20m depths are effective depths and the actual depths might be more than twice as large, say 50m.

(g) Required “rain-catch” area:

$\text{Capacity}_{H_2O\text{evaporation}} = 6.908 \cdot 10^5 \text{ m}^3$, $\text{Capacity}_{H_2O} + \text{Capacity}_{H_2O\text{evaporation}} = 6.908 \cdot 10^6 + 6.908 \cdot 10^5 = 7.599 \cdot 10^6 \text{ m}^3$. For 20in. of precipitation one gets per year $\text{Capacity}_{H_2O\text{precipitation}} = 20 \cdot 0.0254 (588)^2 = 1.756 \cdot 10^5 \text{ m}^3$. Note, $\text{Capacity}_{H_2O\text{evaporation}}$ exceeds $\text{Capacity}_{H_2O\text{precipitation}}$ from this follows that a rain-catch area is required. At the time of commissioning the plant the additional rain-catch area is required to fill the upper reservoir; some run-off will be required after the commissioning of the plant. The additional water to be supplied initially by the rain-catch area is

Capacity_{H₂O additional} = Capacity_{H₂O} + Capacity_{H₂O evaporation} - Capacity_{H₂O precipitation} = $7.599 \cdot 10^6 \text{ m}^3 - 1.756 \cdot 10^5 \text{ m}^3 = 7.42 \cdot 10^6 \text{ m}^3$ requiring a rain-catch area of $(\text{area})_{\text{rain-catch}} = 7.42 \cdot 10^6 / (20 \cdot 0.0254) = 14.61 \cdot 10^6 \text{ m}^2 = 14.61 \text{ km}^2$.

- (h) Payback period of pumped storage plant: Earnings = $\$2125 \cdot 10^3 \cdot 0.20 \cdot 365 \cdot y = 155.125 \cdot 10^6 \cdot y$, expenses = $\$750 \cdot 10^6 + (2125 \cdot 10^3 \cdot 0.03 \cdot 365 \cdot y) / (0.95 \cdot 0.95 \cdot 0.80 \cdot 0.85) = \$750 \cdot 10^6 + \$37.92 \cdot y \cdot 10^6$.

Payback period in y years without interest payments: $y = 750 \cdot 10^6 / (155.125 \cdot 10^6 - 37.92 \cdot 10^6) = 6.4$ years.

Payback period with interest payments: $155.125 \cdot y = 750(1.03)^y + 37.92 \cdot y$ resulting in about $y = 8$ years.

12.3.15 Flywheel storage

This type of storage can be constructed anywhere, and it is of the short-term type with a quick response time [149].

12.3.15.1 Application Example 12.4: Design of a 10 MWh flywheel short-term storage power plant [1]

Design a flywheel storage system which can provide for about 6 min a power of 100 MW, that is, energy of 10 MWh. The flywheel power plant consists (see Fig. E12.4.1A and B) of a flywheel, mechanical gear, synchronous machine, inverter-rectifier set and a step-up transformer. The individual components of this plant must be designed as follows:

- (a) For the flywheel (made from steel) as shown in Fig. E12.4.1A ($h = 0.9 \text{ m}$, $R_{1o} = 1.5 \text{ m}$, $R_{1i} = 1.3 \text{ m}$, $R_{2o} = 0.50 \text{ m}$, $R_{2i} = 0.10 \text{ m}$, $b = 0.2 \text{ m}$), compute the ratio of inertia (J) to the weight (W) of the flywheel, that is (J/W).

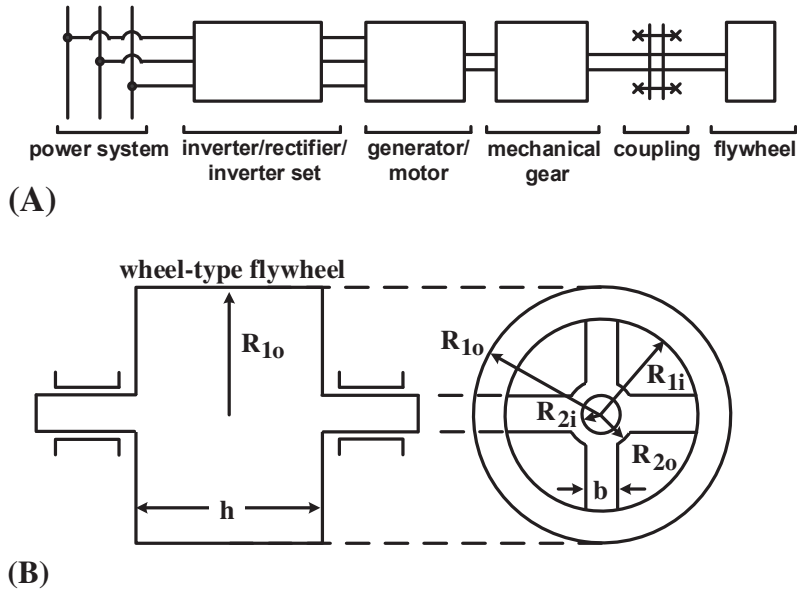


FIG. E12.4.1 Flywheel power plant (start-up time of a few 60 Hz cycles) (A) Block diagram, (B) Flywheel [1].

The axial moment of inertia of a flywheel with 4 spokes is

$$J_{wheel} = \frac{1}{2} \cdot \pi \cdot \gamma \cdot h \cdot (R_{1o}^4 - R_{1i}^4) + \frac{4}{3} \cdot h \cdot b \cdot \gamma \cdot (R_{1i}^3 - R_{2o}^3) + \frac{1}{2} \cdot \pi \cdot \gamma \cdot h \cdot (R_{2o}^4 - R_{2i}^4) \text{ [kgm}^2\text{]}$$

- (b) For the given values $h = 0.9\text{ m}$, $R_{1o} = 1.5\text{ m}$, $R_{1i} = 1.3\text{ m}$, $R_{2o} = 0.50\text{ m}$, $R_{2i} = 0.10\text{ m}$, and $b = 0.2\text{ m}$ calculate for the wheel-type configuration the stored energy $E_{\text{stored rated}}$ provided the flywheel rotates at $n_{\text{flywheel rated}} = 21,210\text{ rpm}$.

Solution to Application Example 12.4 *Design of a 10 MWh Flywheel Short-Term Storage Power Plant [1].*

- (a) Axial moment of inertia of flywheel:

$$\begin{aligned} J_{wheel} &= \frac{1}{2} \cdot \pi \cdot \gamma \cdot h \cdot (R_{1o}^4 - R_{1i}^4) + \frac{4}{3} \cdot h \cdot b \cdot \gamma \cdot (R_{1i}^3 - R_{2o}^3) + \frac{1}{2} \cdot \pi \cdot \gamma \cdot h \cdot (R_{2o}^4 - R_{2i}^4), \\ J_{wheel} &= \frac{1}{2} \cdot \pi \cdot 7.86 \cdot 10^3 \cdot 0.9 \cdot [(1.5)^4 - (1.3)^4] + \frac{4}{3} \cdot 0.9 \cdot 0.2 \cdot 7.86 \cdot 10^3 \cdot [(1.3)^3 - (0.5)^3] + \frac{1}{2} \cdot \pi \\ &\quad \cdot 7.86 \cdot 10^3 \cdot 0.9 \cdot [(0.5)^4 - (0.1)^4] \\ &= 29.117 \cdot 10^3 \text{ kgm}^2, \end{aligned}$$

weight of flywheel:

$$\begin{aligned} W_{wheel} &= (\gamma \cdot V)g = \gamma \cdot [\pi \cdot h \cdot (R_{1o}^2 - R_{1i}^2) + 4 \cdot h \cdot b \cdot (R_{1i} - R_{2o}) + \pi \cdot h \cdot (R_{2o}^2 - R_{2i}^2)] \cdot g, \\ W_{wheel} &= 7.86 \cdot 10^3 \cdot [\pi \cdot 0.9 \cdot (1.5^2 - 1.3^2) + 4 \cdot 0.9 \cdot 0.2 \cdot (1.3 - 0.5) + \pi \cdot 0.9 \cdot (0.5^2 - 0.1^2)] \\ &\quad \cdot 9.81 \\ &= 218.753 \cdot 10^3 \text{ N}, \end{aligned}$$

$$\text{ratio inertia/weight} : \left(\frac{J_{wheel}}{W_{wheel}} \right) = \frac{29.117}{218.75} = 0.133 \frac{\text{kgm}^2}{\text{N}}.$$

- (b) Stored energy at rated speed: The rated angular velocity is

$$\omega_{\text{flywheel_rated}} = 2\pi \left(\frac{n_{\text{flywheel_rated}}}{60} \right) = 2221.04 \text{ rad/s},$$

$$E_{\text{stored_rated}} = \frac{1}{2} J_{wheel} (\omega_{\text{flywheel_rated}})^2 = \frac{1}{2} 29.117 \cdot 10^3 (2221.04)^2 = 71.82 \cdot 10^9 \text{ Ws} = 19.95 \text{ MWh}.$$

Note the flywheel must not be completely discharged. The angular velocity at 9.95 MWh is

$$9.95 \text{ MWh} = \frac{1}{2} 29.117 \cdot 10^3 (\omega_{\text{flywheel_min imum}})^2$$

or

$$\omega_{\text{flywheel_minimum}} = \sqrt{\frac{2 \cdot 9.95 \text{ MWh}}{29.117 \cdot 10^3}} = 1568.57 \text{ rad/s.}$$

12.3.16 Battery storage

Battery storage plants can be constructed anywhere, they have a quick response and are usually of the short-term type. However, if fluid-flow batteries are chosen then these plants can continually supply energy and act therefore as long-term batteries [150].


12.3.16.1 Application Example 12.5: Design a 10MWh battery short-term storage plant

Relying solely on wind/solar energy is problematic because it may not be available when needed, for example, a wind farm could lose as much as 60MW within a minute. There are several scenarios of how the power change of 60MW per minute can be mitigated through complementary, albeit more expensive power sources: one is the combination of a (long-term) compressed-air power plant with a (short-term) battery plant for bridging the time from when the wind power (WP) plant output decreases (60MW/min) to when either a long-term compressed-air storage (CAES) plant [20,21] or a pump-storage hydro plant [18,19,146] can take over. A CAES plant requires a start-up time of about 6 min. To bridge this 6-min gap for a 100MW compressed-air power plant, a battery plant is proposed to provide up to 100MW during a 6-min interval amounting to a required energy storage of 10MWh. Inverters fed from a battery can deliver power within a few 60 Hz cycles to the power system, replacing the lost power of 60MW per minute almost instantaneously. This combination of CAES plant and battery storage plant as bridging energy sources can be employed for peak-power operation as well as for improving power quality by preventing brown/blackouts. Fig. E12.5.1A depicts the block diagram of such a battery storage plant consisting of wind turbine mechanical gear, synchronous generator, 3-phase transformer, 3-phase rectifier, battery bank, three-phase inverter, 3-phase transformer, and power system.


Recommended voltages are: output line-to-line voltage of generator $V_{L-L}^g = 677 \text{ V}$, input DC voltage of inverter $V_{\text{bat}} = V_{\text{DC}} = 600 \text{ V}$, output line-to-line voltage of inverter $V_{L-L}^i = 240 \text{ V}$, power system voltage $V_{L-L}^s = 480 \text{ V}$, the 2 transformers are of the Δ -Y type connected to the generator and of the Y- Δ type connected to the power system.

- Draw a detailed circuit diagram depicting transformers, rectifier, capacitor, and inverter in more detail as compared to Fig. E12.5.1B and specify the powers, voltages and currents, provided 10 rectifier/battery bank/inverter combinations are connected in parallel: this will improve the overall efficiency of the plant, because some of the components can be disconnected, if wind power (WP) generation is low. The efficiency for each and every component is about $\eta = 0.96$.
- Determine the specifications of the Y- Δ three-phase transformer between inverter and power system.

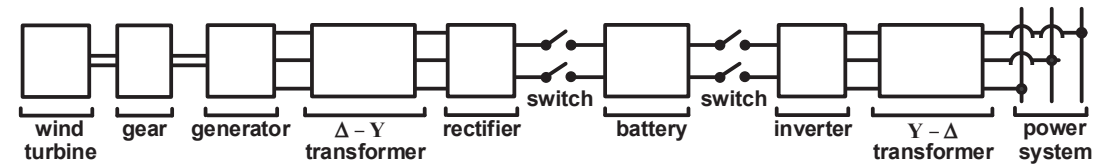
Design of PWM (pulse-width-modulated) three-phase current controlled voltage-source inverter feeding power into the utility system via Y- Δ transformer




(A)

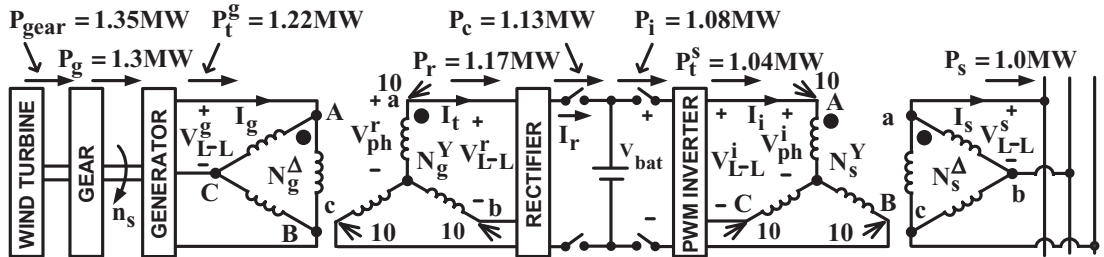


(B)

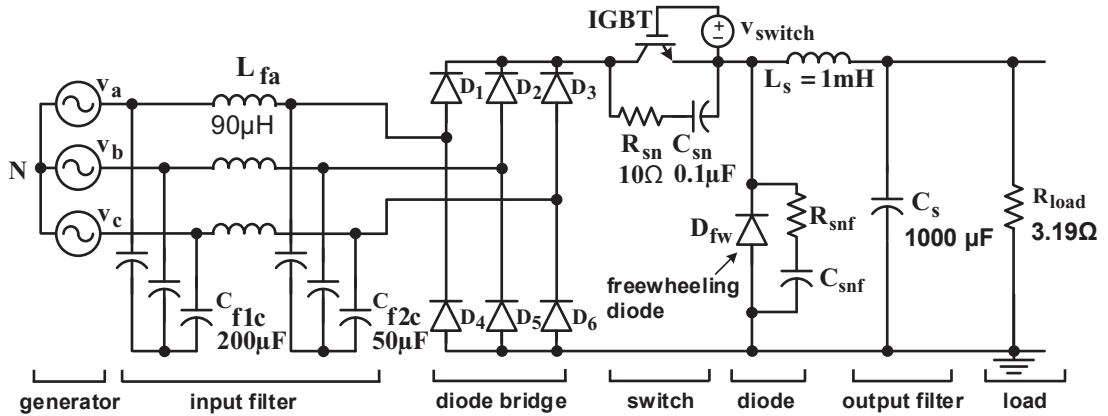

(C)

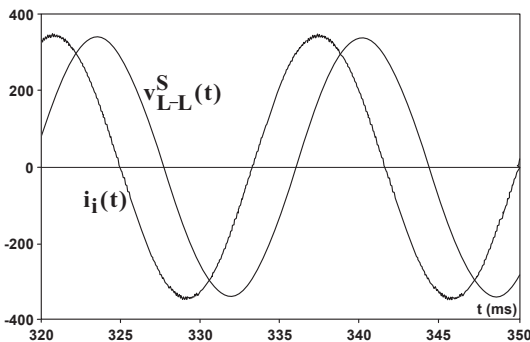

(D)

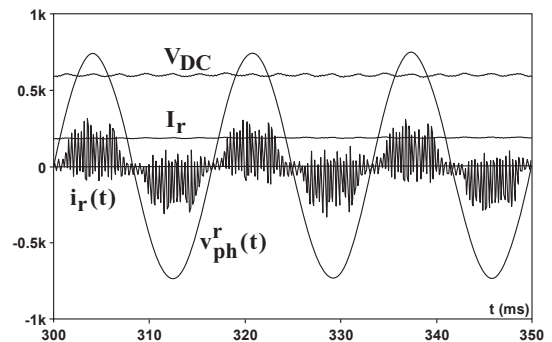

(E)

FIG. E12.5.1 (A) Block diagram for charging and discharging battery bank (requires start-up time of a few 60Hz cycles). (B) Circuit diagram depicting transformers, rectifier, battery with $V_{\text{bat}} = V_{DC}$, and inverter supplying $P_s = 1.0\text{MW}$ to the power system, that is, 100 such plants must be connected in parallel to supply 100MW. (C) Controlled three-phase rectifier with self-commutated switch. (D) Inverter output current for the given (by power system) inverter output line-to-line voltage: inverter output current $i_i(t)$ leads the inverter line-to-line voltage $v_{L-L}^s(t)$ by 60 degrees, (E) Rectifier input and output voltages and currents [1].

The inverter circuit of Fig. 12.6A and B is to be analyzed with PSpice, where the DC voltage is $V_{DC} = 600$ V, output voltage of inverter $V_{L-L}^i = 240$ V, power system voltage $V_{L-L}^s = 480$ V, and the switching frequency of the IGBTs is $f_{switch} = 7.2$ kHz. The DC input capacitance is $C_{filter} = 1000$ μ F (not shown in Fig. 12.6A), the components connected at the output of the inverter bridge are $L_w = 1$ mH, $R_w = 10$ m Ω (wave-shaping inductor), $L_f = 45$ μ H, $C_F = 10.3$ μ F, $R_F = 10$ m Ω (output filter); transformer and power system inductance and resistance per phase are $L_N = 265$ μ H, and $R_N = 50$ m Ω , respectively, the power system (phase) voltages referred to the secondary (Y) side of the Y- Δ transformer are $v_{aN}(t) = 196$ Vsin ωt , $v_{bN}(t) = 196$ Vsin($\omega t - 120^\circ$), and $v_{cN}(t) = 196$ Vsin($\omega t - 240^\circ$).

- (c) Calculate with PSpice (you may ignore the output filter because of the 64-node limit of the PSpice student version program) and plot output phase voltage and phase current of the PWM inverter provided the output voltages are sinusoidal/cosinusoidal as given above by the power system voltages.
- (d) Subject the output current of the inverter to a Fourier analysis.

Design of a controlled three-phase rectifier

Fig. E12.5.1C shows the three-phase rectifier of Fig. 12.1 with six diodes and one self-commutated switch, an insulated-gate bipolar transistor (IGBT).

For the load resistance $R_{load} = 3.19$ Ω , the nominal input phase voltages of the rectifier can be assumed to be $v_a = 738$ Vsin ωt , $v_b = 738$ Vsin($\omega t - 120^\circ$), and $v_c = 738$ Vsin($\omega t - 240^\circ$) resulting at a duty cycle of $\delta = 50\%$ in a DC output voltage of 600 V. The IGBT is gated with a switching frequency of 3 kHz at $\delta = 50\%$. $C_{f1c} = 200$ μ F, $L_{fa} = 90$ μ H, $C_{f2c} = 50$ μ F, ideal diodes D_1 to D_6 and D_{fw} , $v_{switch} = 100$ V magnitude, $R_{snf} = R_{sn} = 10$ Ω , $C_{snf} = C_{sn} = 0.1$ μ F, $C_s = 1000$ μ F, $L_s = 1$ mH, and $V_{load} = 600$ V.

- (e) Perform a PSpice analysis and plot output voltage of the rectifier $v_{load}(t) \approx V_{DC}$, rectifier output current I_r , rectifier input phase current $i_r(t)$, and the rectifier input phase voltage $v_{ph}^r(t)$.
- (f) Subject the rectifier input current $i_r(t)$ to a Fourier analysis.
- (g) Determine the specifications of the three-phase transformer between generator and rectifier.
- (h) Determine the overall costs of this power plant if a specific cost of \$4000/kW installed output capacity is assumed. Note that a coal-fired plant has a specific cost of \$2000/kW installed output capacity.

Solution to Application Example 12.5 *Design a 10 MWh Battery Short-Term Storage Plant.*

- (a) The circuit diagram depicting transformers, rectifier, capacitor, and inverter in more detail as compared to Fig. E12.5.1A is shown in Fig. E12.5.1B with a rated output power of $P_s = 1.0$ MW. For the generation of 100 MW 100 such plants must be connected in parallel. Assuming a unity power factor the output powers of the various components are as follows. Inverter-side transformer output power: $P_s = 1.0$ MW, PWM inverter output power: $P_t^i = 1.04$ MW, battery bank output power: $P_i = 1.08$ MW, rectifier output power $P_c = 1.13$ MW, generator-side transformer output power: $P_r = 1.17$ MW, generator output power: $P_g^s = 1.22$ MW, gear output power: $P_g = 1.3$ MW, wind turbine output power: $P_{gear} = 1.35$ MW as listed in Fig. E12.5.1B.

- (b) The input voltage of inverter of $V_{DC} = 600$ V results with a modulation index of $m = 0.655$ in the output phase voltage of the inverter $V_{ph}^i = \frac{m \cdot V_{DC}}{2\sqrt{2}} = \frac{0.655 \cdot 600}{2\sqrt{2}} = 139$ V, or $V_{L-L}^i = \sqrt{3} V_{ph}^i = 240$ V. The transformation ratio of the inverter-side Y- Δ transformer is $\frac{N_s^\Delta}{N_s} = \frac{V_{L-L}^s}{V_{ph}^i} = \frac{480}{139} = 3.45$ resulting in a current fed into the utility system of $I_s = \frac{P_s}{\sqrt{3} V_{L-L}^s} = \frac{1 \text{ MW}}{\sqrt{3} \cdot 480} = 1202.8$ A. The output current of one inverter is $I_i = \frac{P_i^s}{3 \cdot V_{ph}^i \cdot 10} = \frac{1.04 \text{ MW}}{3 \cdot 139 \cdot 10} = 249$ A.
- (c) The PSpice input list of Table 12.3 yields for the given output inverter voltage the current wave shape of Fig. E12.5.1D. Note that the amplitude of the inverter current is $\sqrt{2} \cdot 249 \text{ A} = 352 \text{ A}$ and the amplitude of the output line-to-line voltage of the inverter is $\sqrt{3} \cdot 139 \text{ V} = 240 \text{ V}$. The inverter output current $i_i(t)$ leads the inverter line-to-line voltage $v_{L-L}^s(t)$ by 60 degrees based on generator operation.
- (d) Fourier analysis of inverter output current: all current harmonics are negligibly small due to the small modulation index and relatively large wave-shaping inductance L_w .
- (e) Fig. E12.5.1E depicts the input and output voltages and currents of the rectifier.
- (f) Dominant harmonic amplitudes including the fundamental are:
1st: 105.4 A; 5th: 17.7 A; 7th: 11.2 A; 36th: 12.8 A; 37th: 23.0 A; 43rd: 17.3 A; 45th: 18.2 A; 49th: 84.2 A; 51st: 75.7 A; 55th: 10 A. Note, to get rms values these values must be divided by $\sqrt{2}$. That is, the fundamental rms value is 74.54 A.
- (g) The rectifier output current is $I_r = \frac{P_r}{V_{DC} \cdot 10} = \frac{1.13 \text{ MW}}{600 \text{ V} \cdot 10} = 188$ A and results with $V_{DC} = 600$ V in a load resistor of $R_{load} = 3.19 \Omega$. The PSpice simulation requires for a duty cycle of 50% with a load resistor $R_{load} = 3.19 \Omega$ an input AC voltage of $V_{ph}^r = 522$ V or an amplitude of 738 V. With the given generator voltage of $V_{L-L}^g = 677$ V one obtains the generator-side transformer ratio of $\frac{N_g^\Delta}{N_g} = \frac{677}{522} = 1.3$. If the rectifier and the generator were matched with respect to their voltages one does not need a generator-side transformer. The input current to the rectifier is approximately [note there are harmonics as indicated in part f)] $I_t = \frac{P_r}{3 \cdot V_{ph}^r \cdot 10} = \frac{1.17 \text{ MW}}{3 \cdot 522 \text{ V} \cdot 10} = 74.7$ A, this compares well with the rms value of the fundamental of part f), that is, $105.4 / 1.414 = 74.54$ A. The input current to the generator-side transformer is $I_g = \frac{P_t}{\sqrt{3} \cdot V_{L-L}^g} = \frac{1.22 \text{ MW}}{\sqrt{3} \cdot 677 \text{ V}} = 1040.5$ A. That is, the generator output power is at unity power factor $P_t^g = \sqrt{3} \cdot V_{L-L}^g \cdot I_g = \sqrt{3} \cdot 677 \cdot 1040.5 = 1.22 \text{ MW}$, which confirms the value as calculated in part a).
- (h) The cost of the 100 MW battery plant is $\$400 \cdot 10^6$.

12.3.17 Compressed-air storage

This type of long-term storage has been available and operating for quite some time in Germany [21] and in the United States, Alabama [20].

12.3.17.1 Application Example 12.6: Design of a 100 MW compressed-air storage facility

Design a compressed-air energy storage (CAES) plant for $P_{out_generator} = P_{rated} = 100 \text{ MW}$, $V_{L-L} = 13,800 \text{ V}$, and $\cos\Phi = 1$ which can deliver rated power for 2 h. The overall block diagram of such a plant [20,21] is shown in Fig. E12.6.1. It consists of a compressor, cooler, booster

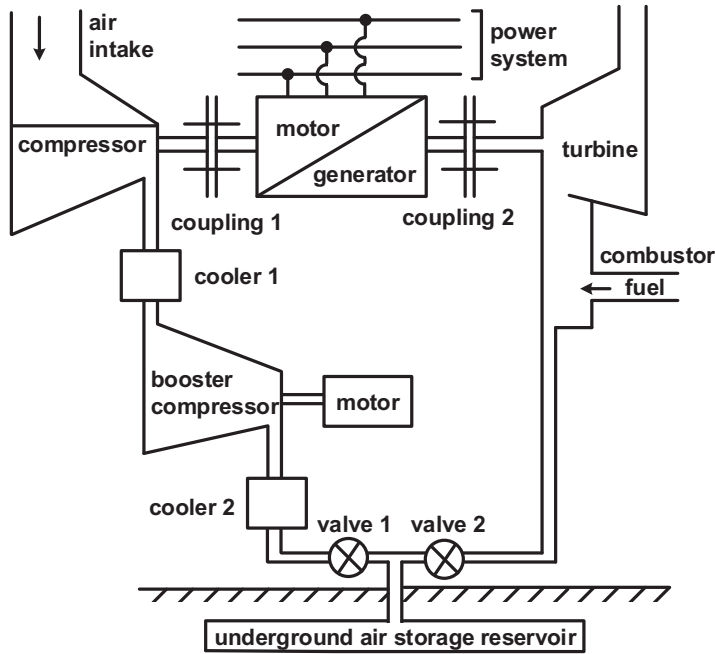


FIG. E12.6.1 Compressed-air storage (CAES) power plant requiring a start-up time of a few (e.g., 6) minutes [1].

compressor, booster cooler, booster-compressor three-phase, 2-pole induction motor with a 1:2 mechanical gear to increase the compressor speed, underground air-storage reservoir, combustor fired either by natural gas or oil or coal, a modified (without compressor) gas turbine, and a three-phase, 2-pole synchronous generator/ motor.

Design data:

Air inlet temperature of compressor: $50^{\circ}\text{F} \equiv 283.16\text{ K}$ at ambient pressure $1\text{ atm} \equiv 14.696\text{ psi} \equiv 101.325\text{ kPa}(\text{scal})$.

Output pressure of compressor: $11\text{ atm} \equiv 161\text{ psi} \equiv 1114.5\text{ kPa}$.

Output temperature of booster cooler: $120^{\circ}\text{F} \equiv 322.05\text{ K}$ at $1000\text{ psi} \equiv 6895\text{ kPa}$.

Output temperature of combustor: $1500^{\circ}\text{F} \equiv 1089\text{ K}$ at $650\text{ psi} \equiv 4482\text{ kPa}$.

Output temperature of gas turbine: $700^{\circ}\text{F} \equiv 644\text{ K}$ at ambient pressure $1\text{ atm} \equiv 14.696\text{ psi} \equiv 101.325\text{ kPa}$.

Generation operation: 2 h at 100 MW.

Re-charging (loading) operation of underground air storage reservoir: 8 h at 20 MW.

Capacity of air storage reservoir: $3.5 \cdot 10^6\text{ ft}^3 \equiv 97.6 \cdot 10^3\text{ m}^3 \equiv (46\text{ m} \times 46\text{ m} \times 46\text{ m})$.

Start-up time: 6 min.

Turbine and motor/generator speed: $n_{s\text{ mot/gen}} = 3600\text{ rpm}$.

Compressor speed: $n_{s\text{ comp}} = 7000\text{ rpm}$.

Cost per 1 kW installed power capacity: \$2000.

- (a) Calculate the Carnot efficiency of the gas turbine $\eta_{\text{carnot gas turbine}} = \eta_{\text{compressor}} \cdot \eta_{\text{turbine}}$

$$= \frac{T_1 - T_2}{T_1}$$

- (b) Note that the compressor of a gas turbine has an efficiency of $\eta_{\text{compressor}} = 0.50$. In this case the compressor is not needed because pressurized air is available from the underground reservoir. The absence of a compressor increases the overall efficiency of the CAES, if “free” WP (wind power) is used for charging the reservoir. Provided the synchronous machine (motor/generator set) has an efficiency of $\eta_{\text{generator}} = 0.9$ calculate.
- (b1) the efficiency of the turbine without the compressor $\eta_{\text{compressor}}$
- (b2) $P_{\text{out turbine}}$
- (b3) $P_{\text{out combustor}}$
- (b4) For a heat rate of the combustor of 5500 BTU/kWh, determine the input power of the combustor required (during 1 h) $P_{\text{in combustor}}$.
- (b5) The two air compressors (charging the reservoir during 8 h) including the two coolers require an input power of 20 MW (whereby wind energy is not free) calculate the overall efficiency of the CAES (during 1 h of operation)

$$\eta_{\text{overall}}^{\text{wind energy is not free}} = \frac{P_{\text{out generator}}}{P_{\text{in combustor}} + P_{2\text{-compressors}+2\text{-coolers}}}.$$

Compute the overall efficiency if wind energy is free, that is, $\eta_{\text{overall}}^{\text{wind energy is free}} = \frac{P_{\text{out generator}}}{P_{\text{in combustor}}}$.

- (c) What is the overall construction cost of this CAES plant, if the construction price is \$2000 per installed power capacity of 1 kW?
- (d) The CAES plant delivers the energy $E = 200 \text{ MWh}$ per day (during 2 h) for which customers pay \$0.25/kWh due to peak-power generation. What is the payback period of this CAES plant, if the cost for pumping (loading, recharging) is neglected (free wind power), the cost of 1 cubic foot of natural gas is \$0.005, and the interest rate is 3%?
- (e) Repeat the analysis for a heat rate of 4000 BTU/kWh at a gas turbine output temperature of 600 K.

Hint: For the calculation of the Carnot efficiency of the gas turbine and of the compressors you may use the software available on the Internet address:

<http://hyperphysics.phy-astr.gsu.edu/hbase/thermo/adiab.html#c3>

Solution to Application Example 12.6 Design of a 100 MW Compressed-Air Storage Facility

- (a) The Carnot efficiency of the gas turbine is

$$\eta_{\text{carnot gas turbine}} = \eta_{\text{compressor}} \cdot \eta_{\text{turbine}} = \frac{T_1 - T_2}{T_1} = \frac{1089 \text{ K} - 644 \text{ K}}{1089 \text{ K}} = 0.41.$$

- (b1) The efficiency of the gas turbine without the compressor $\eta_{\text{compressor}}$ is

$$\eta_{\text{turbine}} = \frac{\eta_{\text{carnot gas turbine}}}{\eta_{\text{compressor}}} = \frac{0.41}{0.5} = 0.82.$$

- (b2)

$$P_{\text{out turbine}} = \frac{P_{\text{generator}}}{\eta_{\text{generator}}} = \frac{100 \text{ MW}}{0.9} = 111 \text{ MW}.$$

(b3)

$$P_{out\ combustor} = \frac{P_{outturbine}}{\eta_{turbine}} = \frac{111\text{ MW}}{0.82} = 135.37\text{ MW}.$$

(b4) For a heat rate of the combustor of 5500 BTU/kWh, determine the input power of the combustor required (during 1 h) $P_{in\ combustor}$. Fig. E12.6.2 shows the output powers and the associated efficiencies of generator, gas turbine without compressor, and combustor.

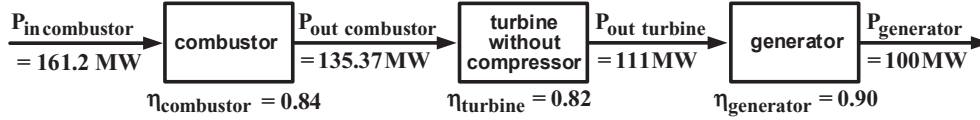


FIG. E12.6.2 Output powers and the associated efficiencies of generator, gas turbine without compressor, and combustor.

The heat rate = 5500 BTU/kWh indicates the thermal input energy to the combustor required to generate 1 kWh of electrical energy, that is, 5500 BTU = 1.612 kWh of thermal energy is required to generate 1 kWh of electrical output energy.

The input energy delivered within 1 h to the combustor is identical to the input power of the combustor $P_{in\ combustor} = P_{out\ generator} \left(\frac{1.612\text{ kWh}}{1\text{ kWh}} \right) = 100\text{ MW} \frac{1.612\text{ kWh}}{1\text{ kWh}} = 161.2\text{ MW}$.

The efficiency of the combustor is $\eta_{combustor} = \frac{135.37}{161.2} = 0.84$.

(b5) Two air compressors (charging the reservoir during 8 h) including the two coolers require an input power of 20 MW (whereby wind energy is not free) calculate the overall efficiency of the CAES (during 1 h of operation).

The energy required during an 8 h period for the 2 compressors and 2 coolers is $E_{2\text{ compressors}+2\text{ coolers}} = 20\text{ MW} \cdot 8\text{ h} = 160\text{ MWh}$. If we want to deliver 100 MW during 1 h then the power required is $P_{2\text{ compressors}+2\text{ coolers}} = 80\text{ MW}$. The overall efficiency is

$$\eta_{overall}^{wind\ energy\ is\ not\ free} = \frac{P_{out\ generator}}{P_{in\ combustor} + P_{2\text{ compressors}+2\text{ coolers}}} = \frac{100\text{ MW}}{(161.2 + 80)\text{ MW}} = 0.415.$$

(b6) If wind energy is free, then

$$\eta_{overall}^{wind\ energy\ is\ free} = \frac{P_{out\ generator}}{P_{in\ combustor}} = \frac{100\text{ MW}}{(161.2)\text{ MW}} = 0.62.$$

(c) The construction cost of this CAES plant is \$200M.

(d) Earnings per day by discharging the CAES.

$$\text{Earning} = 200,000 \text{ kWh} \cdot \$0.25 = \$50 \text{ k/day.}$$

Natural gas cost: $5500 \text{ BTU} = 1.6117 \cdot 10^3 \text{ Wh}$ or $1 \text{ Wh} = 3.413 \text{ BTU}$ resulting in $1 \text{ MWh} = 3.413 \cdot 10^6 \text{ BTU}$.

The fuel energy delivered to the combustor is $E_{\text{natural gas}} = 161.2 \text{ MWh} \cdot 2 \cdot 3.413 \cdot 10^6 \text{ BTU/MWh} = 1100 \cdot 10^6 \text{ BTU}$. $1(\text{ft})^3$ of natural gas contains 1021 BTU, and the volume of natural gas required is.

$Vol_{\text{natural gas}} = \frac{1100 \cdot 10^6}{1021} (\text{ft})^3 = 1.08 \cdot 10^6 (\text{ft})^3$ within a 2 h period or per day. The fuel costs are then $\text{Cost}_{\text{fuel}} = 1.08 \cdot 10^6 \cdot \$0.005 = \$5400$ for 2 h or per day.

Payback period:

$$\begin{aligned}
 & \$ (1.03)^y 100000 \text{ kW} \cdot \$2000/\text{kW} + \$5400 \cdot 365 \cdot y = \$50,000 \cdot 365 \cdot y \\
 & (1.03)^y / 200 = 16.28 \cdot y \text{ resulting in approximately } y = 30 \text{ years.}
 \end{aligned}$$

(e) Repetition of the analysis for a heat rate of 4000 BTU/kWh at a gas turbine output temperature of 600 K.

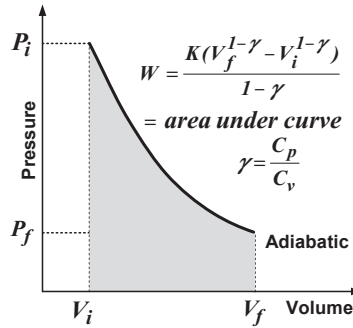


FIG. E12.6.3 Determination of Carnot efficiency.

The Carnot efficiency of the gas turbine is determined from Fig. E12.6.3.

The Carnot efficiency of the gas turbine is

$\eta_{\text{carnot gas turbine}} = \eta_{\text{compressor}} \cdot \eta_{\text{turbine}} = \frac{T_1 - T_2}{T_1} = \frac{1089 \text{ K} - 600 \text{ K}}{1089 \text{ K}} = 0.449$, where the turbine power is $488,974.29 \text{ J} / 3600 \text{ s} = 135.83 \text{ MW}$.

The efficiency of the gas turbine without the compressor $\eta_{\text{compressor}}$ is

$$\eta_{\text{turbine}} = \frac{\eta_{\text{carnot gas turbine}}}{\eta_{\text{compressor}}} = \frac{0.449}{0.5} = 0.898.$$

$$P_{\text{out turbine}} = \frac{P_{\text{generator}}}{\eta_{\text{generator}}} = \frac{100 \text{ MW}}{0.9} = 111.11 \text{ MW},$$

$$P_{\text{out combustor}} = \frac{P_{\text{out turbine}}}{\eta_{\text{turbine}}} = \frac{111.11 \text{ MW}}{0.898} = 123.73 \text{ MW}.$$

For a heat rate of the combustor of 4000 BTU/kWh at a gas turbine output temperature of 600 K, determine the input power of the combustor required (during 1 h) $P_{\text{in combustor}}$.

The heat rate = 4000 BTU/kWh indicates the thermal input energy to the combustor required to generate 1 kWh of electrical energy, that is, 4000 BTU = 1.1723 kWh of thermal energy is required to generate 1 kWh of electrical energy.

The input energy delivered within 1 h to the combustor is identical to the input power of the combustor $P_{\text{in combustor}} = P_{\text{out generator}} \left(\frac{1.1723 \text{ kWh}}{1 \text{ kWh}} \right) = 100 \text{ MW} \left(\frac{1.1723 \text{ kWh}}{1 \text{ kWh}} \right) = 117.23 \text{ MW}$.

The efficiency of the combustor is $\eta_{\text{combustor}} = \frac{123.73}{117.23} > 1.0$ which is not possible. This design is not feasible.

12.3.17.2 Solutions to power quality problems of compressed-air storage

Short-term and long-term storage plants must be used in order to store renewable energy when the demand of energy is low, and vice versa to supply energy to the grid when the demand is high. It should not be permissible to curtail the production of renewable energy sources as practiced in Germany and other countries at the present time. For the design of storage plants it is important that the interaction of them with renewable plants is seamless within a few milliseconds. This requires that the gains and time constants of the renewable and storage plants are compatible so that instabilities and oscillations can be avoided although the generation and required loads are matched. To date most countries are reluctant to embark in new designs of storage plants and engineers can make a great contribution to the design of efficient, low-cost, and reliable storage facilities.

12.3.18 Hydrogen generation and storage

A well-known way of splitting water (H_2O) is by electrolysis [151]. A container (trough) contains distilled water and two electrodes—the anode (A) and cathode (C) consisting of either platinum or nickel—connected to a DC current source. Pure H_2O is a poor conductor; the addition of H_2SO_4 to the water makes the solution conducting. Although the solution of H_2O and H_2SO_4 heats up—due to the losses caused by the current flowing from anode to cathode—at the anode oxygen O_2 and at the cathode hydrogen H_2 is accumulated. The efficiency of splitting H_2O based on electrolysis is about $\eta_{\text{electrolysis}} = 80\%$, that is, 20% of the energy is converted to heat within the electrolysis process. The energy density of hydrogen is about 2.28 times that of gasoline ($E_{\text{gasoline}} = 12.3 \text{ kWh/kg-force}$), that is, $E_{\text{H}_2} = 28 \text{ kWh/kg-force}$. {Note 1 L (dm^3) of water has a mass m of 1 kg at 4°Celsius, and exerts a (force or) weight of 1 kg-force (or 1 kp) on a scale}. The additional energy loss due to the production of distilled water can be deduced from the definition of unit 1 kcal: The energy of 1 kcal is required to heat 1 kg-force of H_2O by 1°C (this is approximately true only because the energy required depends upon the temperature range. It is exactly true heating pure water from 14.5°C to 15.5°C). Note that 1 kcal = 4.186 kWs.

12.3.18.1 Application Example 12.7: Production of hydrogen based on electrolysis and its application with respect to electric cars with fuel cells [1]

- (a) The energy of a $P_{\text{out}} = 5 \text{ MW}$ wind-power plant can be used to generate hydrogen during 8 h of operation per day during 365 days per year. The construction cost of the 5 MW

plant and the generation of pure water including the electrolysis equipment is \$4000/kW installed power capacity. How much hydrogen energy (expressed in MWh) can be obtained during 1 year taking into account the above-described losses?

- (b) Calculate the payback period provided 1 kg-force of hydrogen (weight) can be sold for \$4.00. For your payback period calculation you may neglect interest for borrowing the money for the construction cost.
- (c) How many “equivalent-gasoline gallons” of hydrogen can be produced during 1 year?
- (d) Provided a car owner travels 15,000 miles per year with an average mileage of 40 miles/gallon “equivalent gasoline”), how many car owners can get the “equivalent gasoline gallons of hydrogen” from the 5MW plant?

Solution to Application Example 12.7 *Production of Hydrogen Based on Electrolysis and its Application with Respect to Electric Cars with Fuel Cells [1]*

- (a) The hydrogen that can be produced within 1 year is given by the total energy available from the wind turbine $E_{\text{total}} = (5\text{ MW})(8\text{ h/day})(365\text{ days/year}) = 14,600\text{ MWh}$. The efficiency of electrolysis reduces this energy to $E_{\text{useful}} = 0.8 E_{\text{total}} = 11,680\text{ MWh}$. The energy content of 1 kg-force of hydrogen is $E_{\text{H}_2} = 28\text{ kWh/(kg-force)}$, thus the amount of hydrogen produced is $H_2 = E_{\text{useful}}/E_{\text{H}_2} = 417,143\text{ (kg-force)}$. The atomic weight of hydrogen (H_2) is 2 and that of water (H_2O) is 18, therefore the amount of H_2O required for the electrolysis is $\text{H}_2\text{O} = 417,143/(2/18) = 3.754 \cdot 10^6\text{ kg-force}$. The energy loss $E_{\text{distillation}}$ due to the production of distilled water is obtained from $E_{1\text{kg-force H}_2\text{O}} = (90^\circ\text{C})(4.186\text{ kWs/}^\circ\text{C})(1\text{ h}/3600\text{ s}) = 0.10465\text{ kWh}$ as $E_{\text{distillation}} = (3.754 \cdot 10^6\text{ kg-force})(0.10465\text{ kWh/kg-force}) = 392.9\text{ MWh}$. The energy available for the electrolysis is now $E_{\text{H}_2} = E_{\text{useful}} - E_{\text{distillation}} = 11,680\text{ MWh} - 392.9\text{ MWh} = 11,287\text{ MWh}$.
- (b) The payback period—neglecting interest payments—is based on the earnings per year and the construction cost. For $H_2 = E_{\text{H}_2}/(E_{\text{H}_2}\text{ per kg-force}) = (11,287 \cdot 10^6\text{ Wh})/(28\text{ kWh/kg-force}) = 403,107\text{ kg-force per year}$ the earnings are $\text{Earnings/year} = (403,107\text{ kg-force/year})(\$4.00/\text{kg-force}) = \$1,612,428/\text{year}$. The construction cost is $C_{\text{construction}} = (\$4000)(5000\text{ kW}) = \$20,000,000$ resulting in a payback period of $y = (\$20,000,000/\$1,612,428) = 12.4\text{ years}$.
- (c) With $E_{\text{H}_2} = 11,287 \cdot 10^6\text{ kWh}$, the specific weight of gasoline of $\gamma_{\text{gasoline}} = 0.72\text{ kg-force/liter} = 2.736\text{ kg-force/gallon}$, and the energy content of gasoline $E_{\text{gasoline}} = 12.3\text{ kWh/kg-force}$ the weight of gasoline in kg-force is $\text{Weight}_{\text{gasoline}} = 11,287 \cdot 10^6\text{ kWh}/(12.3\text{ kWh/kg-force}) = 917,642\text{ kg-force}$ or the equivalent gallons of gasoline produced per year are $\text{Gallons}_{\text{gasoline}} = 917,642\text{ kg-force}/(2.736\text{ kg-force/gallon}) = 335,396\text{ equivalent gallons of gasoline per year}$.
- (d) Each car owner uses $(15,000\text{ miles/year})/(40\text{ miles/gallon}) = 375\text{ gal/year}$, that is, $[335,396\text{ gal/year}]/\{375\text{ gal/(year/owner)}\} = 895\text{ owners}$. In other words the 5MW wind-power plant produces enough hydrogen to meet the needs of 895 car owners.

12.3.19 Fuel cells

A fuel cell takes fuel (e.g., hydrogen and oxygen) as input and produces electricity as output: it will continue to produce output as long as raw material (e.g., fuel) is supplied. This is

the difference between a fuel cell and an ordinary battery, except flow batteries. While both rely on electrochemistry a fuel cell is not consumed as an ordinary battery when it produces electricity: it transforms the chemical energy stored in the fuel into electrical energy [1,152].

12.3.19.1 Application Example 12.8: Calculation of the efficiency of a polymer electrolyte membrane (PEM) fuel cell used as an energy source [1]

A PEM fuel cell has the parameters:

Performance: output power = $P_{\text{rat}} = 2400 \text{ W}^{\text{a}}$, output current = $I_{\text{rat}} = 92 \text{ A}^{\text{a}}$, DC voltage range = $V_{\text{rat}} = 25 \text{ to } 50 \text{ V}$, operating lifetime: $T_{\text{life}} = 1500 \text{ h}^{\text{b}}$.

Fuel: composition = $C = 99.99\%$ dry gaseous hydrogen, supply pressure = $p = 10 \text{ to } 250 \text{ PSIG}$, consumption = $V = 37 \text{ SLPM}^{\text{c}}$.

Operating environment: ambient temperature = $T_{\text{amb}} = 3^{\circ}\text{C}$ to 30°C , relative humidity = $\text{HR} = 0\%$ to 95% , location = indoors and outdoors^d.

Physical: length $\times$ width $\times$ height = $56 \times 50 \times 33 \text{ cm}$, weight = $W = 26 \text{ kg-force}$.

Emissions: liquid water = $\text{H}_2\text{O} = 1.74 \text{ L}$ maximum per hour.

- Calculate the power efficiency of a PEM fuel cell in two different ways.
- Find the specific power density of this PEM fuel cell expressed in W/kg-force .
- How does this specific power density compare with that of a lithium-ion battery?

Hints:

- The nominal energy density of hydrogen is $28 \text{ kWh/(kg-force)}$, which is significantly larger than that of gasoline ($12.3 \text{ kWh/kg-force}$). This makes hydrogen a desirable fuel for automobiles.
- The (weight) density of hydrogen is $\gamma_{\text{hydrogen}} = 0.0899 \text{ g-force/liter}$.
- The oxygen atom has 8 electrons, 8 protons and 8 neutrons.

Solution to Application Example 12.8 Calculation of the Efficiency of a Polymer Electrolyte Membrane (PEM) Fuel Cell Used as an Energy Source [1].

- Atomic-weight method:* Atomic weights of hydrogen (H), oxygen (O), and water (H_2O) is 1, 16, and 18, respectively. If 1.74 L of water are emitted then the weight of hydrogen consumed is $\text{Weight}_{\text{H}_2} = (2/18)(1.74 \text{ kg-force/h}) = 0.19333 \text{ kg-force/h}$ and the corresponding hydrogen input energy provided is $E_{\text{H}_2} = (0.19333 \text{ kg-force/h})(28 \text{ kWh/kg-force}) = 5.41 \text{ kWh/h}$ which corresponds to an input power of $P_{\text{in}} = 5.4133 \text{ kW}$. The output power is $P_{\text{out}} = 2.4 \text{ kW}$ resulting in a power efficiency of $\eta = P_{\text{out}}/P_{\text{in}} = 0.443$.

^aBeginning of life, sea level, rated temperature range.

^bCO destroys the proton exchange membrane.

^cAt rated power output, SLPM $\equiv$ standard liters per minute (standard flow).

^dUnit must be protected from inclement weather, sand and dust.

Hydrogen-density method: The input power of hydrogen is $P_{\text{in}} = (\gamma_{\text{hydrogen}})(\text{standard flow/h})(E_{\text{H}_2}/\text{kg-force}) = (0.0899 \cdot 10^{-3} \text{ kg-force/liter})(37 \cdot 60 \text{ L/h})(28 \text{ kWh/kg-force}) = 5.59 \text{ kWh/h}$, or $P_{\text{in}} = 5.59 \text{ kW}$ yielding a power efficiency of $\eta = P_{\text{out}}/P_{\text{in}} = 0.43$.

- (b) The specific power density per unit of weight is power density = $P_{\text{out}}/\text{weight} = 2400 \text{ W}/(26 \text{ kg-force}) = 92.3 \text{ W/kg-force}$. However, some publications cite PEM fuel cell stacks with power densities over 1500 W/kg-force . The disadvantage of a fuel cell is that braking energy cannot be stored as can be done by a battery.
- (c) The power density of a lithium-ion battery is 300 W/kg-force .

12.3.19.2 Solutions to power quality problems of fuel cells

The production of hydrogen as a fuel for electric/hybrid cars must be improved. It is conceivable that cars will be built with either combustion engines or fuel cells fed by hydrogen, and small batteries to store the available braking energy. There is not much experience with the safety of handling hydrogen on a large scale in refueling stations—similar to gasoline infrastructure. It might be better to convert hydrogen at the production site to methane, which is less explosive than hydrogen, and then reconvert methane in the automobile back to hydrogen through a chemical plant the so-called reformer.

12.3.20 Molten salt storage

Solar power generation [153–157] around the clock is possible where a solar concentrator array, consisting of thousands of mirrors on the ground and a tower supporting at the focal point of the mirrors a salt container. The great advantage of this approach is that solar heat can be stored in the molten salt.

The solar energy is generated by a massive circular array of mirrors (heliostats). The heliostat field encircles a concrete solar power tower, which holds gallons of molten salt. When the heliostats focus the sunlight onto the receiver the salt is heated to over 1000 degrees Fahrenheit. When it is needed such as at night or at peak times, the heat is released by passing the molten salt through a steam generator that drives a turbine to produce electricity. The cooled salt is then recirculated to the receiver for re-heating.

The salt used is a mixture of sodium and potassium nitrate (the same as that used in fertilizers), which is inexpensive, reliable, and environmentally friendly. It will be mixed on site with no additives. Apart from a few unique components such as the high heat flux hardware in the tower, the system uses existing technologies such as turbines and steam generators. The system was proven over a four-year period in the 1990s at a 10MW demonstration project near Barstow in California.

Other solar systems also use salt as storage, but they use synthetic oil in the steam generation. Using salt for both means the system is more efficient, since it can produce steam at higher temperatures and can harvest three times as much energy for the same amount of salt, as compared to the oil approach. The system can be air cooled, thus avoiding criticisms about water use, but its height could spark (e.g., environmental) criticisms.

12.3.21 Solutions to power quality problems of molten salt storage

The molten salt approach appears to be best suited for long-term energy storage requiring not necessarily cooling water as discussed above. The disadvantages are the great number of

heliostats and the tall tower with the heavy salt container. This approach deserves more research effort as it is suitable for desert areas. Unfortunately such a location requires long transmission lines to transmit the generated power to urban areas.

12.4 Complementary control of renewable plants with energy storage plants [144]

Most renewable energy sources such as PV and WP plants generate intermittently electricity. For this reason energy storage is needed to control in a complementary manner the flow of electrical energy from the renewable and storage plants to the consumer, as well as the flow of energy from the renewable plants to the storage plants.

12.4.1 Energy efficiency and reliability increases based on distributed generation of interconnected power system and islanding operation

Prior to 1940 there were a limited number of interconnected power systems and the servicing of the load was elementary since the systems were primarily radial circuits (Fig. 12.23A) and many power systems were operated in islanding mode. In more recent years, the numerous advantages of interconnection of many power systems were recognized within the three US power grids [1] (Western, Eastern and Texan generation systems [ERCOT≡Electric Reliability Council of Texas]), see Fig. 12.23B for example. Many loop circuits with many load/generation buses and high levels of power exchange between neighboring companies exist. The latter point relates closely to interconnection advantages.

With no addition of generation capacity, it is possible to increase generation capability, efficiency and reliability through interconnection. For example, in the case of an outage of a generating unit, power may be purchased from a neighboring company. The cost savings realized from lower installed capacity usually far outweigh the cost of the transmission circuits

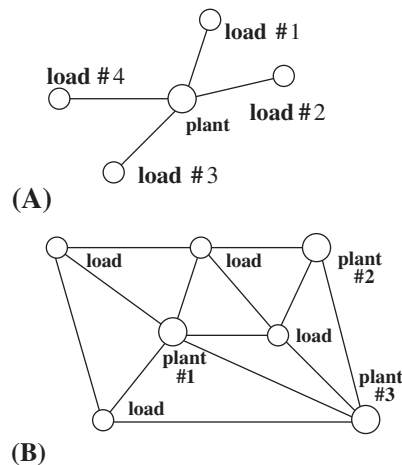


FIG. 12.23 Power system configurations: (A) Radial power system, (B) Interconnected power system.

required to access neighboring companies. Steady-state power flow is discussed in [Chapter 8](#). While on the one hand the energy efficiency of an interconnected system is increased by more fully loading existing generation plants, it is on the other hand decreased by transporting energy via transmission lines over longer distances. Thus on average the transmission loss within interconnected systems is about 8%.

12.4.2 Distributed power plants

The generation mix (e.g., coal, natural gas, nuclear, hydro plants) of existing power systems will change in the future to mainly natural-gas fired plants, distributed renewable generation facilities [\[158\]](#) and storage plants. In addition a transition from the interconnected system to an islanding mode of operation must be possible [\[55\]](#) to increase reliability. This means that any islanding system must have a frequency leading plant—called “frequency leader”—in addition to renewable plants and storage plants. Renewable and storage plants cannot be frequency leaders because of their intermittent and limited output powers, respectively.

12.4.3 Review of current methods and issues of present-day frequency and voltage control

Present-day frequency/load and voltage control of interconnected systems take place at the transmission level and are based on load sharing and demand-side management. Load sharing relies on drooping characteristics [\[49\]](#), see fig. 4a, b, c of [\[144\]](#) or [Fig. 12.24](#) where natural gas, coal, nuclear and hydro plants or those with spinning reserves supply the additional load demand. If this additional load cannot be provided by the interconnected plants then demand-side management (e.g., load shedding) will set in and some of the less important loads will be disconnected. This method of frequency/load control (when no spinning reserve is available) cannot be employed if renewable sources operate at peak power exploiting the renewable sources to the fullest in order to displace as much fuel as possible. This approach works well as long as renewable energy represents a small fraction of the generation capacity, i.e., the highly-variable renewable characteristic on the left side of [Fig. 12.24](#) is significantly smaller than the plant with spinning reserve characteristic on the

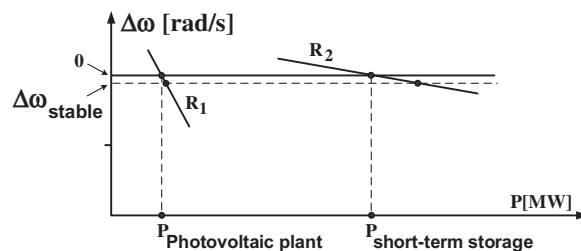


FIG. 12.24 Stable frequency control, relying on droop characteristics where a plant with spinning reserve operates continuously and a PV plant intermittently operates at its maximum output power due to peak-power tracking; angular frequency versus power output.

right. As renewable penetrations increase at either the distribution or transmission levels, control problems may result. In present-day interconnected systems, a frequency variation between $f_{\min}=59\text{ Hz}$ and $f_{\max}=61\text{ Hz}$, that is $\Delta f = \pm 1.67\%$ is acceptable [159].

12.4.4 Control or frequency/load control of an isolated power plant with one generator only

Fig. 12.25 illustrates the block diagram of governor, prime mover (steam turbine) and rotating mass and load of a turbo generator set [49].

12.4.4.1 Application Example 12.9: Angular frequency change for a positive (acceptance) and a negative (rejection) load change

Angular frequency change $\Delta\omega$ per change in generator output power ΔP , that is $R = \frac{\Delta\omega}{\Delta P} \text{ pu} = 0.01 \text{ pu}$, the frequency-dependent load change $\Delta P_L|_{\text{frequ}}$ per angular frequency change $\Delta\omega$, that is $D = \frac{\Delta P_L|_{\text{frequ}}}{\Delta\omega} = 0.8 \text{ pu}$, step-load change $\Delta P_L(s) = \frac{\Delta P_L}{s} \text{ pu} = \frac{0.2}{s} \text{ pu}$, angular momentum of steam turbine and generator set $M=4.5$, base apparent power $S_{\text{base}}=500\text{ MVA}$, governor time constant $T_G=0.01\text{ s}$, valve changing time constant $T_{CH}=1.0\text{ s}$, and load reference set point load(s)=1.0 pu:

- Derive for Fig. 12.25 $\Delta\omega_{\text{steady state}}$ by applying the final value theorem. You may assume load reference set point load(s)=1.0 pu, and $\Delta P_L(s) = \frac{\Delta P_L}{s} \text{ pu} = \frac{0.2}{s} \text{ pu}$. For the nominal frequency $f^*=60\text{ Hz}$ calculate the frequency f_{new} after the load change has taken place.
- List the ordinary differential equations and the algebraic equations of the block diagram of Fig. 12.25.
- Use either Mathematica or Matlab to establish steady-state conditions by imposing a step function for load reference set point load(s)=1 pu and run the program with a zero-step load change $\Delta P_L=0$ (for 25s) in order to establish the equilibrium condition without load step. After 25s impose a step-load change of $\Delta P_L(s) = \frac{\Delta P_L}{s} \text{ pu} = \frac{0.2}{s} \text{ pu}$ to find the transient response of $\Delta\omega(t)$ for a total of 50s and at 50s impose a step-load change of $\Delta P_L(s) = \frac{\Delta P_L}{s} \text{ pu} = \frac{-0.2}{s} \text{ pu}$ to find the transient response of $\Delta\omega(t)$ for a total of 75s.

Solution to Application Example 12.9 Angular Frequency Change for a Positive (Acceptance) and a Negative (Rejection) Load Change

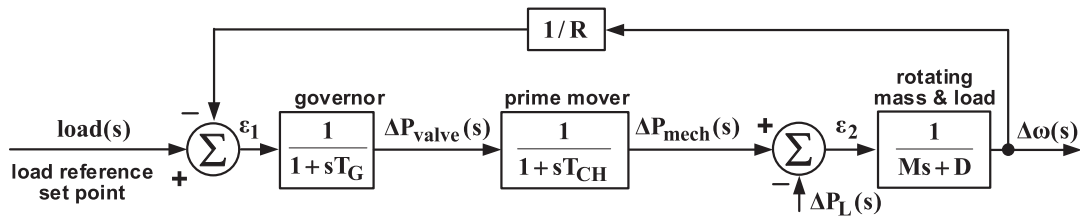


FIG. 12.25 Block diagram of governor, prime mover and rotating mass & load at isochronous operation of power system, where D corresponds to the frequency-dependent load and $\Delta P_L(s)$ is the frequency-independent load. At steady-state isochronous control the angular frequency deviation is $\Delta\omega(s)=0$.

- (a) Define the transfer functions $F_1 = \frac{1}{1+s\tau_G}$, $F_2 = \frac{1}{1+s\tau_{CH}}$, $F_3 = \frac{1}{Ms+D}$, and $F_4 = \frac{1}{R}$. From the block diagram one obtains $\Delta\omega(s) = F_3 \cdot \Delta P_{mech}(s) - F_3 \cdot \Delta P_L(s)$, where $\Delta P_{mech}(s) = F_1 F_2 \{load(s) - F_4 \Delta\omega(s)\}$ resulting in $\Delta\omega(s) = \frac{F_1 F_2 F_3 load(s) - F_3 \Delta P_L(s)}{1 + F_1 F_2 F_3 F_4}$, or

$$\Delta\omega(s) = \frac{\frac{load(s)}{(1+s\tau_G)(1+s\tau_{CH})(Ms+D)} - \frac{\Delta P_L(s)}{(Ms+D)}}{\left\{1 + \frac{1}{(1+s\tau_G)(1+s\tau_{CH})(Ms+D)}\right\}}.$$

At steady state $load(s) = 1.0$ pu and $\Delta P_L(s) = \frac{\Delta P_L}{s}$ pu = $\frac{0.2}{s}$ pu one obtains with the finite-value theorem the droop characteristic in the frequency-load coordinate system

$$\Delta\omega|_{steady\ state} = \frac{-\Delta P_L}{(D + \frac{1}{R})}, \text{ or for the given parameters } \Delta\omega|_{steady\ state} = \frac{-0.2}{(0.8 + \frac{1}{0.01})} = -1.98 \cdot 10^{-3} \text{ pu}$$

with $f_{rated} = f^* = 60$ Hz one obtains the new frequency $f_{new} = f^* - 0.00198 \cdot 60 \text{ Hz} = 59.88 \text{ Hz}$.

- (b) The algebraic and differential equations of the block diagram are:

$$\varepsilon_1 = \left\{ load - \frac{\Delta\omega}{R} \right\}, \quad \Delta P_{valve} + \tau_G \frac{d(\Delta P_{valve})}{dt} = \varepsilon_1, \quad \Delta P_{mech} + \tau_{CH} \frac{d(\Delta P_{mech})}{dt} = \Delta P_{valve},$$

$$\varepsilon_2 = \{ \Delta P_{mech} - \Delta P_L \}, \quad \text{and} \quad \Delta\omega D + M \frac{d(\Delta\omega)}{dt} = \varepsilon_2.$$

- (c) The results based on Mathematica are shown in Fig. E12.9.1. The Mathematica input program is listed in Table E12.9.1.

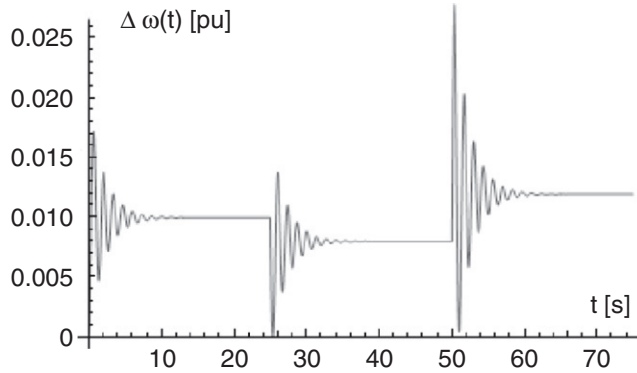


FIG. E12.9.1 Angular frequency change $\Delta\omega(t)$ for a positive load-step at time $t=25$ s and a negative load step at time $t=50$ s.

TABLE E12.9.1 Mathematica input program for isochronous generation.

```

R=0.01;
d=0.8;
M=4.5;
Tg=0.01;
Tch=1;
Lr=1;
DPL[t_]:=If[t<50,If[t<25,0,0.2],-0.2];
ic1=Dw[0]==0;
ic2=DPmech[0]==0;
ic3=DPvalve[0]==0;
E1[t_]:=Lr-Dw[t]/R;
E2[t_]:=DPmech[t]-DPL[t];
eqn1=Dw'[t]==(1/M)*(E2[t]-d*Dw[t]);
eqn2=DPmech'[t]==(1/Tch)*(DPvalve[t]-DPmech[t]);
eqn3=DPvalve'[t]==(1/Tg)*(E1[t]-DPvalve[t]);
sol=NSolve[{eqn1,eqn2,eqn3,ic1,ic2,ic3},{Dw[t],
DPmech[t], DPvalve[t]},{t,0,75},MaxSteps->100000];
Plot[Dw[t]/.sol,{t,0,75},PlotRange->All,AxesLabel->{"t[s]","Dw
[t][pu]"}]

```

12.4.5 Load/frequency control with droop characteristics of an interconnected power system broken into two areas each having one generator

Fig. 12.26 shows the block diagram of two generators interconnected by a transmission tie line [49].

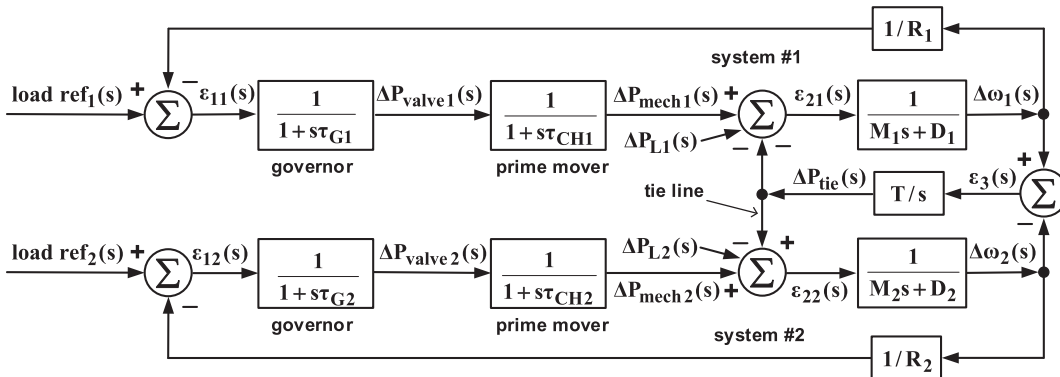


FIG. 12.26 Block diagram of two interconnected generators through a tie (transmission) line, where D_1 and D_2 correspond to the frequency-dependent loads and $\Delta P_{L1}(s)$ and $\Delta P_{L2}(s)$ are the frequency-independent loads.

12.4.5.1 Application Example 12.10: Instability with identical droop characteristics and stability with different droop characteristics

Data for generation set (steam turbine and generator) #1: Angular frequency change ($\Delta\omega_1$) per change in generator output power (ΔP_1), that is $R_1 = \frac{\Delta\omega_1}{\Delta P_1} \text{ pu} = 0.01 \text{ pu}$ (e.g., coal-fired plant), the frequency-dependent load change ($\Delta P_{L1}|_{\text{frequ}}$) per angular frequency change ($\Delta\omega_1$), that is $D_1 = \frac{\Delta P_{L1}|_{\text{frequ}}}{\Delta\omega_1} = 0.8 \text{ pu}$, step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s} \text{ pu} = \frac{0.2}{s} \text{ pu}$, angular momentum of steam turbine and generator set $M_1 = 4.5$, base apparent power $S_{\text{base}} = 500 \text{ MVA}$, governor time constant $T_{G1} = 0.01 \text{ s}$, valve charging time constant $T_{CH1} = 0.5 \text{ s}$, and load $\text{ref}_1(s) = 0.8 \text{ pu}$.

Data for generation set (steam turbine and generator) #2: Angular frequency change ($\Delta\omega_2$) per change in generator output power (ΔP_2), that is $R_2 = \frac{\Delta\omega_2}{\Delta P_2} \text{ pu} = 0.02 \text{ pu}$ (e.g., coal-fired plant), the frequency-dependent load change ($\Delta P_{L2}|_{\text{frequ}}$) per angular frequency change ($\Delta\omega_2$), that is $D_2 = \frac{\Delta P_{L2}|_{\text{frequ}}}{\Delta\omega_2} = 1.0 \text{ pu}$, step-load change $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s} \text{ pu} = \frac{-0.2}{s} \text{ pu}$, angular momentum of steam turbine and generator set $M_2 = 6$, base apparent power $S_{\text{base}} = 500 \text{ MVA}$, governor time constant $T_{G2} = 0.02 \text{ s}$, valve charging-time time constant $T_{CH2} = 0.75 \text{ s}$, and load $\text{ref}_2(s) = 0.8 \text{ pu}$.

Data for tie line: $T = \frac{377}{X_{\text{tie}}}$ with $X_{\text{tie}} = 0.2 \text{ pu}$.

- List the ordinary differential equations and the algebraic equations of the block diagram of Fig. 12.26.
- Use either Mathematica or Matlab to establish steady-state conditions by imposing a step function for load $\text{ref}_1(s) = \frac{0.8}{s} \text{ pu}$, load $\text{ref}_2(s) = \frac{0.8}{s} \text{ pu}$ and run the program with zero step-load changes $\Delta P_{L1} = 0$, $\Delta P_{L2} = 0$ (for 10 s) in order to establish the equilibrium condition. After 10 s impose step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s} \text{ pu} = \frac{0.2}{s} \text{ pu}$, and after 30 s impose

$\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s} \text{ pu} = \frac{-0.2}{s} \text{ pu}$ to find the transient response $\Delta\omega_1(t) = \Delta\omega_2(t) = \Delta\omega(t)$ for a total of 50 s. Repeat part b) for $R_1 = 0.5 \text{ pu}$, (e.g., wind-power plant), and $R_2 = 0.01 \text{ pu}$ (e.g., coal-fired plant).

Solution to Application Example 12.10 *Instability with Identical Droop Characteristics and Stability with Different Droop Characteristics.*

- Differential and algebraic equations

$$\text{System \# 1: } \varepsilon_{11} = \text{load ref}_1 - \frac{\Delta\omega_1}{R_1}, \Delta P_{\text{valve}_1} + \tau_{G1} \frac{d(\Delta P_{\text{valve}_1})}{dt} = \varepsilon_{11}, \Delta P_{\text{mech}_1} + \tau_{CH1} \frac{d(\Delta P_{\text{mech}_1})}{dt} = \Delta P_{\text{valve}_1}, \varepsilon_{21} = \Delta P_{\text{mech}_1} - \Delta P_{L1} - \Delta P_{\text{tie}}, \Delta\omega_1 D_1 + M_1 \frac{d(\Delta\omega_1)}{dt} = \varepsilon_{21}.$$

$$\text{Coupling (tie, transmission) network: } \frac{1}{T} \frac{d(\Delta P_{\text{tie}})}{dt} = \varepsilon_3, \text{ where } \varepsilon_3 = \Delta\omega_1 - \Delta\omega_2.$$

$$\text{System \# 2: } \varepsilon_{12} = \text{load ref}_2 - \frac{\Delta\omega_2}{R_2}, \Delta P_{\text{valve}_2} + \tau_{G2} \frac{d(\Delta P_{\text{valve}_2})}{dt} = \varepsilon_{12}, \Delta P_{\text{mech}_2} + \tau_{CH2} \frac{d(\Delta P_{\text{mech}_2})}{dt} = \Delta P_{\text{valve}_2}, \varepsilon_{22} = \Delta P_{\text{mech}_2} - \Delta P_{L2} + \Delta P_{\text{tie}}, \Delta\omega_2 D_2 + M_2 \frac{d(\Delta\omega_2)}{dt} = \varepsilon_{22}.$$

- The results based on Mathematica are shown in Fig. E12.10.1A and B. Fig. E12.10.1A illustrates the occurrence of instability for similar ($R_1 = 0.01 \text{ pu}$, $R_2 = 0.02 \text{ pu}$) droop characteristics and Fig. E12.10.1B stability for dissimilar ($R_1 = 0.5 \text{ pu}$, $R_2 = 0.01 \text{ pu}$) droop characteristics. The Mathematica input program is listed in Table E12.10.1.

Figs. 12.26 and E12.10.1A and B lead to the conclusion that one power plant must be the so-called frequency leader having a small-sloped droop characteristic which can accommodate

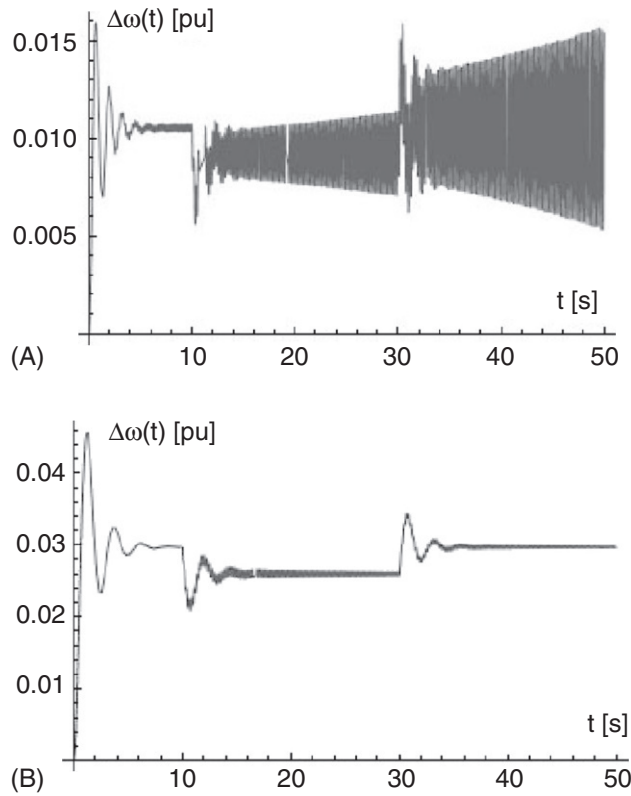


FIG. E12.10.1 (A) Angular frequency change $\Delta\omega(t)$ for unstable operation due to the approximately same droop characteristics ($R_1=0.01$ pu) and ($R_2=0.02$ pu); (B) Angular frequency change $\Delta\omega(t)$ for stable operation due to the different droop characteristics ($R_1=0.5$ pu) and ($R_2=0.01$ pu).

TABLE E12.10.1 Mathematica input program for two interconnected systems.

```

R1=0.01;
d1=0.8;
M1=4.5;
Tg1=0.01;
Tch1=0.5;
Lr1=0.8;
DPL1[t_]:=If [t<10, 0, 0.2];
R2=0.02;
d2=1.0;
M2=6;
Tg2=0.02;
Tch2=0.75;
Lr2=0.8;
DPL2[t_]:=If [t<30, 0, -0.2];

```

Continued

TABLE E12.10.1 Mathematica input program for two interconnected systems—cont'd

```

Xtie=0.2;
Tie=377/Xtie;
ic1=Dw1[0]==0;
ic2=DPmech1[0]==0;
ic3=DPvalve1[0]==0;
ic4=DPtie[0]==0;
ic5=Dw2[0]==0;
ic6=DPmech2[0]==0;
ic7=DPvalve2[0]==0;
E11[t_]:=Lr1-Dw1[t]/R1;
E12[t_]:=DPmech1[t]-DPL1[t]-DPtie[t];
E3[t_]:=Dw1[t]-Dw2[t];
E22[t_]:=Lr2-Dw2[t]/R2;
E21[t_]:=DPmech2[t]-DPL2[t]+DPtie[t];
eqn1=Dw1'[t]==(1/M1)*(E12[t]-d1*Dw1[t]);
eqn2=DPmech1'[t]==(1/Tch1)*(DPvalve1[t]-DPmech1[t]);
eqn3=DPvalve1'[t]==(1/Tg1)*(E11[t]-DPvalve1[t]);
eqn4=DPtie'[t]==Tie*E3[t];
eqn5=Dw2'[t]==(1/M2)*(E21[t]-d2*Dw2[t]);
eqn6=DPmech2'[t]==(1/Tch2)*(DPvalve2[t]-DPmech2[t]);
eqn7=DPvalve2'[t]==(1/Tg2)*(E22[t]-DPvalve2[t]);
sol=NDSolve[{eqn1,eqn2,eqn3,eqn4,eqn5,eqn6,eqn7,ic1,ic2,ic3,ic4,
ic5,ic6,ic7},{Dw1[t],DPmech1[t],DPvalve1[t],DPtie[t],Dw2[t],
DPmech2[t],DPvalve2[t]},{t,0,50},MaxSteps->100000];
Plot[Dw1[t]/.sol,{t,0,50},PlotRange->All,AxesLabel ->{"t
[s]","Dw1[t][pu]"}]

```

overloads. Note that $\Delta\omega_1(t) = \Delta\omega_2(t) = \Delta\omega(t)$ are identical, which is due to the transmission line transfer function (T/s) acting as an integrator where at steady-state the perturbation at the receiving end of the line is zero.

12.4.6 Complementary operation of renewable plants with short-term and long-term storage plants analyzed with either Mathematica or Matlab [64]

The stability of a smart/micro grid consisting of natural gas-fired power plant serving as frequency leader, a long-term storage power plant, and two intermittently operating plants (e.g., PV and WP plants) with associated short-term storage plants is the objective of this section. In order to achieve stability for a given smart/micro grid structure, the following constraints must be satisfied:

- (1) instability and frequency variations are minimized through appropriate switching (in and out) of the short-term storage plants; in particular the time instant of switching is important.
- (2) transmission line parameters are optimized;
- (3) time constants of the governors and the valves must be within feasible regions;
- (4) droop characteristics of the individual plants must satisfy certain constraints.

12.4.6.1 Application example 12.11: Operation of natural-gas fired and long-term storage plants with two renewable sources with complementary short-term storage plants

Fig. E12.11.1 illustrates the sharing (increase) of the additional load among a short-term storage plant (e.g., $R_2 = 0.01$ pu), a long-term-storage plant (e.g., $R_3 = 10$ pu), and a PV plant (e.g., $R_1 = 10$ pu) causing a frequency decrease. One obtains a stable frequency control when the short-term storage plant compensates the intermittent power output of the PV plant and the plant with spinning reserve (natural-gas fired plant) is replaced by a long-term storage plant. The long-term storage plant is connected all the time to the power system and serves therefore as frequency leader. The PV and the short-term storage plants may operate intermittently only.

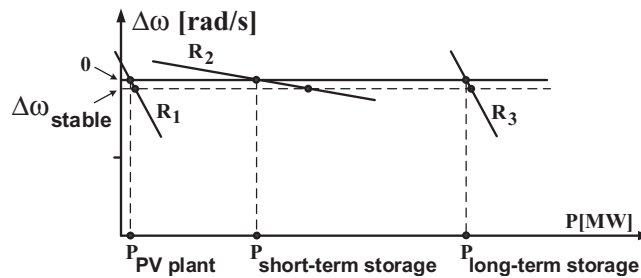


FIG. E12.11.1 Drooping characteristics of the short-term storage plant (e.g., $R_2 = 0.01$ pu), the long-term storage plant (e.g., $R_3 = 10$ pu), and intermittently operating PV plant (e.g., $R_1 = 10$ pu), R_2 is accommodating additional demand/increase of power/load, where the PV plant is operated at peak power and cannot deliver additional power.

In Fig. 12.24 the spinning reserve plant can be replaced by a long-term storage plant (e.g., pump-hydro or compressed air facility), as shown in Fig. E12.11.2A–C. The intermittently operating PV and WP plants are complemented by short-term storage plants (e.g., battery-fed inverter). During times of high power demand, the storage plants supply power to maintain the power balance between generation and the served loads. At low power demand, the renewable sources will supply the storage plants. The continuous load increase of conventional peak-power plants (which can provide additional load through spinning reserve) are replaced by putting short-term (located next to renewable plants) and long-term storage plants [1] online, reducing fossil-fuel generation and contributing to renewable portfolio standards. Renewable sources are operated at their peak-power point, e.g., the slopes of the droop characteristic R_3 and R_5 of Fig. E12.11.2B are large while those of R_1 and R_2 are relatively small to permit the increase of their output power upon demand. Thus the PV and WP plants cannot participate in frequency/load control. In Fig. E12.11.2C all droop characteristics have a relatively small slope and all participating plants can output increased power and participate in frequency/load control.

In the block diagram of Fig. E12.11.2A the PV plant, the governor, and prime mover represent the solar array and inverter/rectifier while in the short-term storage plant associated

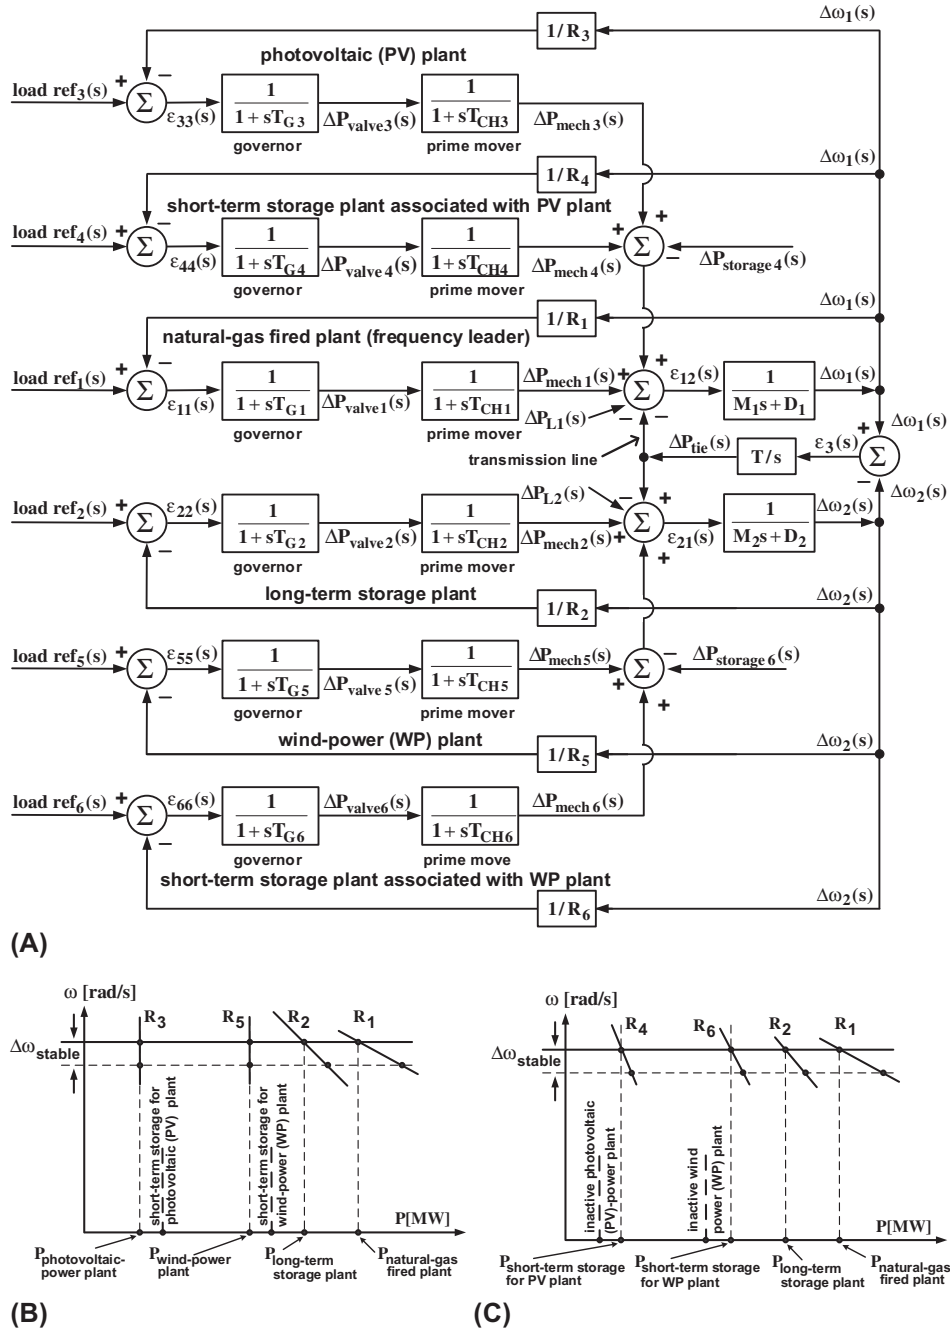


FIG. E12.11.2 Stable frequency control (A) analyzed with Mathematica, where short-term storage plants compensate the intermittent power outputs of the PV and WP plants; (B and C) the natural-gas fired plant serves as frequency leader; the long-term storage plant serves as spinning reserve.

with the PV plant the governor and prime mover represent the storage device (e.g., battery, super-capacitor, flywheel) and inverter/rectifier. Similar considerations apply to the WP plant and its associated short-term storage plant.

Data for natural-gas fired plant (system #1): Angular frequency change ($\Delta\omega_1$) per change in generator output power (ΔP_1), that is, $R_1 = \frac{\Delta\omega_1}{\Delta P_1} pu = 0.01 pu$, the frequency-dependent load change ($\Delta P_{L1}|_{frequ}$) per angular frequency change ($\Delta\omega_1$), that is $D_1 = \frac{\Delta P_{L1}|_{frequ}}{\Delta\omega_1} = 0.8 pu$, step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s} pu = \frac{0.1}{s} pu$, angular momentum of gas turbine and generator set $M_1 = 4.5$, base apparent power $S_{base} = 500$ MVA, governor time constant $T_{G1} = 0.3$ s, valve charging time constant $T_{CH1} = 0.9$ s, and load $ref_1(s) = 0.8 pu$.

Data for long-term storage plant (system #2): Angular frequency change ($\Delta\omega_2$) per change in generator output power (ΔP_2), that is $R_2 = \frac{\Delta\omega_2}{\Delta P_2} pu = 0.1 pu$ (e.g., hydro-power plant), the frequency-dependent load change ($\Delta P_{L2}|_{frequ}$) per angular frequency change ($\Delta\omega_2$), that is $D_2 = \frac{\Delta P_{L2}|_{frequ}}{\Delta\omega_2} = 1.0 pu$, step-load change $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s} pu = \frac{-0.2}{s} pu$, angular momentum of hydro turbine and generator set $M_2 = 6$, base apparent power $S_{base} = 500$ MVA, governor time constant $T_{G2} = 0.2$ s, valve charging time constant $T_{CH2} = 0.2$ s, and load $ref_2(s) = 0.5 pu$.

Data for tie line: $T = \frac{377}{X_{tie}}$ with $X_{tie} = 0.2 pu$.

Data for PV plant (system #3): Angular frequency change ($\Delta\omega_1$) per change in inverter output power (ΔP_3), that is $R_3 = \frac{\Delta\omega_1}{\Delta P_3} pu = 0.3 pu$, governor time constant $T_{G3} = 0.1$ s, equivalent valve time constant $T_{CH3} = 0.1$ s, and load $ref_3(s) = 0.01 pu$.

Data for short-term storage plant associated with PV plant (system #4): Angular frequency change ($\Delta\omega_1$) per change in generator output power (ΔP_4), that is $R_4 = \frac{\Delta\omega_1}{\Delta P_4} pu = 0.5 pu$, governor time constant $T_{G4} = 0.2$ s, equivalent valve time constant $T_{CH4} = 0.1$ s, and load $ref_4(s) = 0.01 pu$.

Data for wind power (WP) plant (system #5): Angular frequency change ($\Delta\omega_2$) per change in generator output power (ΔP_5), that is $R_5 = \frac{\Delta\omega_2}{\Delta P_5} pu = 0.7 pu$, governor time constant $T_{G5} = 0.1$ s, equivalent valve time constant $T_{CH5} = 0.1$ s, and load $ref_5(s) = 0.01 pu$.

Data for short-term storage plant associated with WP plant (system #6): Angular frequency change ($\Delta\omega_2$) per change in generator output power (ΔP_6), that is $R_6 = \frac{\Delta\omega_2}{\Delta P_6} pu = 0.5 pu$, governor time constant $T_{G6} = 0.2$ s, equivalent valve time constant $T_{CH6} = 0.1$ s, and load $ref_6(s) = 0.01 pu$.

- List the ordinary differential equations and the algebraic equations of the block diagram of Fig. E12.11.2A.
- Use either Mathematica or Matlab to establish steady-state conditions by imposing a step function for load $ref_1(s) = \frac{0.8}{s} pu$, load $ref_2(s) = \frac{0.5}{s} pu$, load $ref_3(s) = \frac{0.01}{s} pu$, load $ref_4(s) = \frac{0.01}{s} pu$, load $ref_5(s) = \frac{0.01}{s} pu$, load $ref_6(s) = \frac{0.01}{s} pu$, and run the program with a zero step-load changes $\Delta P_{L1} = 0$, $\Delta P_{L2} = 0$ for 200 s. Save the steady-state values for all variables at 200 s. Plot the calculated angular frequency response.
- Initialize the parameters with the steady-state values as obtained in Part b). After 300 s impose step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s} pu = \frac{0.1}{s} pu$, and after 400 s impose $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s} pu = \frac{-0.1}{s} pu$. Thereafter, for load $ref_3(s)$, load $ref_4(s)$, load $ref_5(s)$, DPstorage₄(s), DPstorage₆(s) and load $ref_6(s)$:

$LR3[t_]:=If[t < 600, 0, 0.06];$

$Lr4[t_]= \text{If } [t < 600.1, 0, -0.6];$
 $Lr3[t_]= \text{If } [t < 1200, \text{If}[t < 1120, \text{If}[t < 1000, \text{If}[t < 940, \text{If}[t < 910, 0, 0.03], 0.09], 0.05], 0.03], 0.0];$
 $Lr5[t]= \text{If } [t < 1200, \text{If}[t < 1120, \text{If}[t < 1000, \text{If}[t < 940, \text{If}[t < 910, 0, 0.3], 0.9], 0.5], 0.3], 0.0];$
 $DPstorage4[t_]= \text{If}[t < 1200.2, \text{If}[t < 1120.2, \text{If}[t < 1000.2, \text{If}[t < 940.2, \text{If}[t < 910.2,$
 $0, 0.15], 0.45], 0.25], 0.15], 0.0];$
 $DPstorage6[t_]= \text{If}[t < 1200.2, \text{If}[t < 1120.2, \text{If}[t < 1000.2, \text{If}[t < 940.2, \text{If}$
 $[t < 910.2, 0, 0.15], 0.45], 0.25], 0.0];$
 $Lr4[t_]= \text{If } [t < 700, 0, -0.01];$
 Plot the given WP plant load reference ($Lr3[t]$) and calculated the transient response $\Delta\omega(t)$ for a total of 1500 s.

- (d) Initialize the parameters with the steady-state values as obtained in Part b). After 300 s impose step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s} pu = \frac{0.1}{s} pu$, and after 400 s impose $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s} pu = \frac{-0.1}{s} pu$.

Thereafter:
 $Lr3[t_]= \text{If } [t < 600, 0, 0.6];$
 $Lr4[t_]= \text{If } [t < 600.1, 0, -0.6];$
 $Lr3[t_]= \text{If } [t < 1200, \text{If}[t < 1120, \text{If}[t < 1000, \text{If}[t < 940, \text{If}[t < 910, 0, 0.03], 0.09], 0.05], 0.03], 0.0];$
 $Lr5[t_]= \text{If } [t < 1200, \text{If}[t < 1120, \text{If}[t < 1000, \text{If}[t < 940, \text{If}[t < 910, 0, 0.3], 0.9], 0.5], 0.3], 0.0];$
 $DPstorage4[t_]= \text{If}[t < 1200.2, \text{If}[t < 1120.2, \text{If}[t < 1000.2, \text{If}[t < 940.2, \text{If}$
 $[t < 910.2, 0, 0.01], 0.01], 0.01], 0, 0.01], 0.0];$
 $DPstorage6[t_]= \text{If}[t < 1200.2, \text{If}[t < 1120.2, \text{If}[t < 1000.2, \text{If}[t < 940.2, \text{If}$
 $[t < 910.2, 0, 0.30], 0.90], 0.50], 0.30], 0.0];$
 $Lr4[t_]= \text{If } [t < 700, 0, -0.3];$
 calculate and plot the transient response $\Delta\omega(t)$ for a total of 1500 s.

- (e) Initialize the parameters with the steady-state values as obtained in Part b). After 300 s impose step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s} pu = \frac{0.1}{s} pu$, and after 400 s impose $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s} pu = \frac{-0.1}{s} pu$.

Thereafter:
 $Lr3[t_]= \text{If } [t < 600, 0, 0.6];$
 $Lr4[t_]= \text{If } [t < 600.1, 0, -0.6];$
 $Lr3[t_]= \text{If } [t < 1200, \text{If}[t < 1120, \text{If}[t < 1000, \text{If}[t < 940, \text{If}[t < 910, 0, 0.03], 0.09], 0.05], 0.03], 0.0];$
 $Lr5[t_]= \text{If } [t < 1200, \text{If}[t < 1120, \text{If}[t < 1000, \text{If}[t < 940, \text{If}[t < 910, 0, 0.3], 0.9], 0.5], 0.3], 0.0];$
 $DPstorage4[t_]= \text{If}[t < 1205.2, \text{If}[t < 1125.2, \text{If}[t < 1005.2, \text{If}[t < 950.2, \text{If}$
 $[t < 920.2, 0, 0.30], 0.90], 0.50], 0.30], 0.0];$
 $DPstorage6[t_]= \text{If}[t < 1200.2, \text{If}[t < 1120.2, \text{If}[t < 1000.2, \text{If}[t < 940.2, \text{If}$
 $[t < 910.2, 0, 0.01], 0.01], 0.01], 0, 0.01], 0.0];$
 $Lr4[t_]= \text{If } [t < 700, 0, -0.3];$
 calculate and plot the transient response $\Delta\omega(t)$ for a total of 1500 s.

- (f) Initialize the parameters with the steady-state values as obtained in Part b). After 300 s impose step-load change $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s} pu = \frac{0.1}{s} pu$, and after 400 s impose $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s} pu = \frac{-0.1}{s} pu$.

Thereafter:
 $Lr3[t_]= \text{If } [t < 600, 0, 0.6];$

$Lr4[t_]:=If[t < 600.1, 0, -0.6];$
 $Lr3[t_]:=If[t < 1200, If[t < 1120, If[t < 1000, If[t < 940, If[t < 910, 0, 0.03], 0.09], 0.05], 0.03], 0.0];$
 $Lr5[t_]:=If[t < 1200, If[t < 1120, If[t < 1000, If[t < 940, If[t < 910, 0, 0.3], 0.9], 0.5], 0.3], 0.0];$
 $DPstorage4[t_]:=If[t < 1230, If[t < 1150, If[t < 1030, If[t < 970, If[t < 940, 0, 0.030], 0.090], 0.050], 0.030], 0.0];$
 $DPstorage6[t_]:=If[t < 1200.2, If[t < 1120.2, If[t < 1000.2, If[t < 940.2, If[t < 910.2, 0, 0.01], 0.01], 0.01], 0.01], 0.0];$

$Lr4[t_]:=If[t < 700, 0, -0.3];$ calculate and plot the transient response $\Delta\omega(t)$ for a total of 1500 s.

Solution to Application Example 12.11 *Operation of Natural-Gas Fired and Long-Term Storage Plants with Two Renewable Sources with Complementary Short-Term Storage Plants.*

(a) Differential and algebraic equations

$$\begin{aligned}
 \text{System \# 1: } \varepsilon_{11} &= load\ ref_1 - \frac{\Delta\omega_1}{R_1}, \quad \Delta P_{valve_1} + \tau_{G1} \frac{d(\Delta P_{valve_1})}{dt} = \varepsilon_{11}, \\
 \Delta P_{mech_1} + \tau_{CH1} \frac{d(\Delta P_{mech_1})}{dt} &= \Delta P_{valve_1}, \\
 \varepsilon_{12} &= \Delta P_{mech_1} - \Delta P_{L1} - \Delta P_{tie} + \Delta P_{mech_3} + \Delta P_{mech_4} - \Delta P_{storage_4}, \\
 \Delta\omega_1 D_1 + M_1 \frac{d(\Delta\omega_1)}{dt} &= \varepsilon_{12}. \\
 \text{Coupling (tie, transmission) network: } \frac{1}{T} \frac{d(\Delta P_{tie})}{dt} &= \varepsilon_3, \text{ where } \varepsilon_3 = \Delta\omega_1 - \Delta\omega_2. \\
 \text{System \# 2: } \varepsilon_{22} &= load\ ref_2 - \frac{\Delta\omega_2}{R_2}, \quad \Delta P_{valve_2} + \tau_{G2} \frac{d(\Delta P_{valve_2})}{dt} = \varepsilon_{22}, \quad \Delta P_{mech_2} \\
 + \tau_{CH2} \frac{d(\Delta P_{mech_2})}{dt} &= \Delta P_{valve_2}, \quad \varepsilon_{21} = \Delta P_{mech_2} - \Delta P_{L2} + \Delta P_{tie} + \Delta P_{mech_5} + \Delta P_{mech_6} - \Delta P_{storage_6}, \\
 \Delta\omega_2 D_2 + M_2 \frac{d(\Delta\omega_2)}{dt} &= \varepsilon_{21}. \\
 \text{System \# 3: } \varepsilon_{33} &= load\ ref_3 - \frac{\Delta\omega_1}{R_3}, \quad \Delta P_{valve_3} + \tau_{G3} \frac{d(\Delta P_{valve_3})}{dt} = \varepsilon_{33}, \quad \Delta P_{mech_3} \\
 + \tau_{CH3} \frac{d(\Delta P_{mech_3})}{dt} &= \Delta P_{valve_3}. \\
 \text{System \# 4: } \varepsilon_{44} &= load\ ref_4 - \frac{\Delta\omega_1}{R_4}, \quad \Delta P_{valve_4} + \tau_{G4} \frac{d(\Delta P_{valve_4})}{dt} = \varepsilon_{44}, \quad \Delta P_{mech_4} \\
 + \tau_{CH4} \frac{d(\Delta P_{mech_4})}{dt} &= \Delta P_{valve_4}. \\
 \text{System \# 5: } \varepsilon_{55} &= load\ ref_5 - \frac{\Delta\omega_2}{R_5}, \quad \Delta P_{valve_5} + \tau_{G5} \frac{d(\Delta P_{valve_5})}{dt} = \varepsilon_{55}, \quad \Delta P_{mech_5} \\
 + \tau_{CH5} \frac{d(\Delta P_{mech_5})}{dt} &= \Delta P_{valve_5}. \\
 \text{System \# 6: } \varepsilon_{66} &= load\ ref_6 - \frac{\Delta\omega_2}{R_6}, \quad \Delta P_{valve_6} + \tau_{G6} \frac{d(\Delta P_{valve_6})}{dt} = \varepsilon_{66}, \quad \Delta P_{mech_6} \\
 + \tau_{CH6} \frac{d(\Delta P_{mech_6})}{dt} &= \Delta P_{valve_6}.
 \end{aligned}$$

The frequency variation of a power system should be within 59–61 Hz, that is, a frequency band of ± 1.66 Hz. Table E12.11.1 lists the Mathematica program for Fig. E12.11.2A on which the following figures are based. Fig. E12.11.3A illustrates the establishment of steady-state conditions at time $t = 200$ s for given systems parameters. Fig. E12.11.3B illustrates the given WP plant load reference ($Lr5[t]$). Fig. E12.11.3C shows the transient response $\Delta\omega(t)$ if storage plants 4 and 6 absorb the additional energy generated by WP plant with 0.2 s delay, and Fig. E12.11.3D depicts the transient response $\Delta\omega(t)$ if only storage plant 6 absorbs the additional energy generated by WP plant with

0.2s delay. If the change of the PW plant is absorbed by the short-term storage plant 4 associated with the PV plant then Fig. E12.11.3E is obtained. Fig. E12.11.3F shows the transient response $\Delta\omega(t)$ if no storage plant absorbs the additional energy generated by WP plant. The influence of the transmission line, switching instants, and storage plants increasing $\Delta\omega(t)$ can clearly be observed.

- (b) The results based on Mathematica are shown in Fig. E12.11.3. The Mathematica input program is listed in Table E12.11.1.

TABLE E12.11.1 Mathematica input program for stability analysis of Figs. E12.11.2, E12.11.3.

```

R1=0.01;
d1=0.8;
M1=4.5;
Tg1=0.3;
Tch1=0.9;
Lr1=0.8;
DPL1[t_]:=If [t<210, 0, 0.1];
R2=0.1;
d2=1.0;
M2=6;
Tg2=0.2;
Tch2=0.2;
Lr2=0.5;
DPL2[t_]:=If [t<400, 0, -0.1];
Xtie=0.2;
Tie=377/Xtie;
R3=0.3;
Tg3=0.1;
Tch3=0.1;
Lr3[t_]:=If [t<600, 0, 0.06];
R4=0.5;
Tg4=0.2;
Tch4=0.1;
Lr4[t_]:=If [t<600.1, 0, -0.6];
R5=0.7;
Tg5=0.1;
Tch5=0.1;
Lr5[t_]:=If [t<600.2, 0, 0.3];
R6=0.5;
Tg6=0.2;
Tch6=0.1;
Lr6=0.01;
ic1=Dw1[0]==0;
ic2=DPmech1[0]==0;
ic3=DPvalve1[0]==0;
ic4=DPtie[0]==0;
ic5=Dw2[0]==0;
ic6=DPmech2[0]==0;
ic7=DPvalve2[0]==0;

```

TABLE E12.11.1 Mathematica input program for stability analysis of Figs. E12.11.2, E12.11.3—cont'd

```

ic8=DPmech3[0]==0;
ic9=DPvalve3[0]==0;
ic10=DPmech4[0]==0;
ic11=DPvalve4[0]==0;
ic12=DPmech5[0]==0;
ic13=DPvalve5[0]==0;
ic14=DPmech6[0]==0;
ic15=DPvalve6[0]==0;
E11[t_]:=Lr1-Dw1[t]/R1;
E12[t_]:=DPmech1[t]-DPL1[t]-DPtie[t]+DPmech3[t]+DPmech4[t];
E3[t_]:=Dw1[t]-Dw2[t];
E22[t_]:=Lr2-Dw2[t]/R2;
E21[t_]:=DPmech2[t]-DPL2[t]+DPtie[t]+DPmech5[t]+DPmech6[t];
E33[t_]:=Lr3[t]-Dw1[t]/R3;
E44[t_]:=Lr4[t]-Dw1[t]/R4;
E55[t_]:=Lr5[t]-Dw2[t]/R5;
E66[t_]:=Lr6-Dw2[t]/R6;
eqn1=Dw1'[t]==(1/M1)*(E12[t]-d1*Dw1[t]);
eqn2=DPmech1'[t]==(1/Tch1)*(DPvalve1[t]-DPmech1[t]);
eqn3=DPvalve1'[t]==(1/Tg1)*(E11[t]-DPvalve1[t]);
eqn4=DPtie'[t]==Tie*E3[t];
eqn5=Dw2'[t]==(1/M2)*(E21[t]-d2*Dw2[t]);
eqn6=DPmech2'[t]==(1/Tch2)*(DPvalve2[t]-DPmech2[t]);
eqn7=DPvalve2'[t]==(1/Tg2)*(E22[t]-DPvalve2[t]);
eqn8=DPmech3'[t]==(1/Tch3)*(DPvalve3[t]-DPmech3[t]);
eqn9=DPvalve3'[t]==(1/Tg3)*(E33[t]-DPvalve3[t]);
eqn10=DPmech4'[t]==(1/Tch4)*(DPvalve4[t]-DPmech4[t]);
eqn11=DPvalve4'[t]==(1/Tg4)*(E44[t]-DPvalve4[t]);
eqn12=DPmech5'[t]==(1/Tch5)*(DPvalve5[t]-DPmech5[t]);
eqn13=DPvalve5'[t]==(1/Tg5)*(E55[t]-DPvalve5[t]);
eqn14=DPmech6'[t]==(1/Tch6)*(DPvalve6[t]-DPmech6[t]);
eqn15=DPvalve6'[t]==(1/Tg6)*(E66[t]-DPvalve6[t]);
sol1=NDSolve[{eqn1,eqn2,eqn3,eqn4,eqn5,eqn6,eqn7,eqn8,eqn9,
eqn10,eqn11,eqn12,eqn13,eqn14,eqn15,ic1,ic2,ic3,ic4,ic5,ic6,ic7,
ic8,ic9,ic10,ic11,ic12,ic13,ic14,ic15},{Dw1[t],DPmech1[t],
DPvalve1[t],DPtie[t],Dw2[t],DPmech2[t],DPvalve2[t],DPmech3[t],
DPvalve3[t],DPmech4[t],
DPvalve4[t],DPmech5[t],DPvalve5[t],DPmech6[t],DPvalve6[t]},
{t,0,200},
MaxSteps->100000000];
Plot[Dw1[t]/.sol1[[1]],{t,0,200},PlotRange->All,AxesLabel->{"t
[s]","Dw1[t][pu]"}]
Dw1b=(Dw1[t]/.sol1[[1]]/.t->200);
DPmech1b=(DPmech1[t]/.sol1[[1]]/.t->200);
DPvalve1b=(DPvalve1[t]/.sol1[[1]]/.t->200);
DPtie1b=(DPtie[t]/.sol1[[1]]/.t->200);
Dw2b=(Dw2[t]/.sol1[[1]]/.t->200);
DPmech2b=(DPmech2[t]/.sol1[[1]]/.t->200);
DPvalve2b=(DPvalve2[t]/.sol1[[1]]/.t->200);

```

Continued

TABLE E12.11.1 Mathematica input program for stability analysis of [Figs. E12.11.2, E12.11.3](#)—cont'd

```

DPmech3b=(DPmech3[t]/.sol1[[1]]/.t->200);
DPvalve3b=(DPvalve3[t]/.sol1[[1]]/.t->200);
DPmech4b=(DPmech4[t]/.sol1[[1]]/.t->200);
DPvalve4b=(DPvalve4[t]/.sol1[[1]]/.t->200);
DPmech5b=(DPmech5[t]/.sol1[[1]]/.t->200);
DPvalve5b=(DPvalve5[t]/.sol1[[1]]/.t->200);
DPmech6b=(DPmech6[t]/.sol1[[1]]/.t->200);
DPvalve6b=(DPvalve6[t]/.sol1[[1]]/.t->200);
ic16=Dw1[200]=Dw1b;
ic17=DPmech1[200]=DPmech1b;
ic18=DPvalve1[200]=DPvalve1b;
ic19=DPtie[200]=DPtie1b;
ic20=Dw2[200]=Dw2b;
ic21=DPmech2[200]=DPmech2b;
ic22=DPvalve2[200]=DPvalve2b;
ic23=DPmech3[200]=DPmech3b;
ic24=DPvalve3[200]=DPvalve3b;
ic25=DPmech4[200]=DPmech4b;
ic26=DPvalve4[200]=DPvalve4b;
ic27=DPmech5[200]=DPmech5b;
ic28=DPvalve5[200]=DPvalve5b;
ic29=DPmech6[200]=DPmech6b;
ic30=DPvalve6[200]=DPvalve6b;
R1=0.01;
d1=0.8;
M1=4.5;
Tg1=0.3;
Tch1=0.9;
Lr1=0.8;
DPL1[t_]:=If [t<300, 0, 0.1];
R2=0.1;
d2=1.0;
M2=6;
Tg2=0.2;
Tch2=0.2;
Lr2=0.5;
DPL2[t_]:=If [t<400, 0, -0.1];
Xtie=0.2;
Tie=377/Xtie;
R3=0.3;
Tg3=0.1;
Tch3=0.1;
Lr3[t_]:=If [t<1200,If[t<1120,If[t<1000,If[t<940,
If[t<910,0,0.03],0.09],0.05],0.03],0.0];
DPstorage4[t_]:=If[t<1200.2,If[t<1120.2,If[t<1000.2,If[t<940.2,
If[t<910.2,0,0.15],0.45],0.25],0.15],0.0];
DPstorage6[t_]:=If[t<1200.2,If[t<1120.2,If[t<1000.2,If[t<940.2,
If[t<910.2,0,0.15],0.45],0.25],0.15],0.0];
R4=0.5;
Tg4=0.2;

```

TABLE E12.11.1 Mathematica input program for stability analysis of Figs. E12.11.2, E12.11.3—cont'd

```

Tch4=0.1;
Lr4[t_]:=If [t<700, 0,- 0.01];
R5=0.7;
Tg5=0.1;
Tch5=0.1;
Lr5[t]:=If [t<1200,If[t<1120,If[t<1000,If[t<940,
If[t<910,0,0.3],0.9],0.5],0.3],0.0];
R6=0.5;
Tg6=0.2;
Tch6=0.1;
Lr6=0.01;
E11[t_]:=Lr1-Dw1[t]/R1;
E12[t_]:=DPmech1[t]-DPL1[t]-DPTie[t]+DPmech3[t]+DPmech4[t]-
DPstorage4[t];
E3[t_]:=Dw1[t]-Dw2[t];
E22[t_]:=Lr2-Dw2[t]/R2;
E21[t_]:=DPmech2[t]-DPL2[t]+DPTie[t]+ DPmech5[t]+DPmech6[t]-
DPstorage6[t];
E33[t_]:=Lr3[t]-Dw1[t]/R3;
E44[t_]:=Lr4[t]-Dw1[t]/R4;
E55[t_]:=Lr5[t]-Dw2[t]/R5;
E66[t_]:=Lr6-Dw2[t]/R6;
eqn1=Dw1'[t]==(1/M1)*(E12[t]-d1*Dw1[t]);
eqn2=DPmech1'[t]==(1/Tch1)*(DPvalve1[t]-DPmech1[t]);
eqn3=DPvalve1'[t]==(1/Tg1)*(E11[t]-DPvalve1[t]);
eqn4=DPTie'[t]==Tie*E3[t];
eqn5=Dw2'[t]==(1/M2)*(E21[t]-d2*Dw2[t]);
eqn6=DPmech2'[t]==(1/Tch2)*(DPvalve2[t]-DPmech2[t]);
eqn7=DPvalve2'[t]==(1/Tg2)*(E22[t]-DPvalve2[t]);
eqn8=DPmech3'[t]==(1/Tch3)*(DPvalve3 [t]-DPmech3[t]);
eqn9=DPvalve3'[t]==(1/Tg3)*(E33[t]-DPvalve3[t]);
eqn10=DPmech4'[t]==(1/Tch4)*(DPvalve4[t]-DPmech4[t]);
eqn11=DPvalve4'[t]==(1/Tg4)*(E44[t]-DPvalve4[t]);
eqn12=DPmech5'[t]==(1/Tch5)*(DPvalve5 [t]-DPmech5[t]);
eqn13=DPvalve5'[t]==(1/Tg5)*(E55[t]-DPvalve5[t]);
eqn14=DPmech6'[t]==(1/Tch6)*(DPvalve6[t]-DPmech6[t]);
eqn15=DPvalve6'[t]==(1/Tg6)*(E66[t]-DPvalve6[t]);
sol2=NSolve[{eqn1,eqn2,eqn3,eqn4,eqn5,eqn6,eqn7,eqn8,eqn9,
eqn10,eqn11,eqn12,eqn13,eqn14,eqn15,ic1,ic2,ic3,ic4,ic5,ic6,ic7,
ic8,ic9,ic10,ic11,ic12,ic13,ic14,ic15},{Dw1[t],DPmech1[t],
DPvalve1[t],DPTie[t],Dw2[t],DPmech2[t],DPvalve2[t],DPmech3[t],
DPvalve3[t],DPmech4[t],
DPvalve4[t],DPmech5[t],DPvalve5[t],DPmech6[t],DPvalve6[t]},
{t,200,1500},
MaxSteps->100000000];
Plot[Evaluate[Lr5[t]],{t,200,1500},PlotRange->All,AxesLabel->{"t
(s)","Lr5[t] [pu]"}]
Plot[Dw1[t]/.sol2[[1]],{t,200,1500},PlotRange->All,AxesLabel->
{"t[s]","Dw1[t][pu]"}]

```

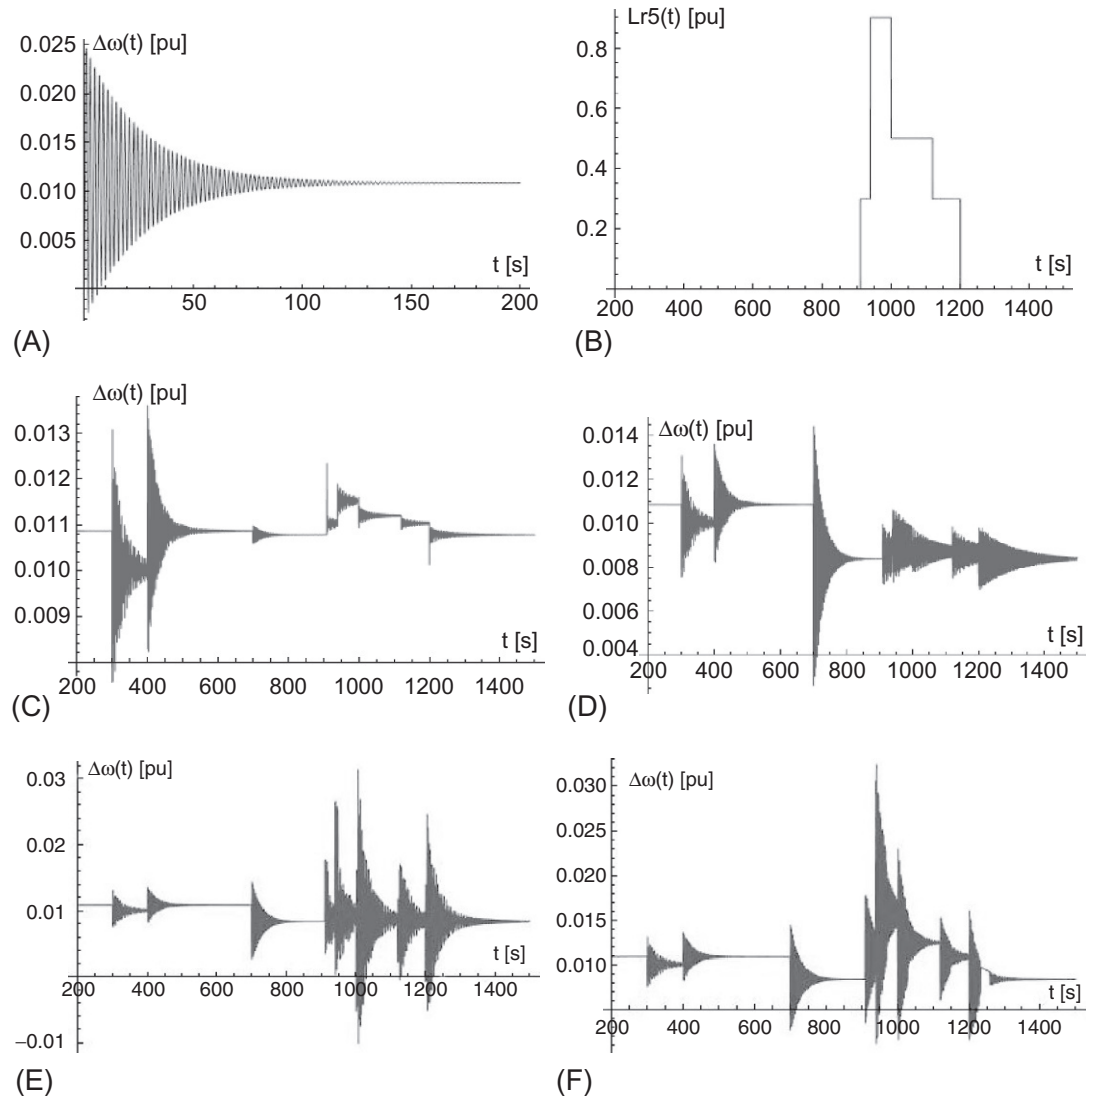


FIG. E12.11.3 (A) Establishment of steady-state conditions for $\Delta\omega(t)$; (B) Plot of given WP plant load reference $Lr5$ [t]. (C) Transient response $\Delta\omega(t)$ if storage plants 4 and 6 absorb the additional energy generated by WP plant with 0.2s delay; (D) Transient response $\Delta\omega(t)$ if only storage plant 6 absorbs the additional energy generated by WP plant with 0.2s delay. (E) Transient response $\Delta\omega(t)$ if only storage plant 4 absorbs the additional energy generated by WP plant with 0.2s delay; (F) Transient response $\Delta\omega(t)$ if no storage plant absorbs the additional energy generated by WP plant.

12.4.7 Power quality issues due to renewable sources

In addition to power-load balance issues, distributed renewable sources lead to high system impedances at the distribution level because these plants cannot deliver additional transient currents when faults occur due to their operation at peak power [68]. Even with

acceptable current harmonics, this high system impedance may result in unacceptably high voltage harmonics, single-time events (e.g., spikes due to network switching and synchronization) and nonperiodic but repetitive (e.g., flicker) events, and contribute to power quality problems [46–48,50,160–162].

The frequency/load control in distributed grids with a majority of renewable sources (e.g., renewable generation larger than 50%) appears to be the most difficult part of a smart grid and requires extensive research. In addition the transfer of power via AC and DC lines—associated with harmonic and power factor control—must be studied: most necessary software programs, e.g., symmetric (based on single phase) and asymmetric power (based on three phases) flow programs for this effort are available for integer harmonics, but are not available for sub and noninteger harmonics.

12.4.8 Control of voltage and reactive power

Today frequency and voltage control predominantly occurs at the AC transmission level. In distributed systems with renewable sources, these control functions will take place both at the transmission and distribution levels. As the intermittency of renewable sources makes frequency and voltage control more difficult, short- and long-term storage plants for electric energy must be relied on to compensate the energy flow [163]. This involves an increase of switching actions which may impair the quality of energy delivered to the consumer.

12.4.8.1 Transition from central power station to distributed energy sources

The problems which may arise due to the transition from central power stations to distributed energy sources are detailed for Germany. Depending upon the operating levels, 26 nuclear plants supplied in 2005 about 25%–42% of the energy while renewable sources provided only 14% and hydro plants supplied about 3%–7% [164]. Recent decision of phasing out [165] nuclear power put tremendous pressure on government to scale up renewable sources in the transmission and distribution system. According to Steininger [166], in 2011 “green energy” accounted for more than 20% for the first time and it is predicted to reach 35% by 2020. How can the grid accommodate such a relatively high percentage of intermittently operating sources without sacrificing network stability and supply reliability?

A recent article [167] indicates that the German grid might be stressed (e.g., large frequency and voltage deviations) even at light-load conditions if the 26 nuclear plants are permanently disconnected. Distributed central stations (nuclear, coal and natural gas) ensure that the power-flow control is relatively stable because energy cannot be transmitted over long (e.g., 800 km) lines to reach the consumer. These interconnected grids maximize stability, efficiency and reliability while minimizing investment costs. Decommissioning nuclear plants and minimizing the operation of coal-fired plants limits generation to intermittently operating sources, natural-gas-fired and a small percentage of hydro plants. While natural-gas-fired plants generate less CO₂ than coal-fired plants, they rely on methane, and the leak thereof increases global warming much more than CO₂. The National Center for Atmospheric Research (NCAR) in Boulder, Colorado estimates that natural-gas wells leak about 10% of their production capability [168]. In Germany, the fact that wind-power (WP) plants are predominantly located in the North (offshore in the North Sea) and PV plants are mainly located in

the South means that the electric energy must be transmitted over a long distance (about 800 km) resulting in unacceptably large frequency and voltage perturbations [167], which lead to stability problems due to large transmission-line impedances and switching actions. This is why the technical community strongly advocates [169] construction of additional 3800 km of new power lines until 2025 [170]—of which DC current lines will account for 2100 km and AC lines for 1700 km—stretching from the Baltic and North Sea to the South of Germany, respectively. The construction of large short- and long-term storage plants must accompany renewable sources [1,64,171]. To minimize stability problems of AC lines, extra-high-voltage (EHV), e.g., 735 kV are required if generating stations and loads are very far apart [49,167], reducing the per-unit line impedance and maximizing the transmission-line section length for which stability can be maintained. Special problems arise that require compensation equipment, e.g., synchronous capacitors, inductive reactors, static VAR compensators, shunt and series capacitors, and flexible AC transmissions (FACTS) [172] to control voltage and assure stability of energy transmission.

If high-voltage DC lines are employed no voltage instability will occur—this is the advantage of DC lines. However, stability problems due to mismatch of generation and consumption still occur and storage plants cannot be dispensed with in the latter case as well. The following sections focus on the stress (e.g., large frequency variations, instability) in transmitting power from distant renewable sources to load centers via AC lines. The development of the AC transmission-line infrastructure will become important in addition to the design of renewable sources and strategically located large storage plants [1,64,167,171].

At light load (to fully utilize renewably generated energy) most central power stations such as coal and natural-gas-fired plants will be operated at reduced levels. For example, wind energy from the North of Germany will be transmitted via 800 km EHV-AC line to the South if there is not much insolation, and vice versa, if there is not much WP available. Note that outputs of PV and WP plants change rapidly (fig. 5 of [64]). In this case the AC power system might be stressed from a frequency and reactive power point of view.

12.4.9 Frequency variations due to charging and discharging of storage plants of grid with renewable sources

The objectives of operation of the grid with renewable sources and storage plants where a natural-gas-fired plant is the frequency leader are:

- (1) Modeling of an AC power system with renewable sources and storage plants and its frequency variation due to switching actions, if energy is transmitted from renewable sources to load centers 800 km away with and without energy storage plants [49];
- (2) Determination of length of AC transmission line sections to ensure steady-state and dynamic stability;
- (3) Selection of time constants of conventional, renewable, and storage plants;
- (4) Operation of WP and PV plants and charging and discharging of energy storage plants must be such that the transmission line power changes only gradually. Frequency control within acceptable limits (49–51) Hz at $f^* = 50$ Hz [159] can be achieved by compensating/complementing the output of PW and PV plants with those of storage plants.

12.4.9.1 Simplified grid

Fig. 12.27 illustrates a simplified AC grid [49] with predominantly renewable energy sources: WP farm in the North of Germany and associated short-term storage plant to compensate for the intermittent output of wind farm. Natural-gas and long-term storage plants are used for peak-power generation near the two load systems. In the South there is a PV farm with associated storage plant. Fig. 12.28A and B depict the frequency control for either

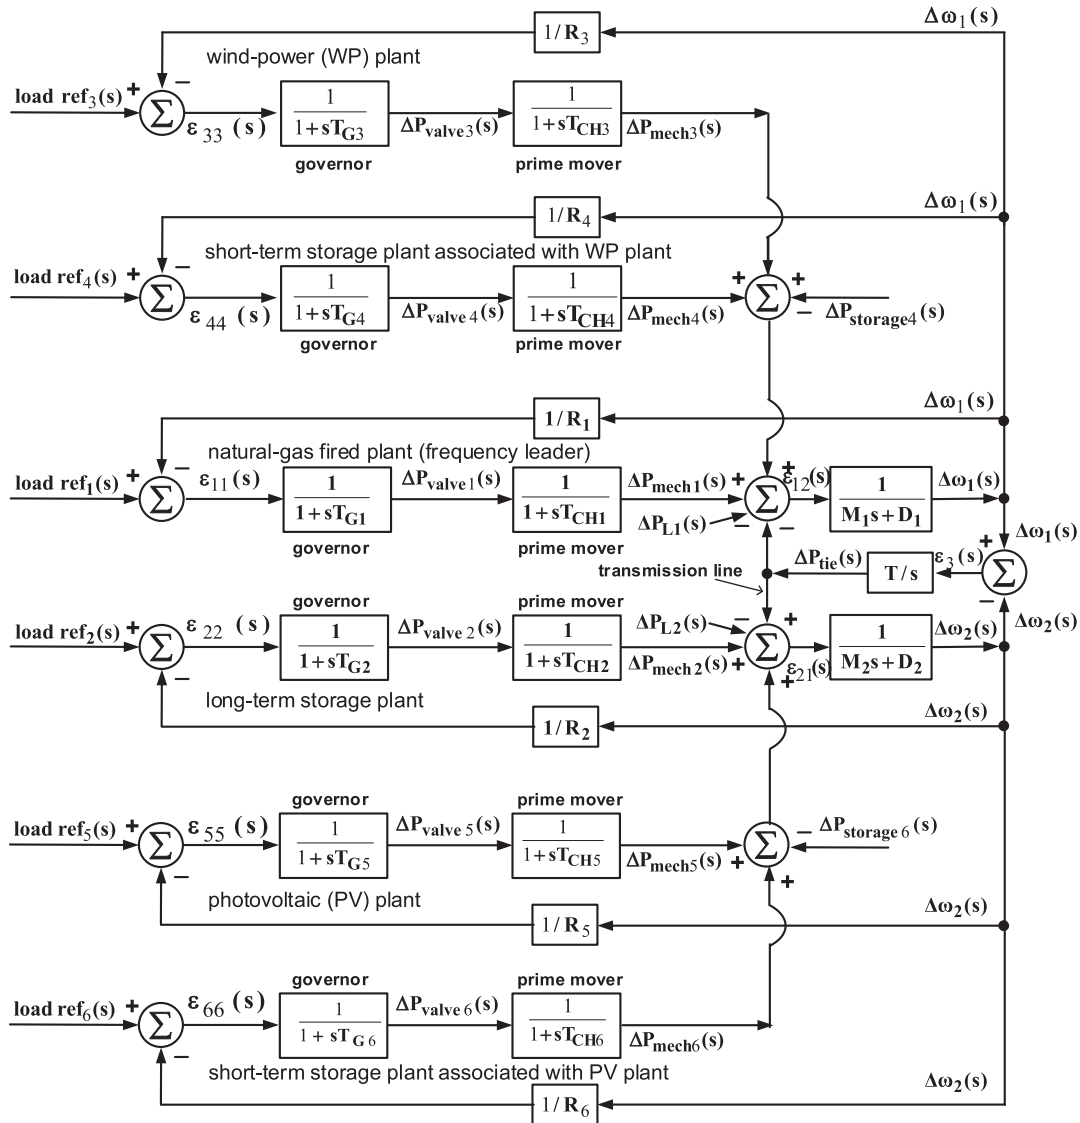


FIG. 12.27 Power system with renewable sources, storage plants and natural/bio-gas-fired plant.

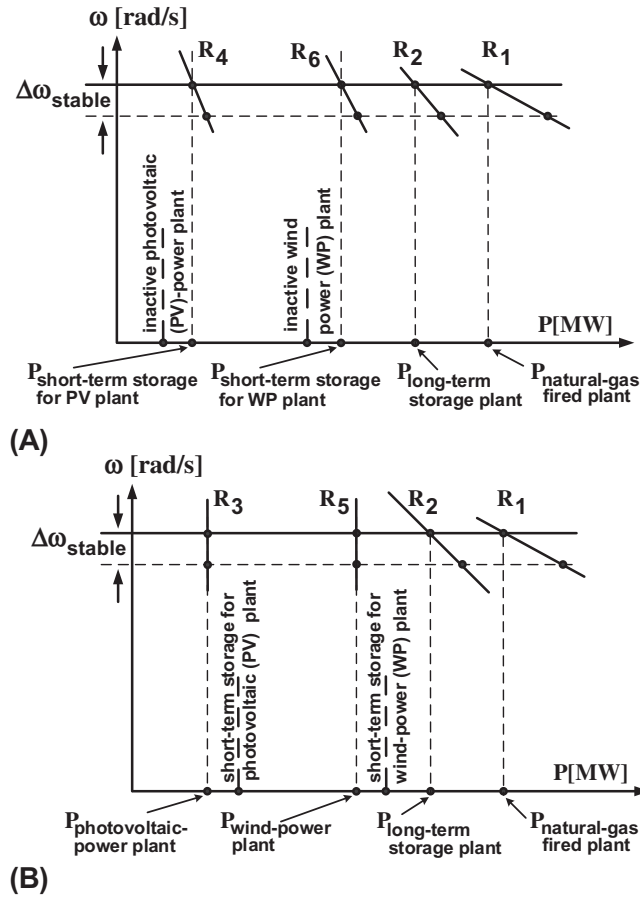


FIG. 12.28 (A) Droop characteristics when two short-term storage plants (associated with PV and WP plants) are operating; (B) Droop characteristics when two renewable (PV and WP) plants, and a long-term storage plant together with a gas-fired plant are operating.

storage-plant operation or renewable-source operation. In Fig. 12.28A the WP and PV plants have no output power and the short-term storage PV and WP plants together with the long-term storage plant and the natural-gas fired plant control though appropriate droop characteristics the frequency of the AC power system. In Fig. 12.28B the PV and WP plants operate at their maximum output power through peak-power tracking together with the natural-gas fired and long-term storage plants while the PV and WP storage plants have zero output. There are three modes of operation:

Mode #1: renewable sources (RS) and storage plants supply power to two load systems.

Mode #2: RS charge storage plants [144].

Mode #3: RS supply energy to two load systems.

If the transmitted power throughput across the AC transmission line is not changing slowly enough, frequency stability problems set in due to discontinuous AC power

transmission and associated frequency perturbations. For example, a three-phase, 735kV (line-to-line), 50Hz, 800km line has a reactance of $0.55\Omega/\text{km}$ [173] or $X_L = 440\Omega$ resulting at base apparent power $S = 1000$ MVA with the base impedance of $Z_{\text{base}} = (735)^2 / 1000 = 540\Omega$ in a per-unit line reactance of $X_{L\text{pu}} = (440/540) = 0.815$ pu. With a transformer reactance of $X_{T\text{pu}} = 0.08$ pu the total line reactance is $X_{\text{total}} = X_{L\text{pu}} + 2X_{T\text{pu}} = (0.815 + 0.16)$ pu $= 0.98$ pu @ 50Hz. Transient analysis shows that this long AC transmission line will have to be subdivided into about five sections each having a per-unit reactance of $X_{\text{section}} = X_{\text{total}} / 5 = 0.98/5$ pu $= 0.196$ pu, and at the terminals of each section the voltage will have to be controlled to guarantee stability of transmission. The differential and algebraic equation system of Fig. 12.27 is listed below. The AC transmission/tie line acts as an integrating component [144] enforcing $\Delta\omega(s) = \Delta\omega_1(s) = \Delta\omega_2(s)$. The differential and algebraic equations are solved with Mathematica software; s is the Laplace operator.

System #1:

$$\varepsilon_{11} = \text{load ref}_1 - \Delta\omega_1/R_1, \quad (12.6)$$

$$\Delta P_{\text{valve1}} + T_{G1} \cdot d(\Delta P_{\text{valve1}})/dt = \varepsilon_{11}, \quad (12.7)$$

$$\Delta P_{\text{mech1}} + T_{CH1} \cdot d(\Delta P_{\text{mech1}})/dt = \Delta P_{\text{valve1}}, \quad (12.8)$$

$$\varepsilon_{12} = \Delta P_{\text{mech1}} - \Delta P_{L1} - \Delta P_{\text{tie}} + \Delta P_{\text{mech3}} + \Delta P_{\text{mech4}} - \Delta P_{\text{storage 4}}, \quad (12.9)$$

$$\Delta\omega_1 D_1 + M_1 \cdot d(\Delta\omega_1)/dt = \varepsilon_{12}. \quad (12.10)$$

Coupling (tie, transmission) network:

$$(1/T) \cdot d(\Delta P_{\text{tie}})/dt = \varepsilon_3, \quad (12.11)$$

$$\varepsilon_3 = \Delta\omega_1 - \Delta\omega_2. \quad (12.12)$$

System #2:

$$\varepsilon_{22} = \text{load ref}_2 - \Delta\omega_2/R_2, \quad (12.13)$$

$$\Delta P_{\text{valve2}} + T_{G2} \cdot d(\Delta P_{\text{valve2}})/dt = \varepsilon_{22}, \quad (12.14)$$

$$\Delta P_{\text{mech2}} + T_{CH2} \cdot d(\Delta P_{\text{mech2}})/dt = \Delta P_{\text{valve2}}, \quad (12.15)$$

$$\varepsilon_{21} = \Delta P_{\text{mech2}} - \Delta P_{L2} + \Delta P_{\text{tie}} + \Delta P_{\text{mech5}} + \Delta P_{\text{mech6}} - \Delta P_{\text{storage 6}}, \quad (12.16)$$

$$\Delta\omega_2 D_2 + M_2 \cdot d(\Delta\omega_2)/dt = \varepsilon_{21}. \quad (12.17)$$

System #3:

$$\varepsilon_{33} = \text{load ref}_3 - \Delta\omega_1/R_3, \quad (12.18)$$

$$\Delta P_{\text{valve3}} + T_{G3} \cdot d(\Delta P_{\text{valve3}})/dt = \varepsilon_{33}, \quad (12.19)$$

$$\Delta P_{\text{mech3}} + T_{CH3} \cdot d(\Delta P_{\text{mech3}})/dt = \Delta P_{\text{valve3}}. \quad (12.20)$$

System #4:

$$\varepsilon_{44} = \text{load ref}_4 - \Delta\omega_1/R_4, \quad (12.21)$$

$$\Delta P_{\text{valve4}} + T_{G4} \cdot d(\Delta P_{\text{valve4}})/dt = \varepsilon_{44}, \quad (11-22)$$

$$\Delta P_{\text{mech4}} + T_{CH4} \cdot d(\Delta P_{\text{mech4}})/dt = \Delta P_{\text{valve4}}. \quad (12.23)$$

System #5:

$$\varepsilon_{55} = \text{load ref}_5 - \Delta\omega_2/R_5, \quad (12.24)$$

$$\Delta P_{\text{valve5}} + T_{G5} \cdot d(\Delta P_{\text{valve5}})/dt = \varepsilon_{55}, \quad (12.25)$$

$$\Delta P_{\text{mech5}} + T_{CH5} \cdot d(\Delta P_{\text{mech5}})/dt = \Delta P_{\text{valve5}}. \quad (12.26)$$

System #6:

$$\varepsilon_{66} = \text{load ref}_6 - \Delta\omega_2/R_6, \quad (12.27)$$

$$\Delta P_{\text{valve6}} + T_{G6} \cdot d(\Delta P_{\text{valve6}})/dt = \varepsilon_{66}, \quad (12.28)$$

$$\Delta P_{\text{mech6}} + T_{CH6} \cdot d(\Delta P_{\text{mech6}})/dt = \Delta P_{\text{valve6}}. \quad (12.29)$$

12.4.9.2 Limits on stability of transmission

Wind energy from the North to the South of Germany can be transmitted with EHV AC lines divided into five sections: one section has the per-unit reactance of $X_{\text{section}} = 0.196$ pu. Two scenarios are investigated: first (mode #1) when the WP plant, load ref₃(s), and its associated storage plant, load ref₄(s), are supplying power via AC transmission line T/s to the two load systems, during which time the natural-gas-fired plant supplies load ref₁(s) = 0.8 pu power and the long-term storage plant supplies load ref₂(s) = 0.4 pu power to the two load systems defined by $M_1, M_2, D_1, D_2, \Delta P_{L1}(s), \Delta P_{L2}(s)$ [49]. The time constants of the various plants (e.g., T_{CHi} for $i = 1-6$) influence the stability of AC transmission. The input parameters load ref₁(s) to load ref₄(s) and $[-\Delta P_{\text{storage4}}(s)]$, as defined in Fig. 12.27, are positive and their values depend on the power gains of the plants. Note, load ref₁(s) must be nonzero because the natural-gas-fired plant is the frequency leader.

12.4.9.3 Nonconstant power output of renewable sources

Mode #1: Fig. 12.29A–D show that at $X_{\text{section}} = 0.196$ pu at large-step outputs of WP plant and associated storage plant permit a stable AC energy transmission to the two load systems in the South, defined by $M_1, M_2, D_1, D_2, \Delta P_{L1}(s), \Delta P_{L2}(s)$ [49]. However, the angular frequency variations due to switching are large (0.25 pu). At $X_{\text{section_max}} = 0.33$ pu instability sets in as indicated in Fig. 12.30 where load ref₅(s) = $\Delta P_{\text{storage6}}(s) = 0$. Reduced time constant $T_{CH1} = 1.4$ s results in the stability as demonstrated in Fig. 12.31. For medium-step outputs of WP illustrated in Fig. 12.32A and associated storage plant the frequency variation due to switching is still large (0.07 pu), as indicated in Fig. 12.32B and C. Best performance with lowest angular frequency variation due to switching (0.01 pu) is obtained with small-step outputs of WP (as shown in Fig. 12.33A) and associated storage plant, as depicted in Fig. 12.33B and C; however, instability results for $X_{\text{section}} = 0.33$ pu as indicated in Fig. 12.34.

Mode #2: If the WP plant large-step output (load ref₃(s) $\neq 0$, $\Delta P_{\text{storage4}}(s) = \text{load ref}_3(s)$) charges the associated short-term storage plant $\Delta P_{\text{storage4}}(s)$, large (0.05 pu) angular frequency

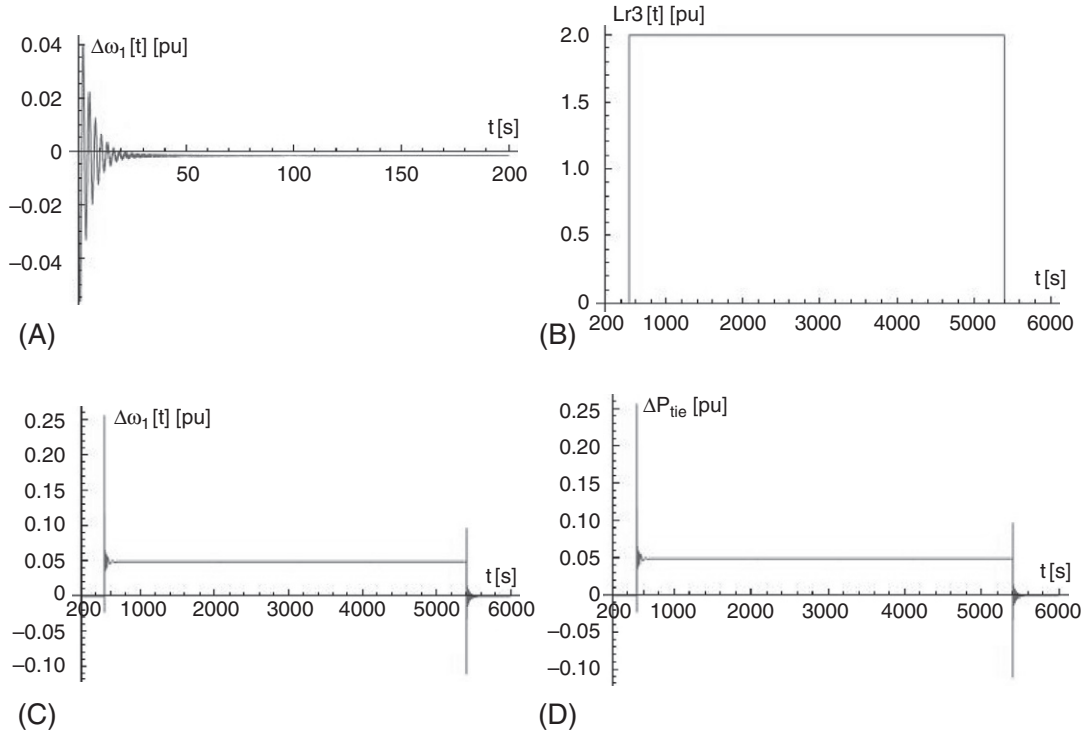


FIG. 12.29 (A) Angular frequency variation $\Delta\omega_1(t)$ at large-step WP plant output and $\Delta P_{\text{storage}4}(s) = -2[\text{load ref}_3(s)]$ with delay of 0.5s, load $\text{ref}_4(s)=0$, $\Delta P_{\text{storage}6}(s)=\text{load ref}_6(s)=\text{load ref}_5(s)=0$, $X_{\text{section}}=0.196$ pu, $T_{\text{CH1}}=3$ s, load $\text{ref}_1(s)=0.8$ pu, load $\text{ref}_2(s)=0.4$ pu, $\Delta P_{L1}(s)=0.8$ pu, and $\Delta P_{L2}(s)=0.6$ pu from 0 to 200s to establish steady state, mode #1. (B) Large-step reference power load $\text{ref}_3(t)=L_{r3}(t)$ for WP plant output and $\Delta P_{\text{storage}4}(s) = -2[\text{load ref}_3(s)]$ with delay of 0.5s, load $\text{ref}_4(s)=0$, $\Delta P_{\text{storage}6}(s)=\text{load ref}_5(s)=\text{load ref}_6(s)=0$; (C) Angular frequency variation $\Delta\omega_1(t)$ at large-step WP output, $X_{\text{section}}=0.196$ pu, $T_{\text{CH1}}=3$ s, load $\text{ref}_1(s)=0.8$ pu, load $\text{ref}_2(s)=0.4$ pu, $\Delta P_{L1}(s)=0.8$ pu, and $\Delta P_{L2}(s)=0.6$ pu, transient operation from 200 to 6000s, mode #1. (D) Transmission-line power ΔP_{tie} at large-step WP plant output $\text{ref}_3(t)=L_{r3}(t)$ and $\Delta P_{\text{storage}4}(s) = -2[\text{load ref}_3(s)]$ with delay of 0.5s, load $\text{ref}_4(s)=0$, $\Delta P_{\text{storage}6}(s)=\text{load ref}_5(s)=\text{load ref}_6(s)=0$, $X_{\text{section}}=0.196$ pu, $T_{\text{CH1}}=3$ s, load $\text{ref}_1(s)=0.8$ pu, load $\text{ref}_2(s)=0.4$ pu, $\Delta P_{L1}(s)=0.8$ pu, and $\Delta P_{L2}(s)=0.6$ pu, transient operation from 200 to 6000s, mode #1.

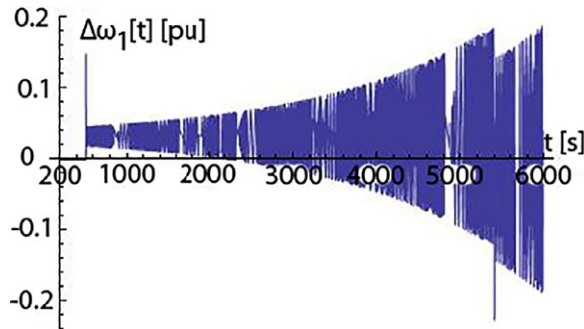


FIG. 12.30 Angular frequency variation $\Delta\omega_1(t)$ at large- step WP plant output $\text{ref}_3(t)=L_{r3}(t)$ and $\Delta P_{\text{storage}4}(s) = -\text{load ref}_3(s)$ with delay of 0.5s, load $\text{ref}_4(s)=0$, $\Delta P_{\text{storage}6}(s)=\text{load ref}_5(s)=\text{load ref}_6(s)=0$, $X_{\text{section}}=0.33$ pu, $T_{\text{CH1}}=3$ s, load $\text{ref}_1(s)=0.8$ pu, load $\text{ref}_2(s)=0.4$ pu, $\Delta P_{L1}(s)=0.8$ pu, and $\Delta P_{L2}(s)=0.6$ pu, transient operation from 200 to 6000s, mode #1.

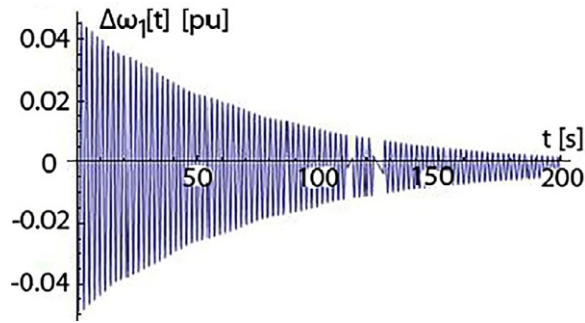


FIG. 12.31 Angular frequency variation $\Delta\omega_1(t)$ at large-step WP plant output $\text{ref}_3(t) = L_{r3}(t)$ and $\Delta P_{\text{storage}4}(s) = -2$ [load $\text{ref}_3(s)$] with delay of 0.5s, load $\text{ref}_4(s) = 0$, $\Delta P_{\text{storage}6}(s) = \text{load } \text{ref}_6(s) = \text{load } \text{ref}_5(s) = 0$, $X_{\text{section}} = 0.196$ pu, $T_{\text{CH1}} = 1.4$ s, load $\text{ref}_1(s) = 0.8$ pu, load $\text{ref}_2(s) = 0.4$ pu, $\Delta P_{L1}(s) = 0.8$ pu, and $\Delta P_{L2}(s) = 0.6$ pu from 0 to 200 s to establish steady state, mode #1.

variations of Fig. 12.35A are obtained while the transmission tie line power (neglecting switching transients) is about constant as depicted in Fig. 12.35B. For small-step charging the angular frequency variation is smaller: 0.02 pu, see Fig. 12.36A and the tie line power as given in Fig. 12.36B is about constant and shows smaller transient excursions during switching. The spikes in the $\Delta\omega(t) = \Delta\omega_1(t) = \Delta\omega_2(t)$ are mitigated by smoothing the output of the WP plant based on small-step operation. The AC transmission of energy from the South PV farm to the two load circuits in the North is similar as discussed above.

According to the newspaper [169] “Financial Times Deutschland,” DC transmission lines are planned [170] to avoid stability problems associated with long AC lines and result in smaller line voltage drops (no reactive drop). DC lines could be mounted on existing towers/pylons presently used for AC transmission lines to reduce costs and avoid protests by citizens. Although DC lines solve the voltage stability problem associated with AC lines, DC lines still require short-term and long-term storage to control the frequency at the AC load side by enforcing power balance. DC lines are known for their voltage distortions, thus harmonic filters would also be required as discussed in Chapter 10. Frequency control can be achieved by employing short- and long-term storage plants [1,144] complementing output of renewable sources by small step-wise control of the AC transmission-line power. Stable AC transmission results by appropriate power management: wave shaping of power inputs/outputs, appropriate transmission line segmentation, and selection of power plant and storage plant time constants.

12.4.10 Reduced life time of storage plants

Renewable sources as well as all types of storage plants are operated intermittently, and therefore the winding structures of generators are thermally exposed to changing temperatures through changing loss and heating conditions: this causes the winding to contract and expand depending upon the changing temperature resulting in mechanical degradation (see Chapter 7) of the insulating material of electrical components such as generators (Chapter 4). The rated lifetime of about 40 years is thus reduced by a factor of two resulting in long outages (e.g., half a year) of plants.

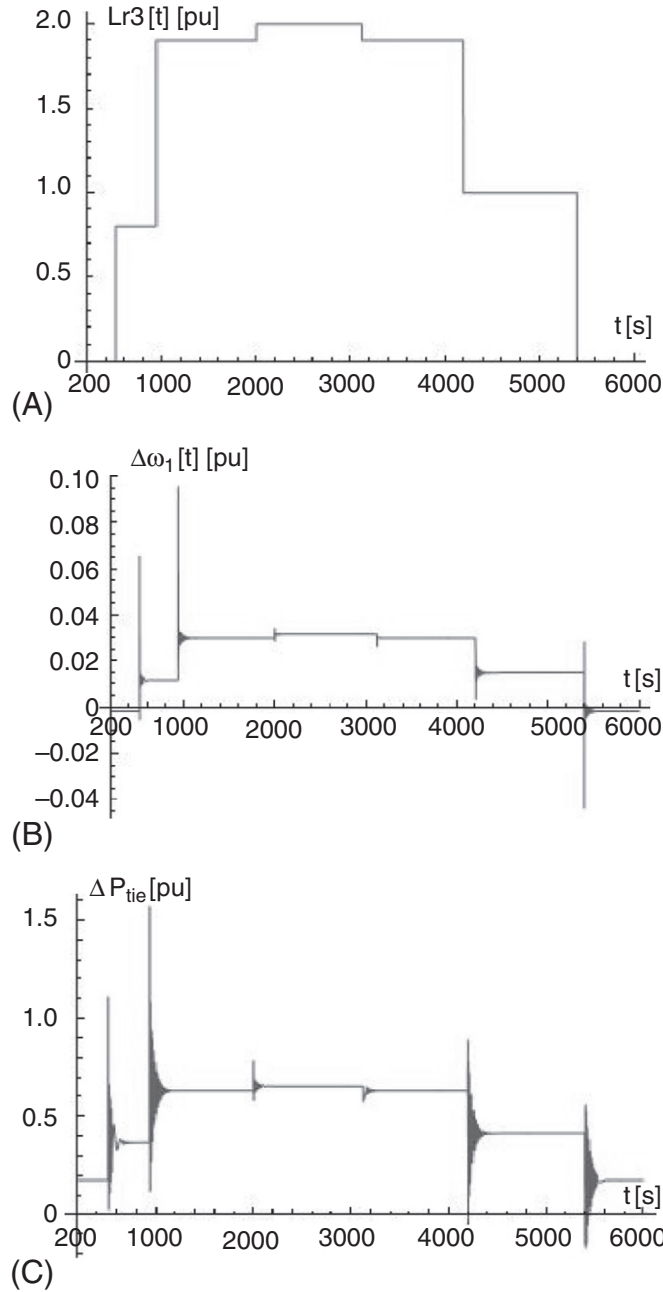


FIG. 12.32 (A) Medium-step reference power load $\text{ref}_3(t) = L_{r3}(t)$ for WP plant output and $\Delta P_{\text{storage}4}(s) = -\text{load ref}_3(s)$ with delay of 0.5s, load $\text{ref}_4(s) = 0$, and $\Delta P_{\text{storage}6}(s) = \text{load ref}_6(s) = \text{load ref}_5(s) = 0$; (B) Angular frequency variation $\Delta\omega_1(t)$ at medium-step WP output, $\Delta P_{\text{storage}4}(s) = -\text{load ref}_3(s)$, load $\text{ref}_4(s) = 0$, $\Delta P_{\text{storage}6}(s) = \text{load ref}_6(s) = \text{load ref}_5(s) = 0$, $X_{\text{section}} = 0.196$ pu, $T_{\text{CH1}} = 3$ s, load $\text{ref}_1(s) = 0.8$ pu, load $\text{ref}_2(s) = 0.4$ pu, $\Delta P_{L1}(s) = 0.8$ pu, and $\Delta P_{L2}(s) = 0.6$ pu, transient operation from 200 to 6000s, mode #1. (C) Transmission-line power ΔP_{tie} at medium-step WP plant output $\text{ref}_3(t) = L_{r3}(t)$ and $\Delta P_{\text{storage}4}(s) = -\text{load ref}_3(s)$ with delay of 0.5s, load $\text{ref}_4(s) = 0$, $\Delta P_{\text{storage}6}(s) = \text{load ref}_6(s) = \text{load ref}_5(s) = 0$, $X_{\text{section}} = 0.196$ pu, $T_{\text{CH1}} = 3$ s, load $\text{ref}_1(s) = 0.8$ pu, load $\text{ref}_2(s) = 0.4$ pu, $\Delta P_{L1}(s) = 0.8$ pu, and $\Delta P_{L2}(s) = 0.6$ pu, transient operation from 200 to 6000s, mode #1.

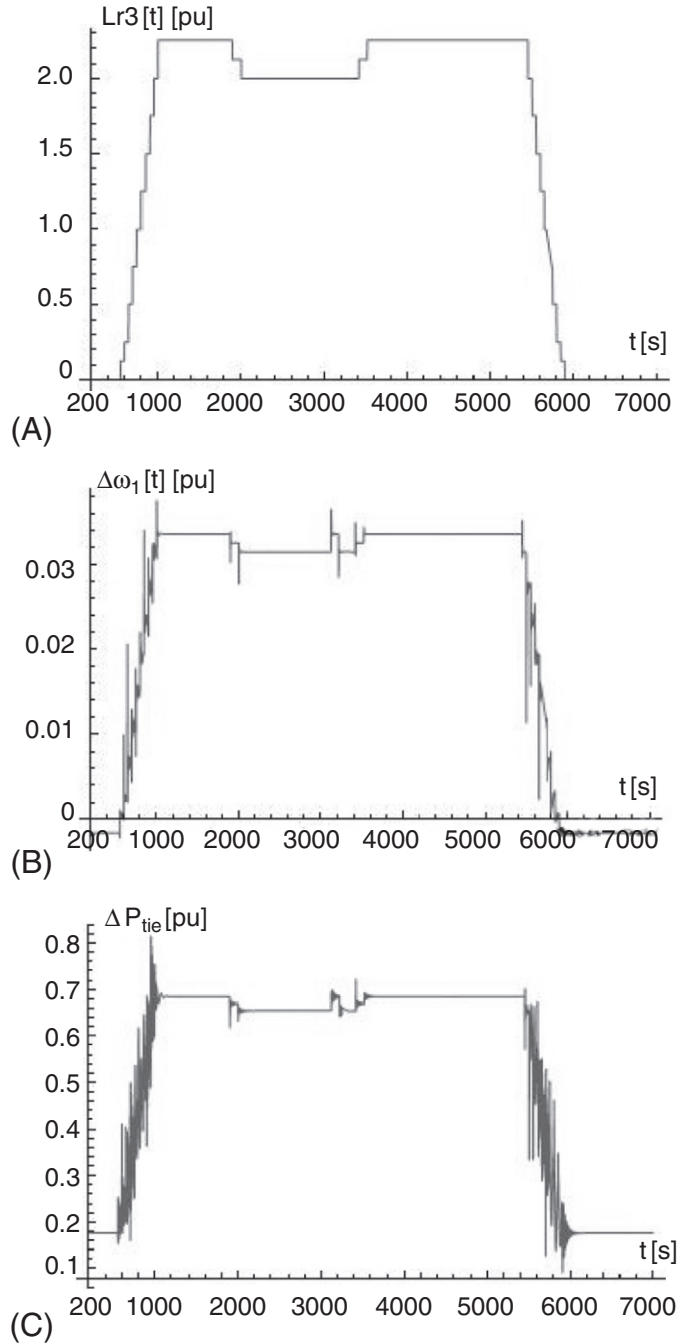


FIG. 12.33 (A) Small-step reference power load $\text{ref}_3(t) = L_{r3}(t)$ for WP plant and $\Delta P_{\text{storage } 4}(s) \approx -\text{load ref}_3(s)$ with no delay, load $\text{ref}_4(s)=0$, $\Delta P_{\text{storage } 6}(s)=\text{load ref}_6(s)=\text{load ref}_5(s)=0$; (B) Angular frequency variation $\Delta\omega_1(t)$ at small-step WP output and $\Delta P_{\text{storage } 4}(s) \approx -\text{load ref}_3(s)$, load $\text{ref}_4(s)=0$, $\Delta P_{\text{storage } 6}(s)=\text{load ref}_6(s)=\text{load ref}_5(s)=0$, $X_{\text{section}}=0.196$ pu, $T_{\text{CH1}}=3$ s, load $\text{ref}_1(s)=0.8$ pu, load $\text{ref}_2(s)=0.4$ pu, $\Delta P_{L1}(s)=0.8$ pu, and $\Delta P_{L2}(s)=0.6$ pu, transient operation from 200 to 7000 s, mode #1. (C) Transmission-line power ΔP_{tie} at small-step WP plant output and $\Delta P_{\text{storage } 4}(s) \approx -\text{load ref}_3(s)$ with no delay, load $\text{ref}_4(s)=0$, $\Delta P_{\text{storage } 6}(s)=\text{load ref}_6(s)=\text{load ref}_5(s)=0$, $X_{\text{section}}=0.196$ pu, $T_{\text{CH1}}=3$ s, load $\text{ref}_1(s)=0.8$ pu, load $\text{ref}_2(s)=0.4$ pu, $\Delta P_{L1}(s)=0.8$ pu, and $\Delta P_{L2}(s)=0.6$ pu, transient operation from 200 to 7000 s, mode #1.

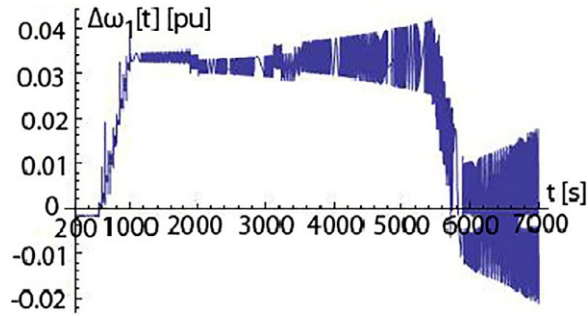


FIG. 12.34 Angular frequency variation $\Delta\omega_1(t)$ at small- step WP plant output and $\Delta P_{\text{storage } 4}(s) \approx -\text{load ref}_3(s)$ with no delay, load $\text{ref}_4(s)=0$, $\Delta P_{\text{storage } 6}(s)=\text{load ref}_6(s)=\text{load ref}_5(s)=0$, $X_{\text{section}}=0.33$ pu, $T_{\text{CH1}}=3$ s, load $\text{ref}_1(s)=0.8$ pu, load $\text{ref}_2(s)=0.4$ pu, $\Delta P_{\text{L1}}(s)=0.8$ pu, and $\Delta P_{\text{L2}}(s)=0.6$ pu, transient operation from 200 to 7000s, mode #1.

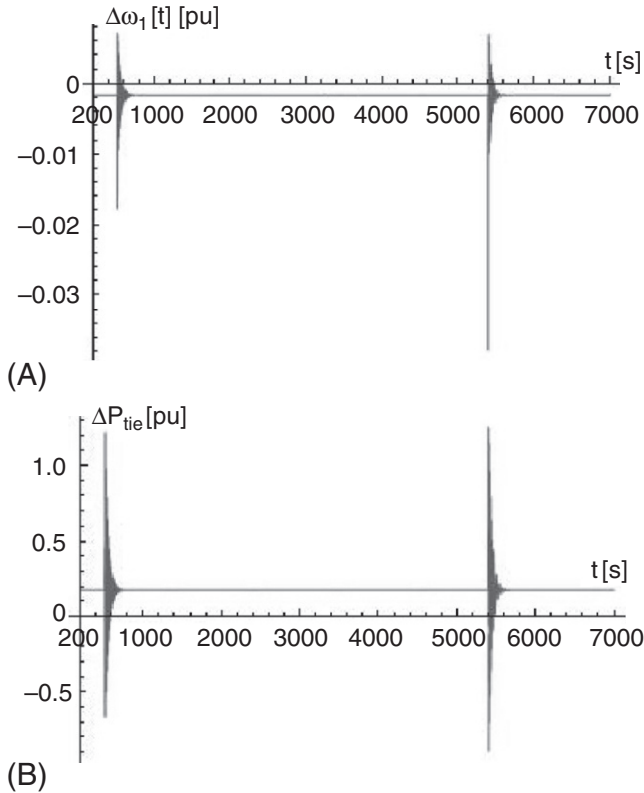


FIG. 12.35 (A) Angular frequency variation $\Delta\omega_1(t)$; (B) Transmission-line power ΔP_{tie} at large-step WP plant output charges the associated short-term storage plant with $\Delta P_{\text{storage } 4}(s)=\text{load ref}_3(s)$ with 0.5s delay, load $\text{ref}_4(s)=0$, $\Delta P_{\text{storage } 6}(s)=\text{load ref}_6(s)=\text{load ref}_5(s)=0$, $X_{\text{section}}=0.196$ pu, $T_{\text{CH1}}=3$ s, load $\text{ref}_1(s)=0.8$ pu, load $\text{ref}_2(s)=0.4$ pu, $\Delta P_{\text{L1}}(s)=0.8$ pu, and $\Delta P_{\text{L2}}(s)=0.6$ pu, transient operation from 200 to 7000s, mode #2.

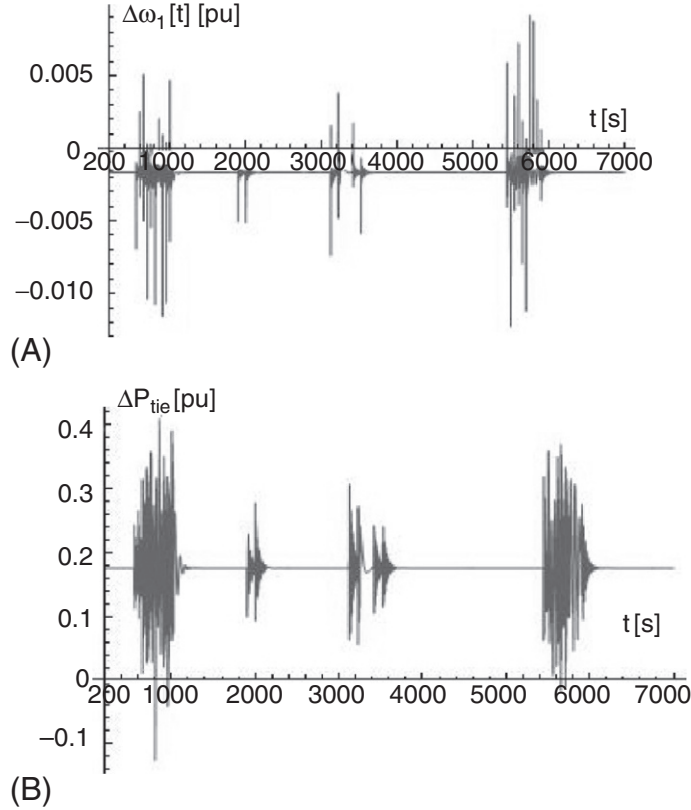


FIG. 12.36 (A) Angular frequency $\Delta\omega_1(t)$ variation; (B) Transmission-line power ΔP_{tie} at small-step WP plant output charges the associated short-term storage plant with $\Delta P_{storage4}(s) = \text{load ref}_3(s)$ with 1.0s delay, $\text{load ref}_4(s) = 0$, $\Delta P_{storage6}(s) = \text{load ref}_6(s) = \text{load ref}_5(s) = 0$, $X_{section} = 0.196$ pu, $T_{CH1} = 3$ s, $\text{load ref}_1(s) = 0.8$ pu, $\text{load ref}_2(s) = 0.4$ pu, $\Delta P_{L1}(s) = 0.8$ pu, and $\Delta P_{L2}(s) = 0.6$ pu, transient operation from 200 to 7000s, mode #2.

12.4.11 Solutions to power quality problems due to renewable plants with energy storage systems

Frequently charging and discharging of storage plants impact the lifetime of the insulation material due to mechanical stresses and temperature changes. In addition, the transients due to rapid frequency changes induce mechanical (e.g., fly wheel) and electrical (e.g., overvoltage) stresses in the equipment. To operate storage and renewable sources in a complementary stable manner the droop characteristics must be different where the small-sloped characteristic is associated with the frequency leader. In addition the control of storage and renewable sources must have sufficient gains and small enough time constants as required by fast mechanical [174] and electronic valving and switching, respectively. Parameter variations are an important subject in the field of power quality because these may cause instability of the grid.

12.5 AC transmission lines vs DC lines

In the past mostly AC transmission lines have been used, except for DC underwater cable transmission applications. The occurrence of ferroresonance (see [Chapter 2](#)) limits the length of AC cables above 20 kV. In addition, there exists a stability problem for AC lines longer than about 1000 miles. For this reason high-voltage DC transmission lines have been used in Scandinavian Countries [\[175\]](#) and in California [\[176\]](#). DC lines have several advantages (use of less copper because there is no skin effect, no stability problem at any transmission line length) and disadvantages (the need for converter stations on both ends of the line, the generation of harmonics on the AC and DC sides due to rectification and inverter action).

12.5.1 Solutions to power quality problems of high-voltage AC transmission lines

The problem with buried AC transmission lines is that at voltages larger than 20 kV at a certain length ferroresonance sets in due to the large cable capacitances. This is the reason why at high voltages, overhead lines are installed which have small network capacitances. Gas-filled cables—avoiding ferroresonance—have a reduced capacitance and can be buried. However, gas-filled cables are very expensive. DC transmission lines do not experience ferroresonance, and can be either overhead or underground lines. The application of rectifiers and inverters complicate their application at large transmission power ratings, say 2000 MW.

12.6 Fast-charging stations for electric cars

The large-scale introduction of electrical automobiles hinges on the two important issues: mileage range and fast charging of (heavy) batteries. If the weight of transportation vehicles such as cars and air planes is reduced, then their energy consumption can be either reduced or their mileage can be increased based on the figure of merit (FM) relation [\[1\]](#)

$$FM = \frac{(\text{weight in tons} - \text{force}) \cdot (\text{distance in miles})}{(\text{energy used at wheel from battery in kWh})} = 5 \text{ to } 10. \quad (12.30)$$

In particular the use of carbon [\[177\]](#) fiber and aluminum will decrease the weight in addition by replacing mechanical gears with electric gears so that the mileage range of electric cars can be at least 350 km [\[178\]](#). For example, the BMWi3 [\[179\]](#) with a carbon-fiber passenger cell and an aluminum-drive module has at a curb weight of 1.8 tons-force, a mileage of 400 miles per battery charge of 75 kWh resulting in the figure of merit $FM = (1.8 \text{ tons-force}) \cdot (400 \text{ miles}) / (75 \text{ kWh}) = 9.6$.

12.7 Off-shore renewable plants

Over the course of the past decade, the development of off-shore WP has skyrocketed. Back in 2000, only 36 MW was installed around the world, a figure which has grown rapidly ever since. By the end of 2012, the cumulative installed capacity of off-shore wind farms had

reached an impressive 5410MW. The move to offshore wind energy gained serious traction in 2010 when 999MW were added across the world. In 2011 and 2012, this figure grew to 1033 and 1292MW respectively [180–182].

12.8 Metering

There are two types of electricity metering: net-metering and feed-in tariff metering [1].

12.8.1 Net metering

Most electricity meters are bi-directional and can measure current flowing in two directions [1]. This permits one to easily bank excess electricity from your solar panels for future credit. Net metering only requires one power meter, while feed-in tariffs require two. Unlike feed-in tariffs and power purchase agreements, the credits one accumulates through net metering are always at full retail value. Net metering was first adopted by utilities in Idaho in 1980. Since the Energy Policy Act of 2005, every public electric utility in United States is required to offer net metering to their customers.

12.8.2 Virtual net metering

Virtual net metering is basically net metering (with one electric meter) shared between several people. This enables homeowners that are unsuited for solar for one reason or the other, to participate in community-owned solar farms (also known as solar gardens). There are about one dozen virtual net metering systems operating in the U.S. at the time of writing.

12.8.3 Feed-in tariff

Feed-in tariff requires one extra power meter in order to measure outflow of electricity from your home independently. This enables electricity consumption and electricity generation to be priced separately as is done in Germany by Stadtwerke München (SWM) and most other utilities. Feed-in tariff schemes are typically based on a 15- to 20-year-long contract where prices are predefined above retail with a tariff that is subject to changes, either by regular degression or by legislative changes, which effectively reduces your earnings over time. For every kWh one generates one gets paid. Only six states across the U.S. currently have some form of feed-in tariff scheme as of today: California, Florida, Vermont, Oregon, Maine, and Hawaii.

12.9 Other renewable energy plants

Ocean-tide plants are investigated in France and in the United Kingdom, where the tides and the geological formations lend themselves to such energy sources. The groundwater heat pump again depends upon the geological formations and is used in Application Example 12.1. The idea of capturing electrical energy from geomagnetic fields has been researched, but no practical applications have come forward because it is very difficult to use high frequency electric fields to beam the energy from space to earth. The same problem exists with

beaming the energy from space to earth, if PV arrays generate electricity in space [183]. The recovery of braking energy in automotive applications is used [1] for hybrid/electric cars and for electric trains. About 10%–20% of the energy can be recovered for short-distance with stop-and-go travel. For long-distance travel this percentage will be much smaller. The utilization of methane emanating from garbage dumps is relied on in few cases only. With the recycling of compostable material this type of methane collection will not play a major role. Although the Stirling engine [184] has been known for a long time, no feasible applications have been introduced to date. Depending upon the geological formation geothermal energy can be utilized: the center of the earth has a temperature of about 5000–6000°C. This stored heat originating in the natural radioactive decay streams to the surface layer of the earth and heats rocks and groundwater. The Aschheim/Feldkirchen/Kirchheim AFK [185] geothermal company near Munich utilizes this natural geothermal energy. It is expected that the temperature gradient is approximately 3.2°C per 100 m depth. Near Munich these heat energies can be accessed fairly easily because of the limestone containing water. These layers contain at a depth of about 2200–2700 m warm water with a temperature of 85°C. Cogeneration plants where electricity generation, and warm/cooling water production are combined are frequently installed [1] on university campuses, municipalities, and industrial production facilities.

In contrast to the solid electrolyte fuel cells (SOFC) with a few tens of MW electrical output, the three thermal combined heating and electric power (CHP)—fed by a combination of conventional fuel with biomass, refuse/garbage—plants in Munich (North-, South-, and Freimann plants) [186] deliver a total of 1269 MWe (where e means electric) and a heating power of 1998 MW by meeting all required environmental pollution regulations, supplying 58% of the electric power consumed in Munich with the maximum efficiency of 90%, if heat and electric power outputs are at their rated values.

12.10 Production of automotive fuel from wind, water, and CO₂

High-temperature electrolysis at 800 degrees Celsius has an efficiency of over 90% [187], where the input consists of electricity and water yielding from (water) steam in a first step hydrogen and oxygen gases. In a second step, the hydrogen gas and carbon dioxide results in synthesized fuel for automotive applications which can be mixed with gasoline, diesel or jet fuel. The overall efficiency of this two-step process is about 70%. This process uses for each ton-force generated synthesized fuel about 3.2 tons-force of CO₂ taken from the air. It is estimated that 1 L of this synthesized fuel costs about 1.3 Euro. Car manufacturers indicate that for any percentage mix of synthesized fuel with either gasoline or diesel no changes in the car engine technologies will be required. In addition, the synthesized fuel will neither contain sulfur nor nitric oxides, and no food supplies (e.g., corn) will be used for this synthetic fuel production.

12.11 Water efficiency

One way to boost water efficiency is to promote the use of more technologically advanced controllers so that residential and commercial landscape irrigation moves beyond the currently predominant techniques of manual irrigation or conventional automatic timers.

Results [188] suggest that wider adoption of advanced irrigation control technologies would result in average water savings that could lessen the strain on aging water treatment infrastructure and on overtaxed freshwater resources.

12.12 Village with 2600 inhabitants achieves energy independence

In 1999, the village council of Wildpoldsried, located in Bavaria, Germany, decided to take with the mission statement **WIR** (Wildpoldsried Innovative Redirecting) a lead with respect to renewable energy [189–192]. Based on this motto, with the participation of citizens, an ecological profile was developed that was distinguished by regional, Bavarian and international administrations and societies due to its innovativeness and leadership. For example, in April 2000, two wind power (WP) plants with 1 MW each were installed with the financial support of 30 citizens. Subsequently, 93 citizens financed in December 2001 two 1.5 MW WP plants, in October 2007 one 2 MW WP plant was constructed based on support of 60 citizens, and finally 99 citizens financed two 2.3 MW WP plants. This exemplary engagement of 282 citizens resulted in 7 WP plants with a total of 11.6 MW installed output power capacity.

The pilot research project [189,192] for the “Integration of Renewable ENergy and Electro-mobility” (**IRENE**) in Wildpoldsried started in 2011 in order to demonstrate for 2 years—based on decentralized intermittently operating renewable energy sources such as photovoltaic, wind, and biogas power plants—economic solutions for the local utility Allgäuer Überlandwerke GmbH. One important component is the self-organizing, real-time energy control system designed by Siemens AG. Another component is the measuring of parameters at more than 200 locations of the decentralized distribution system in order to optimize intermittent generation, consumption, and storage of electric energy. For 8 months 30 electric vehicles were available to citizens for test-mode operation and partly were used as storage components to charge and discharge within the smart-grid environment in order to mitigate the peaks of generation and consumption. Additional contributors to this exemplary project are Hochschule Kempten and RWTH Aachen. A total of 6480 MWh represent electricity consumption without supplying it to heating systems such as storage heaters or heat pumps. Biogas is generated based on liquid manure supplied by seven local farmers, including silage, dung, and foodstuffs such as onions, potatoes, and corn that have spoiled and are not suitable for human consumption. The distribution system is not self-sufficient—that is, it is not a micro grid—because it is always connected to the local utility grid.

12.13 Reduction of lifetime as a function of temperature

Any organic or anorganic material ages and its lifetime is reduced with temperature [193,194] and therefore with time due to elevated and changing temperature exposure. In former times lifetime was assumed to be 40 years: due to changing technology for some (electronic) devices rated lifetime is much less due to improved circuitry and more sensitive designs (e.g., very low voltages in the milli and micro volt ranges) which are failing due to short circuits and transient phenomena. The following two application examples

demonstrate that for PV circuits lifetime reduces with time due to exposure to sunshine causing high temperatures of PV panels during their lifetime. Application Example 12.12 pertains to the PV plant on a single-family house as discussed in Application Example 12.1. Application Example 12.13 discusses the lifetime reduction as a function of time for the PV plant of Problem 1.19 [34].

12.13.1 Application Example 12.12: Aging/reduction of generation of photovoltaic power plant with mainly south orientation

The measured DC energy of the two inverters (Fig. 1.9g [34] and E12.1.1) are:

$EI_{2014} = (8960 - 2383) \text{ kWh/year} = 6577 \text{ kWh/year}$ during 7/14/2013 to 7/14/2014,

$EI_{2015} = (15088 - 8960) \text{ kWh/year} = 6128 \text{ kWh/year}$ during 7/14/2014 to 7/14/2015,

$EI_{2016} = (21460 - 15,088) \text{ kWh/year} = 6372 \text{ kWh/year}$ during 7/14/2015 to 7/14/2016, leap year (+1 day).

$EI_{2017} = (28043 - 21,460) \text{ kWh/year} = 6583 \text{ kWh/year}$ during 7/14/2016 to 7/14/2017.

$EI_{2018} = (34535 - 28,043) \text{ kWh/year} = 6492 \text{ kWh/year}$ during 7/14/2017 to 7/14/2018.

$EI_{2019} = (41367 - 34,535) \text{ kWh/year} = 6832 \text{ kWh/year}$ during 7/14/2018 to 7/14/2019.

$EI_{2020} = (48110 - 41,367) \text{ kWh/year} = 6743 \text{ kWh/year}$ during 7/14/2019 to 7/14/2020, leap year (+1 day).

$EI_{2021} = (54320 - 48,110) \text{ kWh/year} = 6210 \text{ kWh/year}$ during 7/14/2020 to 7/14/2021.

Fig. E12.12.1 depicts the measured decrease of the PV module output power generation EI_{year} [kWh] for 7 years from 2014 to 2021.

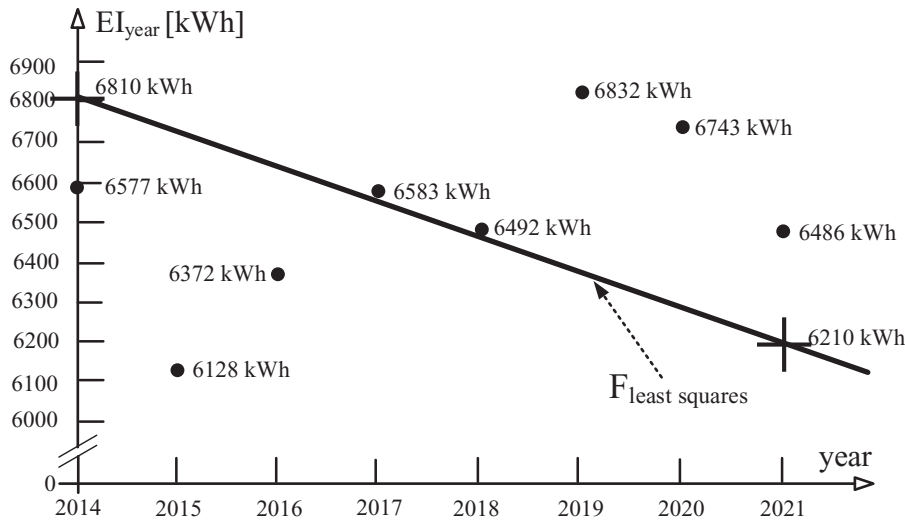


FIG. E12.12.1 Reduction of generation of PV modules from 2014 to 2021, where the function $F_{\text{least square}}$ represents the least square approximation.

Note that the year 2015 was to date the hottest on record [195], and therefore the generation is relatively low because the warmer the summer is at a certain location the greater is the humidity of the air causing clouding. In addition, as PV panels become quite warm, the (electric) efficiency of the solar cells decreases. A least squares error analysis yields the decreasing function $F_{\text{least squares}}$ of Fig. E12.12.1, therefore the reduction of generation is reduced due to aging and dirt on panels [196]; it varies as a function of insolation as well. According to Fig. E12.12.1 the measured reduction of lifetime is obtained from $[(F_{\text{least squares}}(2014) - F_{\text{least squares}}(2021))]/[7 \cdot F_{\text{least squares}}(2021)] = [6810 - 6210]/[7 \cdot 6210] = 0.0138$ or 1.38% per year.

12.13.2 Application Example 12.13: Aging/reduction of generation of photovoltaic power plant with mainly west orientation

The measured DC energy of the two inverters [197] are:

$EI_{2017} = (85,041.7 - 73,276.5) \text{ kWh/year} = 11,765 \text{ kWh/year}$ during 4/13/2017 to 4/13/2018.

$EI_{2018} = (97,909.6 - 85,041.7) \text{ kWh/year} = 12,868 \text{ kWh/year}$ during 4/13/2018 to 4/13/2019.

$EI_{2019} = (110,660 - 97,909.6) \text{ kWh/year} = 12,750 \text{ kWh/year}$ during 4/13/2019 to 4/13/2020.

$EI_{2020} = (123,411.0 - 110,660) \text{ kWh/year} = 12,751 \text{ kWh/year}$ during 4/13/2020 to 4/13/2021, leap year (+1 day).

Fig. E12.13.1 depicts the measured decrease of the PV module output power generation EI_{year} [kWh] for 4 years from 2018 to 2021.

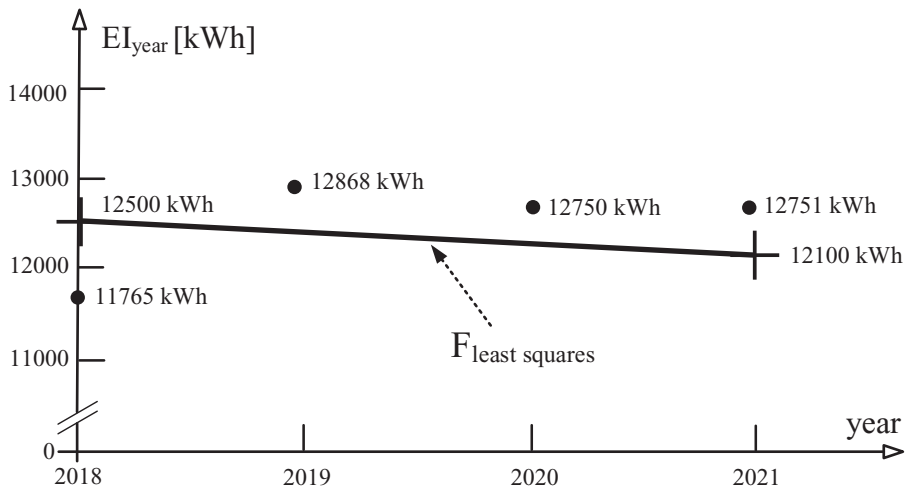


FIG. E12.13.1 Reduction of generation of PV modules from 2018 to 2021, where the function $F_{\text{least square}}$ represents the least square approximation.

The generation is relatively low for 2018 because the warmer the summer is at a certain location the greater is the humidity of the air causing clouding. In addition, as PV panels warm, the (electric) efficiency of the solar cells decreases. A least squares error analysis yields the decreasing function $F_{\text{least squares}}$ of Fig. E12.13.1, therefore the reduction of generation is reduced due to aging and dirt on panels [197]; it varies as a function of insolation as well. According to

Fig. E12.13.1 the measured reduction of lifetime is obtained from $[(F_{\text{least squares}}(2018) - F_{\text{least squares}}(2021)) / [3 \cdot F_{\text{least squares}}(2021)]] = [12500 - 12100] / [3 \cdot 12,100] = 0.011$ or 1.10% per year.

12.13.2.1 Conclusion

The aging of photovoltaic cells as used in solar plants is about 1% per year as approximately found in Application Example 12.12, and supported by more detailed analysis [198].

12.14 Paralleling of two power systems

Paralleling of two power systems with synchronous generators: When two power systems are energized by synchronous alternators they can be paralleled if frequency, phase, and magnitude of the terminal voltages of the two synchronous generators [199–203] are identical and no transients during the interconnecting action occurs. Because of changing loads a correspondence of the above three quantities can seldom be achieved for a long enough period for synchronization of the two power systems by an operator. Power systems must sometimes be able to supply almost instantaneously additional power. In order to maintain stability of the power system, additional generator set must be paralleled to the system. This paralleling must be performed quickly in order to support the system without reducing its operating stability. A fast interconnection (paralleling) can be accomplished if the slip s , an out-of-phase angle $\Delta\Phi$ of the two voltages and a slight discrepancy $|\Delta\tilde{V}|$ in the voltage magnitudes can be tolerated. An investigation of the transient, synchronizing out-of-phase torque of the paralleled synchronous generator will provide limits for the maximum permissible slip s_{max} , the maximum out-of-phase angle $\Delta\Phi_{\text{max}}$ and the maximum permissible voltage difference $|\Delta\tilde{V}|_{\text{max}}$.

Based on [201–203] the following conditions are required for a paralleling of a synchronous generator with the power system:

- (1) slip $s_{\text{max}} \leq 1\%$,
- (2) maximum difference voltage magnitude between generator voltage $\tilde{V}_G$ and system voltage $\tilde{V}_S$ should be $\left| \frac{\tilde{V}_S - \tilde{V}_G}{\tilde{V}_S} \right| \leq 10\%$.
- (3) The phase difference between $\tilde{V}_S$ and $\tilde{V}_G$ should be less than $\Delta\Phi_{\text{difference}} = \pm 5^\circ$ electric.

If these conditions are not met then large synchronizing torques associated with large induced currents are induced, damaging the paralleled synchronous generator. Fig. E4.3.7 shows the flux distribution when a large synchronous generator is out-of-phase ($\Delta\Phi_{\text{difference}} = \pm 180^\circ$ electric) synchronized with the power system resulting in a melting of the key bars leading to a complete loss of the synchronous generator.

Paralleling of the power systems with power-electronic inverter: The above described paralleling of two power systems does not work if an inverter is connected to the power system because the inverter frequency must be synchronized with that of the power system before the connection occurs as is demonstrated in Fig. E4.3.6A,B.

12.15 The TEXAS synchrophasor network

Invention of synchrophasors: A. G. Phadke et al. invented in 1988 phasor measurement units (PMU), where phasors are synchronized to an absolute time reference provided by the Global Positioning System (GPS); one refers to such synchronized phasor measurements as *synchrophasors* [204,205]. Prototypes of the PMU were built at Virginia Polytechnic Institute and State University, and Macrodyne built the first PMU in 1992.

Transition from phasors to synchrophasors: The angle of a phasor by itself has little significance without a reference. It is common for relays to choose voltage of a phase that is V_a at 0° as a reference for all phasors within a device. Comparing the angle difference of V_a voltages between two devices does not give accurate results unless both waveforms are sampled at the same time. Synchrophasors permit the precise measurement of voltage, current, phase angle, frequency, and other power system data from different PMUs, when a satellite-synchronized clock serves every PMU. Each PMU uses the universal time source to create a phasor representation of a constant sinusoidal reference signal, that is a synchrophasor, which is the same across all devices in the network. A time tag defines the relationship between any measured signal and the reference [206].

During the February 2021 winter storm in Texas, the power system frequency changed between the values $f_{\max}=60.1\text{Hz}$ and $f_{\min}=59.30\text{Hz}$ and the power output in the area of ERCOT was maximum $P_{\max}=70\text{GW}$ and $P_{\min}=45\text{GW}$ as recorded by W. Mack Grady and A. Mattei of Baylor University [207]. This change caused that about millions of households out of 24 million people were without electricity, and step-wise (about 9.5 GW) load drops were used because wind and solar power generation were very low due to excessive winds and snow covering solar plants. Normally the wind and solar power generation within ERCOT is about 30% of the rated power consumption of 50 GW. During the Winter storm wind and solar generation was about 11%. Frequency set points [208] for relays protecting power generation are in the low range of 58–59 Hz. This means the 59.31 Hz permitted during the winter storm resulted in the loss of electricity for about millions households to prevent the collapse of the ERCOT system.

The prevention of a collapse through step-wise load droppings demonstrates that the deployment of synchrophasors is very useful for monitoring the state (e.g., frequency) of a power system and is used for controlling the partial shutdown of the power system so that a total collapse of the system can be prevented [209]. This demonstrates that the control of generation of electric power is not limited to the individual power plant residing inside the fence of an individual generation unit but the entire state of the system must be considered as pointed out in [34, Appendix 1 Fig. 1.B.1].

12.16 Summary

The size and number of renewable energy sources can be minimized through their efficient use: an energy unit saved means it does not need to be generated by renewable sources. Frequently inexpensive electronic devices/components have the highest efficiency, but poor power quality: examples with respect to steady-state operation are peak rectifiers, power

electronic heating elements based on burst-voltage/current and phase-angle voltage/current control for induction-type stoves generating sub-, noninteger, and integer harmonics. Any power electronic switching involves snubbers, reverse-recovery currents, differential and common-mode noise which must be eliminated through appropriate filters. Other examples are permanent-magnet machines operating either in full-on or pulse-width-modulation (PWM) mode. In the full-on mode, the efficiency is higher than that at PWM. However, the power quality at full-on mode is poor due to current harmonics generated by the driver/inverter circuit. PV and WP plants operate mostly under non-steady-state and transient operation requiring maximum-power point operation, short-term and long-term storage components in addition to filters to provide for the consumer a constant frequency and voltage at an acceptable power factor and quality. This relates to the efficiency of transmission: a low power factor increases the losses within a transmission line.

This chapter includes practical examples (e.g., measuring the PV output power of residence, Fig. E12.1.1, and its total electrical generated powers, Fig. E12.1.3, measuring the performance of electronic gear, Figs. 12.14–12.16) and theoretical (PSPICE and Mathematica solutions) considerations of power quality solutions for renewable energy systems. Additionally 13 practical application examples with 24 hands-on problems at the end of the chapter and 209 references relate the topics to real world problems. The operation of PWM rectifiers and inverters is explained based on PSPICE program. Frequency control as a function of short- and long-term storage elements is analyzed with Mathematica. It appears that for the consumer the net-metering approach is more advantageous than the feed-in tariff approach. In the first case, the grid is used as storage of electric energy which can be recalled during times when the PV plant does not generate sufficient energy for the residence. In the feed-in approach, the utility pays for the delivered kWh only about half or less what the consumer pays for the kWh bought from the utility. This chapter discusses the most important renewable energy sources and their impact on power quality. Less popular renewable sources are summarized at the end of the chapter. Most renewable energy sources require a detailed knowledge of power quality solutions.

12.17 Problems

Problem 12.1: Design of Photovoltaic (PV) Power Plant for Residence

A PV power plant consists of solar array, peak (maximum)-power tracker [1], a step-up/step-down DC-to-DC converter, a deep-cycle battery for part f) only, a single-phase inverter, single-phase transformer, and residence requires a maximum inverter AC output power of $P_{inv}^{max} = 5.91 \text{ kW}$ as shown in Fig. P12.1.1. Note, the maximum inverter output AC power has been specified because the entire power must pass through the inverter for all operating modes as is explained below. In addition, inverters cannot be overloaded even for a short time due to the low heat capacity of the semiconductor switches.

Three operating modes will be investigated:

- (1) in part f) the operating mode #1 is a stand-alone configuration (546 kWh are consumed per month in Munich, Germany),

- (2) in part g) the operating mode #2 is a configuration, where the entire energy (546 kWh) is consumed by the residence and the utility system is used as storage device only,
- (3) in part h) the operating mode #3 is a configuration, where 60 kWh are consumed by the residence and 486 kWh are sold to the utility. The consumption in the residence—disregarding heating energy—is low due to LED lighting, high efficiency appliances (e.g., refrigerator, induction-type stove), and electronic equipment.
- (a) The power efficiencies of the maximum power tracker, the step-up/step-down DC to DC converter, the battery, and the inverter are 97% each, while that of the transformer is about 1.00. What maximum power $P_{max}^{solar\ array}$ must be generated by the solar plant (array), provided during daytime $E_{month_day} = 60$ kWh will be delivered via the inverter to the residence (without storing this energy in battery), and sufficient energy will be stored in the battery so that the battery energy of $E_{month_night} = 486$ kWh can be delivered during nighttime by the battery via the inverter to the residence: that is a total of $E_{month} = E_{month_day} + E_{month_night} = 546$ kWh can be delivered to the residence during 1 month?
- (b) For a commercially available solar panel the V—I characteristic of fig. 3.23 of [1] was measured at an insolation of $Q_s = 0.9$ kW/m². Plot the power curve of this solar panel: $P_{panel} = f(I_{panel})$.
- (c) At which point of the power curve $P_{panel} = f(I_{panel})$ would you operate assuming $Q_s = 0.9$ kW/m² is constant? What values for power, voltage and current correspond to this point?
- (d) How many solar panels would you have to connect in series (N_s) in order to achieve a DC output voltage of $V_{DC}^{max} = 480$ V of the solar plant (array)? How many solar panels would you have to connect in parallel (N_p) in order to generate the inverter output power $P_{inv}^{max} = 5.91$ kW?
- (e) How much would be the purchase price of this solar power plant, if 1 kW installed output capacity of the inverter (this includes the purchase costs of solar cells + peak-power tracker + DC-to-DC converter + inverter) costs US \$3500 (without utility rebates and state/federal government tax-related subsidies)?
- (f) *Operating mode #1, battery is used as storage device*

What is the payback period (in years, without taking into account interest payments) of this solar plant if you use in your residence 546 kWh per month at an avoided cost of US \$0.37/kWh (includes service fees and tax)? (You may assume that this solar plant can generate every month 546 kWh and there is no need to buy electricity from the utility: 60 kWh per month will be used in the residence during daytime and during nighttime and 486 kWh per month will be supplied via inverter from the battery to the residence). However, there is a need for the use of a 20 kWh deep-cycle battery as a storage element so that electricity will be available during hours after sunset. This battery must be replaced every 4 years at a cost of US \$4000.

- (g) *Operating mode #2, utility system is used for storage*

What is the payback period (in years, without taking into account interest payments) of this solar plant if you use in your residence 60 kWh per month at an avoided cost of US \$0.37 per kWh? You may assume that this solar plant can generate every month 546 kWh and every month the solar plant feeds 486 kWh into the power system of the utility company which reimburses you US \$0.22 per kWh (so-called net metering, see reference 27 of Chapter 1 [1]). In

this case, there is no need for a battery as a storage element because during the hours after sunset the electricity can be supplied by the utility: 486 kWh at US \$0.22 per kWh. There is a connection charge of US \$7.00 per month.

(h) Operating mode #3, excess energy sold to utility

What is the payback period (in years, without taking into account interest payments) of this solar plant if you use in your residence 60 kWh per month at an avoided cost of US \$0.37 per kWh? You may assume that this solar plant can generate every month 546 kWh of which every month the solar plant feeds 486 kWh per month into the power system of the utility company which reimburses you US \$0.22 per kWh. There is a connection charge of US \$7.00 per month.

- (i)** Which power plant configuration (e.g., f, g or h) is more cost effective (e.g., has the shortest payback period)?
- (j)** What is the total surface of the solar panels provided the efficiency of solar cells is 15% at $Q_s = 0.9 \text{ kW/m}^2$?
- (k)** Instead of obtaining tax rebates and state/federal government subsidies the owner of a photovoltaic power plant obtains a higher price (feed-in tariff, see [Chapter 1 \[1\]](#)) for the electricity delivered to the utility: Provided 546 kWh are fed into the utility grid at a reimbursement cost of US \$0.22/kWh and the utility supplies 60 kWh to the residence at a cost of US \$0.37/kWh, what is the payback period if the entire plant generating 5.91 kW_{AC} (there are no batteries required for storage) costs US \$24,355k. You may neglect interest payments, and there is a connection charge of US \$7.00 per month.
- (l)** Repeat part k) taking into account interest payments of 2.85%.

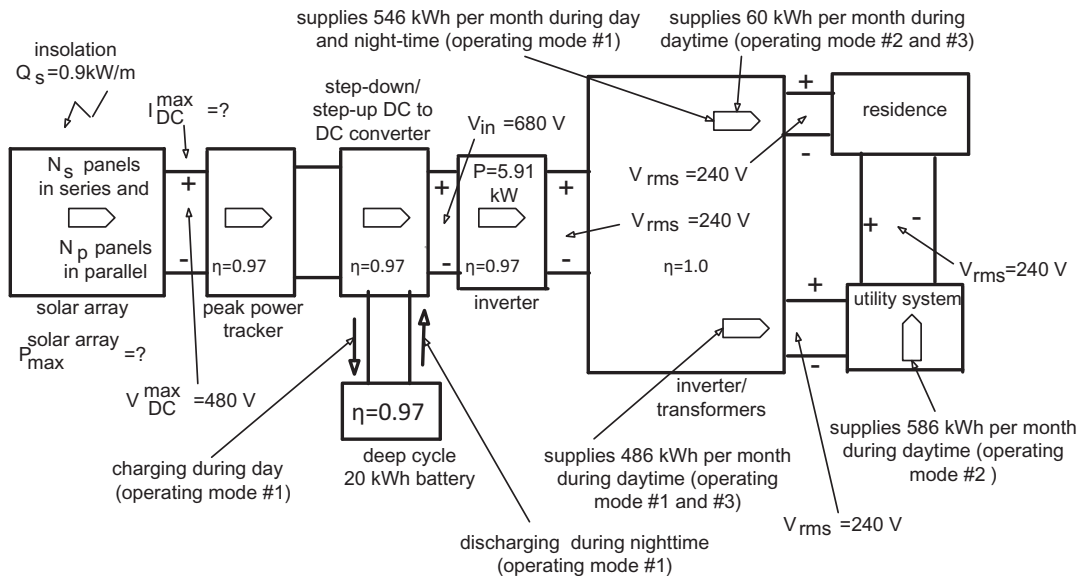


FIG. P12.1.1 Block diagram of a PV power plant for a residence. Note: Solar array consists of N_s panels in series and N_p panels in parallel. The arrows within boxes indicate direction of power flow.

Problem 12.2: Calculation of Energy Consumption in Residence per Living Space (m^2) and per Year ($a \equiv \text{annum}$).

A residence with 300m^2 finished living space requires $12,000\text{kWh}$ of energy (input/consumption in house) during 1 year. Determine the energy consumption in house per square meter and per year.

Problem 12.3: Photovoltaic (PV) Energy Yield as a Function of Latitude.

Calculate based on the National Renewable Laboratory (NREL) software available at <https://pvwatts.nrel.gov/pvwatts.php> the electric energy generation for a PV residential plant of 6.48kW installed output power capacity when either located at a latitude (array tilt) 40.02 degrees (e.g., Boulder Colorado, cost of electricity is US\$ $0.16/\text{kWh}$) and at latitude (array tilt) 48.13 degrees (e.g., Munich Germany cost of electricity is € $0.26/\text{kWh} = \text{US\$ } 0.36/\text{kWh}$) in the northern hemisphere for an array azimuth of 180 degrees with an overall DC to AC derating (electrical efficiency of all components) factor of 0.77 and an array type 20 degree tilt in Boulder and an array tilt of 48.13 degrees in Munich.

Problem 12.4: Burst-Current/Voltage Control for Induction-Type Stove/Cooker

An induction-type stove has a rated power of $P_{\text{rat}} = 800\text{W}$ with $(T_{\text{on}}/T) = 0.8$ at $f^* = 50\text{Hz}$ find the output heating power of the induction-stove coil. Normally burst-current control relies on the frequency range $f = 20\text{--}50\text{kHz}$, but in this problem $f = 50\text{Hz}$ are chosen for simplicity.

Problem 12.5: Burst-Current/Voltage Control for Induction Stove/Cooker

An induction-type stove has a rated voltage of $V_{\text{t,rms, rat}} = 240\text{V}$ at $f^* = 50\text{Hz}$ with $(T_{\text{on}}/T) = 0.8$ find the input voltage of the induction-stove coil. Normally burst-current control relies on the frequency range $f = 20\text{--}50\text{kHz}$, but in this problem $f = 50\text{Hz}$ are chosen for simplicity.

Problem 12.6: Current Harmonics Injected into Power System by Burst-Current Control

It can be assumed that for burst-voltage control, current and voltage are in phase because of resistive load R_{load} , and both have sinusoidal wave shapes. Assume a burst period of $T = T_{\text{delay}} + T_{\text{on}}$, where $T_{\text{on}}/T = 0.6$ at $f^* = 50\text{Hz}$ for sinusoidal terminal voltage with $V_{\text{t,rms, rat}} = 240\text{V}$, and $T = 180$ degrees or $T_{\text{delay}} = 72$ degrees. Normally burst-current control relies on the frequency range of $f = 20\text{--}50\text{kHz}$, but in this problem $f = 50\text{Hz}$ are chosen for simplicity.

- What are the firing angles of the two thyristors of Fig. E12.2.2A for $T_{\text{delay}}/T = 0.4$?
- Write a PSpice program for circuit of Fig. E12.2.2A and compute the current through $R_{\text{load}} = 1.0\Omega$ of Fig. E12.2.2A.
- Determine the Fourier coefficients of the current through R_{load} up to the 21th harmonic.
- Plot the current through R_{load} together with the terminal voltage $V(10)\text{--}V(0)$.
- What types of current harmonics are generated in $i(R_{\text{load}})$:
 - subharmonics,
 - inter-harmonics/fractional harmonics/noninteger harmonics,
 - integer harmonics.

Problem 12.7: Phase-Angle Current Control for Induction Stove/Cooker

An induction-type stove has a rated voltage of $V_{t_{rms_rat}} = 240\text{ V}$ at $f^* = 50\text{ Hz}$ with $(t_{delay}/T/2) = 0.4$ find the input voltage of the induction-stove coil $V_{t_{rms}}$. Phase-angle current control relies sometimes on a higher frequency than 50 Hz, but in this problem 50 Hz is chosen for simplicity.

Problem 12.8: Current Harmonics Injected into Power System by Phase-Angle Current Control

It can be assumed that for phase-angle current control the load is resistive as indicated in Fig. E12.2.2A and the voltage has sinusoidal wave shape. Compute the phase current through load resistor $R_{load} = 1.0\ \Omega$ as shown in Fig. E12.2.2A for a sinusoidal terminal voltage with rms value $V_{t_{rms}} = 240\text{ V}$ and a current phase angle delay time $t_{delay} = 3\text{ ms} \equiv 54^\circ$ at $f^* = 50\text{ Hz}$. Phase-current control relies sometimes on high frequencies of $f = (20\text{--}50\text{ kHz})$, but in this problem $f = 50\text{ Hz}$ are chosen for simplicity.

- What are the firing angles of the two thyristors of Fig. E12.2.2A for $t_{delay} = 3\text{ ms} \equiv 54^\circ$ degrees?
- Write a PSpice program for circuit of Fig. E12.2.2A and compute the current through $R_{load} = 1.0\ \Omega$ of Fig. E12.2.2A.
- Determine the Fourier coefficients of the current through R_{load} up to the 21th harmonic.
- Plot the current through R_{load} together with the terminal voltage $V(10)\text{--}V(0)$.
- What types of current harmonics are generated in the load current $i(R_{load})$:
 - subharmonics,
 - inter-harmonics/fractional harmonics/noninteger harmonics,
 - integer harmonics.

Problem 12.9: PWM Rectifier Output Voltage $V_{DC\ load} = V(R_{load}) = f(V_{rms})$ at Constant Duty-Cycle δ for Variable Input Phase Voltage V_{rms}

Section 12.2.4.1 computes for a pulse-width-modulated (PWM) three-phase rectifier the dependency of the input voltage $V_{aN\ max}$ at a constant output voltage $V_{DC\ load}$ and constant output current $I_{DC\ load}$ provided the duty cycle δ is variable.

In this problem compute and plot for the rectifying circuit of Fig. 12.1 the input phase currents $I(V_{aN})$, $I(V_{bN})$, $I(V_{cN})$, and output voltage $V_{DC\ load} = V(R_{load})$ as a function of the input phase voltages V_{aNmax} , V_{bNmax} , $V_{cNmax} = \sqrt{2}V_{rms} = (233\text{ V}, 465\text{ V}, 930\text{ V})$ at a constant duty cycle $\delta = 0.50$ from 300 to 325 ms. The PSpice program of Table 12.1 can be used as a starting point with switch gating signal frequency = 20 kHz.

Problem 12.10: PWM Rectifier Output Voltage $V_{DC\ load} = f(\delta)$ for Constant Input Voltage $V_{rms} = 329\text{ V}$

Section 12.2.4.1 computes for a pulse-width-modulated (PWM) three-phase rectifier the dependency of the input voltage $V_{AN\ max}$ at a constant output voltage $V_{DC\ load}$ and constant output current $I_{DC\ load}$ provided the duty cycle δ is variable.

In this problem compute for the rectifying circuit of Fig. 12.1 the output voltage $V_{DC \text{ load}}$ as a function of the duty cycle δ at constant input voltage $V_{rms} = 329 \text{ V}$, where the input sinusoidal phase-voltage amplitude is $V_{aN \text{ max}} = 465 \text{ V}$. The PSpice program of Table 12.1 can be used as a starting point.

Problem 12.11: Current-Controlled PWM Inverter Output Voltage $V_{rms} = f(V_{DC})$ for Given Modulation Index m

Section 12.2.4.2 computes for a current-controlled pulse-width-modulated (PWM) three-phase inverter the dependency of the input voltage V_{DC} at constant output voltage $V_{rms \text{ l-n}}$ as a function of the displacement (power factor) angle Φ and the modulation index m .

In this problem compute the output currents $I_{rms \text{ ph}}$ and the modulation index m of the inverter circuit of Fig. 12.6A and B for the output voltages $V_{rms} = (240/\sqrt{3}) \text{ V} = 139 \text{ V}$, $(380/\sqrt{3}) \text{ V} = 220 \text{ V}$, $(480/\sqrt{3}) \text{ V} = 277 \text{ V}$ as a function of the input DC voltage $V_{DC} = 700 \text{ V}$ for leading, lagging and unity displacement (power) factors (generator notation) with displacement power factor angle Φ . The PSpice program of Table 12.3 can be used as a starting point with switch gating signal voltage (vtrial) frequency of 17.28 kHz.

Problem 12.12: Current-Controlled PWM Inverter Output Voltage $V_{rms} = f(m)$ for Given Input Voltage V_{DC}

Section 12.2.4.2 computes for a current-controlled pulse-width-modulated (PWM) three-phase inverter the dependency of the input voltage V_{DC} at constant output voltage $V_{rms \text{ l-n}}$ as a function of the displacement (power factor) angle Φ and the modulation index m .

In this problem compute for the inverter circuit of Fig. 12.6A and B the modulation index m for constant input DC voltage $V_{DC} = 400 \text{ V}$ and variable output inverter phase voltages $V_{rms \text{ l-n}}$ ($240/\sqrt{3} = 139 \text{ V}$, $380/\sqrt{3} = 220 \text{ V}$, $480/\sqrt{3} = 277 \text{ V}$, $600/\sqrt{3} = 346 \text{ V}$, $2400/\sqrt{3} = 1386 \text{ V}$) at unity power factor. The PSpice program of Table 12.3 can be used as a starting point. The frequency of the gating signal voltage is 5.76 kHz.

Problem 12.13: Differential-Mode Electric Noise Filter

The differential electric noise of $f_{10\text{kHz}} = 10 \text{ kHz}$ with the voltage of $\tilde{V}_{10\text{kHz}} = 1 \text{ V} \angle 0^\circ$ across the terminals of a $V_{DC} = 12 \text{ V}$ power supply for a radio must be attenuated to $V_{\text{noise}} = 10 \text{ mV}$. Fig. P12.13.1 shows the circuit of the battery voltage of $V_{DC} = 12 \text{ V}$ including the $\tilde{V}_{10\text{kHz}} = 1 \text{ V} \angle 0^\circ$ as well as the differential-mode filter with impedance $Z_{\text{filter}} = R_{\text{filter}} + 1/(j2\pi f_{10\text{kHz}} \cdot C_{\text{filter}})$. You may assume $R_{\text{filter}} = 0.1 \Omega$, $Z_{\text{battery}} \approx R_{\text{battery}} = 0.5 \Omega$, and $R_{\text{radio}} = 1 \Omega$.

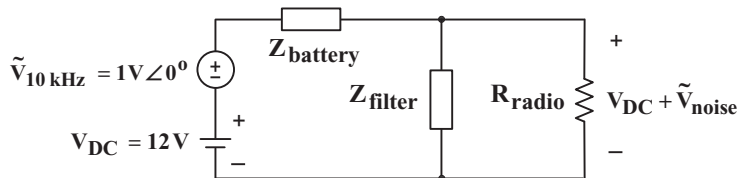


FIG. P12.13.1 Power supply of radio with differential-mode electric noise filter.

- Draw the AC circuit of Fig. P12.13.1.
- Compute the required capacitance C_{filter} of the filter.



Problem 12.14: Common-Mode Electric Noise Filter

The internet connection of a computer is from the modem 20 m long, and the transmission is frequently interrupted due to common-mode noise. Design a suitable filter and specify its components to reduce the maximum value of the common-mode current to $i_{\text{common}} = 10 \mu\text{A}$.

Problem 12.15: Maximum Power Point of a PV Array of a $P_{\text{out}} = 8 \text{ MW}_{\text{AC}}$ Photovoltaic (PV) Power Plant

A PV power plant consists of solar panels, peak-power tracker, step-down/step-up DC-to-DC converter(s) (20 connected in parallel), three-phase inverter(s) (20 connected in parallel), Y- Δ three-phase transformer, and a three-phase power system absorbing the rated (nominal) output power $P_{\text{out inverter}}$ of the 20 inverters at rated operation and rated (maximum) insolation $Q_s = 0.9 \text{ kW/m}^2$. The block diagram of this plant is shown in Fig. P12.15.1. The power efficiencies of the peak-power tracker, step-down/step-up DC-to-DC converters, inverters, and transformer are $\eta = 95\%$ each.

- Using the output characteristics of the solar array of Fig. P12.15.2A determine at an insolation of $Q_s = 0.9 \text{ kW/m}^2$ the output (peak) power of the solar array $P_{\text{solar array}}^{Q_s=0.9 \text{ kW/m}^2}$, and the resulting output power of the 20 parallel-connected inverters $P_{\text{out inverter}}^{Q_s=0.9 \text{ kW/m}^2}$.
- If the line-to-line voltage of the power system—which is identical to the output line-to-line voltage of the Δ -secondary of the Y- Δ transformer (indicated by t)—is $V_{L-L}^t = 13.2 \text{ kV}$ determine the input line-to-line voltage of the Y-primary of the transformer—which is identical with the output line-to-line voltage of the 20 (parallel-connected) inverters (indicated by i) V_{L-L}^i —provided the DC input voltage of one inverter is $V_{\text{DC}}^i = 2 \text{ kV}$ and the modulation index $m = 0.8$, see modulation index m for inverters in [1, Chapter 5]. What is the turns ratio of the transformer N_p/N_s where the primary (indicated by p) is the Y-winding and the secondary (indicated by s) is the Δ -winding of the Y- Δ transformer, see 3-phase transformer connections in [1, Chapter 8]?
- Repeat the analysis of part a) at an insolation of $Q_s = 0.6 \text{ kW/m}^2$, that is, determine the output (peak) power of the solar array $P_{\text{solar array}}^{Q_s=0.6 \text{ kW/m}^2}$ and the resulting output power of the 20 (parallel-connected) inverters $P_{\text{out inverter}}^{Q_s=0.6 \text{ kW/m}^2}$.
- The output characteristic of the solar array changes due to shadowing references 33 and 36 of [1, Chapter 3], caused by clouds, snow, dirt and leaves even though there are bypass diodes mitigating this effect. Repeat the analysis of part a) for the output characteristic of Fig. P12.15.2B, that is, determine the output (peak) power of the solar array $P_{\text{solar array}}^{Q_s=0.9 \text{ kW/m}^2 \text{ with shadowing}}$ and the resulting output power of the 20 parallel-connected inverters $P_{\text{out inverter}}^{Q_s=0.9 \text{ kW/m}^2 \text{ with shadowing}}$.
- The solar array consists of 670,000 solar panels each having an area of $(0.8 \times 1.60) \text{ m}^2$. What is the total area of all solar panels ($\text{Area}_{\text{total}}$)?
- What is the payback period (in years) if 1 kW installed output power capacity of the 8 MW PV plant costs \$2500 provided the average wholesale price of 1 kWh is \$0.22? Note: The fuel costs are zero and the operational costs are negligible; for the payback period calculation you may assume on the average a 6 h operation of the plant per day. No rebates and tax breaks are available, and no interest must be paid.

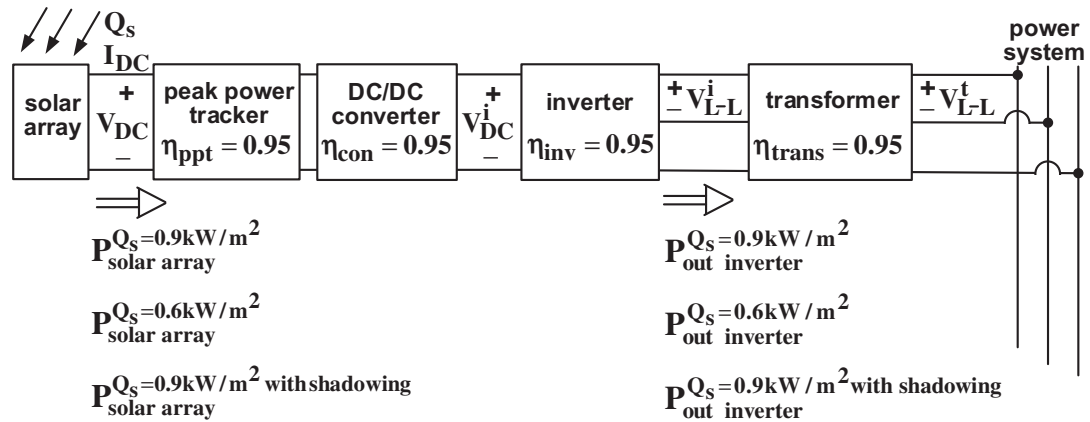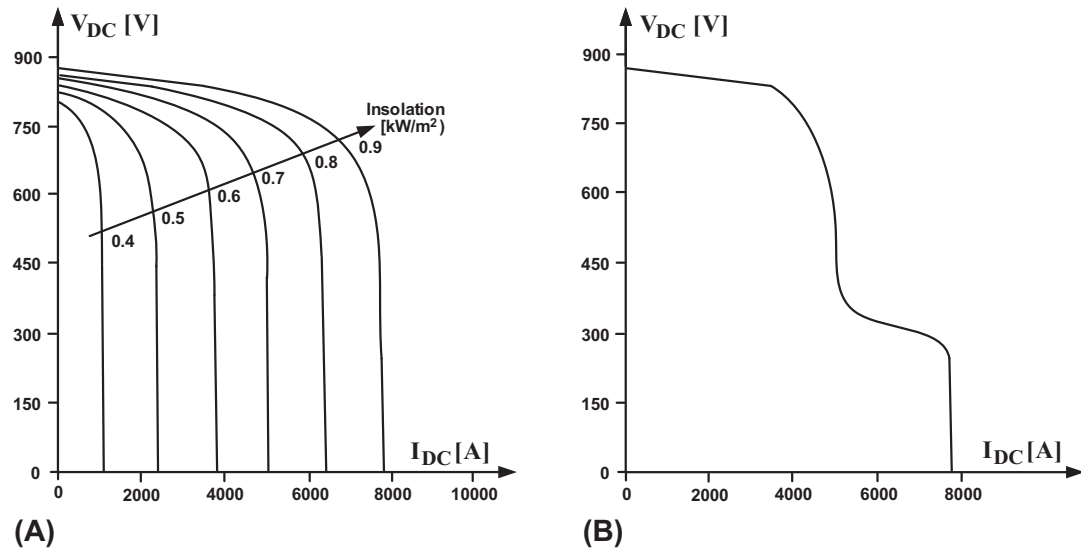FIG. P12.15.1 Block diagram of 8 MW_{AC} PV power plant.FIG. P12.15.2 Voltage-current characteristics of solar array; (A) without shading effect, (B) with shading effect at insolation $Q_s = 0.9 \text{ kW/m}^2$.

Problem 12.16: Design of a 500 MW Pumped-Storage Hydro-Power Plant

A pumped-storage hydro-power plant (Fig. P12.16.1) is to be designed (see references [14–18] of Chapter 12 of [1]) for a rated power $P_{\text{rated}} = 500 \text{ MW}$ and a rated energy capacity 3000 MWh per day. It consists of an upper and a lower reservoir with a water capacity $C_{\text{H}_2\text{O}}$ each. In addition, there must be an emergency reserve for 50 MWh. Water evaporation must be taken into account and is 10% per year for each reservoir, and the precipitation per year is 40 in.. The maximum and minimum elevations of the upper reservoir are 1050 and 1000 ft, respectively. The maximum and minimum elevations for the lower reservoir are

200 and 150 ft, respectively. The water turbine is of the Francis type and it is coupled with a salient-pole synchronous machine with $p=24$ poles, which can be used as a generator for generating electricity by releasing the water from the upper reservoir to the lower one, and as a motor for pumping the water from the lower reservoir to the upper one. A capacity factor of 100% can be assumed: in a real application the capacity factor may vary between 70% and 90%.

- If the power efficiencies of the water turbine, the synchronous generator, and the Y- Δ transformer are $\eta_{\text{turbine}}=0.8$, $\eta_{\text{synchronous machine}}=\eta_{\text{Y-}\Delta \text{ transformer}}=0.95$, respectively, compute the required turbine input power $P_{\text{turbine_input}}^{\text{required}}$.
- Provided the head of the water is $H=850$ ft., the frictional losses between water and pipe amount to 15%, and the water flow measured in cubic feet per second is $Q=12,000$ cfs, compute the mechanical power available at the turbine input P_{kW} measured in kW (see references [146–148] or references [16–18] of Chapter 12 of [1]).
- How does $P_{\text{turbine_input}}^{\text{required}}$ compare with P_{kW} measured in kW?
- Compute the specific speed N_q (see references [16–18] of Chapter 12 of [1] or references [146–148]). Is the selection of the Francis turbine justified?
- What other types of water turbines exist?
- What is the amount of water the upper or lower reservoirs must hold to generate $E=(3000 \text{ MWh} + 50 \text{ MWh})=3050 \text{ MWh}$ per day during an 11.3 h period?
- Is the given precipitation per year sufficient to replace the evaporated water? If not, what is the required “rain-catch” area to replace the yearly water loss through evaporation?
- The pumped-storage plant delivers the energy $E=(3000 \text{ MWh} + 50 \text{ MWh})=3050 \text{ MWh}$ per day for which customers pay $\$0.27/\text{kWh}$ due to peak-power generation. What is the payback period of this pumped storage plant if the construction price is $\$4000$ per installed power capacity of 1 kW, the cost for pumping is $\$0.06/\text{kWh}$, and the interest rate is 2%?

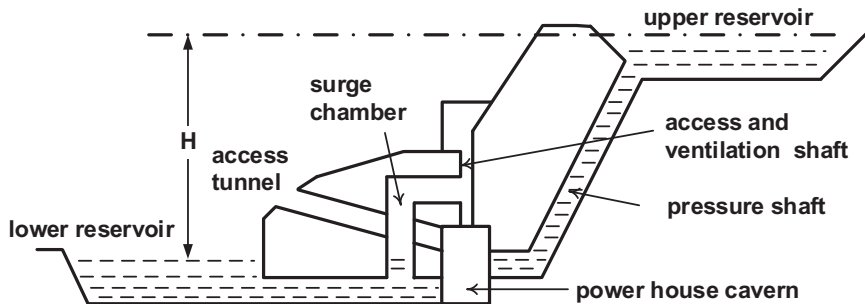


FIG. P12.16.1 Pumped-storage hydro-power plant for peak-power generation (requires start-up time of about 6 min).

Problem 12.17: Design of a 50MW Flywheel Storage Power Plant

Design a flywheel storage system which can provide for about 6 min ($=0.1$ h) a power of 50MW, that is, energy of 5 MWh. The flywheel power plant consists (see Fig. P12.17.1) of a

flywheel, mechanical gear, synchronous machine, inverter-rectifier set and a step-up transformer. The individual components of this plant must be designed as follows:

(a) Possible flywheel configurations.

For the flywheels (made from steel) based on a spherical ($R_{1o}=1.5\text{m}$), cylindrical ($R_{1o}=1.5\text{m}$, $h=0.9\text{m}$), and wheel-type (with 4 spokes) configurations as shown in Fig. P12.17.2 ($h=0.9\text{m}$, $R_{1o}=1.5\text{m}$, $R_{1i}=1.3\text{m}$, $R_{2o}=0.50\text{m}$, $R_{2i}=0.10\text{m}$, $b=0.2\text{m}$), compute the ratio of inertia (J) to the weight (W) of the flywheel, that is (J/W). You may assume that the flywheel has magnetic bearings; see internet address: <https://www.skf.com/group>

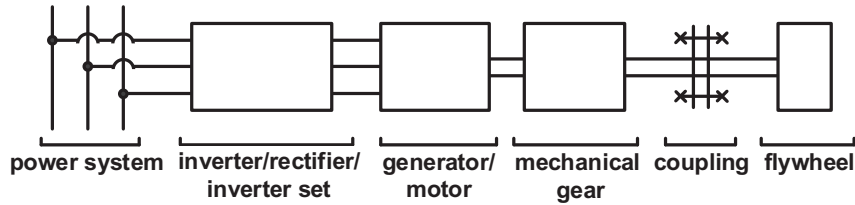


FIG. P12.17.1 Flywheel power plant (start-up time of a few 60Hz cycles).

The axial moment of inertia of a rotating sphere is:

$$J_{\text{sphere}} = \frac{8}{15} \cdot \pi \cdot \gamma \cdot R_{1o}^5 [\text{kgm}^2], \quad (\text{P12.17.1})$$

where the mass density of iron/steel is

$$\gamma_{\text{steel}} = 7.8 [\text{kg/dm}^3]. \quad (\text{P12.17.2})$$

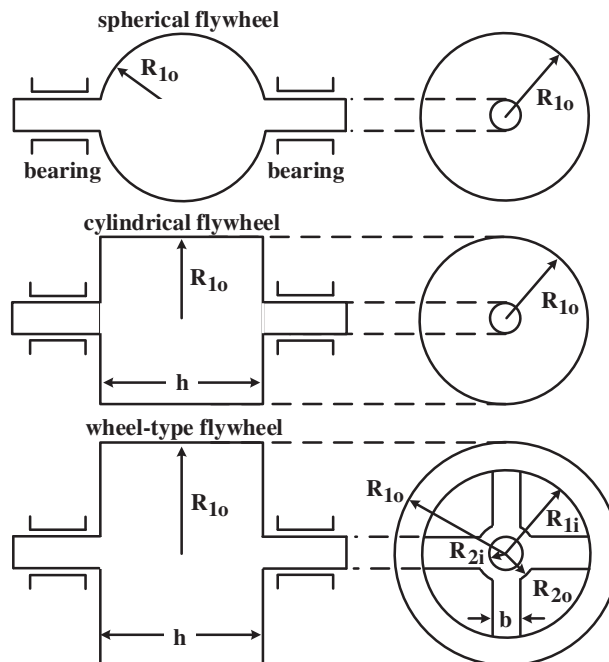


FIG. P12.17.2 Three flywheel configurations.

The axial moment of inertia of a rotating cylinder is:

$$J_{cylinder} = \frac{1}{2} \cdot \pi \cdot \gamma \cdot h \cdot R_{1o}^4 \text{ [kgm}^2\text{]}. \quad (\text{P12.17.3})$$

The axial moment of inertia of a rotating wheel-type configuration with 4 spokes is

$$J_{wheel} = \frac{1}{2} \cdot \pi \cdot \gamma \cdot h \cdot (R_{1o}^4 - R_{1i}^4) + \frac{4}{3} \cdot h \cdot b \cdot \gamma \cdot (R_{1i}^3 - R_{2o}^3) + \frac{1}{2} \cdot \pi \cdot \gamma \cdot h \cdot (R_{2o}^4 - R_{2i}^4) \text{ [kgm}^2\text{]}. \quad (\text{P12.17.4})$$

- (b) For the given values $h = 0.9 \text{ m}$, $R_{1o} = 1.5 \text{ m}$, $R_{1i} = 1.3 \text{ m}$, $R_{2o} = 0.50 \text{ m}$, $R_{2i} = 0.10 \text{ m}$, and $b = 0.2 \text{ m}$ calculate for the wheel-type configuration the stored energy $E_{\text{stored rated}}$ provided the flywheel rotates at $n_{\text{flywheel rated}} = 15,000 \text{ rpm}$.

Problem 12.18: Steady-State Characteristics of a Battery Powered by Solar Array/Panel with Inherent Peak-Power Tracking

Figure P12.18.1 shows the circuit diagram of a battery connected to a solar generator (array) via conductors with a total of $2R = 2\Omega$ and Fig. P12.18.2 depicts the 12 V lead-acid battery and solar-power plant characteristics. The blocking diode prevents that current is injected into the solar array from the remaining circuit: battery, load resistance, and conductor. The operating points (intersections of battery and solar array characteristics) can be made rather close to the maximum power points of the solar power plant (see reference 33 of Chapter 3 [1]). Note that a 12 V lead-acid battery has a rated voltage of $V_{\text{BAT rated}} = E_0 = 12.6 \text{ V}$, if fully charged. A voltage of $V_{\text{BAT}} = E_0 = 11.7 \text{ V}$ if almost empty, and a voltage of $V_{\text{BAT}} = V_{\text{BAToc}} + V_{\text{BATover}} = 14 \text{ V}$ if fully charged, that is, the voltage drops across the electrochemical capacitance C_B and the nonlinear capacitance C_b (V_{BATover}) of battery cells are included (see Chapter 3 of [1]). The relation for the battery characteristic of Fig. P12.18.1 is governed by a linear characteristic

$$V_{\text{PV}} = (V_{\text{PVo}} + R_{\text{battery_characteristic}} \cdot I_{\text{PV}}) \quad (\text{P12.18.1})$$

which does not take into account the influence of the conductor resistance $2R = 2\Omega$ resulting in the operating points 1, 2, ..., 5 as given in Fig. P12.18.2. The evaluation of Eq. (P12.18.1) for the operating point 1 ($V_{\text{PV operating point 1}} = 15.5 \text{ V}$ / $I_{\text{PV operating point 1}} = 2.75 \text{ A}$) and $V_{\text{PVo}} = 13.5 \text{ V}$ yields for the straight line relation

$$15.5 \text{ V} = 13.5 \text{ V} + R_{\text{battery_characteristic}} \cdot 2.75 \text{ A} \quad (\text{P12.18.2})$$

the resistance value

$$R_{\text{battery_characteristic}} = 0.727 \Omega. \quad (\text{P12.18.3})$$

For the characteristics of the solar panel of Fig. P12.18.2 the loci of the knees change as a function of insolation E . The resistance value $R_{\text{battery_characteristic}} = 0.727 \Omega$ of Eq. (P12.18.3) can be used together with an assumed current $I_{\text{PV}i}$ the corresponding voltage $V_{\text{PV}i}$ so that the PV array is operated at the maximum power output for any i th operating point. For example for operating point $i = 3$ one gets for $I_{\text{PV}3} = 1.75 \text{ A}$, the voltage $V_{\text{VP}3} = 14.77 \text{ V}$ corresponding to an output power.

$$P_{\text{PV}3} = I_{\text{PV}3} \cdot V_{\text{PV}3} = 25.9 \text{ W}.$$

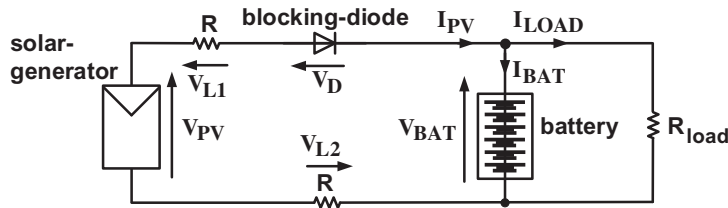


FIG. P12.18.1 Circuit diagram of lead-acid battery directly connected to solar power plant. V_{PV} is the solar array / panel voltage.

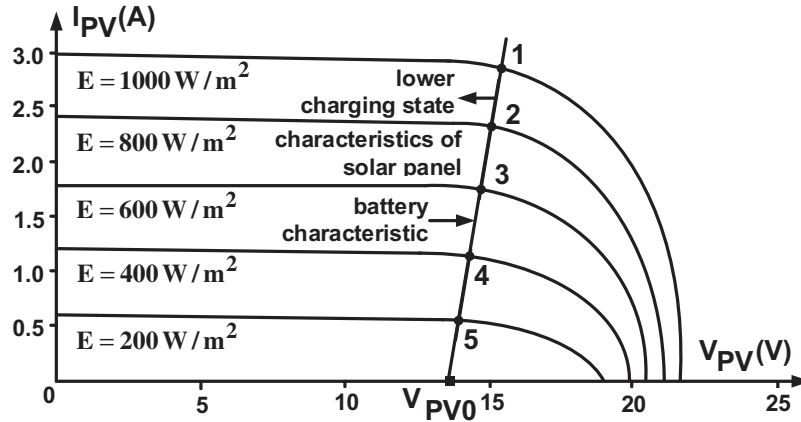


FIG. P12.18.2 Operating points 1, 2, ..., 5 of a lead-acid battery directly connected to a solar plant (requires start-up time of a few 60Hz cycles). E is the insolation.

- Augment the circuit of Fig. P12.18.1 with step-down DC converter in series with the 2R resistances supplying energy to battery and load as described in Chapter 5 of [1]. A step-down DC converter is proposed to allow reduction of PV power to the power system, if for some time too much generation occurs [34]. A step-up converter cannot be used because the PV array cannot accept any currents from the external circuit: this is manifested by the blocking diode of circuit Fig. P12.18.2. Any switching harmonics must not enter the PV array and therefore a shunt capacitor must be employed. The battery can be represented by a very large capacitor.
- Augment the circuit of Fig. P12.18.1 with MOSFET in series with the 2R resistances supplying energy to battery and load described in Chapter 9 of [34]. The same considerations with respect to blocking diode, switching harmonics, and battery representation apply as in part a).
- Design the circuit of Fig. P12.18.1 with MOSFET voltage-source inverter in series with the 2R resistances supplying energy via a transformer to a single-phase rectifier connected to battery and load as described in Chapter 5 of [1]. The same considerations with respect to blocking diode, switching harmonics, and battery representation apply as in part a). The advantage of this circuit is the separation of the generation PV potentials from the battery / load potential.

Problem 12.19: Design of a 200MW Compressed-Air Storage Facility

Design a compressed-air energy storage (CAES) plant for $P_{\text{out_generator}} = P_{\text{rated}} = 200 \text{ MW}$, $V_{\text{L-L}} = 13,800 \text{ V}$, and $\cos\Phi = 1$ which can deliver rated power for 2h. The overall block diagram of such a plant [20,21] is shown in Fig. P12.19.1. It consists of a compressor, cooler, booster compressor, booster cooler, booster-compressor three-phase, 2-pole induction motor with a 1:2 mechanical gear to increase the compressor speed, underground air-storage reservoir, combustor fired either by natural gas or oil or coal, a modified (without compressor) gas turbine, and a three-phase, 2-pole synchronous generator/ motor.

Design data:

Air inlet temperature of compressor: $50^\circ\text{F} \equiv 283.16 \text{ K}$ at ambient pressure $1 \text{ atm} \equiv 14.696 \text{ psi} \equiv 101.325 \text{ kPa}(\text{scal})$.

Output pressure of compressor: $11 \text{ atm} \equiv 161 \text{ psi} \equiv 1114.5 \text{ kPa}(\text{cal})$.

Output temperature of booster cooler: $120^\circ\text{F} \equiv 322.05 \text{ K}$ at $1000 \text{ psi} \equiv 6895 \text{ kPa}$.

Output temperature of combustor: $1500^\circ\text{F} \equiv 1089 \text{ K}$ at $650 \text{ psi} \equiv 4482 \text{ kPa}$.

Output temperature of gas turbine: $570^\circ\text{F} \equiv 524.40 \text{ K}$ at ambient pressure $7.921 \text{ atm} \equiv 116.40 \text{ psi} \equiv 802.57 \text{ kPa}$.

Generation operation: 2h at 200MW.

Re-charging (loading) operation of underground air storage reservoir: 8h at 40MW.

Capacity of air storage reservoir: $7.0 \cdot 10^6 \text{ ft}^3 \equiv 195.2 \cdot 10^3 \text{ m}^3 \equiv (57.78 \text{ m} \times 57.78 \text{ m} \times 57.78 \text{ m})$.

Start-up time: 6min.

Turbine and motor/generator speed: $n_{\text{s mot/gen}} = 3600 \text{ rpm}$.

Compressor speed: $n_{\text{s comp}} = 7000 \text{ rpm}$.

Cost per 1kW installed power capacity: \$3000.

- (a) Calculate the Carnot efficiency of the gas turbine $\eta_{\text{carnot gas turbine}} = \eta_{\text{compressor}} \cdot \eta_{\text{turbine}} = \frac{T_1 - T_2}{T_1}$.
- (b) Note that the compressor of a gas turbine has an estimated efficiency of $\eta_{\text{compressor}} = 0.63$. In this case the compressor is not needed because pressurized air is available from the underground reservoir. The absence of a compressor increases the overall efficiency of the CAES, if "free" WP is used for charging the reservoir. Provided the synchronous machine (motor/generator set) has an efficiency of $\eta_{\text{generator}} = 0.9$ calculate.
 - (b1) the efficiency of the turbine without the compressor $\eta_{\text{compressor}}$
 - (b2) $P_{\text{out turbine}}$
 - (b3) $P_{\text{out combustor}}$
 - (b4) For a heat rate of the combustor of 5500 BTU/kWh, determine the input power of the combustor required (during 1h) $P_{\text{in combustor}}$.
 - (b5) The two air compressors (charging the reservoir during 8h) including the two coolers require an input power of 40MW (whereby wind energy is not free) calculate the overall efficiency of the CAES (during 1h of operation)

$$\eta_{\text{overall}}^{\text{wind energy is not free}} = \frac{P_{\text{out_generator}}}{P_{\text{in_combustor}} + P_{2_compressors+2_coolers}}.$$

- (b6) Compute the overall efficiency if wind energy is free, that is,

$$\eta_{\text{overall}}^{\text{wind energy is free}} = \frac{P_{\text{out_generator}}}{P_{\text{in_combustor}}}.$$

- (c) What is the overall construction cost of this CAES plant, if the construction price is \$3000 per installed power capacity of 1 kW?
- (d) The CAES plant delivers the energy $E = 400$ MWh per day (during 2h) for which customers pay \$0.27/kWh due to peak-power generation. What is the payback period of this CAES plant, if the cost for pumping (loading, recharging) is neglected (free wind power), the cost of 1 cubic foot of natural gas is \$0.007, and the interest rate is 2%?
- (e) Repeat the analysis for a heat rate of 4000 BTU/kWh at a gas turbine output temperature of 424 K.

Hint: For the calculation of the Carnot efficiency of the gas turbine and of the compressors you may use the software available on the Internet address:

<http://hyperphysics.phy-astr.gsu.edu/hbase/thermo/adiab.html#c3>

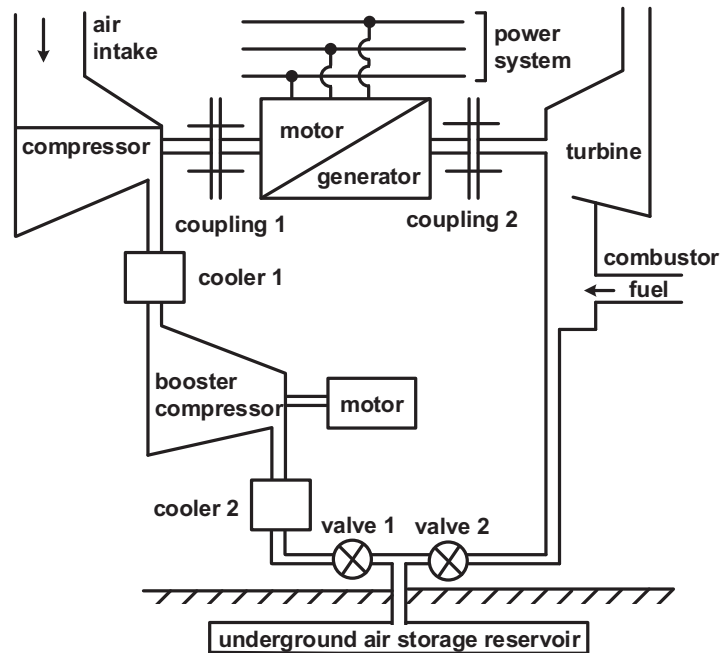


FIG. P12.19.1 Compressed-air storage (CAES) power plant requiring a start-up time of a few (e.g., 6) minutes.

Problem 12.20: Wind Power Plant of 8 MW Produces Hydrogen Based on Electrolysis and its Application to Electric Cars with Fuel Cells

A well-known way of splitting water (H_2O) is by electrolysis. A container (trough) contains pure (distilled) water, and two electrodes,—the anode (A) and cathode (C) consisting of either platinum or nickel—connected to a DC current source. Pure H_2O is a poor conductor; the addition of H_2SO_4 to the water makes the solution conducting. Although the solution of H_2O and H_2SO_4 heats up—due to the losses caused by the current flowing from anode to cathode—at the anode oxygen O_2 and at the cathode hydrogen H_2 is accumulated.

The efficiency of splitting H_2O based on electrolysis is about $\eta_{\text{electrolysis}} = 80\%$, that is, 20% of the energy is converted to heat within the electrolysis process. The energy density of hydrogen is about 2.28 times that of gasoline ($E_{\text{gasoline}} = 12.3 \text{ kWh/kg-force}$), that is, $E_{\text{H}_2} = 28 \text{ kWh/kg-force}$. [Note 1 L (dm^3) of water has a mass m of 1 kg at 4°C , and exerts a (force or) weight of 1 kg-force (or 1 kp) on a scale]. The additional energy loss due to the production of distilled water can be deduced from the definition of 1 kcal: Definition of unit 1 kcal: The energy of 1 kcal is required to heat 1 kg-force of H_2O by 1°C (this is approximately true only because the energy required depends upon the temperature range. It is exactly true heating pure water from 14.5°C to 15.5°C). Note that $1 \text{ kcal} = 4.186 \text{ kWs}$.

- The energy of a $P_{\text{out}} = 8 \text{ MW}$ wind-power plant can be used to generate hydrogen during 8 h of operation per day during 365 days per year. The construction cost of the 8 MW plant, and the generation of pure water including the electrolysis equipment is $\$4000/\text{kW}$ installed power capacity. How much hydrogen energy (expressed in MWh) can be obtained during 1 year taking into account the above-described losses?
- Calculate the payback period provided 1 kg-force of hydrogen (weight) can be sold for $\$4.00$. For your payback period calculation you may neglect interest for borrowing the money for the construction cost.
- How many “equivalent-gasoline gallons” of hydrogen can be produced during 1 year?
- Provided a car owner (on average) travels 15,000 miles per year with an average “mileage” of 40 miles/(gallon “equivalent gasoline”), how many car owners can get the “equivalent gasoline gallons of hydrogen” from the 8 MW plant?

Problem 12.21: Energy Efficiency of 80 kW PEM Fuel Cell as Used for Electric Automobiles

Pertinent data of a PEM fuel cell are as follows:

Output power: $P_{\text{rat}} = 80,000 \text{ W}$.

Output current: $I_{\text{rat}} = 364 \text{ A}$.

DC voltage range: $V_{\text{rat}} = 220\text{--}500 \text{ V}$.

Operating lifetime: $T_{\text{life}} = 1500 \text{ h}$.

Hydrogen volume: $V = 1233$ standard liters per minute (SLPM).

Weight of PEM fuel cell: $W = 83 \text{ kg-force}$.

Emission: 58 L of water per hour.

- The energy efficiency is defined by $\eta_{\text{energy}} = (\text{rated electrical energy output}) / (\text{hydrogen energy input})$. Calculate the energy efficiency of the fuel cell. Note that the nominal energy density of hydrogen is $28 \text{ kWh/(kg-force)}$, significantly larger than that of gasoline. This makes hydrogen a desirable fuel for automobiles.
- Find the specific energy density (energy per unit of weight) of this fuel cell expressed in Wh/(kg-force) .
- How does this specific energy density compare with that of a nickel-metal hydride battery?

Section 12.4.5 illustrates the instability of a two area network when both networks have identical droop characteristics and stability when both have different droop characteristics.

The diagram illustrates a two-machine power system. Each machine consists of a governor and a prime mover. The governor dynamics are represented by a transfer function $\frac{1}{1+s\tau_{G1}}$ and $\frac{1}{1+s\tau_{G2}}$. The prime mover dynamics are represented by a transfer function $\frac{1}{1+s\tau_{CH1}}$ and $\frac{1}{1+s\tau_{CH2}}$. The system is connected to a common tie line, which is modeled by a transfer function $\frac{T}{s}$. The load reference signals $\text{load ref}_1(s)$ and $\text{load ref}_2(s)$ are inputs to the governors. The output of the tie line is the tie line power $\Delta P_{\text{tie}}(s)$, which is added to the prime mover inputs. The system outputs are the angular frequency deviations $\Delta\omega_1(s)$ and $\Delta\omega_2(s)$. The feedback paths include the inverse of the system inertia $1/R_1$ and $1/R_2$.

- List the ordinary differential equations and the algebraic equations of the block diagram of Fig. P12.22.1.
- Use either Mathematica or Matlab to establish steady-state conditions by imposing a step function for $load\ ref_1(s) = \frac{0.8}{s} pu$, $load\ ref_2(s) = \frac{0.8}{s} pu$ and run the program with zero step-load changes $\Delta P_{L1}=0$, $\Delta P_{L2}=0$ (for 10s) in order to establish the equilibrium condition. After 10s impose step-load changes $\Delta P_{L1}(s) = \frac{\Delta P_{L1}}{s} pu = \frac{0.2}{s} pu$, and after 30s impose $\Delta P_{L2}(s) = \frac{\Delta P_{L2}}{s} pu = \frac{-0.2}{s} pu$ to find the transient response $\Delta\omega_1(t) = \Delta\omega_2(t) = \Delta\omega(t)$ for a total of 50s. Repeat part b) for $R_1=0.5 pu$, (e.g., wind-power plant), and $R_2=0.01 pu$ (e.g., coal-fired plant).
- Compute the transient of the angular frequency $\Delta\omega(t)$ for

```

R1=0.5;
d1=0.8;
M1=4.5;
TG1=0.01;
TCH1=0.5;
Lr1=0.8;
DPL1[t_]=If[t<10,0,0.2];
R2=0.02;

```

```

d2 = 1.0;
M2 = 6;
TG2 = 0.02;
TCH2 = 0.5;
Lr2 = 0.8;

```

(d) Compute the transient of the angular frequency $\Delta\omega(t)$ for

```

R1 = 0.5;
d1 = 0.8;
M1 = 4.5;
TG1 = 0.4;
TCH1 = 0.5;
Lr1 = 0.8;
DPL1[t_] := If[t < 10, 0, 0.2];
R2 = 0.02;
d2 = 1.0;
M2 = 6;
TG2 = 0.4;
TCH2 = 0.5;
Lr2 = 0.8;

```

Problem 12.23: Complementary Generation of Long-Term and Short-Term Storage Facilities Together with Two Renewable Sources, where a Natural-Gas Fired Plant is the Frequency Leader.

In [Section 12.4.6](#) the complementary operational frequency/load behavior of a natural-gas fired plant as frequency leader and two long-term storage Plants together with two renewable sources is investigated.

The variation of parameters of a control/circuit is important because it may result in instability. In this problem, compute for block diagram of [Fig. E12.11.2A–C](#) the frequency change $\Delta\omega(t)$ for doubling all T_{CHj} for $j=1-6$ time constants, that is, $T_{CH1}=1.80$ s to $T_{CH6}=0.2$ s. The Mathematica program of [Table E12.11.1](#) can be modified to solve this stability/instability problem. Note each time constant occurs two times in this program.

Problem 12.24: Measured electricity consumption and generation of high-efficiency single-family house in Munich, Germany (see Chapter 12, [subsection 12.1.2](#), [Application Example 12.1](#), and [Fig. E12.1.1](#)) for years 2014 through 2021

[Table P12.24.1](#) represents measured data of the electricity consumption in kWh/month for years 2014 through 2021, and [Table P12.24.2](#) represents measured inverter generation data of the photovoltaic (PV) power plant of [Fig. E12.1.1](#) in kWh/month for years 2014 through 2021. One notes that similarly to [Fig. E12.1.3](#) the inverter generation is highest during summer and lowest during winter while the energy consumption is highest during winter and lowest during summer. Fortunately in this case the PV plant supplies surplus energy during summer to Munich's utility system (SWM, Stadtwerke München) and during winter it draws its energy (e.g., for heating and household consumption) from SWM—albeit for a higher price per kWh as compared to supplying energy to the interconnected distribution system.

This oppositeness or dichotomy of generation and consumption complicates the stand-alone operation of the PV plant because no battery can store for 6 months to make part of the 7 month summer and spring/fall “shoulder season” energy ($\approx 7 \times 30 \times 20 \text{ kWh} = 4200 \text{ kWh}$) available from November to March. To answer the questions listed below reference [210] might be helpful.

- (a) Plot the energy consumption ($\text{EHC}_i + \text{ELA}_i$) energy of Table P12.24.1 and the energy generation (EI_i) of Table P12.24.2 as a function of 2-year timeframe.
The electric energy required from November to March (5 months $\equiv 5 \cdot 30 \text{ days} \equiv 150 \text{ days}$), see Table P12.24.1, Table P12.24.2, and Fig. E12.1.3, is about $12 \text{ kWh}/\text{per day}$ for heating energy via the ground-water heat pump (EHC_i) and household consumption (ELA_i), that is, a total of $12 \text{ kWh} \cdot 150 \text{ days} = 1800 \text{ kWh}$ must be stored at the beginning of November. To simplify matters assume an efficiency of 100% for all components. Most likely the efficiency varies depending upon individual components between 95% and 80%. A 100 kWh battery would not be feasible.
- (b) Could the required energy of 1800 kWh —partially accumulated during summer as shown in Table P12.24.1, Table P12.24.2, and Fig. E12.1.3 be stored in a mass (rock or sand) of $M = 3 \text{ tons} = 3000 \text{ kg}$ at a height of $H = 2 \text{ m}$? Explain such a system based on a block diagram consisting of electric drive and mechanical gear for elevating the mass and the required generating system as the elevation of mass is reduced.
- (c) Repeat part b) based on a $C = 1.3 \text{ farads}$ capacitor storing system at $V_C = 1700 \text{ V}$. Note that a capacitor discharges through leakage over time.
- (d) Repeat part b) by employing a $L = 3.6 \text{ H}$ inductor storing system at $I_L = 1000 \text{ A}$. Note that an inductor discharges through leakage over time.
- (e) Repeat part b) using a water electrolyzer, hydrogen storing mechanism and a fuel cell electric energy generation system. What are the advantages and disadvantages of this approach?

TABLE P12.24.1 Electricity consumption (EHC_i and ELA_i combined) in kWh per month for years 2014 through 2021.

Month	2014	2015	2016	2017	2018	2019	2020	2021
Jan	557	528	648	704	599	741	681	682
Feb	491	564	546	500	631	574	518	518
Mar	371	503	546	431	566	515	515	525
Apr	296	308	398	380	347	417	386	410
May	235	265	375	317	332	374	444	328
Jun	175	212	368	350	241	322	394	194
Jul	162	171	364	360	308	287	313	204
Aug	162	189	387	337	319	269	260	224

TABLE P12.24.1 Electricity consumption (EHC_i and ELA_i combined) in kWh per month for years 2014 through 2021—cont'd

Month	2014	2015	2016	2017	2018	2019	2020	2021
Sep	175	292	360	369	289	363	332	241
Oct	252	387	516	419	432	466	418	394
Nov	401	419	592	559	515	531	493	569
Dec	514	524	610	662	655	659	657	648
Total/year	3790	4361	5710	5388	5234	5518	5411	4937

Cumulative kWh consumed 2014 through 2021: 40,349

TABLE P12.24.2 Electricity generation (EI_i) in kWh per month for years 2014 through 2021.

Month	2014	2015	2016	2017	2018	2019	2020	2021
Jan	191	148	154	137	177	127	235	120
Feb	381	329	286	326	257	437	348	410
Mar	693	560	521	632	486	584	619	588
Apr	645	818	653	596	865	740	950	721
May	732	717	772	862	891	743	783	746
Jun	904	770	755	896	821	927	708	973
Jul	750	941	829	827	935	843	899	760
Aug	680	910	822	813	855	750	764	690
Sep	527	551	707	525	715	656	674	721
Oct	444	382	384	478	509	432	350	516
Nov	189	307	215	171	221	165	249	168
Dec	96	217	165	123	97	169	124	118
Total/year	6231	6648	6263	6386	6829	6573	6703	6531

Cumulative kWh generated 2014 through 2021: 52,164

References

- [1] E.F. Fuchs, M.A.S. Masoum, *Power Conversion of Renewable Energy Systems*, Springer, 2011. and 2012.
- [2] <http://www.n-tv.de/ratgeber/Fuenf-Tipps-zum-Heizkosten-sparen-article12213371.html>.
- [3] <http://www.n-tv.de/politik/Energiewende-koennte-billiger-werden-article12491916.html>.
- [4] <http://www.n-tv.de/politik/OSZE-schickt-Beobachter-in-die-Ukraine-article12511341.html>.
- [5] <http://www.n-tv.de/ticker/14-Prozent-der-EU-Energie-ist-erneuerbar-article12431621.html>.
- [6] <http://www.n-tv.de/ticker/Kuehle-Temperaturen-lassen-Energieverbrauch-steigen-article12483716.html>.
- [7] <http://www.reuters.com/article/2014/01/09/us-europe-power-prices-idUSBREA080S120140109>.
- [8] <http://www.n-tv.de/ticker/Neuer-Rekordwert-fuer-Oekostrom-article12074476.html>.
- [9] <http://www.n-tv.de/wirtschaft/Pilotprojekt-in-Kriegers-Flak-article12001451.html>.
- [10] <http://www.n-tv.de/ticker/EU-Parlament-will-Europas-Klimaschutz-verschaerfen-article12215596.html>.
- [11] http://spectrum.ieee.org/energy/nuclear/uk-builds-nuclear-plants-while-france-scales-back/?utm_source=energywise&utm_medium=email&utm_campaign=011514.
- [12] <https://www.selinc.com/SELUniversity/Courses/SYS/310/>.
- [13] <http://www.clay-works.com/blog/why-use-clay-plaster/>.
- [14] <http://www.livingwoodwindows.co.uk/whats-new/why-choose-triple-glazed-windows>.
- [15] B. König, Energy disclosure for house in Munich, König-Tragwerksplanung, Bahnhofstr. 18, D-94209 Regen, Germany.
- [16] Stiebel Eltron GmbH & Co.KG, "7.64 kW Wasser Wärmepumpe (ground-water heat pump) WPF 7 basic", 37601 Holzminden, Germany, 2012.
- [17] http://www.passiv.de/en/02_informations/02_passive-house-requirements/02_passive-house-requirements.htm.
- [18] 90 MW Pumpspeicherwerk Glems, Technische Werke der Stadt Stuttgart A.G., 1964.
- [19] <http://www.tva.gov/sites/raccoonmt.html>.
- [20] K.G. Vosburgh, Compressed air energy storage, *J. Energy* 2 (2) (1978) 106–112. March–April 1978.
- [21] W. Mattick, H.G. Haddenhorst, O. Weber, Z.S. Stys, Huntorf- the world's first 290 MW gas turbine air storage peaking plant, *Proc. Am. Power Conf.* 37 (1975) 322–330.
- [22] <http://www.spiegel.de/wirtschaft/unternehmen/milliardenschwerer-kraftwerksbau-seeschlacht-um-den-schwarzwaldsppeicher-a-707662.html>.
- [23] <http://www.tz-online.de/aktuelles/bayern/energie-wende-pumpspeicher-kraftwerk-ueber-walchensee-geplant-tz-2738855.html>.
- [24] <http://www.br.de/fernsehen/bayerisches-fernsehen/sendungen/abendschau-der-sueden/saa-jochberg-kraftwerk-100.html>.
- [25] <http://rredc.nrel.gov/solar/calculators/PVWATTS/version1/>.
- [26] S. Keller, LED oder Energiesparlampe? in: *Siedlung und Eigenheim*, Zeitschrift für Haus, Wohnen und Garten, Organ des Eigenheimerverbandes Bayern e.V., May 2014, pp. 190–192.
- [27] <http://www.herd.josefsholz.de/Induktion/Induktion.html>.
- [28] <http://www.ncbi.nlm.nih.gov/pubmed/16635999>.
- [29] A.S. Sedra, K.C. Smith, *Microelectronic Circuits*, fourth ed., Oxford University Press, 1982.
- [30] <http://www.which.co.uk/energy/creating-an-energy-saving-home/guides/air-source-heat-pumps-explained/>.
- [31] The ASHRAE Handbook, ASHRAE, Inc., Atlanta, GA, USA.
- [32] <http://www.health.state.mn.us/divs/eh/indoorair/mold/>.
- [33] H. Rösl, B. Kuhnert, Die deutsche Politik muss eigenheimfreundlicher werden, in: *Siedlung und Eigenheim*, Organ des Eigenheimerverbandes Bayern e.V., Jan. 2014, pp. 6–9.
- [34] E.F. Fuchs, H.A. Fuchs, *Introduction to Energy, Renewable Energy and Electrical Engineering: Essentials for Engineering Science (STEM) Professionals and Students*, Wiley & Sons, 2021.
- [35] <http://geo-energy.org/plants.aspx>.
- [36] <http://www.nrdc.org/energy/files/combined-heat-power-IP.pdf>.
- [37] <http://biomassmagazine.com/plants/listplants/biomass/US/>.
- [38] <http://www.nytimes.com/2010/04/13/science/earth/13trash.html>.
- [39] <http://www.totalenergycompany.com/pdf/MansoorFortenbery.pdf>.
- [40] http://www.netpower.se/documents/EPRI_DCpower_WhitePaper_June2006FINAL.pdf.

- [41] <http://www.vde.com>.
- [42] <http://de.statista.com/statistik/daten/studie/153267/umfrage/bruttostromerzeugung-in-deutschland-seit-1990/>.
- [43] <http://www.n-tv.de/ticker/Neuer-Rekordwert-fuer-Oekostrom-article12074476.html>.
- [44] Bundesverband der Energie- und Wasserwirtschaft (BDEW) e.V., Reinhardtstr. 32, 10117 Berlin.
- [45] <http://de.statista.com/statistik/daten/studie/1807/umfrage/erneuerbare-energien-anteil-der-energiebereitstellung-seit-1991/>.
- [46] M.A.S. Masoum, A. Jafarian, M. Ladjevardi, E.F. Fuchs, W.M. Grady, Fuzzy approach for optimal placement and sizing of capacitor banks in the presence of harmonics, *IEEE Trans. Power Delivery* 19 (2) (2004) 822–829.
- [47] M.A.S. Masoum, M. Ladjevardi, A. Jafarian, E.F. Fuchs, Optimal placement, replacement and sizing of capacitor banks in distorted distribution networks by genetic algorithms, *IEEE Trans. Power Delivery* 19 (4) (2004) 1794–1801.
- [48] M.A.S. Masoum, M. Ladjevardi, E.F. Fuchs, W.M. Grady, Application of local variations and maximum sensitivities selection for optimal placement of shunt capacitor banks under nonsinusoidal operating conditions, *Int. J. Electr. Power Energy Syst.* 26 (10) (2004) 761–769.
- [49] A.J. Wood, B.F. Wollenberg, *Power Generation Operation & Control*, John Wiley & Sons, Inc., 1984.
- [50] J. Arrillaga, *High Voltage Direct Current Transmission*, second ed., Institution of Electrical Engineers, 1998.
- [51] http://blackout.gmu.edu/archive/a_1965.html.
- [52] J.G. Kappenmann, S.R. Norr, G.A. Sweezy, D.L. Carlson, V.D. Albertson, J.E. Harder, B.L. Damsky, GIC mitigation: a neutral blocking/bypass device to prevent the flow of GIC in power systems, *IEEE Trans. Power Delivery* 6 (3) (1991) 1271–1281.
- [53] E.F. Fuchs, Y. You, D.J. Roesler, Modeling, simulation and their validation of three-phase transformers with three legs under DC bias, *IEEE Trans. Power Delivery* 14 (2) (1999) 443–449.
- [54] E.F. Fuchs, Y. You, Measurement of ($\lambda - i$) characteristics of asymmetric three-phase transformers and their applications, *IEEE Trans. Power Delivery* 17 (4) (2002) 983–990.
- [55] Fuchs, E.F.; and Fuchs, F.S.; “Intentional islanding—maintaining power systems operation during major emergencies,” *Proceedings of the 10th IASTED International Conference on Power and Energy Systems (PES 2008)*, April 16 – 18, 2008, Baltimore, Maryland, paper # 617-061, 7 pages.
- [56] <http://sunwatersolar.com/solar-thermal/what-is-solar-thermal>.
- [57] <http://www.solar-thermal.com/>.
- [58] <http://www.minutemanwind.com/pdf/Understanding%20Wind%20Turbine%20Acoustic%20Noise.pdf>.
- [59] <http://www.generac.com/residential/homebackupsystems/>.
- [60] J.P. Barton, D.G. Infield, Energy storage and its use with intermittent renewable energy, *IEEE Trans. Energy Convers.* 19 (2) (2004) 441–448.
- [61] <http://www.rosseta.de/texte/pdat-t4.pdf>.
- [62] <http://emtp.com/>.
- [63] G.W. Roberts, A.S. Sedra, *SPICE*, second ed., Oxford University Press, New York, Oxford, 1997.
- [64] E.F. Fuchs, W.L. Fuchs, Complementary control of intermittently operating renewable sources with short-and long-term storage plants, in: *Energy Storage in the Emerging Era of Smart Grids*, InTech Open Access Publisher, June 2011.
- [65] http://glendash.com/Dash_of EMC/Creation_of_CM_Currents/Creation_of_CM_Currents.pdf.
- [66] IEEE Standard 519, IEEE Recommended Practices and Requirements for Harmonic Control in Electric Power Systems, IEEE-519, 1992.
- [67] IEC 61000-3-2(2001-10) Consolidated Edition. Electromagnetic compatibility (EMC)—Part 3-2: Limits for harmonic current emissions.
- [68] M.A.S. Masoum, H. Dehbonei, E.F. Fuchs, Theoretical and experimental analyses of PV systems with voltage- and current-based maximum power point tracking, *IEEE Trans. Energy Convers.* 17 (4) (2002) 514–522.
- [69] <http://www.wind-power-program.com/powerprofile.htm>.
- [70] Data from NREL’s “Sun Spot One”, Data collection station near Alamosa, Colorado, in the San Luis Valley, Available from <http://www.nrel.gov/midc/ss1/>.
- [71] <http://www-pub.iaea.org/books/IAEABooks/8637/Construction-Technologies-for-Nuclear-Power-Plants>.
- [72] http://www.energy.siemens.com/hq/de/branchen-evu/energie/prozesse/gud-prozess.htm?stc=wwecc120764&ef_id=UoTFcwAAAJAMsSRt:20131219170927:s.

- [73] Energywise, IEEE Spectrum, May 7, 2014.
- [74] S.P. Shea, Evaluation of Glare Potential for Photovoltaic Installations, Publication of Suniva, Inc., Norcross, GA, August, 2012.
- [75] www.rentokil.de.
- [76] <https://www.google.de/#q=Ontariowindfarmshourlyoutputover5days.gif>.
- [77] D. Yildirim, E.F. Fuchs, T. Batan, Test results of a 20 kW, direct-drive, variable-speed wind power plant, in: Proceedings of the International Conference on Electrical Machines, Istanbul, Turkey, September 2-4, 1998, pp. 2039-2044.
- [78] <http://www.enercon.de/en-en/85.htm>.
- [79] E.F. Fuchs, M.H. Myat, Speed and torque range increases of electric drives through compensation of flux weakening, in: Proceedings of the 20th International Symposium on Power Electronics, Electrical Drives, Automation, and Motion, Pisa, Italy, June 14-16, 2010.
- [80] E.F. Fuchs, Alternating current machine with increased torque above and below rated speed for hybrid electric propulsion systems, U.S. Patent No. 8,183,814 B2, May 22, 2012.
- [81] <http://www.liebherr-bauma.com/de-DE/141929.wfw>.
- [82] http://spectrum.ieee.org/energywise/green-tech/wind/belgium-claims-worlds-largest-offshore-turbine/?utm_source=energywise&utm_medium=email&utm_campaign=120413.
- [83] http://spectrum.ieee.org/energywise/energy/renewables/will-balloons-boost-the-solar-updraft-tower-idea/?utm_source=energywise&utm_medium=email&utm_campaign=120413.
- [84] http://www.colorado.edu/engineering/energystorage/files/IFEC2007/2007_IFEC_CU_IIT_Final_Report.pdf.
- [85] H. Jordan, V. Klima, K.P. Kovacs, Asynchronmaschinen, Funktion, Theorie, Technisches, Akademiai Kiado, Budapest, 1975.
- [86] E.F. Fuchs, M. Poloujadoff, G.W. Neal, Starting performance of saturable three-phase induction motors, IEEE Trans. Energy Convers. EC-3 (3) (1988) 624-635.
- [87] E.F. Fuchs, J. Schraud, F.S. Fuchs, Analysis of critical-speed increase of induction machines via winding reconfiguration with solid-state switches, IEEE Trans. Energy Convers. 23 (3) (2008) 774-780.
- [88] J. Schraud, E.F. Fuchs, H.A. Fuchs, Experimental verification of critical-speed increase of induction machines via winding reconfiguration with solid-state switches, IEEE Trans. Energy Convers. 23 (2) (2008) 460-465.
- [89] G.P. Dubey, Power Semiconductor Controlled Drives, Prentice Hall, 1989.
- [90] H. Huang, W.M. Anderson, E.F. Fuchs, High-power density and high-efficiency motors for electric vehicle applications, in: Proceedings of the International Conference on Electrical Machines, Cambridge, MA, August 12-15, 1990.
- [91] A.A. Fardoun, E.F. Fuchs, H. Huang, Modeling and simulation of an electronically commutated permanent-magnet machine drive system using SPICE, IEEE Trans. Ind. Appl. 30 (4) (1994) 927-937.
- [92] <http://www.telegraph.co.uk/earth/earthnews/8386273/Shadow-flicker-rotating-blades-can-cause-headaches.html>.
- [93] <http://www.miseagrant.umich.edu/downloads/research/projects/10-733-Wind-Brief2-Flicker-Noise-Air-Quality2.pdf>.
- [94] <http://ec.europa.eu/health/opinions/en/energy-saving-lamps/1-3/4-cfl-non-skin-diseases.htm>.
- [95] <http://www.wasistwas.de/technik/die-themen/spezial-energie/artikel/link//180d901456/article/growian-sorgt-fuer-wirbel.html>.
- [96] E.F. Fuchs, P.W. Carlin, An electronically commutated permanent-magnet generator with flux weakening voltage control, in: Proceedings of the 11th ASMEETCE Wind Energy Symposium, Houston, Texas, January 26-30, 1992.
- [97] A.A. Fardoun, E.F. Fuchs, H. Huang, Modeling and simulation of an electronically commutated permanent-magnet machine drive system using SPICE, in: Conference Record of the 1992 IEEE Industry Applications Society Annual Meeting, October 4-9, Houston, Texas, 1992.
- [98] E.F. Fuchs, A.A. Fardoun, P.W. Carlin, R.W. Erickson, Permanent-magnet machines for operation with large speed variations, in: Proceedings of Windpower 1992, Seattle, WA, October 19-23, 1992.
- [99] Fardoun, A.A.; Fuchs, E.F.; and Carlin, P.W.; "Variable-speed generators with flux weakening," Proceedings of Technology 2002, Baltimore, MD, December 1-3, 1992.
- [100] A.A. Fardoun, E.F. Fuchs, P.W. Carlin, A variable-speed, direct-drive power train for a wind power plant, in: Proceedings of Windpower 1993, San Francisco, CA, July 12-16, 1993.

- [101] E.F. Fuchs, Architecture of a variable-speed, direct-drive wind power plant, in: Proceedings of 26th Annual Frontiers of Power Conference, Oklahoma State University, Stillwater, Oklahoma, 1993. October 25–26.
- [102] L.J. Fingersh, The testing of a low-speed, permanent-magnet generator for wind power applications, M.S. Thesis, University of Colorado, Boulder, 1995.
- [103] D. Yildirim, Commissioning of a 30kVA, variable-speed, direct-drive wind power plant, Ph.D. Thesis, University of Colorado, Boulder, 1999.
- [104] <http://www.cleanenergystates.org/assets/2011-Files/States-Advancing-Wind-2/CESA-Visual-Impacts-Methodology-May2011.pdf>.
- [105] <http://www.windvigilance.com/about-adverse-health-effects/visual-health-effects-and-wind-turbines>.
- [106] <https://www.wind-watch.org/documents/wind-turbine-noise-international-congress-on-acoustics/>.
- [107] http://www.eia.gov/electricity/monthly/epm_table_grapher.cfm?t=epmt_1_1_a.
- [108] US Energy Information Administration, Electric Power Monthly, 2013.
- [109] Xinhua, Jiuquan Wind Power Base Completes First Stage, Xinhua News Agency, 2013. November 4, 2010. Retrieved from ChinaDaily.com.cn website January 3.
- [110] GWEC, Global Wind Report Annual Market Update.
- [111] Annual production by commissioned sites. Retrieved 17 August 2013.
- [112] http://www.awea.org/learnabout/publications/reports/upload/AWEA-Fourth-Quarter-Wind-Energy-Industry-Market-Report_Executive-Summary.pdf.
- [113] K. Eber, E. Tucker, Colorado boosts its RPS to 30% by 2020, RenewableEnergyWorld, 2020. Retrieved 2010-12-28.
- [114] <http://bergey.com/documents/2012/06/excel-10-owners-manual-2.pdf>.
- [115] http://www.wind-power-program.com/turbine_characteristics.htm.
- [116] <http://www.renewableenergyworld.com/rea/news/article/2012/07/should-the-wind-turbine-industry-head-for-the-hills>.
- [117] <https://www.selinc.com/synchrophasors/>.
- [118] http://users.ece.utexas.edu/~grady/Texas_Synchrophasor_Network.html.
- [119] http://www.samsi.info/sites/default/files/Chakraborty_October2011.pdf.
- [120] E. Allen, D.N. Kosterev, P. Pourbeik, Validation of power system models, in: IEEE Power and Energy Society General Meeting, Minneapolis, MN, 2010, <https://doi.org/10.1109/PES.2010.5589874>.
- [121] S.A. Soliman, H.K. Temraz, S.M. El-Khodary, Power system voltage stability margin identification using local measurements, in: Power Engineering Conference Proceedings. Energy for the Future (Cat. No.03EX691), 2003, <https://doi.org/10.1109/LESCPE.2003.1204669>.
- [122] A. Arthit Sode-Yome, N. Mithulananthan, K.Y. Lee, A maximum loading margin method for static voltage stability in power systems, IEEE Trans. Power Syst. 21 (2) (May 2006).
- [123] P. Mahat, Z. Chen, B. Bak-Jensen, Review of islanding detection methods for distributed generation, in: Third International Conference on Electric Utility Deregulation and Restructuring and Power Technologies, 2008, <https://doi.org/10.1109/DRPT.2008.4523877>. 6-9 April, Page(s):2743 - 2748E-ISBN :978-7-900714-13-8, Print ISBN: 978-7-900714-13-8, INSPEC Accession Number: 9979751; Nanjing.
- [124] <https://www.selinc.com/SEL-2407/>.
- [125] Y. Liu, L. Lamine Mili, J. De La Ree, R.F. Nuqui, State estimation and voltage security monitoring using synchronized phasor measurement, Virginia Polytechnic Institute and State University, 2012. 2001-07-12 (doi: 10.1.1.2.7959) <https://citeseerx.ist.psu.edu/viewdoc/summary?>.
- [126] <https://www.selinc.com/engineeringservices/?v=2>.
- [127] <http://phys.org/news/2014-01-cape-siemens-turbines-offshore-farm.html#nRlv>.
- [128] http://dspace.uta.edu/bitstream/handle/10106/5627/carrigan_uta_2502m_10851.pdf?sequence=1.
- [129] A.H.M.A. Rahim, Modeling and control of a PMSG wind system with STATCOM capacitor energy storage device, in: Proceedings of the IASTED International Conference Modelling and Simulation (MS 2012), July 3-5, Banff, Canada, 2012.
- [130] A. Grauers, Efficiency of three wind energy generator systems, IEEE Trans. Energy Convers. 11 (3) (1996) 650–657, <https://doi.org/10.1109/60.537038>.
- [131] S. Heier, Grid Integration of Wind Energy Conversion Systems, John Wiley & Sons, Ltd., 2007.
- [132] Rahim, A.H.M.A.; and Al-Baiyat, S.A.; "An adaptive neural network based energy storage control for operation enhancement of a multi-generator AC and wind power system," Aust. J. Basic Appl. Sci., vol. 6, no.2, pp.211-222, April 2013.

- [133] A.H.M.A. Rahim, M. Haris Khan, An adaptive optimum SMES controller for a PMSG wind generation system, in: IEEE PES General Meeting 2013, Article GM0227, Vancouver, July 2013.
- [134] R. Rossi, Application of doubly fed induction generator wind systems to weak networks, Doctoral Thesis, Curtin University, Perth, Australia, 2014.
- [135] E.W. Kimbark, Power System Stability, vol. 1, IEEE Press, 1995. Chapters 1-6.
- [136] N.W. Miller, J.J. Sanchez Gasca, W.W. Price, R.W. Delmerico, Dynamic modeling of GE 1.5 and 3.6 MW wind turbine-generators for stability simulations, in: 2003 IEEE Power Engineering Society General Meeting (IEEE Cat. No.03CH37491), vol. 3, 2003, pp. 1977–1983.
- [137] <http://www.wind-power-program.com/betz.html>.
- [138] Q. Wang, L. Chang, An intelligent maximum power extraction algorithm for inverter-based variable speed wind turbine systems, IEEE Trans. Power Electron. 19 (5) (Sept. 2004) 1242–1249, <https://doi.org/10.1109/TPEL.2004.833459>.
- [139] X. Yao, C. Guo, Z. Xing, Y. Li, S. Liu, Variable speed wind turbine maximum power extraction based on fuzzy logic control, in: International Conference on Intelligent Human-Machine Systems and Cybernetics, IHMSC '09, Vol. 2, 2009, pp. 202–205, <https://doi.org/10.1109/IHMSC.2009.174>. 26–27 Aug.
- [140] <http://www.windturbinestar.com/hawt-vs-vawt.html> "Horizontal axis wind turbine vs vertical axis wind turbine.
- [141] F. Balduzzi, A. Bianchini, E.A. Carnevale, L. Ferrari, S. Magnani, Feasibility analysis of a Darrieus vertical-axis wind turbine installation in the rooftop of a building, Appl. Energy 97 (2012) 921–929.
- [142] S. Eriksson, H. Bernhoff, M. Leijon, Evaluation of different turbine concepts for wind power, Renew. Sustain. Energy Rev. 12 (2008) 1419–1434.
- [143] http://www.electricitystorage.org/technology/about_energy_storage/energy_storage_physics.
- [144] E.F. Fuchs, W.L. Fuchs, Complementary control of intermittently operating renewable sources with short-and long-term storage plants, in: Energy Storage, InTech Open Access Publisher, Sept. 2011. ISBN: 978-953-307-228-9.
- [145] <http://web.mit.edu/kirtley/binlustuff/literature/converter/Back-Backconverter-DFIM.pdf>.
- [146] J. Cowdrey, "Boulder's municipal hydroelectric system", Report, July 7, 2004.
- [147] V.J. Zipparro, H. Hasen, Davis' Handbook of Applied Hydraulics, fourth ed., McGraw-Hill, Inc, 1993. ISBN 0-70-073002-4.
- [148] American Society of Mechanical Engineers, The Guide to Hydropower Mechanical Design, HIC Publications, 1996. ISBN 0-9651765-0-9.
- [149] <http://www.beaconpower.com/products/about-flywheels.asp>.
- [150] http://www.electricitystorage.org/technology/tech_archive/rfb_batteries.
- [151] <http://www.technologyreview.com/news/420341/faster-catalysts-improve-hydrogen-generation/>.
- [152] R.R. O'Hayre, S.-W. Cha, W. Colella, F.B. Prinz, Fuel Cell Fundamentals, John Wiley & Sons, Inc., 2006.
- [153] L. Edwards, Solar Power Generation Around the Clock, phys.org/news176632405.html, Nov. 5, 2009.
- [154] T. Mancini, Advantages of Using Molten Salt, Sandia National Laboratories, Archived from the original on 2011-07-14. Retrieved 2011-07-14.
- [155] B.G. Jones, R.P. Roy, R.W. Bohl, Molten Salt Energy Storage System—A Feasibility Study, Smithsonian/NASA ADS Physics Abstract Service, 1977. Abstract accessed December 2007.
- [156] D. Biello, How to Use Solar Energy at Night, Scientific American, a Division of Nature America, Inc., 2011. Retrieved 19 June.
- [157] <http://phys.org/news176632405.html#jCp>.
- [158] Fuchs, E.F.; and Fuchs, H.A.; "Distributed generation and frequency/load control of power systems," Proceedings of the 40th Annual Frontiers of Power Conference, Oklahoma State University, Stillwater, Oklahoma, October 29–30, 2007, pp. II-1 to II-9.
- [159] J.F. Fuller, E.F. Fuchs, D.J. Roesler, Influence of harmonics on power system distribution protection, IEEE Trans. Power Delivery TPWRD-3 (2) (1988) 546–554.
- [160] E.F. Fuchs, M.A.S. Masoum, Torques in induction machines due to low-frequency voltage/current harmonics, Int. J. Power Energy Syst. 28 (2) (2008) 212–221.
- [161] E.F. Fuchs, D.J. Roesler, M.A.S. Masoum, Are harmonic recommendations according to IEEE and IEC too restrictive? IEEE Trans. Power Delivery 19 (4) (2004) 1775–1786.
- [162] E.F. Fuchs, H.A. Fuchs, Power quality of electric machines and power systems, in: Proceedings of the 8th IASTED International Conference on Power and Energy Systems (EuroPES 2008), June 16–18, Corfu, Greece, paper # 608-035, 9 pages, 2008.

- [163] W.L. Fuchs, E.F. Fuchs, Frequency variations of power system due to switching of renewable energy sources, in: International Conference on Renewable Energies and Power Quality (ICREPQ'12), Santiago de Compostela, Spain, 2012. March 28-30, 6 pages.
- [164] Bundesamt für Strahlenschutz Web site. http://www.bfs.de/en/kerntechnik/ereignisse/standorte/karte_kw.html.
- [165] The Huffington Post Home Page. <http://www.huffingtonpost.com/p/huffington-post.html>.
- [166] M. Steininger, Germany, Green Energy Rises, The Christian Science Monitor, 2011, p. 12. Sept. 12.
- [167] n-tv Nachrichtenfernsehen GmbH Home Page, Köln, Germany. <http://www.n-tv.de>.
- [168] The American Independent News Network Home Page. <http://coloradoindependent.com>.
- [169] Bundesnetzagentur für Elektrizität Web site. http://www.bundesnetzagentur.de/SharedDocs/Downloads/DE/BNetz/Presse/Berichte/2012/20110314BerichtnetzzustandNetzausbaupdf?_blob=publicationFile.
- [170] D. Levitan, Germany plans 3800-kilometer, \$25 billion transmission network for wind power, in: IEEE Spectrum, Energywise, 2012. May 30, 1 page.
- [171] I. de Pommereau, Germany's Trouble With Abandoning Nuclear Power, The Christian Science Monitor, 2011.
- [172] N.G. Hingorani, L. GyuGyi, Understanding FACTS- Concepts and Technology of Flexible Transmission Systems, IEEE Press, 2000.
- [173] T. Wildi, Electrical Machines, Drives, and Power Systems, fifth ed., Prentice Hall, 2002.
- [174] R. Park, Method of effecting fast turbine valving for improvement of power system stability, United States patent US 3848138 A, Nov. 12, 1974.
- [175] [http://www05.abb.com/global/scot/scot245.nsf/veritydisplay/be2633adacde87ab48257a39003c9f88/\\$file/1207_reference%20case_southwestlink_2gm5078%20gb%20hr.pdf](http://www05.abb.com/global/scot/scot245.nsf/veritydisplay/be2633adacde87ab48257a39003c9f88/$file/1207_reference%20case_southwestlink_2gm5078%20gb%20hr.pdf).
- [176] <http://web.archive.org/web/20050426045806/http://www.transmission.bpa.gov/cigresc14/Compendium/PACIFIC.htm>.
- [177] <http://www.n-tv.de/wirtschaft/Anleger-feiern-SGL-Carbon-article12290021.html>.
- [178] <http://www.n-tv.de/auto/Gigantische-Batteriefabrik-fuer-Tesla-article12359406.html>.
- [179] L. Ulrich, Top 10 techcars, in: IEEE Spectrum, April 2014, pp. 28-37.
- [180] <http://www.n-tv.de/wissen/Sind-Stromtrassen-gesundheitsschaedlich-article12359306.html>.
- [181] E.F. Fuchs, European perspectives on conservation and renewable energy, in: Keynote Address, Australasian Universities Power Engineering Conference (AUPEC), Sept. 28-Oct.1, 2014.
- [182] E.F. Fuchs, M.A.S. Masoum, Power quality solutions for renewable energy systems, in: Tutorial, Australasian Universities Power Engineering Conference (AUPEC), Sept. 28-Oct.1, 2014.
- [183] S. Sasaki, It's always sunny in space, in: IEEE Spectrum, May 2014, pp. 38-43.
- [184] Stirling/EPRI. <http://www.engr.colostate.edu/~marchese/mech337-10/epri.pdf>.
- [185] <http://www.afk-geothermie.de/cms/index.php?idcat=2&sid=881bbfda94cde9cb3e344cd0203c8c25>.
- [186] <http://www.awm-muenchen.de/gewerbe/anlieferung-beim-awm.html>.
- [187] <http://www.n-tv.de/auto/Aus-Wind-Wasser-und-CO2-wird-Oeko-Sprit-article13979336.html>.
- [188] <http://www.osti.gov/scitech/biblio/1129575>.
- [189] <http://www.projekt-irene.de/>.
- [190] <http://www.wildpoldsried.de/index.shtml?irene>.
- [191] <http://www.biocycle.net/2011/08/16/german-village-achieves-energy-independence-and-then-some/>.
- [192] <http://www.wildpoldsried.de/index.shtml?Energie>.
- [193] R.R. Dixon, Thermal aging predictions from an Arrhenius plot with only one data point, IEEE Trans. Electr. Insul. E1-15 (4) (1980) 331.
- [194] <http://nobelprize.org/chemistry/laureates/1903/arrhenius-bio.html>.
- [195] A. Fritz, November, Autumn and Year-to-date Were all Hottest on Record for Earth, NOAA says. <https://www.washingtonpost.com/news/capital-weather-gang/wp/2015/12/17/november-autumn-and-year-to-date-were-all-hottest-on-record-for-earth-noaa-says>. (Accessed 11 May 2020).
- [196] S. Höhentinger, Photovoltaikanlagen richtig warten, in: Eigenheimer aktuell, Zeitschrift für Haus, Wohneigentum und Garten (May 2017), 23, 2017.
- [197] D.A. von Boyen, G.H.; Private Communication, April 13, 2021.
- [198] <https://www.sciencedirect.com/science/article/abs/pii/S0038092X18308934>.
- [199] E.F. Fuchs, Automatic paralleling of power systems, in: Proceedings of the Third Pan American Congress of Mechanical, Electrical, and Allied Engineering Branches, San Juan, Puerto Rico, September 6-13, 1969. Paper # 30.

- [200] E.F. Fuchs, Automatic paralleling device for power systems, Proceedings of the Midwest Power Symposium, Minneapolis, Minnesota, October 21-22, 1969, Paper # 2.
- [201] H. Wierer, Selbsttätige schlupfunabhängige Parallelschalteneinrichtung, Siemens Zeitschrift, Jahrgang 12, Heft 11, p. 381.
- [202] H. Wierer, Selbsttätiges, schnelles Parallelschalten auch bei ungünstigen Schaltvoraussetzungen, Siemens Zeitschrift, Jahrgang 16, Heft 11, p. 430.
- [203] H. Neugebauer, Das Siemens Parallelschaltgerät, Siemens Zeitschrift, Jahrgang 28, Heft 3/4, p. 155.
- [204] K.E. Martin, D. Hamai, M.G. Adamiak, S. Anderson, M. Begovic, G. Benmouyal, G. Brunello, J. Burger, J.Y. Cai, B. Dickerson, V. Gharpure, B. Kennedy, D. Karlsson, A.G. Phadke, J. Salj, V. Skendzic, J. Sperr, Y. Song, C. Huntley, B. Kasztenny, E. Price, Exploring the IEEE Standard C37.118-2005 Synchrophasors for Power Systems, IEEE Trans. Power Delivery 23 (4) (2008).
- [205] IEEE Standard for a Precision Clock Synchronization Protocol for Networked Measurement and Control Systems, IEEE Standard 1588-2008, July 2008.
- [206] https://cms-cdn.selinc.com/assets/Literature/Publications/Technical%20Papers/6413_ImplementationApplication_DC_20100106_Web.pdf?v=20160303-161415.
- [207] M.W. Grady, A. Mattei, Private Communication, February 15, 2021. <https://mediaspace.baylor.edu/channel/SMART%2BGRID/177789712>.
- [208] J.F. Fuller, E.F. Fuchs, D.J. Roesler, Influence of harmonics on power system distribution protection, in: IEEE Trans. on Power Delivery, vol. TPWRD-3, No. 2, April 1988, pp. 546–554 (PES/IEEE Prize Paper Award 1989).
- [209] https://spectrum.ieee.org/energywise/energy/the-smarter-grid/what-texas-freeze-fiasco-tells-us-about-future-of-the-grid?utm_source=techalert&utm_medium=email&utm_campaign=techalert,03-12.20&utm_content=httpsspectrumieeorgenergywiseenergythesmartergridwhattexasfreezefiascotellusaboutfutureofthegrid&mkt_tok=eyJpIjoiTVdaalkyUTBNemRtTXpKbCIsInQiOiI0NjRFeFphR2lnTnVnZzErK0FuR2NGY29pbXozRjFpeDBtZ3pTcElCVmo1RGhTSFY4QW9OOURLUTFEUIBGblhCck1hQ21VcVpqTzlfTXU0c3FLUjJseitlTjh5alk2S0lBeVwvWUFGa0dUTIA4dG9RU0w5c3ZsN1NGV0doWWxjY3kifQ%3D%3D.
- [210] D.C. White, H.H. Woodson, Electromechanical Energy Conversion, John Wiley&Sons, Inc., New York, 1959.

Glossary of symbols, abbreviations, and acronyms

A

<i>a</i>	armature, année (year), annum
A	appliances, forcing term, unit of ampere, cross section of magnet, ampere, effective cross section, area swept by rotor, heat radiation capacity, surface, vector potential, anode
A_c	cross-section of iron core
A_g	cross-section of air gap of an iron core
A, B, C	phase sequence of line A, line B, and line C
ab	(voltage) from a to b
AB	(voltage) from line A to line B
a, b, c	phase sequence lines a, b, c
AC	alternating current
A/D	analog/digital, A/D converter
amb	ambient
AM	amplitude modulation
ASAI	average service availability index
ASUI	average service unavailability index
ACSR	aluminum-cable steel reinforced
AF	active filter
a_n	coefficient of Fourier term $a_n \cos n\omega_0 t$
an	phase a (a) to neutral (n)
ANSI	American National Standards Institute
anrms	phase a (a) to neutral (n) root-mean-square (rms) value
APLC	active-power line conditioner
AI	artificial intelligence
AENS	average energy not supplied
APF	active power filter
ANN	artificial neural network
ASIC	application specific circuit
AWG	American wire gauge
AND	logical operator
AFK	Aschheim/Feldkirchen/Kirchheim
alpha	firing angle α of thyristor bridge
α	damping factor/coefficient, firing angle of thyristor, thermal conductivity
*	indicates complex conjugate
$\angle -90^\circ = e^{-j90^\circ}$	angular displacement/shift of time function
$\angle \theta_v$	indicates phase shift voltage $v(t)$ by either θ_v degrees ($^\circ$) or θ_v radians (rad)

B

B	boron, base, flux density, susceptance, viscous or fluid friction coefficient
$B(t)$	magnetic flux density as a function of time
$\vec{B}$	magnetic flux density vector
BTU	British thermal unit
$\vec{B}$	magnitude of magnetic flux density vector
BS	British Standards
BPL	broadband power lines
BTS	Bell Telephone Systems
bat	battery
BIPM	Bureau International des Poids et Mesure
B-H	B-H characteristic
BJT	bipolar-junction transistor
BMW	Bayerische Motorenwerke
$B_{\max}$	maximum flux density
cf.	cubic feet
β	angle, blade pitch angle

C

C	combined, cooling, collector, capacitance, conductance, contour length of integration path, unit of Celsius, fuel composition, cathode, integration path, heat-absorption capacity
c	subscript for capacitance, constant for windage mechanical torque
CEA	Canadian Electric Association
CT	current transformer
CAT	computer-aided testing
CATEA	computer-aided testing program
C_f	filter capacitance
CENELEC	Commission Européenne de Normalization Électrique
CBA	phase sequence C, B, A
CCITT	telephone and telegraph system
CBEMA	Computer Business Equipment Manufacturers Association
CSI	current-source inverter
COC	customer outage cost
CCDF	composite customer damage function
CPUC	California Public Utilities Commission
CFW	compensation of flux weakening
CHCP	combined heat, cooling and (electric) power
CHP	combined (thermal) heat and (electric) power
CMRR	common-mode rejection ratio
cn	phase c (c) to neutral (n)
CMOS	complementary metal-oxide semiconductor
CATEA	computer-aided testing of electrical apparatus
CAES	compressed-air energy storage
$\cos\theta$	cosine of fundamental power factor angle θ between transformer load voltage and load
$\cos\Phi$	cosine of fundamental power factor angle Φ between transformer load voltage and load

CAIDI	customer average interruption duration index
CB	circuit breaker, candidate buses
COG	center of gravity
CO ₂	carbon dioxide
C _{H2O}	water capacity
CO	carbon monoxide
CHP	heating and electric power
$\cos(\Phi_{V_p} - \Phi_{I_p})$ $=\cos\Phi_{V_p-I_p}$	power factor due to angles of $\tilde{V}_p$ and $\tilde{I}_p$
COP _H	coefficient of performance
cum	cumulative
CW	continuous wave
CWN	community wireless network
D	
<i>d</i>	diode, developed, direct, differentiation
<i>d(t)</i>	distorted waveform
<i>D</i>	distortion power, damping factor
DC/AC	inverter action
DF	dissipation factor
DFT	discrete Fourier transform
DP	dynamic programming
dot (•)	dot convention/markings
DC	direct current
DIN	distortion index
DSPICE	Daisy's version of SPICE
Dunkelflaute	a time when solar/wind power generation is very low
DG	distributed generation
DPF	displacement (fundamental) power factor
DHPF	decoupled harmonic power flow
dB	decibel
DHS	Department of Health Services
DSM	demand-side management
DVR	dynamic voltage restorer/regulator
<i>D(f)</i>	frequency domain
DSTATCOM	distribution STATCOM
DFIG	doubly fed induction generator
$\vec{dl}$	incremental (differential) length vector
$\vec{dS}$	incremental (differential) surface vector
<i>dt</i>	time increment/differential
DOE	US Department of Energy
\$	dollar symbol
Δ	three-phase winding connected in delta/Δ/triangle, delta/deviation/ incremental change, fixed semi-bandwidth of hysteresis control
Δ <i>T</i>	torque difference
Δ-Δ or Δ/Δ	primary and secondary windings of three-phase transformer are connected in delta
Δ-Y or Δ/Y	primary winding of three-phase transformer is connected in delta and secondary winding in wye

∂	symbol for partial derivative
d	symbol for ordinary derivative
δ	air density factor
E	
e	electric
eV	electron volt
e_a	induced voltage of DC machine
e_A	induced voltage of phase A
e_B	induced voltage of phase B
e_C	induced voltage of phase C
$e(t)$	induced voltage as a function of time
EPRI	Electric Power Research Institute
ER	end region
ES	expert system
EEG	Erneuerbare Energien Gesetz
ENEV	Energieeinsparverordnung
E	energy, emitter
E-Mobility	electro-mobility
$\tilde{E}$	induced voltage
$ \tilde{E} = E$	magnitude of induced voltage
E	activation energy, energy
ECEN	electrical, computer engineering
ECEEN	electrical, computer, energy engineering
ECPMM	electronically commutated permanent-magnet machine
EMC	electromagnetic compatibility
EN	European norm
EN	European Standards
eff	effective
EI	Edison Electric Institute
ERCOT	Electric Reliability Council of Texas
EG_i	energy (E) fed to utility grid (G)
EG	energy supplied to grid
ELAR	photovoltaic energy supplied to lights and appliances of residence
EHC_i	energy (E) for heating (H) and cooling (C)
EI_i	energy (E) by PV system feeding two inverters
ELA_i	energy (E) for lighting (L) and appliances (A)
EMF	electromagnetic force or induced voltage
EMTP	electromagnetic transients program
ESL	equivalent series inductance
ENS	energy not supplied
ESR	equivalent series resistance
EPR	equivalent parallel resistance
EHV	extra-high voltage
ETN	European type number for batteries
ESP	earth-surface potential
EU	European Union
Eq	equation

eq	equivalent
EnBW	Energie Baden Württemberg
€	Euro symbol
ϵ	permittivity of dielectric, steady-state error/deviation
η	efficiency
ϵ_o	permittivity of free space
ϵ_r	relative permittivity
F	
$f_{\perp}$	field, frequency
$\vec{F}$	magnetomotive force vector
F	magnetomotive force, algebraic function
FF	form factor, fitness function
FFT	fast Fourier transform
FM	figure of merit, frequency modulated
$F_{r,j}$	real line power
$F_{i,j}$	reactive line power
FCC	Federal Communications Commission
FC	fixed capacitor
FR	fixed reactor
$f(\gamma)$	income level
F	Farad, unit of capacitance, energy functional for finite element method, feedback
$\mathcal{F}$	magnetomotive force
FACTS	flexible alternating current transmission system
FIS	fast interrupting switch
Fe	ferrum (Latin for iron)
f_h	harmonic frequency
FET	field-effect transistor
FD	finite difference
FE	finite element
FC	fuel cell
FL	fuzzy logic
FM	figure of merit
FW	flux weakening
FCL	fault-current limiter
FST	fuzzy set theory
FES	fuzzy expert system
$f(t)$	periodic function of time t
ft	foot, feet
ϕ	phase angle, power factor angle
φ	phase angle, power factor angle
Φ	magnetic field flux, useful flux, iron-core flux
$\vec{\phi}$	core-flux vector, azimuthal unit vector of a cylindrical coordinate system
ϕ_s	phase angle of source voltage $\tilde{V}_s(\omega)$
ϕ_{pt}	primary leakage flux
ϕ_{st}	secondary leakage flux
$\Phi(t)$	magnetic flux as a function of time

G

g	ground, air gap length
G	grid, gate, conductance $G = 1/R$, giga, closed-loop gain, gauss
G_c	core-loss conductance
G_D	differential (D) mode gain
G_{eddy}	eddy current conductance
$G_{\text{hys}}^{(h)}$	hysteresis conductance for harmonic h
G_p	parallel conductance
GCSC	GTO controlled series capacitor
G_1	gain block
GA	genetic algorithm
GHz	giga Hertz
gen	generator
GIC	geomagnetically induced current
giga	10^9
GmbH	Gesellschaft mit beschränkter Haftung (German for limited liability company)
GTO	gate-turn-off thyristor
GW	gigawatt
GA-FL	genetic algorithm-fuzzy logic
GPS	global positioning system

H

h	unit of hour, harmonic order
H	heating, magnetic field intensity/strength, henry unit symbol for inductance, head of water, hydrogen
$H = \sqrt{\bar{P}^2 + \bar{Q}^2}$	apparent power including harmonics where $\bar{P}$ and $\bar{Q}$ are the rms values of $\bar{p}$ and $\bar{q}$, respectively, which include harmonic components
HV	high voltage
HVDC	high-voltage direct current
HV	high voltage
HH	hollow copper conductor
hf	harmonic frequency
$H_f(s)$	filter impedance transfer function
hp	horsepower: $1 \text{ hp} = 745.7 \text{ W} \approx 746 \text{ W}$, or $1.3392 \text{ hp} = 1000 \text{ W}$
$\vec{H}$	magnetic field intensity (strength) vector
$ \vec{H} $	magnitude of magnetic field intensity vector
HPF	harmonic power flow
HDTV	high-definition television
HF	hybrid filter
HE	human expertise
HVDC	high-voltage DC line
HV/MV	high voltage/medium voltage
HF_h	harmonic factor
HMI	human-machine interface
HTE	high-temperature electrolysis
H_2O	chemical symbol for water
Hz	Hertz, cycles per 1 s
H_2SO_4	sulfuric acid

I	
$\vec{I}$	current vector
IC	integrated circuit
IEEE	Institute of Electrical and Electronics Engineers
IEC	International Electrotechnical Commission
I_{sc}	short-circuit current
IHD	individual harmonic distortion
ITIC	Information Technology Industry Council
IT	information technology
$\tilde{I}_h$	harmonic current
I_{DC}	DC current
IGBT	insulated gate bipolar transistor
EEl	Electrical and electronic engineering industries
IM	imaginary, induction machine
iron	iron (core loss)
ITP	interdisciplinary telecommunications program
IOPR	independently operating power region
ITIC	Information Technology Industry Council
I_{APF}	compensation signal current
IPFC	interline power flow controller
IRENE	Integration of Renewable Energy and Electromobility
I	inverter
in	input
$\tilde{I}_{rms}^*$	complex conjugate of $\tilde{I}_{rms}$
J	
j	complex number operator indicating imaginary part of phasor, unit vector of (i, j, k) rectangular system
$j\omega L$	reactive impedance of inductance L
$j\omega L_1$	reactive impedance of self-inductance L_1
$j\omega L_2$	reactive impedance of self-inductance L_2
$j\omega M$	reactive impedance of mutual inductance M
JAZ	Jahresarbeitszahl (German for seasonal performance factor of heat pump)
$\vec{J}$	Jacobian matrix
J	unit of energy joules, entry of Jacobian matrix, axial moment of inertia
$\vec{J}$	current density
K	
k	unit vector of i, j, k rectangular system, coupling coefficient of two windings/coils, kilo, Boltzmann constant
kstb	breadth or distribution factor
ksp	pitch factor
kW	kilowatt
kVAr	kilovolt-ampere-reactive
K	gas constant or Boltzmann constant. Kelvin (unit of temperature)
krad/s	kilo radians per second
$(k_e\Phi)$	field flux of DC machine
KCL	Kirchhoff's current law
KVL	Kirchhoff's voltage law

kVA	kilovolt-ampere
kg	kilogram is unit of mass
kg-force	kilogram-force is unit of weight
kPa	kilopascal
L	
ℓ	leakage
LED	light emitting diode
LOH	lowest order harmonic
L	lighting, lower, line, symbol for inductance, life of a capacitor, length of machine
L-L	line-to-line
L-N	line-to-neutral
$\vec{L}$	leakage inductance matrix
$\vec{L}_d$	nonlinear incremental (core) inductance vector
L_f	filter inductance
LV	low voltage, local variations
L_w	waveshaping inductance
LP	load point
LAN	local-area network
LPF	low-pass filter
L_a	armature inductance of DC machine
L_s	self-inductance
L_m	mutual inductance
LV	low voltage
lagging	lagging power factor (e.g., current lags voltage)
leading	leading power factor (e.g., current leads voltage)
lb	librum (Latin for pound)
L-L	line-to-line
L_m	mutual/magnetizing inductance of T-equivalent circuit
L_{lp}	leakage inductance of primary winding
L'_{ts}	leakage inductance of secondary winding referred to primary side of transformer
LNG	liquid natural gas
LPG	liquid petroleum gas, propane
λ	flux linkages, harmonic displacement factor, average failure (fault) rate, tip-speed ratio
$\lambda(t)$	flux linkages as a function of time t
M	
m	milli (10^{-3}), mechanical, magnet, meter, magnetizing, motor, slope of a linear function, modulation index
M	mutual inductance if $L_{12} = L_{21} = M$, stands for main power system, mega, number of candidate buses
MATLAB	software of the US American company MathWorks for the solution of mathematic problems
MOM	mean of maximum
max	maximum
micro	10^{-6}
m^2	square meter
ms	milliseconds

mH	millihenries
mV	millivolts
mA	Milliampere
MWh	mega-watt-hour
MHPF	modular harmonic power flow
MKSA	meter-kilogram-second-ampere system of units
MKSAK	meter-kilogram-second-ampere-kelvin system of units
MMF = mmf	magnetomotive force
MOS	metal-oxide semiconductor
MOSFET	metal-oxide-semiconductor-field-effect transistor
MPP	maximum power point
MW	megawatt
MV	medium voltage
MVA	megavolt-ampere
MVA_r	reactive megavolt-ampere
MAN	metropolitan-area network
MC	number of candidate (compensation) buses
MSS	maximum sensitivities selection
MPPT	maximum power tracking
μ	permeability of (magnetic) material, 10^{-6}
$\mu_0 = 4\pi 10^{-7}$ H/m	permeability of free space
μ_r	relative permeability of (magnetic) material
N	
<i>n</i>	neutral, .exponent
<i>N</i>	number of turns, number of substrings (genes) of binary numbers
$\vec{n}$	unit vector in normal direction
ND	numerical differentiation
NEC	national electrical code
NL	nonlinear
NCSL	National Conference of Standards Laboratories
NCSLI	National Conference of Standards Laboratories International
NIST	National Institute of Standards and Technology
NOT	logical operator
<i>N_{rated}</i>	rated number if turns
nano	10^{-9}
$N_1 = N_{p1}$	number of turns of primary winding (#1) of transformer
$N_2 = N_{p2}$	number of turns of secondary winding (#2) of (potential p) transformer
N_p	primary number of turns of transformer
N_s	secondary number of turns of transformer
NO	normally open, nitric oxide
NO₂	nitrogen dioxide
NOSW	normally open switch
NO_x	nitrogen oxides
NREL	National Renewable Energy Laboratory
NEMP	nuclear electromagnetic pulse
NEMA	National Electric Manufacturers Association
NdFeB	neodymium-iron-boron permanent magnet material
NH₃	ammonia
N_q	specific speed of water turbine

O

oc	open circuit
OR	logical operator
ohmic	ohmic (loss)
op	open circuit
ODE	ordinary differential equation
OSL	other stray losses
oper	operation
O₃	Ozone
O, O₂	oxygen
out	output
ω	angular frequency or angular velocity
ω_o	angular frequency or angular velocity at resonance, undamped natural angular frequency, center frequency
ω_m	mechanical angular velocity
Ω	unit for ohms
$\omega_m(t)$	time-dependent mechanical angular velocity

P

p	number of poles, peak, parallel, primary
$\bar{p}$	surface stress
pu	per unit
P	performance, proportional control, average or real power
PC	personal computer
PSS	power system stabilizer
PF	passive filter
$p_{\text{three-phase}}$	instantaneous three-phase power
PD	proportional-differential
PI	proportional-integral
PSpice	Personal Simulation Program with Integrated Circuit Emphasis
P_1	input real power, fundamental active power
P_{loss}	loss power
P_{series}	loss power of series loop
P_{shunt}	loss power of shunt branch
P_{EC}	eddy current loss
P_{LL}	load loss
$P_{\text{LL-R}}$	rated load loss
$P_{\text{EC-R}}$	rated eddy current loss
PT	potential transformer
PS	primary substation
ppb	parts per billion
PLC	programmable logic controller
PM	phase modulation
PCM	pulse code modulation
PPT	peak-power tracker
P&O	perturbation and observation
PI	proportional-integral
PLL	phase-lock loop
PLR	power-loss reduction

Pa	pascal (unit of temperature)
P₂	output real power
PF	power factor
<i>p(t)</i>	instantaneous power
<i>P_{rat}</i>	rated real output power
<i>p_{in}(t)</i>	input power as a function of time
<i>p_{out}(t)</i>	output power as a function of time
<i>P_{in}</i>	input real power
<i>P_{out}</i>	output real power
<i>p_h</i>	harmonic losses
<i>P_{fe}</i>	iron-core loss
<i>P_{hys}</i>	hysteresis loss
<i>P_{eddy}</i>	eddy current loss
<i>P_{gap}</i>	air-gap power
PSC	permanent-split-capacitor
PSVD	positive-sequence voltage detector
PFC	power factor correction
PF = pf	power factor
pdf	probability density function
PX(x)	probability distribution function
PCC	point of common coupling
ph	phase
per	period
PF	displacement or fundamental power factor
PEM	polymer electrolyte membrane
PEMFC	proton exchange membrane fuel cell
pico	10 ⁻¹²
PMG	permanent-magnet generator
PMM	permanent-magnet machine
ppm	parts per million
PV	photovoltaics
PWM	pulse-width-modulated
PEM	polymer electrolyte membrane
PDu	upstream protection device
PDd	downstream protection device
PLL	phase-lock loop
PSO	particle swarm optimization
PMMSG	permanent-magnet synchronous generator
P_{KW}	real power expressed in kW not watts
psi	pounds per square inch (measure of pressure)
PMU	phasor measurement unit
%R	frequency regulation
π	pi, or 3.14159
μ	permeability
μ_r	relative (<i>r</i>) permeability
μ_o = 4π10⁻⁷ H/m	permeability of free space
$\vec{\psi}$	flux linkage vector
Φ, φ, ϕ, θ	phase angle, (displacement) power factor angle

Q

Q	electric charge, imaginary or reactive power, filter quality, insulation, name for MOSFET, water flow in cf. (cubic feet)
Q_H	measured heat energy
$Q = 1/(\omega_o RC),$ $1/BW, RC/\sqrt{LC},$ $R\sqrt{L/C},$ $\sqrt{LC}/RC,$	quality factor
q	quadrature
Q_1	fundamental reactive power
Q_C	stored heat
Q_s	insulation

R

r	rotor, average outage time
$\vec{r}$	unit radius vector
$r(t)$	reference signal
R	radius, resistance, property, radiation/convection resistance, conduction resistance
R_1, R_2, R_3	random numbers
$\bar{R}$	resistance matrix
RAPR	reduction in apparent power rating
RPC	real power capability
R_{DC}	DC resistance
R_w	waveshaping resistance
RS	renewable source
RF	ripple factor
RI	radio interference
R_{SC}	short-circuit current ratio
Re	real
RTU	remote terminal unit
rad	radians
rat	rated
R_{load}	load resistance
rrrv	rise of recovery voltage
RCS	reclosing switch
RBFNN	real basic function neural network
RWTH	Rheinisch Westfälische Technische Hochschule
rms	root-mean square
rpm	revolutions per minute
rps	revolutions per second
$(R-jX)$	complex conjugate of $(R+jX)$
(r, Φ, z)	r coordinate, Φ coordinate, z coordinate

S

s	source, stator, synchronous, slip, unit of second, abbreviation symbol for first derivative $\frac{d}{dt}$, secondary, abbreviation for $j\omega = s$
S	south (pole), surface, source terminal, savings function
$S = \vec{S} $	apparent power, magnitude of complex power, synchronizing torque
SEL	Schweitzer Engineering Laboratories

$\tilde{S}$	complex power
S_{sc}	short-circuit apparent power
S_1	fundamental apparent power
s_1	fundamental slip
s_h	harmonic slip
sc	short circuit
$\tilde{S}_{out}$	complex output power
S_{rat}	rated apparent power
S_{actual}	actual apparent power
SEER	seasonal energy efficiency ratio
SCR	silicon-controlled rectifier
SPICE	Simulation Program Integrated Circuit Emphasis
SH	shunt
SVC	static VAr compensator
sys, syst	system
SAIFI	system average interruption frequency index
SAIDI	system average interruption duration index
SARFI = SARFI _{%V}	system average rms (variation) frequency index
SCOC	system customer outage cost
SOFC	solid electrolyte fuel cell, solid oxide fuel cell
SWSU	switching substation
SS	secondary substation
SCADA	supervisory control and data acquisition
SONET	synchronous optical network
SVG	static voltage generator
STATCOM	static synchronous compensator
SSCL	solid-state current limiter
SSB	solid-state breaker
SSTS	solid-state transfer switch
SA	simulated annealing
SC	candidate buses with maximum sensitivities, super-capacitor
SI	Système International d'Unités (French for International System of Units)
SM	synchronous machine
SS	steady-state
start	starting
SM	synchronous motor/machine
SF ₆	sulfur hexafluoride
SEMI	Semiconductor Equipment Materials International
SCR	short-circuit ratio
SSSC	static synchronous series compensator
SLPM	standard liters per minute (standard flow)
STEM	science, technology, engineering, mathematics
SWM	Stadtwerke München
T	
t	turn, time variable, transpose
T	unit of Tesla, period length/duration, time constant, transformer, (absolute)
	temperature, torque magnitude
total	total (loss)

$\vec{T}$	torque vector
$\tilde{T}$	torque phasor
$\hat{T}$	torque amplitude
T_1, T_2, T_3	winding terminals
T_s	synchronizing torque
T_D	damping torque
TCR	thyristor-controlled reactor
trans	transformer
TPF	total power factor
t_r	repair time
t_s	switching time
T_D	delay time
TV	television
TVI	television interference
TRV	transient recovery voltage
TCR	thyristor controlled reactor
TSR	thyristor switched reactor
TSC	thyristor switched capacitor
T_1	distribution transformer
T_2	arc furnace transformer
TLE	technical literature expertise
$T(t)$	time-dependent torque
t_d	delay time
T_e	electric torque
T_m	mechanical torque
TH	thyristor, Thévenin (TH)
THD	total harmonic distortion
Thévenin theorem	impressed voltage source theorem
THD _i	total harmonic distortion of current
THD _{ind}	total harmonic distortion caused by inductance
THD _v	total harmonic distortion of voltage
TIHD	total interharmonic distortion
TSHD	total subharmonic distortion
TDD	total demand distortion
TIF	telephone-influence factor
TFF	telephone form factor
TH	Thévenin theorem
$T(x, t)$	temperature distribution
TSSC	thyristor switched series capacitor
TCSC	thyristor controlled series capacitor
TS	tabu search
TWh	tera-watt hours
three	three-phase value
τ	time constant, time constant RC
τ_d	developed (rated) torque
θ	phase shift of a time function, power factor angle, phase angle of induced voltage, temperature
θ_1	fundamental displacement power factor angle
θ_v	phase shift of a voltage $v(t)$

θ_i	phase shift of a current $i(t)$
θ_m	mechanical displacement angle
U	
U	stands for upper, annual outage time
US=U.S.	United States of America
UPS	uninterruptible power supply
UPQC	unified power line/quality conditioner
UPQ	unified power quality
UPFC	unified power flow controller
USSR	Union of Soviet Socialist Republics
V	
V	voltage, unit of voltage, hydrogen consumption
$\vec{V}$	voltage vector
V_{DC}	DC input voltage
$\tilde{V}_h$	harmonic voltage
VD	voltage divider
v_{wind}	wind velocity
VAr	reactive power
kVAr	kilo VAr
VA	apparent power
VFD	variable-frequency drive
VDE	Verein Deutscher Elektrotechniker
VFD	variable-frequency drive
VFC	variable-frequency converter
VSI	voltage-source inverter
VRFB	vanadium redox flow battery
VHF	very high frequency
V_R	voltage regulation
V_{APF}	compensation signal voltage
VCR	videocassette recorder, voltage-controlled rectifier
v_t	threshold voltage
VAr	unit for imaginary/reactive power Q called volt-ampere reactive
VSI	voltage source inverter
V_C	capacitor voltage
W	
w	waveshaping
$\bar{W}$	transformation ratio matrix (number of turns)
WP	wind power plant
$\Delta\bar{W}$	mismatch power vector
WAN	wide-area network
WP	wind power
WECS	wind energy conversion systems
Ws	wattseconds
Wh	watthours
WIR	Wildpoldsried Innovative Redirecting

X	
x	x -coordinate of x - y spatial rectangular system, variable of integration
(x, y, z)	Cartesian coordinate system with x, y, z components
$\bar{x}$	solution vector
$x(t)$	x -variable as a function of time
X	reactance, variable for voltage and current
X-ray	a form of high energy electromagnetic radiation
X_m	magnetizing/cross-branch reactance of transformer
X_{ls}	leakage reactance of secondary winding
X'_{ls}	secondary leakage reactance referred to primary side of transformer
X_{lp}	leakage reactance of primary winding
$X_{rms} = X_{eff}$	root-mean-square (rms) or effective (eff) value of a quantity
X_{load}	load reactance
Y	
y	y -coordinate of x - y spatial rectangular system, subscript refers to admittance $\tilde{Y}$
Y	winding
$\tilde{Y}(\omega)$	phasor admittance as a function of angular velocity or frequency ω
Y-Y or Y/Y	primary and secondary windings of three-phase transformer are connected in wye or star
Y-Δ or Y/Δ	primary winding of three-phase transformer is connected in wye and secondary winding in delta
$\tilde{Y}$	admittance phasor
$\bar{Y}_{bus}$	bus admittance matrix
Z	
z	z -coordinate of a spatial x, y, z or r, φ, z system
$\tilde{Z}$	impedance phasor
Z	impedance
$Z(\omega)$	driving point impedance
$\tilde{z} = x + jy$	complex number
$\tilde{Z}_{load}$	phasor load impedance
$\tilde{Z}_{line}$	phasor transmission/distribution line impedance
$\tilde{Z}_{in}$	phasor input impedance of primary circuit
$\tilde{Z}_{out}$	phasor output impedance of secondary circuit
$\tilde{Z}_s$	impedance of secondary winding of transformer
$\tilde{Z}'_s$	impedance of secondary winding referred to the primary side of the transformer
$\tilde{Z}_\phi$	cross-branch/magnetizing impedance of transformer
$\tilde{Z}_p$	impedance of primary winding of transformer
$\tilde{Z}'_{load}$	phasor load impedance of secondary circuit referred to primary circuit of transformer
$\tilde{Z}_{total}$	phasor total impedance
Z_{out}	output impedance
Z_{in}	input impedance
ZCS	electronic zero-current switch
zigzag	zigzag transformer (a special type of three-phase transformer)

Appendices

Appendix 1: Sampling techniques

There are two sampling techniques:

- series (sequential) sampling with interpolation, and
- parallel sampling with holding network ([Chapter 2](#), reference 79).

Series sampling with interpolation

The derating measurements as described in [Section 2.8](#) are based on sequential sampling utilizing the soft- and hardware specified by the UCDA-16G Manual of the Keithley Corporation ([Chapter 2](#), reference 80). The software program is written in Quick Basic language. Sampling programs for two and five channels have been used ([Chapter 2](#), reference 81). Some of the frequently asked questions concerning sequential sampling are addressed as follows.

A1.1 What criterion is used to select the sampling rate (see line 500 of two-channel program ([Chapter 2](#), reference 81))?

The A/D converter UCDA-16G has a maximum throughput (sampling) rate of 70 kHz in the direct memory access (DMA) mode, where the gain is 1.0.

In the two-channel program ([Chapter 2](#), reference 81):

select $D\%(0) = 4$

$D\%(1) = 58$

from this follows the

$\text{SAMPLE RATE} = 10,000,000 / [D\%(0) \cdot D\%(1)] = 10,000,000 / [4 \cdot 58] = 43.1 \text{ kHz} \approx 43 \text{ kHz}.$

In the five-channel program ([Chapter 2](#), reference 81):

select $D\%(0) = 5$

$D\%(1) = 37$

from this follows the

$\text{SAMPLE RATE} = 10,000,000 / [D\%(0) \cdot D\%(1)] = 10,000,000 / [5 \cdot 37] \approx 54 \text{ kHz}.$

A1.2 What criterion is used to select the total number of conversions (line 850 of the two-channel program (Chapter 2, reference 81))?

In the two-channel program

One period $T = 16.66$ ms of fundamental frequency ($f = 60$ Hz), signal is approximated by 360 equidistant intervals or $360 + 1 = 361$ points as indicated in Fig. A1.1. For two channels and sequential sampling, $361 \cdot 2 = 722$ sample points are required. Due to interpolation procedure #1 at the end of the sampled period (discussed later), one chooses a somewhat larger number $722 + 11 = 733$.

In the five-channel program

One period $T = 16.66$ ms of fundamental frequency ($f = 60$ Hz), signal is approximated by 180 equidistant intervals or $180 + 1 = 181$ points as explained in Fig. A1.2. For five channels and sequential sampling, $181 \cdot 5 = 905$ sample points are required. Due to interpolation, one chooses a somewhat larger number $905 + 9 = 914$.

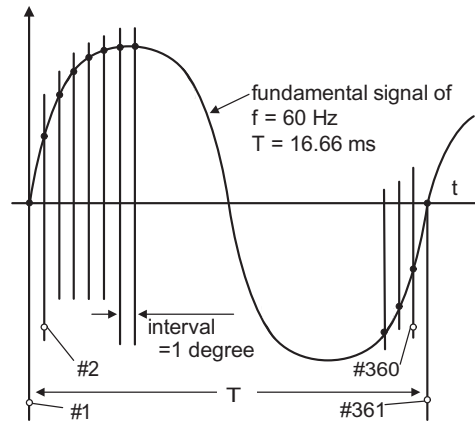


FIG. A1.1 Approximation of one 60Hz period by 360 equidistant intervals.

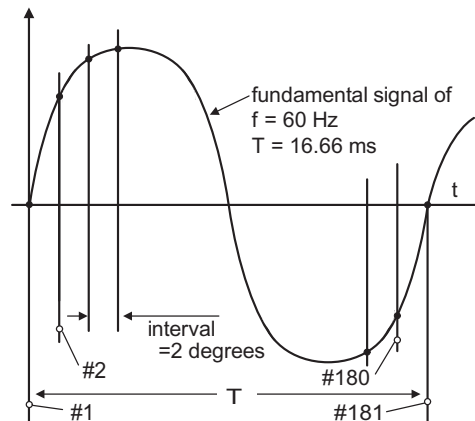


FIG. A1.2 Approximation of one 60Hz period by 180 equidistant intervals.

A1.3 Why are the two-channel program dimension and the array for the channel number not used for the five-channel program (Chapter 2, reference 81)?

There are two ways to store the data:

- For the two-channel program, the array $DT\%(N)$ comprises the sampled points of both (2) channels (e.g., in an interleaved manner). Therefore, $CH\%(N)$ is needed to separate the sample points for each channel, and $DT\%(N)$ results in $DA(N+10)$ (increased due to interpolation).
- For the five-channel program, the array $DA(368)$ contains the sample points of channel #1, $DB(368)$ contains the sample points of channel #2, etc. That is, the sampled data are separated for each channel and no channel number $CH\%(N)$ is required.

A1.4 What is the criterion for selecting the multiplying factor in Step 9 ($0.004882812 \approx 0.004883$) for the two- and five-channel configurations)?

The UCDA-16G is a 12 bit converter, that is $\pm 10V$ are divided into $2^{12} = 4096$ steps. For a voltage peak-to-peak value of $10V - (-10V) = 20V$, one step corresponds to $20V / 4096 = 0.004882812V \approx 0.004883V$.

A1.5 Why is in Step 9 of the two-channel program (line 1254) the array $DA(n+10)$ or $DA(733)$, and in the five-channel program (line 1233) the array is $DA(368)$?

For the two-channel program, the sampled data of both channels are stored in $DA(733)$ as indicated in Fig. A1.3. For the five-channel program, the sampled data are stored separately for each channel, that is, for channel #1 in DA , for channel #2 in DB , etc. This is explained in Fig. A1.4.

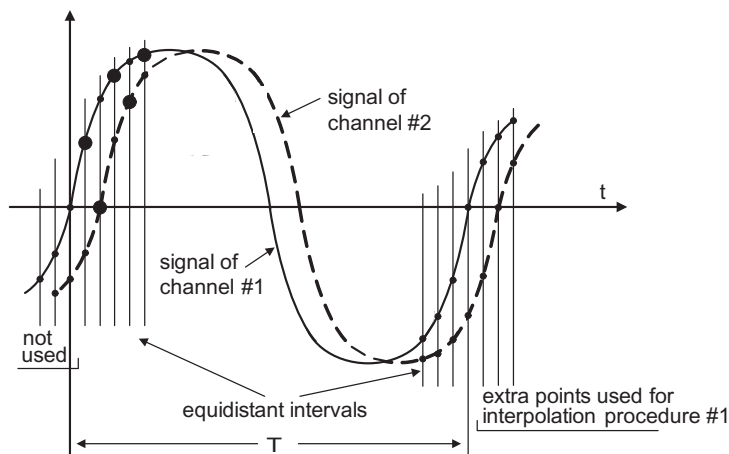


FIG. A1.3 Sampling of two signals in two-channel configuration.

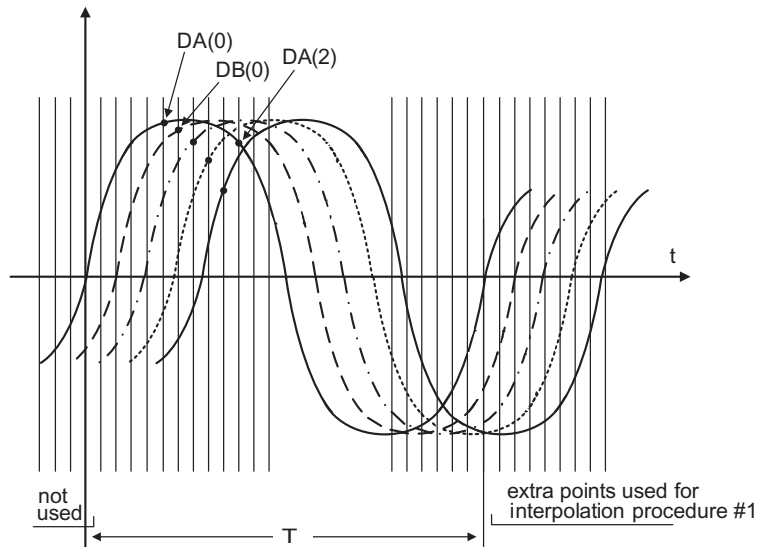


FIG. A1.4 Sampling of five signals in five-channel configuration.

For I = 0 (line 1235):

$$DA(0) = DT\%(0+5) \cdot 0.004883$$

$$DB(0) = DT\%(0+6) \cdot 0.004883$$

. . .
 . . .
 . . .

$$DE(0) = DT\%(0+9) \cdot 0.004883$$

For I = 2 (line 1235):

$$DA(2) = DT\%(5+5) \cdot 0.004883$$

$$DB(2) = DT\%(5+6) \cdot 0.004883$$

. . .
 . . .
 . . .

$$DE(2) = DT\%(5+9) \cdot 0.004883$$

For I = 4:

$$DA(4) = DT\%(10+5) \cdot 0.004883$$

$$DB(4) = DT\%(10+6) \cdot 0.004883$$

. . .
 . . .
 . . .

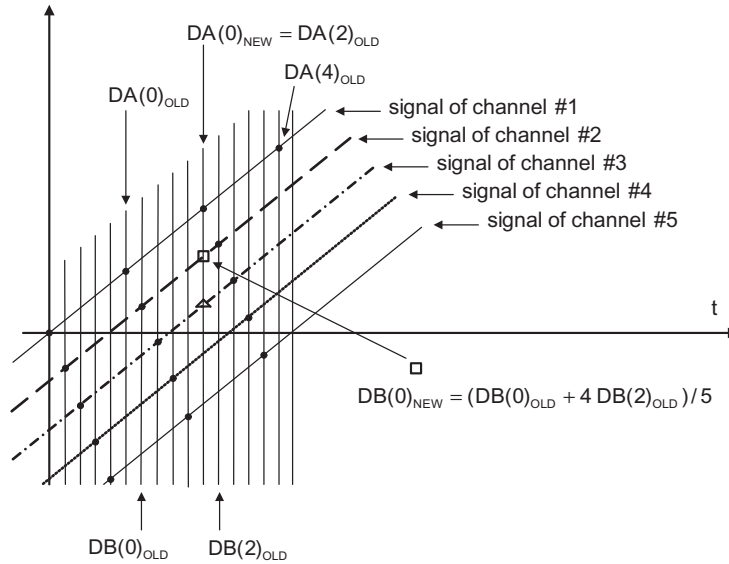


FIG. A1.5 Interpolation for five-channel configuration.

$$DE(4) = DT\%(10+9) \cdot 0.004883$$

.

One concludes that although there are only 181 sampled points for each channel of the five-channel program, the Fourier program (Chapter 2, reference 81) requires $181 \cdot 2 = 362$ or $362 + 6 = 368$ dimensions for array DA, that is DA(368). The points between sampled points are obtained by interpolation procedure #2. Lines 1241 to 1247 of the five-channel program perform this interpolation. The sequential sampling does not provide at a given instant of time values for all five channels; therefore, at each instant of time, a channel signal data are generated by interpolation procedure #2 for every sampled function. Interpolation procedure is explained in Figs. A1.5 and A1.6.

For J = 0:

$$DA(0)_{NEW} = DA(2)_{OLD} \text{ and } DB(0)_{NEW} = \{DB(0)_{OLD} + DB(2)_{OLD} \cdot 4.0\} / 5, \text{ or } DB(0)_{NEW} = \frac{DB(0)_{OLD}}{5} + DB(2)_{OLD} \cdot \frac{4}{5},$$

where $(1/5)$ is the weighting function for $DB(0)_{OLD}$ and $(4/5)$ is the weighting function for $DB(2)_{OLD}$.

Statements (line 1248 to line 1257) restore the data because FORTRAN cannot handle DA(0), that is, DA(0) becomes DA(1), etc.

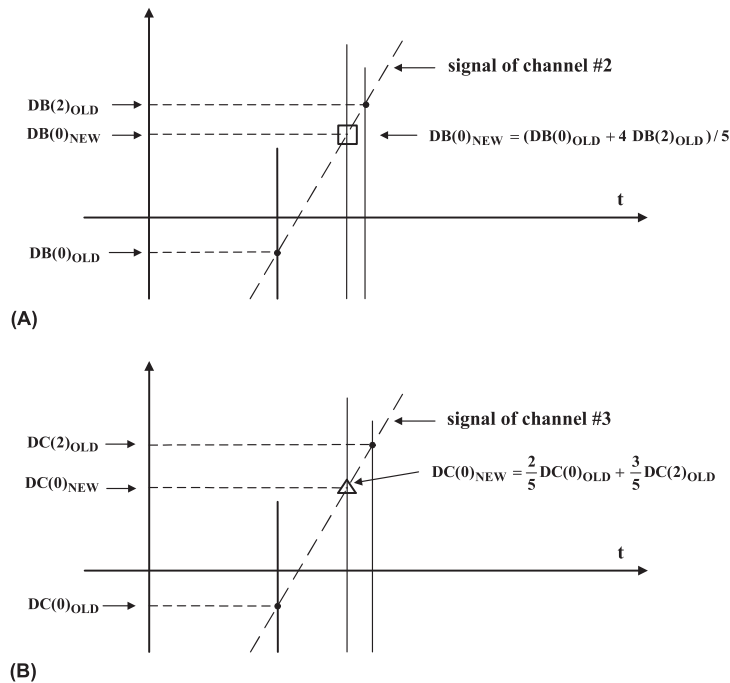


FIG. A1.6 Detailed example for interpolation (see Fig. A1.5) as performed by five-channel program. (A) Signal for second channel, and (B) for third channel.

Appendix 2: Program list for Fourier analysis (Chapter 2, reference 81)

This appendix contains the program list to compute the Fourier coefficient of a periodic nonsinusoidal function and an output example is given for a rectangular wave.

A2.1 Fourier analysis program list

Following is the program list (in FORTRAN) to compute the Fourier terms (DC offset, even and odd harmonics) of a periodic nonsinusoidal function:

```

C PROGRAM ANAFOR
C test, square wave
COMMON NW,DEG(361),RAD(361),XV(361),YVALUE(361)
COMMON NPTS,NPS,INT,INC,NH,GA,PI,WW,OM,NC,RF,ER,EL
COMMON ERR,ITMAX

```

```

    DIMENSION Y(30,365),SCALE(30),YMAX(30),X(365)
    DIMENSION CURVT(100),CURVC(100),CURVS(100),CURVP(100)
    DIMENSION AMP(30,100),ANG(30,100)
C READ DATA FROM DATA FILE.
C OPEN(5,FILE='INDUCTOR.DAT',STATUS='OLD',ACCESS='SEQUENTIAL')
C REWIND 5
C*****
    NSETS=1
    NPTS=42
C*****
    SCALE(1)=1.0
C CLOSE(UNIT=5)
C OPEN(3,FILE='FODA.DAT',STATUS='OLD', ACCESS='SEQUENTIAL')
C REWIND 3
C DO 5 J=1,NSETS
C 5 READ(3,132) (Y(J,I),I=1,NPTS+4)
132 FORMAT(E11.4,2X,E11.4,2X,E11.4,2X,E11.4,2X,E11.4)
C Input of data
    Do 1320 J=1,20
1320 Y(1,J)=1.0
    Do 1321 J=21,41
1321 Y(1,J)=-1.0
    Y(1,42)=1.0
C ECHO THE DATA ON THE SCREEN.
    DO 10 J=1,NSETS
10 WRITE(0,1000) J,SCALE(J),(Y(J,I),I=1,NPTS)
1000 FORMAT(// ' SET NO.',I4,' SCALE FACTOR:'
*,F16.10/ 'Y-COORDINATES BEFORE SCALING:')(/5E11.4))
C SUBTRACT D.C. COMPONENT AND MULTIPLY THE SCALE FACTORS
    DO 30 J=1,NSETS
    YMAX(J)=0.
    DC=0.0
    DO 37 K=1,NPTS-1
37 DC=DC+Y(J,K)
    DC=DC/(NPTS-1)
    WRITE(0,*) 'DC=', DC
    DO 20 I=1,NPTS
    Y(J,I)=SCALE(J)*(Y(J,I)-DC)
20 IF (ABS(Y(J,I))) .GT. YMAX(J)) YMAX(J)=ABS(Y(J,I))
30 CONTINUE
C WRITE THE SCALED DATA
    DO 40 J=1,NSETS

```



```

40 WRITE(0,1010) J,YMAX(J),(Y(J,I),I=1,NPTS)
1010 FORMAT(// 'SET NO.',I4,' PEAK ABSOLUTE VALUE:',
  *F16.10/' Y-COORDINATES AFTER SCALING:'(/5E11.4))
DO 50 I=1,NPTS
50 X(I)=FLOAT(I-1)
  NSPACE=NPTS-1
  DEGMULT = 360.0/NSPACE
DO 19 J=1,NPTS
  X(J) = X(J)*DEGMULT
19 IF (J.EQ.NPTS) X(J) = X(J)+0.001
C OPEN(10,FILE='FODA01.DAT',STATUS='OLD')
  WRITE (0,*) 'THE NUMBER OF KNOWN POINT (NPTS) IS',NPTS
  WRITE (0,*) 'THE NUMBER OF DATA SETS (NSETS) IS' ,NSETS
  WRITE (0,*) 'THE KNOWN POINTS OF X AND F(X) ARE : '
C THIS PART IS BASED ON THE ALGORITHMS IN PAGE 119
C OF VANDERGRAFT.
  OM = 314.1592654
  GA = 0.017453292
  PI=3.141593
  INTF=42
  INT=42
  INC=5
  NW=1
  NH=29
  RADIN = PI/20.5
  DEGIN = 180./20.5
  T1 = -RADIN
  T2 = -DEGIN
DO 22 I=1,INT
  T1 = T1+RADIN
  RAD(I) = T1
  T2 = T2+DEGIN
  DEG(I) = T2
22 CONTINUE
  Write(0,*) (RAD(I), I=1,NPTS)
  Write(0,*) (DEG(I), I=1,NPTS)
DO 1 J=1,NH+1
  CURVC(J) =0.0
  CURVS(J) =0.0
  CURVT(J) =0.0
  CURVP(J) =0.0
1 CONTINUE
DO 17 I=1,361

```

```

      XV(I)=FLOAT(I)-1.0
17 CONTINUE
      DO 12 J=1,NSETS
        NC=J
        DO 13 I=1,361
          YVALUE(I) = Y(J,I)
13 CONTINUE
          YMAX(J)=0.0
          DO 137 I=1,361
            IF(YVALUE(I) .GE. YMAX(J)) YMAX(J)=YVALUE(I)
137 CONTINUE
            WRITE(0,*)'J=',J
            WRITE(0,*)'YMAX(J)=',YMAX(J)
            WRITE(0,1013) J,YMAX(J),(YVALUE(I),I=1,NPTS)
1013 FORMAT(// 'SET NO.',I4,' PEAK ABSOLUTE VALUE:',
          *F16.10/' Y-COORDINATES AFTER SCALING:'/(5E11.4))
            CALL HARM (YVALUE,CURVC,CURVS,CURVT,CURVP)
            DO 133 I=1,NH
133 AMP(J,I)=CURVT(I)
            DO 144 I=1,NH
144 ANG(J,I)=CURVP(I)
            DO 14 K=1,NH
              CURVP(K) = CURVP(K)/GA
14 CONTINUE
              WRITE(0,*) '*****MAIN*****'
              WRITE(0,*) 'CURVT(',NH,J,')=:'
              WRITE(0,100)(CURVT(K),K=1,NH)
              WRITE(0,*) 'THE COSINE BASED PHASOR ANGLES ARE:'
              WRITE(0,100)(-CURVT(K)-90.,K=1,NH)
              WRITE(0,*)'THE MAGNITUDE OF THE HARMONICS AS A',
          *'PERCENTAGE OF THE FUNDAMENTAL:'
              IF (CURVT(1) .EQ.0.00000) THEN
                WRITE(0,100) (0.0, K=1,NH)
              ELSE
                WRITE(0,100)(100.*CURVT(K)/CURVT(1),K=1,NH)
              END IF
12 CONTINUE
100 FORMAT (6(1X,1PE11.4))
      ENDFILE(10)
      REWIND 10
      CLOSE(10)
      THDI=0.0
      Do 1111 K=2,NH

```

```

1111 THDI=THDI+(CURVT(K))*(CURVT(K))
    THDIFINAL=(SQRT(THDI))/CURVT(1)
    WRITE(0,*) THDIFINAL
    RMSIWITHOUT=0
    Do 1112 K=1,NH
1112 RMSIWITHOUT=RMSIWITHOUT+(CURVT(K))*(CURVT(K))
    RMSIWITHOUTF=(SQRT(RMSIWITHOUT))/10.
    WRITE(0,*) RMSIWITHOUTF
    RMSIWITH=(DC)*(DC)
    Do 1113 K=1,NH
1113 RMSIWITH=RMSIWITH+(CURVT(K))*(CURVT(K))
    RMSIWITHF=(SQRT(RMSIWITH))/10.
    WRITE(0,*) RMSIWITHF
    STOP
    END
    SUBROUTINE HARM (VALUE,COMPC,COMPS,COMPT,COMPP)
    COMMON NW,DEG(361),RAD(361),XV(361),YVALUE(361)
    COMMON NPTS,NPS,INT,INC,NH,GA,PI,WW,OM,NC,RF,ER,EL
    COMMON ERR,ITMAX
    DIMENSION VALUE(361), COMPC(100),COMPS(100),COMPT(100)
    DIMENSION COMPP(100),VALUEC(361)
    CHECK=1.0
    WRITE(0,1013) (VALUE(I),I=1,NPTS)
1013 FORMAT(/ / ' Y-COORDINATES AFTER SCALING:('(5E11.4))
    P=SQRT(0.6)
    A1=5./9.
    A2=8./9.
    FK1=0.5*P*(1.+P)
    FK2=(1.+P)*(1.-P)
    FK3=0.5*P*(P-1.)
    DO 44 J=1,NH
    DL1=0.0
    DL2=0.0
    H=FLOAT(J)
    DO 33 I=1,INT-2,2
    T1=H*(RAD(I))
    T2=H*(RAD(I+1))
    T3=H*(RAD(I+2))
    X1=FK1*T1+FK2*T2+FK3*T3
    X2=T2
    X3=FK3*T1+FK2*T2+FK1*T3
    C1=VALUE(I)
    C2=VALUE(I+1)
    C3=VALUE(I+2)

```

```

C4=FK1*C1+FK2*C2+FK3*C3
C6=FK3*C1+FK2*C2+FK1*C3
D1=C4*COS(X1)
D2=C2*COS(X2)
D3=C6*COS(X3)
D4=C4*SIN(X1)
D5=C2*SIN(X2)
D6=C6*SIN(X3)
DL1=DL1+A1*(D1+D3)+A2*D2
DL2=DL2+A1*(D4+D6)+A2*D5
33 CONTINUE
COMPC(J)=DL1*2./41.
COMPS(J)=DL2*2./41.
COMPT(J)=SQRT(COMPC(J)**2+COMPS(J)**2)
If (COMPS(J).EQ.0.00000) THEN
COMPP(J)=0.0
ELSE
COMPP(J)=-ATAN(COMPC(J)/COMPS(J))
END IF
IF (COMPS(J) .LT. 0.0) COMPP(J)= COMPP(J)+PI
44 CONTINUE
WRITE(0,*) '*****SUBROUTINE*****'
WRITE(0,*) 'COMPT(',NH,J,')=:'
WRITE(0,100)(COMPT(K),K=1,NH)
WRITE(0,*) 'THE COSINE BASED PHASOR ANGLES ARE:'
WRITE(0,100)(-COMPT(K)-90.,K=1,NH)
WRITE(0,*)'THE MAGNITUDE OF THE HARMONICS AS A',
*'PERCENTAGE OF THE FUNDAMENTAL:'
100 FORMAT (6(1X,1PE11.4))
NWW=1*NW
IF ((CHECK.EQ.1) .AND. (NC .EQ. NWW)) THEN
EMDIF = 0
DO 51 I=1,INT
VALUEC(I)=0.
DO 52 J=1,NH,1
H=FLOAT(J)
VALUEC(I)=VALUEC(I)+COMPC(J)*COS(H*RAD(I))+
*COMPS(J)*SIN(H*RAD(I))
52 CONTINUE
DIF=ABS(VALUE(I)-VALUEC(I))
IF (DIF.GT.EMDIF) THEN
EMDIF=DIF
DIFN=FLOAT(I)
ENDIF

```

```

51 CONTINUE
  WRITE(0,*) '*** CHECKING FOURIER ANALYSIS*'
  WRITE(0,*)
  WRITE(0,*) 'VALUE(361) AT NC=',NC
  WRITE(0,1001) (VALUE(I), I=1,42)
  WRITE(0,1001) (VALUEC(I), I=1,42)
1001 FORMAT (10(1X,1PE11.4))
  WRITE(0,*) 'THE MAXIMUM DIFFERENCE IS :',EMDIF,'AT I=', DIFN
  ENDIF
  RETURN
  END

```

A2.2 Output of the Fourier analysis program

The output of the Fourier program for a square wave is as follows:

```

SET NO. 1 SCALE FACTOR: 1.0000000000
Y-COORDINATES BEFORE SCALING:
0.1000E+01 0.1000E+01 0.1000E+01 0.1000E+01 0.1000E+01
0.1000E+01 0.1000E+01 0.1000E+01 0.1000E+01 0.1000E+01
0.1000E+01 0.1000E+01 0.1000E+01 0.1000E+01 0.1000E+01
0.1000E+01 0.1000E+01 0.1000E+01 0.1000E+01 0.1000E+01
-0.1000E+01-0.1000E+01-0.1000E+01-0.1000E+01-0.1000E+01
-0.1000E+01-0.1000E+01-0.1000E+01-0.1000E+01-0.1000E+01
-0.1000E+01-0.1000E+01-0.1000E+01-0.1000E+01-0.1000E+01
-0.1000E+01-0.1000E+01-0.1000E+01-0.1000E+01-0.1000E+01
-0.1000E+01 0.1000E+01
DC= -2.43902E-02
SET NO. 1 PEAK ABSOLUTE VALUE: 1.0243902206
Y-COORDINATES AFTER SCALING:
0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00 0.1024E+01
THE NUMBER OF KNOWN POINT (NPTS) IS 42
THE NUMBER OF DATA SETS (NSETS) IS 1
THE KNOWN POINTS OF X AND F(X) ARE :
0. 0.153248 0.306497 0.459745 0.612994 0.766242 0.919491 1.07

```

```

1.22599 1.37924 1.53248 1.68573 1.83898 1.99223 2.14548
2.29873 2.45198 2.60522 2.75847 2.91172 3.06497 3.21822
3.37147 3.52472 3.67796 3.83121 3.98446 4.13771 4.29096
4.44421 4.59745 4.75070 4.90395 5.05720 5.21045 5.36370
5.51694 5.67019 5.82344 5.97669 6.12994 6.28319
0.8.78049 17.5610 26.3415 35.1220 43.9024 52.6829 61.4
70.2439 79.0244 87.8049 96.5854 105.366 114.146 122.927
131.707 140.488 149.268 158.049 166.829 175.610 184.390
193.171 201.951 210.732 219.512 228.293 237.073 245.854
254.634 263.415 272.195 280.976 289.756 298.537 307.317
316.098 324.878 333.659 342.439 351.220 360.000

```

J= 1

YMAX(J)= 1.02439

SET NO. 1 PEAK ABSOLUTE VALUE: 1.0243902206

Y-COORDINATES AFTER SCALING:

```

0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00 0.1024E+01

```

Y-COORDINATES AFTER SCALING:

```

0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01 0.1024E+01
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00-0.9756E+00
-0.9756E+00 0.1024E+01

```

*****SUBROUTINE*****

COMPT(29 30)=:

```

1.2717E+00 3.4488E-02 4.1969E-01 3.6450E-02 2.4608E-01 3.8742E-02
1.6870E-01 4.0489E-02 1.2299E-01 4.1067E-02 9.1722E-02 4.0183E-02
6.8664E-02 3.7860E-02 5.1330E-02 3.4436E-02 3.8801E-02 3.0685E-02
3.1712E-02 3.8456E-02 3.7949E-02 2.5107E-02 2.4685E-02 2.1601E-02
2.5122E-02 2.0924E-02 2.7380E-02 2.2261E-02 3.0684E-02

```

THE COSINE BASED PHASOR ANGLES ARE:

```

-9.1272E+01 -9.0034E+01 -9.0420E+01 -9.0036E+01 -9.0246E+01 -9.0039E+01

```

```

-9.0169E+01 -9.0040E+01 -9.0123E+01 -9.0041E+01 -9.0092E+01 -9.0040E+01
-9.0069E+01 -9.0038E+01 -9.0051E+01 -9.0034E+01 -9.0039E+01 -9.0031E+01
-9.0032E+01 -9.0038E+01 -9.0038E+01 -9.0025E+01 -9.0025E+01 -9.0022E+01
-9.0025E+01 -9.0021E+01 -9.0027E+01 -9.0022E+01 -9.0031E+01
THE MAGNITUDE OF THE HARMONICS AS APERCENTAGE OF THE FUNDAMENTAL:
*** CHECKING FOURIER ANALYSIS*
VALUE(361) AT NC=1
1.0244E+00 1.0244E+00 1.0244E+00 1.0244E+00 1.0244E+00 1.0244E+00
1.0244E+00
1.0244E+00 1.0244E+00 1.0244E+00 1.0244E+00 1.0244E+00 1.0244E+00
1.0244E+00
-9.7561E-01 -9.7561E-01 -9.7561E-01 -9.7561E-01 -9.7561E-01 -9.7561E-01
-9.7561E-01
-9.7561E-01 -9.7561E-01 -9.7561E-01 -9.7561E-01 -9.7561E-01 -9.7561E-01
-9.7561E-01 -9.7561E-01 1.0244E+00
5.0335E-01 1.1156E+00 9.8548E-01 1.0407E+00 9.6388E-01 1.0831E+00
9.720E-01
9.5716E-01 1.0451E+00 9.9427E-01 1.0748E+00 9.3542E-01 1.0637E+00
1.022E+00
-8.8539E-01 -9.6836E-01 -9.0364E-01 -1.0717E+00 -9.4528E-01 -9.9542E-01
-9.457E-01
-9.5329E-01 -1.0331E+00 -9.2584E-01 -1.0258E+00 -9.5068E-01 -1.0254E+00
-9.310E-01 -5.0985E-01 5.0335E-01
THE MAXIMUM DIFFERENCE IS: 0.521040AT I= 1.00000
*****MAIN*****
CURVT( 29 1)=:
1.2717E+00 3.4488E-02 4.1969E-01 3.6450E-02 2.4608E-01 3.8742E-02
1.6870E-01 4.0489E-02 1.2299E-01 4.1067E-02 9.1722E-02 4.0183E-02
6.8664E-02 3.7860E-02 5.1330E-02 3.4436E-02 3.8801E-02 3.0685E-02
3.1712E-02 3.8456E-02 3.7949E-02 2.5107E-02 2.4685E-02 2.1601E-02
2.5122E-02 2.0924E-02 2.7380E-02 2.2261E-02 3.0684E-02
THE COSINE BASED PHASOR ANGLES ARE:
-9.1272E+01 -9.0034E+01 -9.0420E+01 -9.0036E+01 -9.0246E+01 -9.0039E+01
-9.0169E+01 -9.0040E+01 -9.0123E+01 -9.0041E+01 -9.0092E+01 -9.0040E+01
-9.0069E+01 -9.0038E+01 -9.0051E+01 -9.0034E+01 -9.0039E+01 -9.0031E+01
-9.0032E+01 -9.0038E+01 -9.0038E+01 -9.0025E+01 -9.0025E+01 -9.0022E+01
-9.0025E+01 -9.0021E+01 -9.0027E+01 -9.0022E+01 -9.0031E+01
THE MAGNITUDE OF THE HARMONICS AS APERCENTAGE OF THE FUNDAMENTAL:
1.0000E+02 2.7118E+00 3.3001E+01 2.8661E+00 1.9350E+01 3.0463E+00
1.3265E+01 3.1837E+00 9.6712E+00 3.2292E+00 7.2123E+00 3.1597E+00
5.3992E+00 2.9770E+00 4.0362E+00 2.7078E+00 3.0510E+00 2.4128E+00
2.4936E+00 3.0239E+00 2.9840E+00 1.9742E+00 1.9410E+00 1.6985E+00
1.9754E+00 1.6453E+00 2.1530E+00 1.7504E+00 2.4127E+00 0.444086
0.139151 0.139172

```

Appendix 3: Equipment for tests

A3.1 The 9kVA three-phase transformer bank

Y-Y connected three-phase transformer bank with 416/416 V of rated line-to-line voltages consists of three single-phase transformers. The type numbers of the three single-phase transformers are J7065, J7610, and J7065 (bank #1), and the nameplate data of which are:

Powerformer	Dry-type transformer
CAT. NO.: 211–101	3 kVA, single-phase, 60Hz
High voltage: 240/480 V	Low voltage: 120/240 V

A3.2 The 4.5kVA three-phase transformer bank #1

Single-phase transformers with the nameplate data listed in Section A3.1 are used in this bank #1 and are connected in such way that the rated line-to-line voltages are 240/240 V. Only the two high-voltage windings of each single-phase transformer are employed as primary and secondary, and the rated apparent power of the three-phase transformer bank is therefore 4.5kVA.

A3.3 The 4.5kVA three-phase transformer bank #2

Single-phase transformers with the nameplate data listed in Section A3.1 having the type numbers J7605, J7606, and J7605 are used in this bank #2, and are connected in such way that the rated line-to-line voltages are 240/240 V. Only the two high-voltage windings of each single-phase transformer are employed as primary and secondary, and the rated apparent power of the three-phase transformer bank is therefore 4.5kVA.

A3.4 The 15kVA three-phase transformer bank

15kVA, 240/240 V, Δ - Δ connected bank consists of three 5kVA transformers. The original rated apparent power of the single-phase units is 10kVA. The two high-voltage windings were used as primary and secondary, and the rated power of the bank is therefore 15kVA.

The nameplate data are:

Westinghouse	Type: EP transformer
Frame NO.: 179	10kVA, single-phase, 60Hz
High voltage: 240/480 V	Low voltage: 120/240 V

A3.5 Three-phase diode bridge

$$I_{\max} = 100 \text{ A}, V_{\max} = 1200 \text{ V}.$$

A3.6 Half-controlled three-phase six-step inverter

General electric AC adjustable frequency drive:

Model NO.: 6VGAW2007CI

Input:

Volts: 230 V
Hertz: 50/60 Hz
Amps.: 22 A
Phases: 3

Output:

HP: 7.5 hp.
kVA: 8.8 kVA
Volts: variable
Hertz: 6–60 Hz
Amps. AC: variable
Phases: 3

A3.7 Controlled three-phase resonant rectifier ([Chapter 2](#), reference 12)

University of Colorado:

ID NO.: 5484

Input:

Volts AC: 340–600 V
Hertz: 12–60 Hz
Amps: 45 A
Phases: 3

Output:

P: 20 kW
Volts DC: 380 V
Amps DC: 60 A

A3.8 Controlled three-phase PWM inverter ([Chapter 2](#), reference 12)

University of Colorado:

ID NO.: 5485

Input:

Volts DC: 360 V
Amps DC: 70 A

Output:

P: 20 kW
Volts AC: 240 V
Amps AC: 80 A
Power factor: 0.7
(lead, generator notation) to 1.0 pu
Hertz: 50/60 Hz

Appendix 4: Measurement error of powers

A4.1 Measurement error of powers

Assume the input power of a load with power factor (lagging) between 0.6 and 1.0 is measured with a CT, an ammeter, a PT, and a voltmeter, as shown in Fig. A4.1. The ammeter and the voltmeter have an error of ε_A and ε_V , respectively. The CT has a ratio correction factor RCF_{CT} , and a phase angle shift γ measured in minutes. The PT has a ratio correction factor RCF_{PT} , and a phase angle shift β measured in minutes (Chapter 9, references 97–100).

The input power is expressed as

$$P = VI \cos \varphi.$$

The measurement error of the input power is given by

$$\frac{\Delta P}{P} = \frac{\Delta V}{V} + \frac{\Delta I}{I} - \frac{\sin \varphi \cdot \Delta \varphi}{\cos \varphi} = \left(\text{RCF}_{\text{PT}} - 1 + \frac{\varepsilon_V}{V} \right) + \left(\text{RCF}_{\text{CT}} - 1 + \frac{\varepsilon_A}{I} \right) - \frac{\sin \varphi}{\cos \varphi} \frac{\pi (\beta - \gamma)}{180 \cdot 60}.$$

For power factors ranging from 0.6 to 1.0 (lagging, based on consumer notation), the worst case in power measurement error is when $\cos \varphi = 0.6$, therefore,

$$\begin{aligned} \frac{\Delta P}{P} &\approx \left(\text{RCF}_{\text{PT}} - 1 + \frac{\varepsilon_V}{V} \right) + \left(\text{RCF}_{\text{CT}} - 1 + \frac{\varepsilon_A}{I} \right) - \frac{(\beta - \gamma)}{2600} \\ &= \left(\text{TCF}_{\text{PT}} - 1 + \frac{\varepsilon_V}{V} \right) + \left(\text{TCF}_{\text{CT}} - 1 + \frac{\varepsilon_A}{I} \right) = \left(\frac{\varepsilon_{\text{PT}} + \varepsilon_V}{V} \right) + \left(\frac{\varepsilon_{\text{CT}} + \varepsilon_A}{I} \right), \end{aligned}$$

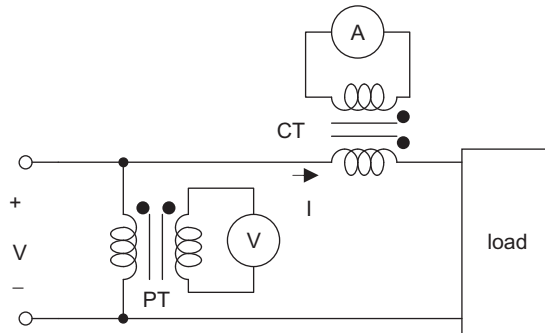


FIG. A4.1 Power measurement based on a CT, an ammeter, a PT, and a voltmeter.

where

$$\text{TCF}_{\text{CT}} = \text{RCF}_{\text{CT}} + \gamma/2600,$$

$$\text{TCF}_{\text{PT}} = \text{RCF}_{\text{PT}} - \beta/2600,$$

$$\varepsilon_{\text{CT}} = (\text{TCF}_{\text{CT}} - 1) \cdot I,$$

$$\varepsilon_{\text{PT}} = (\text{TCF}_{\text{PT}} - 1) \cdot V.$$

According to American National Standard (Chapter 9, reference 97), transformer correction factors TCF_{CT} and TCF_{PT} (ε_{CT} and ε_{PT}) can directly be obtained based on the accuracy class from the device nameplates. Normally, the maximum absolute errors for ammeters and voltmeters are based on the full-scale errors. For instrument transformers, the maximum absolute errors (ε_{CT} and ε_{PT}) are proportional to the actually measured values of currents and voltages, as derived earlier.

Note that the maximum errors of an instrument transformer derived above are systematic errors which can be reduced by ratio and angle corrections. If the measured results are not corrected, the overall uncertainty of measurement is derived from the systematic (s) uncertainty and random (r) uncertainty:

$$u = \sqrt{u_s^2 + u_r^2}.$$

The random uncertainty is normally much smaller than the systematic uncertainty and can be ignored, therefore

$$u = u_s = \varepsilon_{\text{CT}} \text{ or } \varepsilon_{\text{PT}}.$$

A4.2 Nameplate data of measured transformers

3 kVA single-phase transformers:

Powerformer	Dry-type transformer
CAT. NO.: 211-101	3 kVA, single-phase, 60 Hz
High voltage: 240/480 V	Low voltage: 120/240 V

4.5 kVA three-phase transformer bank:

Three single-phase transformers with the nameplate data listed for the 3 kVA units having the type numbers J7065, J7610, and J7065 are used in this bank and are connected in Δ - Y_0 with rated phase voltages of 240/240 V. Only the two high-voltage windings of each single-phase transformer are employed as primary and secondary, and the rated apparent power of the three-phase transformer bank is therefore 4.5 kVA.

25 kVA single-phase transformer ([Chapter 9](#), reference 101)

ABB	MFG Date: July 93
Serial #: 93A312106	25 kVA, 60 Hz
High voltage: 7200 V	Low voltage: 120/240 V

This page intentionally left blank

Index

Note: Page numbers followed by *f* indicate figures and *t* indicate tables.

A

$a\beta 0$ transformation, 957, 988, 990–993, 997, 1000
 Acceptance, 1127, 1147–1148
 AC motors, voltage-stress winding failures of, 255–279
 Activation energy, reduction of lifetime of components with, 649–650
 Active filters (AFs), 71, 942–945
 block diagram, 950–952
 classification
 based on power rating, 943–945
 based on topology and supply system, 942
 drawback, 945
 vs. passive filters, 942
 Active power line conditioners (APLCs), 16, 70–83, 977
 AC transmission lines, 1175
 A/D converter, 170, 229, 843–844, 857, 952
 Adjacent capacitor banks, 77
 Adjustable-speed drives, 3–4, 16, 63–64, 567, 586, 918, 934–941, 938*t*, 950
 Admittance matrix, 733–735, 734–735*f*
 Admittance matrix building algorithm, 712
 Aging, 99, 198, 299, 421–422, 625–626, 646, 648–649, 657, 692–693, 857, 934, 1179–1181
 Ambient air, 686–687, 688*f*
 Air gap, 132–135, 227–229, 282, 308*f*, 348*f*, 395, 696, 809–810, 887*f*
 Alternating current (AC), 12, 23, 101–103, 197, 865, 872, 950, 964–965, 1019, 1114–1115
 American National Standards Institute (ANSI), 28, 54–56*t*, 57–58
 Ammonia (NH₃), 421
 Amortisseur, 299–300, 329, 335, 341–351, 394, 402, 404–405, 676–677, 685*f*, 695
 Ampere's law, 101–103, 154
 Analog/digital (A/D), 170, 229, 843–844, 952
 Analytical methods, 154, 254–255, 1025–1027, 1083
 ANSI. *See* American National Standards Institute (ANSI)
 APCLs. *See* Active power line conditioners (APCLs)
 Apparent power, 754
 Arrhenius plots, 627, 645–646
 Arrhenius rule, 628

Artificial intelligence-based (AI-based) methods, 1028–1037
 Artificial neural networks (ANNs), 1033–1034
 drawbacks, 1034
 Assembly of equations, 752–756
 Asymmetry, 378–379, 399–402
 Audible noise, 822
 Aurora australis, 152, 153*f*
 Aurora borealis, 152, 153*f*
 Automobile batteries, charging and discharging of, 473
 Automobile manufacturers, 563
 Automotive fuel, 1177
 Auxiliary (aux), 229, 231–237, 234*t*, 237*f*, 239–242*f*, 994

B

Backup power systems, 872
 Band-pass filter, 923–924, 923*f*, 927–931, 927*f*, 929*f*
 Batteries
 equivalent circuits, 422, 422–423*f*
 nonideal battery parameters, 423
 nonideal equivalent circuits, 422, 422–423*f*
 performance
 issues, 563
 under low temperature conditions, 423
 storage, 1133–1136
 storage energy, 563
 Bearing currents, 396
 Bell Telephone Systems (BTS), 29–30
 Biogas, 894, 1178
 Biological systems, 863, 865
 Braking energy, recovering of, 425
 British Standards (BS), 54–56*t*, 57, 168
 Brushless-DC machine
 operation in full-on (six-step) mode with nonideal fuel cell, 539*f*
 speed and torque control of, 526*f*, 528
 Brushless DC motor, in full-on mode, 41–45, 42*f*, 43–44*t*, 45–46*f*
 Brushless excitation systems, 705
 BS. *See* British Standards (BS)
 Bundling of conductors, 819
 Burst-current/voltage control, 1095*f*, 1098, 1186

- Bus admittance matrix, 708–715, 708*t*
 - construction, 712–713, 712*f*
 - fundamental, 723
- Bus voltage vector, 725, 725*f*
- C
- Cable, 53, 135–136, 139*f*, 141, 143*f*, 144–152, 256–257, 570, 706–707, 826, 859–860, 1123–1124, 1175
- California Public Utilities Commission (CPUC), 825–826
- Canadian Electric Association (CEA), 57
- Capacitor, 567–568
 - current, safe operating region, 610
 - equivalent circuits, 613–616, 613–614*f*
 - harmonic constraints, 608–612
 - harmonic limits, 612
 - harmonic losses, 615–616
 - harmonic reactive-power constraint, 609
 - harmonic voltage constraint, 608
 - parallel resonance caused by, 593–597, 593*f*, 596*f*
 - permissible operating region, 610–611
 - reactive power, 608
 - series-connected, 581–582
 - series resonance caused by, 597–602, 598*f*, 600*f*
 - shunt, 582
 - voltage, safe operating region, 610
- Capacitor allocation techniques, shunt-capacitor banks
 - analytical methods, 1026
 - artificial intelligence-based (AI-based) methods, 1028–1037
 - heuristic methods, 1027–1028
 - numerical programming methods, 1026–1027
- Capacitor and frequency scanning, 568, 605–606
- Capacitor applications
 - harmonic filtering, 582–584
 - tuned harmonic filter design, 582–584, 585*f*
 - power-factor correction (PFC), 568–581
 - displacement power factor (DPF), 569–580, 569–570*f*
 - total power factor (TPF) in presence of harmonics, 570–580
 - reactive power compensation, 581–582
- Capacitor banks, 567, 569
 - adjacent, 77
 - optimal placement and sizing, 67–69
 - shunt-connected, 569
 - in transmission and distribution systems, 568
- Capacitor reactive power
 - feasible operating region, 611, 611*f*
 - safe operating region, 611
- Capacitors, power quality problems with, 585–605
 - harmonic resonances, 587–589
 - capacitor bank behaves as a harmonic source, 588–589
 - parallel resonance, 588
 - series resonance, 588
 - transients associated with capacitor switching, 586–587, 587*f*
- Capacitor Subcommittee of the IEEE Transmission and Distribution Committee, 1017
- Carnot efficiency, 896–897, 1137–1138, 1140, 1195–1196
- CAT. *See* Computer-aided testing (CAT)
- CBEMA. *See* Computer Business Equipment Manufacturers Association (CBEMA)
- CEA. *See* Canadian Electric Association (CEA)
- Central power station, 402, 869, 872–873, 1163–1164
- CFW. *See* Compensation of flux weakening (CFW)
- Charging and discharging properties, of batteries, 421–422, 473, 564
- Chromosomes, 1029–1031, 1029*f*, 1045–1046, 1045*f*, 1064–1066, 1065*f*, 1068, 1071–1076, 1073–1074*f*, 1074*t*, 1078, 1082
- Circuit analysis, 77
- Classification, 1, 4–17, 283–285, 748, 750, 750*t*, 782–793, 784*t*, 918–920, 919*f*, 931–932, 942–950, 1025–1046
- Classification of harmonics, 782–793
- Classification of power quality issues, 4–17
- Closed-form solution techniques, 424
 - for speed, 421–427
 - for variable-torque drives, 421–427
- C-message weighting system, 32
- Coal-fired plants, 413, 827–835, 839*f*, 840, 878, 905, 1135, 1198
- Collinear, 489*f*, 492*f*
- Combined current and voltage-source loads, 918
- Combustion engines, 563
 - performance issues with, 563
- Common-mode, 64, 168, 1104, 1105–1106*f*, 1106, 1113, 1189
- Common-mode noise, 1104
- Compensator, 567, 974, 979, 982, 985
- Compensating signals, 962–963
- Compensation devices, 581, 972–978
- Compensation of flicker, 1010–1012, 1011*f*
- Compensation of flux weakening (CFW), 426
- Complex number plane, 489*f*, 493
- Composite filters, 930–931
- Compressed-air storage, 1136–1141
- Computer-aided testing (CAT), 170, 175, 227–229, 232, 232*f*, 843
- Computer-aided testing of electrical apparatus program (CATEA), 175, 229
- Computer-aided testing (CAT) program, 170, 227–229
- Computer Business Equipment Manufacturers Association (CBEMA), 54–56*t*, 57, 869–871, 875–905
- Computer Business Equipment Manufacturers Association (CBEMA) curves, 869–870, 870*f*

- Condensers, synchronous, 568
- Conduction, 613, 685–687, 687*f*, 963
- Constant-speed wind power plants, 1122
- Constraint, 2, 67, 197–198, 372, 382–383, 388, 390, 608–610, 612, 621, 826–827, 862–866, 1017–1018, 1026–1027, 1030–1031, 1037–1039, 1049, 1053, 1055–1061, 1064–1066, 1071, 1076, 1078, 1082–1083, 1152
- Consumer notation, 90, 197–198, 360, 495*t*, 499*t*, 502, 507*t*, 511, 513*t*, 517*t*, 519, 520*f*, 521*t*, 524–525*f*, 525, 554–555, 562, 569–570, 569*f*, 582–583, 616–617, 620, 678
- Consumer reference frame, 286–287, 403, 548*f*
- Consumption, 2, 48, 421, 426, 580–581, 899–900, 983, 1087–1094, 1098, 1123–1124, 1164, 1176, 1178, 1184, 1186, 1199–1200, 1200–1201*t*
- Control centers, 707
- Control of filters, 952–971
- Convection, 685–688, 687*f*
- Conventional compensation devices, 974
- Conventional harmonic model
 - of induction motor, 279
 - modified, 279–280, 280*f*
 - simplified, 280, 280*f*
- Convergence criterion, 1031, 1066, 1078, 1082
- Cooling medium, 686–687, 687–688*f*
- Copper-fill factor, 369
- Corona effects, 812–827
- Corona-produced radio noise, 822, 822–823*f*
- Correction bus vector, 779–782
- Correction voltage vector, computation of, 747–748
- Cosine law, application of, 90*f*
- Cost of harmonics, 657
- Crossover operators, 1030
- Crossover process, 1046, 1066, 1076
- Crossover rate, 1031
- CSIs. *See* Current-source inverters (CSIs)
- Current-controlled pulse-width-modulated (PWM) inverter, 1106–1110
- Current density, 101, 359
- Current snubbers, 1120
- Current-source-fed induction motor
 - computation of forward-rotating subharmonic torque in, 251, 251–252*t*
 - subharmonic torques in, 246–247, 246*f*
- Current-source inverters (CSIs), 256–257
 - PMW, calculation of winding stress due to, 269–279, 270–276*f*
- Current-source nonlinear loads, 916–917, 916*f*
- Customer loads, 3–4
- Customer-oriented system indices, 806
- Custom power devices, 16, 63, 567–568, 972–973, 976–978, 1014, 1099–1110, 1113
- Cycles
 - charging, 473
 - discharging, 473
- Cylindrical-rotor (round-rotor, nonsalient-pole) synchronous machine, 323–328, 324–326*f*
- D**
- DC offset, 12
- DC transmission lines, 1175
- Deadbeat or predictive control, 964–965
- Decoupled harmonic power flow, 783–785, 785*f*
 - accuracy of, 792–793, 792*f*, 792–793*t*
- Dedicated line, 64–67
- Dedicated transformer, 64–67, 89, 587
 - interharmonic reduction, 64–67, 65–68*f*, 65*t*
- Defuzzification, 1036–1037
- Delta-wye, 64, 428, 442, 455
- Delta/zigzag connection, 64, 85–87, 254–255, 392
- Demand-side management (DSM) programs, 867–869
- Derating, 99, 626, 843–844
 - definition of, 109
 - of power system devices, 63, 69
 - of single-phase transformers, 109–119
 - of three-phase transformers, 170–184
- Describing function, 126–127, 131
- Diesel-generator set, 872, 886–887
- Differential-mode, 1104, 1105*f*, 1106, 1113, 1188
- Differential-mode noise, 1104
- Diode bridge, 428, 443, 474, 474*f*, 481, 484*f*, 1122
- Direct current (DC), 2, 12, 24–25*t*, 99, 101, 155, 213, 231, 463, 481, 705, 855–857, 872, 898–899, 916–917, 958, 1163–1164
- Direct-drive, 351–353
- Direct loss measurement, 107
- Discretization errors for magnetic fields, 396–399, 397–399*f*
- Discretization errors of numerical methods, 424
- Dispatch centers, 707
- Displaced stator windings, 403
- Displacement power factor (DPF), 569–570, 569–570*f*
 - computation, 571–580
 - inductive loads with low, 570
- Distorting nonlinear load, 64–65
- Distortion index (DIN), 33
- Distortion power (D), 33–34, 34*f*
- Distributed generation (DG), 571–572
 - sources, 567, 872–873
- Distributed power plants, 1146
- Distribution factor, 326*f*
- Distribution shunt capacitor banks, 1021–1025
- Distribution system, 3, 706
 - three-phase, 429*f*, 432*f*, 436–437*f*, 439*f*, 443*f*, 445*f*, 448*f*, 450*f*, 452*f*, 456*f*, 459*f*

- Distribution system (*Continued*)
 current-controlled discharging a lithium-ion to support, 462
 rated phase voltage, 442, 455
 rated single-phase voltage, 474
 supplying energy to lithium-ion batteries via rectifiers, 427
- Disturbances in power systems, causes of, 2–4, 3f
- DPF. *See* Displacement power factor (DPF)
- dqo modeling, 307–309
 of salient-pole synchronous machine, 328–341, 330–336f, 338–340f
- dq0 transformation, 957–958, 967, 973, 985–988, 986f, 1013–1014
- Drip-proof 5hp motor, 690–691, 691f
- Drives, 12, 17, 64, 117–119, 213, 300, 312, 372, 421–427, 563–564, 663, 692
- Droop characteristic, 827–828, 832, 832–836f, 836–837, 838–840f, 839, 862, 875, 878–879, 899, 1146f, 1148–1152, 1151f, 1166f, 1174, 1198
- Dunkelflaute, 707
- Duty-cycle, 1187
- Dynamic-rotor eccentricity, 394
- E**
- Earth-surface potential (ESP), 154
- Economical evaluation of reliability, 806
- Edison Electric Institute (EEI), 29–30
- Eddy-current losses, 100, 103–107, 111, 122, 124–125, 128–129
- Eight-channel computer-aided testing (CAT) circuit, 848, 849f
- Electric automobiles
 facing problems, 473
 figure of merit, low and high-speed operation of, 426
 lithium-ion batteries, 428, 474
 performance, 426
- Electric cars, fast-charging stations for, 1175
- Electric drives, speed and torque control of, 488
- Electric machines, reduction of vibrations and torque pulsations in, 676
- Electric noise, 16
- Electric noise filter, 1188–1189
- Electric power quality, 1
 causes of disturbances in power systems, 2–4, 3f
 customer, 3–4
 electric utility, 2–3
 manufacturing regulations, 4
 unpredictable events, 2
 definition, 2
 formulations and measures used for, 17–52
 average value of a nonsinusoidal waveform, 25–26
 brushless DC motor, in full-on mode, 41–45, 42f, 43–44t, 45–46f
 C-message weights, 32
 distortion index (DIN), 33
 distortion power (D), 33–34, 34f
 form factor (FF), 27
 harmonic factor (HF_h), 27
 harmonics, 18–25, 18–22f
 I.T products, 32
 lowest order harmonic (LOH), 27
 with one self-commutated electronic switch, three-phase rectifier, 38–40, 39f, 40t, 41f
 polymerelectrolytemembrane (PEM) fuel cell, 46–48
 ripple factor (RF), 27
 rms value of a nonsinusoidal waveform, 26–27
 telephone form factor (TFF), 32
 telephone influence factor (TIF), 29–31, 30–31t
 three-phasethyristor rectifier, input/output currents and voltages of, 34–37, 35f, 36–37t, 38f
 total demand distortion (TDD), 29
 total harmonic distortion (THD), 28–29
 totalinterharmonic distortion (TIHD), 29
 total subharmonic distortion (TSHD), 29
 V.T products, 32
 wind-power plant PWM inverter feeding power, 48–52, 49f, 50–51t, 52f
 harmonic modeling philosophies, 61–63
 harmonic-domain simulation, 61–62
 iterative simulation techniques, 62
 modeling harmonic sources, 62–63
 time-domain simulation, 61
 improvement techniques, 63–83
 APLCs, 70–83
 dedicated line, 64–67
 derating of power system devices, 69
 harmonic cancellation, 64
 harmonic filters, 70–83
 high power quality equipment design, 63–64
 optimal placement and sizing of capacitor banks, 67–69
 transformer, 64–67
 UPQCs, 70–83
 issues, classification of, 4–17, 5t, 6f
 flicker, 16–17, 17f
 long-duration voltage variations, 11
 power–frequency variations, 17
 short-duration voltage variations, 8–11, 9–10f
 transients, 6–7, 7t, 8–9f
 voltage fluctuation, 16–17
 voltage imbalance, 11–12
 waveform distortion, 12–16, 13f
 on power system devices, poor, 52–53
 problems, 84–94

recommended practices, 53
standards and guidelines of, 53–60, 54–56†
IEC 61000 series, 57–58
IEEE-519 standard, 58–60
Electric power systems, 569–570
Electric Reliability Council of Texas (ERCOT), 426–427, 473, 715, 1145
Electric utility, 2–3
Electrolysis, 898–899, 1141–1142, 1177, 1196–1197
Electromagnetic devices, 626–627
Electromagnetic fields (EMFs), 812–827
Electromagnetic Transient Program (EMTP), 61
Electro-mobility, storage for, 473
Electronic gears, 1113–1114
Emergency and standby power systems, 872
EN. *See* European Norms (EN)
Enclosed fixed capacitor bank, 1025
Enclosed switched capacitor bank, 1025
Energy balance, 963–964, 1013
Energy conservation and efficiency, 1087–1098
Energy independence, 1178
Energy savings
 based on heat pumps, 426
 of heat pumps, 426
Energy storage methods, 473, 873
Equipment design, 63–64, 83–84
Equipment grounding, 157, 159, 168
Equipment sensitivity, 4
Equivalent circuits of capacitors, 613–616, 613–614†
ERCOT. *See* Electric Reliability Council of Texas (ERCOT)
Error calculation, 189–193
Even space harmonics, computation of rotating mmf with, 253
Expert systems (ESs), 1032
Externally fused open-rack capacitor bank, 1023
Extrahigh voltage (EHV), 706
European Norms (EN), 54–56†, 57

F

FACTS devices, 581–582
Fan-cooled 100hp motor, 687–690
Fan-cooled induction motor, 659–660, 689†, 695–697
Faraday's law, 104
Fast-charging stations, 1175
Fast Fourier transform (FFT), 61, 131–132
Fast harmonic power flow, 785–787, 786†
Fast interrupting switches (FIS), 860
Fault-current limiters (FCLs), 860–861, 866
Feed-in tariff, 1176
Federal Communications Commission (FCC), 822
Ferroresonance, of transformers, 135–151
 avoiding techniques, 144–151

prerequisites, 141
 system conditions susceptible, 136–137
 transformer connections, 137–143
 F_{HL} -factor, 113–119
Figure of merit (FM), 426, 900, 1175
Filtering of harmonics, 582–584
Filters. *See* Harmonic filters
Filter transfer function, 920–923, 925–926, 928
Finite-difference (FD) method, 206–207
Finite element/difference techniques, 132–134
First-order damped high-pass filter, 923, 923†, 925–927, 926†
First-order high-pass filter, 924–925, 924†
Fitness function, 1029–1030, 1045–1046, 1064–1066, 1071, 1078, 1082
Flexible AC transmission systems (FACTS), 975–976
Flicker, 16–17, 17†
Fluctuation, 152, 154, 1011–1012
Flux density, 77, 100, 198–199, 213, 232†, 233, 237, 240–241†, 243–244, 310–311, 336–338, 360–367, 426, 630–631, 826, 1114–1117
Flux weakening (FW), 421–422, 473, 1114–1117
Flywheel, 677, 684, 692, 695, 872–873, 890–892, 890–891†, 1099, 1128, 1131–1133, 1131†, 1191–1192, 1192†
Flywheel storage, 1131–1133
Form factor (FF), 27
Forward-rotating, 247–249, 251, 638–641
Fourier components
 of input current, 576–577†
 of line-to-neutral input voltage, 575–576†
 of output voltage, 579†
 of secondary transformer line-to-neutral output voltage, 577†
 of secondary transformer output phase current, 578†
Fourth-order double band-pass filter, 923, 923†
Fourth-order filters, 930, 930†
Frequency and capacitance scanning, 605–607, 606–607†
Frequency conversion, 387
Frequency domain, 61–62, 123, 125–126, 131–132, 184–185, 230–231, 282, 371–372, 382, 386, 605, 703, 782, 955†, 957–958, 960, 1049
Frequency-domain filtering, 957–958
Frequency-domain transformer coil modeling, 125–127
Frequency-domain transformer core modeling, 123–125
Frequency leader, 402, 409, 827, 1097, 1099, 1146, 1150–1153, 1164–1165, 1174, 1199
Frequency regulation, 872
Frequency relay operation, 810
Frequency variation, 3–4, 17, 408, 1011–1012, 1111–1112, 1146–1147, 1152, 1157–1158, 1164–1170
Fuel cells, 1142–1144
 nonideal, 521†, 528, 539†, 541†, 543†, 547–548, 561†
 performance issues with, 563

Full-load field, 310*f*
 Full-on mode, 20*f*, 41–45, 542, 1182–1183
 Fundamental frequency, current balance for, 753, 753*f*
 Fundamental slip, 633
 Fundamental torque, 222, 244, 247*t*, 249*f*, 251
 Fuseless open-rack capacitor bank, 1023–1024
 Fuzzy expert system (FES), 1037
 Fuzzy harmonic power flow, 787–788
 Fuzzy inference system, 1034
 Fuzzy logic, 1034–1035
 Fuzzy sets, 1034–1035
 Fuzzy set theory (FST), 1034–1037
 defuzzification, 1036–1037
 drawbacks, 1037
 expert system, 1037
 fuzzy inference, 1036
 if-then rules, 1035–1036
 implication, 1036
 logic operators, 1035
 membership function, 1035

G
 Gaussian plane, 489*f*
 Generation, 2, 197, 288, 705, 707, 812–827, 953, 964–965, 1088–1094, 1141–1142, 1145–1146, 1179–1181, 1199
 Generator notation, 320, 1108–1110*t*, 1111*f*
 Generator reference frame, 312, 317*f*
 Genetic algorithm in conjunction with fuzzy logic (GA-FL), 1071–1076, 1078
 Genetic algorithms (GAs), 1028–1032
 convergence criterion, 1031
 drawbacks, 1031–1032
 evaluation function, 1030
 flowchart, 1031, 1032*f*
 genetic operators, 1030–1031
 initialization, 1030
 parameters, 1031
 representation, 1029
 Geomagnetically induced currents (GICs), 152, 154
 mitigation techniques, 156–157
 power system effects, 154–155
 system model, 155–156
 Geomagnetic-disturbance cycles, 154
 Geomagnetic storms, solar origins of, 153–154
 Geothermal, 703–705, 1097, 1176–1177
 Graph search algorithm, 1037–1038
 Grounded-wye/grounded-wye transformer, 144
 Grounding, of transformers, 157–169
 connection to earth, 168–169
 equipment, 168
 magnetic forces, 169
 static, 168
 system, 157–167
 Ground-water heat pump, 1088*f*, 1089, 1097
 Guidelines, 23, 53–60, 368–369, 369*t*

H

Hall devices, 227, 843–844
 Half-controlled thyristor bridge, 455, 456*f*, 459, 459*f*, 461
 Harmonic admittance matrix, computation of, 763–765, 764*f*
 Harmonic bus admittance matrix, and power definitions, 748–750
 Harmonic cancellation, 63–64, 83–84
 Harmonic constraints for capacitors, 608–612
 Harmonic current constraint for capacitors, 609
 Harmonic distortion, 571
 Harmonic-domain simulation, 61–62
 Harmonic equivalent circuit, 279–280, 280*f*
 of induction machine, 279–281
 Harmonic factor (HF_h), 27
 Harmonic filtering, 582–584
 Harmonic filters, 70–83
 active (*see* Active filters (AFs))
 capacitor applications, 582–584
 tuned harmonic filter design, 582–584, 585*f*
 classification, 918–920, 919*f*
 control, 952–971
 hybrid power filters, 945–950
 implementation, 915
 passive (*see* Passive power filters)
 Harmonic flux and voltage, 105–107
 Harmonic frequencies, current balance for, 754
 Harmonic Jacobian entry formulas, 759–762, 760*f*
 Harmonic Jacobian submatrices, fundamental and, 774–778
 Harmonic limits for capacitors, 612
 Harmonic load flow, 767–769, 775, 779
 Harmonic losses
 of capacitors, 615–616
 of transformers
 loss measurement, 107–109
 magnetic iron-core losses, 104–107
 proximity effect, 101–103
 skin effect, 101
 Harmonic mismatch vector, evaluation of, 769–773
 Harmonic modeling
 of a 24-bus power system with a nonlinear static VAR compensator (SVC), 380–381, 380–381*t*
 of a 24-bus power system with asymmetry in transmission lines, 379, 382*f*
 philosophies, 61–63
 Harmonic parameters, synchronous machine model with, 378–381, 378–379*f*
 Harmonic penetration, 621–622*t*, 651–656, 652*t*, 654–655*t*, 694*t*, 788
 Harmonic power flow algorithm (assembly of equations), 752–756
 Harmonic power flow, convergence of, 779–782
 Harmonic power flow direction, detection of, 841–842

- Harmonic power flow techniques, classification of, 782–793, 784t
 - Harmonic reactive-power constraint for capacitors, 609
 - Harmonic resistors, 602–605, 604f
 - Harmonic resonance, 99, 198, 571, 587–592, 620, 1007, 1010f, 1021
 - Harmonic resonance, in distorted industrial power system with nonlinear loads, 589–592, 589f
 - Harmonics, 12, 14–15f, 18–25, 18–22f
 - characteristic, 23
 - cost of, 657
 - effect, 32
 - generator, 77
 - probabilistic and time-varying nature of, 657
 - uncharacteristic, 23
 - voltages and currents, 62–63
 - Harmonics for battery currents
 - delta-wye, three-phase transformer supplying diode-bridge rectifier in series with one thyristor, 431t, 434t, 436t, 439t, 441t
 - delta-wye, three-phase transformer supplying half-controlled thyristor bridge, 452t, 454t, 458t, 461t
 - delta-wye, three-phase transformer supplying one mosfet in series with diode-bridge rectifier, 445t, 447t, 450t
 - single-phase transformer supplying diode bridge in series with MOSFET with two filters, 475–476t, 478t
 - Harmonic slip, 633
 - of induction machines, 222–224, 224–225f
 - in terms of fundamental slip, 225–226, 226f
 - in terms of harmonic slip, 226–227
 - Harmonic torques, of induction machines, 221–227, 221f, 250–251
 - Harmonic voltage constraint for capacitors, 608
 - Harmonic voltages, possible limits for, 650–656, 650–651t
 - Heat flow
 - due to conduction, 686, 686f
 - due to radiation and convection, 686–687, 687–688f
 - Heat pumps, energy savings of, 426
 - Heuristic methods, 69, 1027–1028, 1048
 - Higher order filters, 930, 930f
 - High harmonic penetration, single-phase and three-phase voltage spectra with, 651–654, 652t, 654t
 - High-pass filter, 923–927, 923–924f, 926f, 930–931, 954, 967, 980, 984, 1003t
 - High-power active filters, 945
 - High power quality equipment design, 63–64
 - High-speed operation, 426
 - High-voltage DC (HVDC) transmission, 300
 - Homogeneous body, 686, 686f
 - Horizontal-and-vertical-axes, 1113–1145
 - Horizontal-axis wind power plants, 1113–1145
 - Human expertise (HE), 1032
 - Hybrid passive filter, 934–941
 - Hybrid power filters, 945–950
 - classification, 945–950
 - Hydrogen generation and storage, 1141–1142
 - Hydro pump-storage plants, 1128–1131
 - Hysteresis regulation, 964
- ## I
- Ideal and nonideal lithium ion batteries, brushless DC motor-inverter performance, 527–530t, 528f, 530f, 532t, 532–534f, 533
 - Ideal storage elements, performance of, 422
 - IEC. *See* International Electrotechnical Commission (IEC)
 - IEC 61000 series of standards, for power quality, 57–58, 58t
 - IEEE. *See* Institute of Electric and Electronic Engineers (IEEE)
 - IEEE 30-bus distribution system, 934–941
 - IEEE-519 standard, 58–60, 60t, 60f, 75–79, 76f
 - IGBT. *See* Insulated-gate-bipolar transistor (IGBT)
 - Igneous rock formations, 809–810
 - Impedance-based blocking, 962
 - Impedance-based compensation, 962–963, 1013–1014
 - Impedance synthesis, 954, 962–963, 985, 1014
 - Imbalance, 11–12, 25, 144, 198, 301, 350–351, 382–393, 918, 953, 957, 960, 973, 980–983
 - Impedance *vs.* frequency characteristics, of transformer, 77
 - Improvement techniques, 62–83
 - Impulsive transient, 6–7
 - Independently operating power regions (IOPRs), 865–866
 - Indirect loss measurement, 107
 - Induction machines
 - detrimental effects on, 198
 - fundamental and harmonic torques of, 221–227, 221f
 - fundamental slip, 221–222, 222f
 - harmonics, 255
 - harmonic slip, 222–223, 223–224f
 - in terms of fundamental slip, 225–226, 226f
 - in terms of harmonic slip, 226–227
 - measurement of harmonics within yoke (back iron) and tooth flux densities of single phase, 233–243, 234t
 - data of motor R333MC, 235–242, 235–243f
 - operating-point-dependent equivalent circuits of, 424
 - rationale for limiting harmonic torques in, 250–251
 - reflected harmonic slip of, 223–224, 224–225f
 - simulation, 199
 - sinusoidal modeling, 199–200
 - spatial harmonics, 216, 217f, 218
 - steady-state operation, 212, 212f
 - steady-state stability of three-phase, 210–214
 - three- and single-phase, 227–243, 228f

- Induction machines (*Continued*)
- three-phase
 - classification of, 283–285, 283–284^f
 - complete sinusoidal equivalent circuit of, 199–206, 199–200^f, 202–203^f
 - spatial (space) harmonics of, 215–217, 215^f, 217^t, 217–218^f
 - static and dynamic rotor eccentricity of, 282
 - time harmonics of, 218–221, 220^f, 220^t
 - with time and space harmonics
 - spectral-based harmonic model, 280–282, 281^f
 - unstable and stable steady-state operation of, 211–212, 212^f
- Induction motor
- conventional harmonic model, 279
 - modified, 279–280, 280^f
 - current-source-fed
 - subharmonic torques in, 246–247, 246^f
 - disadvantages, 198
 - measurement of nonlinear circuit parameters of
 - single-phase, 227–233, 229^f, 229^t
 - current and voltage harmonics measurement, 231
 - flux-density harmonics in stator teeth and yoke (back iron), 231–233, 232^f
 - iron-core resistance, 230–231
 - magnetizing impedance, 230
 - main- and auxiliary-phase windings, 231
 - rotor impedance, 229–230
 - stator impedance, 229
 - medium-voltage, 256–257
 - simplified conventional harmonic model, 280, 280^f
 - speed variation, 254–255
 - steady-state operation
 - at overvoltage, 204–205
 - at undervoltage, 203–206
 - voltage-source-fed, subharmonic torques in, 244–246, 244^f
- Induction-type stove/cooker, 1186
- Inductive loads, with low displacement power factor (DPF), 570
- Inductive machine parameters
- magnetic fields of three-phase machines for
 - calculation of, 206–209, 206–211^f
- Information Technology Industry Council (ITIC), 54–56^t, 57, 869–870, 876–905
- Information Technology Industry Council (ITIC) curves, 869–870, 870^f
- Injected, 61–63, 91–92, 329, 388–389, 750–751, 766, 787, 790–791, 887, 920, 953, 997, 1186–1187
- Input filter, 413^f, 905^f
- In situ methods, 719
- Instantaneous power, 951, 955–956^f, 958–962, 985, 992, 994, 996, 996^f, 1013–1014
- Instantaneous power compensator, 954, 958–962, 985, 1013–1014
- Insulated-gate-bipolar transistor (IGBT), 360–367, 412, 904, 952, 1135
- Instantaneous power theory, 962, 996–1000, 996–997^f
- Institute of Electric and Electronic Engineers (IEEE), 1, 6, 11, 54–56^t, 57
- Integer, 12, 18, 23, 428, 442, 593–594, 620, 934
- Interharmonic reduction, 64–67
- Integration of Renewable ENergy and Electro-mobility (IRENE) project, 1178
- Intentional islanding, 707, 862–865, 875
- Intentional islanding operation, 862–864
- Interaction of harmonics, 567–622
- Interconnected power systems, 408, 409^f, 410, 427, 706, 722–723, 723^f, 794, 827–840, 862, 875, 877–879, 1098–1099, 1145–1146, 1149–1152, 1198
- frequency control, 827–840
- Interdisciplinary telecommunications programs (ITPs), 858–859
- Interharmonics, 16, 23, 64
- Intermittent operation, 662–663, 663^f
 - steady state with, 663, 664^f
- Intermittent renewable power plants, 874–875
- Internally fused open-rack capacitor bank, 1023
- International Electrotechnical Commission (IEC), 1, 4–5, 8–9, 11, 57, 292^f, 608, 621, 657
- Interphase reactor, 14–15^f, 190, 191^f
- Interruption, 9
- Inverse of Jacobian, 742–745
- Inverter, 12, 41–45, 180–183, 313–316, 317^f, 361, 424–425, 488, 528, 548–549, 887^f, 890^f, 892, 903–904^f, 951–952, 951^f, 962, 963^f, 964–965, 968^f, 1097, 1113
- Iron-core stacking factor, 369
- Irregular load steps, 662, 663^f, 664–675, 695
- Islanding operation, 409–410, 707, 865, 875, 1145–1146
- Isolated power plant, 409–410, 1147–1148
- Isolation transformer, 66–67, 66^f, 68^f
- Iterative simulation techniques, 62
- ITIC. *See* Information Technology Industry Council (ITIC)
- I.T* products, 32
- J**
- Jacobian entry formulas, 729–732, 730^f
- Jacobian matrix, 719–722
 - evaluation of, fundamental, 737–742
 - inverse of, calculation, 742–745
- K**
- K-factor, 111–119
- Kirchhoff's current law (KCL), 708
- Kirchhoff's voltage law (KVL), 708

11kV, 34-bus three-phase radial distribution system
 fuzzy capacitor placement, 1040–1044
 genetically optimized placement, 1045–1046

L

Latitude, 157, 1186

Lead-acid battery, 46, 48, 422*f*, 427, 480, 480*f*, 483*t*, 484*f*,
 486*t*, 488, 515*f*, 1194*f*

charging, 563

nonideal, 422*f*, 480*f*, 483*t*, 487, 516*f*, 520

three-phase IM operating regimes, 488, 489–492*f*,
 494–495*f*, 495*t*, 498*f*, 499*t*, 501*f*, 503*t*, 505*f*, 507*t*,
 510*f*, 513*t*, 515–516*f*, 517*t*, 520–521*f*, 521*t*, 524–525*f*

via rectifier

three-phase permanent-magnet generator

supplying energy to, 480–481*f*, 481*t*, 483*t*, 484, 487

Lifetime, 12, 18, 52–53, 69, 83, 99, 109, 227, 338, 423, 461,
 473, 479, 487, 605, 625–699, 899, 1143, 1170, 1174,
 1178–1181, 1197

Light-emitting diode (LED) lights, 3–4, 915, 950,
 1094–1095

Lightning arrester operation, 164–167

Lightning surge, 2, 292

Limits for harmonic voltage, 650–656

Linear iron-core characteristics, 101, 102*f*

Linear loads, modeling of, 750–751

Linear resonant circuit, 135, 138*f*

Line-commutated converter, 751*f*

Lithium-ion battery, 421

charging, 563

ideal and nonideal

brushless DC motor-inverter performance,
 527–530*t*, 528*f*, 530*f*, 532*t*, 532–534*f*, 533

three-phase IM operating regimes, 488, 489–492*f*,
 494–495*f*, 495*t*, 498*f*, 499*t*, 501*f*, 503*t*, 505*f*, 507*t*,
 510*f*, 513*t*, 515–516*f*, 517*t*, 520–521*f*, 521*t*, 524–525*f*

Lithium-ion battery via rectifiers, three-phase

distribution system supplying energy to, 427

current-controlled discharging a lithium-ion to
 support three-phase distribution system's
 operation, 462, 462–463*f*, 464*t*, 466*f*, 467*t*, 469*f*, 470*t*

alternative storage methods, 473

electric automobiles face a few important problems,
 473

delta-wye, three-phase transformer supplying diode-
 bridge rectifier in series with one thyristor, 428,
 429*f*, 430–432*t*, 432*f*, 434*f*, 434*t*, 436–437*t*, 436–437*f*,
 439–441*t*, 439*f*

delta-wye, three-phase transformer supplying half-
 controlled thyristor bridge, 450*t*, 452*f*, 452–454*t*,
 455, 456*f*, 457–459*t*, 459*f*, 461*t*

delta-wye, three-phase transformer supplying one
 MOSFET in series with diode-bridge rectifier, 442,
 443*f*, 444–448*t*, 445*f*, 448*f*, 450*t*, 450*f*

single-phase transformer supplying diode bridge in
 series with MOSFET with two filters, 474,
 474–475*f*, 475–478*t*, 477*f*, 479*f*

Load control programs, 868

Load loss (LL), 111

Load management, 873

Load-oriented system indices, 806

Load-point indices, 805

Load (PQ) buses, 724

Load sharing control, 878–879

Load shedding, 873

Long-duration voltage variations, 11

Long-term and short-term storage facilities, 1199

Lowest order harmonics (LOH), 27

Low-power active filters, 943

Low-speed, 197–198, 351, 355–359

M

Magnet characteristic, 358–359

Magnetic fields, 370

during the first cycle of a synchronous generator,
 349*f*

interaction of, 395

operating point-dependent reactances under
 saturated magnetic field conditions, 399–402

rated and saturated, 401*f*

solution of one pole pitch at no-load, 397–398*f*

of three-phase machines, for calculation of inductive
 machine parameters, 206–209, 206–211*f*

of two-pole, three-phase synchronous machine, 313*f*
 visualize steady-state saturated, 402

Magnetic field strength, 103*f*, 152

Magnetic iron-core losses, 104–107

Magnetic saturation, 130, 304–306, 369–370

Magneto-motive force (MMF), 215–216, 218–219, 218*f*,
 220*f*, 252–253, 323–325

Main, 229–232, 234*t*, 236, 242*f*

Mamdani implication methods, 1036

Mathematica input program, 1149*t*, 1151–1152*t*,
 1158–1161*t*

MATLAB codes, 144, 146–147*t*

Matrix expression, inspection of, 731

Matrix multiplication, 716

Maximum error analysis, 842–851

Maximum power point of a PV array, 1189

Maximum sensitivities selection (MSS), 1050–1053

algorithm, 1051–1053, 1052*f*

convergence, 1053

sensitivity functions, 1050–1051

Mechanical equations, 304

Mechanical gears, 1113–1114

Medium-power active filters, 945

Medium-voltage induction motors, 256–257

Membership function, 1035

- Metal-oxide-semiconductor-field-effect transistor (MOSFET), 34–35, 38, 43, 45–46f, 407–408, 441–443, 443f, 445f, 448f, 450f, 455, 461, 474, 481, 533, 898, 952, 1125f
- Metering, 1176
- Methanation, 563, 899
- Military (MIL), 57
- MMF. *See* Magneto-motive force (MMF)
- Mismatch power, 728, 728f
- Mismatch vector, 736–737, 756, 762, 769–773, 779–780, 791, 794, 798–800
- Mismatch vector, evaluation of, 736–737
- Modeling harmonic sources, 62–63
- Moderate harmonic penetration, single-phase and three-phase voltage spectra with, 654–656, 654–656t
- Modern power system, 61, 608, 703–707, 722
- Modified fast decoupled harmonic power flow, 787
- Modular capacitor bank, 1024
- Modular harmonic power flow (MHPF), 790–792
- Modulation index m , 425, 488, 494, 506, 516, 554, 562, 892, 894, 900, 1136, 1188–1189
- Molten salt storage, 1144–1145
- MOSFET. *See* Metal-oxide-semiconductor-field-effect transistor (MOSFET)
- MOSFET switch in series
with diode-bridge rectifier and two filters, 480–481f, 481t, 483t, 484, 487
- Motors
induction (*see* Induction motor)
polyphase induction, 197–198
synchronous, 197–198
winding failures, 255–256
- Mutation operators, 1030
- Mutation rate, 1031
- N**
- National Conference of Standards Laboratories International (NCSLI), 857–858
- National Electric Manufacturers Association (NEMA), 57, 283–284, 283f
- National Instrument LabVIEW software, 858
- Natural-gas fired plant, 1146, 1153, 1155, 1164–1165, 1168–1170, 1199
- NdFeB. *See* Neodymium-iron-boron magnet characteristic (NdFeB)
- Negative-sequence harmonics, 23–25, 24–25t
- NEMA. *See* National Electric Manufacturers Association (NEMA)
- Neodymium-iron-boron magnet characteristic (NdFeB), 355–360, 357–358f, 406–407
- Neodymium-iron-boron (NdFeB) permanent-magnet material, 355–360
- Net metering, 1176
- Neural networks, 863
- Newton-based harmonic power flow, 748–782
algorithm, 762–763, 763f
- Newton-Raphson power flow algorithm, 715, 724–729, 733, 733f, 756–759, 787
- Niagara Falls hydroplant, 197
- Nodal analysis, 61
- No-load field, 206–207f, 308f
- Nonideal batteries
charging and discharging, 421
lithium-ion, 564
parameters, 423
- Nonideal fuel cells, 521f, 528, 539f, 541f, 543f, 547–548, 561f
- Nonideal lead-acid battery, 422f, 480f, 483t, 487, 516f, 520
- Nonideal storage elements, performance of, 422
- Noninteger space harmonics, computation of rotating mmf with, 254–255
- Nonlinear equations, solution of, 62
- Nonlinear harmonic models
of three-phase induction machines, 279–282
of transformers, 120–135
- Nonlinear iron-core characteristics, 101, 102f
- Nonlinear load harmonic currents, 766–769, 766f, 768f
- Nonlinear loads, 1, 3f, 60t, 60f, 61–65, 66f, 69–71, 83–84, 111, 113, 176, 300, 367, 567, 589–590, 592, 608, 703, 707, 750, 756, 759, 766–769, 782–785, 789, 791–792, 915–918, 920, 923, 935, 942, 950, 957, 965, 977, 991–992, 1012, 1047–1049, 1058, 1063, 1068, 1078–1082, 1119f, 1126f
harmonic resonance in distorted industrial power system with, 589–592, 589f
modeling, 750–751
synchronous machines supplying, 367
- Nonsalient-pole (round-rotor) synchronous machines, steady-state analysis of, 320–323, 321–322f
- Nonsingular, 711, 713–714, 713f, 719, 735f, 788, 794
- Nonsingular bus admittance matrix, 713–714, 713f
- Nonsinusoidal operating conditions
classification of harmonic power flow techniques, 782–793
accuracy of decoupled harmonic power flow, 792–793
decoupled harmonic power flow, 783–785
fast harmonic power flow, 785–787
fuzzy harmonic power flow, 787–788
modified fast decoupled harmonic power flow, 787
modular harmonic power flow, 790–792
probabilistic harmonic power flow, 788–790
fundamental power flow, 722–748
admittance matrix, 733–735
bus admittance matrix, 723
correction voltage vector, 747–748
inverse of Jacobian matrix, 742–745
inversion of 3×3 matrix, 746–747

- Jacobian entry formulas, 729–732
- Jacobian matrix, 737–742
- mismatch vector, 736–737
- Newton-Raphson power flow algorithm, 733
- Newton-Raphson power flow formulation, 724–729
- modern power system, 703–707, 704f
 - control and dispatch centers, 707
 - distribution system, 706
 - generation with storage plants, 705
 - linear loads, 707
 - nonlinear loads, 707
 - renewable energy generation plants, 707
 - single and three-phase transformers, 705–706
 - transmission and subtransmission lines, 706
- Newton-based harmonic power flow, 748–782
 - algorithm, 762–763
 - convergence of harmonic power flow, 779–782
 - correction bus vector, 779–782
 - harmonic admittance matrix, 763–765
 - harmonic bus admittance matrix and power definitions, 748–750
 - harmonic Jacobian entry formulas, 759–762, 760f
 - harmonic Jacobian submatrices, 774–778
 - harmonic mismatch vector, 769–773
 - harmonic power flow algorithm (assembly of equations), 752–756
 - modeling of nonlinear and linear loads, harmonic frequencies, 750–751
 - Newton-Raphson approach, 756–759
 - nonlinear load harmonic currents, 766–769
- power system matrices, 707–722
 - bus admittance matrix, 708–715, 708f
 - Jacobian matrix, 719–722
 - triangular factorization, 715–719
- Nonsinusoidal waveform
 - average value, 25–26
 - rms value, 26–27
- Non-steady-state phenomena, 4
- Norton equivalent circuit, 131
- Notch area, 16
- Notch depth, 16
- Notching, 16
- Notch position, 16
- Notch width, 16
- NO_x, 822–824
- Nth-order composite filter, 930–931, 930f
- Nuclear plants, 426
- Numerical programming methods, 1026–1027
- Numerical-solution techniques
 - for speed, 421–427
 - for variable-torque drives, 421–427
- Nyquist criterion, 233
- O**
 - Objective function (cost index), 1050
 - Ocean-tide plants, 1176–1177
 - Off-shore renewable plants, 1175–1176
 - Ohm's law, application of, 709, 710f
 - Open-rack shunt capacitor bank, 1022–1024
 - Operating-point-dependent equivalent circuits
 - of induction (asynchronous) machines, 424
 - of permanent magnet machines, 424
 - of synchronous machines, 424
 - Operating point-dependent reactances, under saturated magnetic field conditions, 399–402, 400–401f
 - Operational amplifier, 174, 950, 952–953, 967
 - Optimal capacitor bank placement
 - capacitor allocation problem, reformulation of constraints, 1049
 - hybrid MSS-LV algorithm, 1055
 - local variation, 1053–1055
 - objective function, 1050
 - system model, 1048–1049
 - MSS algorithm (*see* Maximum sensitivities selection (MSS))
 - Optimal placement and sizing of capacitor banks, 63, 67–69, 83–84, 605, 1055–1071, 1067f, 1075f
 - Out-of-phase synchronization, 320, 329, 334, 334f, 341, 350
 - Output filter, 413f, 428, 442, 455, 905f, 1106–1110
 - Overcurrent relays, 810
 - Overvoltage, 11
 - Ozone (O₃), 822–824
- P**
 - Paralleling of two power systems, 1181
 - Parallel resonance, caused by capacitors, 593–597, 593f, 596f
 - Park (*dq0*) transformation, 973, 985, 986f
 - Partial differential equation, 396, 399, 424, 697
 - Particle swarm optimization (PSO), 1025, 1038–1039
 - drawbacks, 1039
 - Passive power filters, 70, 920–941
 - classification, 931–932
 - filter transfer function
 - current-divider, 922
 - impedance, 921
 - voltage-divider, 922–923
 - potentials and limitations, 933–934
 - types, 923–931
 - Peak-power tracker (PPT) process, 874–875
 - PEM. *See* Proton-exchange membrane (PEM)
 - PEM fuel cell, 46–48, 422, 899–900, 1143
 - Permanent-magnet generator, 351
 - for wind-power plant, 355–359, 356–358f, 360f

- Permanent-magnet machines, 307, 424–425
 - flux distribution at full load of, 314f
 - flux distribution at no load of, 314f
 - flux distribution for quadrature-inductance, 315f
 - operating-point-dependent equivalent circuits of, 424
 - three-phase, 528
- Permanent-magnet synchronous machine
 - voltage ripple of a 30kVA, 349f, 351–353, 351–353f, 352–354t
- Permanent-split-capacitor (PSC), 227–229, 229t, 233–235, 243, 293
- PFC. *See* Power-factor correction (PFC)
- Phase-angle current control, 1095, 1096f, 1187
- Phase-lock loop (PLL) circuit, 994–995
- Phasor diagram, 34f, 85–87, 90, 286–287, 312–320, 322, 354–355, 354f, 403, 548f, 583–584, 585f, 614f, 766f, 768–769, 768f, 1019
- Photovoltaic and thermal solar (power) systems, 1098–1113
- Photovoltaic power plants, 426
 - aging/reduction of generation, 1179–1181
 - Germany, efficient residence in, 1088–1094
 - peak-power tracker, 874–875
- Piston-compressor drive with synchronous motor, 676–684, 684–685f
- Point of common coupling (PCC), 841–842
- Point of supply generation, 2
- Pole-mounted capacitor banks, 1022, 1024
- Polymer electrolyte membrane (PEM) fuel cell, 46–48, 1143–1144
- Polyphase induction motors, 197–198
- Population size, 1031
- Positive-sequence harmonics, 23–25, 24–25t
- Positive-sequence voltage detector (PSVD) circuit, 995–996
- Power capacitors, misapplications of, 567–568
- Power electronic devices, 915
- Power factor (PF), 568–569
- Power-factor correction (PFC), 569
 - benefits of, 580–581
- Power flow, fundamental, 722–748
- Power flow techniques, 782–794
- Power–frequency variations, 17
- Power-line communication, 811
- Power plants, renewable, 426
- Power point tracking (PPT) technique, 875
- Power quality
 - definition, 2
 - improvement, 63–83
 - issues, classification of, 4–17, 6f
 - problems, 197
 - standards, 53
- Power quality problems with capacitors, 585–605
 - harmonic resonances, 587–589
 - capacitor bank behaves as a harmonic source, 588–589
 - parallel resonance, 588
 - series resonance, 588
 - transients associated with capacitor switching, 586–587, 587f
- Power system, 703–707, 704f
 - causes of disturbances in, 2–4
 - effects of poor power quality, 52–53
 - matrices, 707–722
 - self-healing, 862–864
 - transients, 6–7
- Power system devices, derating of, 69
- Power transformers. *See* Transformers
- Prime mover, 64–65, 229, 229t, 304, 409–410, 410f, 676–684, 872, 878, 1147, 1147f, 1153–1155
- Principle of heat pipe, 686f
- Probabilistic harmonic power flow, 788–790
- Proton-exchange membrane (PEM), 422
- Proton-exchange membrane (PEM) fuel cells, nonideal
 - equivalent circuits of, 422
- Proximity effect, 101–103, 103f
- PSC. *See* Permanent-split-capacitor (PSC)
- PSpice program, 61, 163t, 166t, 425, 1100–1101t, 1108–1110t
 - brushless DC motor-inverter performance
 - for high speed, 543t, 545t
 - for low speed, 535t, 537t, 539t, 541t
 - for rated speed and rated torque supplied, 527t, 529t, 531t
 - current-controlled discharging a lithium-ion to support three-phase distribution system's operation, 464t, 467t, 470t
 - delta-wye, three-phase transformer supplying diode-bridge rectifier in series with one thyristor, 430t, 432t, 434t, 437t, 440t
 - delta-wye, three-phase transformer supplying half-controlled thyristor bridge, 450t, 453t, 457t, 459t
 - delta-wye, three-phase transformer supplying one mosfet in series with diode-bridge rectifier, 444t, 446t, 448t
 - MOSFET switch in series with diode-bridge rectifier and two filters, 481t
 - single-phase transformer supplying diode bridge in series with MOSFET with two filters, 475t, 477t
 - speed and torque control of drives, 485t
 - synchronous motor-inverter performance for rated operation, 549t, 557t
 - three-phase IM operating regimes, 499t, 503t, 507t, 513t, 517t, 521t
 - forthyristor rectifier, 573, 573–574t
- Pulse-width-modulated (PWM) current-controlled
 - inverter, 425
 - design of wave-shaping inductors for, 425

- Pulse-width-modulated (PWM) current-source inverters
 calculation of winding stress due to, 269–279, 270–276f
- Pulse-width-modulated (PWM) inverters, 256, 425, 563
 variable-frequency, voltage- and current-source, 255–279
- Pulse-width-modulated (PWM) rectifier, 1099–1106
- Pulse-width-modulated (PWM) voltage-source inverters
 calculation of winding stress due to, 258–269, 258–259f, 261–263t, 263–265f, 266–267t, 268–269f
- Pumped-storage, 299, 872–874, 902–903, 902f, 1129–1131, 1129f, 1190, 1191f
- PWM current regulation, 964
- PWM inverters. *See* Pulse-width-modulated (PWM) inverters
- R**
- Radial power systems, 723f
- Radiation, 686–688, 687f, 815, 822
- Radio interference (RI), 822
- Reaction rate equation, 646–647, 647f
- Reactive power, 570
 compensation, capacitor applications, 581–582
- Reactive power compensation, shunt-capacitor banks
 benefits
 capital deferment, 1020
 improved voltage profile, 1019
 increased plant ratings, 1020
 reduced power system losses, 1020
 released power system capacity, 1020
- drawbacks
 capacitor-switching transients, magnification of, 1021
 harmonic resonance, 1021
 overvoltages, 1021
 resonance, 1021
- Real power capability (RPC), 109, 110f
- Recovering braking energy, 425
- Rectifier, 12, 14–15f, 84f, 183, 192f, 360–367, 413f, 427, 480, 751f, 887f, 890f, 892, 903f, 905f, 1097, 1099–1106, 1113
- Reduction in apparent power rating (RAPR), 109, 110f, 112–113, 114f
- Reduction of generation of photovoltaic power plant, 1179–1181
- Reduction of lifetime, induction machines and transformers
 Arrhenius plots, 645–646
 cost of harmonics, 657
 decrease of lifetime due to additional temperature rise, 647–649
 exponents of weighted-harmonic factors, 641–643
 losses/temperature rises *vs.* weighted-harmonic factors, 643–645, 644f
 mechanisms, 625
 possible limits for harmonic voltages, 650–656
 probabilistic and time-varying nature of harmonics, 657
 rationale for relying on worst-case conditions, 626–627
 reaction rate equation, 646–647
 reduction of lifetime of components with activation energy, 649–650
 rotating machines, operating modes of, 660–691
 calculation of steady-state temperature, 685–687
 drip-proof 5hp motor, 690–691, 691f
 intermittent operation, 662–663, 663f
 piston-compressor drive with synchronous motor, 676–684, 684–685f
 reduction of vibrations and torque pulsations in electric machines, 676
 short-term operation, 660–662, 661f
 steady-state operation, 660
 superimposed periodic intermittent operation, with irregular load steps, 664–675, 665f, 673t, 673–676f
 totally enclosed fan-cooled 100hp motor, 687–690, 689f
 temperature as function of time, 658–660, 658–659f
 voltage harmonics, 627
 weighted-harmonic factors, 628–641
 measured temperature rises in, 630–632
 single-phase induction motors, 636, 637–638f
 for single-phase transformers, 628–630, 629f
 for three-phase induction machines, 633–635, 633f, 635–636f
 three-phase induction motors, 636–641, 639–640f
- Reduction of lifetime *vs.* temperature, 1178–1181
- Reference-following techniques, 953–954, 985
- Reflected harmonic current, 787
- Regeneration, 288, 421, 423, 490, 563, 1031, 1066
- Rejection, 1147–1148
- Reliability and security
 energy storage methods, 873
 improving tools, 858–873
 load shedding and load management, 873
 power quality
 degradation, 809–840
 detecting tools, 840–858
 reliability indices, 805–809
 renewable intermittent energy sources, 874–875
- Reliability indices, 805–809
 calculation, 808–809
- Remote terminal units (RTUs), 858
- Renewable energy generation plants, 707
- Renewable energy sources, 827
 AC transmission lines, 1175
 automotive fuel production, 1177
 complementary control, 1145–1174

Renewable energy sources (*Continued*)

- DC transmission lines, 1175
- electric cars, fast-charging stations for, 1175
- energy conservation and efficiency, 1087–1098
- in Europe, 1087–1088
- metering, 1176
- nonconstant power output, 1168–1170
- off-shore renewable plants, 1175–1176
- photovoltaic systems, 1098–1113
- reduction of lifetime *vs.* temperature, 1178–1181
- TEXAS synchrophasor network, 1182
- thermal solar power systems, 1098–1113
- two power systems, paralleling of, 1181
- water efficiency, 1177–1178
- wind power (WP) plants, 1113–1145
- Renewable power plants, 426
- Reproduction operators, 1030
- Resonant rectifier, 21*f*, 180
- Reverse-recovery currents, 1100
- Ride-through capability
 - of computers and semiconductor manufacturing equipment, 871–872
 - of load components, 869–871
- Ripple factor (RF), 27
- Rotor eccentricity, 25, 89, 198–199, 282, 285, 394–396
- Rotating machines
 - operating modes, 660–691
 - with step load, temperature increase of, 659–660
- Round-rotor synchronous machines, phasor diagrams
 - for, 312–319
 - consumer (motor) reference frame, 312, 316*f*
 - generator reference frame, 312, 317*f*
 - salient-pole synchronous machine, 316–319, 318–319*f*

S

- Safety considerations, 159, 1112–1113, 1121
- Sags (dips), 10
- Salient-pole synchronous machine, 316–319, 318–319*f*
- Saturated, 207, 424
- Saturation, 104*f*, 121–122, 139*f*, 372, 382–393
- Saturation curve, 123–125, 392
- Scanning, 568, 605–607
- Second-order band-pass filter, 927–928, 927*f*
- Second-order damped band-pass filter, 929–930, 929*f*
- Second-order damped high-pass filter, 923, 923*f*
- Second-order series resonant band-pass filter, 923, 923*f*
- Security, 2, 805–905, 1098–1099
- Self-commutated electronic switch, 34–35, 35*f*, 38–40, 43, 190
- Self-healing power systems, 862–864
- Semiconductor-controlled rectifiers (SCRs), 751
- Semiconductor manufacturing (SEMI F47) curves, 871, 871*f*

- Sensitive loads, 64–65
- Sensors, 840–841
- Sequential quadratic programming, 1039
- Series resonance, 70
 - caused by capacitors, 597–602, 598*f*, 600*f*
- Series-resonant condition, 605
- Shadowing effect, 874–875
- Shaft flux and bearing currents, 396
- Short-and long-term energy storage, 1128
- Short-circuit field, 207, 309*f*
- Short-duration voltage variations, 8–11, 9–10*f*
- Short-term operation, 660–662, 661*f*
 - steady state with, 662, 662*f*
- Shunt-capacitor banks
 - capacitor allocation techniques
 - analytical methods, 1026
 - artificial intelligence-based (AI-based) methods, 1028–1037
 - heuristic methods, 1027–1028
 - numerical programming methods, 1026–1027
 - optimal placement and sizing, 1047–1082
 - reactive power compensation
 - benefits, 1018–1020
 - drawbacks, 1021
 - types, 1021–1025
- Shunt capacitors, 582
- Shunt-connected capacitor banks, 569
- Simple power system configuration, 708–712, 709*f*
- Simplified grid system, 1165–1168
- Simulated annealing (SA), 1032–1033
- Single distribution feeder, 79–83, 80*f*, 82*f*
- Single-phase active filter, 942, 942*f*
- Single-phase hybrid filter, 946–950, 946–949*f*
- Single-phase induction machines
 - measurement of harmonics within yoke (back iron)
 - and tooth flux densities, 233–243, 234*t*
 - measurement results, 227–243, 228*f*
- Single-phase induction motors, 636, 637–638*f*
 - aging of, 648–649
 - measurement of nonlinear circuit parameters of, 227–233, 229*f*, 229*t*
 - temperature rise of, 645
- Single-phase passive filter, 931, 931–932*f*
- Single-phase transformers, 630–631, 631*f*, 705–706
 - derating of
 - direct-loss measurement technique, 108–110
 - F_{HL} -factor, 113–119
 - K-factor, 111–113
 - general harmonic model, 121, 121*f*
 - physical model, 120–121, 120*f*
 - temperature rise of, 644–645
 - weighted-harmonic factor for, 628–630, 629*f*
- Single-time and nonperiodic events, 809–810

- Singular bus admittance matrix, 714–715, 714f
- Sinusoidal modeling
 of induction machines, 199–200
 of synchronous machine in time domain, 301–306
 of transformer, 100–101
- Sinusoidal state-space modeling, 301–306
- Six-pulse, 42f, 526f
- Six-pulse rectifier, 186, 606, 965–966, 967f, 968–971, 971–972f, 1056, 1063, 1068–1069, 1076–1077
- Six-step mode, inverter, 41–45, 176–179, 425
- Skin effect, 77, 101, 229–230, 279, 283–284, 628–629
- Slack bus, 724
- Slip, 200, 203, 221–226, 226f, 247–248, 247t, 279, 287, 633–634, 645, 665–667, 674f, 677–680, 685f, 695
- Smart power system
 manufacturing of electric energy within
 interconnected and, 427
 synchrophasors for monitoring and control of
 interconnected, 427
- Snubbers, 1120
- Squirrel-cage, 64–65, 283–285
- Solar-geomagnetic disturbances, 152–157
- Solar power plants, 409, 885, 897–898, 897f, 1099, 1184, 1193
- Solid-state batteries, 421
- Sophomoric weighting system, 32
- Space harmonics
 computation of rotating mmf with, 253
 induction machines with
 spectral-based harmonic model, 280–282, 281f
 of three-phase induction machines, 252–255
- Spatial (space) harmonics, 25
 of induction machine, 216, 217f, 218
 of three-phase induction machine, 215–217, 215f, 217t, 217–218f
- Spectral-based harmonic model, of induction machines, 280–282, 281f
- Speed and torque control
 of brushless-DC machine, 528
 of electric drives, 488
 for three-phase synchronous motor/machine, 528
- Speed and torque control of brushless-DC machine or permanent magnet machine, 526f, 528
 brushless DC motor-inverter performance
 for high speed, 543t, 545f, 545t, 547f, 548
 at low speed, 535t, 536f, 537t, 538–539f, 539t, 541f, 541t, 543, 543f
 for rated speed and rated torque supplied, 527–530t, 528f, 530f, 532t, 532–534f, 533
- Speed and torque control of drives
 three-phase induction machine connected to current-controlled, voltage-source inverter, 484f, 485–486t, 488
 three-phase IM operating regimes, 488, 489–492f, 494–495f, 495t, 498f, 499t, 501f, 503t, 505f, 507t, 510f, 513t, 515–516f, 517t, 520–521f, 521t, 524–525f
- Stable steady-state, 210–212
- Stability, 211–212, 310–311, 581–582, 703, 840, 859–860, 972–974, 978, 1150–1153, 1158–1161t, 1164, 1168, 1198
- Stand-alone mode, 1099
- Standards, 4
- Stacking factor, 233, 369
- Starting current, 206–207, 493, 1115–1117
- State-space formulation, 129–130
- State-variable approach, 61
- Static and dynamic rotor eccentricity
 generating current and voltage harmonics, 394–395, 395t
 three-phase induction machines, 282
- Static grounding, 168
- Static VAr compensator (SVC), 59, 378, 380, 380t, 569, 582, 975–976
 harmonic modeling of a 24-bus power system with a nonlinear, 380–381, 380–381t
- Stator core forces, 208f
- Steady-state operation
 of induction machines, 211–212, 212f
 of induction motor
 at overvoltage, 204–205
 at undervoltage, 203–206
 of rotating machines, 660
- Steady-state phenomena, 4
- Steady-state stability, of three-phase induction machine, 210–214
- Steady-state temperature, calculation of, 685–687
- Step load, 408–411, 659–660, 827–828, 836–837, 878–879, 1147, 1155–1156
- Storage of energy, 473
- Subharmonics, 23
- Subharmonic torques
 in current-source-fed induction motor, 246–247, 246f, 251, 251–252t
 in voltage-source-fed induction motor, 244–249, 244f, 247–248t, 249–250f
- Subsynchronous resonance, 23
- Subtransient operation, 307–370
- Subtransient phenomena, 341
- Subtransmission lines, 706
- Subtransmission network, 706
- Sulfur hexafluoride (SF₆), 860
- Sunspot cycles, 154
- Supercapacitor bank, 411–412, 903f
- Superconducting coil, 188, 188f, 976
- Superimposed periodic intermittent operation with irregular loads, 664–675, 665f, 673t, 673–676f

- Supervisory control and data acquisition (SCADA), 858
- Susceptibility of a transmission line to corona, 877
- Sustained interruption, 11
- SVC. *See* Static VAR compensator (SVC)
- Swells, 10–11
- Swing bus, 708, 724, 756–757, 766
- Switched-reluctance machines, 368, 368f, 402
- Switching harmonics, 423, 425, 580, 1113
- Synchronization, out-of-phase, 320, 329, 334, 334f, 341, 350
- Synchronous condensers, 568
- Synchronous generator
 - four-pole
 - field of two-pole, 311–312f
 - full-load field, 310f
 - no-load field, 308f
 - short-circuit field and force distribution, 309f
 - two power systems, paralleling of, 1181
- Synchronous machine
 - amortisseur (damper winding) bar losses of, 341–351, 341–349f, 350t
 - as applied to harmonic power flow, 372–374, 372f
 - positive-, negative-, and zero-sequence impedances/reactances, 372–373, 373f
 - positive-, negative-, and zero-sequence reactances and the synchronous, transient, and subtransient reactances, 373–374
 - asymmetric properties of, 299–300
 - current-source (containing harmonics) fed, 374
 - current spectrum of a, 377, 377t
 - cylindrical-rotor (round-rotor, nonsalient-pole), 323–328, 324–326f
 - design guidelines for, 368–369
 - induced E_{phase} and terminal V_{phase} voltages, 369
 - iron-core stacking factor and copper-fill factor, 369
 - maximum flux densities, 369, 369t
 - recommended current densities, 369, 369t
 - discretization errors of numerical solutions, 396–399, 397–399f
 - dqo modeling of a salient-pole, 328–341, 330–336f, 338–340f
 - effect of Delta connection on power quality of, 392
 - effect of imbalance on power quality of, 390–391, 391f, 391t
 - effect of saturation on power quality of, 392–393
 - electrical equations of, 301–304
 - fed by a combination of harmonic voltage and current sources, 376, 376f
 - frequency-conversion process, 371
 - harmonic model
 - based on abc coordinates, 386–387, 387f
 - based on dqo coordinates, 384–386
 - based on transient inductances, 374–377
 - with imbalance and saturation effects, 382–393, 384f
 - harmonic modeling of, 371–396
 - impact of nonlinear loads on power quality of, 393
 - injected harmonic currents, 388–389
 - due to frequency conversion, 388–389
 - due to saturation, 388
 - total injected harmonic current, 389
 - inverter-fed or rectifier-loaded machines, 372
 - machine load flow (or system) constraints, 372
 - magnetic field of a two-pole, three-phase, 313f
 - magnetic saturation of, 304–306
 - mechanical equations of, 304
 - model with harmonic parameters, 378–381, 378–379f
 - negative-sequence impedance, effect of frequency conversion on, 389–390, 390t
 - operating-point-dependent equivalent circuits of, 424
 - phasor diagram of, 354f
 - power quality problems of, 299
 - PQ machine, 383
 - and pulse-width-modulated (PWM) current-controlled, voltage-source inverters, 313–316, 317f
 - PV machine, 383
 - round-rotor, phasor diagrams, 312–319
 - salient-pole, 316–319, 318–319f
 - saturation effects, 372
 - sinusoidal model of, 306, 306f
 - slack machine, 383
 - steady-state analysis of a nonsalient-pole (round-rotor), 320–323
 - steady-state, transient, and subtransient operation, 307–370, 308–315f
 - supplying nonlinear loads, 367
 - theory of, 299–300
 - in time domain, sinusoidal state-space modeling, 301–306
 - transient and subtransient reactances as a function of leakage and mutual reactances, 307–311
 - voltage-source (containing harmonics) fed, 375
 - wind-power plant based on, design of a 10kW, 360–367, 361–363f, 367t
- Synchronous motors, 197–198
- Synchronous reactances, calculation of, 354–355
- Synchrophasors, 426, 1182
 - for monitoring and control of interconnected smart power system, 427
- System grounding, 157–167
 - lightning, 161
 - multiple faults to ground, 158–159
 - objectives, 157
 - power system overvoltages, 160
 - safety, 159–160
 - service continuity, 158
 - switching surges, 161
- System nonlinear equations, derivation of, 62

T

- Table of factors, 719–721, 795
- Tabu search algorithm, 1039
- Taylor series, for one variable, 726, 726f
- Technical literature expertise (TLE), 1032
- Telecommunications systems, 859
- Telephone form factor (TFF), 32
- Telephone influence factor (TIF), 29–31, 30–31t
- Television interference (TVI), 822
- Temperature, as function of time, 658–660, 658–659f
- Temperature increase, 630–632, 636–641, 644–645, 649, 659–660, 692
- Temperature rise, 23, 69, 109, 119, 170, 625–628, 630, 631–632f, 636, 638–645, 638f, 640f, 647–649, 651t, 654, 654t, 656–660, 656t, 672, 685–693, 696, 843
- Ten-channel computer-aided testing (CAT) circuit, 844–847, 845–846f
- Tesla's polyphase AC system, 197
- TEXAS synchrophasor network, 1182
- Thermal aging, 645–646
- Thermal conductivity, 686, 688–690, 696
- Thermal network, 685–691, 689f, 691f
- Thermal resistance, 687f
- Thermal solar power systems, 1098–1113
- Thevenin's theorem, 63, 200, 244–245, 491
- Third-order filters, 930, 930f
- 3×3 matrix, inversion of, 746–747
- Three-phase four-wire active filter, 942, 944f
- Three-phase four-wire passive filter, 931, 933f
- Three-phase induction machines
 - classification, 283–285
 - complete sinusoidal equivalent circuit, 199–206, 199–200f, 202–203f
 - interaction of space and time harmonics, 252–255
 - measurement results for, 227–243, 228f
 - nonlinear harmonic models, 279–282
 - spatial (space) harmonics, 215–217, 215f, 217t, 217–218f
 - static and dynamic rotor eccentricity, 282
 - steady-state stability, 210–214
 - time harmonics, 218–221, 220f, 220t
 - weighted-harmonic factor, 633–635, 633f, 635–636f
- Three-phase induction motors, 636–641, 639–640f
- Three-phase permanent-magnet generator
 - supplying energy to lead-acid battery via rectifier, 480
 - MOSFET switch in series with diode-bridge rectifier and two filters, 480–481f, 481t, 483t, 484, 487
- Three-phase permanent-magnet machine, 528
- Three-phase synchronous motor/machine, control of
 - speed and torque for, 548f, 549
 - synchronous motor-inverter performance
 - for rated operation, 549t, 549f, 553–556f, 554, 557t, 560–561f
- Three-phase three-wire active filter, 942, 943f
- Three-phase three-wire passive filter, 931, 932f
- Three-phase thyristor rectifier
 - calculation of input/output currents and voltages of, 34–37, 35f, 36–37t, 38f
 - with one self-commutated electronic switch, 38–40, 39f, 40t, 41f
- Three-phase transformers, 631–632, 632f, 705–706
 - with DC bias current, 855–857
 - derating of
 - directly measured losses, 175
 - full-wave rectifier, 175–176
 - instruments, accuracy requirements for, 173–175
 - nonsinusoidal operation, 183
 - PWM inverter, 180–183
 - resonant rectifier, 180
 - six-step inverter, 176–179
 - ungrounded connection, 170–171
- Thyristor rectifier
 - PSpice program for, 573, 573–574t
 - wye/wye three-phase transformer with, 572, 572f
- Tiered energy rates, 1098
- Time and spatial harmonics, 255
- Time-domain filtering, 954–957
- Time-domain simulation, 61
- Time-domain transformer coil modeling, 125
- Time-domain transformer core modeling, 122–125, 122–123f
- Time harmonics, 25
 - classification, 750, 750t
 - computation of rotating mmf with, 253
 - induction machines with spectral-based harmonic model, 280–282, 281f
 - of three-phase induction machines, 218–221, 220f, 220t, 252–255
- Tiered energy rates, 1098
- Topology, 128–129, 128f, 628, 806–807, 857, 916, 918–920, 929, 942, 945–950, 1051, 1053, 1061, 1066
- Torque angle, 320–321, 323, 335, 340–341, 354–355, 360–367, 555–556, 677–678, 684–685f, 695, 894
- Torque pulsations, 676, 1019, 1124–1127
- Total demand distortion (TDD), 29
- Total harmonic distortion (THD), 28–29
 - advantages, 28
 - disadvantages, 28
- Total interharmonic distortion (TIHD), 29
- Totally enclosed fan-cooled 100hp motor, 687–690, 689f
- Total power factor (TPF), 570–571
- Total rated rotor losses, 637–638
- Total subharmonic distortion (TSHD), 29
- TPF. *See* Total power factor (TPF)
- Transformers
 - combined frequency- and time-domain simulation, 131–132

Transformers (*Continued*)

- derating, 109–119
 - direct-loss measurement technique, 109–110
 - F_{HL} -factor, 113–119
 - K-factor, 111–113
- ferroresonance, 135–151
 - avoiding techniques, 144–151
 - system conditions susceptible, 136–137
 - transformer connections, 137–143
- frequency-domain simulation, 131
- grounding, 157–169
 - connection to earth, 168–169
 - equipment, 168
 - magnetic forces, 169
 - static, 168
 - system, 157–167
- harmonic losses
 - loss measurement, 107–109
 - magnetic iron-core losses, 104–107
 - proximity effect, 101–103
 - skin effect, 101
- impedance vs. frequency characteristic of, 77
- measured temperature rises in, 630–632
- nonlinear harmonic models, 120–135
- numerical simulation, 132–135
- power quality impacts, 99
- sinusoidal modeling, 100–101
- solar-geomagnetic disturbances, 152–157
- time-domain simulation, 128–131
 - state-space formulation, 129–130
 - steady-state solution, 131
- Transient models, 100
- Transient operation, 307–370, 571–572
- Transient recovery voltage (TRV), 860–861
- Transients, 6–7, 7*t*, 8–9*f*
 - surge, 256
 - switching, 256
 - voltage (stress), 255–256
- Transmission lines, 706
- Transmission system, 3
- Triangular factorization, 715–719
- Triplen harmonics, 20–22, 22*f*, 616–617
- Truncation, 28, 390, 390*t*
- Tuned harmonic filter, 582–584
- Twelve-channel computer-aided testing (CAT) circuit, 847–848, 847*f*
- 12-pulse converters, hand calculation of harmonics
 - produced by, 71–75, 71*f*, 72*t*
- Twelve-pulse rectifier, 965–971, 967*f*, 971–972*f*
- Two-port system
 - series and shunt impedances, 107, 108*f*
 - voltage and current definitions, 107, 107*f*
- Two power systems, paralleling of, 1181

U

- Unbalanced load, 85–86, 299, 341–351, 1001*f*
- Uncertainty analysis, 857–858
- Under-frequency relays, 810
- Undervoltage condition, 11
- Unified power quality conditioners (UPQCs), 16, 70–83, 915, 978–983
 - control system, 983–985
 - instantaneous real and imaginary power theory, 988–1000
 - park(*dqo*) transformation, 985–988
 - reference signals, pattern of, 984–985
 - current compensation, 1003, 1004–1005*f*
 - flicker, compensation of, 1010–1012, 1011*f*
 - harmonic oscillations, damping of, 1007–1010, 1010*f*
 - model distribution system, specifications of, 1001–1002, 1001*t*
 - operation
 - unbalanced and distorted system voltage and load current, 980–981
 - unbalanced system voltages and load currents, 982–983
 - performance, 1001–1012
 - structures, 978–980, 978–979*f*
 - sudden voltage variation, 1007, 1009*f*
 - voltage harmonics, compensation of, 1004–1006, 1006*f*
 - voltage imbalance, 1007, 1008*f*
- Unsaturated, 206–207, 208–209*f*, 307, 400
- Unstable steady-state, 285

V

- Variable-frequency converters (VFCs), 255–256
- Variable-frequency drives (VFDs), 256
- Variable-speed and variable-torque drives, closed-form and numerical-solution techniques for, 421–427
- Variable-speed wind power plants, 1122
- Variations, 263, 680, 788–789
- VAr Management Working Group of the IEEE System Control Subcommittee, 1017
- VDE. *See* Verein Deutscher Elektrotechniker (VDE)
- Verein Deutscher Elektrotechniker (VDE), 57
- Vertical-axis wind power plants, 1113–1145
- VFCs. *See* Variable-frequency converters (VFCs)
- VFDs. *See* Variable-frequency drives (VFDs)
- Vibrations, 198–199, 206–207, 227, 255–256, 282, 299, 367, 369–370, 625–627, 645–646, 657, 676, 692
- Virtual harmonic resistors
 - protecting capacitors by, 602–605, 604*f*
 - solutions to resonance problems, 605
- Virtual net metering, 1176
- Voltage controlled (PV) bus, 724
- Voltage-divider transfer functions, 920–923
- Voltage fluctuation, 16–17

Voltage harmonics, 627
 Voltage imbalance, 11–12
 Voltage notching, 64
 Voltage regulation, 869
 Voltage ripple, 351–353
 Voltage-source-fed induction motor
 computation of forward-rotating subharmonic torque
 in, 247–249, 247–248*t*, 249–250*f*
 subharmonic torques in, 244–246, 244*f*
 Voltage-source fed synchronous machine, 375
 Voltage-source inverters, 425
 PMW, calculation of winding stress due to, 258–269,
 258–259*f*, 261–263*t*, 263–265*f*, 266–267*t*, 268–269*f*
 Voltage-source nonlinear loads, 917, 917*f*
 Voltage spectra, 615*t*, 617, 621–622*t*, 626–627, 650–657,
 650–652*t*, 691, 694–695, 694*t*
 Voltage-stress winding failures, of AC motors, 255–279
 Voltages *vs.* flux linkages, 105–107
 Voltage-tolerance curves, 869–870
 Voltage (stress) transients, 255–256
 Voltage waveshapes, 231
 Voltampere balance, 754
V.T products, 32

W

Water efficiency, 1177–1178
 Waveform compensation, 954–958, 985, 1013–1014
 Waveform distortion, 12–16, 13*f*
 Wave-propagation theory, 867
 Waveshaping inductance, 421–422
 Wave-shaping inductors, for pulse-width-modulated
 (PWM) inverter, 425

Weighted-harmonic factors, 628–641
 exponents, 641–643, 641*f*
 determination of factor *k*, 642
 determination of factor *l*, 642–643, 643*f*
 losses/temperature rises *vs.*, 643–645, 644*f*
 for single-phase transformers, 628–630, 629*f*
 for three-phase induction machines, 633–635, 633*f*,
 635–636*f*
 Wildpoldsried Innovative Redirecting (WIR), 1178
 Wind farms, 1123–1124
 Winding factor, 327, 351
 Winding forces during normal operation and faults,
 369–370, 371*f*
 Winding loss, 101
 Winding stress calculation
 due to PMW current-source inverters, 269–279
 due to PMW voltage-source inverters, 258–269
 Wind power, 351–353*f*, 402, 705, 707, 874, 896, 1124–1127
 Wind-power plant, 426, 1113–1145
 block diagram, 361, 361*f*
 permanent-magnet generator for, 355–359, 356–358*f*,
 360*f*
 PWM inverter feeding power, 48–52, 49*f*, 50–51*t*, 52*f*
 Wye/wye three-phase transformer with thyristor
 rectifier, 572, 572*f*

Y

Yoke, 227–229, 231–243, 238–239*f*, 241–242*f*, 688–689

Z

Zero-sequence harmonics, 23–25, 24–25*t*
 Zone substation capacitors, 1022, 1022*t*

This page intentionally left blank

Third Edition

Power Quality in Power Systems, Electrical Machines, and Power-Electronic Drives

Ewald F. Fuchs

Mohammad A. S. Masoum

A trusted and systematic resource developed by experts for active practitioners and students aimed at delivering power quality improvements for more efficient, reliable, smart, and highly renewable hybrid power systems.

Power Quality in Power Systems, Electrical Machines, and Power-Electronic Drives uses current research and engineering practices, guidelines, standards, and regulations for engineering professionals and students interested in solving power quality problems in a cost effective, reliable, and safe manner within the context of renewable energy systems.

The book contains chapters that address power quality across diverse facets of electric energy engineering, including AC and DC transmission and distribution lines; end-user applications such as electric machines, transformers, inductors, capacitors, wind power, and photovoltaic power plants; and variable-speed, variable-torque power-electronic drives. The book covers nonsinusoidal waveshapes, voltage disturbances, harmonic losses, aging and lifetime reductions, single-time events such as voltage dips, and the effects of variable-speed drives controlled by PWM converters.

The book also reviews a corpus of techniques to mitigate power-quality problems, such as the optimal design of renewable energy storage devices (including lithium-ion batteries and fuel cells for automobiles serving as energy storage), and the optimal design of nonlinear loads for simultaneous efficiency and power quality.

Key Features

- Provides theoretical and practical insights into power-quality problems related to future, smart grid, renewable, hybrid electric power systems, electric machines, variable-speed, and variable-torque power-electronic drives.
- Contains a highly varied corpus of practical applications drawn from current international practice.
- Designed as a self-study tool with end-of-chapter problems and solutions to build understanding.
- Includes very highly referenced chapters that enable readers to save time and money in the research discovery process for critical research articles, regulatory standards, and guidelines.



ACADEMIC PRESS

An imprint of Elsevier

elsevier.com/books-and-journals

ISBN 978-0-12-817856-0



9 780128 178560